


ASSEMBLY INSTRUCTIONS

Customer Service : **cs@nbrehome.com**

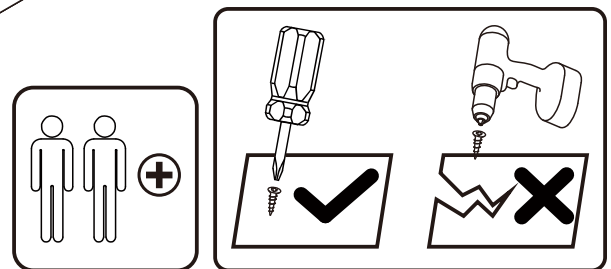

Tools Recommended

THIS INSTRUCTIONS CONTAINS IMPORTANT SAFETY INFORMATION.
PLEASE READ BEFORE ASSEMBLY AND KEEP FOR FUTURE REFERENCE.

Need Parts or Assistance? Email us : **cs@nbrehome.com**

IMPORTANT NOTICE

-This product contains small components, please ensure that they are kept away from small children.

-THIS INSTRUCTIONS CONTAINS IMPORTANT SAFETY INFORMATION.
PLEASE READ BEFORE ASSEMBLY AND KEEP FOR FUTURE REFERENCE.

-Read each step carefully. It is very important that each step of instruction is performed in the correct order. If these steps are not followed in sequence, assembly difficulties will occur.

-Make sure all parts are included. Most parts are labelled or stamped on the raw edge.

-Work in spacious area, preferably on a carpet, near the place the unit will be used.

-Do not use power tools to assemble your furniture. Power tools may strip or damage the parts.

-Move your new furniture carefully, with two people lift and carry the unit to it's new location.

-Never push, drag or pull your furniture (especially on carpet)



PLEASE DO NOT RETURN PRODUCT TO US IMMEDIATELY


If a part is missing or damaged, email our customer service.
We will gladly ship your replacement parts FREE of charge.


Need Parts or Assistance? Email us : **cs@nbrehome.com**

For Prompt, reliable service, please have your assemble instruction ready

 WARNING	
	Children have died from furniture tipover. To reduce the risk of furniture tipover: • ALWAYS install anti-tip device provided. • NEVER put a TV on this product. • NEVER allow children to stand, climb or hang on any drawers, doors, or shelves. • NEVER open more than one drawer at a time. • Place heaviest items in the lowest drawers.
	This is a permanent label. Do not remove!

The installation direction should be aligned with the instructions to prevent plate breakage caused by product tipping during installation.

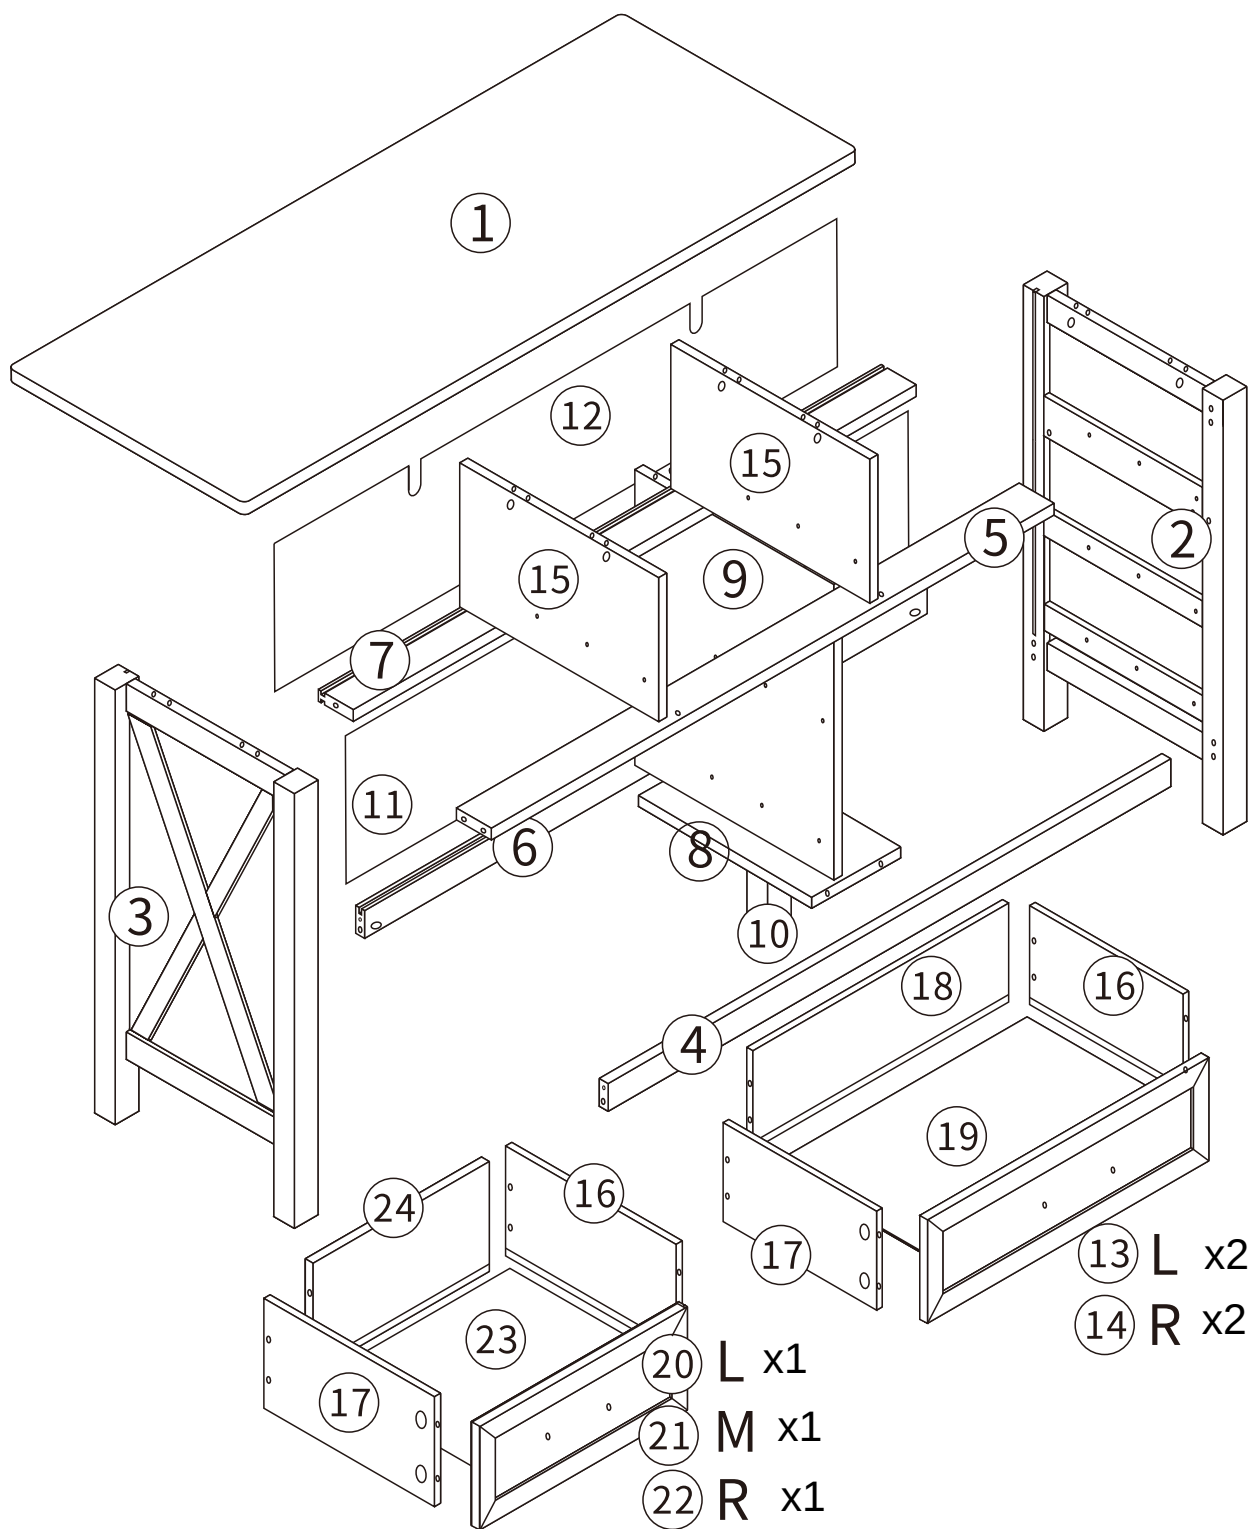








 Ax50 6x35mm	 Bx50 15x5.9mm	 Cx17 6x30mm	 Dx10 4x40mm	 Ex28 4x30mm	 Fx84 3.5x12mm	 Gx4
 Hx2 4x12mm	 Ix2	 Jx2	 Kx14 4x16mm	 Lx7	 Mx1	 Nx12
 Ox12 3x14mm	 CLx7 300mm	 CRx7 300mm	 DRx7 300mm	 DLx7 300mm		

Step 1

First lock the screw (A) to the parts ②③.





Then lock the guide rail (CL) to the part③ and lock the guide rail (CR) to the part② with the screw(F).

Attach mat (G) to the legs bottom. The installation position is as shown below.

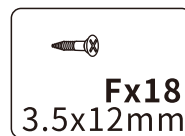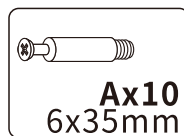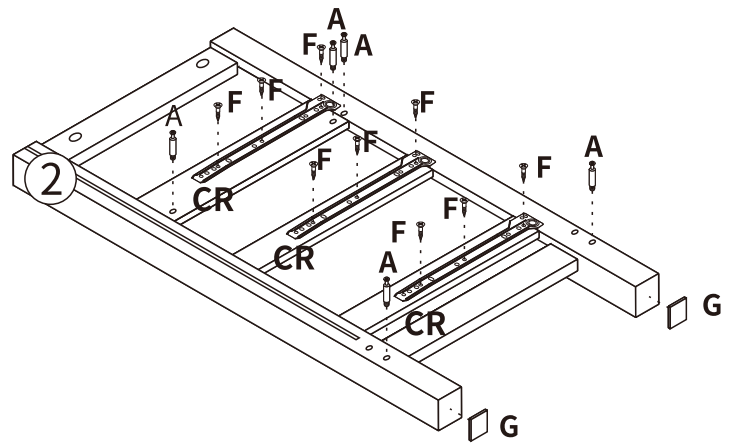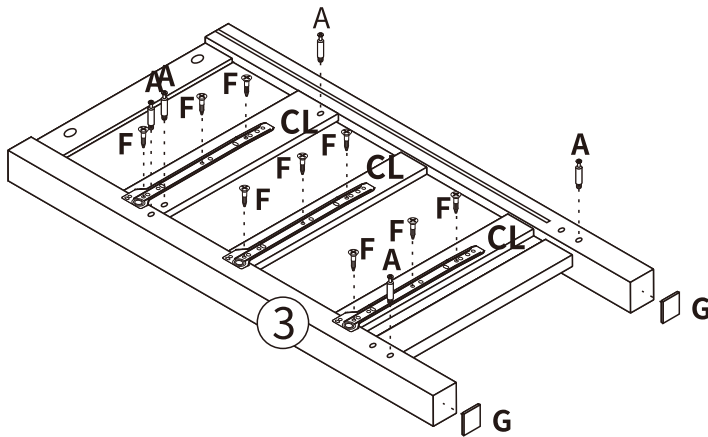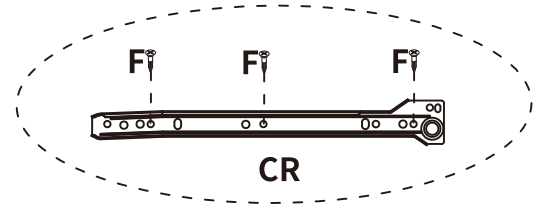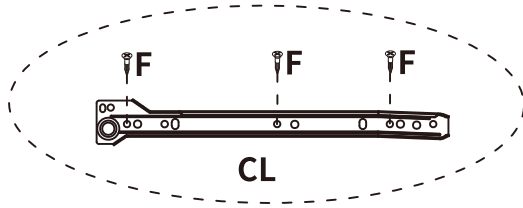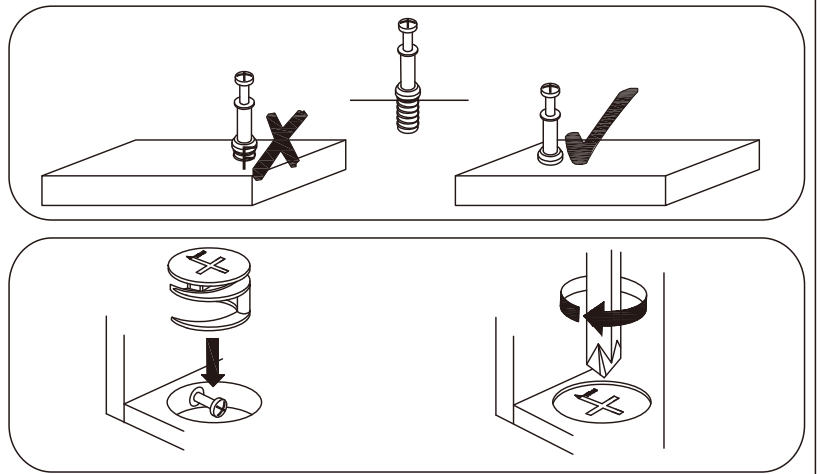

Step 2


Lock the screw (A) to the parts④⑥. Attached the part⑧ and part⑩. Rotate adjustable pad (M) into part⑩. The installation position is as shown below.

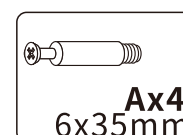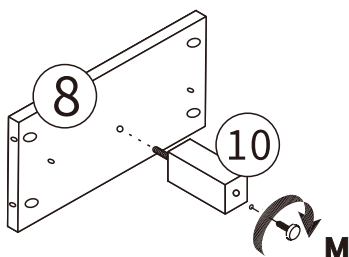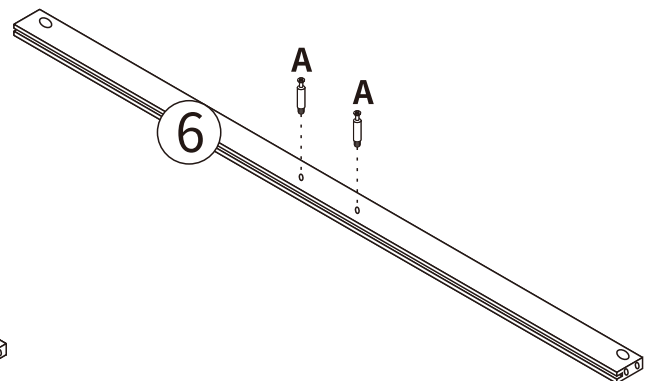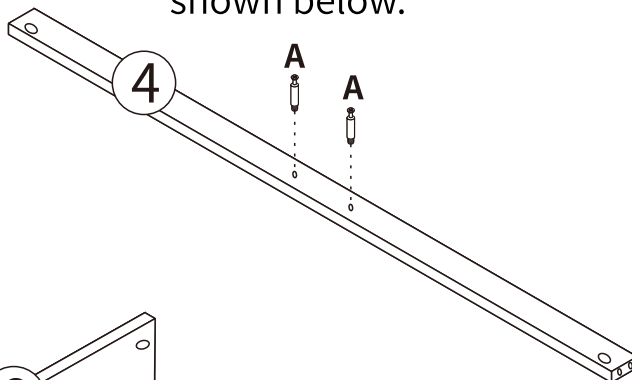

Step 3


Lock the guide rail (CR) to the left side of the part⑨ with the screw(F) then turn it 180 degrees and lock the guide rail (CL) to the right side of the part⑨ with the screw(F).

Lock the guide rail (CR) to the left side of the part⑮ with the screw(F) then turn it 180 degrees and lock the guide rail (CL) to the right side of the part⑮ with the screw(F). Two parts⑮ need to be installed. The installation position is as shown below.

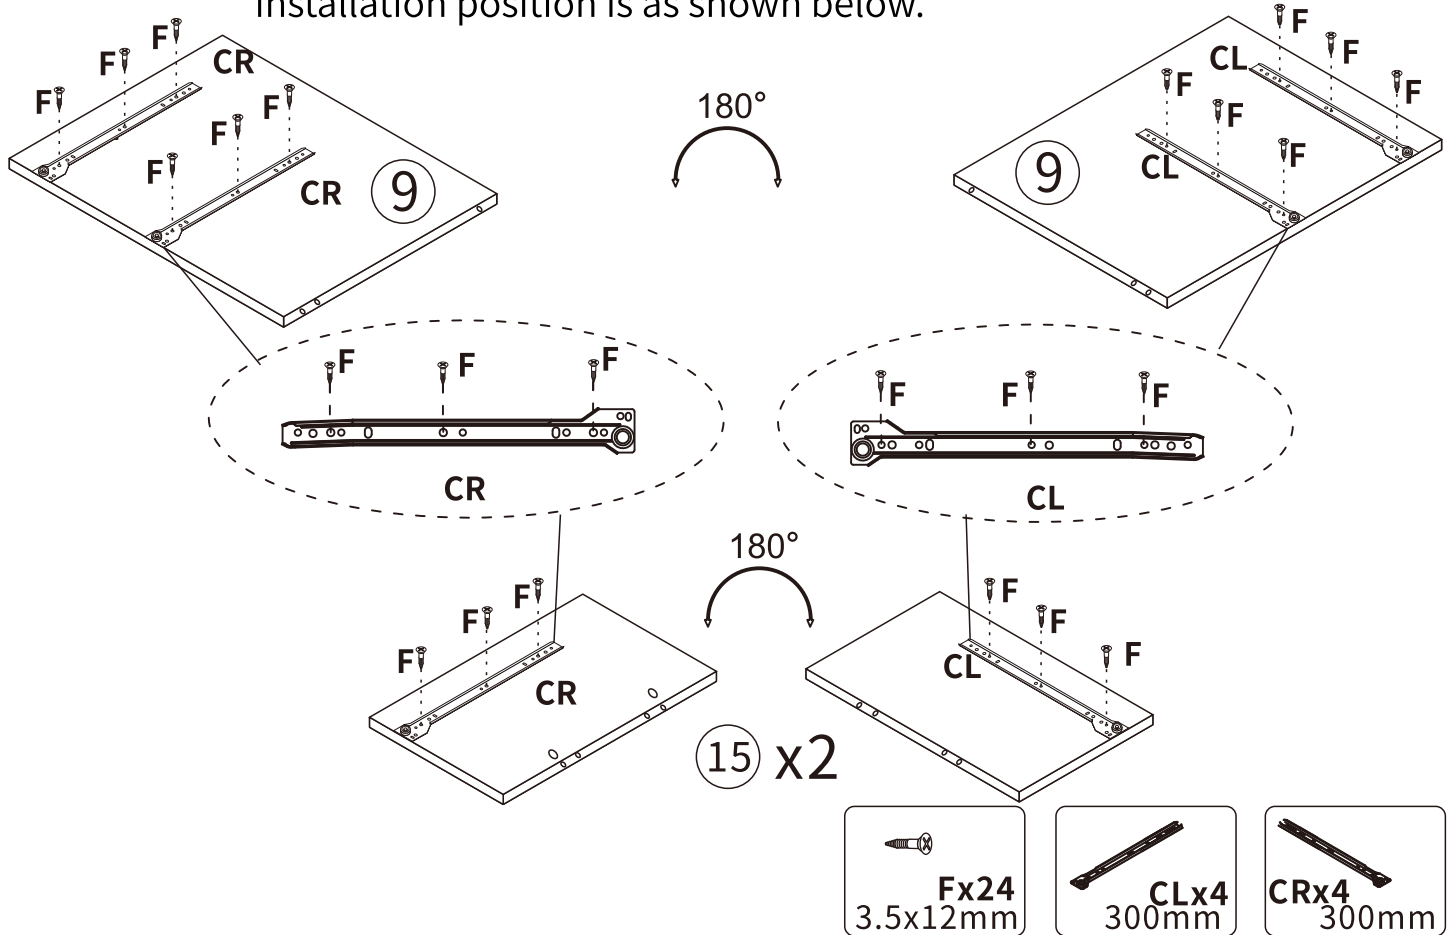


Step 4

Assemble part⑧ and part ④⑥, then put the eccentric (B) into the corresponding hole and use a screwdriver to turn it clockwise to tighten. The installation position is as shown below.

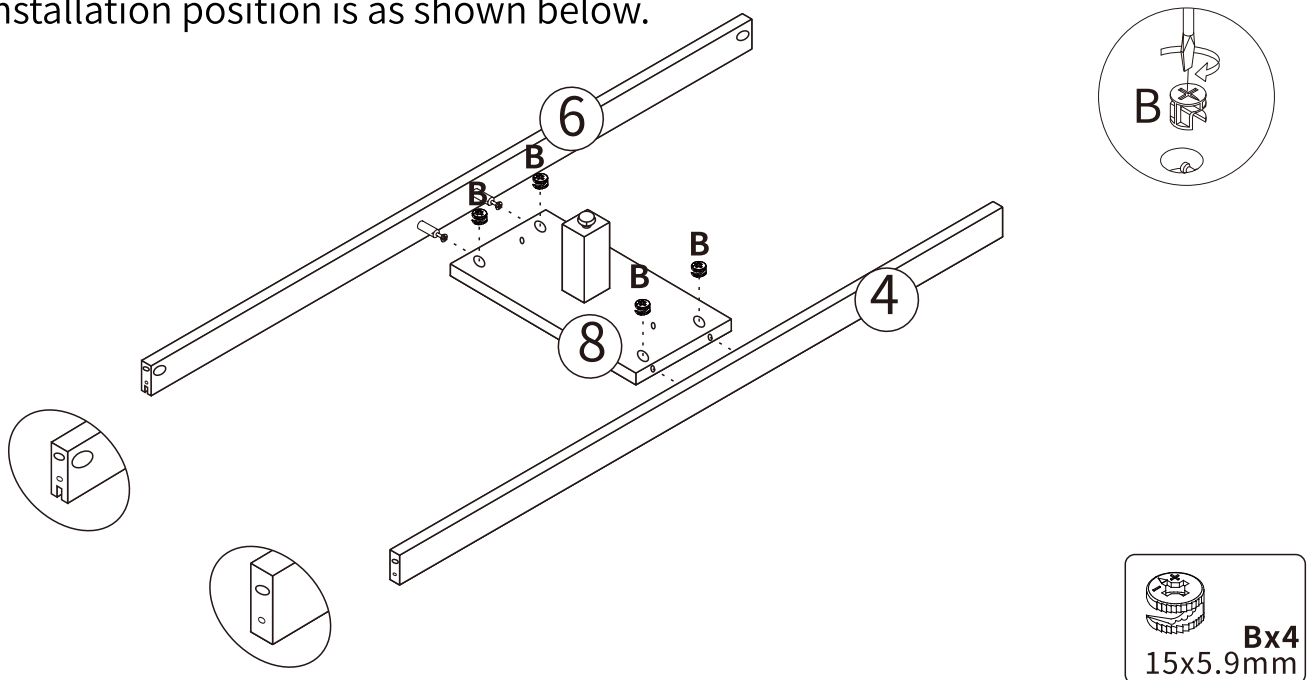


Step 5

Insert the dowel (C) into part⑮ first, then attach the parts⑤⑦ to parts⑮ with screw (D). The installation position is as shown below.

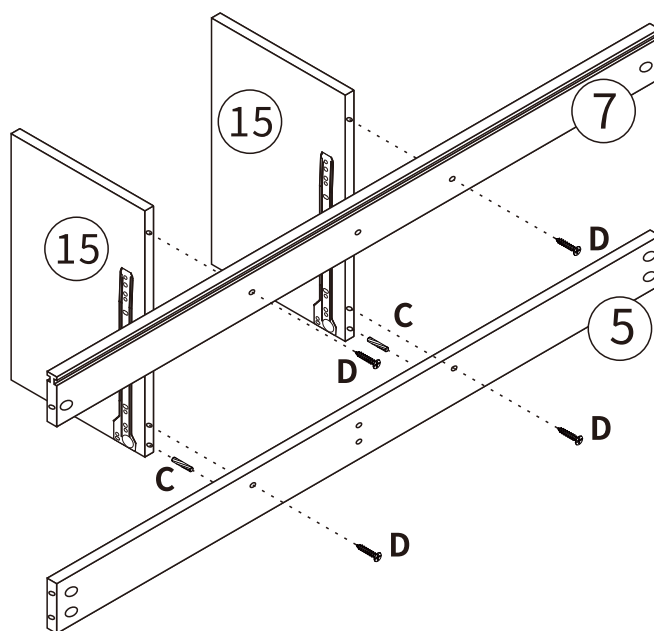

Step 6

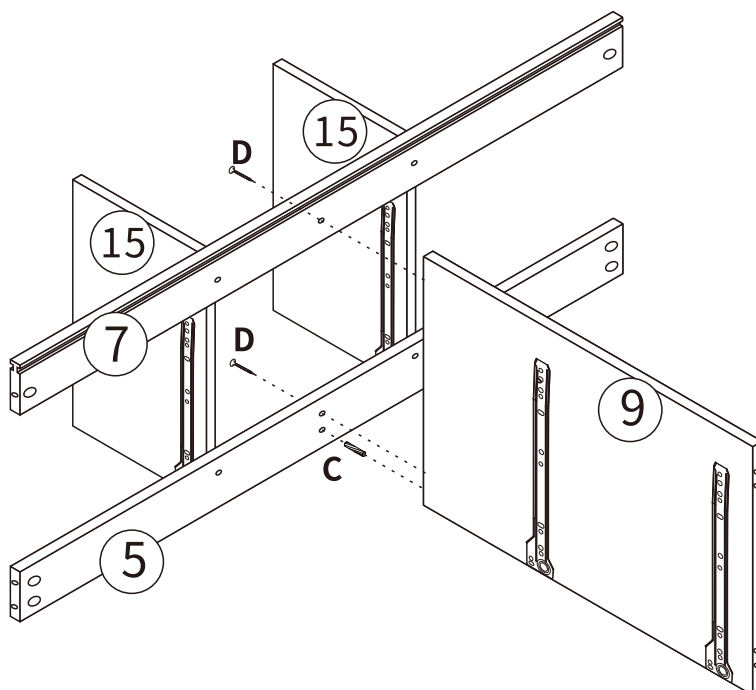


Insert the dowel (C) into part⑤ first, then attach the parts ⑤⑦ to part⑨ with screw (D).

The installation position is as shown below.




Step 7

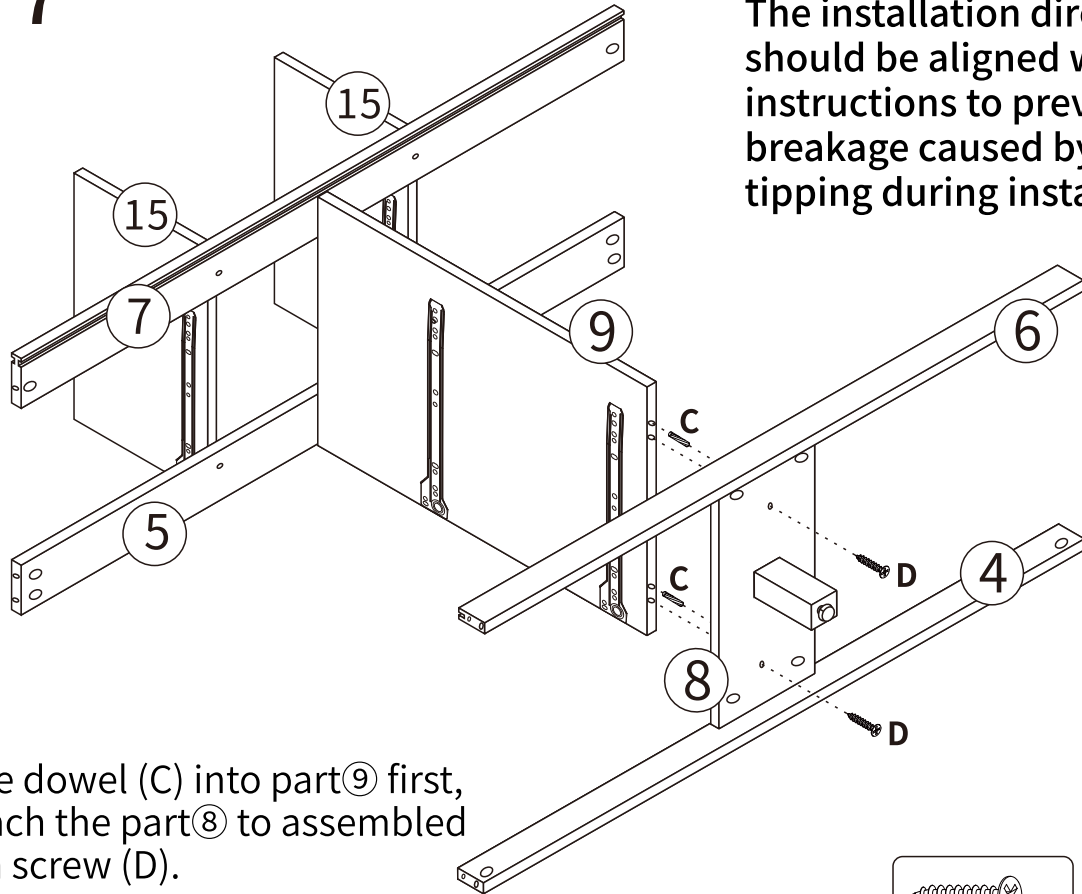

The installation direction should be aligned with the instructions to prevent plate breakage caused by product tipping during installation.



Insert the dowel (C) into part 9 first, then attach the part 8 to assembled unit with screw (D).

The installation position is as shown below.

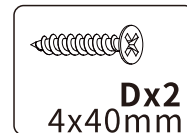


Step 8

Insert the dowel (C) into part 4 6 first, then attach the part 3 to assembled unit with eccentric (B). Turn it clockwise to tighten. The installation position is as shown below.

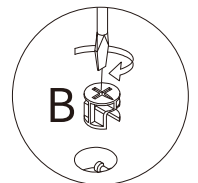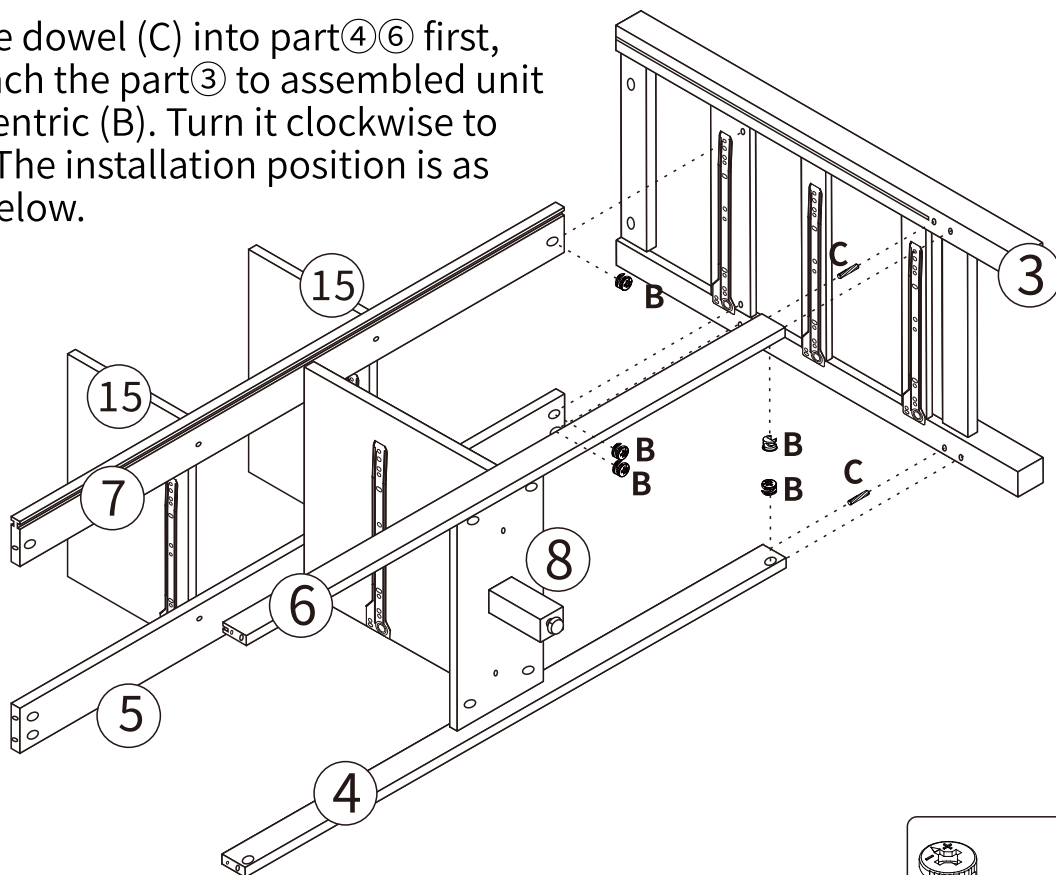

Step 9

Insert part①① along the slot, as shown.

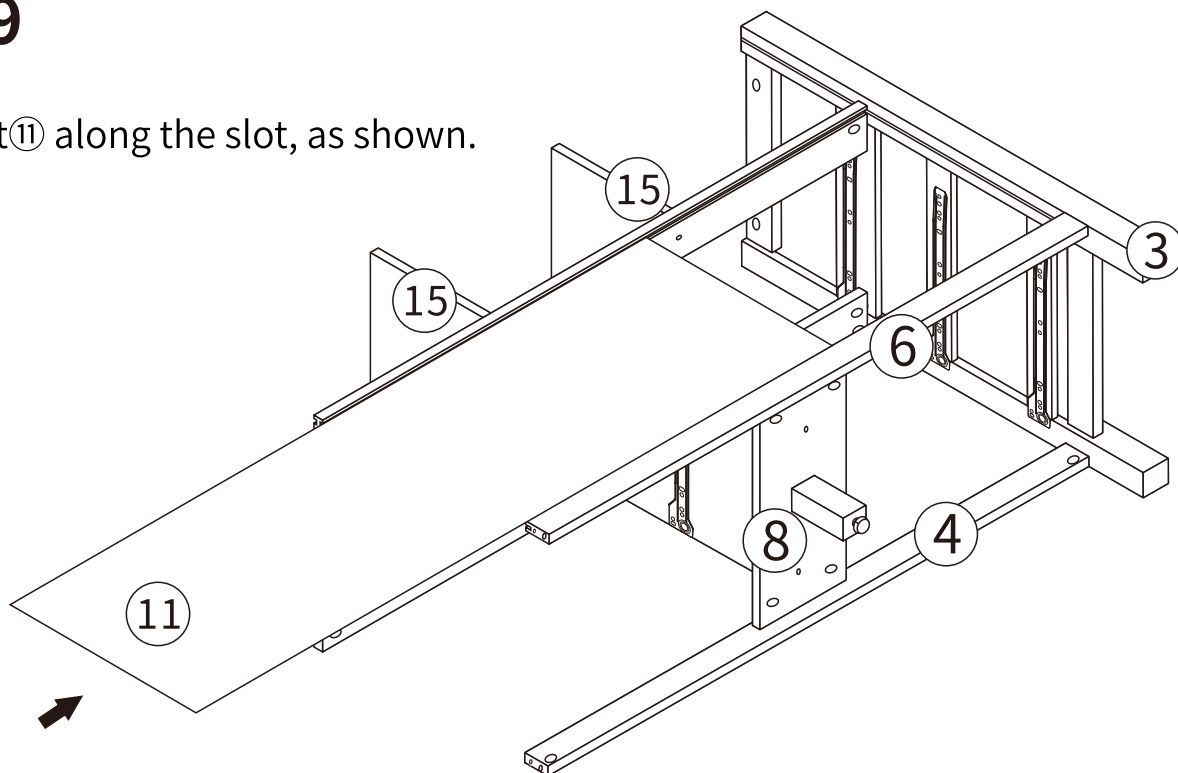


Step 10

Insert the dowel (C) into part② first, then attach the part② to assembled unit with eccentric (B).

Turn it clockwise to tighten.


The installation position is as shown below.

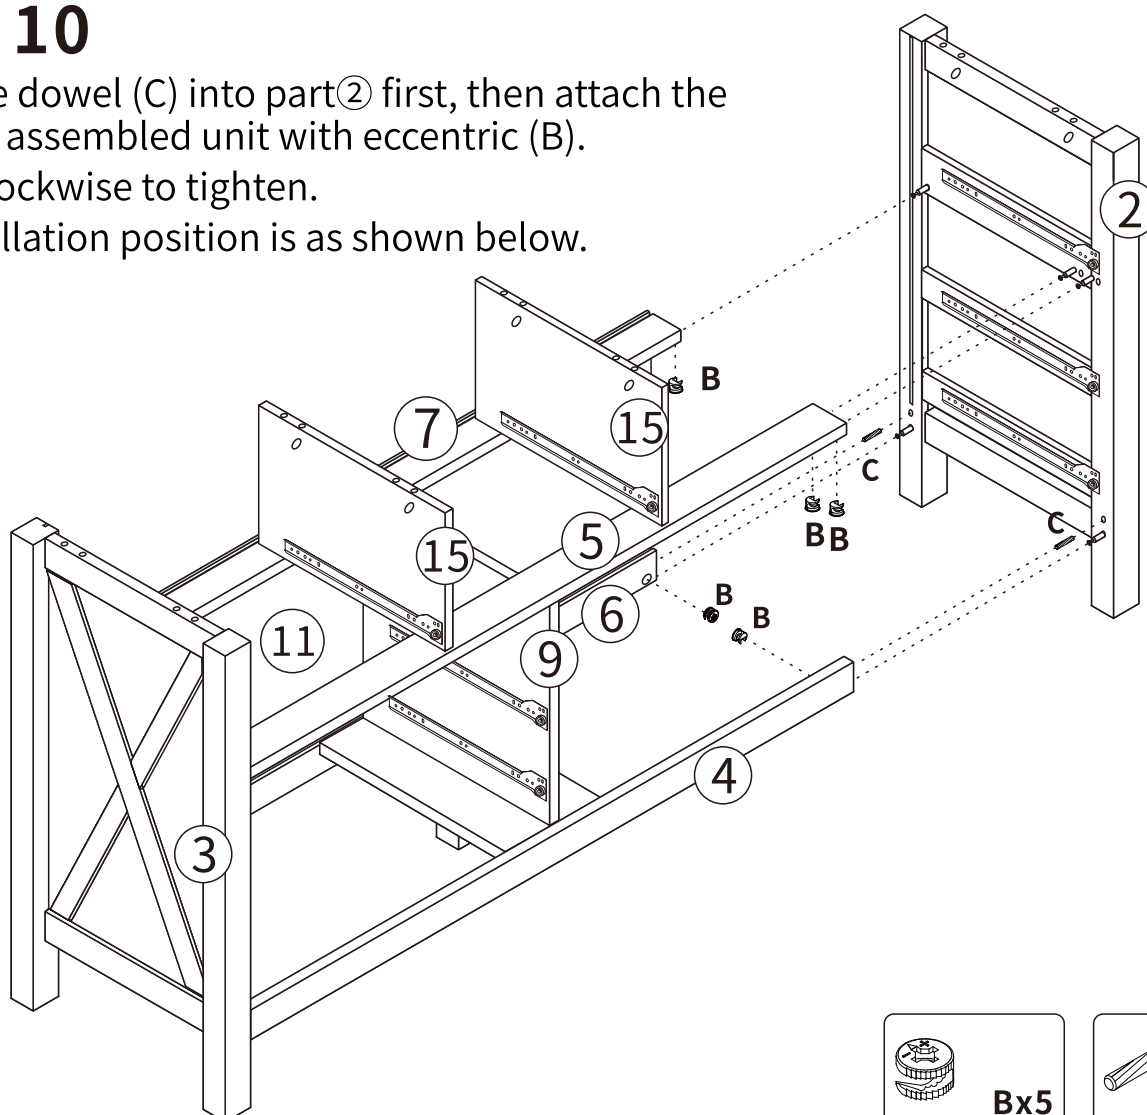




Step 11

Insert part⑫ along the slot, as shown.

Tips: After adjusting the pad(M) on the center stay foot, please ensure that it is firmly grounded to prevent any potential dresser collapse caused by hanging.

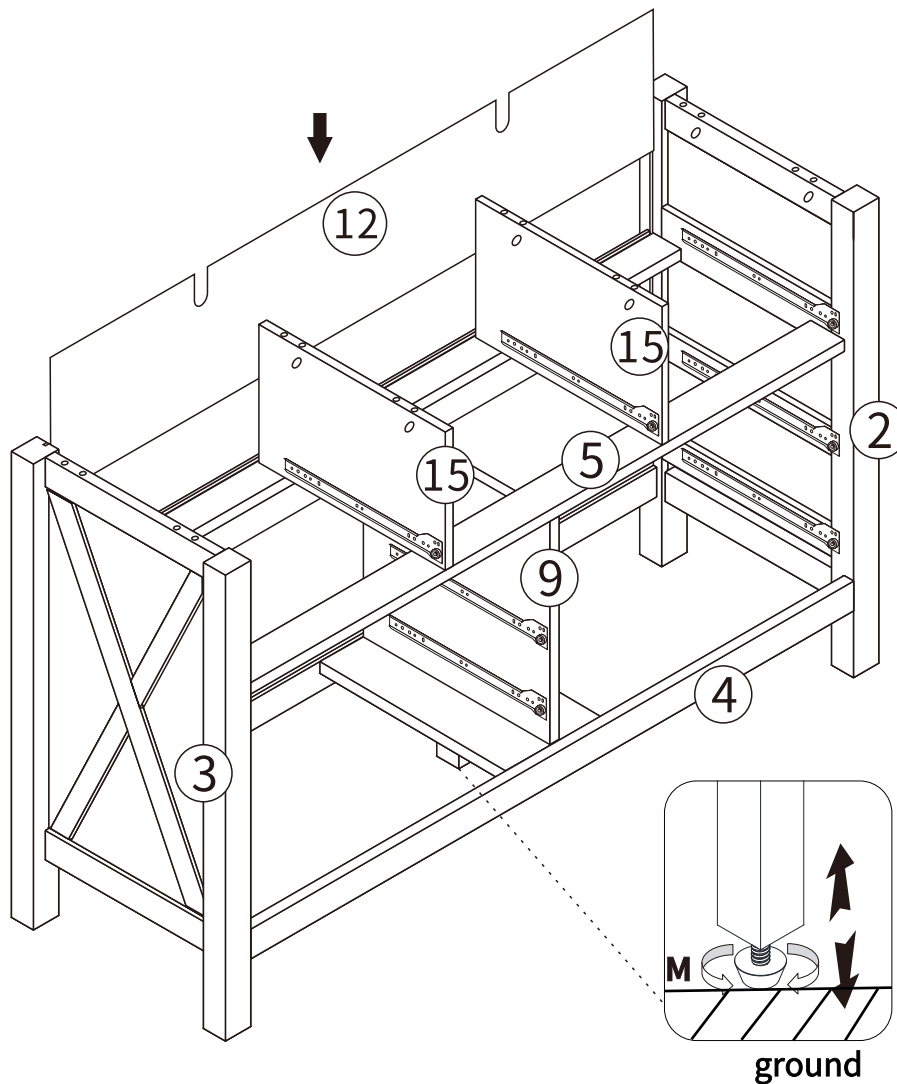




Step 12 Lock the screw (A) to part① first, then install the anti-tipping devices (I) to the part① with screw(H). The installation position is as shown below. Insert the dowel (C) into parts③⑮②, attach part① to assembled unit with eccentric (B), turn it clockwise to tighten. The installation position is as shown below.

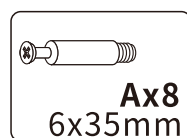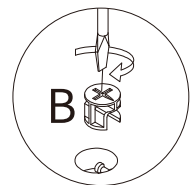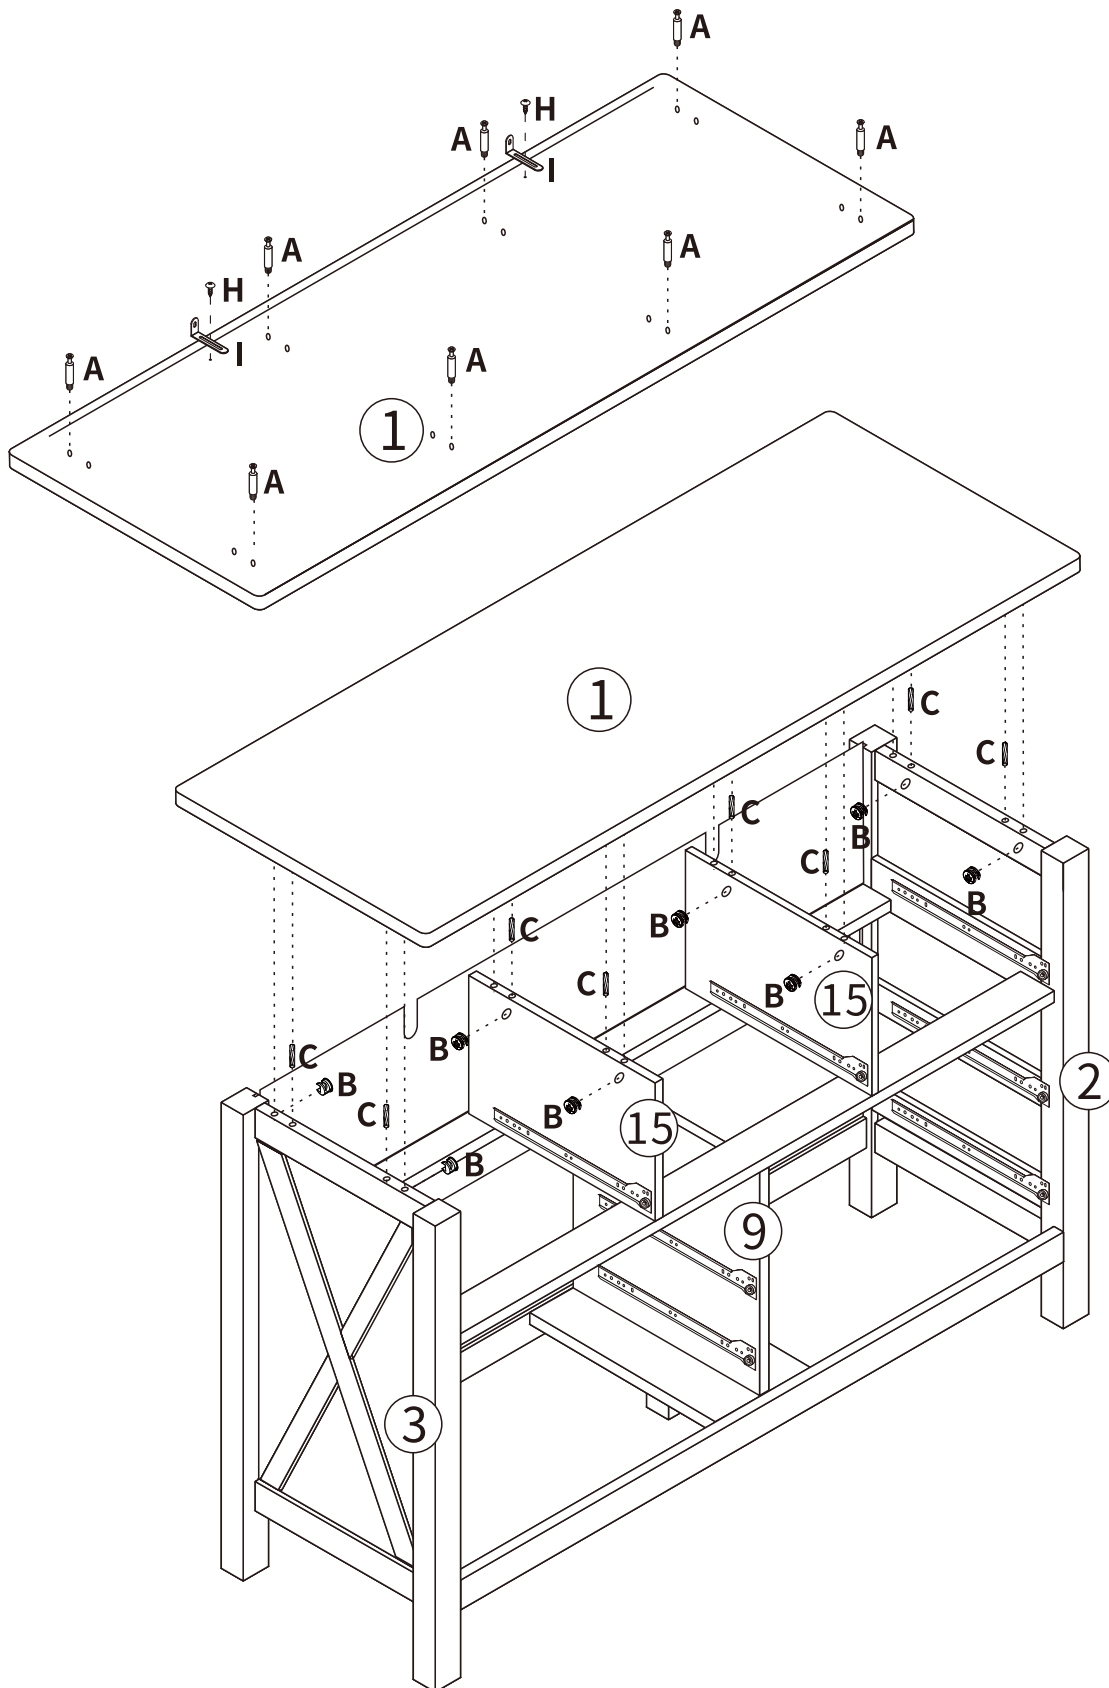

Step 13

Use the screw(O) in component(N) to fasten the back plate buckle.

The installation position is as shown in the figure below.


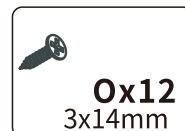
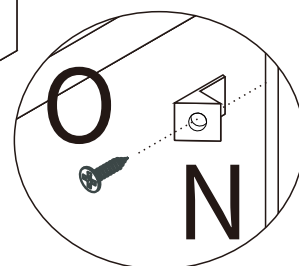
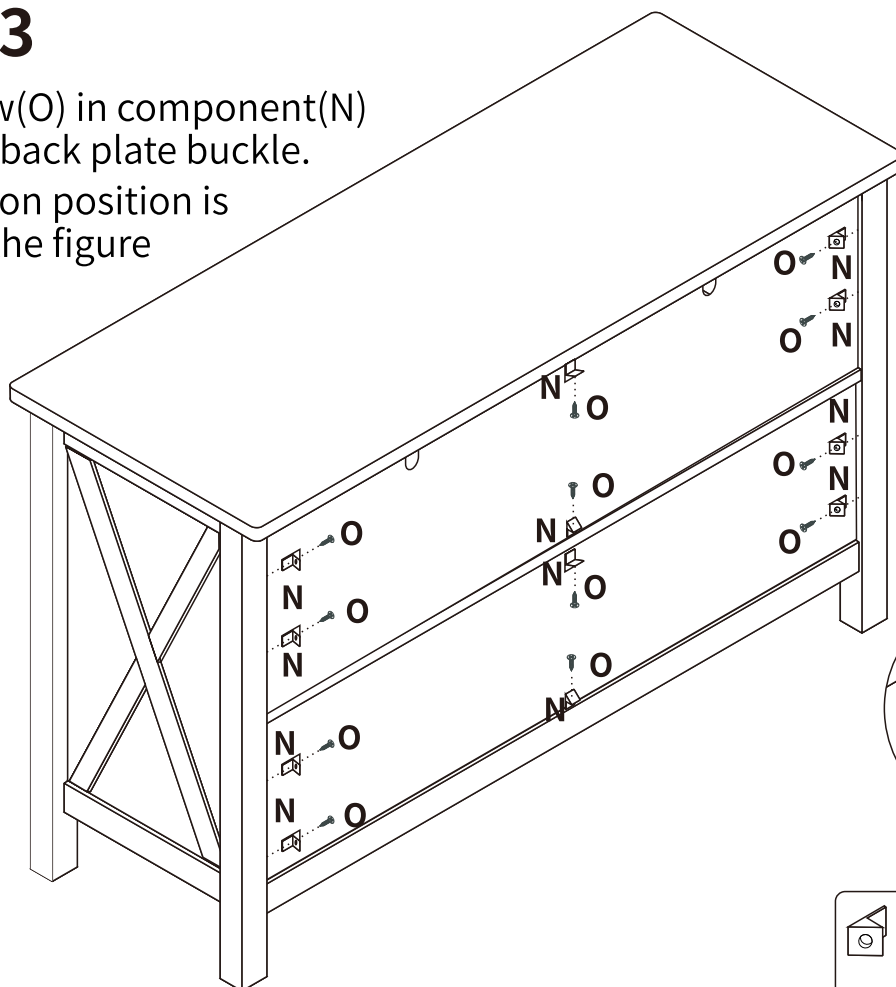


Step 14

Drill a small hole in the wall first, then plastic nail (J) into the wall, and then use screws (D) to fix the cabinet to the wall.

The installation position is as shown in the figure below.

wall


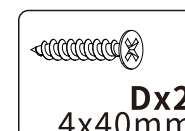
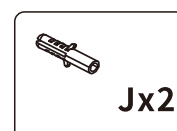
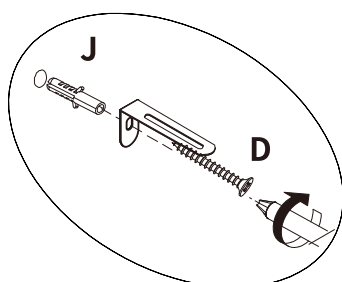
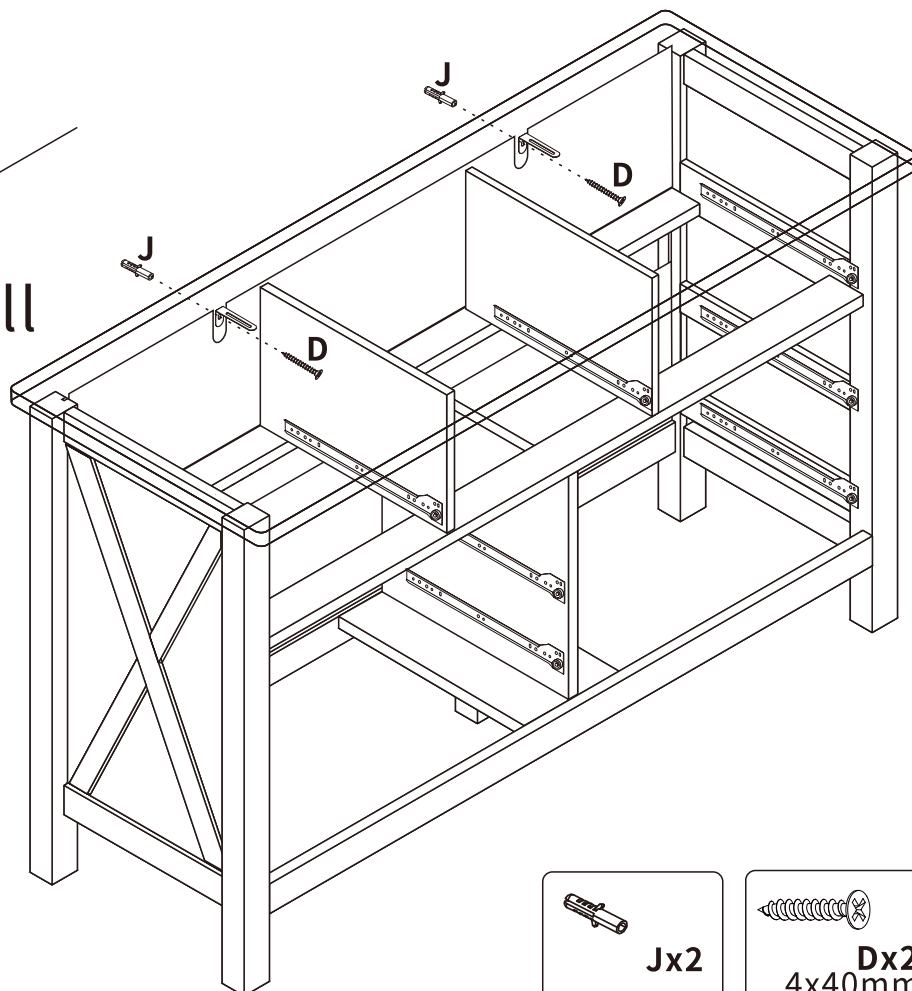


Step 15

Lock the screw (A) to part⑬⑭.





Use the screw (E) to assemble part⑱ and parts⑰⑲.

Insert part⑲ along the slot, as shown.

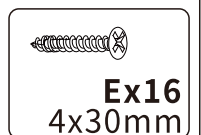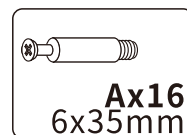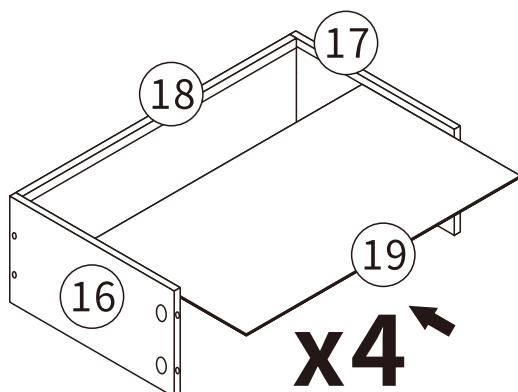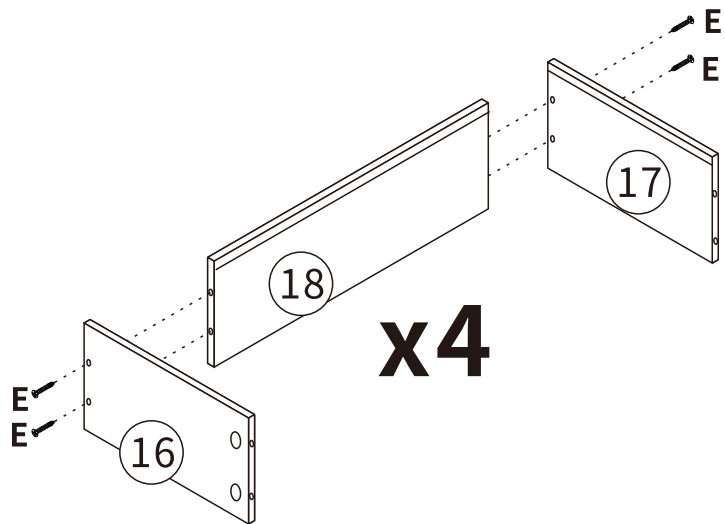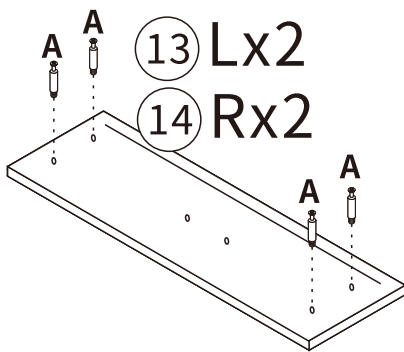





Step 16

Use the screw(K) to lock the handle(L) in the part⑬⑭.
Attach parts⑬⑭ to assembled unit with eccentric (B). Turn it clockwise to tighten.
The installation position is as shown in the figure below.

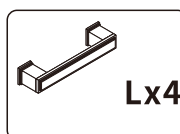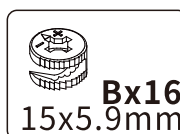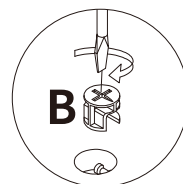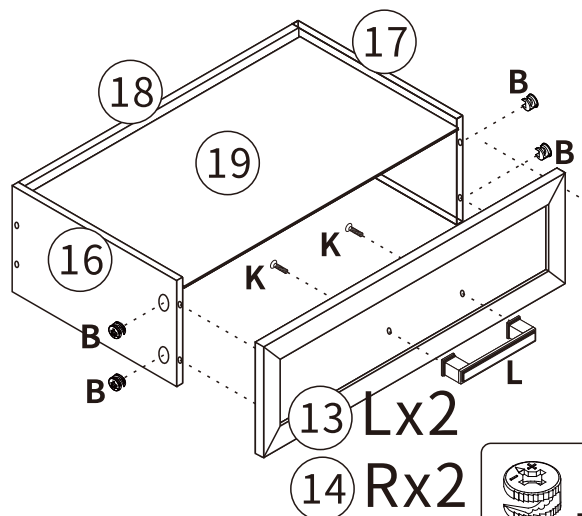

Step 17

Use screws (F) to install guide rail (DR) on the part⑬, and install guide rail (DL) on part⑭.
The installation position is as shown in the figure below.

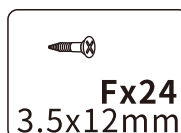
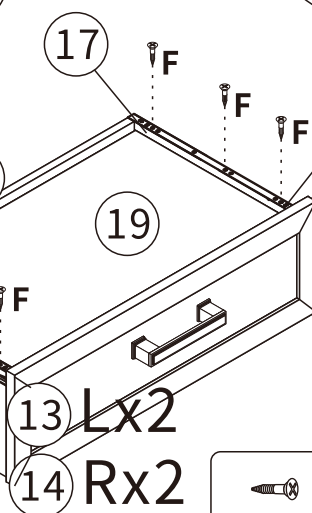
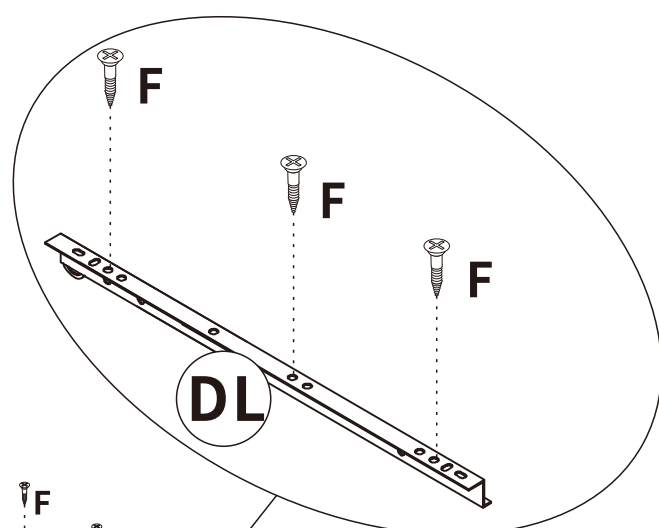
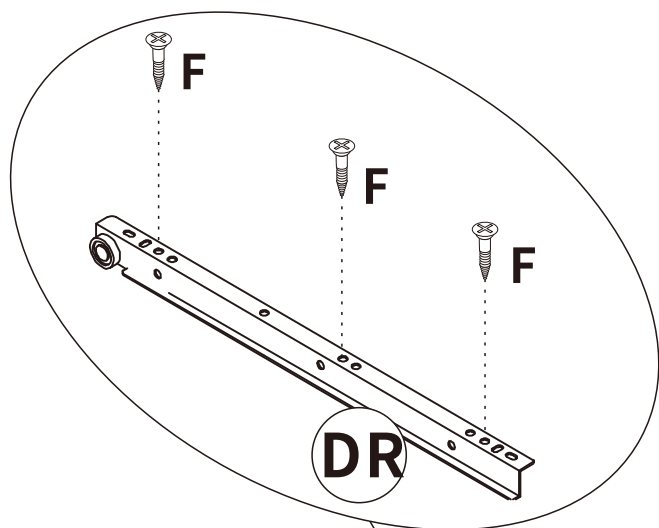


Step 18

Lock the screw (A) to part②①②②.






Use the screw (E) to assemble part②④ and parts①⑥①⑦.

Insert part②③ along the slot, as shown.

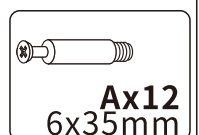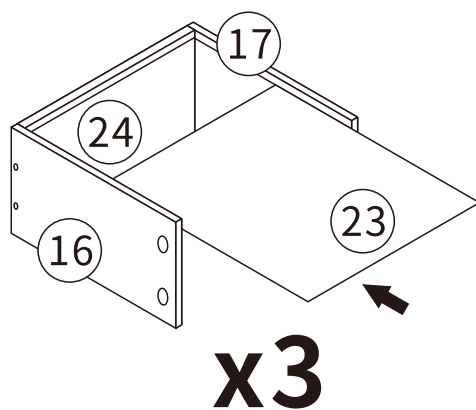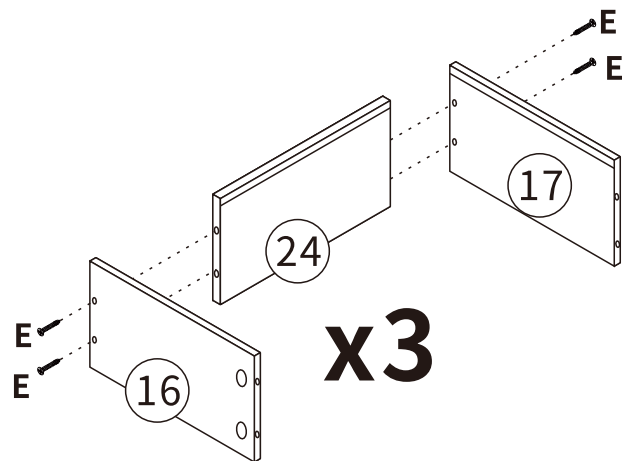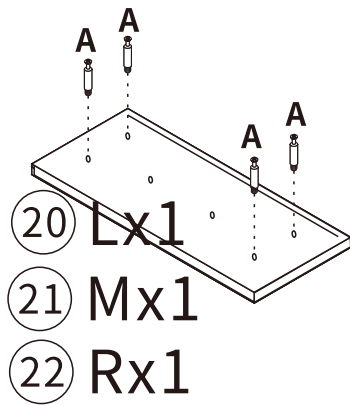


Step 19

Use the screw(K) to lock the handle(L) in the part②①②②.
Attach part②①②② to assembled unit with eccentric (B). Turn it clockwise to tighten. The installation position is as shown in the figure below.

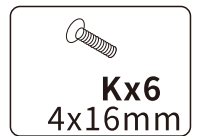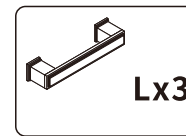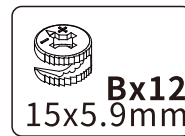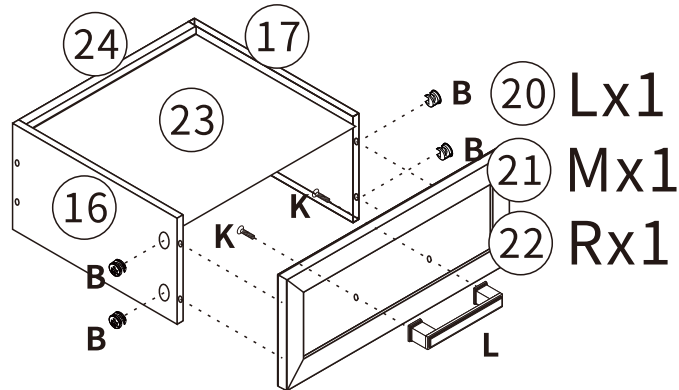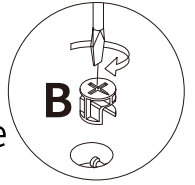

Step 20

Use screws (F) to install guide rail (DR) on the part①⑥, and install guide rail (DL) on part①⑦.
The installation position is as shown in the figure below.

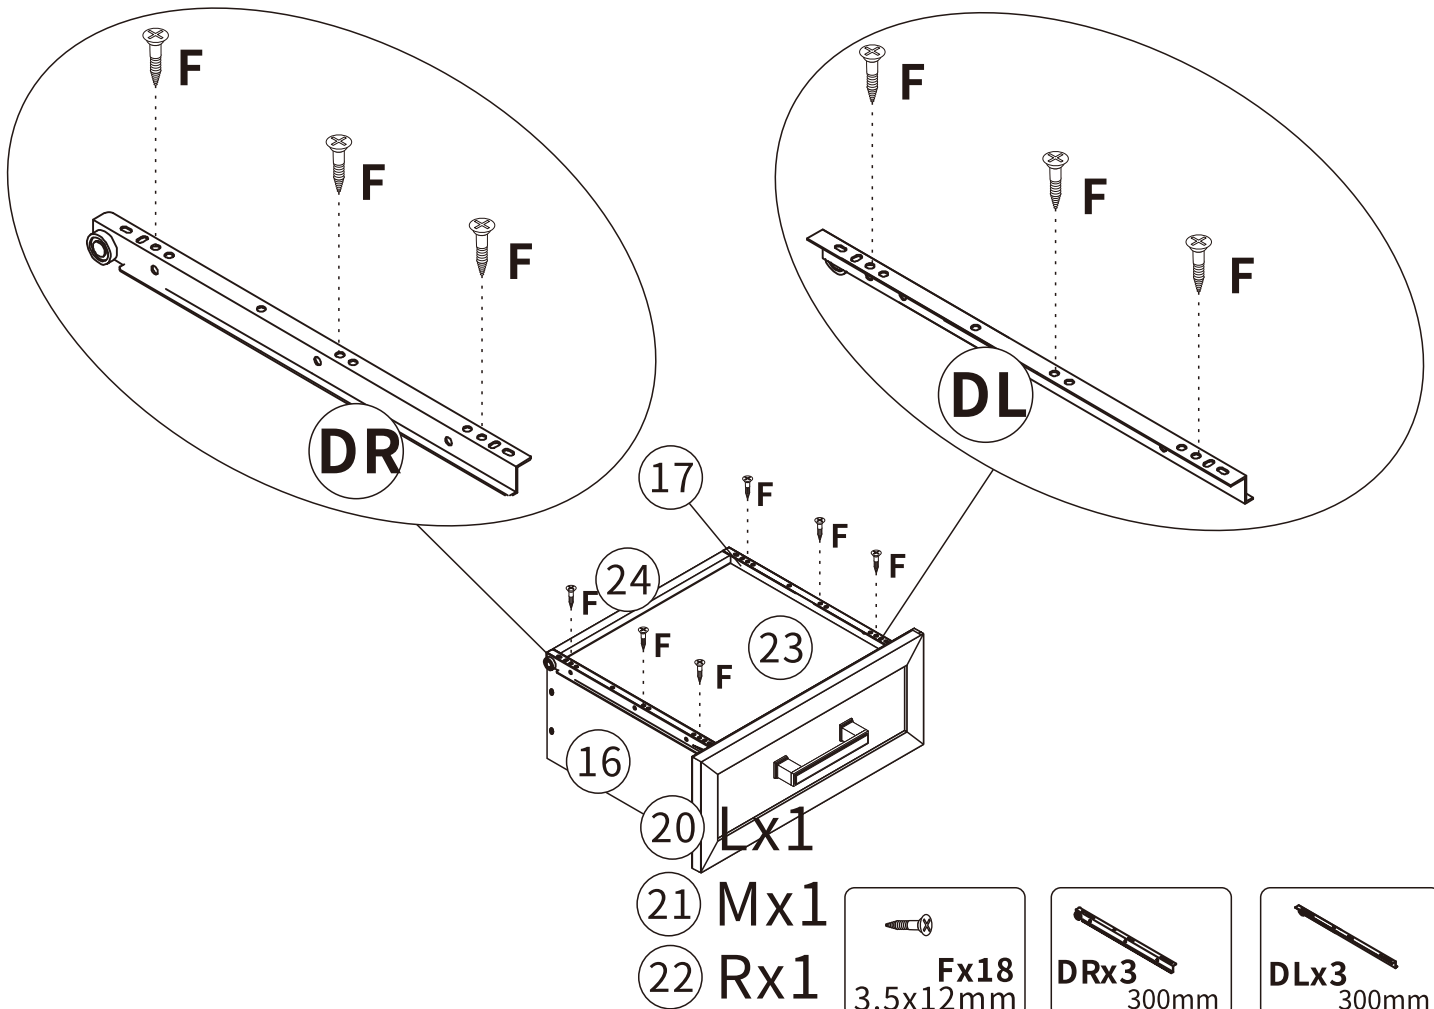

Step 21

The drawer slides must be aligned with the internal rails, otherwise the drawer will tilt.

