


USER'S MANUAL

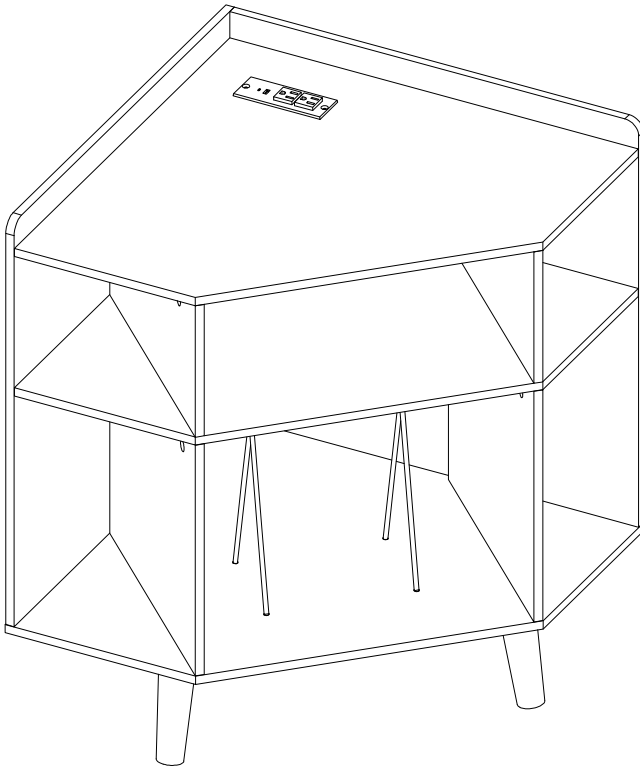

Before You Start



1. Read each step carefully and follow the correct order.
2. Separate and count all parts and hardware.
3. Leave enough space for the assembly process.
4. Prepare the following tools: Flat Head Screwdriver, Cross Head Screwdriver and Hammer.
5. Note: If you use an electric drill or electric screwdriver to tighten the screws, please be careful to slow down and stop when tightening the screws. Otherwise, the screws may fall off.
(Using an electric screwdriver can increase assembly speed).

Useful Tips


Assembly Personnel Required: 1-2 People

- Unpack the item in the area where you plan to store it to avoid excessive lifting.
- Identify, sort, and count the parts before attempting assembly.
- Use a hammer to gently tap in the compression pins.
- The sliders are marked with R (right) and L (left) for proper placement.
- Make sure to always point the tip of the top of the cam lock toward the outer edge.
- If there is a back panel in the package, install it to ensure your unit is complete and sturdy.
- Tighten all the screws provided for the back panel, which can enhance the stability of the product. If it is difficult to tighten, you can use a hammer to secure it and then tighten it.
- Do not use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.




Board Identification

Not actual size

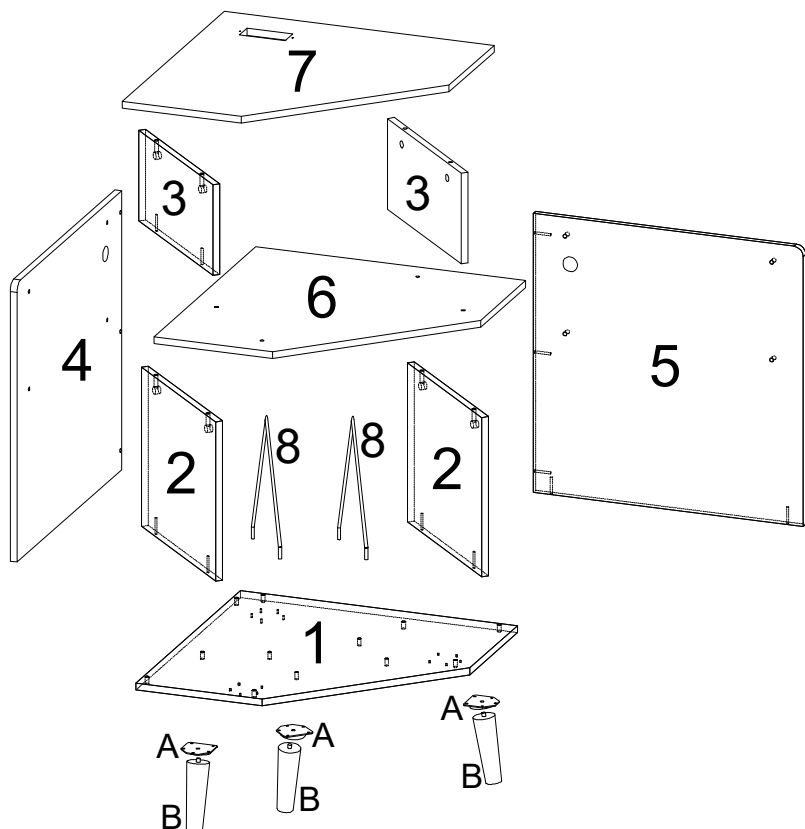


Board Identification


Not actual size



1
601mm*601mm
Qty:1




2
368mm*342mm
Qty:2




3
368mm*195mm
Qty:2




4
600mm*600mm
Qty:1

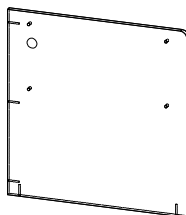

5
600mm*588mm
Qty:1



6
587.5mm*587.5mm
Qty:1



7
587.5mm*587.5mm
Qty:1



8
Qty:2

Parts List



(A)

X3

LEG CONNECTOR



(B)

X3

WOOD LEGS



M4*12mm

(C)

X17

SCREW



M6*40mm

(D)

X8

CAM BOLT



Ø15mm

(E)

X8

CAM LOCK



M5*40mm

(F)

X23

SCREW



M6mm

(G)

X4

NUT



(H)

X1

SOCKET



(J)

X2

CABLE GROMMET



M3

X1



M4

X1



10/12


X1

Parts List


Cam Lock Fastening System

insert the cam bolt into
the hole first, then insert
the cam lock and lock it.


1

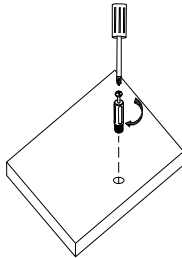

2

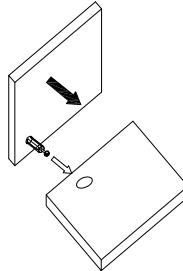


3

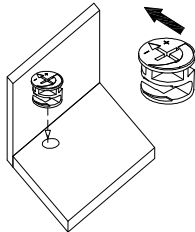

The opening must point toward
the edge of the board


4

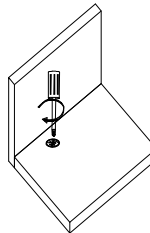

Step 1

 M6*40mm	
Ⓓ	X8


 M4	
	X1

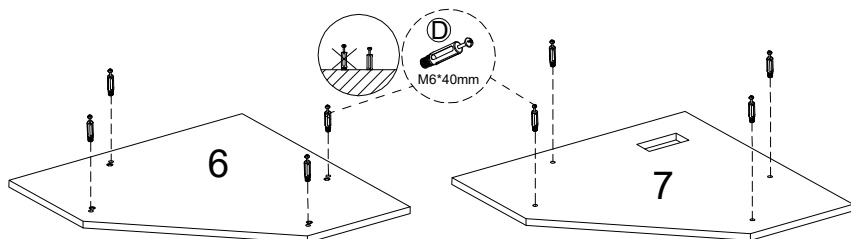

Step 2




 M5*40mm	
Ⓕ	X3

 M4	
	X1



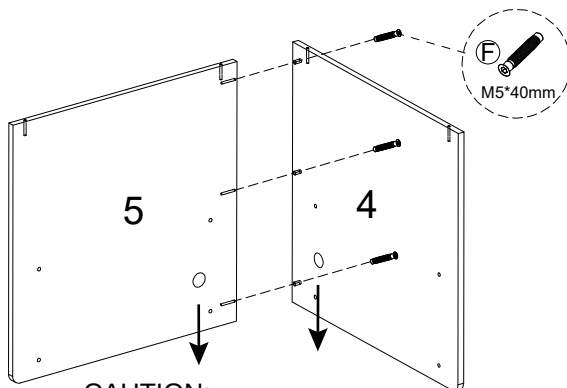


CAUTION:
Ensure consistent orientation
during installation.




Step 3

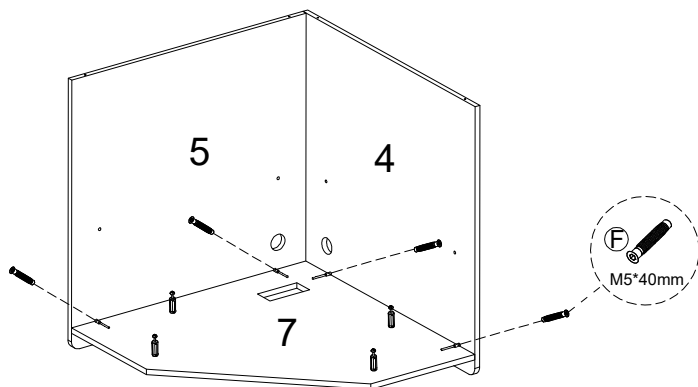





Step 4

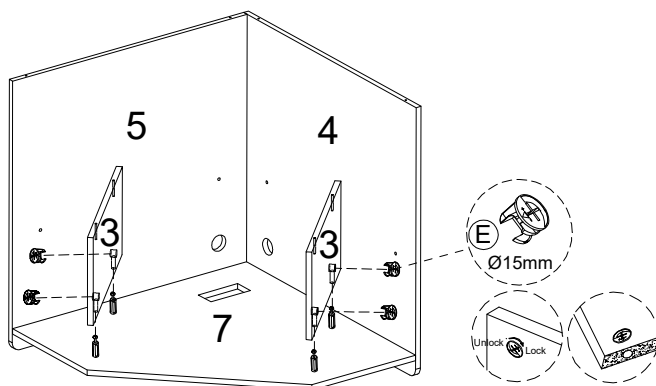


Step 5

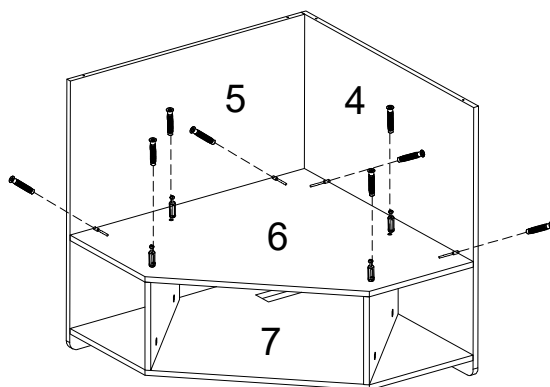


Step 6

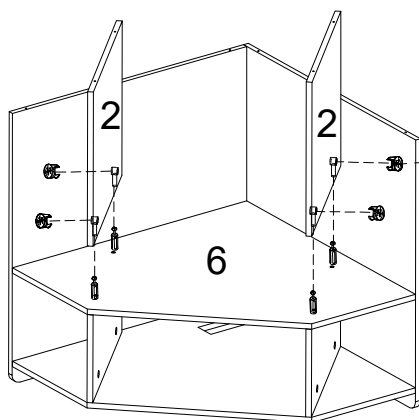

Step 7

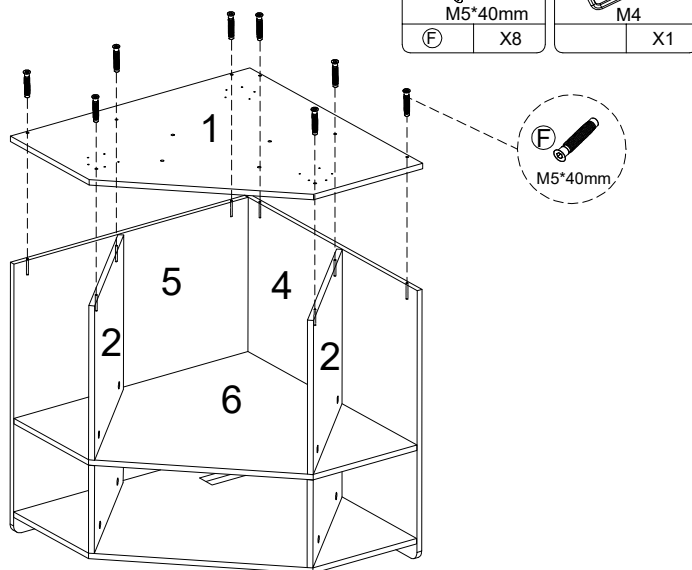


Step 8

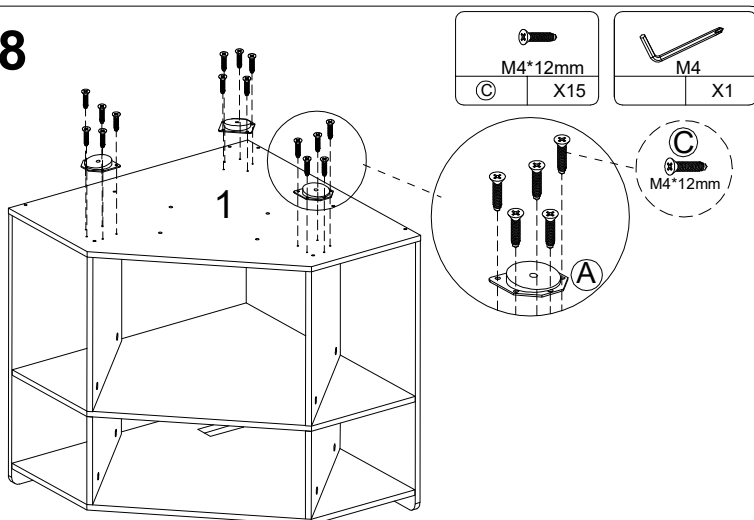


CAUTION:
The mounting plates are angled.
Ensure correct orientation to achieve the proper leg position.

Step 9

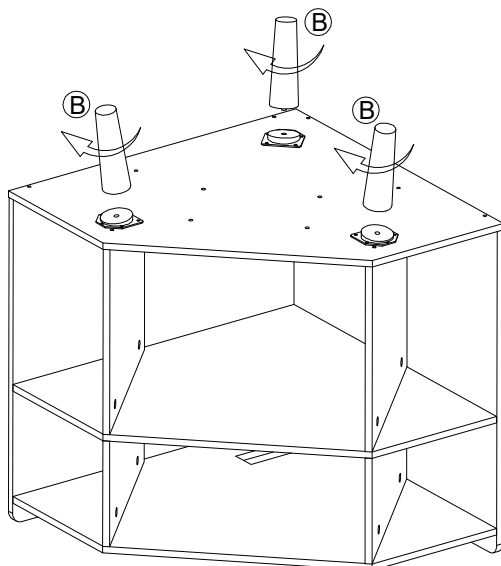

Step 10

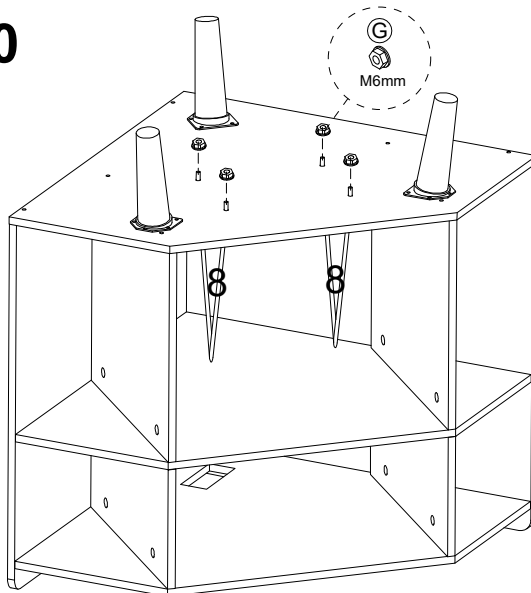

 M6mm	
	X4

Step 11



 M4*12mm	
©	X2

 M4	
	X1

