

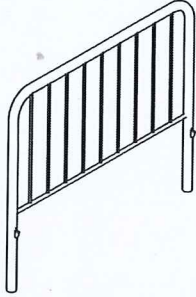


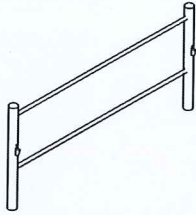

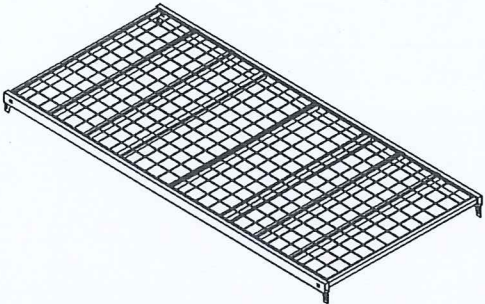



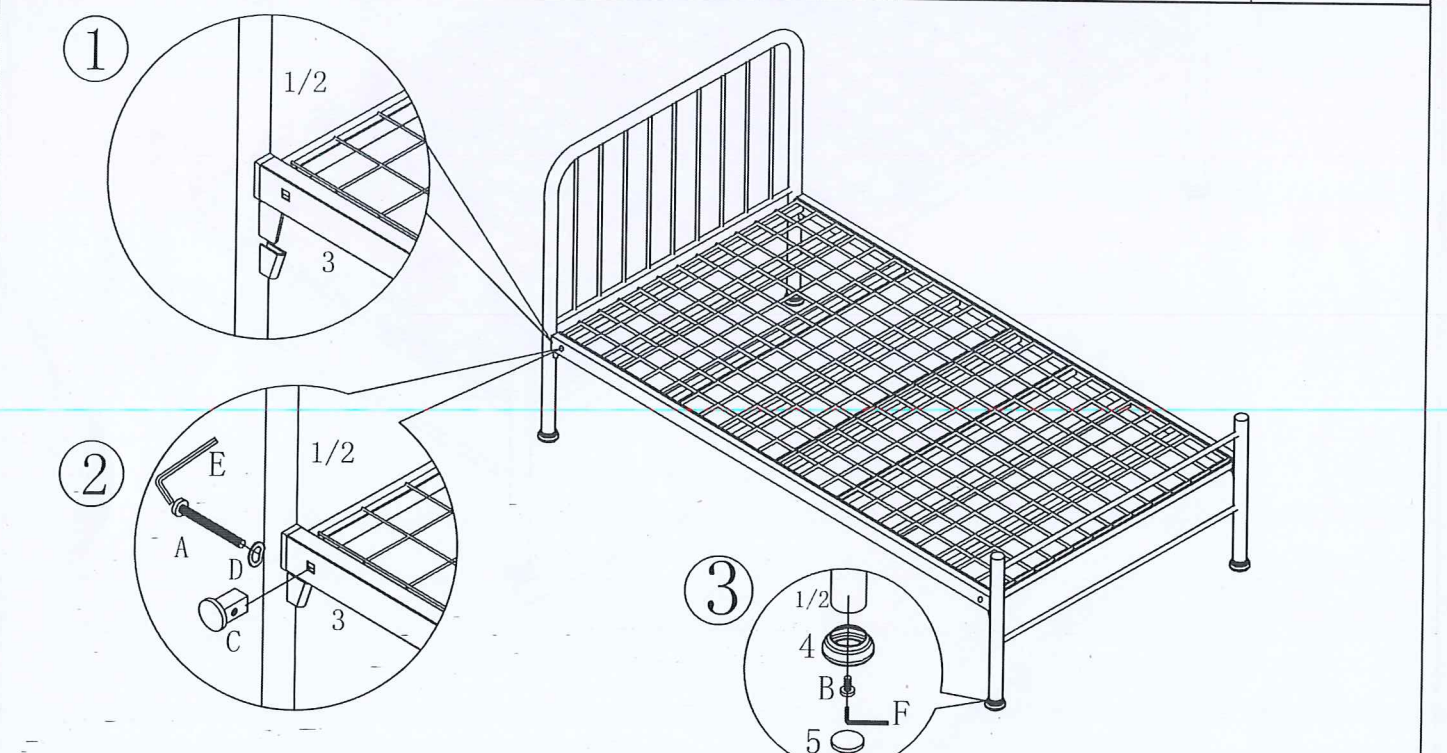


Assembly Instructions

BUS30

1		2			3		
							
Headboard x1pc		Footboard x1pc			Mattress bed frame x1pc		
4	5	A	B	C	D	E	F
							
Leg Cap 4pcs	EV pad 4pcs	Bolt M8x100 4pcs	Bolt M6x16 4pcs	Insert nut4pcs	Flat washer M8x22 4pcs	Allen key 5MM 1pc	Allen key 4MM 1pc



PLEASE NOTE: If your bed legs are placed onto a wooden floor, or any type of flooring that is deemed as 'slippery', it is your responsibility to ensure that the protective rubber or plastic on the base of any legs associated with the bed frame have not worn away. Unless your bed frame is physically fixed to the floor in any way, it is highly likely your bed frame will move as you enter and leave your bed.

If you find that upon checking the legs the rubber or plastic has worn away, you should ensure that some kind of floor protection is placed underneath the legs, such as adhesive floor pads. We highly recommend using floor protection pads with a high adhesion level.