



BED FRAME

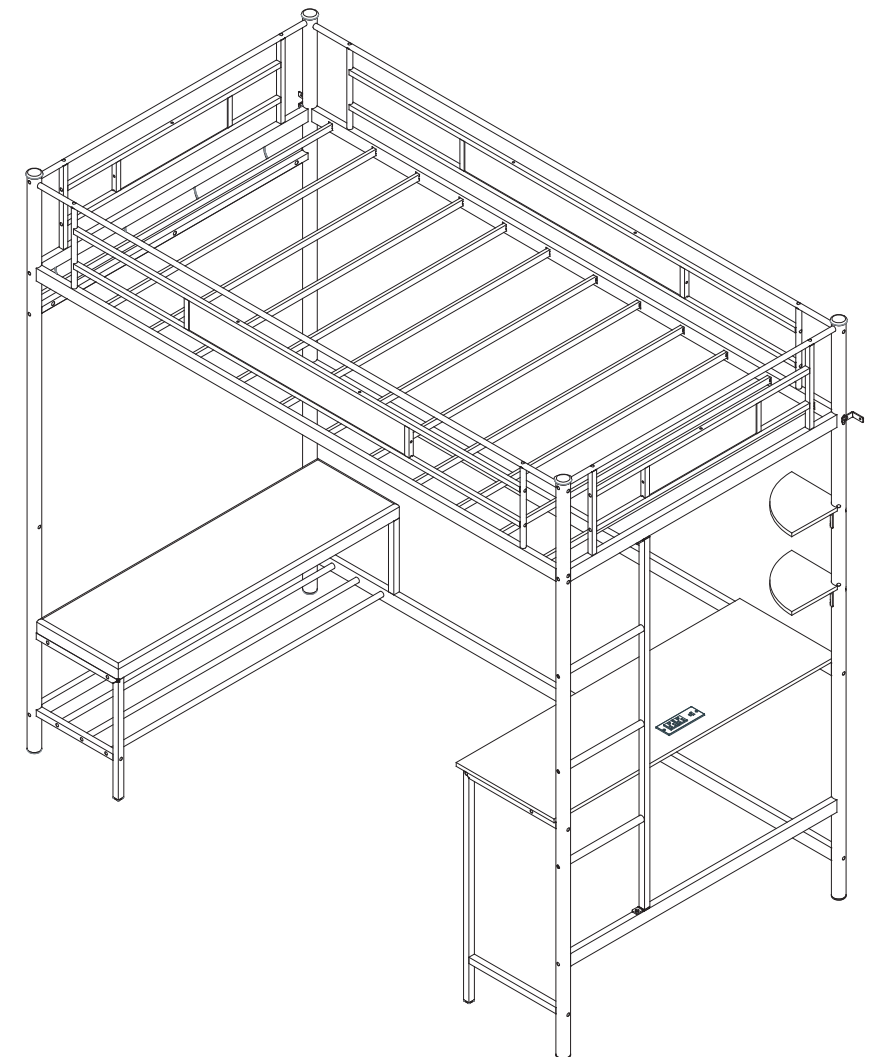

Thank you for choosing our products, please assemble and use it following the instructions.

Assembly Instruction

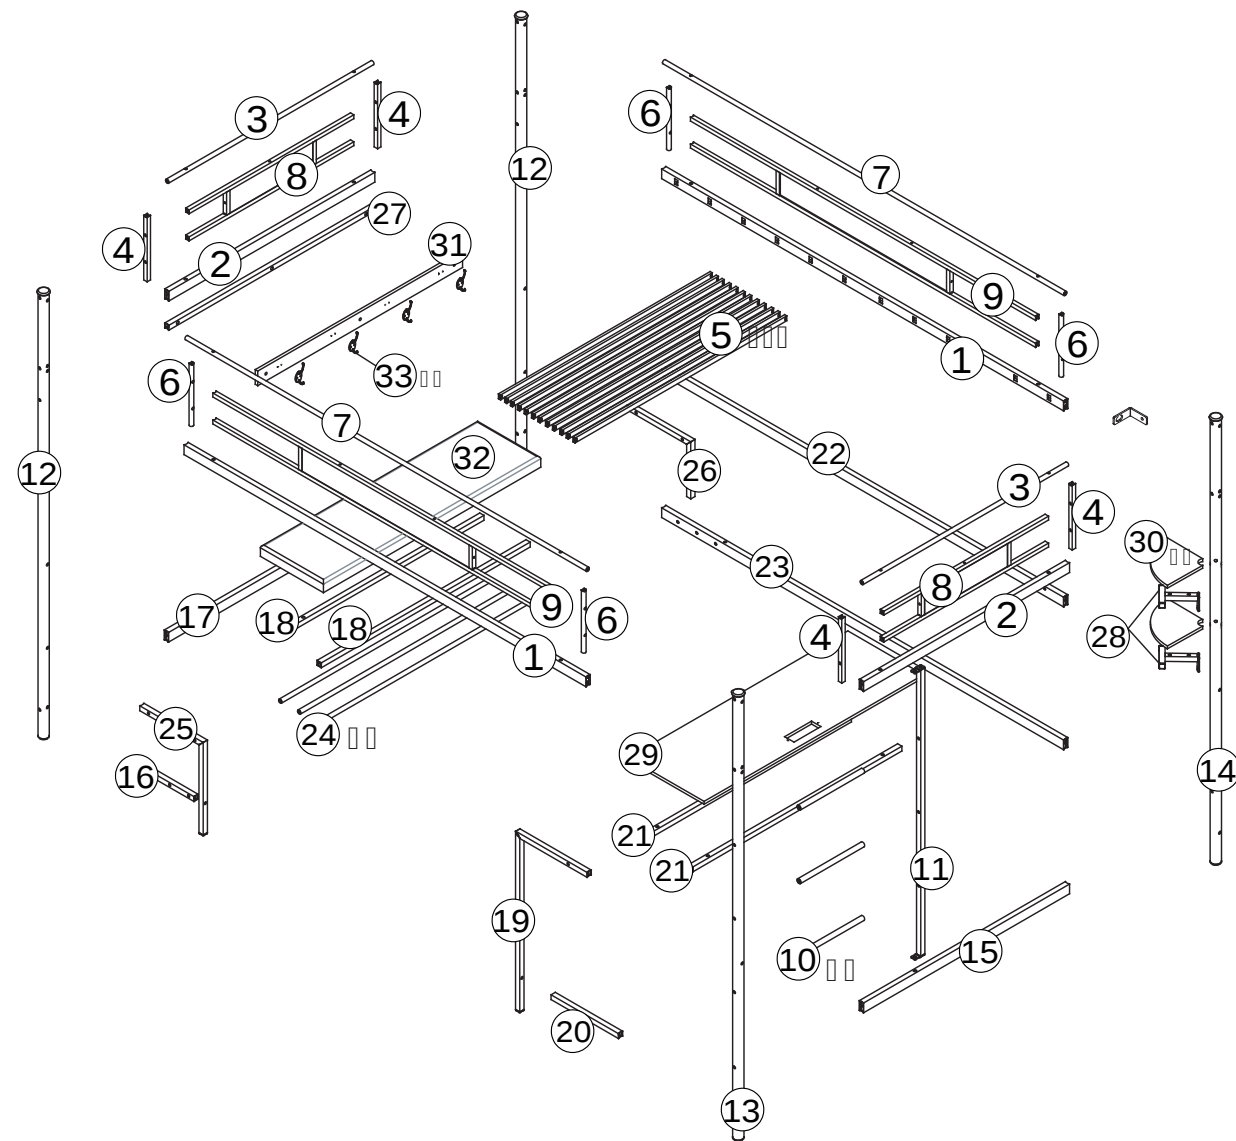





B437

Important Note

HARDWARE NOTE :


1. Two or more people are required for assembly
2. Do not screw on the bolts too tight unless the installation is done. Make sure all bolts are tightly screwed before you use it.

Components

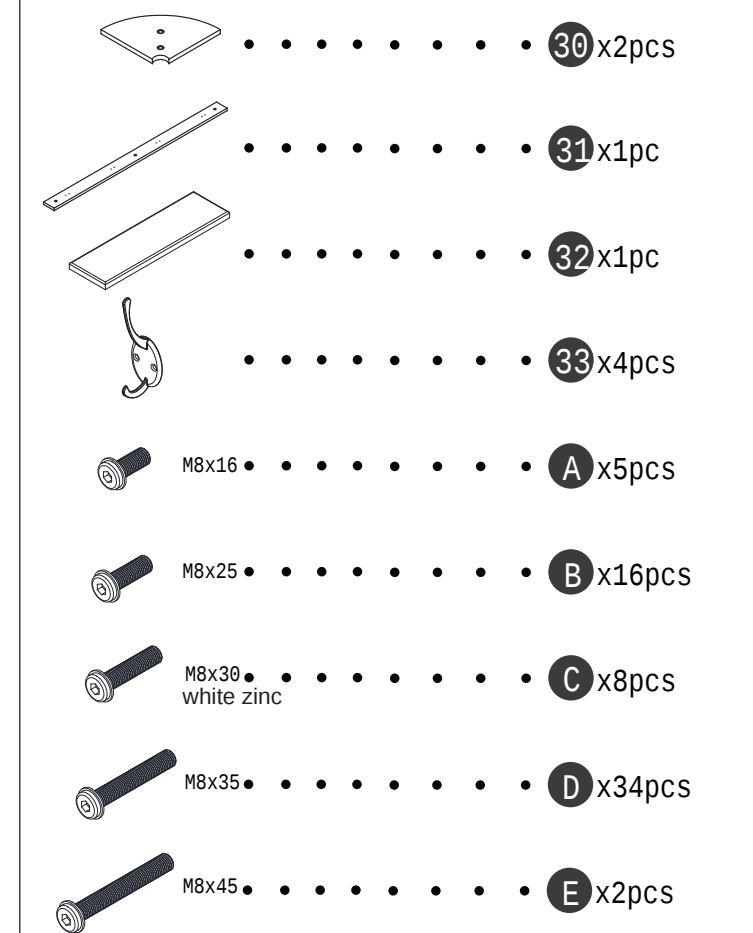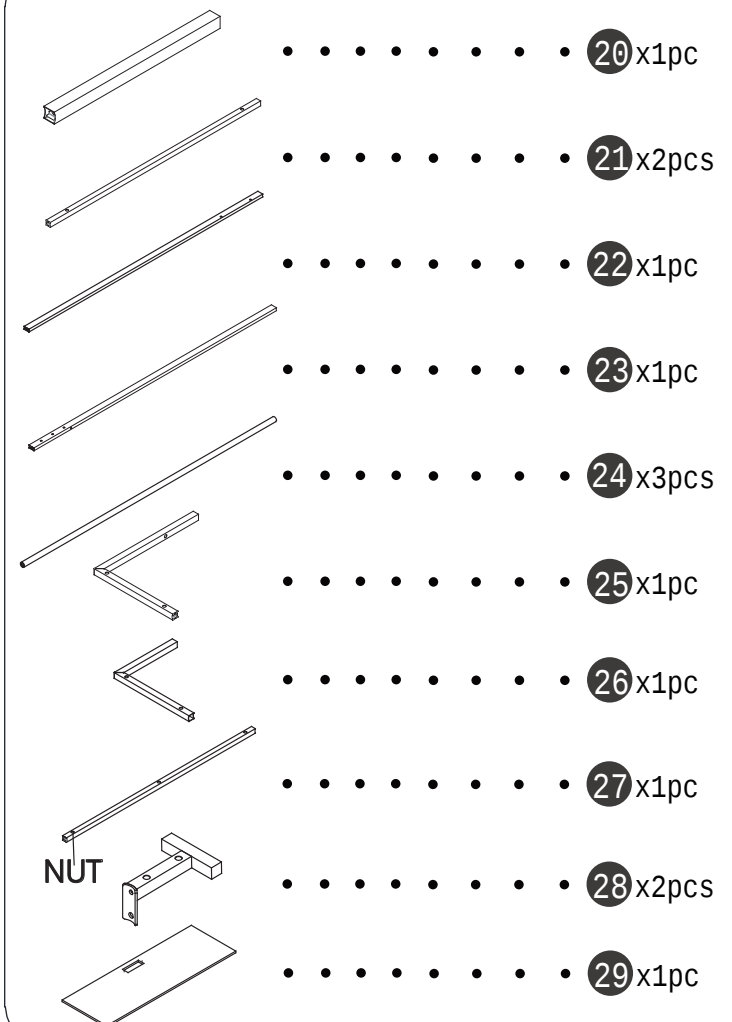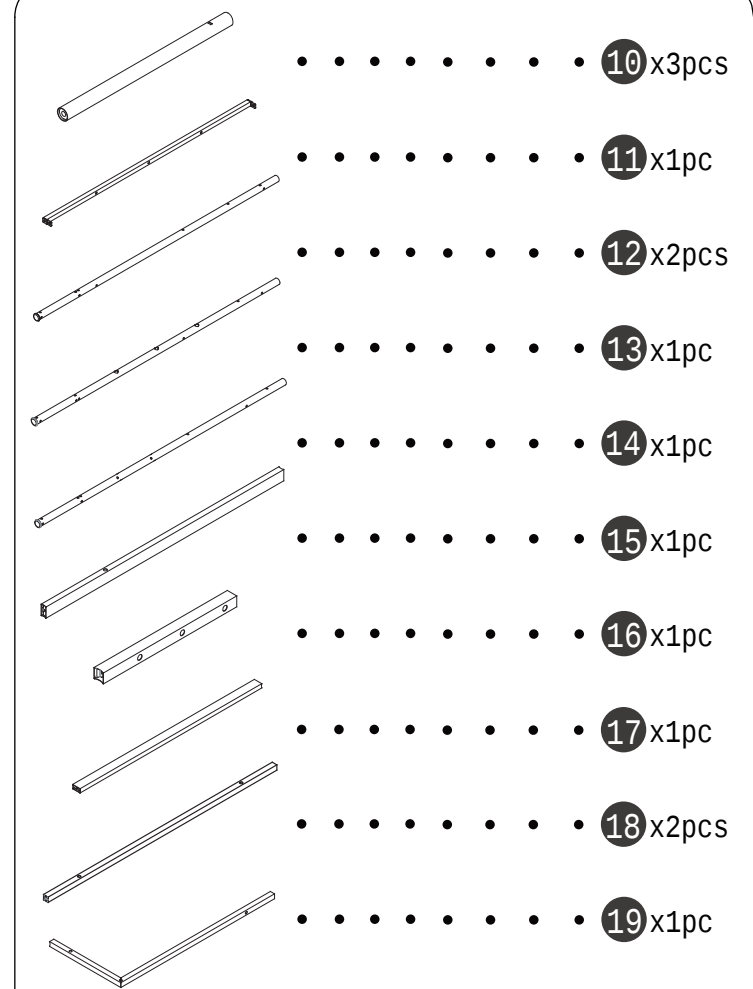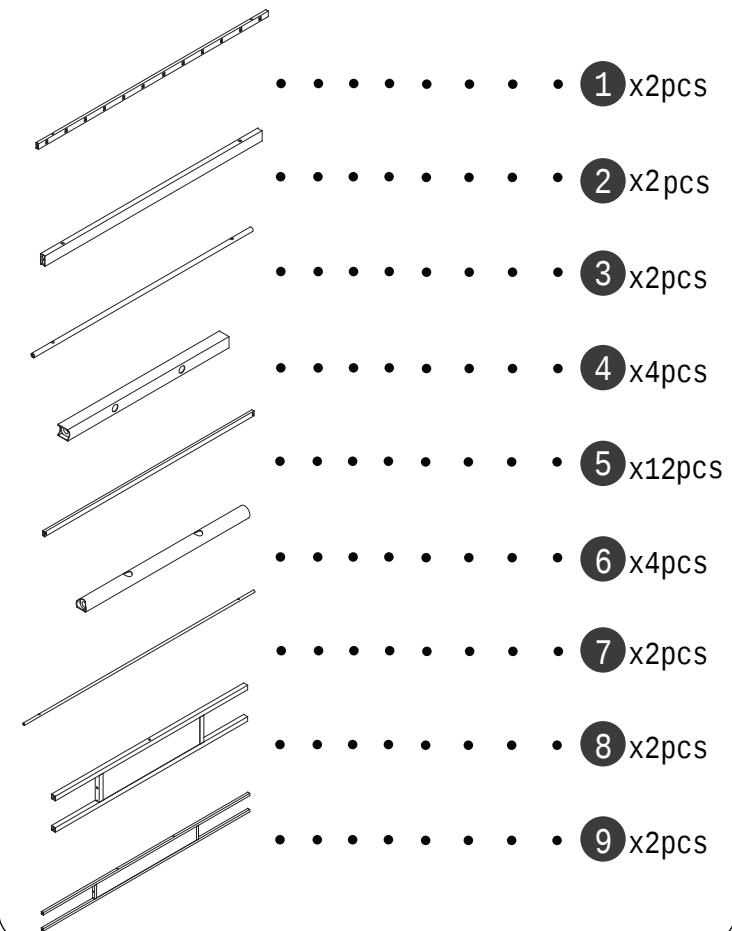


- M8x55 • • • • • • • • • • **F** x44pcs
- ST3x16 • • • • • • • • • • **G** x8pcs
- ST4x14 • • • • • • • • • • **H** x2pcs
- • • • • • • • • • **I** x24pcs
- M8 • • • • • • • • • • **J** x1pc
- • • • • • • • • • **K** x1pc
- • • • • • • • • • **U** x1pc
- • • • • • • • • • **Y** x2pcs
- • • • • • • • • • **Z** x2pcs


TYPE 1

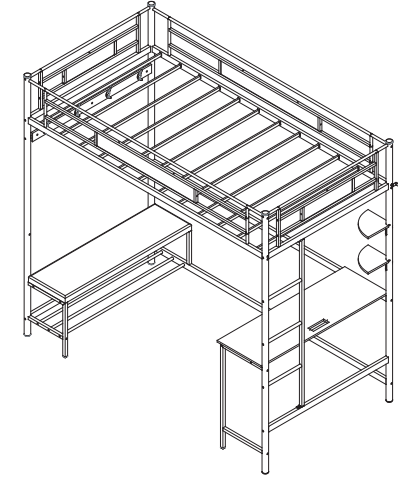

TYPE 2

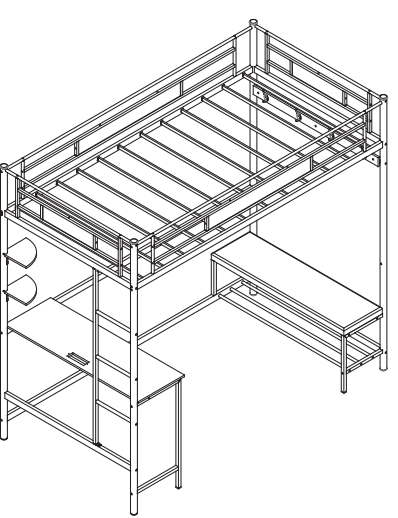


Finish

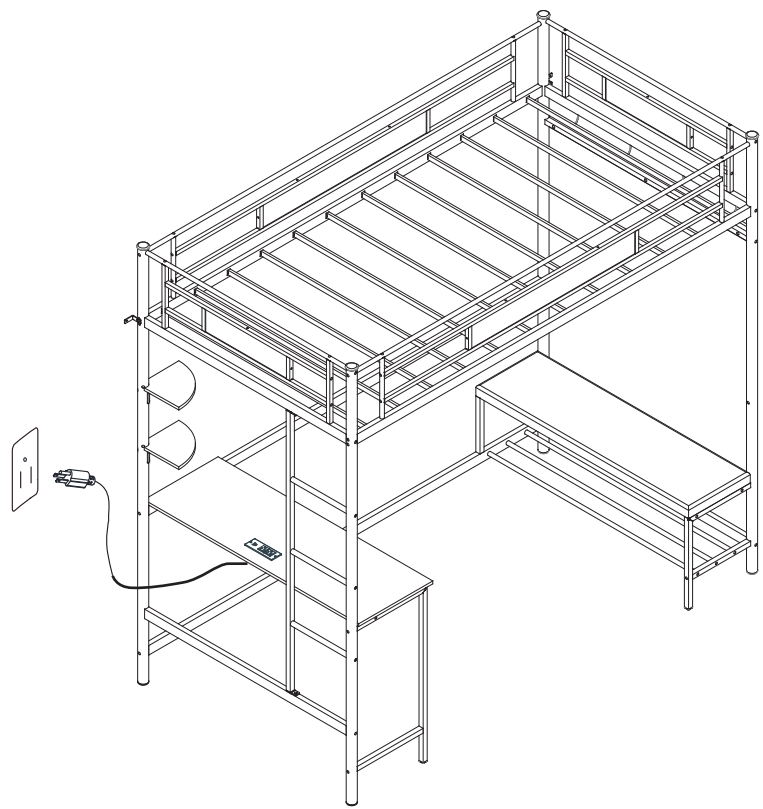


Note:Now you can tighten all the bolts.

TYPE 1

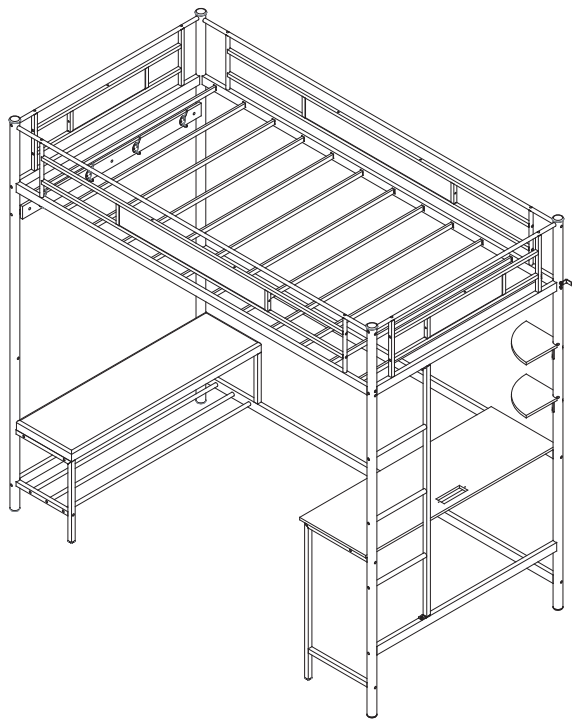

x2 **1**

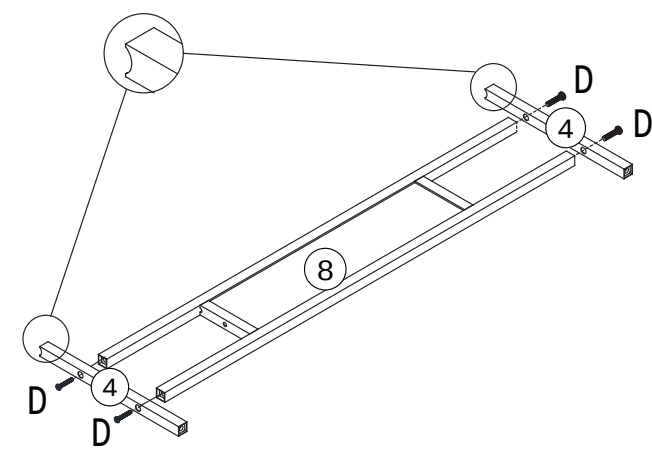

D		8pcs
M8x35		

20

E

M8x45

2pcs

21

H

ST4x14

2pcs

x2 2

B

M8x25

4pcs

F

M8x55

4pcs

3

F

M8x55

8pcs

22

I

24pcs

23

Z

2pcs

x2 4

B

M8x25

8pcs

x2 5

B

M8x25


4pcs

F


M8x55

4pcs


6

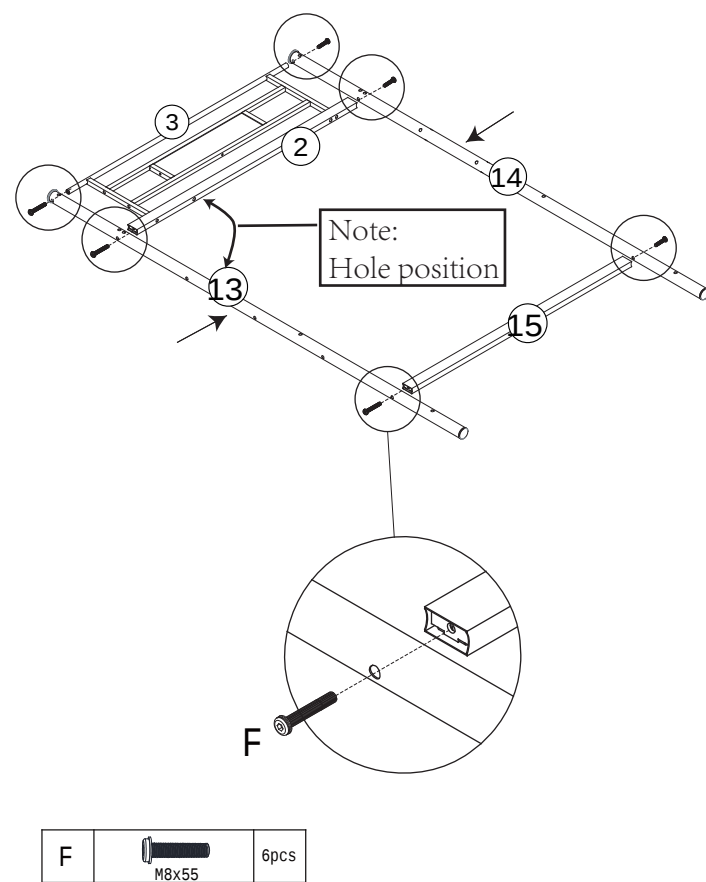


7

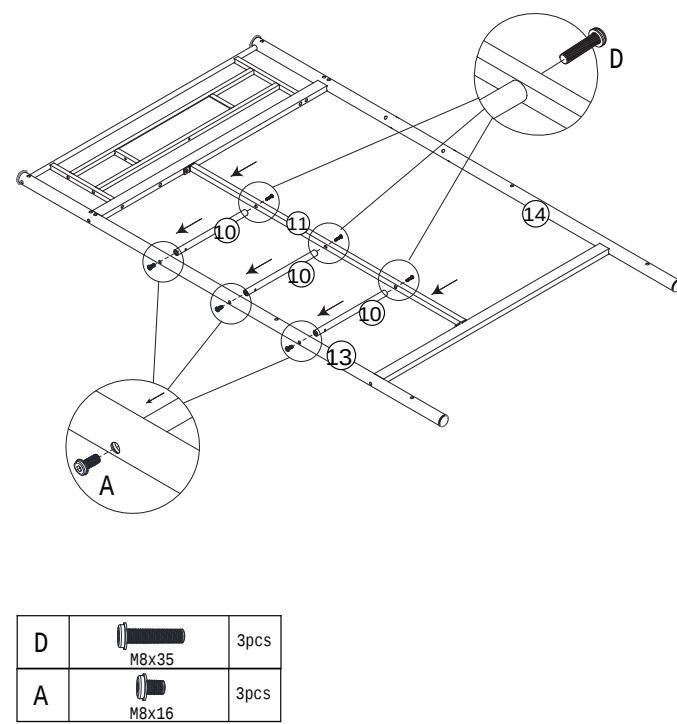


16

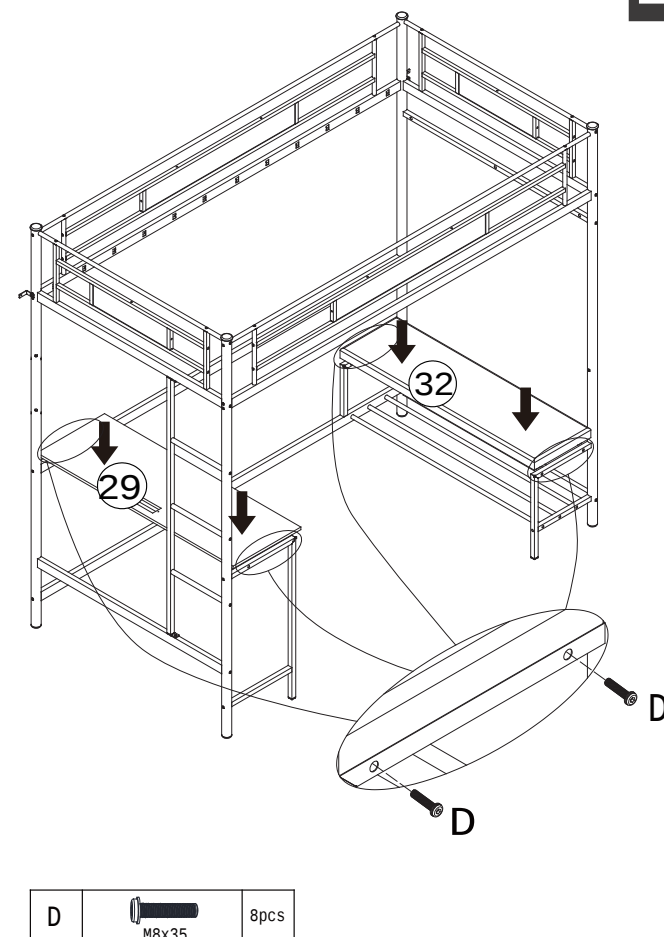


17

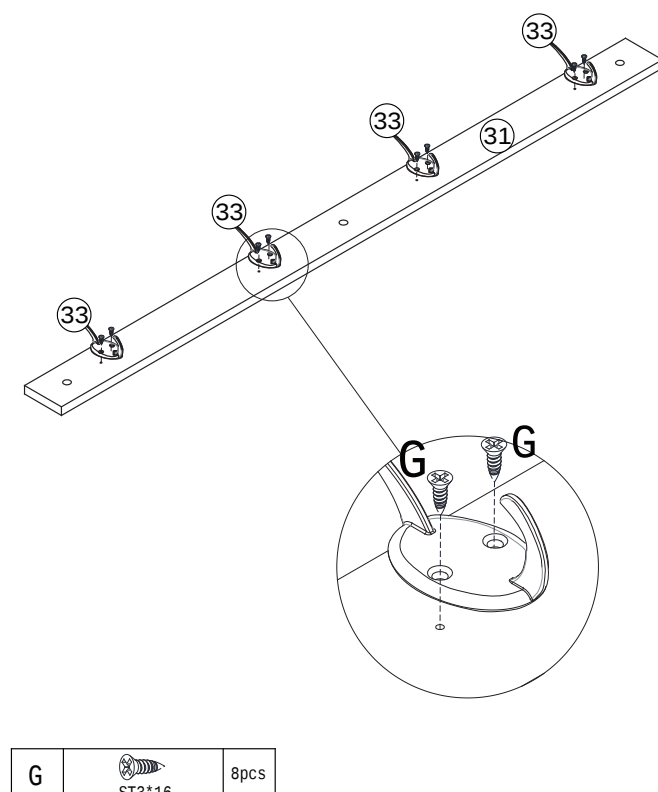


8

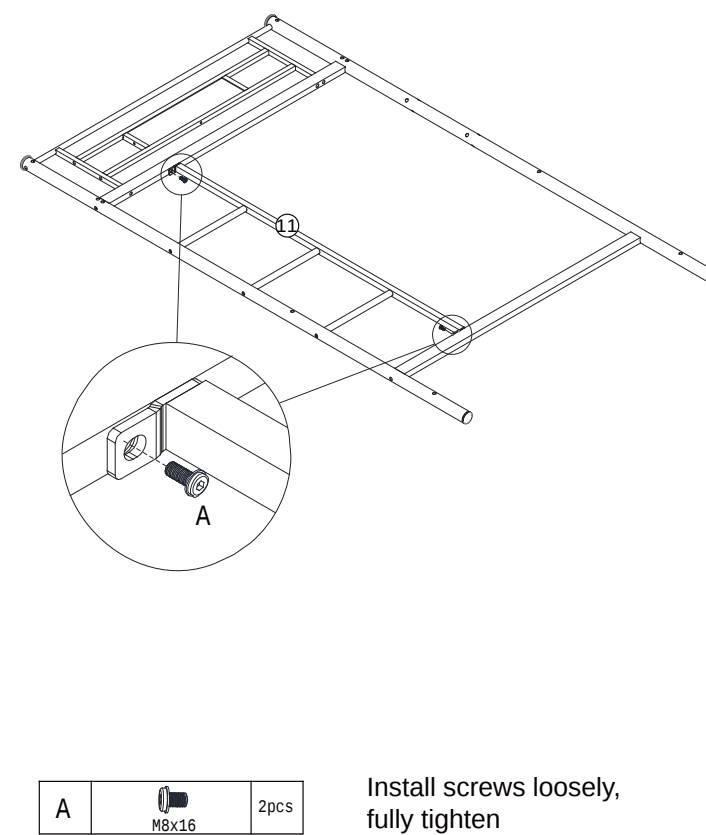


9

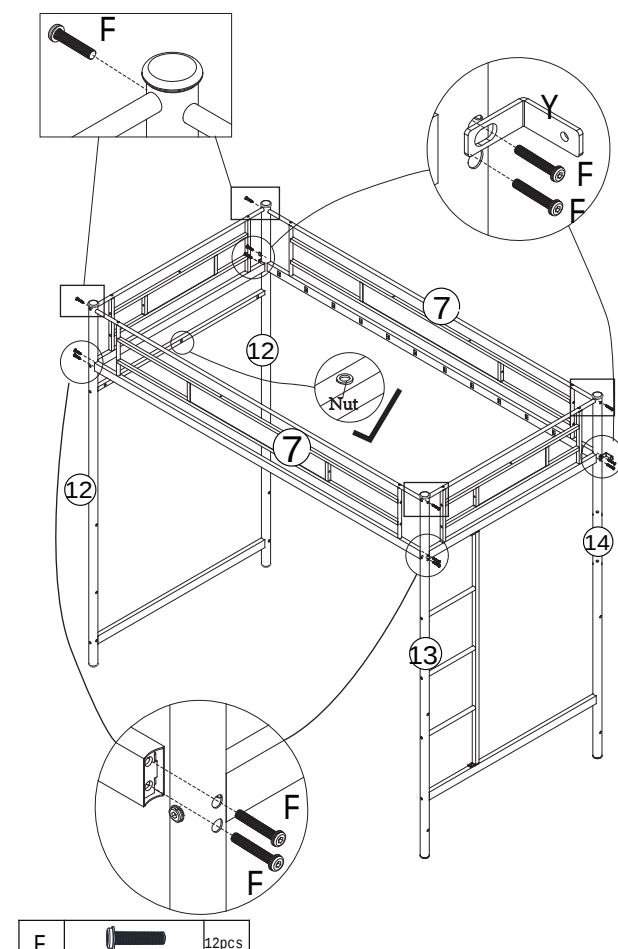


18

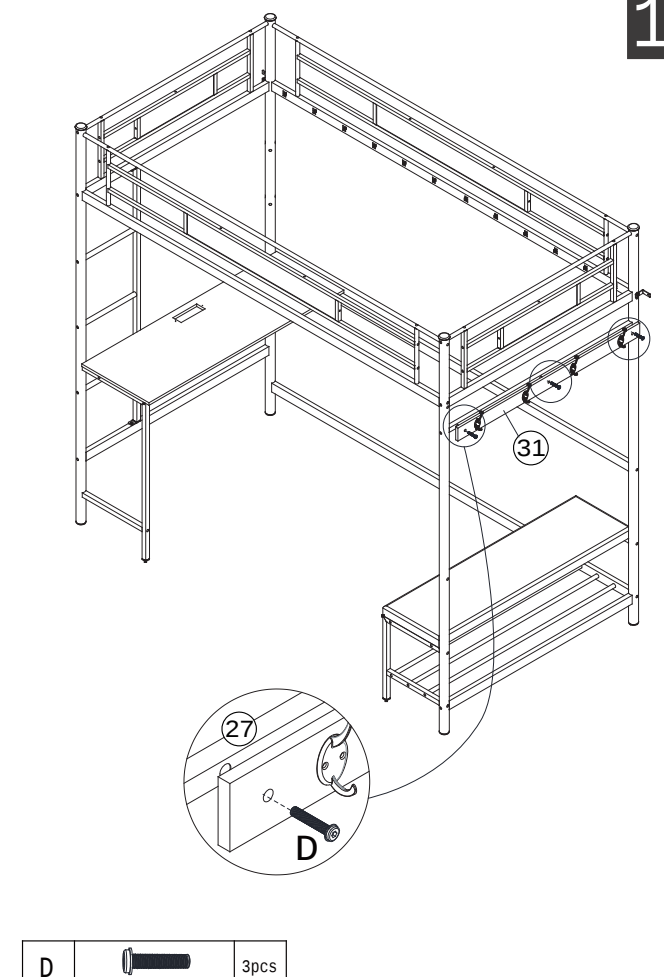

x2 19


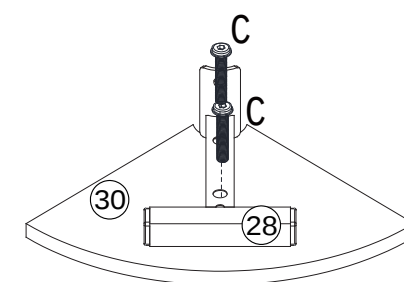


12

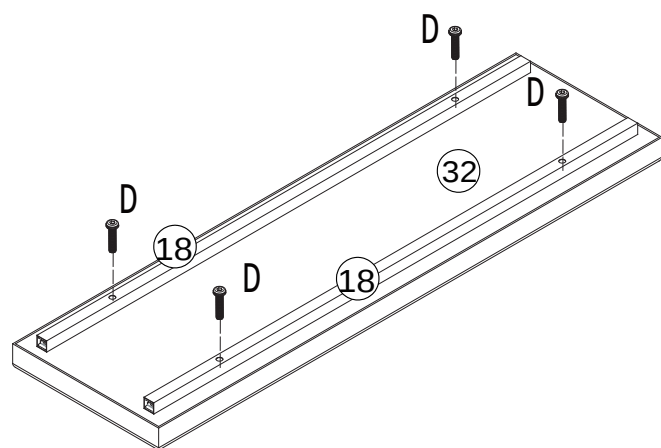


Install screws loosely,
don't fully tighten

13

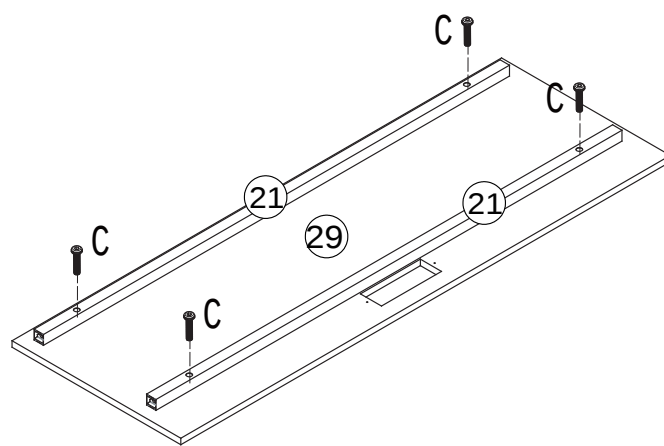


Install screws loosely,
don't fully tighten


10

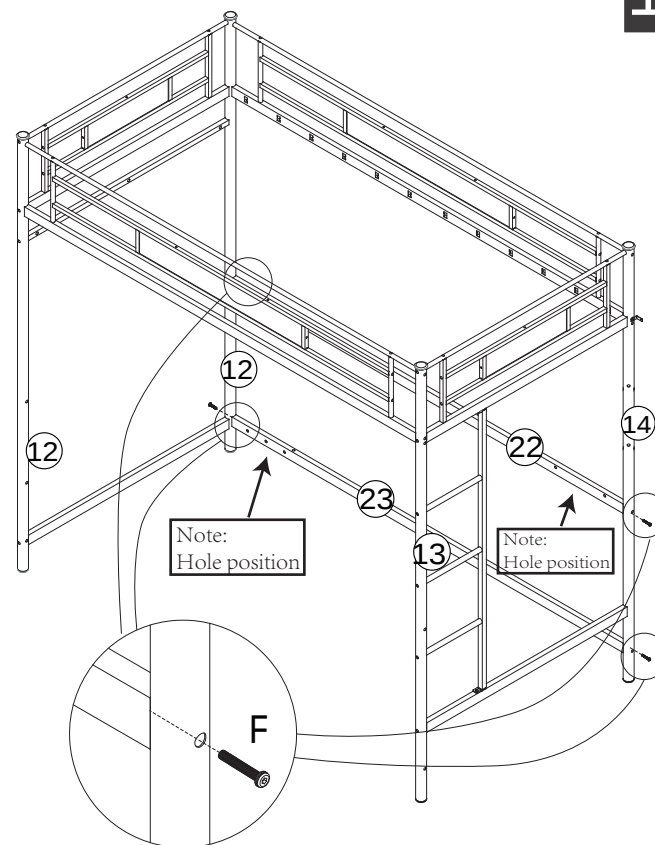


11

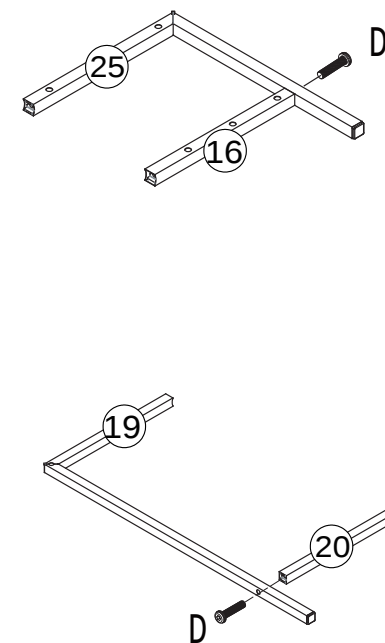


14

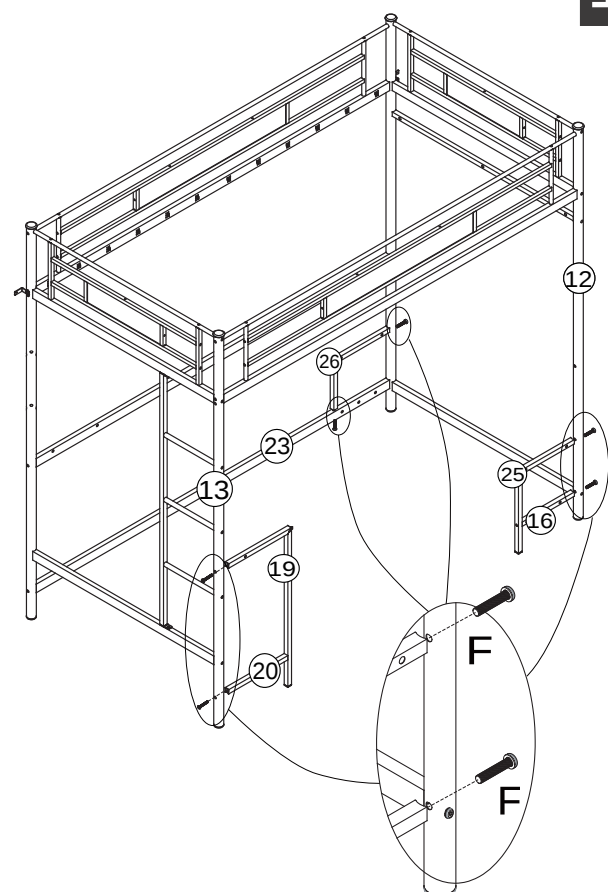

15

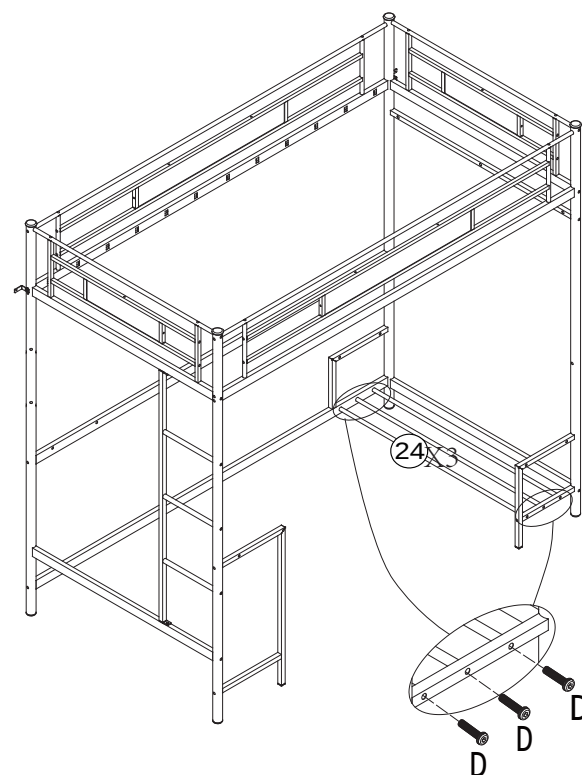


12








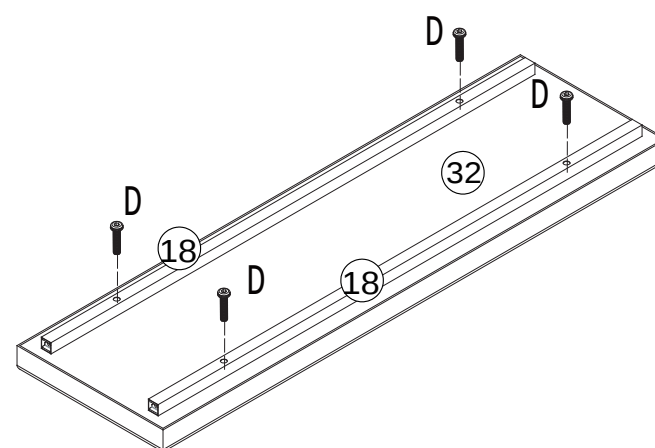


Install screws loosely,
don't fully tighten

13

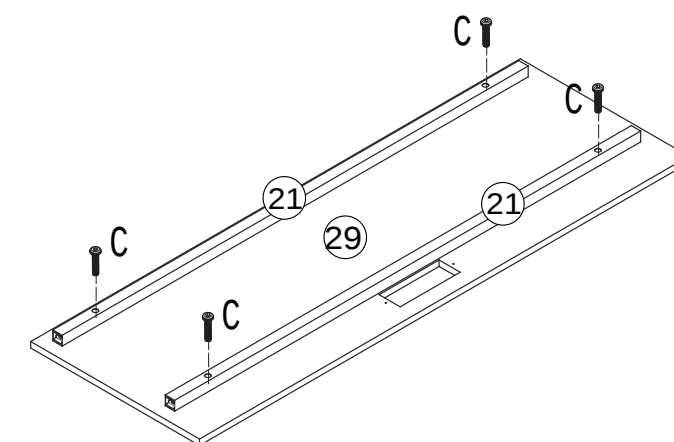

Install screws loosely,
don't fully tighten

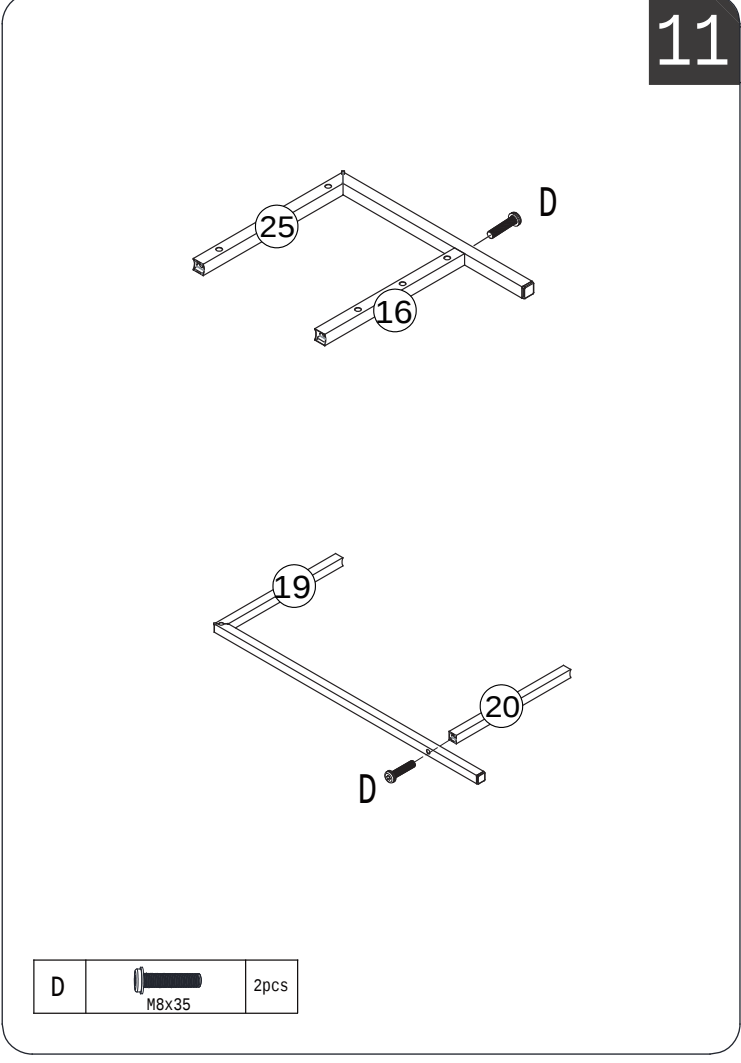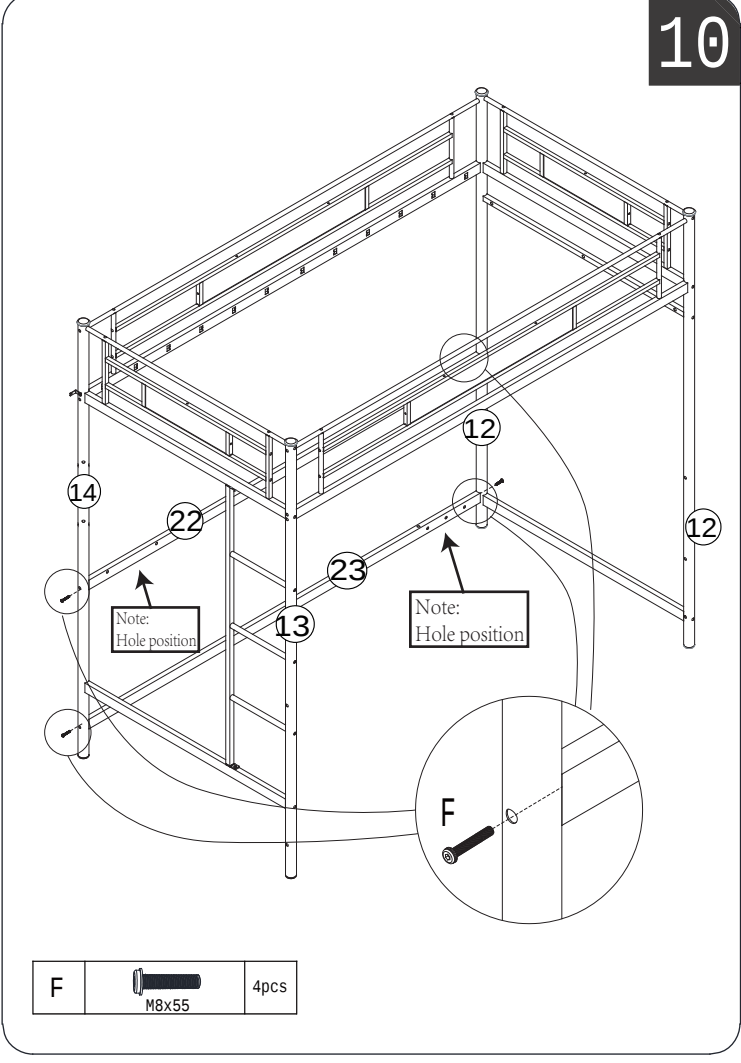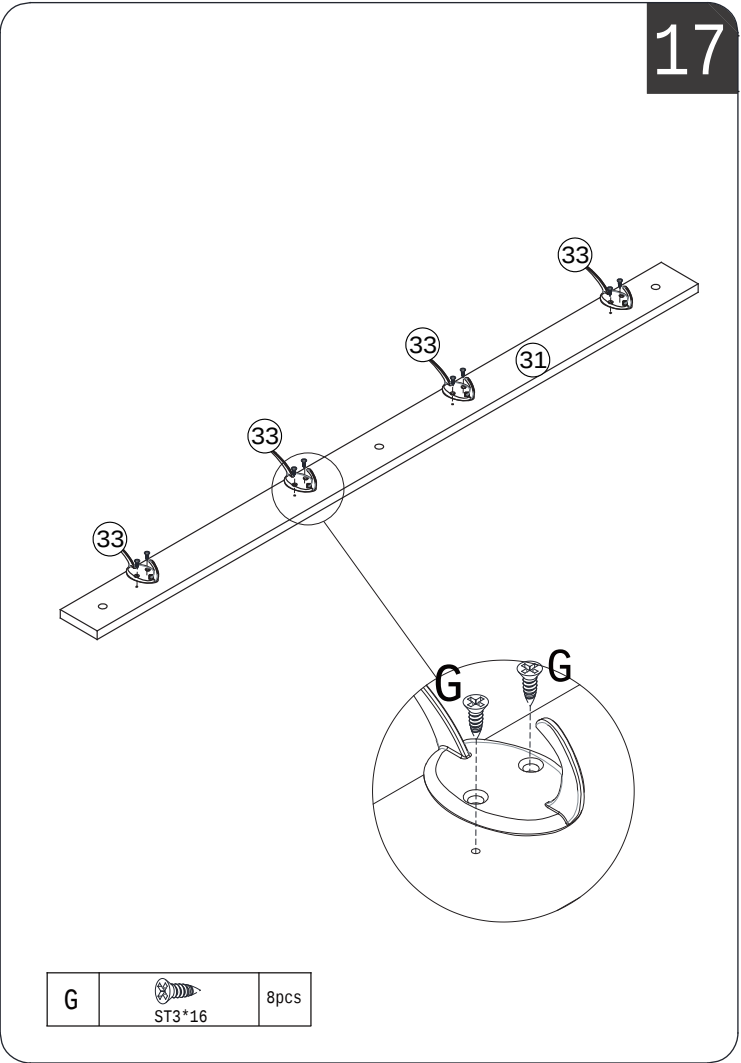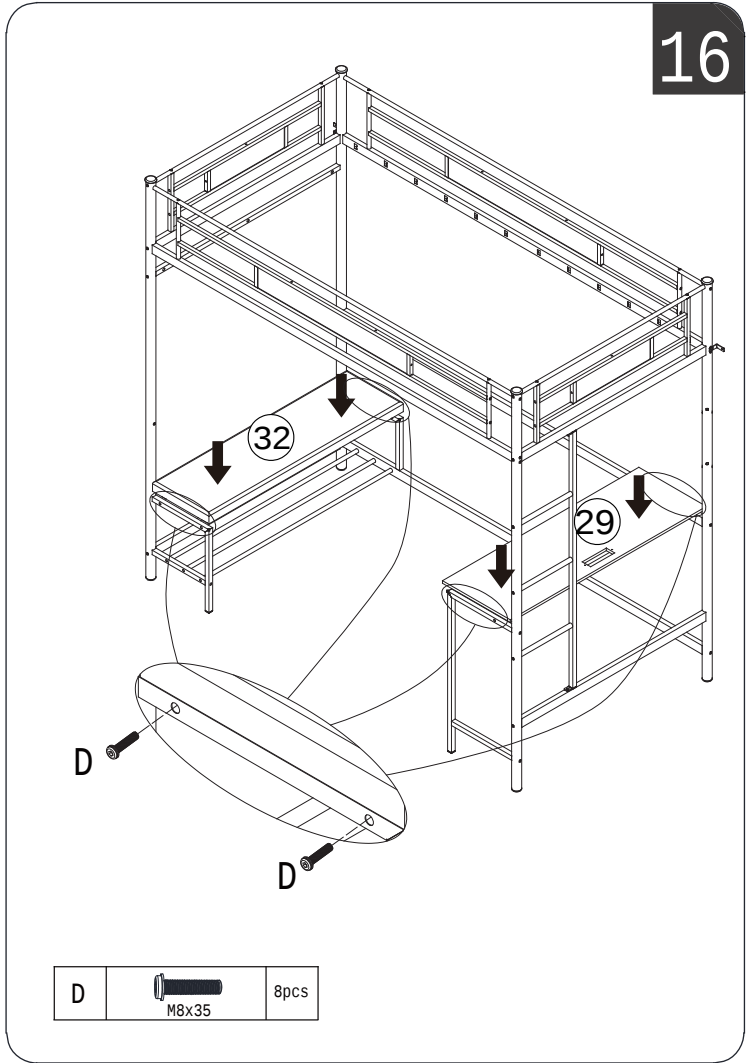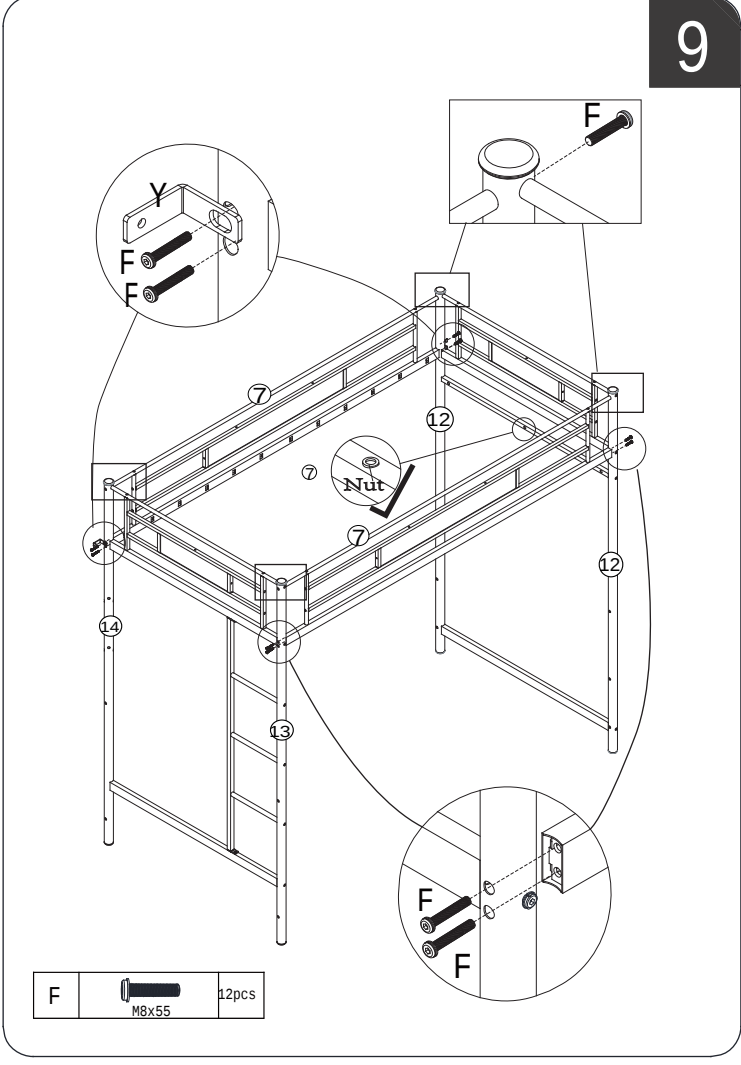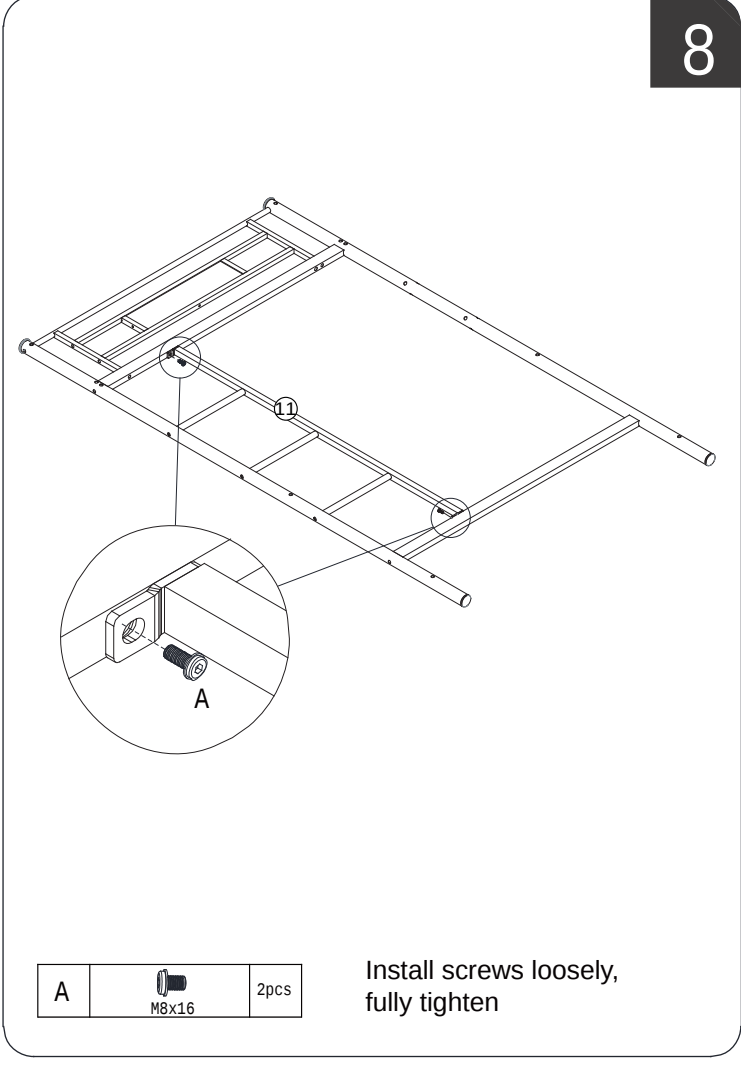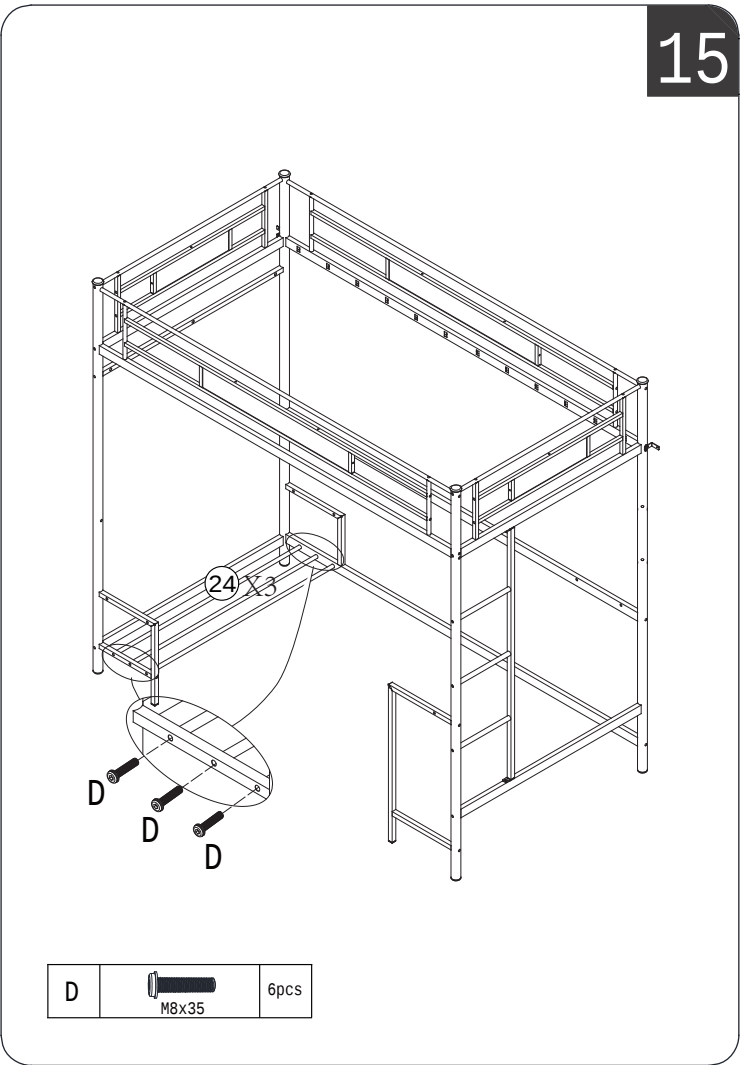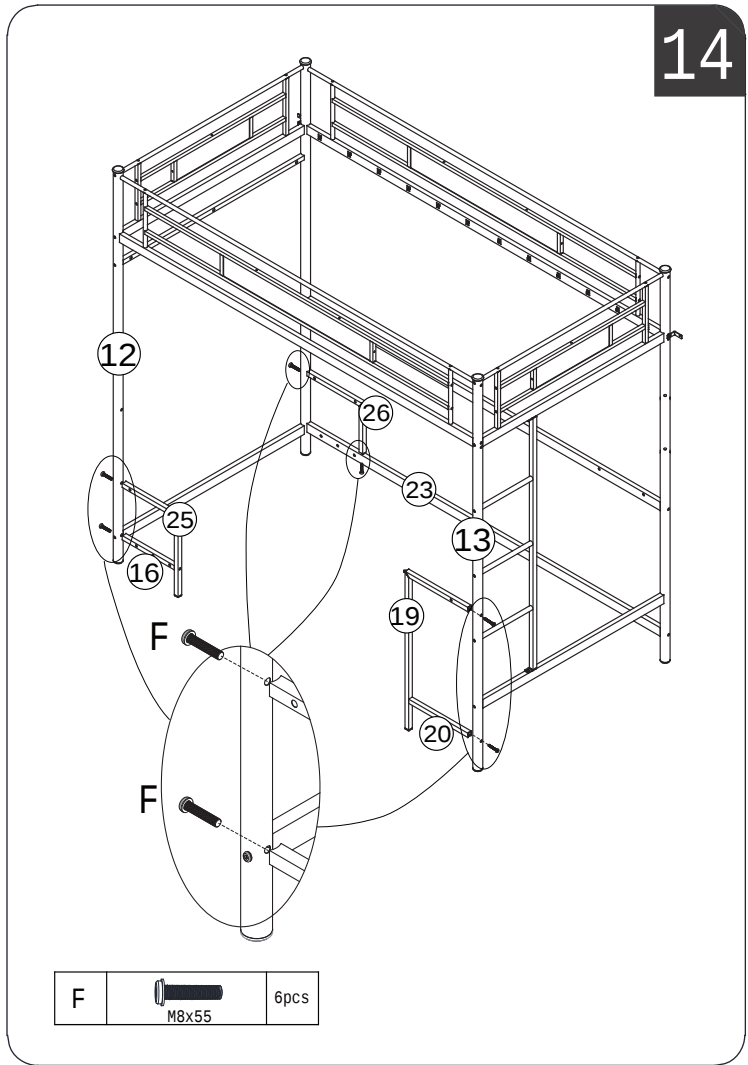

x2

4

B	M8x25	8pcs
---	-------	------

x2

5

B	M8x25	4pcs
F	M8x55	4pcs

18

D	M8x35	3pcs
---	-------	------

x2

19

C	M8x30	4pcs	white zinc
---	-------	------	------------

6

F	M8x55	6pcs
---	-------	------

7

D	M8x35	3pcs
A	M8x16	3pcs

20

E	M8x45	2pcs
---	-------	------

21

H	ST4x14	2pcs
---	--------	------

22

I		24pcs
---	--	-------

23

1: Using a drill bit with a diameter of 6, drill mounting holes where installation is required

2: Place the expansion tube into the hole

3: Screw the screw together with the mounting part into the expansion pipe

Z		2pcs
---	--	------

TYPE 2

x2 1

D		8pcs
---	--	------

24

Finish

Note: Now you can tighten all the bolts.

x2 2

B		4pcs
F		4pcs

3

F		8pcs
---	--	------