


Assembly Instruction


HE1038
HE1128

- 9** Attach back panels (H) to cabinet from last step with screws (X).

You'll notice there's a gap between the two back panels. This is NOT a mistake! This gap provides ventilation. Nobody likes musty laundry.

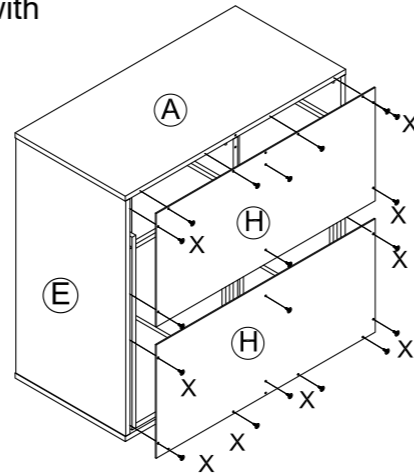


- 10** Now you're ready to place laundry bags (F) into the hamper.

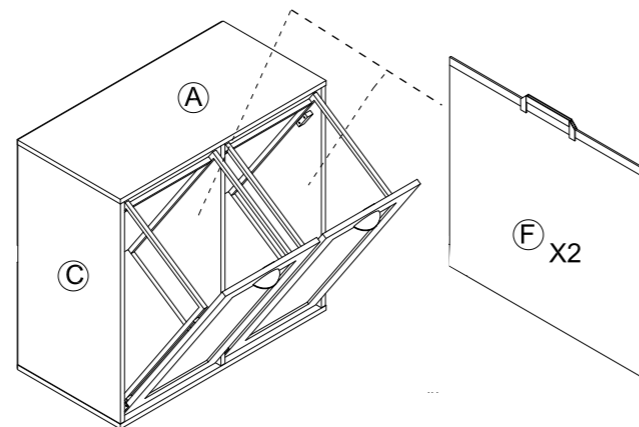


- 11** You're almost done, but there's one more important step.

Fasten the bracket from anti-toppling kit (CC) to the backside of the hamper.

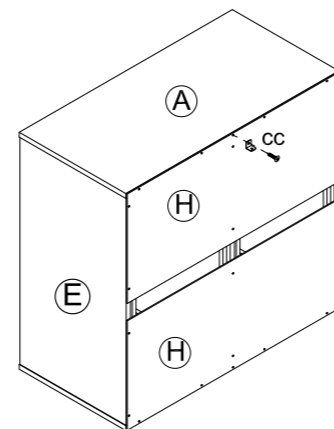


- 12** Fix the dry wall anchor into the wall. Fasten the bracket with screw. Insert the anti-toppling wire through the holes from the other end of the brackets. Tighten it up and you're done.

Congratulations! You're ready to do laundry... what fun.

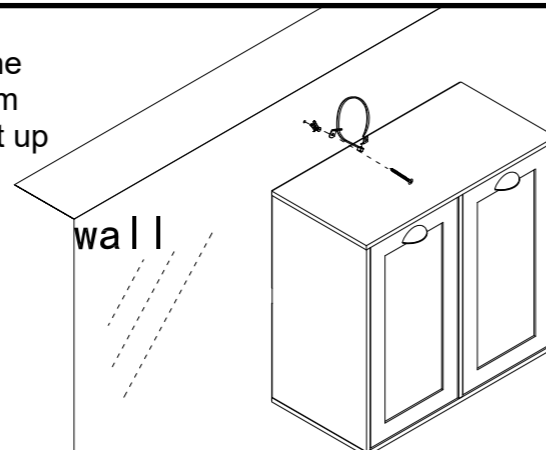

Parts

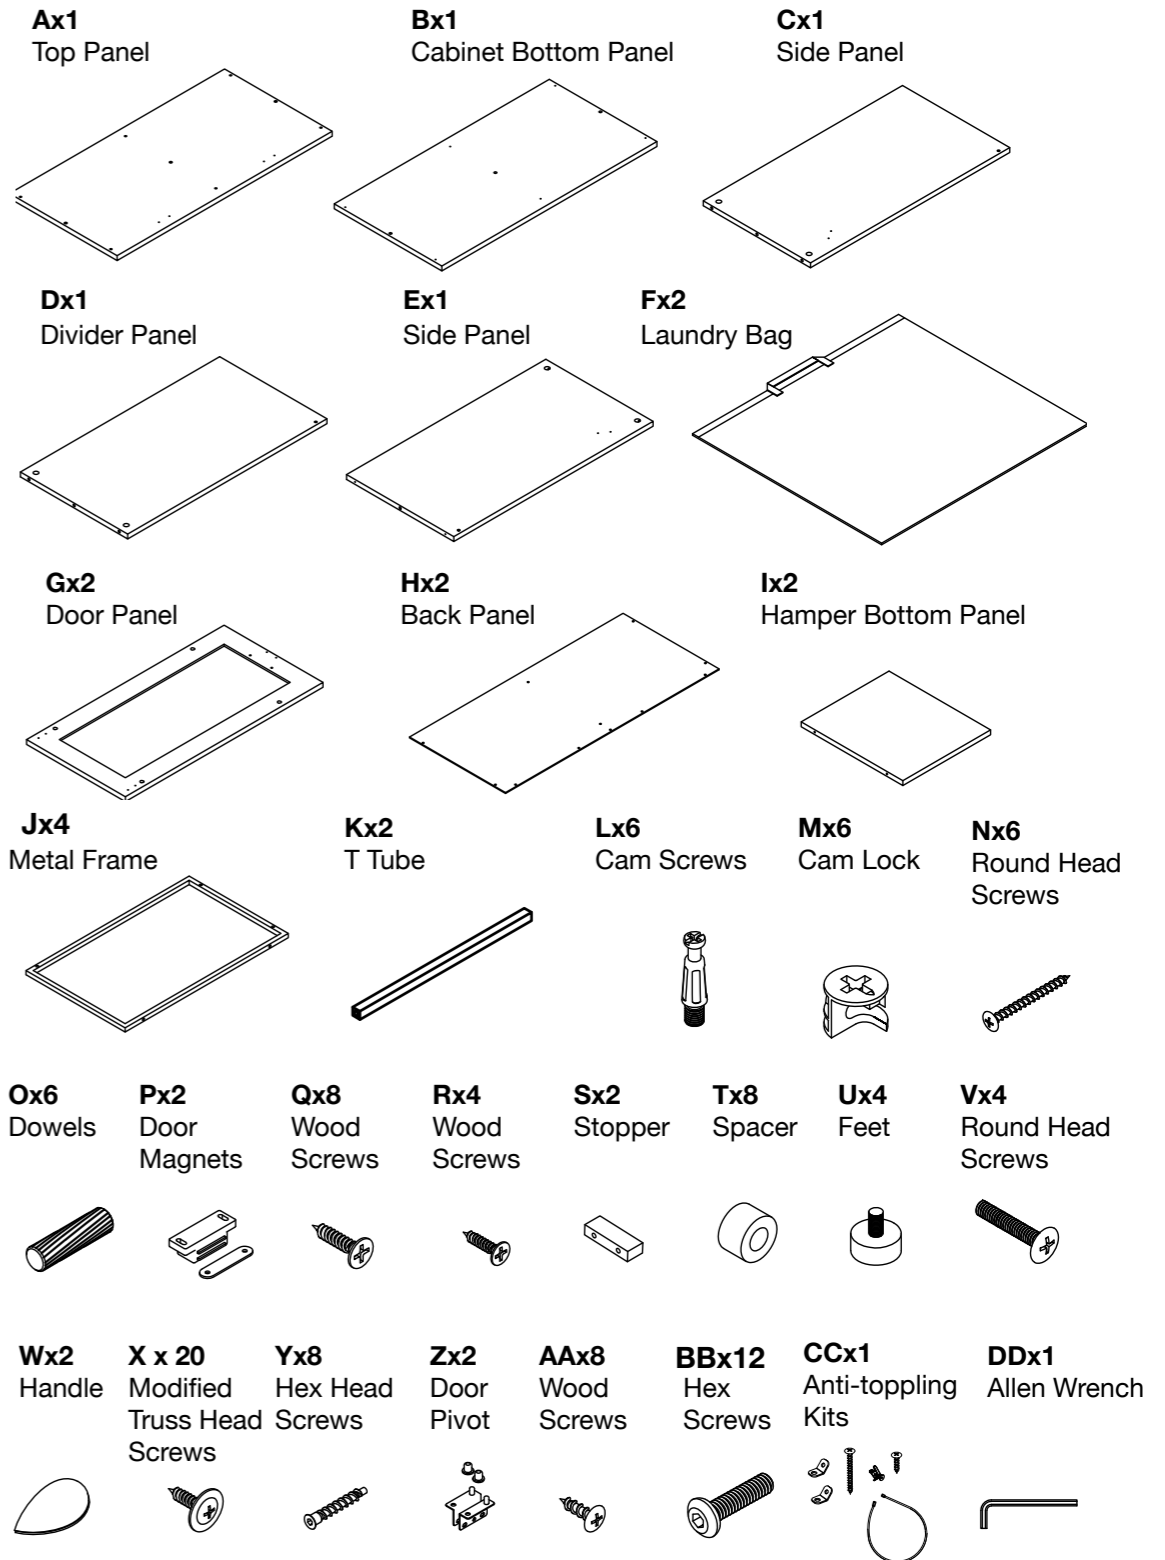


Assembly

1

It takes a few steps to assemble this unit, but if you follow these instructions and look at each diagram carefully you'll be done in no time!

First you'll work on the body of the cabinet.


Insert cam screws (L) into top panel (A). Then, attach Door Magnets (P) with screws (Q).

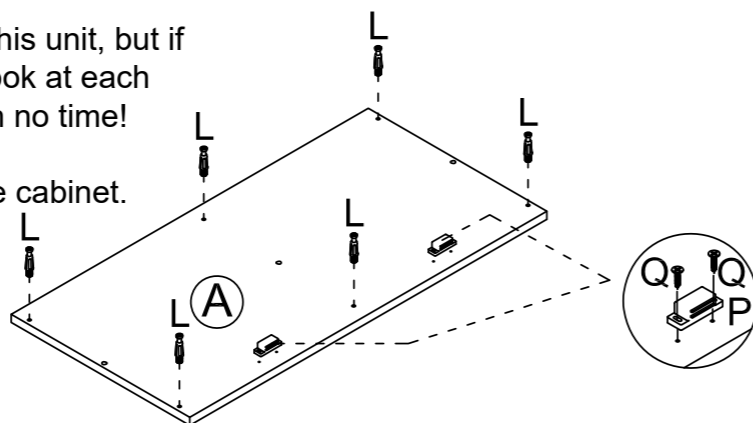

2

Insert dowels (O) into side panels (C and E) and divider panel (D).


Attach stopper (S) with screws (Q).

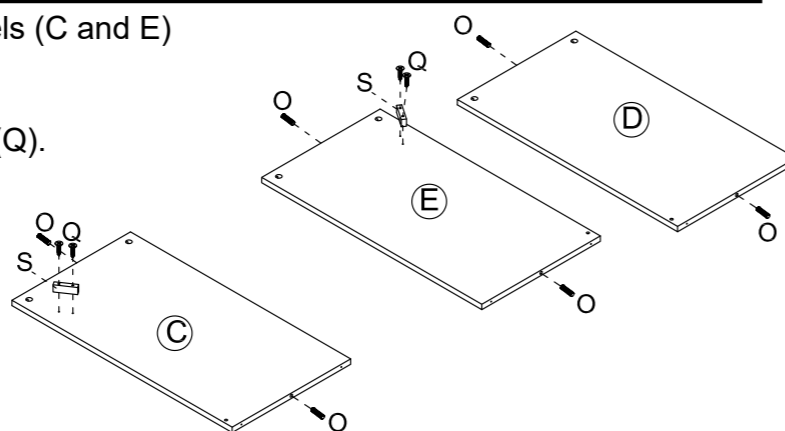

3

Assemble top panel (A) to side panels (C and E) and divider panel (D). Then turn the cam locks to secure them in place.

Insert the plastic caps for door pivot (Z) into side panels (C and E) and divider panel (D).

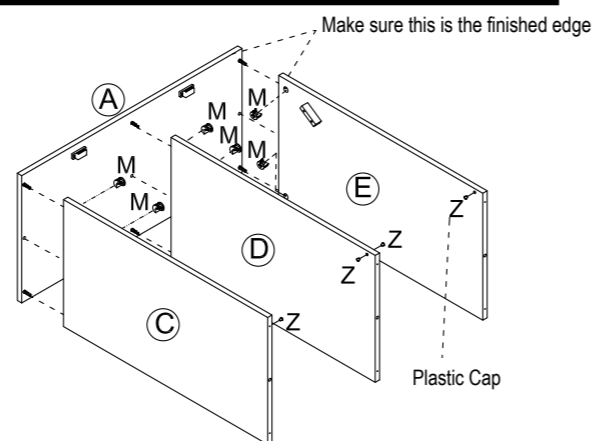


4

Now it's time to assemble the metal frame hampers.

Attach hamper bottom panel (I) to metal frames (J) with screws (Y). Align holes before assembly.

Attach tube (K) to metal frames (J) with screws (BB).

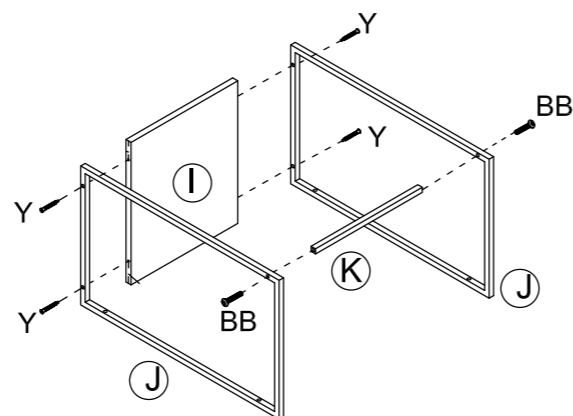


5

Attach door pivot (Z) to door panels (G) with screws (AA).

Attach metal plate from door Magnets (P) to door panels (G) with screws (R).


Attach handles (W) to door panels (G) with screws (V).

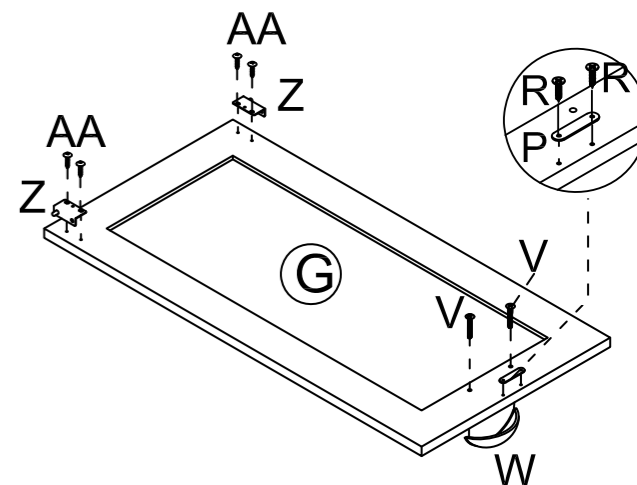

6

Assemble metal frames from Step-4 to door panels (G) with screws (BB). Make sure to place the spacers (T) in between before assembly.


Then repeat steps 4-6 to assemble the other hamper.

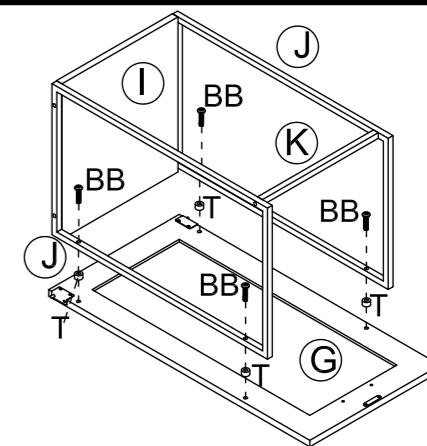

7

This is where it all starts to come together.

Slide the hampers from Step-6 into the cabinet from Step-3. Make sure the pin of door pivots nest inside the plastic caps.

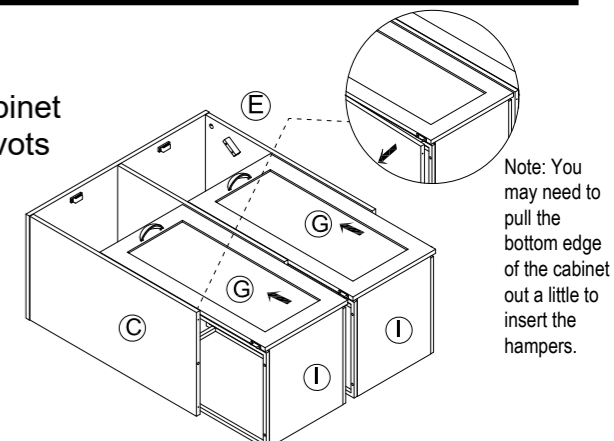

Note: You may need to pull the bottom edge of the cabinet out a little to insert the hampers.

8

Now attach the bottom panel (B) to the cabinet from Step-7 with screws (N).

Attach feet (U) to bottom panel (B). You can adjust feet to level.

