



# ASSEMBLY INSTRUCTION

SKU:WF316449











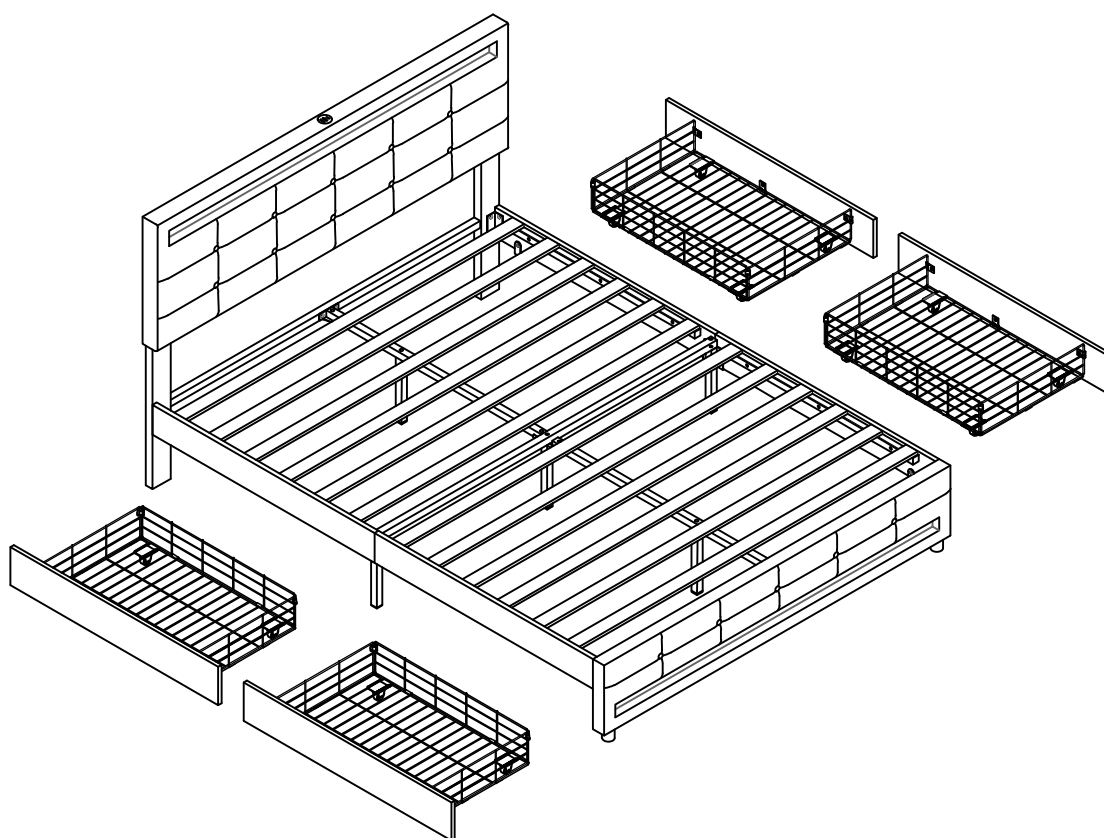


## Detail View

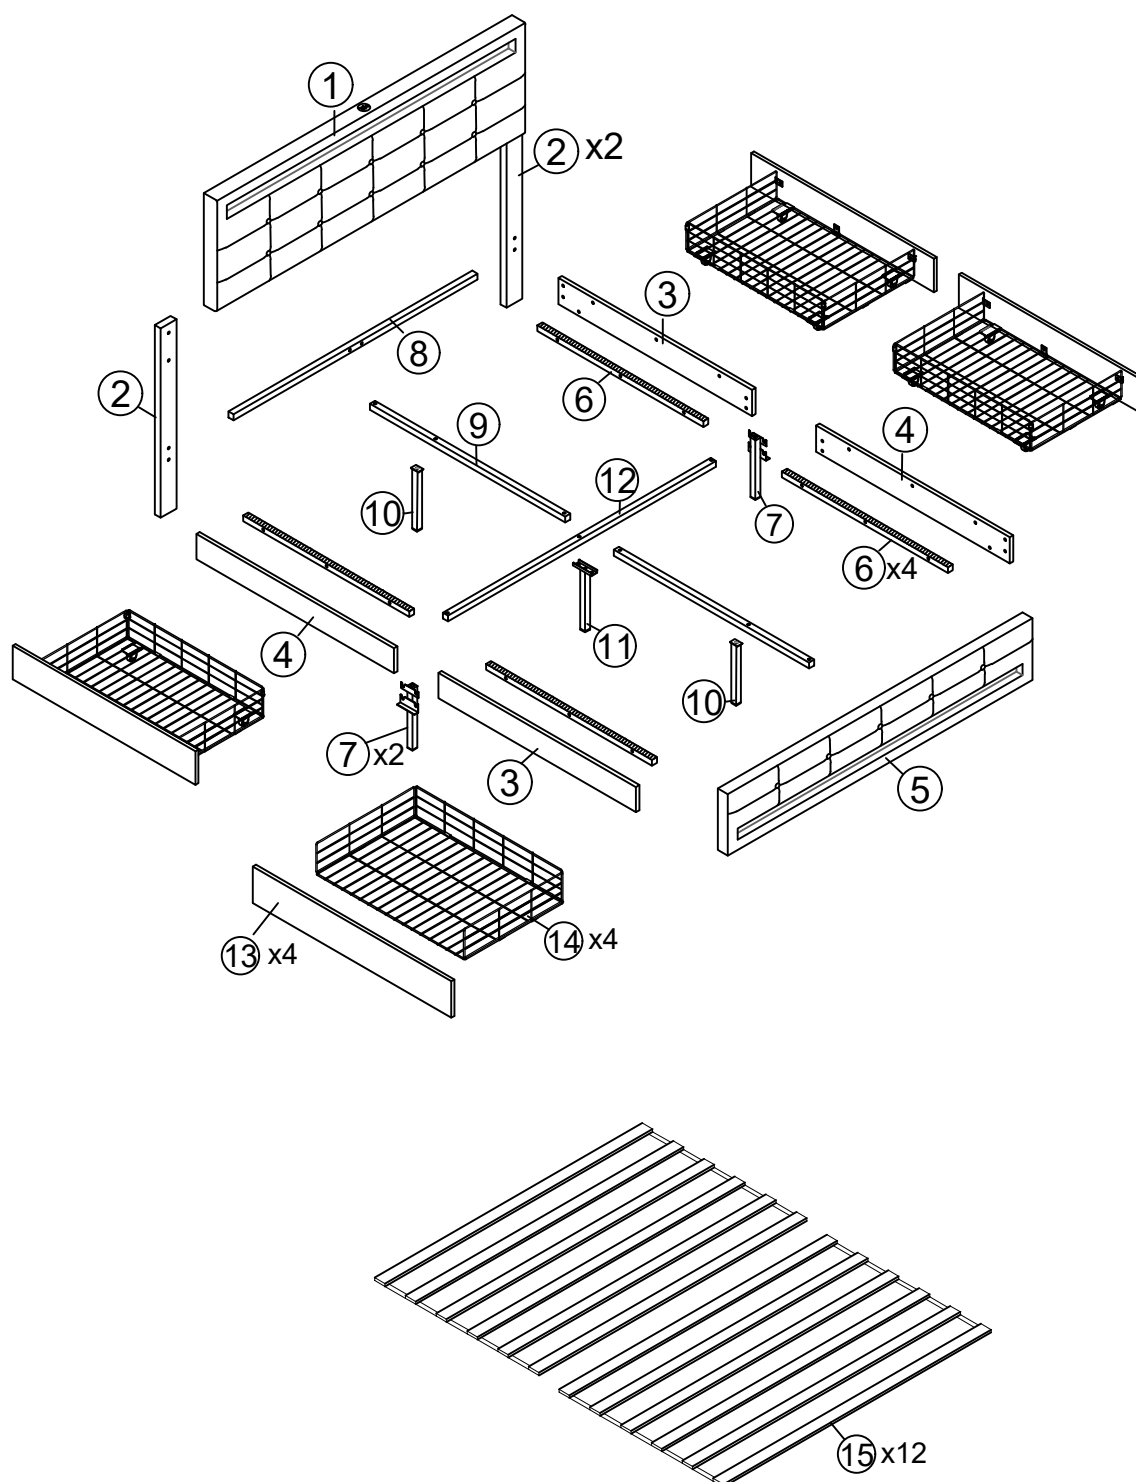

# Part List

WF316449
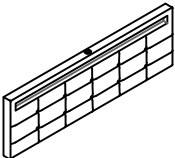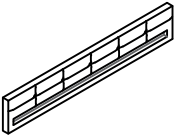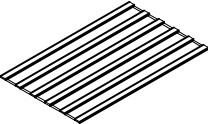
|                                                                                                                               |                                                                                                                               |                                                                                                                                |
|-------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------|
| <b>1</b><br><br>Head board-1pc               | <b>2</b><br><br>Head board legs-2pcs         | <b>3</b><br><br>Siderails-2pcs              |
| <b>4</b><br><br>Siderails-2pcs               | <b>5</b><br><br>Foot board-1pc               | <b>6</b><br><br>Side rails support bar-4pcs |
| <b>7</b><br><br>Side rails support legs-2pcs | <b>8</b><br><br>Head board cross bar-1pc     | <b>9</b><br><br>Center support bar-2pcs     |
| <b>10</b><br><br>Middle support leg-2pcs   | <b>11</b><br><br>Connected support leg-1pc | <b>12</b><br><br>Cross bar-1pc            |
| <b>13</b><br><br>Drawer outer board-4pcs   | <b>14</b><br><br>Drawer -4pcs              | <b>15</b><br><br>Slats-12pcs              |


# Hardware List

|                                                                                                                                                                                          |                                                                                                                                                                 |                                                                                                                                                                               |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <div>A</div> <div></div> <div>Allen Key(1pc)</div>                                                      | <div>B</div> <div><div></div><div>Ø8*50mm</div></div> <div>Bolts(4pcs)</div>   | <div>C</div> <div></div> <div>Two hole iron(2pcs)</div>                                    |
| <div>D</div> <div><div></div><div>Ø8*16mm</div></div> <div>Bolts(48pcs)</div>                           | <div>E</div> <div><div></div><div>Ø8*40mm</div></div> <div>Bolts(21pcs)</div>  | <div>F</div> <div><div></div><div>77*33**33*3mm</div></div> <div>"7" Connector(4pcs)</div> |
| <div>G</div> <div><div></div><div>86*32*28*2mm</div></div> <div>Center support bar fittings(2pcs)</div> | <div>H</div> <div><div></div><div>H:40mm</div></div> <div>Bed Legs(2pcs)</div> | <div>I</div> <div></div> <div>Stopper(4pcs)</div>                                          |
| <div>J</div> <div></div> <div>Drawer fittings(12pcs)</div>                                              | <div>K</div> <div></div> <div>Drawer fittings(8pcs)</div>                      | <div>L</div> <div></div> <div>Drawer wheel(16pcs)</div>                                    |
| <div>M</div> <div></div> <div>LED(2pcs)</div>                                                         | <div>N</div> <div></div> <div>LED Connecting line(1pc)</div>                 | <div>O</div> <div><div></div><div>Ø3*16mm</div></div> <div>Nails(10pcs)</div>            |
| <div>P</div> <div><div></div><div>20*6mm</div></div> <div>Buckle(5pcs)</div>                          | <div>Q</div> <div></div> <div>Power adapter (1pc)</div>                      | <div>R</div> <div></div> <div>Color controller(1pc)</div>                                |
| <div>S</div> <div></div> <div>Connecting line(1pc)</div>                                              |                                                                                                                                                                 |                                                                                                                                                                               |

Attention: Do not tighten the screws before completing the entire installation. If you have any difficulty with the installation process, please feel free to contact us.

### Step 1


Fix the head board legs② to the headboard① with Bolts B by using Allen key A.You can chose the hole a and c ,or b and d.

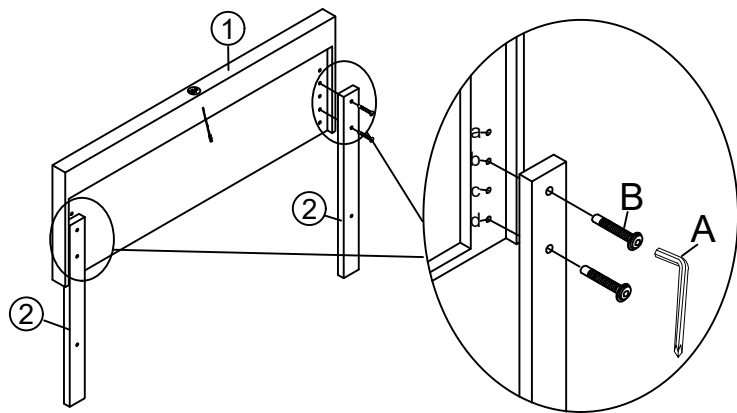

|                                                                                     |                                                                                                |
|-------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------|
| A Allen Key                                                                         | B Bolts x 4                                                                                    |
|  | <br>M8X50mm |

### Step 2


Fix the Headboard cross bar ⑧ to the Headboard legs ② with Bolt D and Two hole iron C by using Allen key A.

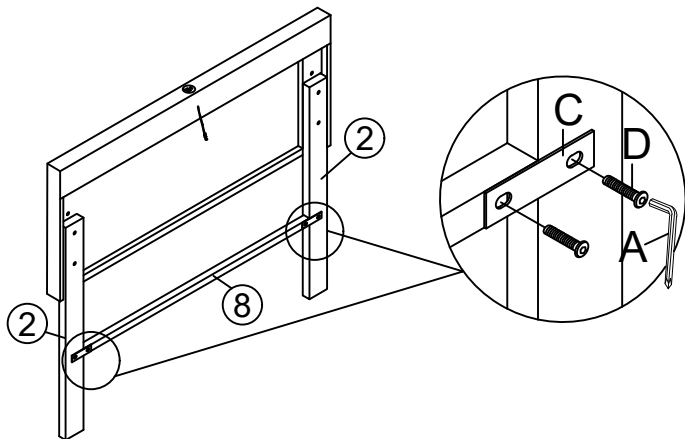

|                                                                                       |                                                                                       |                                                                                                  |
|---------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------|
| Allen Key                                                                             | C Two hole iron x 2                                                                   | D Bolts x 4                                                                                      |
|  |  | <br>M8X16mm |

### Step 3 x2


Connect Siderail support bar ⑥ to Siderails ③ and ④ with Bolts E by using Allen key A.

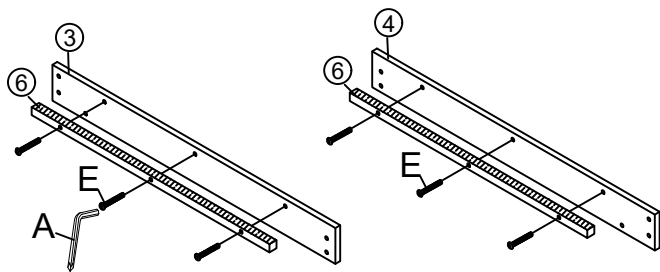

|                                                                                       |                                                                                                  |
|---------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------|
| Allen Key                                                                             | E Bolts x 12                                                                                     |
|  | <br>M8X40mm |

Step 4 x2


Fix the side rails support leg ⑦ to the assembled side rail with Bolts D by using Allen key A.

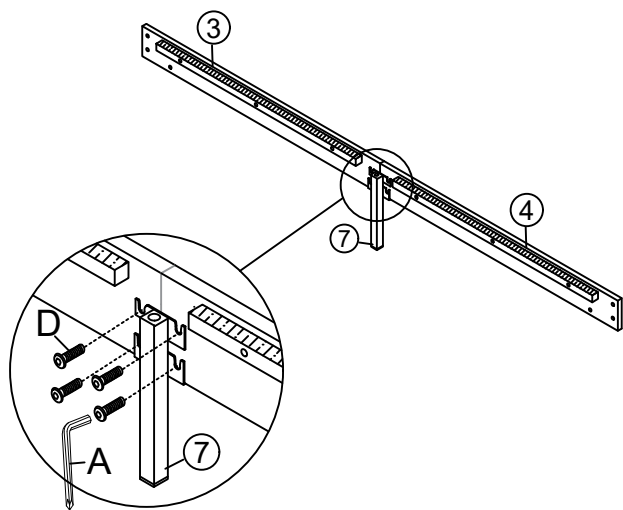

|                                                                                     |                                                                                                |
|-------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------|
| Allen Key                                                                           | D Bolts x 8                                                                                    |
|  | <br>M8X16mm |

Step 5


Fix the Bed legs H to the foot board ⑤.

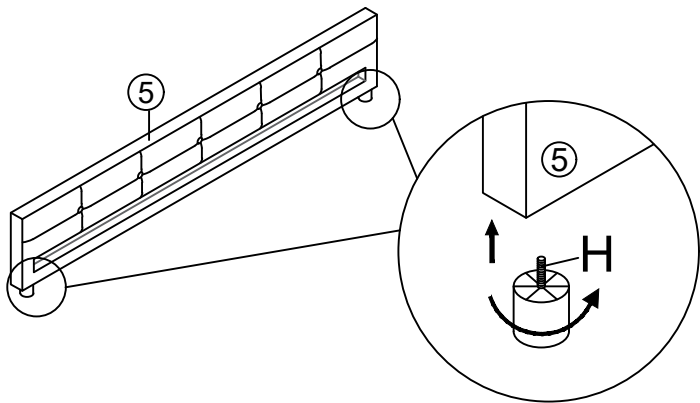

|                                                                                       |
|---------------------------------------------------------------------------------------|
| H Bed legs x2                                                                         |
|  |

Step 6


Fix the assembled side rail to the Headboard legs ② and foot board ⑤ With Bolts D and "7" Connector F by using Allen key A.

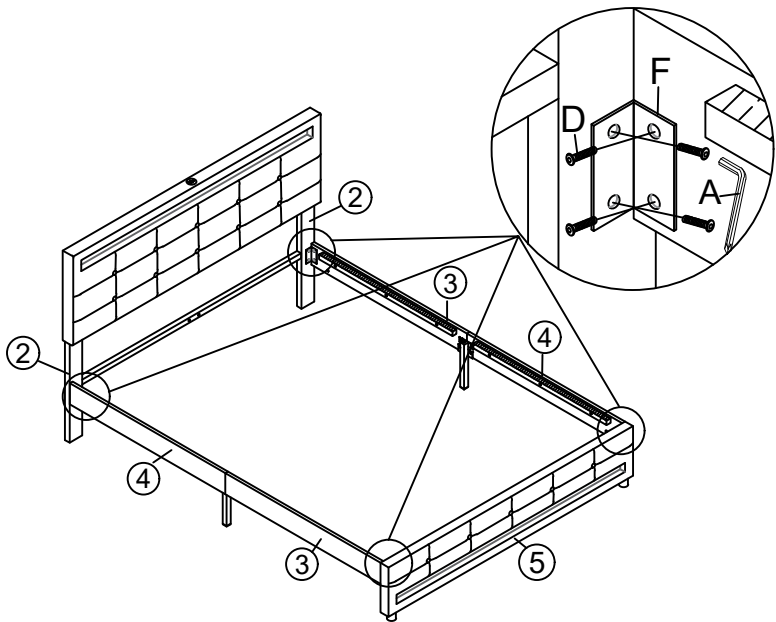

|                                                                                       |                                                                                                  |                                                                                       |
|---------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|
| Allen Key                                                                             | D Bolts x 16                                                                                     | F "7" Connectorx 4                                                                    |
|  | <br>M8X16mm |  |

# Step 7


Fix the Center support bar fittings G to the Headboard cross bar ⑧ and foot board ⑤ with Bolts D by using Allen key A.

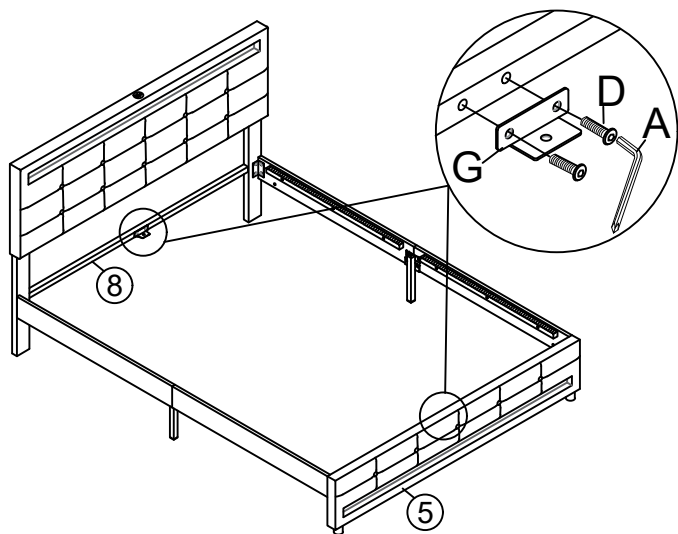

|           |                                                                                                               |                                                                                                                         |
|-----------|---------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------|
| Allen Key | D Bolts x 4<br><br>M8X16mm | G Center support bar fittings x2<br> |
|-----------|---------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------|

# Step 8


Fix the middle support leg ⑩ to the center support bar ⑨ with Bolts E by using Allen key A.  
Fix the connected support leg ⑪ to the center support bar ⑨ with Bolts E by using Allen key A.

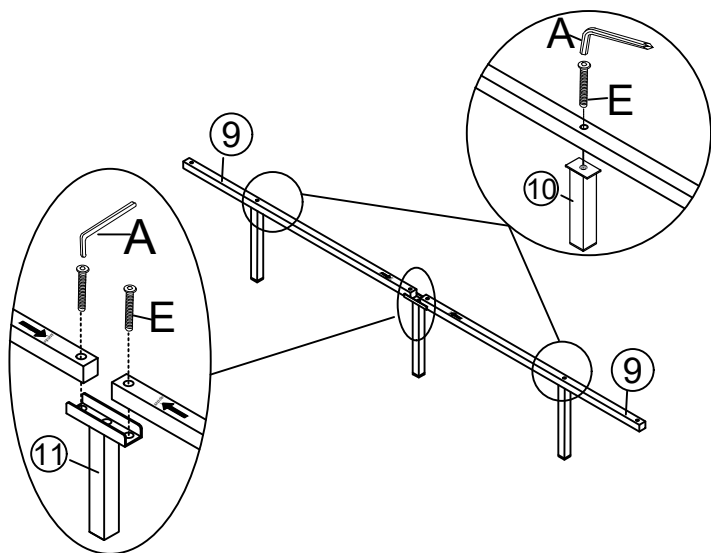

|           |                                                                                                                 |
|-----------|-----------------------------------------------------------------------------------------------------------------|
| Allen Key | E Bolts x 4<br><br>M8X40mm |
|-----------|-----------------------------------------------------------------------------------------------------------------|

# Step 9


Fix the Center support bar ⑨ to the headboard cross bar ⑧ and foot board ⑤ with Bolts E by using Allen key A.

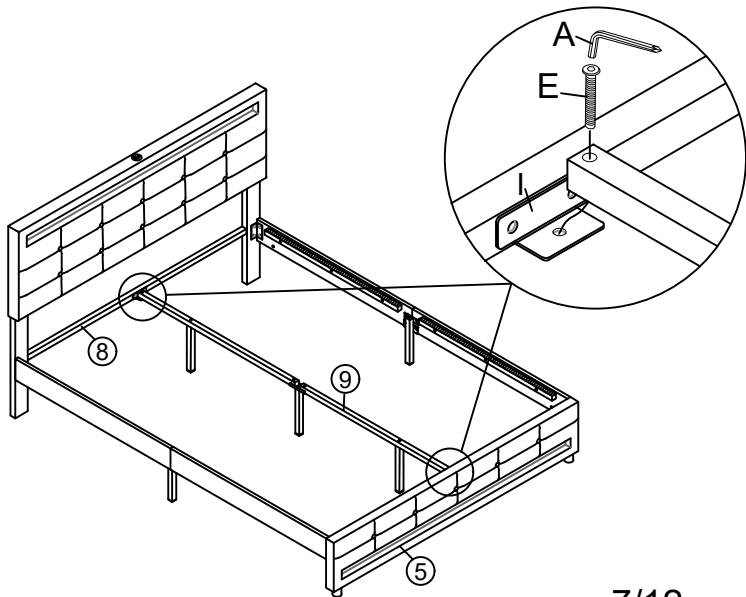

|           |                                                                                                                 |
|-----------|-----------------------------------------------------------------------------------------------------------------|
| Allen Key | E Bolts x 2<br><br>M8X40mm |
|-----------|-----------------------------------------------------------------------------------------------------------------|

Step 10


Fix the cross bar⑫to the side rails support legs⑦ and Connected support legs⑪ with Bolts E by using Allen key A.

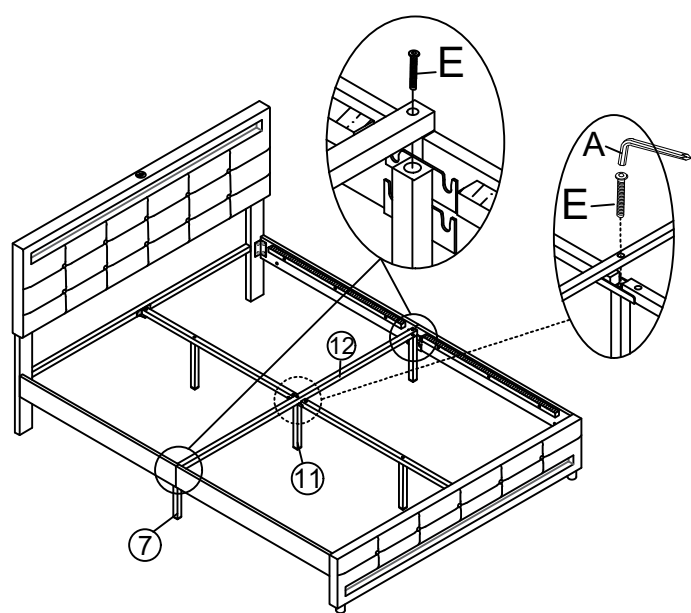

|                                                                                     |                                                                                                |
|-------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------|
| Allen Key                                                                           | E Bolts x 3                                                                                    |
|  | <br>M8X40mm |

Step 11


Fix the stopper I to the Siderails with Bolts D by using Allen key A.

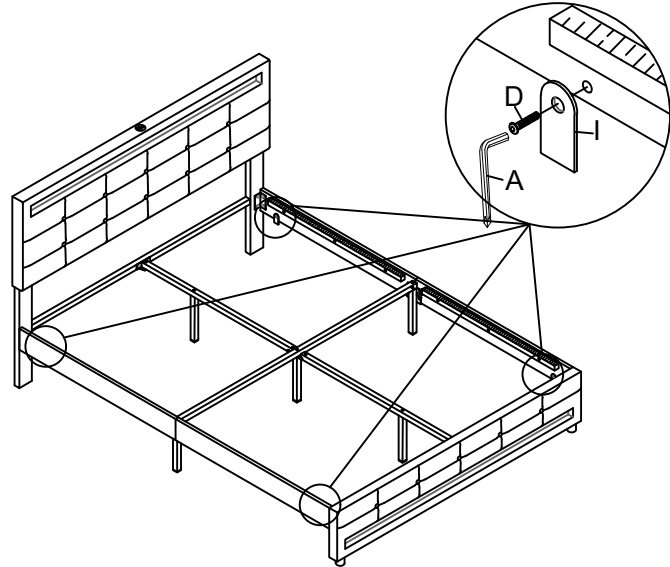

|                                                                                       |                                                                                                  |                                                                                       |
|---------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|
| Allen Key                                                                             | D Bolts x 4                                                                                      | I Stopper x4                                                                          |
|  | <br>M8X16mm |  |

Step 12

stick the LED to the headboard ① and footboard ⑤ .

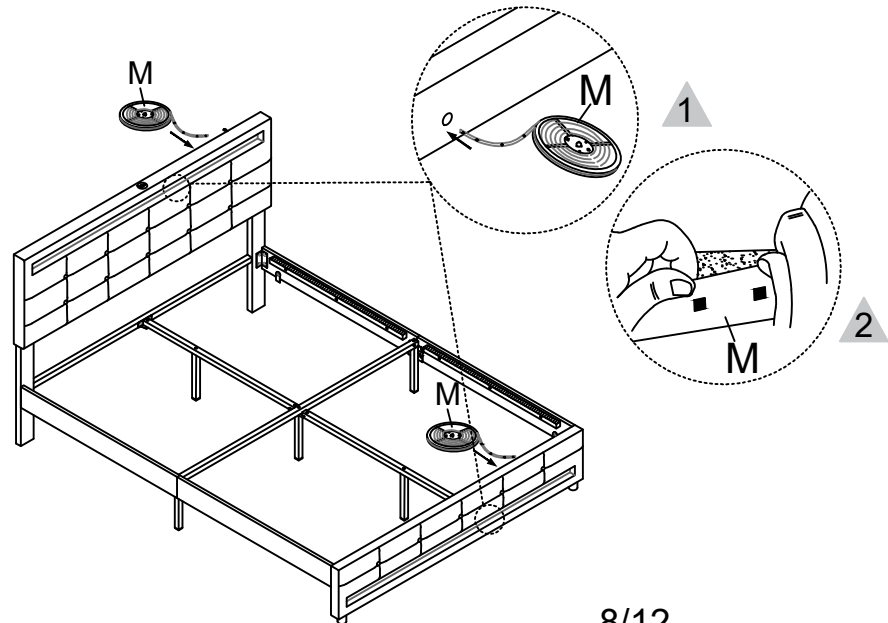


|                                                                                       |
|---------------------------------------------------------------------------------------|
| M LED x 2                                                                             |
|  |

## Step 13

Fix the LED line in the footboard to the Led connecting line N, please notice that → ← .

Fix the LED Connecting line N to the sideboard with Buckle P and Nails O by using Allen key A or electric drill.

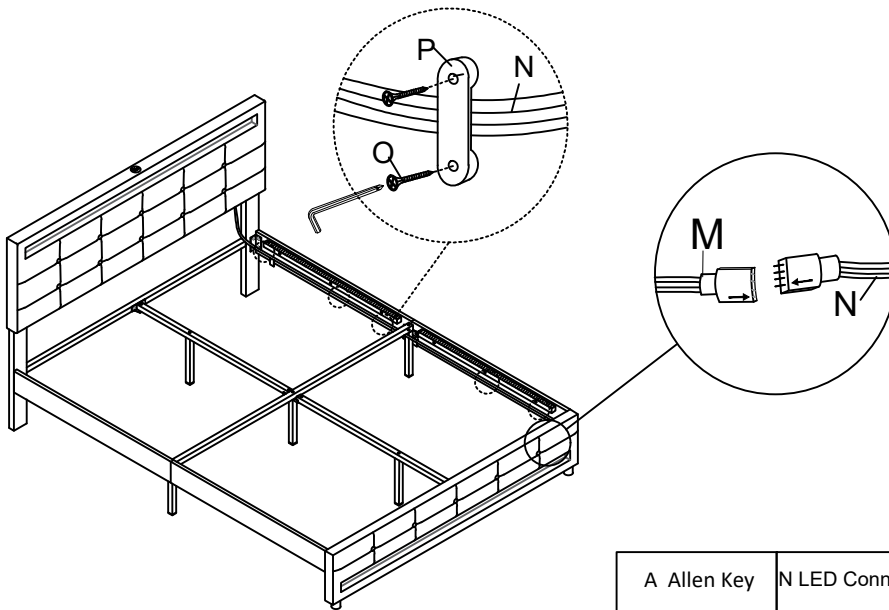



|             |                          |                         |              |
|-------------|--------------------------|-------------------------|--------------|
| A Allen Key | N LED Connecting line x1 | O Nails x 10<br>M3X16mm | P Buckle x 5 |
|             |                          |                         |              |

## Step 14

Assemble the Drawer ⑭ with Drawer fittings K(Please separate K1 and K2 first).

Fix the Drawer out board ⑬ to the Drawer ⑭ with Drawer fittings J and Bolts D by using Allen key A.


Attention:

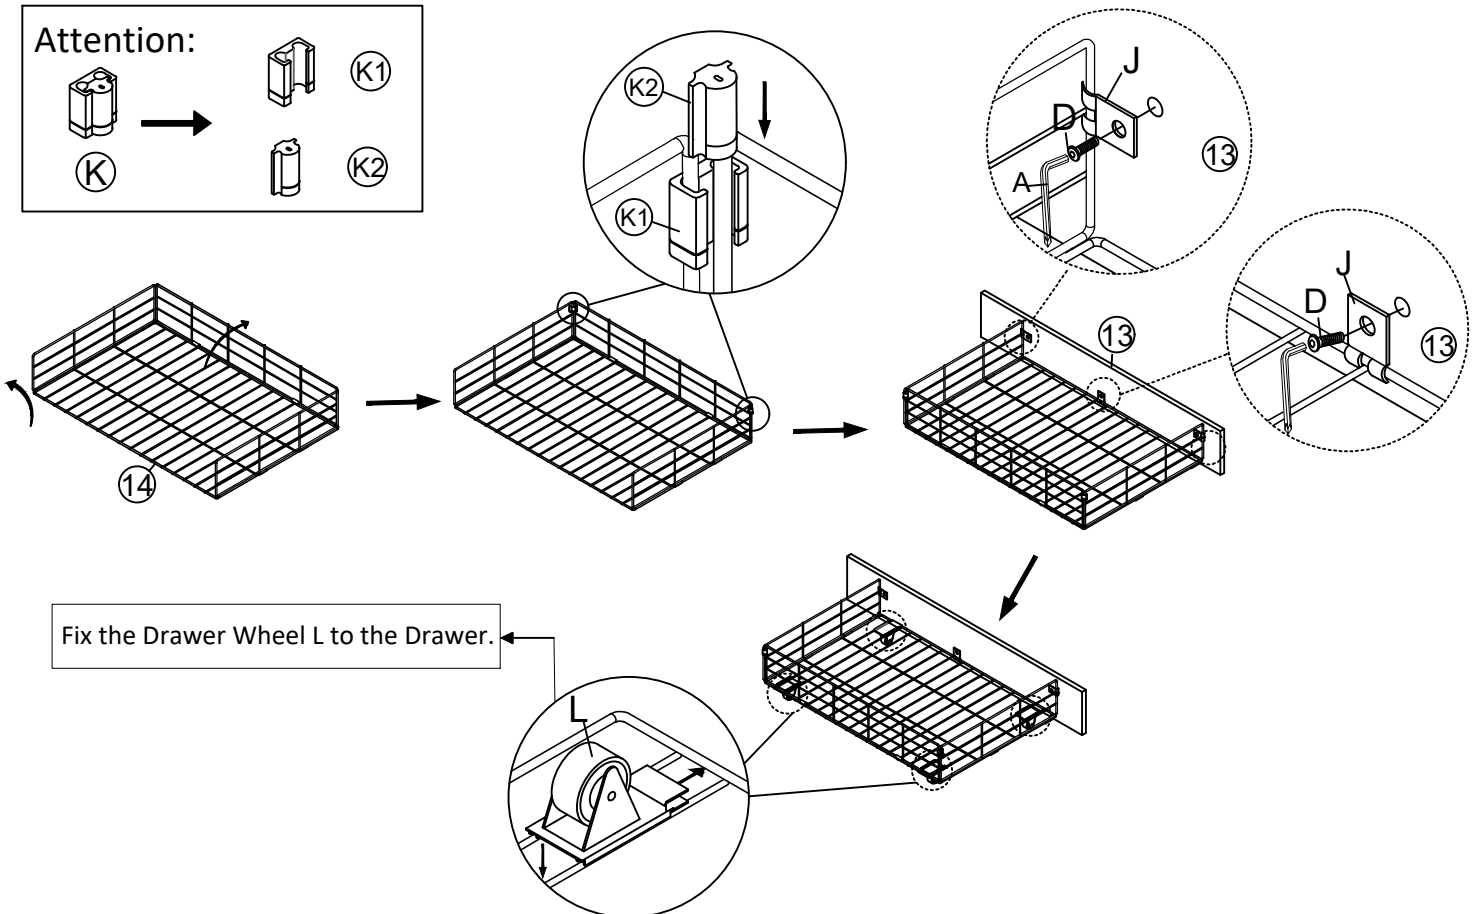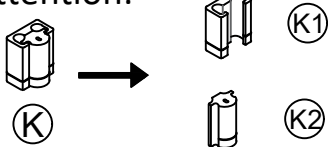

|           |                         |                       |                       |                     |
|-----------|-------------------------|-----------------------|-----------------------|---------------------|
| Allen Key | D Bolts x 12<br>M8X16mm | J Drawer fittings x12 | K Drawer fittings x 8 | L Drawer wheel x 16 |
|           |                         |                       |                       |                     |

## Step 15

Fix the slats ⑮ to the side support bar ⑥ .

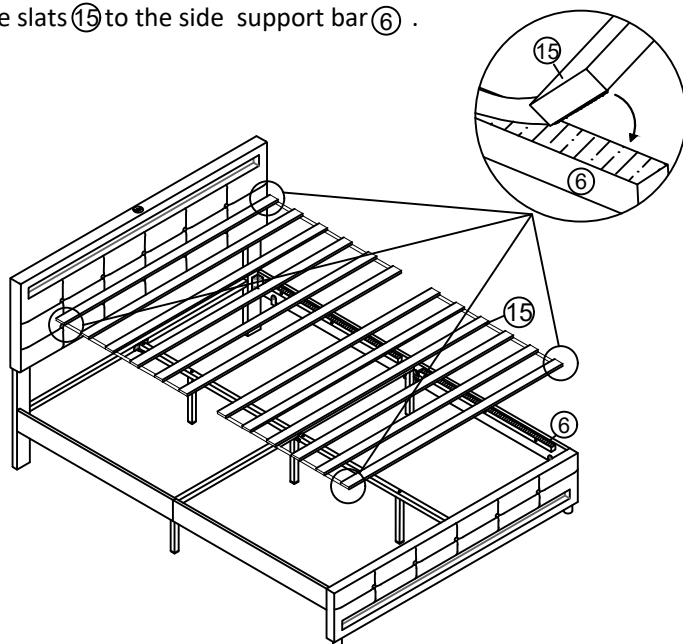


## Step 16

Fix the Power adapter Q to the Connecting Line S.


Fix one of the joint of Connecting Line S to the joint of the USB.


Fix one joint of the Color Controller R to the LED line of the headboard. Fix the other joint of the Color Controller R to the LED Line of the LED Connecting line N. Please notice that → ← .

Push the Drawer into the bed, then assembled is finished. Please tighten all of the hardwares and enjoy the bed.

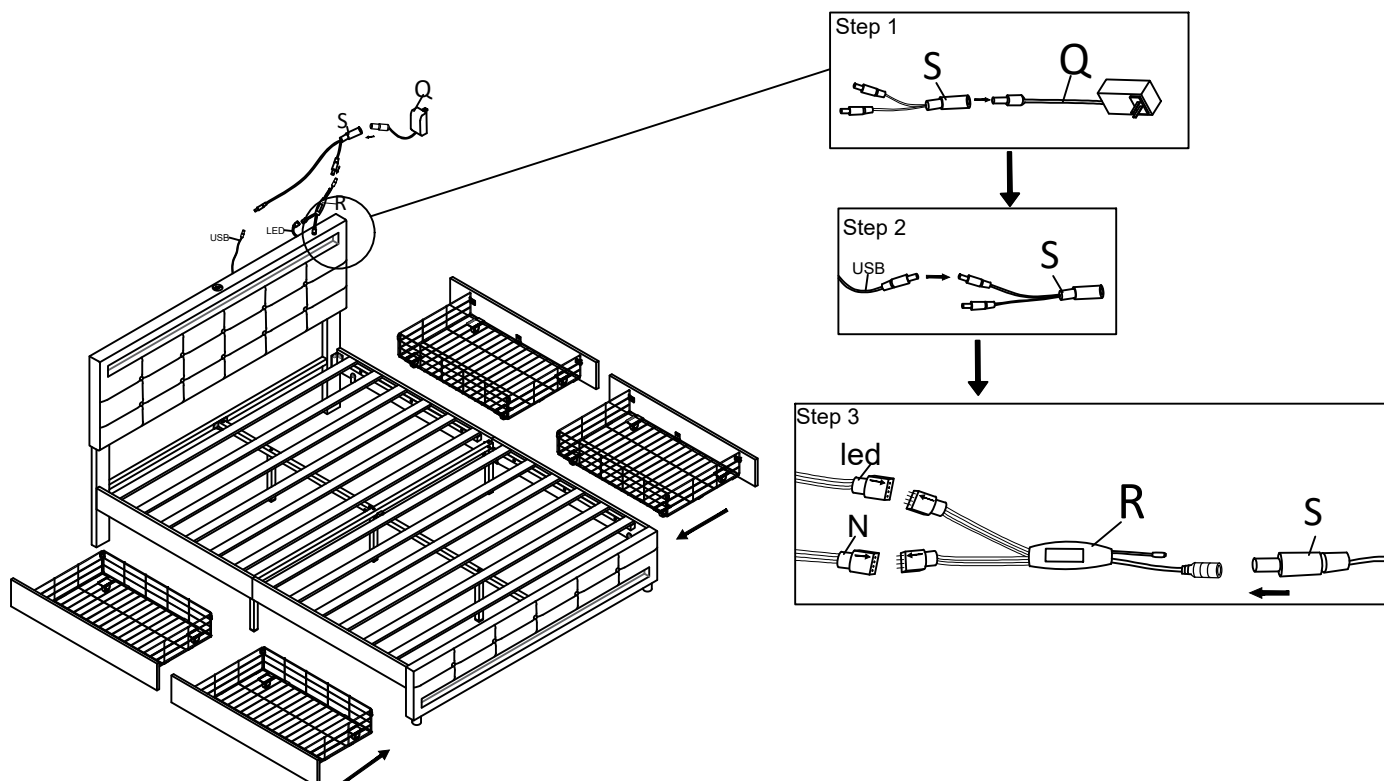


|                    |                        |                       |
|--------------------|------------------------|-----------------------|
| Q Power adapter x1 | R Color controller x 1 | S Connecting line x 1 |
|                    |                        |                       |

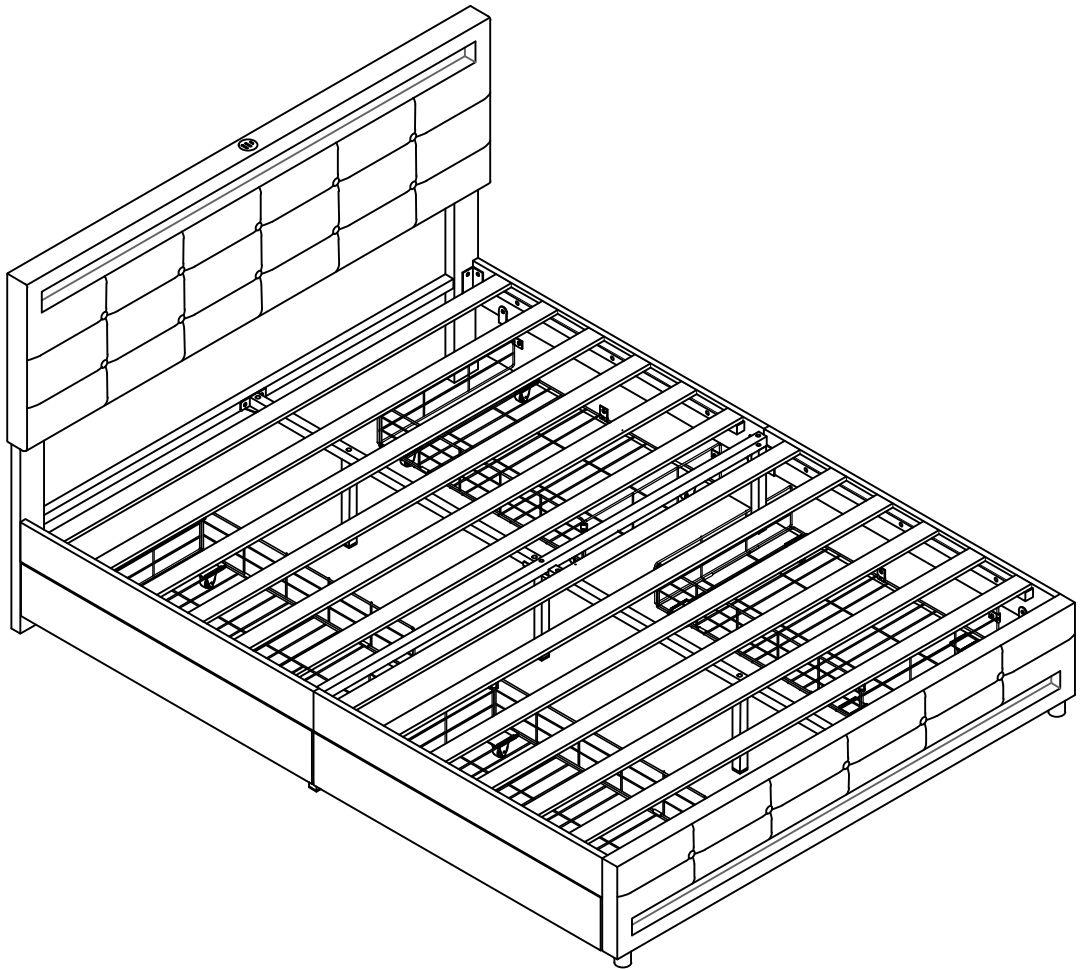

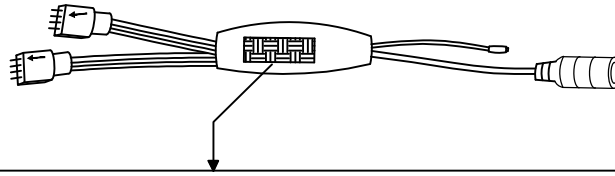

**NOTICE:**

You can scan the QR code here and download an app that can control the color of the light strip like a remote control. When your phone plays music through the app, the color of the light strip will also change according to the strength of the music

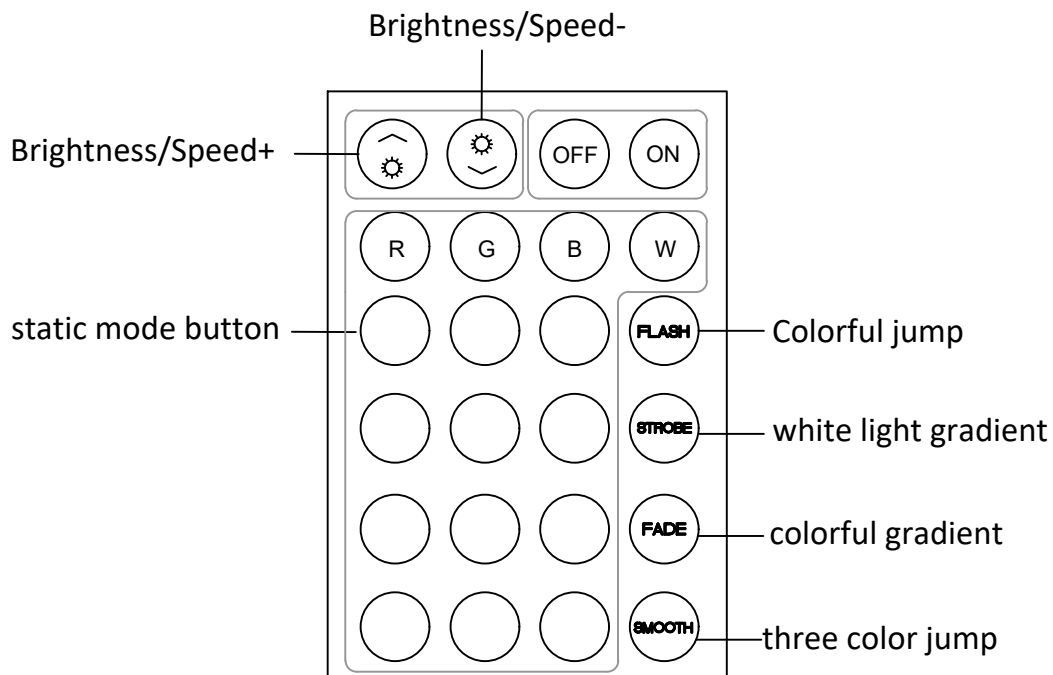

**NOTICE:**

When you use the remote control board to control the color of the light, Please remove the clear plastic card first, then please be sure to point the remote control at the color controller R