


Assembly Instructions

FLOOR CABINET

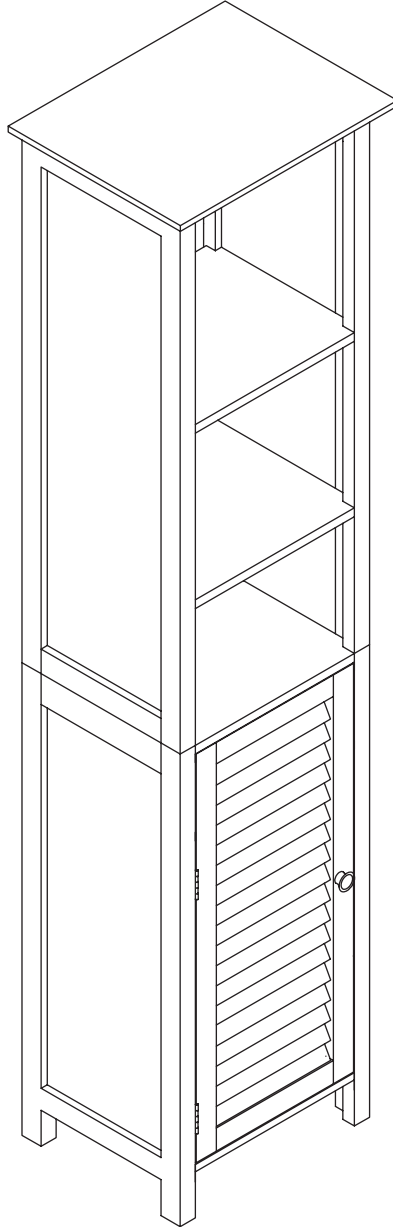


Carefully unpack and identify each component before beginning assembly. Before you begin, please refer to parts list to make sure that you have all parts. Please take care when assembling the unit and always place the parts on a clean, soft surface.


Get social with us and discover more about our products, tips and exclusive discounts!




Visit our YouTube channel for product assembly demonstrations

Parts List

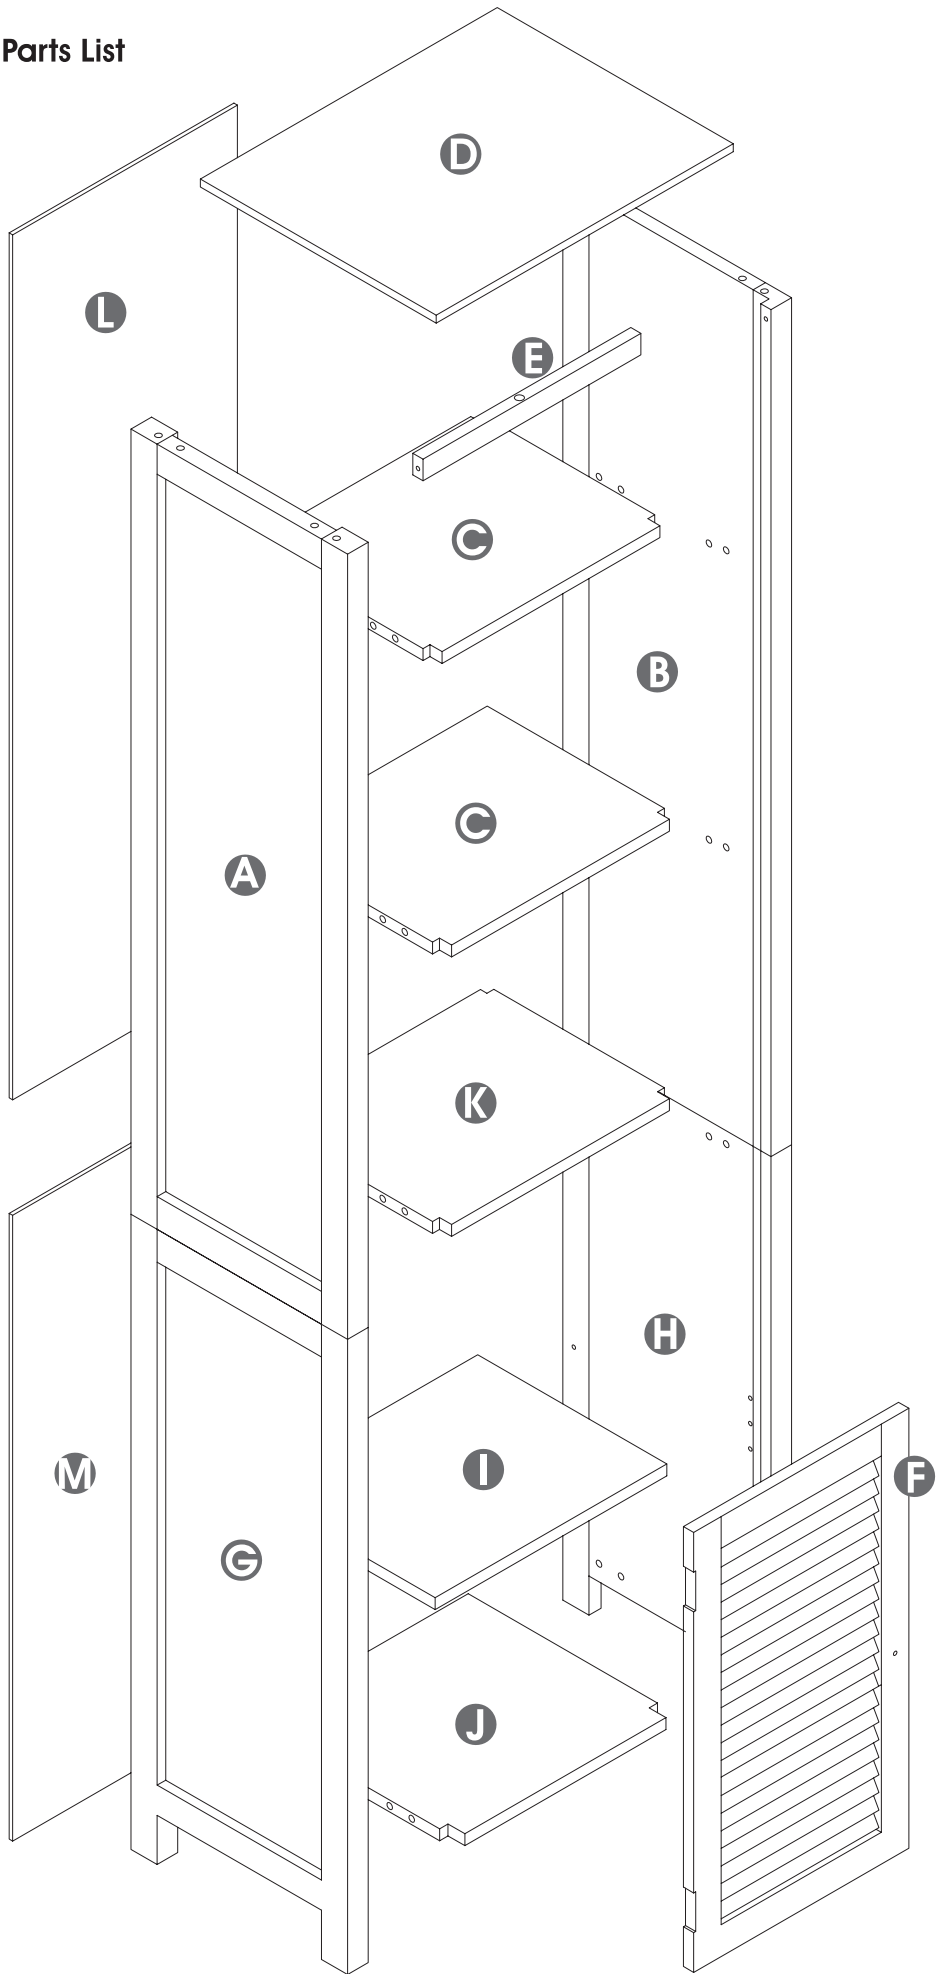




28x



20x




26x




4x



4x



1x

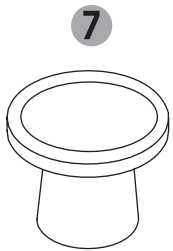


1x




28x




4x

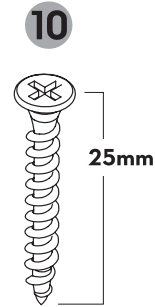


2x




1x

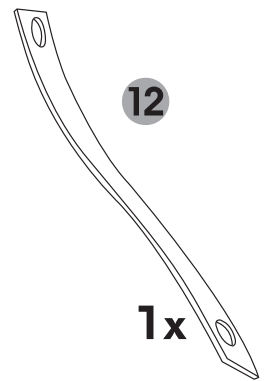

1x

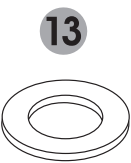



2x

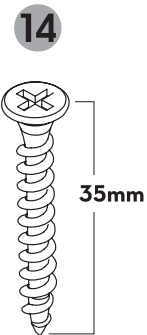

1x

in **Step 1** you need

J H K

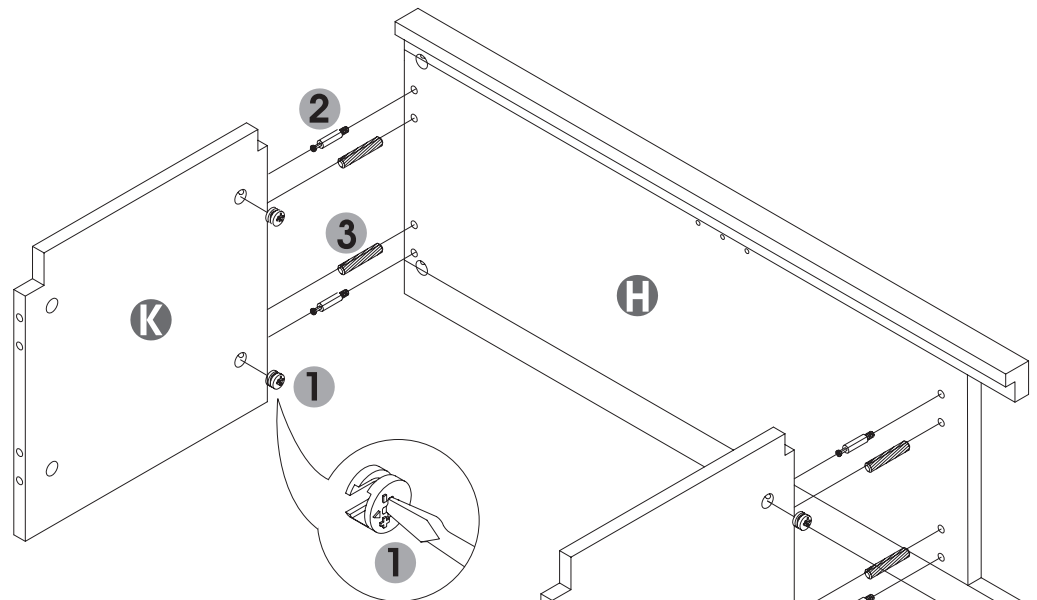
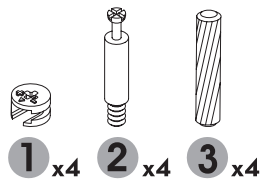


Push cam lock into the hole, then take a flathead screwdriver (as pictured) and twist 45 degrees until it is locked in place.

First screw cam bolt **2** into part H, then slide part J, K into part H, lastly tighten the cam lock **1** until secure.



in **Step 2** you need

G

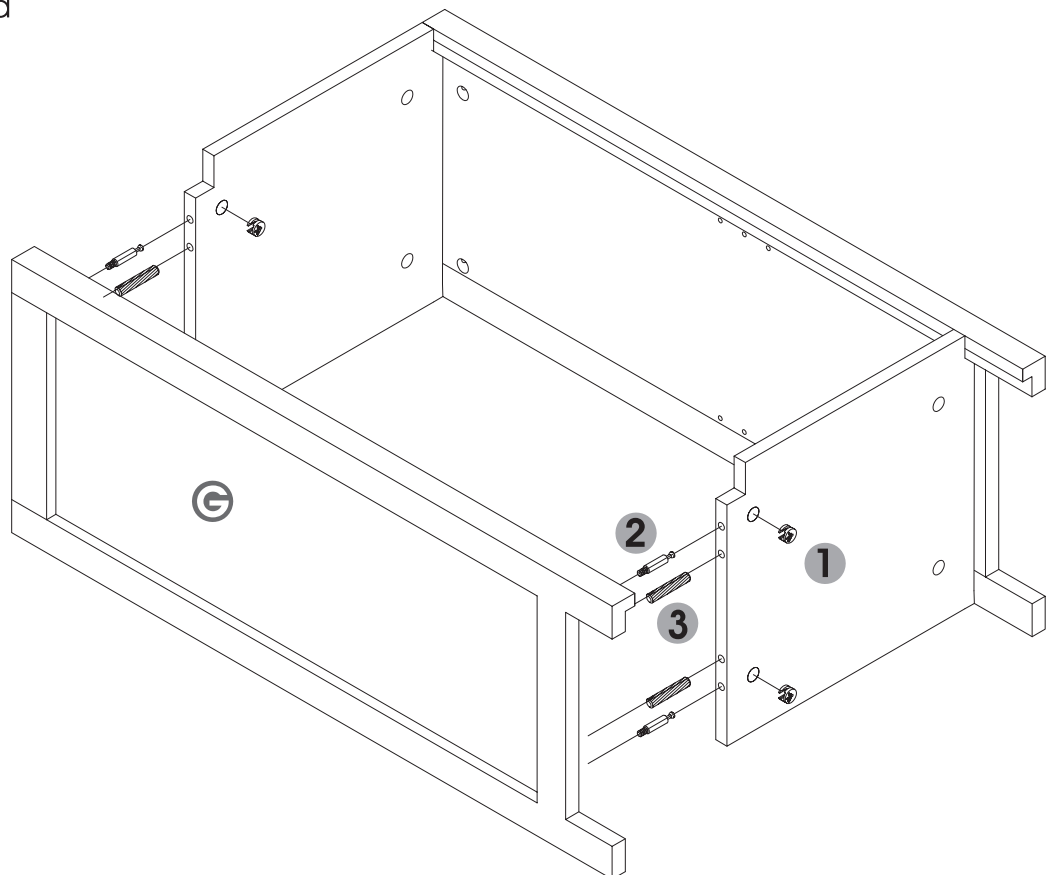
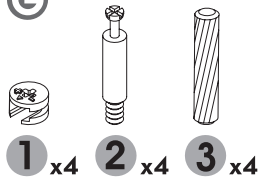


in **Step 3** you need



A **B** **C** **E**

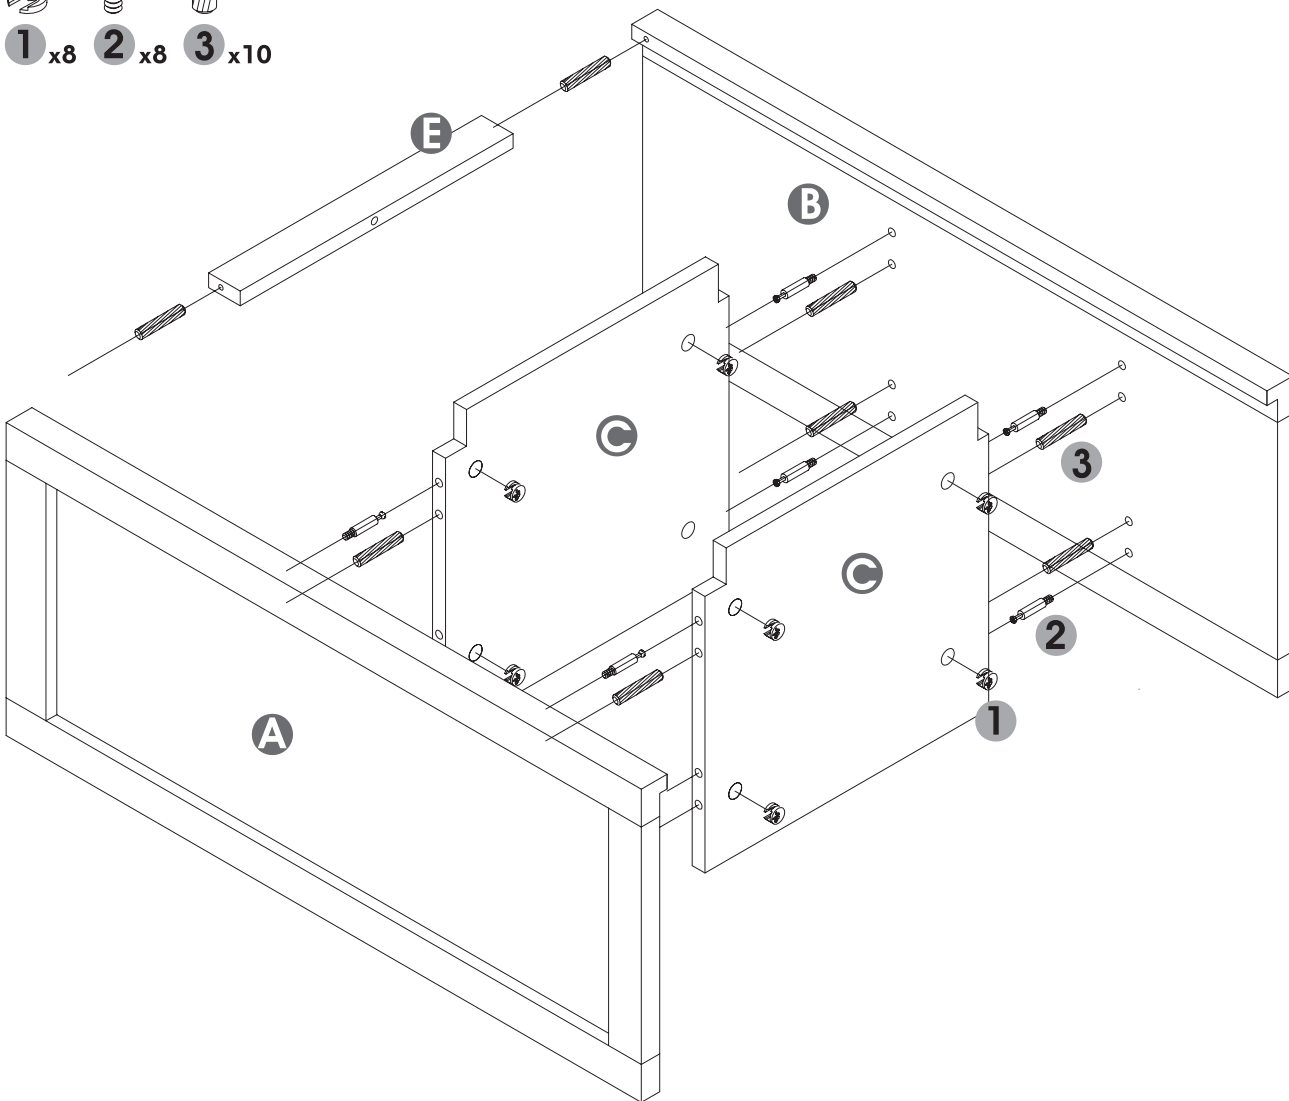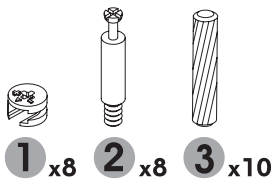

in **Step 4** you need

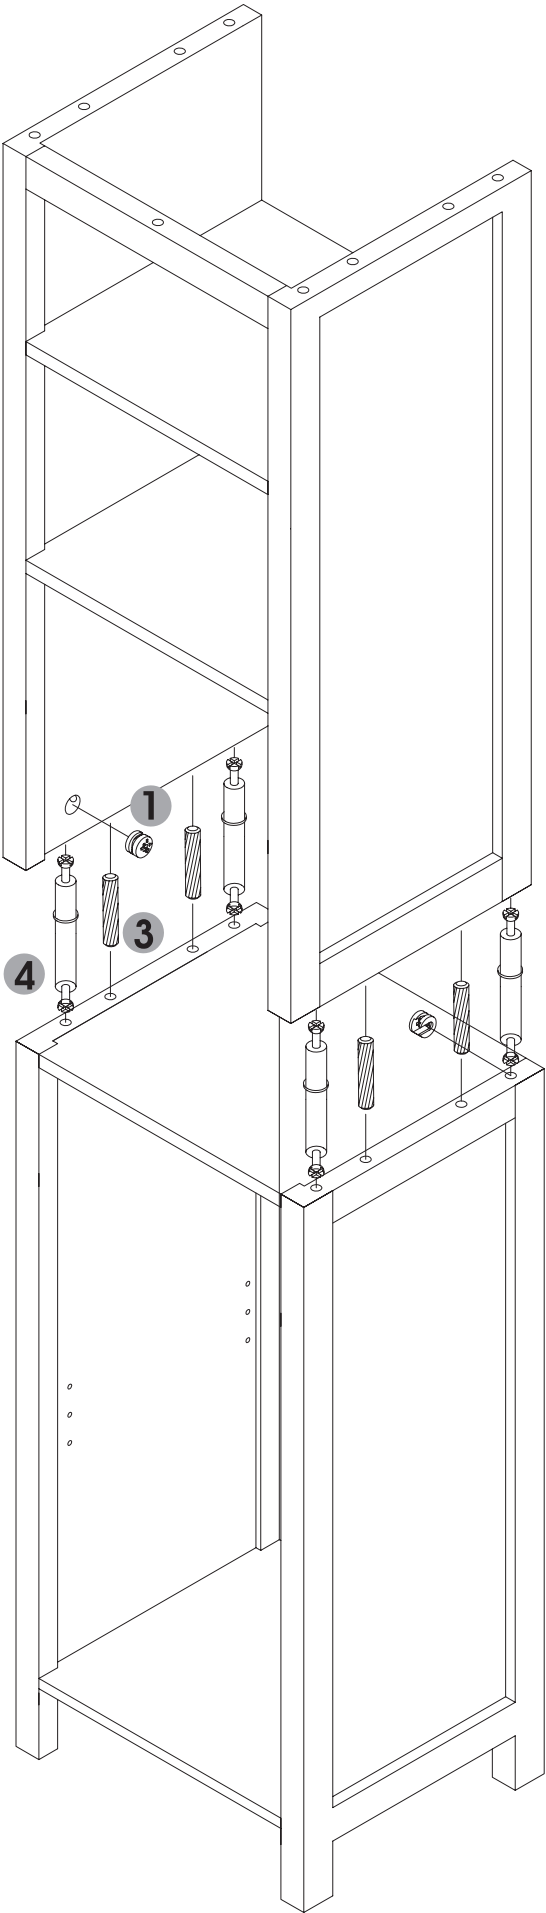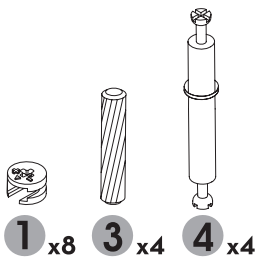

in **Step 5** you need **D**

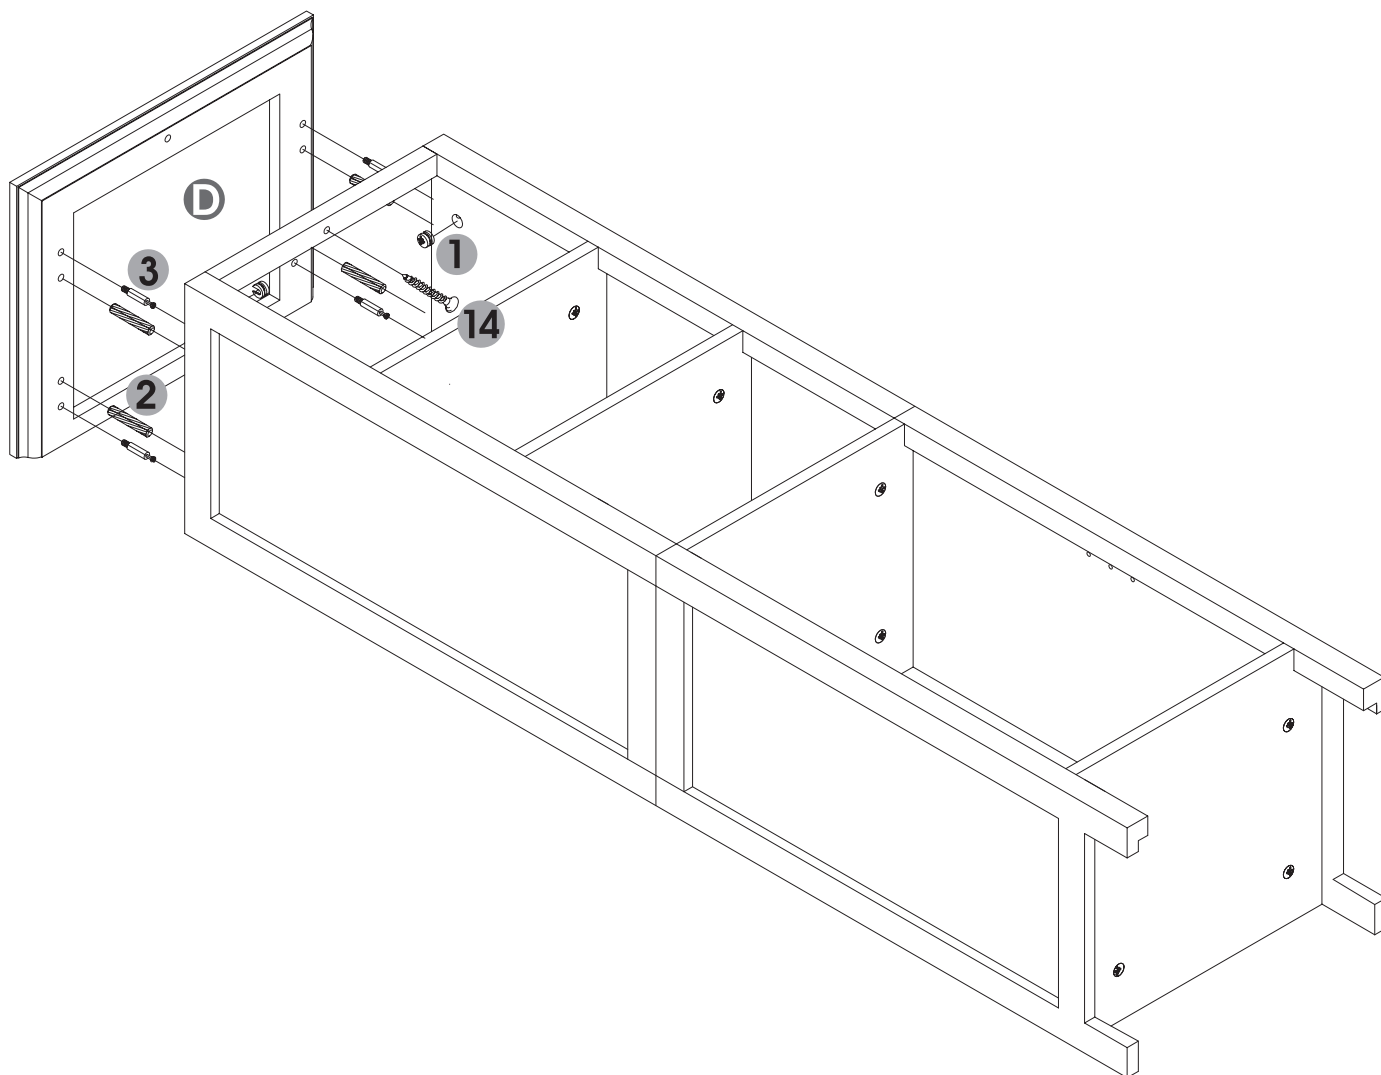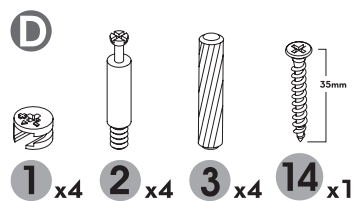


in **Step 6** you need

L **M**





8 x28



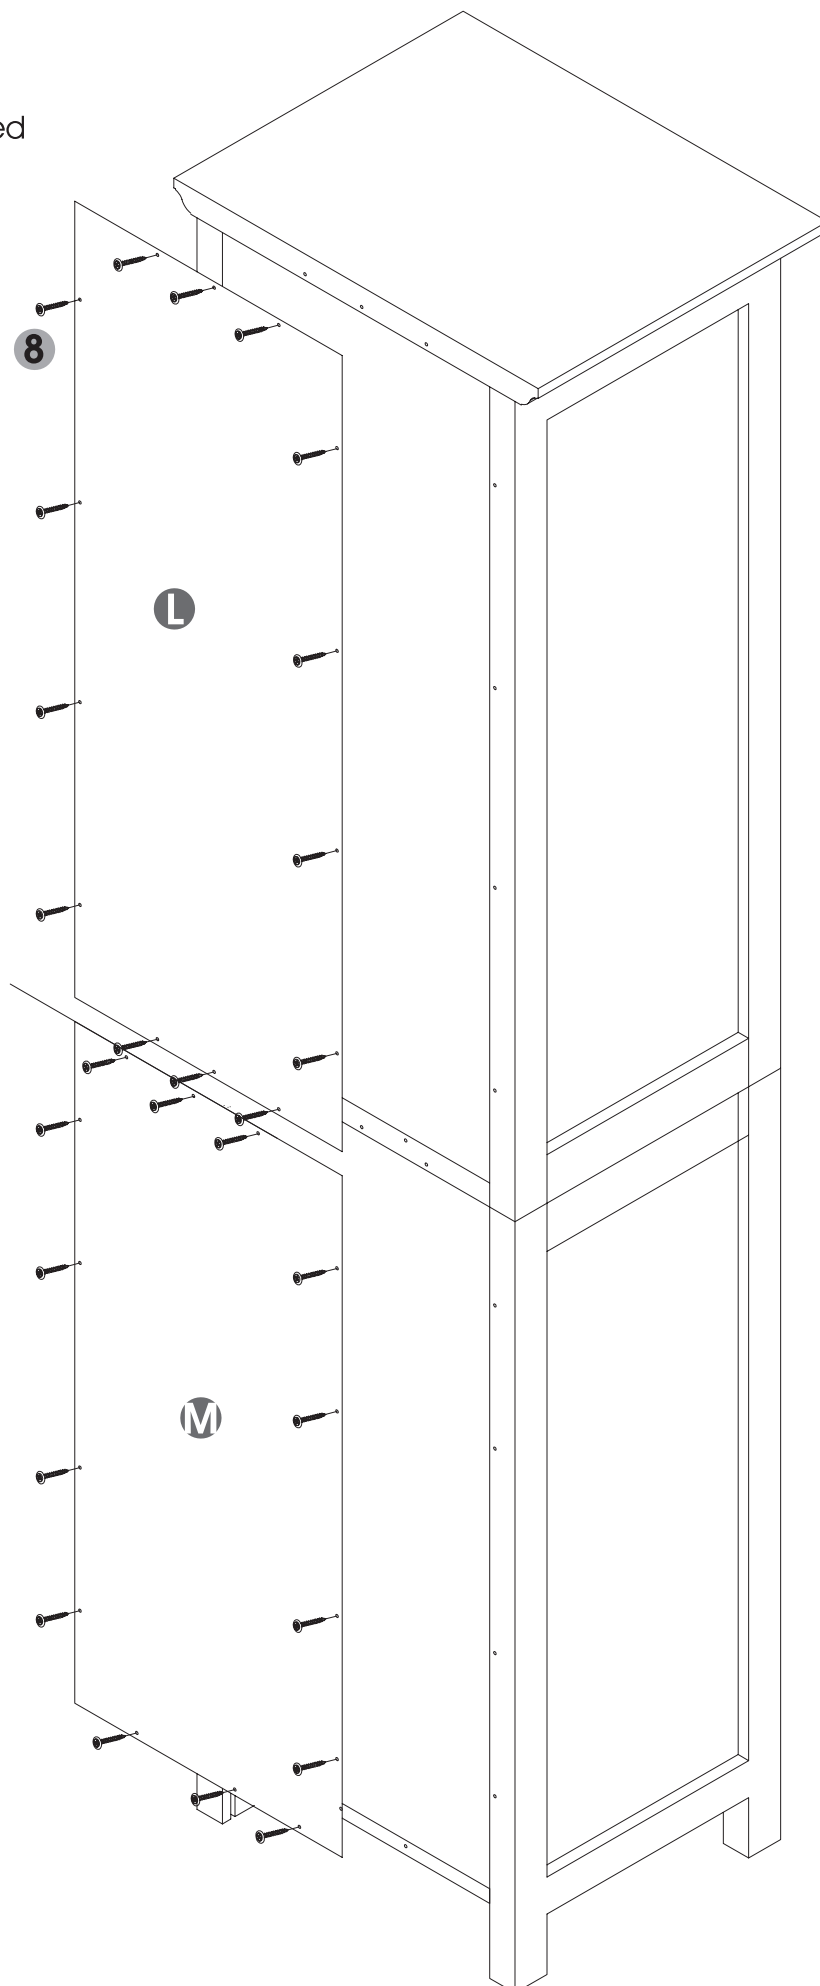


in **Step 7** you need

I **F**

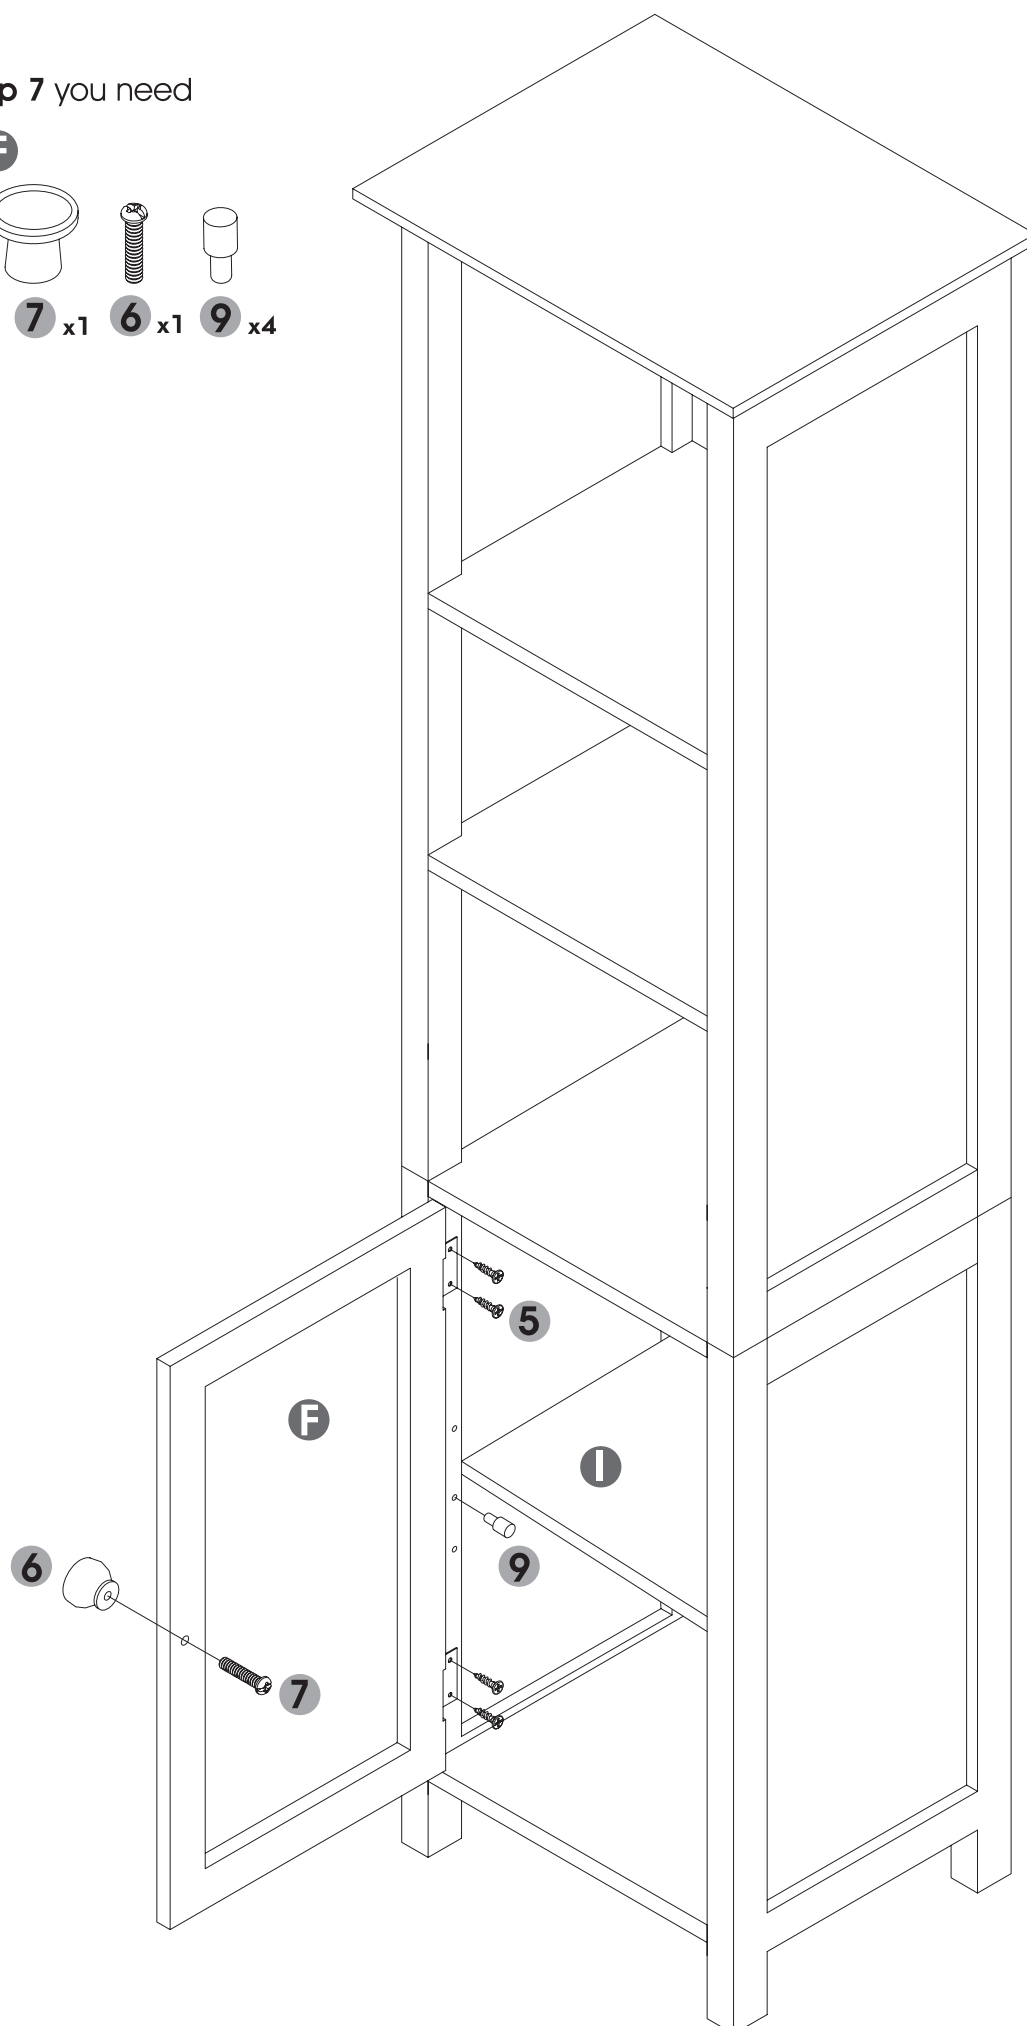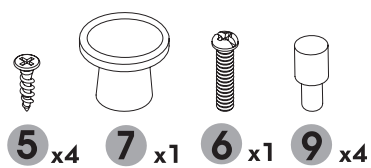

in **Step 8** you need

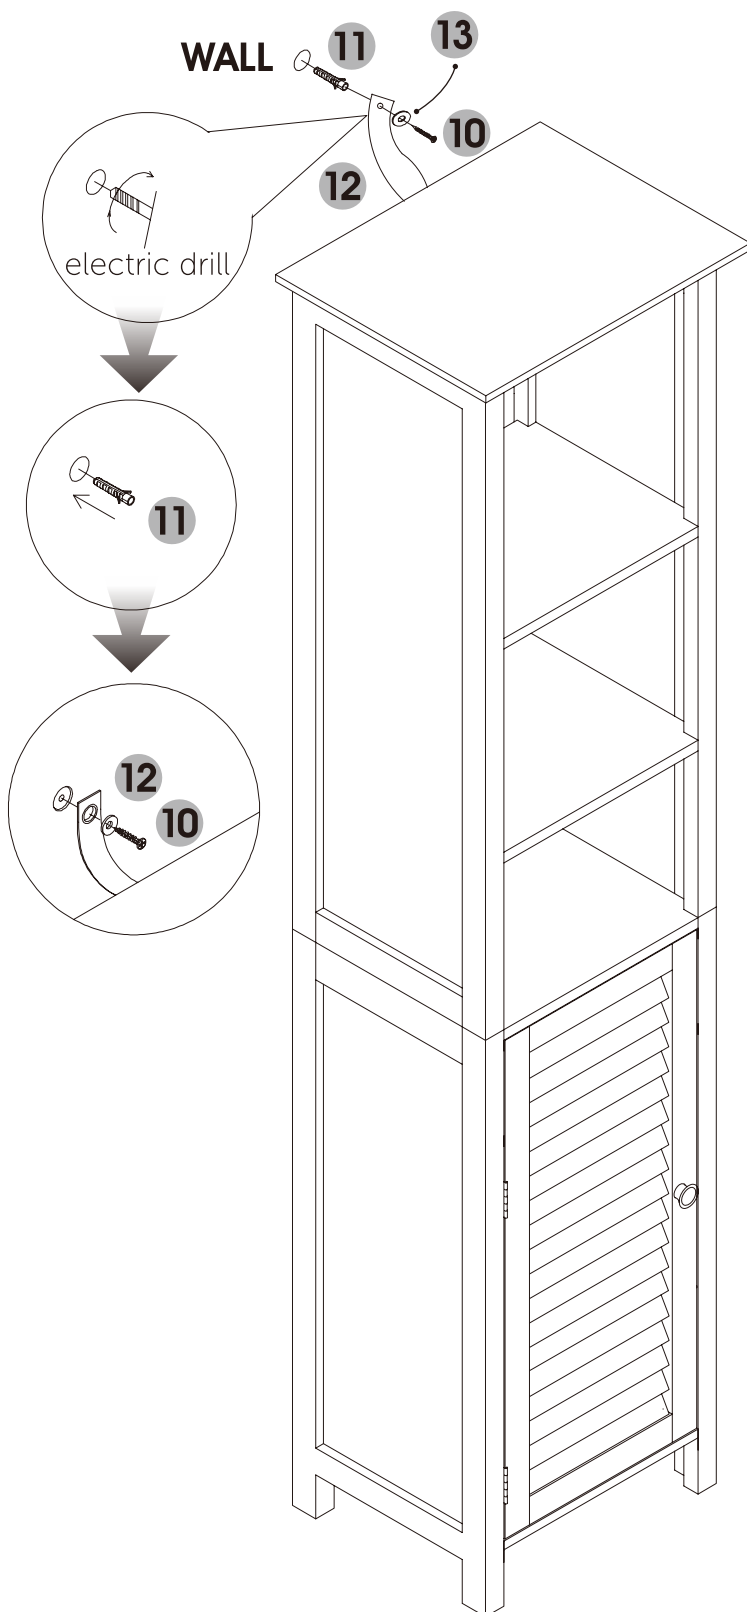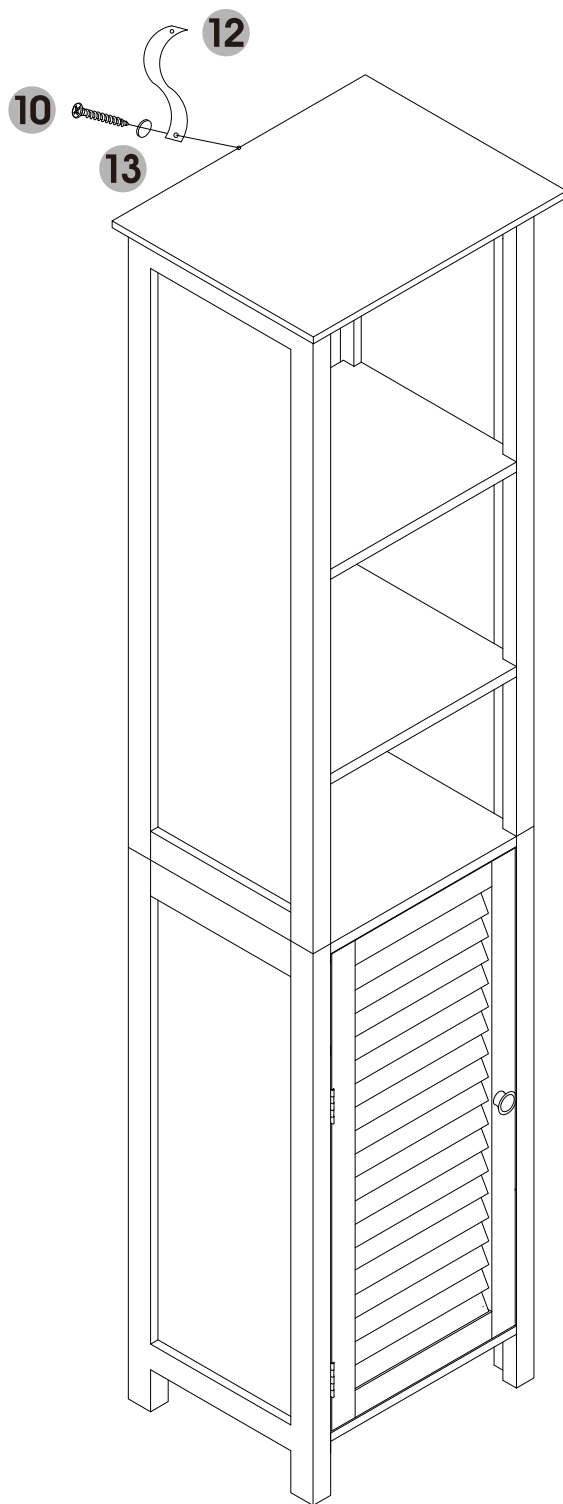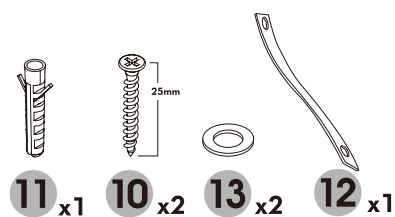

For your safety, please secure anchor-strap to a wall thoroughly.