


Assembly Instructions

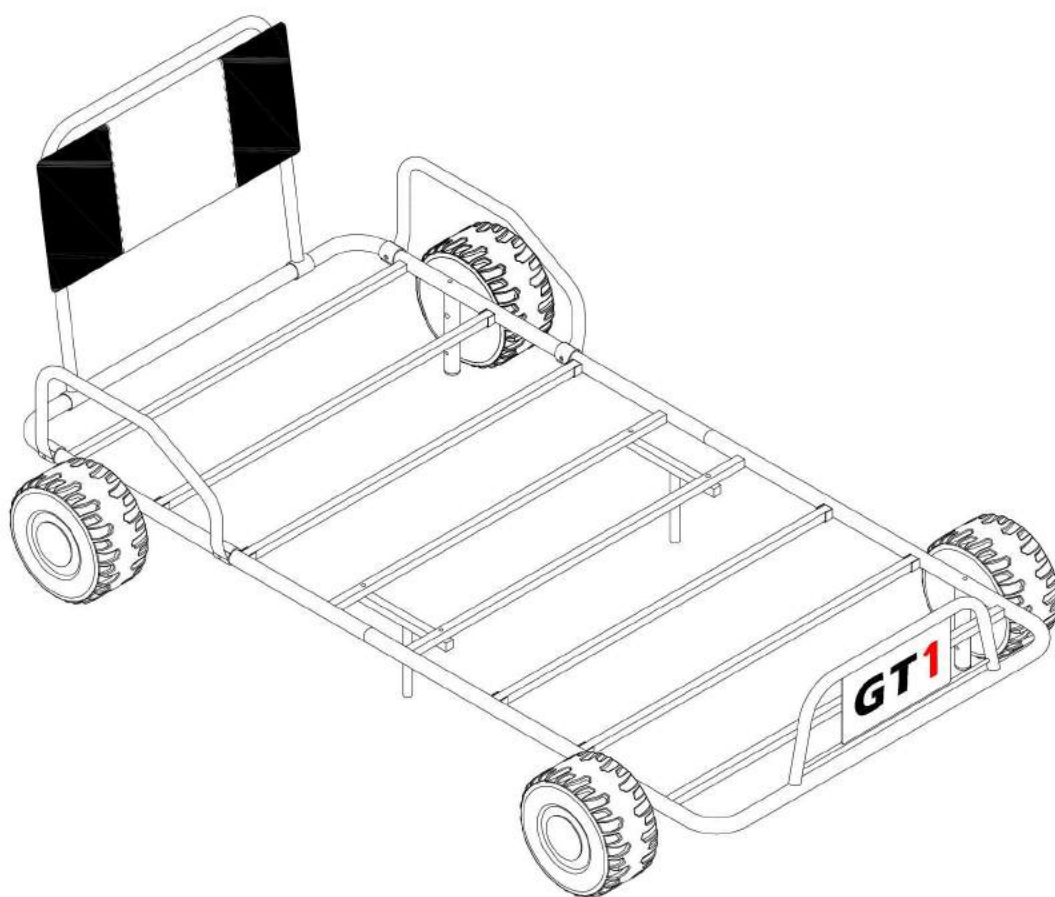

ASSEMBLY RATING

The Assembly Rating is a 5-point system that shows the degree of effort needed in assembling a specific product (with 1 being easy and 5 being difficult). For some products, two persons are recommended.


EASY



DIFFICULT

Tools Required For Assembly:

Allen Wrench



(Included)

Phillips Screwdriver



(Not Included)




2 PERSONS RECOMMENDED


ASSEMBLY & CARE ADVICE

FOR YOUR FURNITURE TO LAST, CORRECT ASSEMBLY AND PROPER MAINTENANCE ARE NECESSARY. PLEASE FOLLOW THE INFORMATION PROVIDED BELOW TO FULLY ENJOY YOUR FURNITURE.


BASIC ASSEMBLY TECHNIQUES

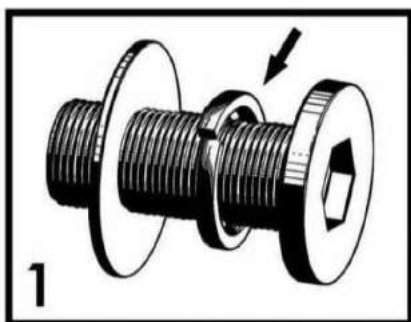


When lock or spring washer is used in an assembly, please make sure the lock or spring washer is placed between the larger flat washer and the head of the screw or bolt.

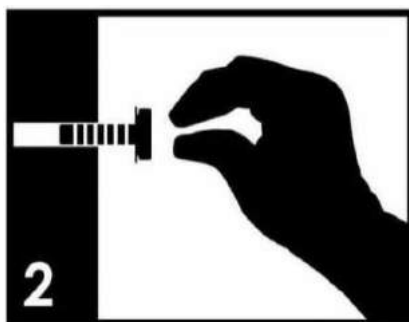


Position each part correctly and insert screws or bolts into their respective holes by hand tighten or using the proper hand tool. Only tighten when step is completed or when instructed to do so.

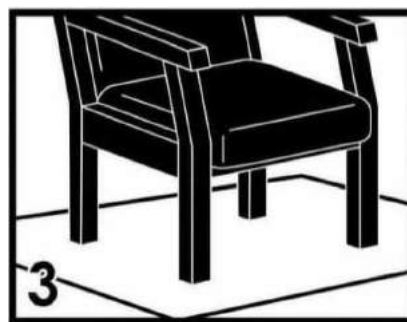


Use cardboard or carpet area when assembling furniture to prevent scratches. Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

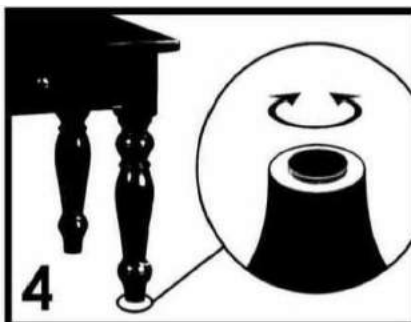

Some furniture comes with height adjustment knobs underneath each leg. To lower or to raise each leg, you need to turn clockwise or counterclockwise, respectively.

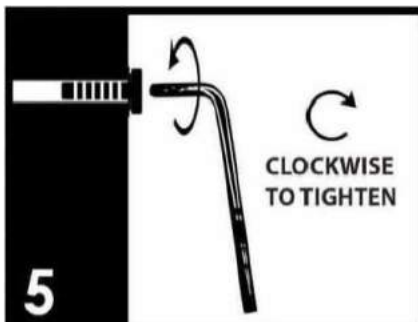


Make sure all parts are properly aligned, then use the appropriate hand tool to completely tighten the bolts or screws. Do not use power tools and do not overtighten.

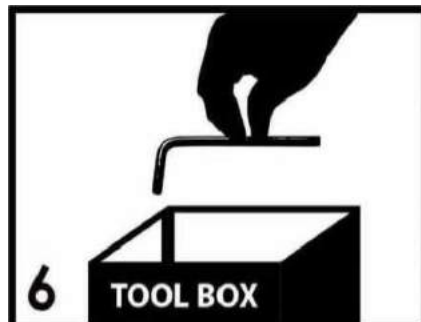

Save the instructions and store the Allen wrench or any supplied tool for later maintenance. After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

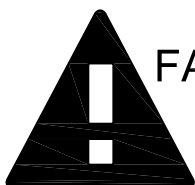

FAILURE TO FOLLOW THE GUIDELINES ABOVE MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.



Before you begin, please read Page 2 of "Assembly and Care Advice".

And remember, do not tighten until each step is completed or instructed.

Parts List



#1 x 1pc
Bed Frame A



#2 x 1pc
Bed Frame B



#3 x 1pc
Footdboard



#4 x 1pc
Left Side Rail



#5 x 1pc
Right Side Rail



#6 x 4pcs
Leg



#7 x 4pcs
Wheel



#8 x 4pcs
Wheel Cap




#9 x 1pc
Headboard



#10 x 2pcs
Slat Support Leg



#11 x 4pcs
Slat

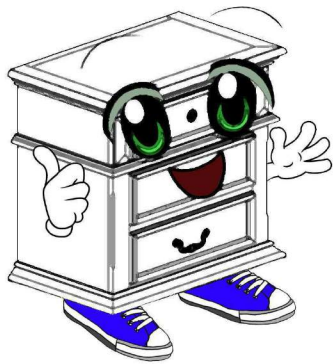

Before you begin, please read Page 2 of "Assembly and Care Advice".

And remember, do not tighten until each step is completed or instructed.

Hardware List



#A x 4pcs
Stud Bolt 5/16" X 7-7/8"



#B x 4pcs
Bolt 1/4" X 5/8"



#C x 8pcs
Bolt 1/4" X 1-1/8"



#D x 4pcs
Screw M4 X 45mm



#E x 6pcs
Bolt 1/4" X 1-3/4"



#F x 4pcs
Bolt 1/4" X 3/4"



#G x 4pcs
Bolt 5/16" X 3/4"



#H x 2pcs
Bolt 1/4" X 2"



#I x 2pcs
Allen Wrench M4




#J x 1pc
Allen Wrench M5




#1

#B x 4pcs


Insert the bed frame A (#1) into the bed frame B (#2) by connecting the ends. Place on a protected surface. Then insert two bolts (#B) into each side and secure using the Allen wrench (#1).

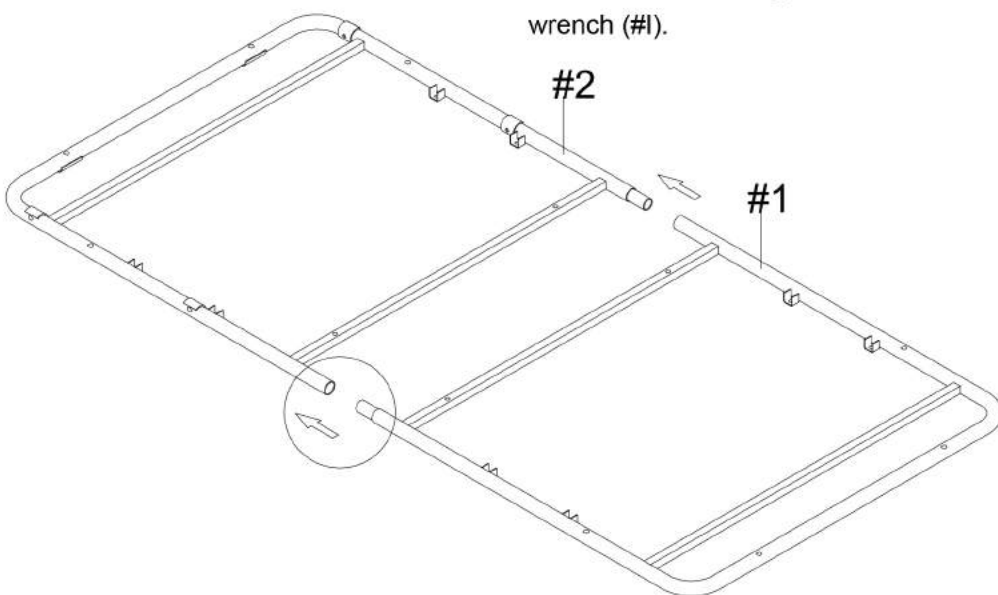

1-1

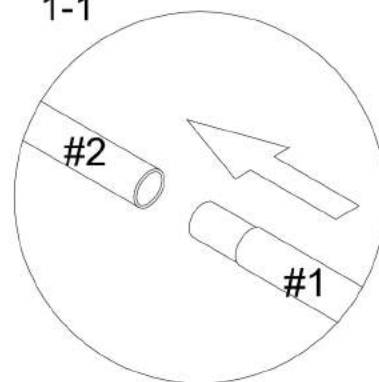


1-2

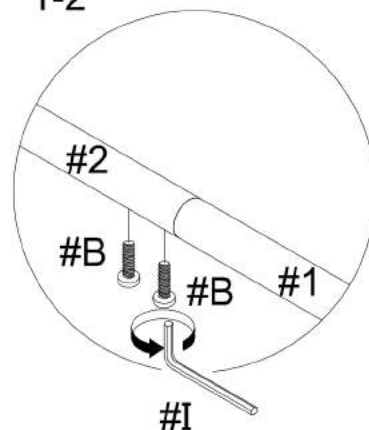


#2

#E x 6pcs
#C x 4pcs


Align the slat support leg (#10) to the pre-drilled holes along the center slats. Insert 2 bolts (#C) into each from the top and secure using the Allen wrench (#1).

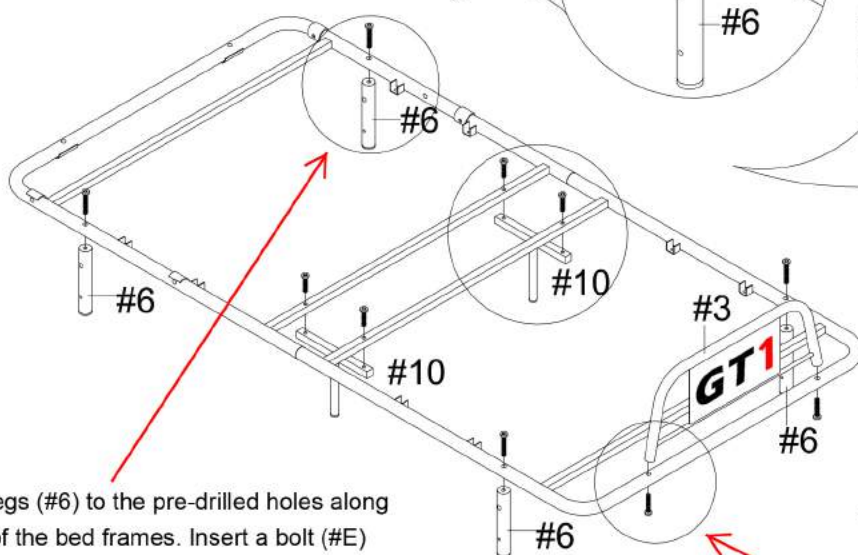


2-1

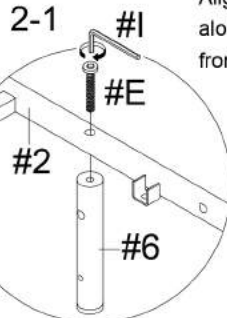

2-2

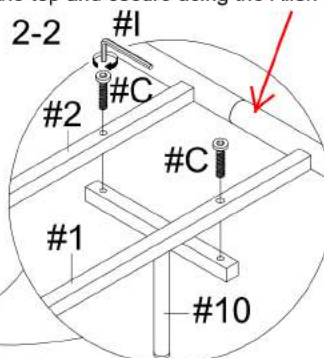

2-3

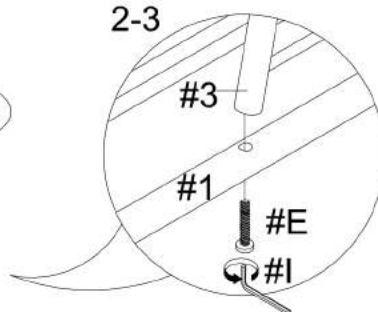


Align the legs (#6) to the pre-drilled holes along the sides of the bed frames. Insert a bolt (#E) into the pre-drilled hole from the top and secure using the Allen wrench (#1)

Align the footboard (#3) to the pre-drilled holes on the bed frame A (#1). From below insert a bolt (#E) into each end and secure using the Allen wrench (#1).



#C x 4pcs
#F x 4pcs
#H x 2pcs

Align the headboard (#9) to the pre-drilled holes on the rear side of the bed frame. Make sure the headboard faces forward. Insert a bolt (#H) into each end from below and secure using the Allen wrench (#I).

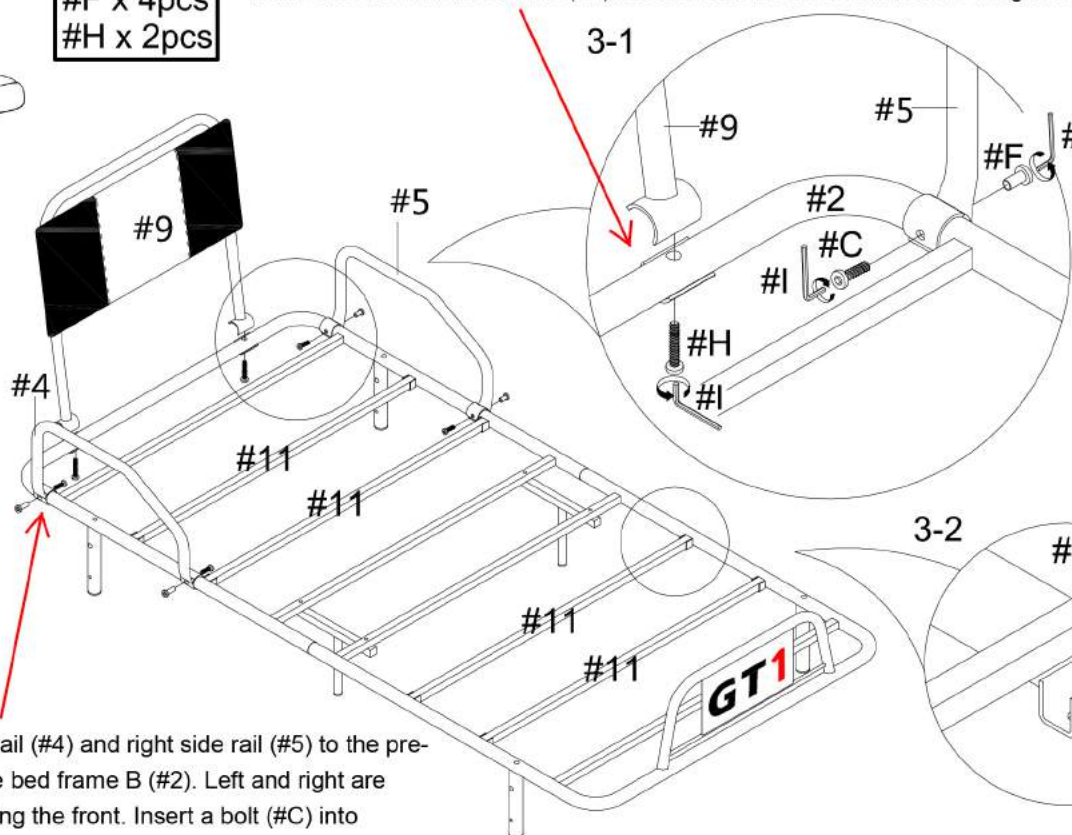


Align the left side rail (#4) and right side rail (#5) to the pre-drilled holes on the bed frame B (#2). Left and right are determined by facing the front. Insert a bolt (#C) into each end from within, secure using the Allen wrench (#I). Then insert bolt (#F) into the outer side, secure using the Allen wrench (#I).

Insert 4 slats (#11) into the slots along the sides of the bed frames.





#A x 4pcs
#D x 4pcs
#G x 4pcs

4-2

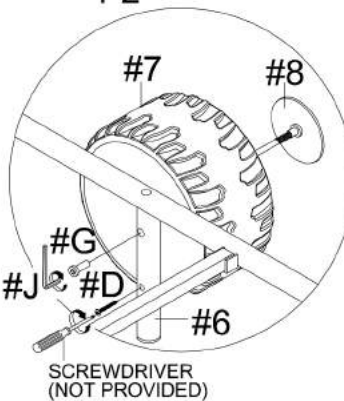

4-1

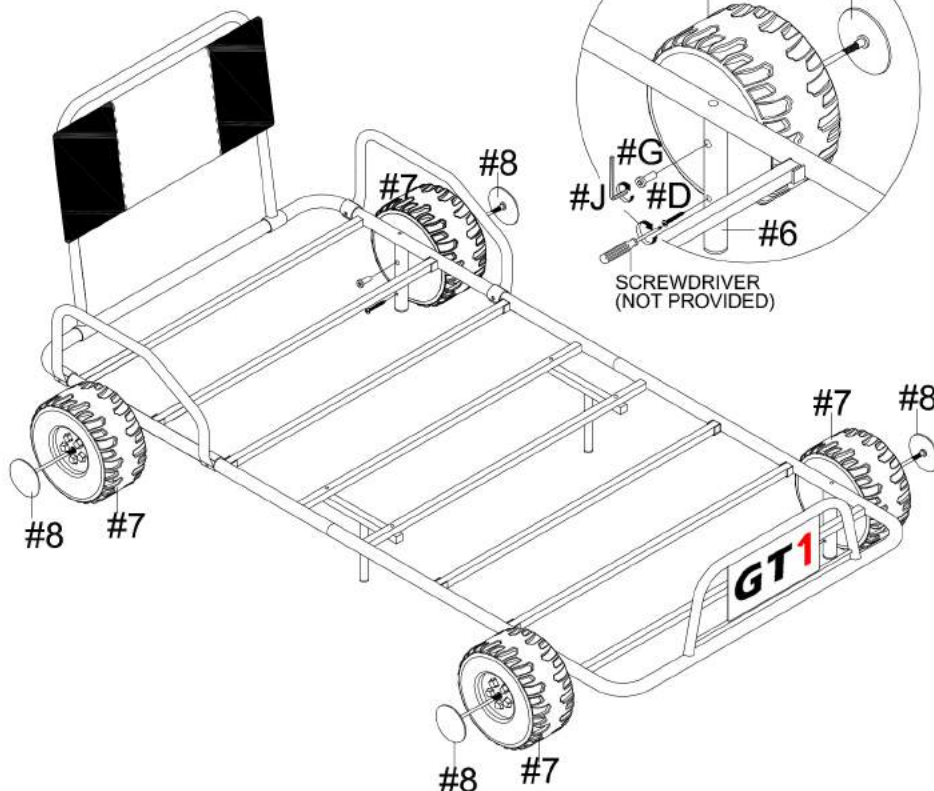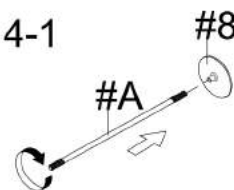

- I. Insert stud bolt (#A) into the pre-drilled hole on the center of the wheel cap (#8). Turn right to tighten.
- II. Insert the other end of the stud bolt (#A) into the wheel (#7) and bed frame. Once it is through insert bolt (#G) onto the end and secure using the Allen wrench (#J).
- III. Insert screw (#D) into the pre-drilled hole on the leg and into the wheel (#7) to keep it from moving. Then secure using a Phillips screwdriver.

Repeat process for the remaining wheels.