


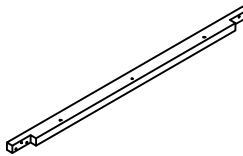
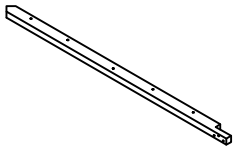
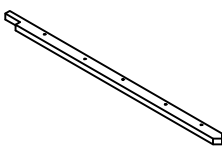


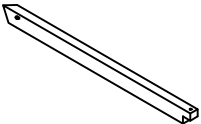
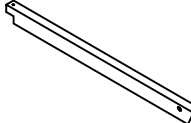


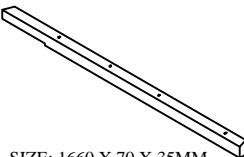
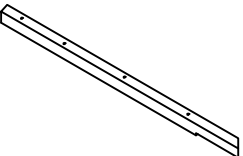
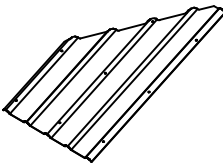
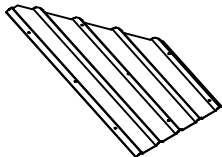
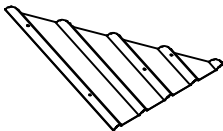
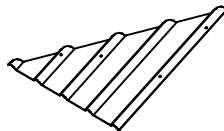
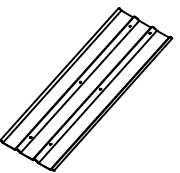



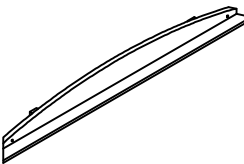

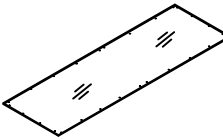
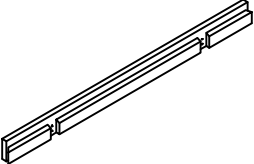

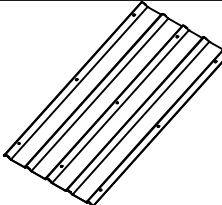
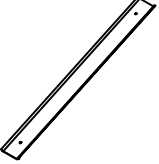
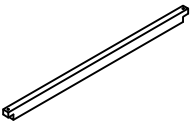
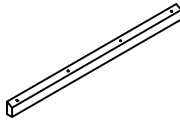


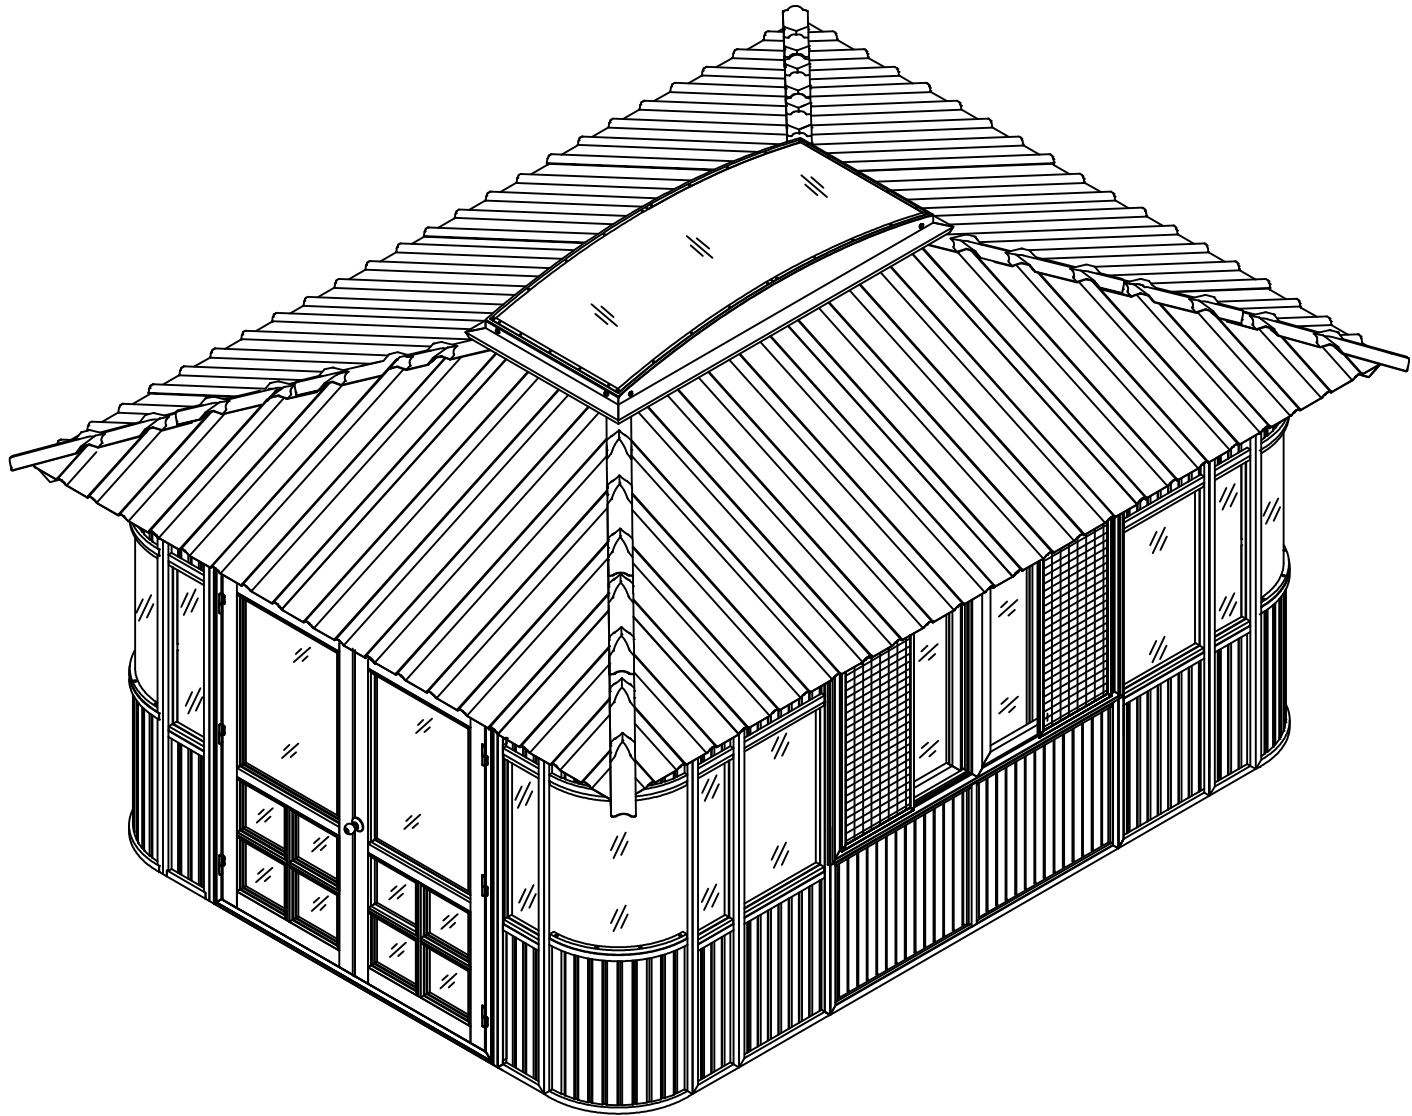

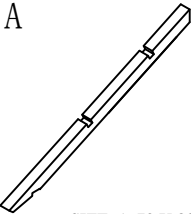













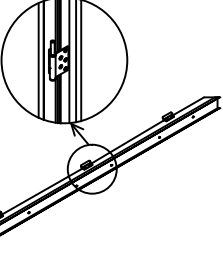


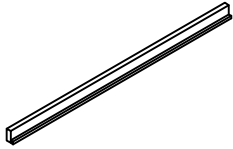





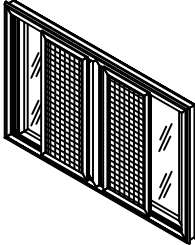
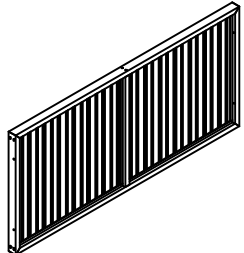







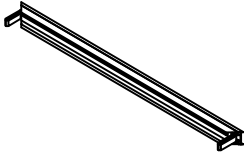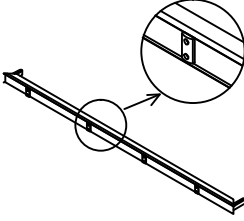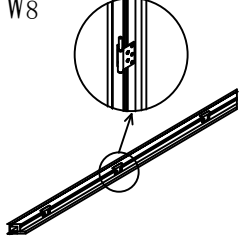

ASSEMBLY INSTRUCTION FOR 12'X16' ULTRAWOOD GAZEBO



ASSEMBLY INSTRUCTION FOR 12'X16' ULTRAWOOD GAZEBO


<p>A</p>  <p>SIZE: 1670 X 80 X 70MM 65$\frac{3}{4}$" X 3" X 2$\frac{3}{4}$" X6</p>	<p>B</p>  <p>SIZE: 2270 X 90 X 70MM 89$\frac{3}{8}$" X 3$\frac{3}{4}$" X 2$\frac{3}{4}$" X4</p>	<p>C</p>  <p>SIZE: 1300 X 60 X 35MM 51$\frac{3}{16}$" X 2$\frac{3}{8}$" X 1$\frac{3}{8}$" X2</p>	<p>C1</p>  <p>SIZE: 1765 X 60 X 35MM 69$\frac{1}{2}$" X 2$\frac{3}{8}$" X 1$\frac{3}{8}$" X2</p>	<p>C2</p>  <p>SIZE: 1765 X 60 X 35MM 69$\frac{1}{2}$" X 2$\frac{3}{8}$" X 1$\frac{3}{8}$" X6</p>	<p>D</p>  <p>SIZE: 590 X 90 X 35MM 23$\frac{3}{16}$" X 3$\frac{1}{2}$" X 1$\frac{3}{8}$" X4</p>
<p>D1</p>  <p>SIZE: 300 X 90 X 35MM 12" X 3$\frac{1}{2}$" X 1$\frac{3}{8}$" X4</p>	<p>E</p>  <p>SIZE: 1190 X 60 X 35MM 46$\frac{5}{8}$" X 2$\frac{3}{8}$" X 1$\frac{3}{8}$" X4</p>	<p>F</p>  <p>SIZE: 1190 X 60 X 35MM 46$\frac{5}{8}$" X 2$\frac{3}{8}$" X 1$\frac{3}{8}$" X4</p>	<p>G</p>  <p>SIZE: 704 X 60 X 35MM 27$\frac{11}{16}$" X 2$\frac{3}{8}$" X 1$\frac{3}{8}$" X4</p>	<p>H</p>  <p>SIZE: 704 X 60 X 35MM 27$\frac{11}{16}$" X 2$\frac{3}{8}$" X 1$\frac{3}{8}$" X4</p>	<p>I</p>  <p>SIZE: 1660 X 70 X 35MM 65$\frac{3}{8}$" X 2$\frac{3}{4}$" X 1$\frac{3}{8}$" X4</p>
<p>J</p>  <p>SIZE: 1660 X 70 X 35MM 65$\frac{3}{8}$" X 2$\frac{3}{4}$" X 1$\frac{3}{8}$" X4</p>	<p>K</p>  <p>SIZE: 1710 X 880 X 30MM 67$\frac{1}{16}$" X 34$\frac{5}{8}$" X 1$\frac{1}{16}$" X4</p>	<p>L</p>  <p>SIZE: 1710 X 880 X 30MM 67$\frac{1}{16}$" X 34$\frac{5}{8}$" X 1$\frac{1}{16}$" X4</p>	<p>M</p>  <p>SIZE: 942 X 862 X 30MM 37" X 34" X 1$\frac{1}{16}$" X4</p>	<p>N</p>  <p>SIZE: 942 X 862 X 30MM 37" X 34" X 1$\frac{1}{16}$" X4</p>	<p>N1</p>  <p>SIZE: 1710 X 600 X 30MM 67$\frac{1}{16}$" X 23$\frac{3}{8}$" X 1$\frac{1}{16}$" X2</p>
<p>O</p>  <p>SIZE: 720 X 115 X 50MM 28$\frac{3}{8}$" X 4$\frac{1}{2}$" X 2" X4</p>	<p>P</p>  <p>SIZE: 835 X 115 X 50MM 33" X 4$\frac{1}{2}$" X 2" X4</p>	<p>P1</p>  <p>SIZE: 1050 X 115 X 50MM 41$\frac{3}{16}$" X 4$\frac{1}{2}$" X 2" X4</p>	<p>Q</p>  <p>SIZE: 2207 X 228 X 100MM 87" X 9" X 4" X2</p>	<p>Q1</p>  <p>SIZE: 1007 X 107 X 100MM 39$\frac{5}{8}$" X 4$\frac{1}{4}$" X 4" X2</p>	<p>R</p>  <p>SIZE: 2100 X 875 X 3MM 82$\frac{5}{8}$" X 34$\frac{3}{8}$" X 1$\frac{1}{16}$" X1</p>
<p>S1</p>  <p>SIZE: 1948 X 140 X 60MM 76$\frac{3}{4}$" X 5$\frac{1}{2}$" X 2$\frac{3}{8}$" X2</p>	<p>S2</p>  <p>SIZE: 800 X 140 X 60MM 31$\frac{1}{2}$" X 5$\frac{1}{2}$" X 2$\frac{3}{8}$" X2</p>	<p>S3</p>  <p>SIZE: 1710 X 880 X 30MM 67$\frac{1}{16}$" X 34$\frac{5}{8}$" X 1$\frac{1}{16}$" X4</p>	<p>S4</p>  <p>SIZE: 1710 X 170 X 30MM 67$\frac{1}{16}$" X 6$\frac{1}{16}$" X 1$\frac{1}{16}$" X2</p>	<p>S5</p>  <p>SIZE: 1200 X 60 X 35MM 47$\frac{1}{4}$" X 2$\frac{3}{8}$" X 1$\frac{3}{8}$" X4</p>	<p>S6</p>  <p>SIZE: 1130 X 70 X 35MM 44$\frac{1}{2}$" X 2$\frac{3}{8}$" X 1$\frac{3}{8}$" X2</p>

ASSEMBLY INSTRUCTION FOR 12'X16' ULTRAWOOD GAZEBO


<p>W1</p>  <p>SIZE: 693X60X2080MM 27¹/₄" X 2³/₈" X 81⁷/₈" X4</p>	<p>W2</p>  <p>SIZE: 600X60X2080MM 23³/₈" X 2³/₈" X 81⁷/₈" X2</p>	<p>W3</p>  <p>SIZE: 600X60X2080MM 23³/₈" X 2³/₈" X 81⁷/₈" X2</p>	<p>W4</p>  <p>SIZE: 305X60X2080MM 12" X 2³/₈" X 81⁷/₈" X4</p>	<p>T1</p>  <p>X4</p>	<p>T2</p>  <p>X6</p>	<p>T3</p>  <p>X4</p>	<p>T5</p>  <p>X4</p>
<p>W5</p>  <p>SIZE: 305X60X2080MM 12" X 2³/₈" X 81⁷/₈" X4</p>	<p>W6</p>  <p>SIZE: 1837X65X45MM 72³/₈" X 2⁹/₁₆" X 1³/₄" X1</p>	<p>W7</p>  <p>SIZE: 1837X65X45MM 72³/₈" X 2⁹/₁₆" X 1³/₄" X1</p>	<p>W8</p>  <p>SIZE: 1995X65X45MM 78⁹/₁₆" X 2⁹/₁₆" X 1³/₄" X1</p>	<p>T6</p>  <p>X4</p>	<p>T7</p>  <p>X4</p>	<p>T8</p>  <p>X2</p>	<p>T9</p>  <p>X4</p>
<p>W9</p>  <p>SIZE: 1995X65X45MM 78⁹/₁₆" X 2⁹/₁₆" X 1³/₄" X1</p>	<p>W10</p>  <p>SIZE: 900X35X1932MM 35³/₈" X 1³/₈" X 76¹/₈" X1</p>	<p>W11</p>  <p>SIZE: 900X35X1932MM 35³/₈" X 1³/₈" X 76¹/₈" X1</p>	<p>W12</p>  <p>SIZE: 1900X59X90MM 74³/₄" X 2³/₈" X 3¹/₂" X1</p>	<p>T10</p>  <p>8-Ø8X50MM SIZE: 5⁵/₁₆" X 2" X2</p>	<p>T11</p>  <p>X2</p>	<p>T12</p>  <p>X1</p>	<p>T13</p>  <p>X2</p>
<p>W13</p>  <p>SIZE: 60X35X1990MM 2³/₈" X 1³/₈" X 78³/₈" X2</p>	<p>W14</p>  <p>SIZE: 1930X1230X87MM 76" X 48³/₈" X 3³/₈" X3</p>	<p>W15</p>  <p>SIZE: 1900X880X60MM 75³/₄" X 34³/₈" X 2³/₈" X3</p>	<p>U2</p>  <p>50-Ø5X75MM SIZE: 3¹/₁₆" X 3" X3</p>	<p>U3</p>  <p>160-Ø5X55MM SIZE: 3¹/₁₆" X 2³/₁₆" X3</p>	<p>U4</p>  <p>294-Ø4X30MM SIZE: 3¹/₁₆" X 1³/₁₆" X3</p>	<p>U5</p>  <p>144-Ø4X55MM SIZE: 3¹/₁₆" X 2³/₁₆" X3</p>	
<p>V</p>  <p>SHIM X15</p>	<p>V1</p>  <p>PLASTIC SPACER PLECE X48</p>	<p>V2</p>  <p>X4</p>	<p>V3</p>  <p>X4</p>	<p>X</p>  <p>1-Ø5X30x70MM</p>			

ASSEMBLY INSTRUCTION FOR 12'X16' ULTRAWOOD GAZEBO

#1

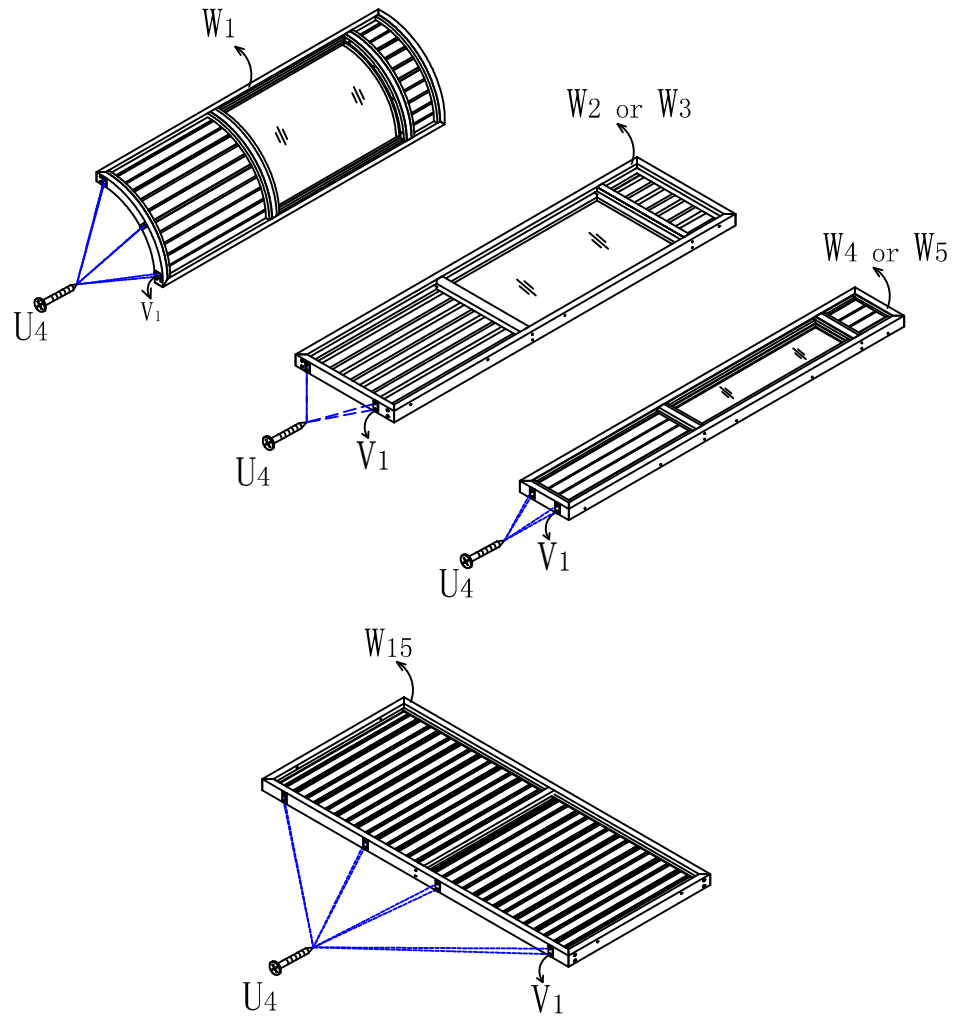


#2

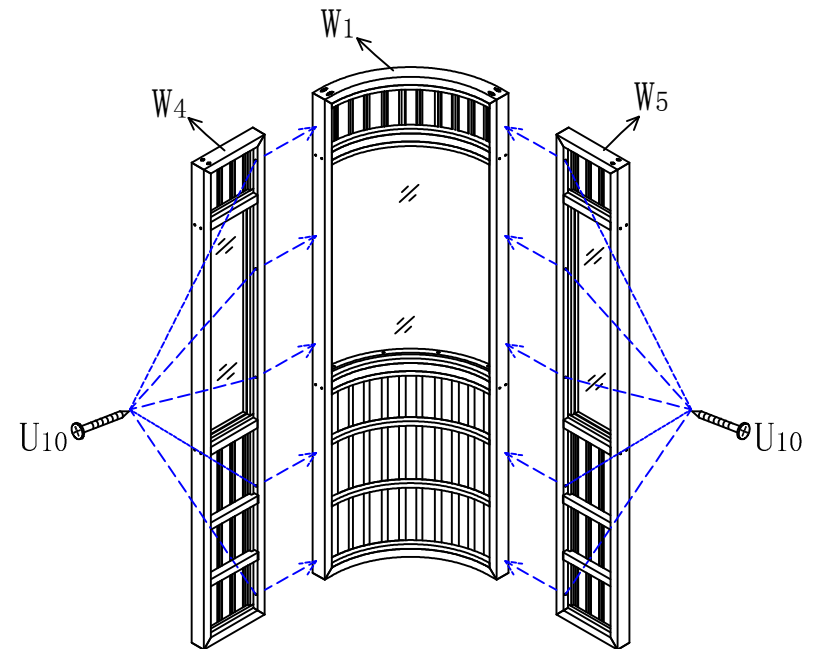


ASSEMBLY INSTRUCTION FOR 12'X16' ULTRAWOOD GAZEBO

#3

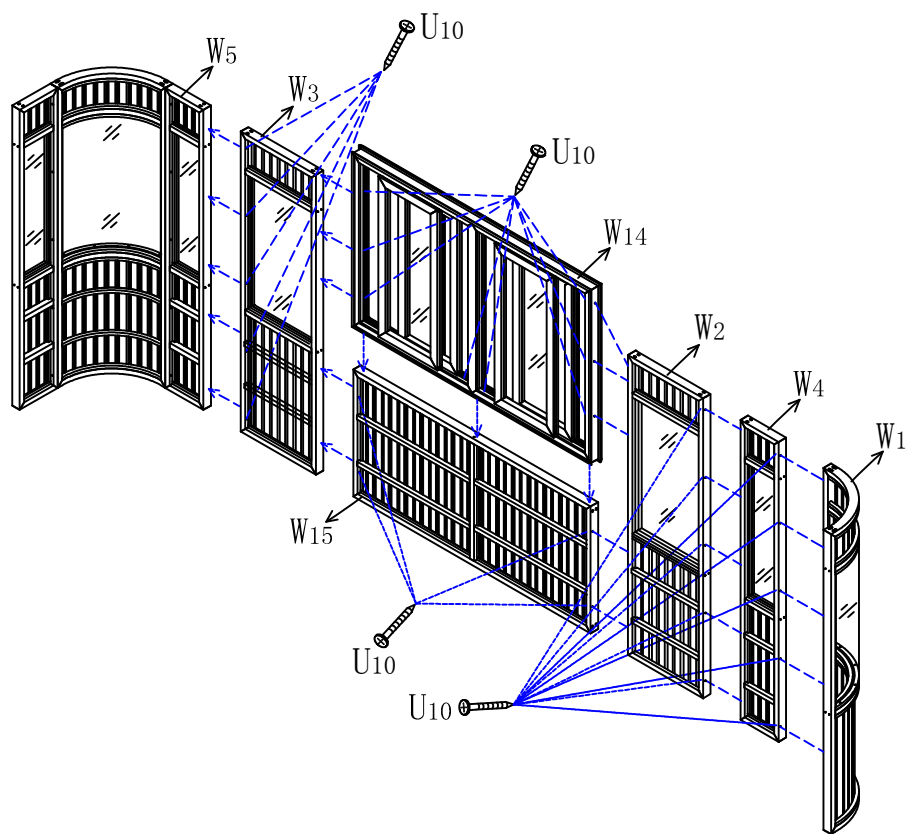


#4

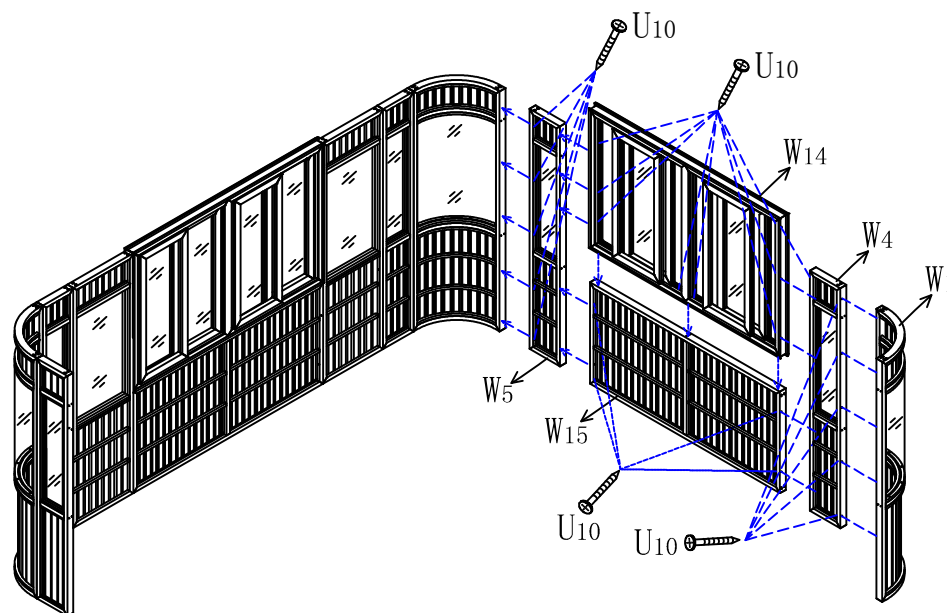


ASSEMBLY INSTRUCTION FOR 12'X16' ULTRAWOOD GAZEBO

#5

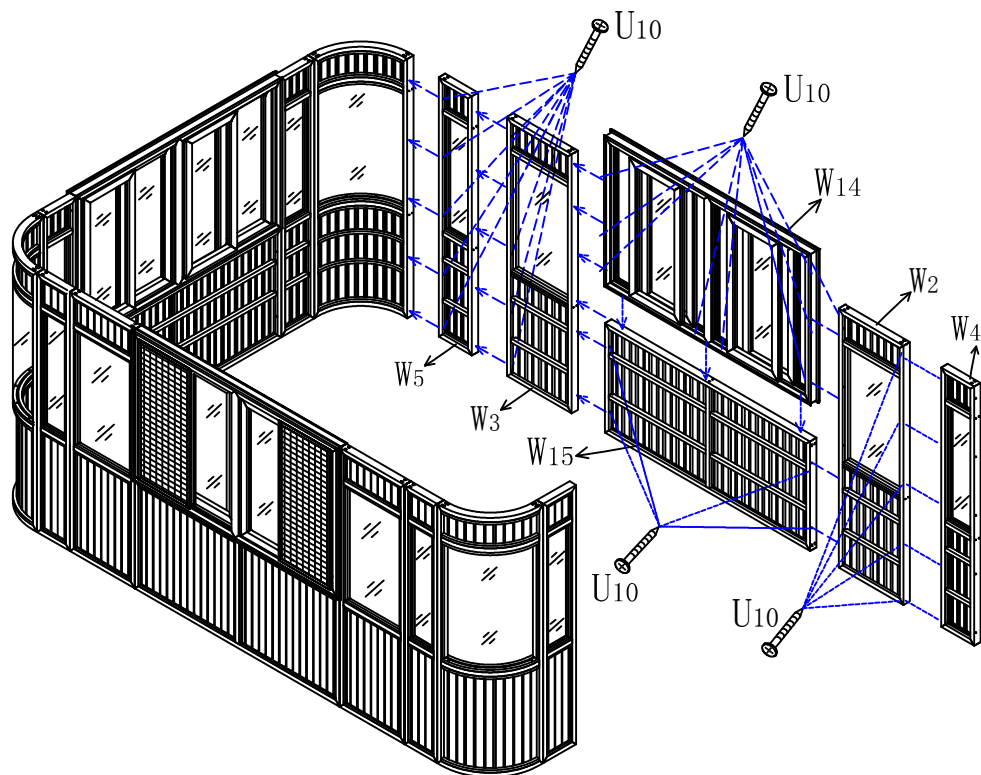


#6

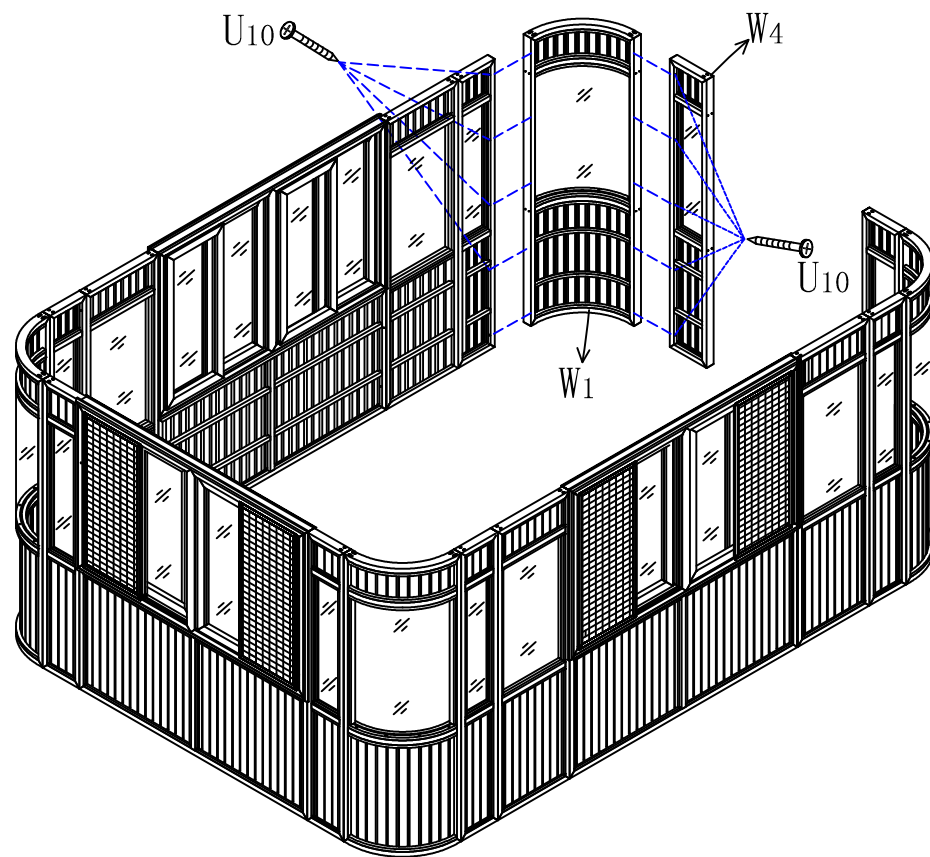


ASSEMBLY INSTRUCTION FOR 12'X16' ULTRAWOOD GAZEBO

#7

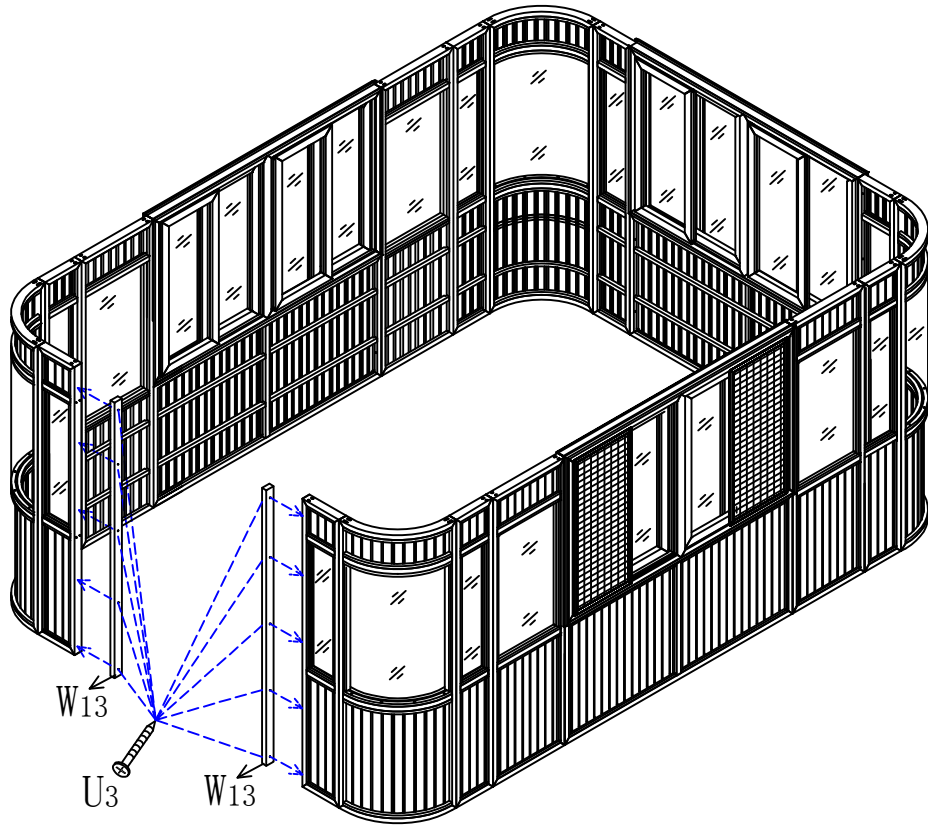


#8

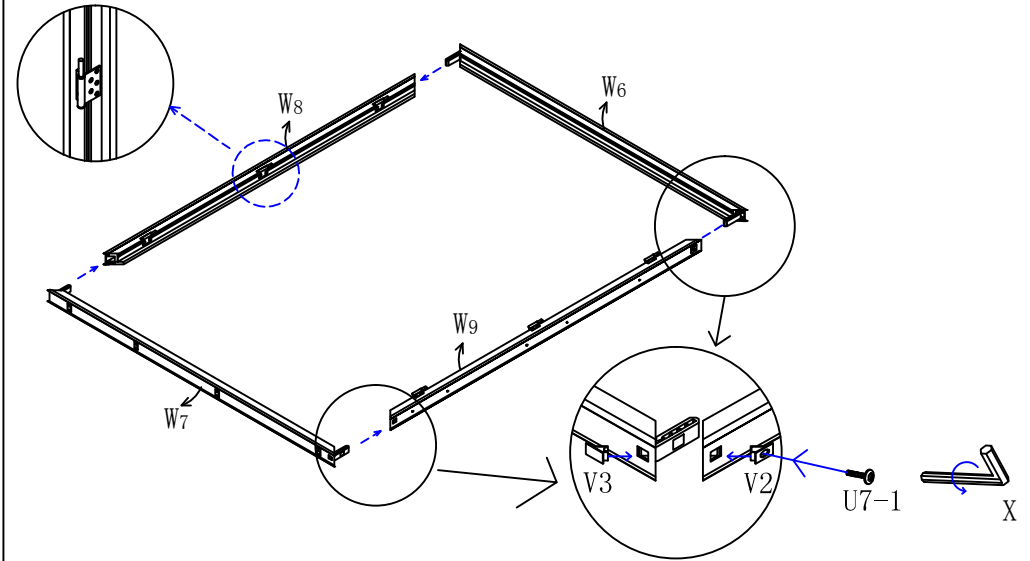


ASSEMBLY INSTRUCTION FOR 12'X16' ULTRAWOOD GAZEBO

#9

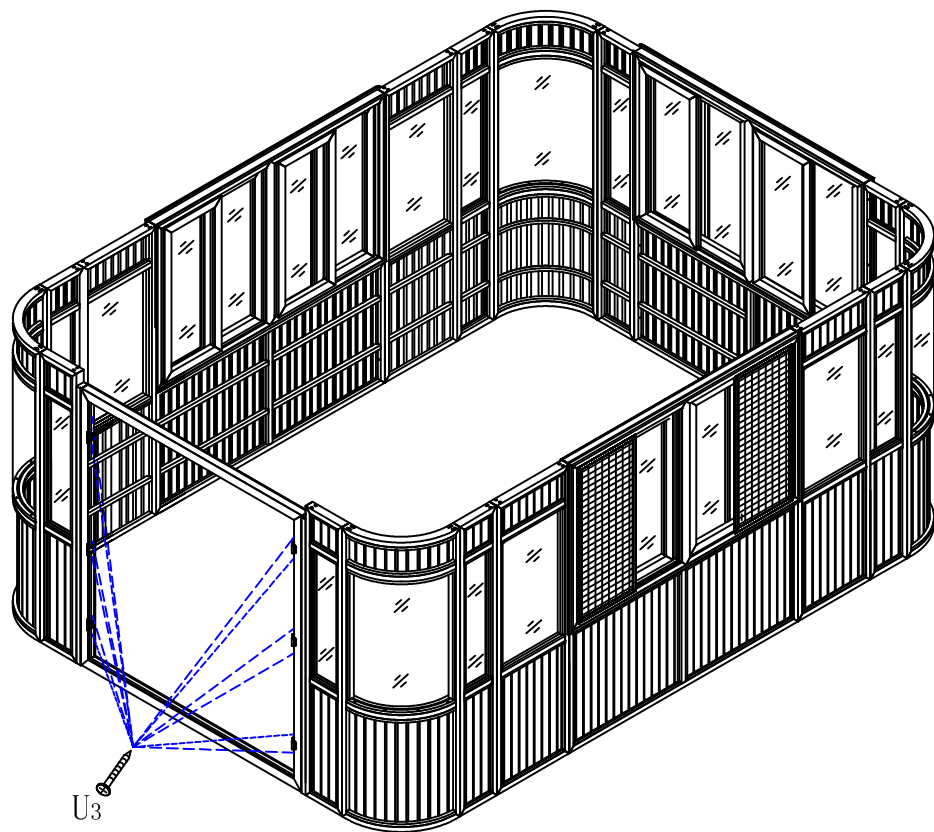


#10

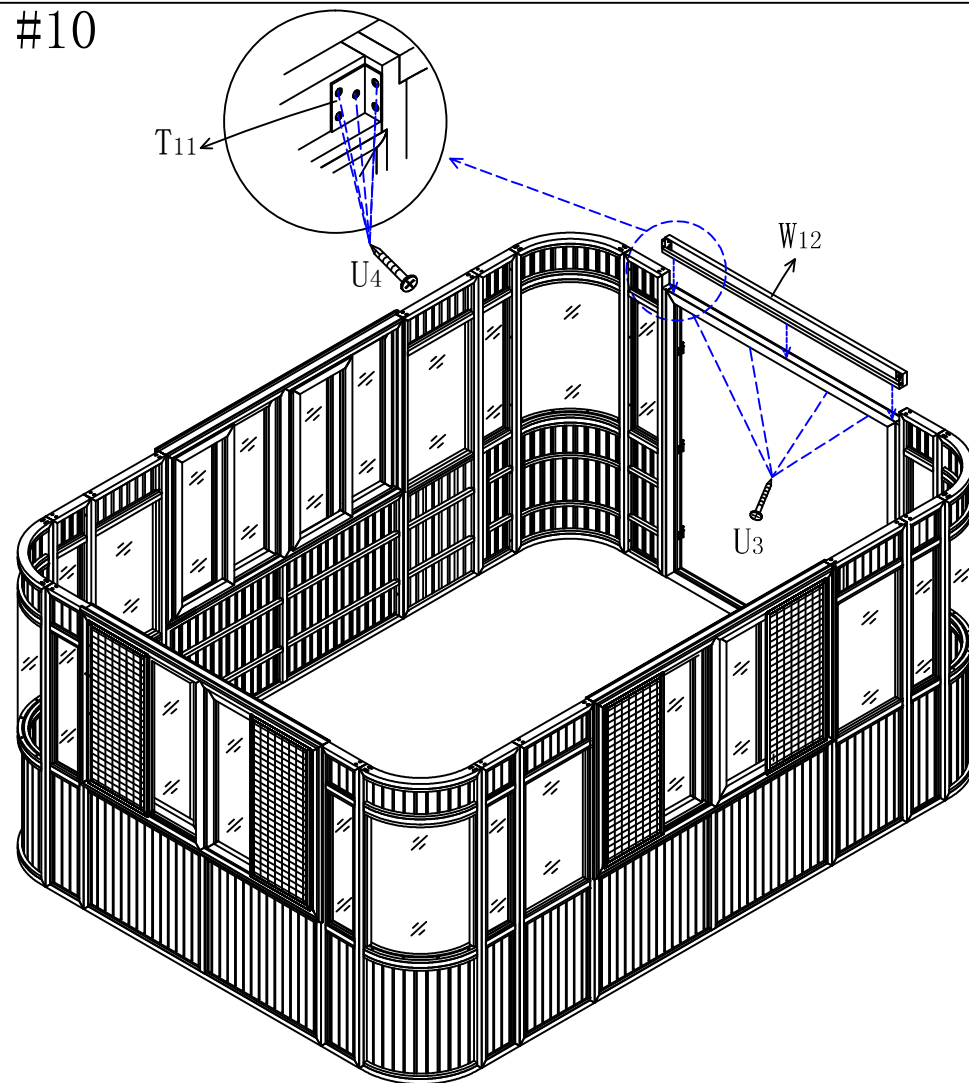


ASSEMBLY INSTRUCTION FOR 12'X16' ULTRAWOOD GAZEBO


#11

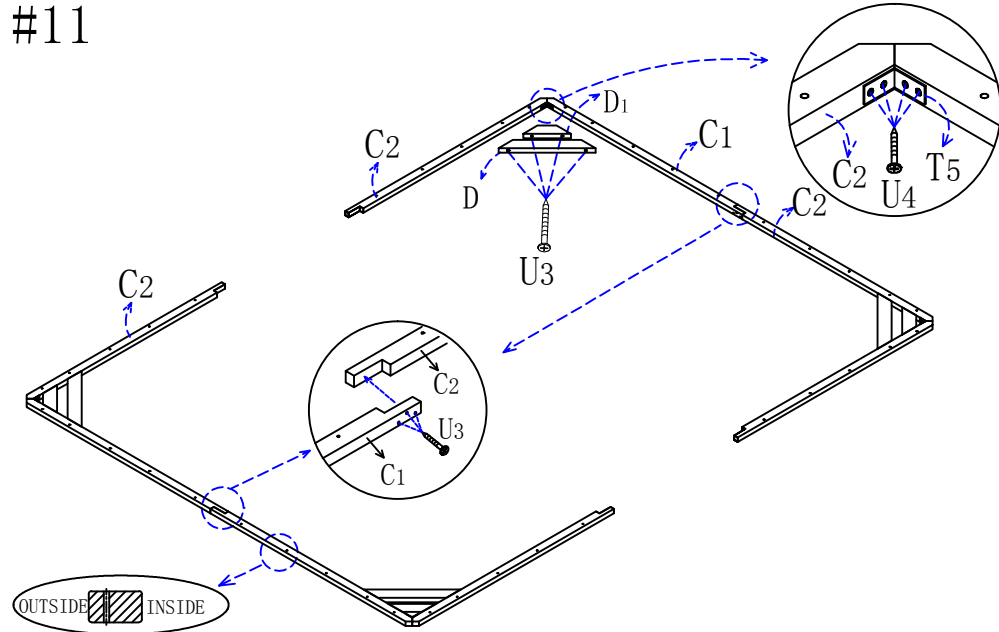


#12

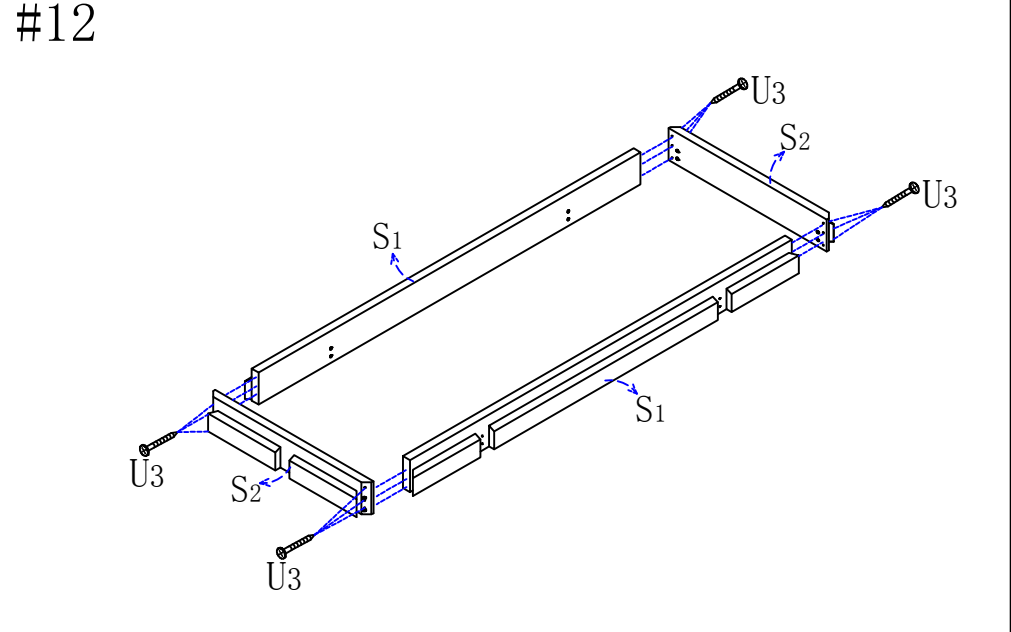

#13

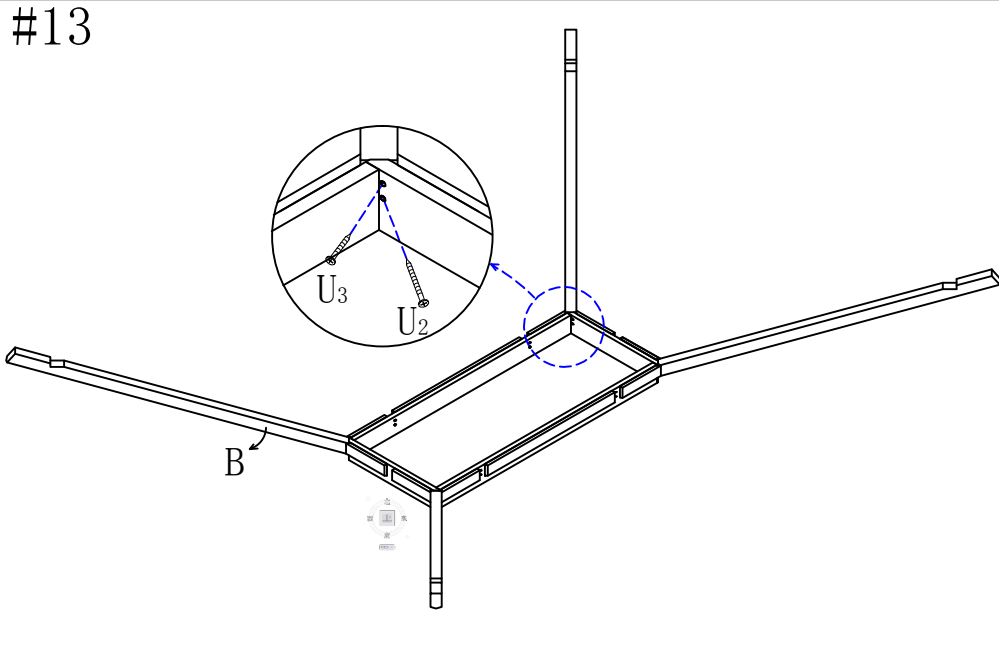


#14

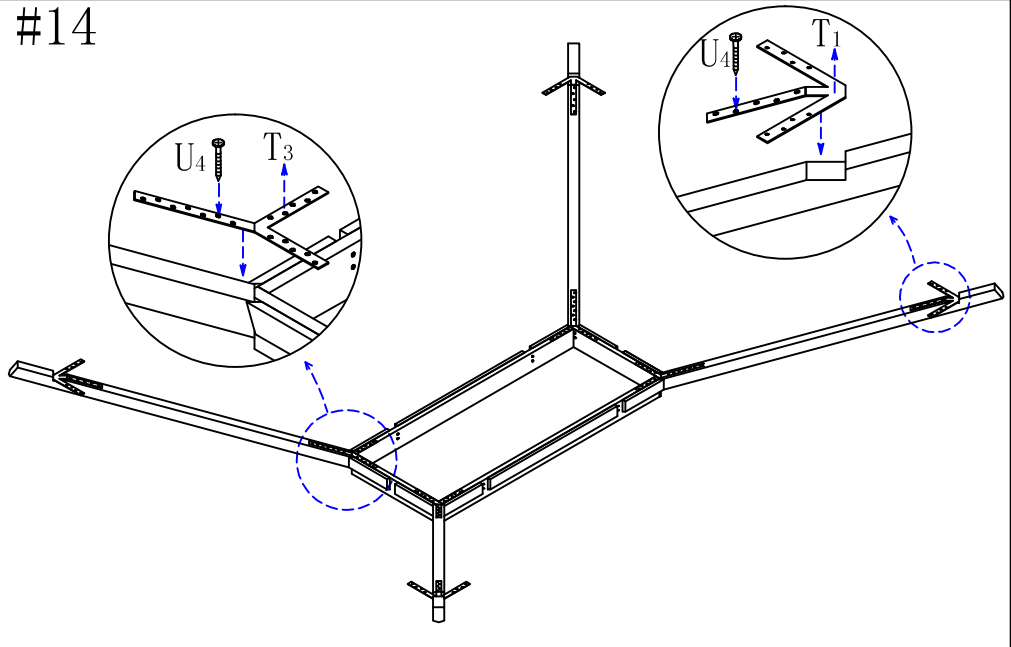


ASSEMBLY INSTRUCTION FOR 12'X16' ULTRAWOOD GAZEBO


#15

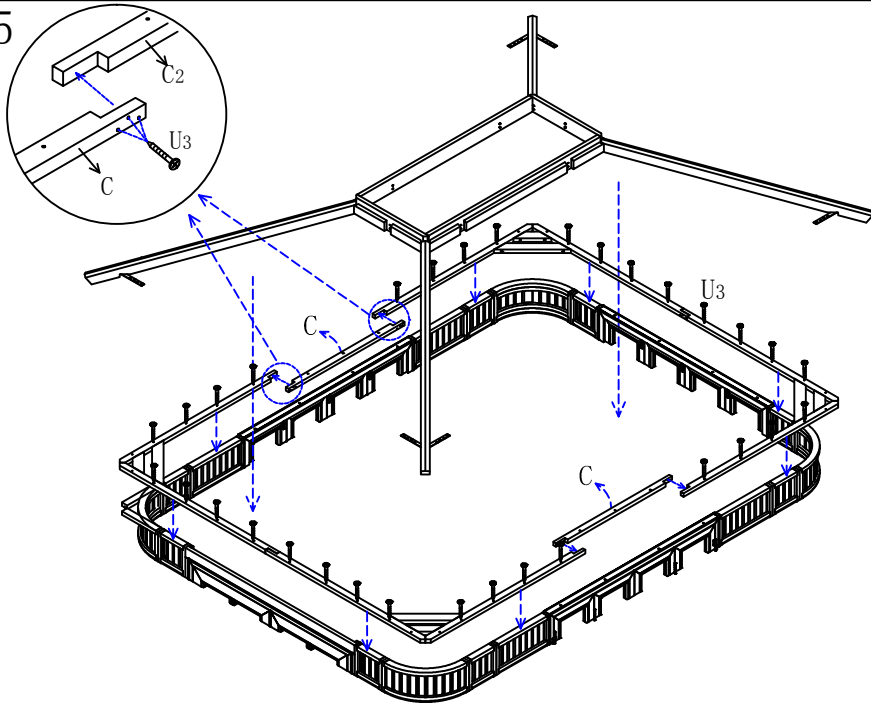


#16

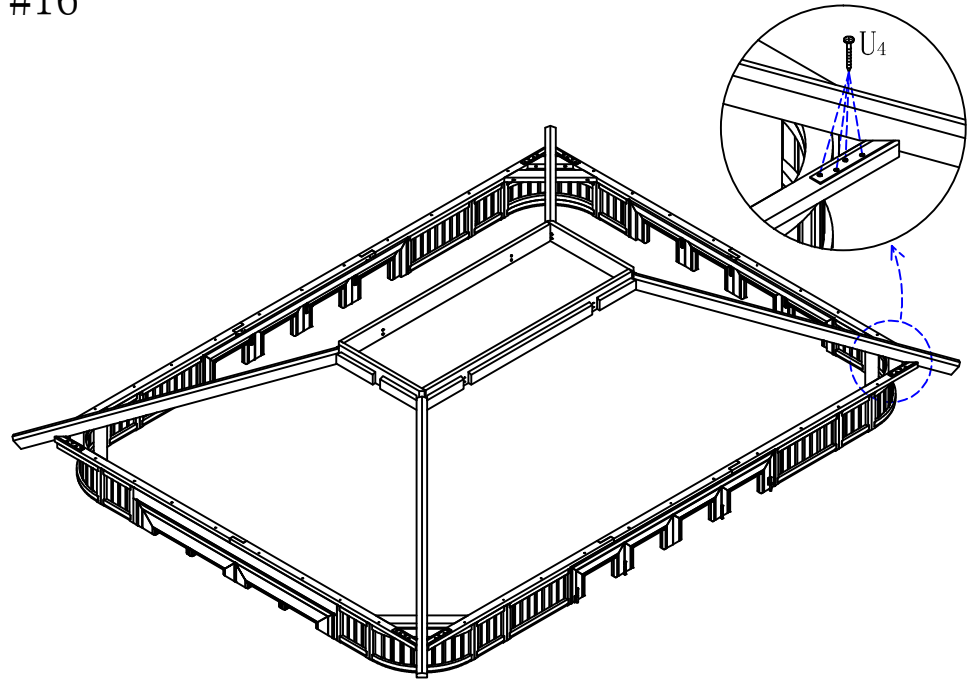

#17

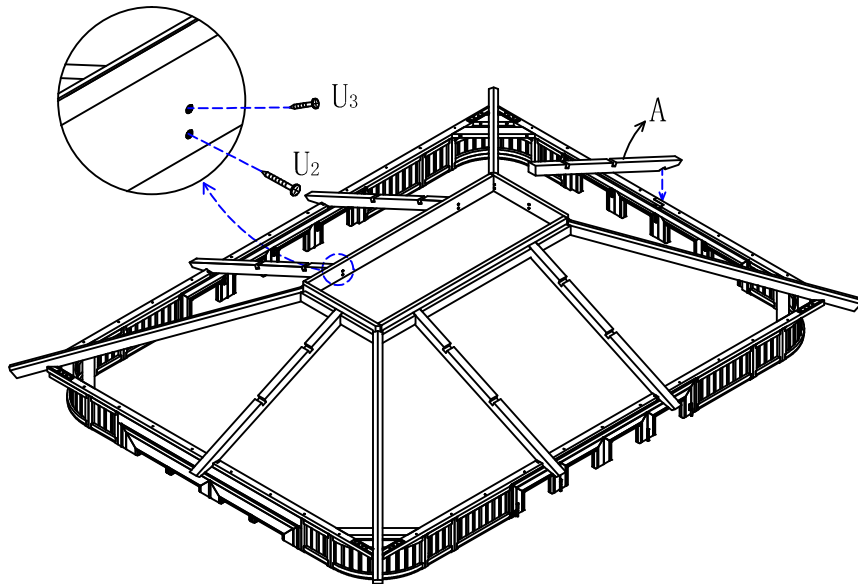


#18

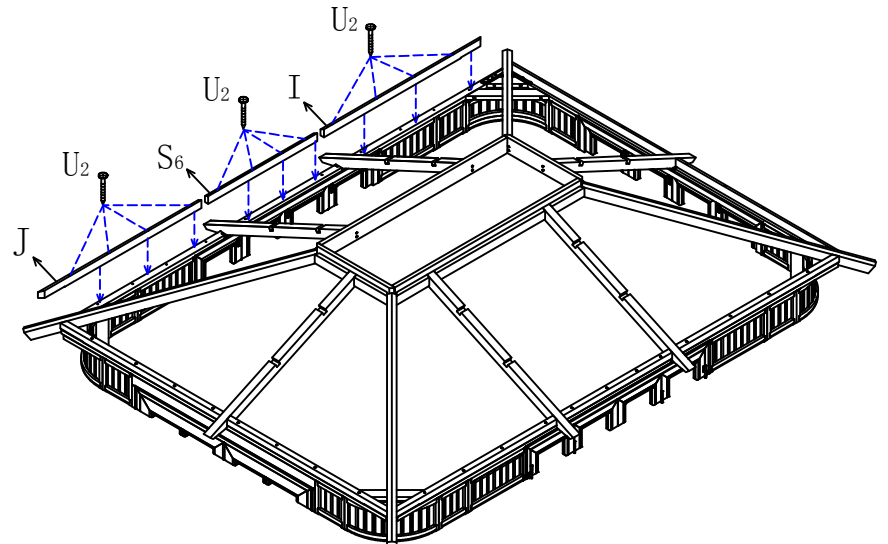


ASSEMBLY INSTRUCTION FOR 12'X16' ULTRAWOOD GAZEBO


#19

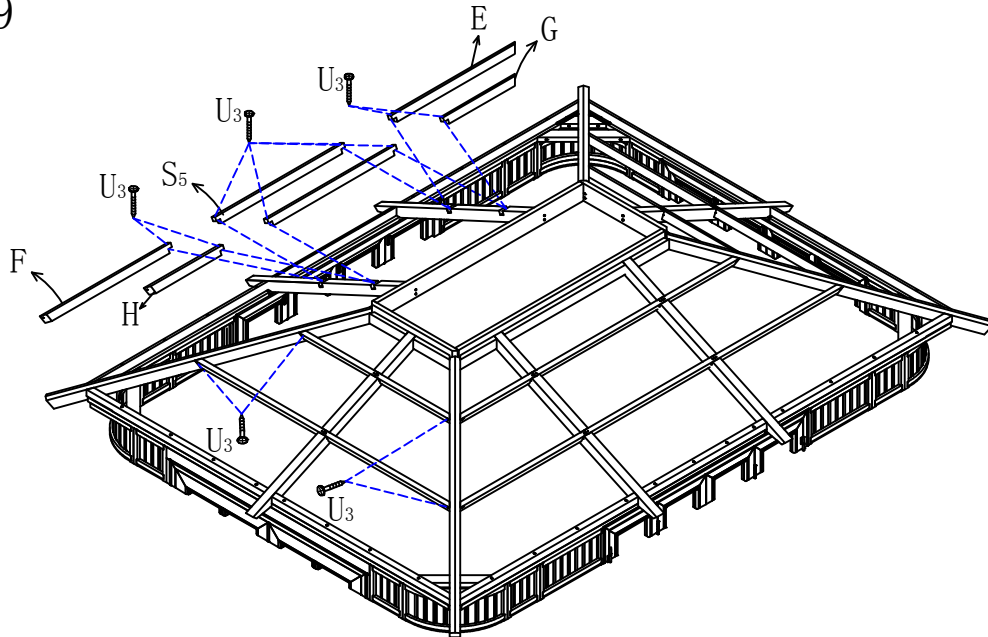


#20

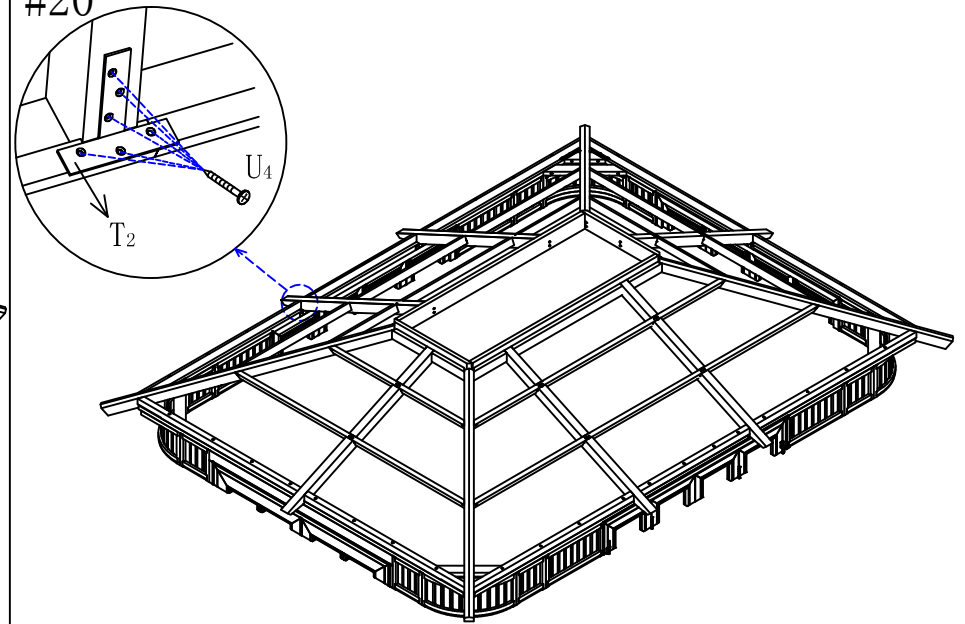

#21

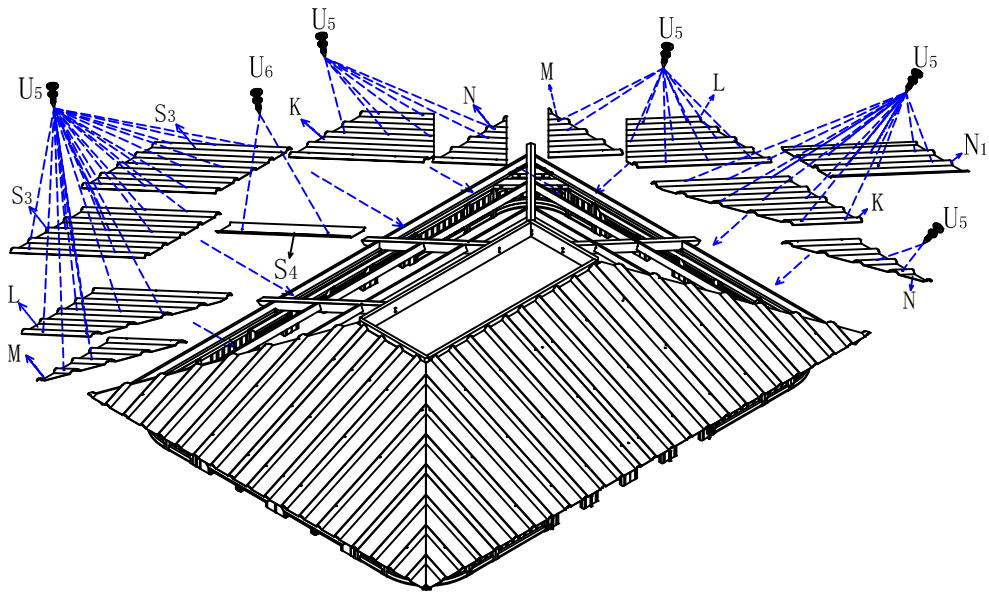


#22

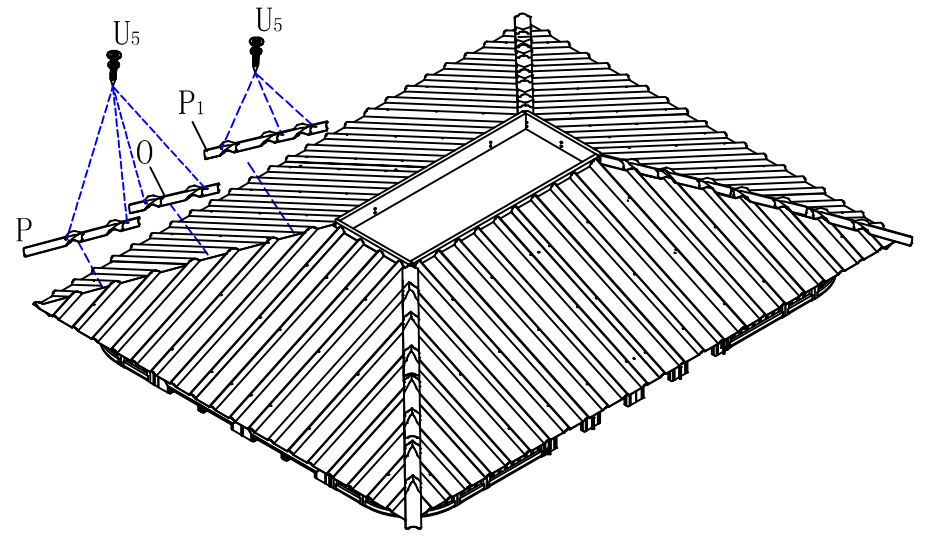


ASSEMBLY INSTRUCTION FOR 12'X16' ULTRAWOOD GAZEBO


#23

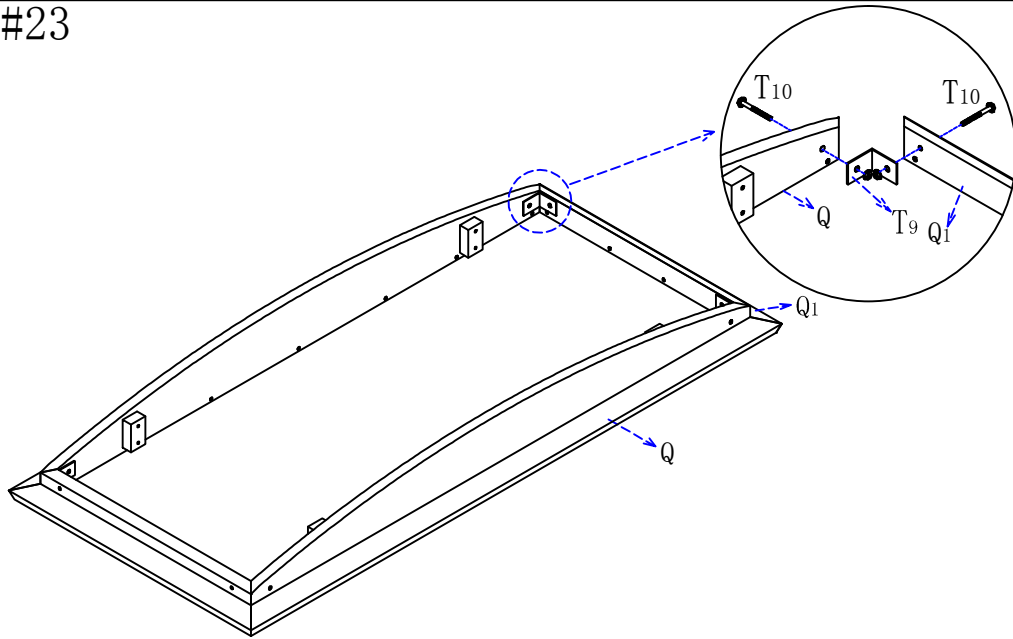

#25

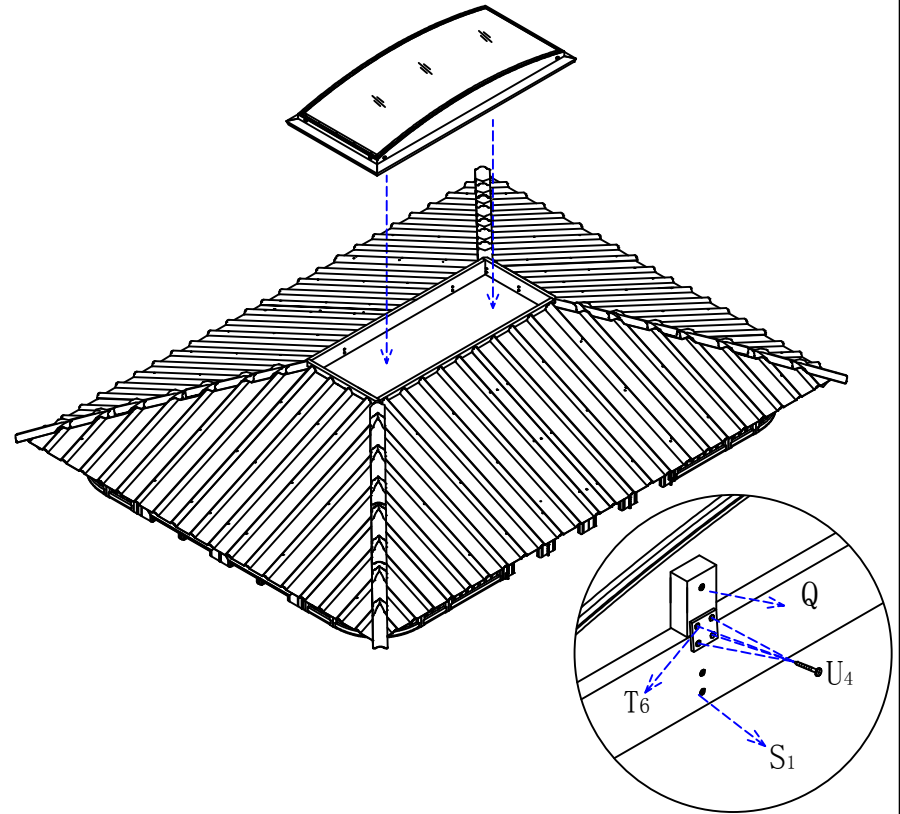


#24


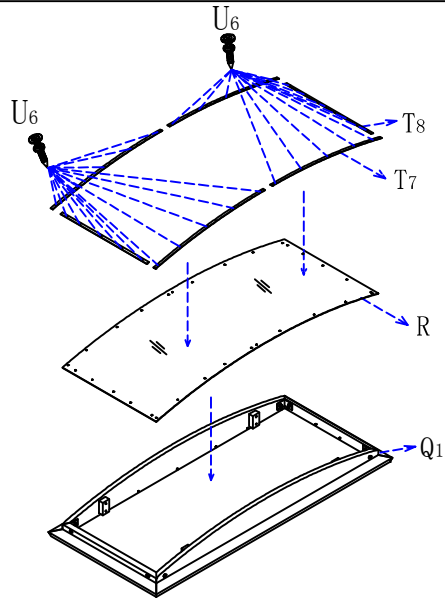


ASSEMBLY INSTRUCTION FOR 12' X 16' ULTRAWOOD GAZEBO

#26

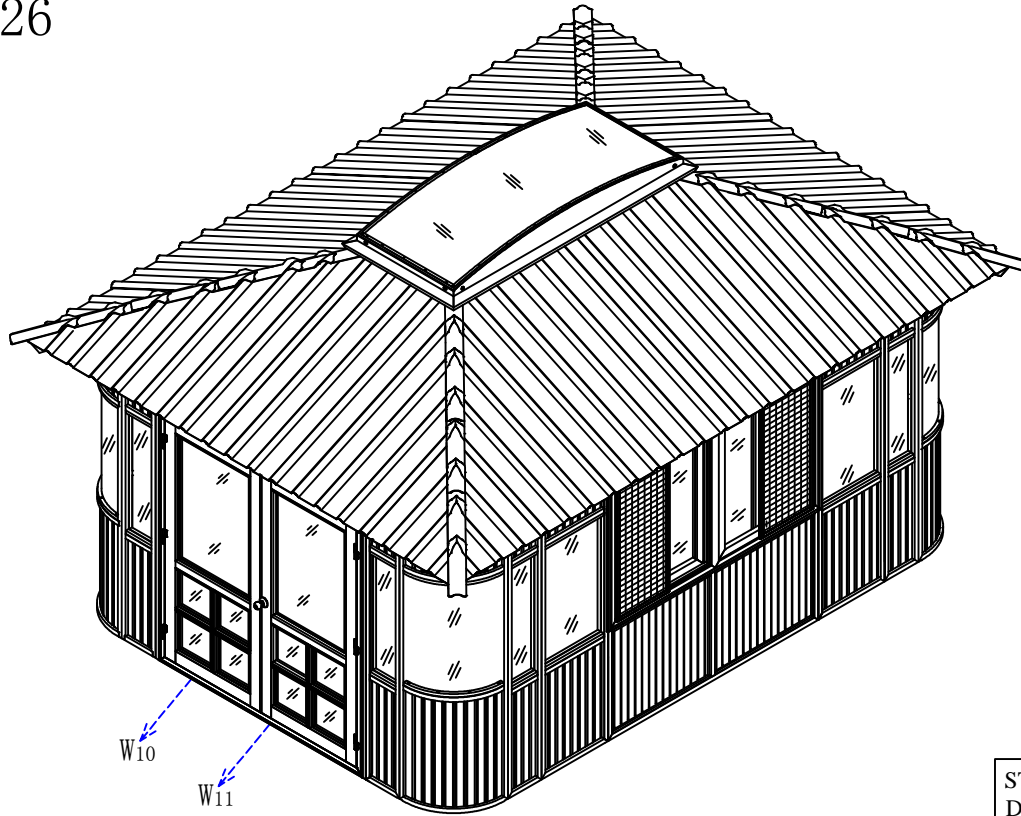







Install shims for smooth operation.

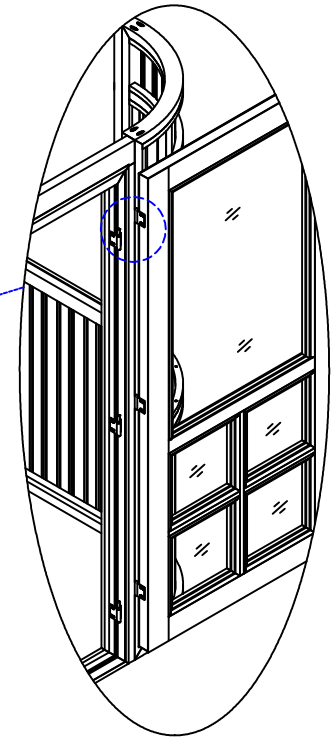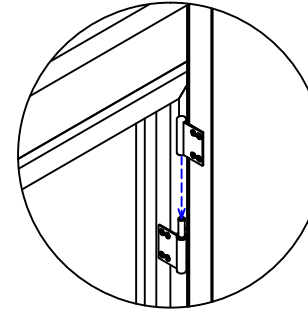

W10
W11



Install handle /lock assembly
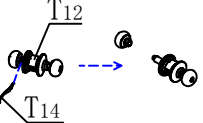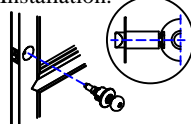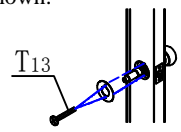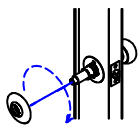
<p>STEP 1: Door Lock Installation.</p>  <p>Remove door lock handle by pressing the knob in the gap for installation.</p>	<p>STEP 2: Remove door lock cover ring and inner lock ring.</p> 	<p>STEP 3: Door Lock Handle Installation.</p>  <p>Install door lock handle into door hole and lock the end part of the door handle.</p>
<p>STEP 4: Install door lock inner ring with screw that shown.</p> 	<p>STEP 5: Door Lock Cover Ring Installation.</p> 	<p>STEP 6: Door Lock Handle Installation</p>  <p>Complete the installation by pushing the door lock handle to the inner part of door lock.</p>

ASSEMBLY INSTRUCTION FOR 12' X 16' ULTRAWOOD GAZEBO

#27

