
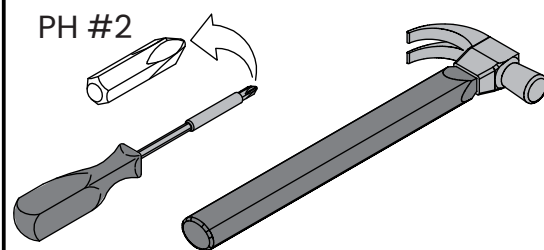
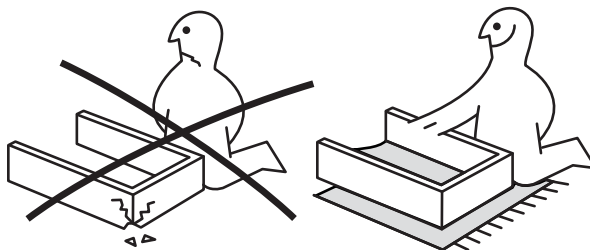
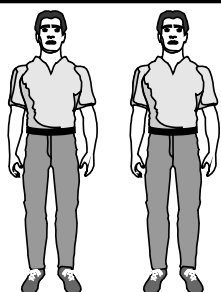
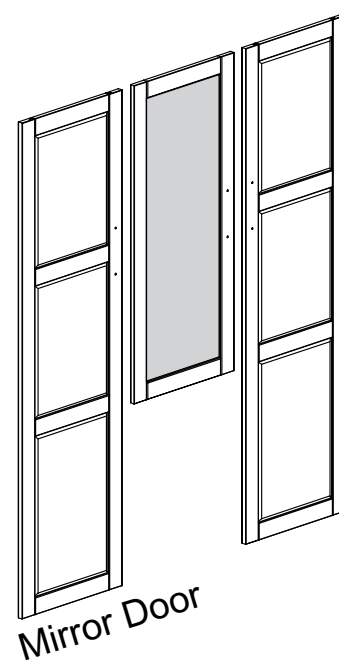


ASSEMBLY INSTRUCTIONS

COSMO 3-DOOR WARDROBE


SKU 7111D / 7111M - White
SKU 7113D / 7113M - Mocha
SKU 7115D / 7115M - Gray
SKU 7116D / 7116M - Java
SKU 7117D / 7117M - Black

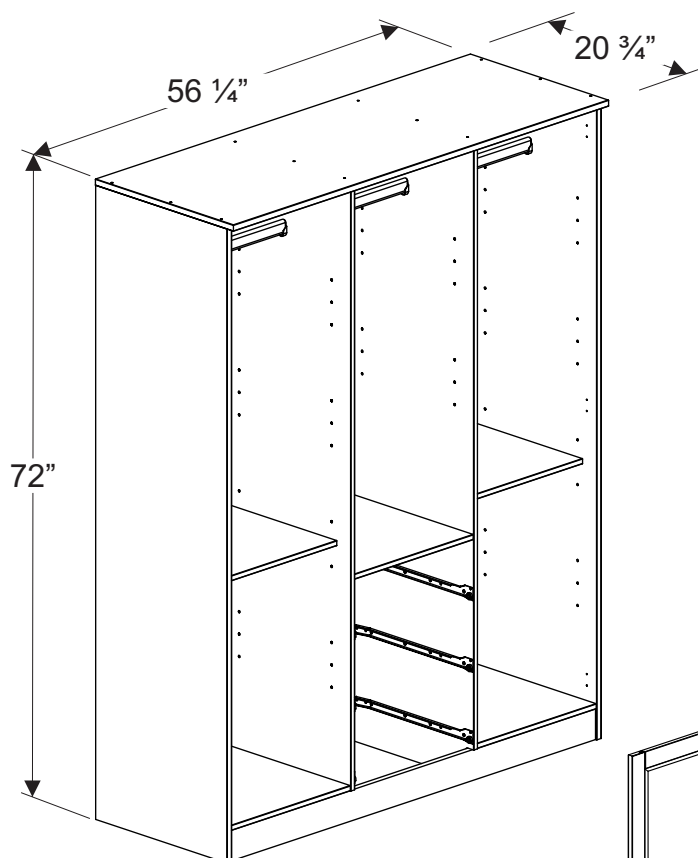










PRE-ASSEMBLY PREPARATION


- Please check the contents before assembling. A full checklist of parts is provided below.
- If any parts are missing or damaged, please contact us at info@palaceimportsinc.com
- Assemble on a flat, smooth surface on top of a blanket.
- Use only low-speed power drill setting.
- Assemble as near as possible to the point of use.
- The hardware pack contains SMALL ITEMS which should be KEPT AWAY FROM YOUNG CHILDREN.

PARTS DIAGRAM

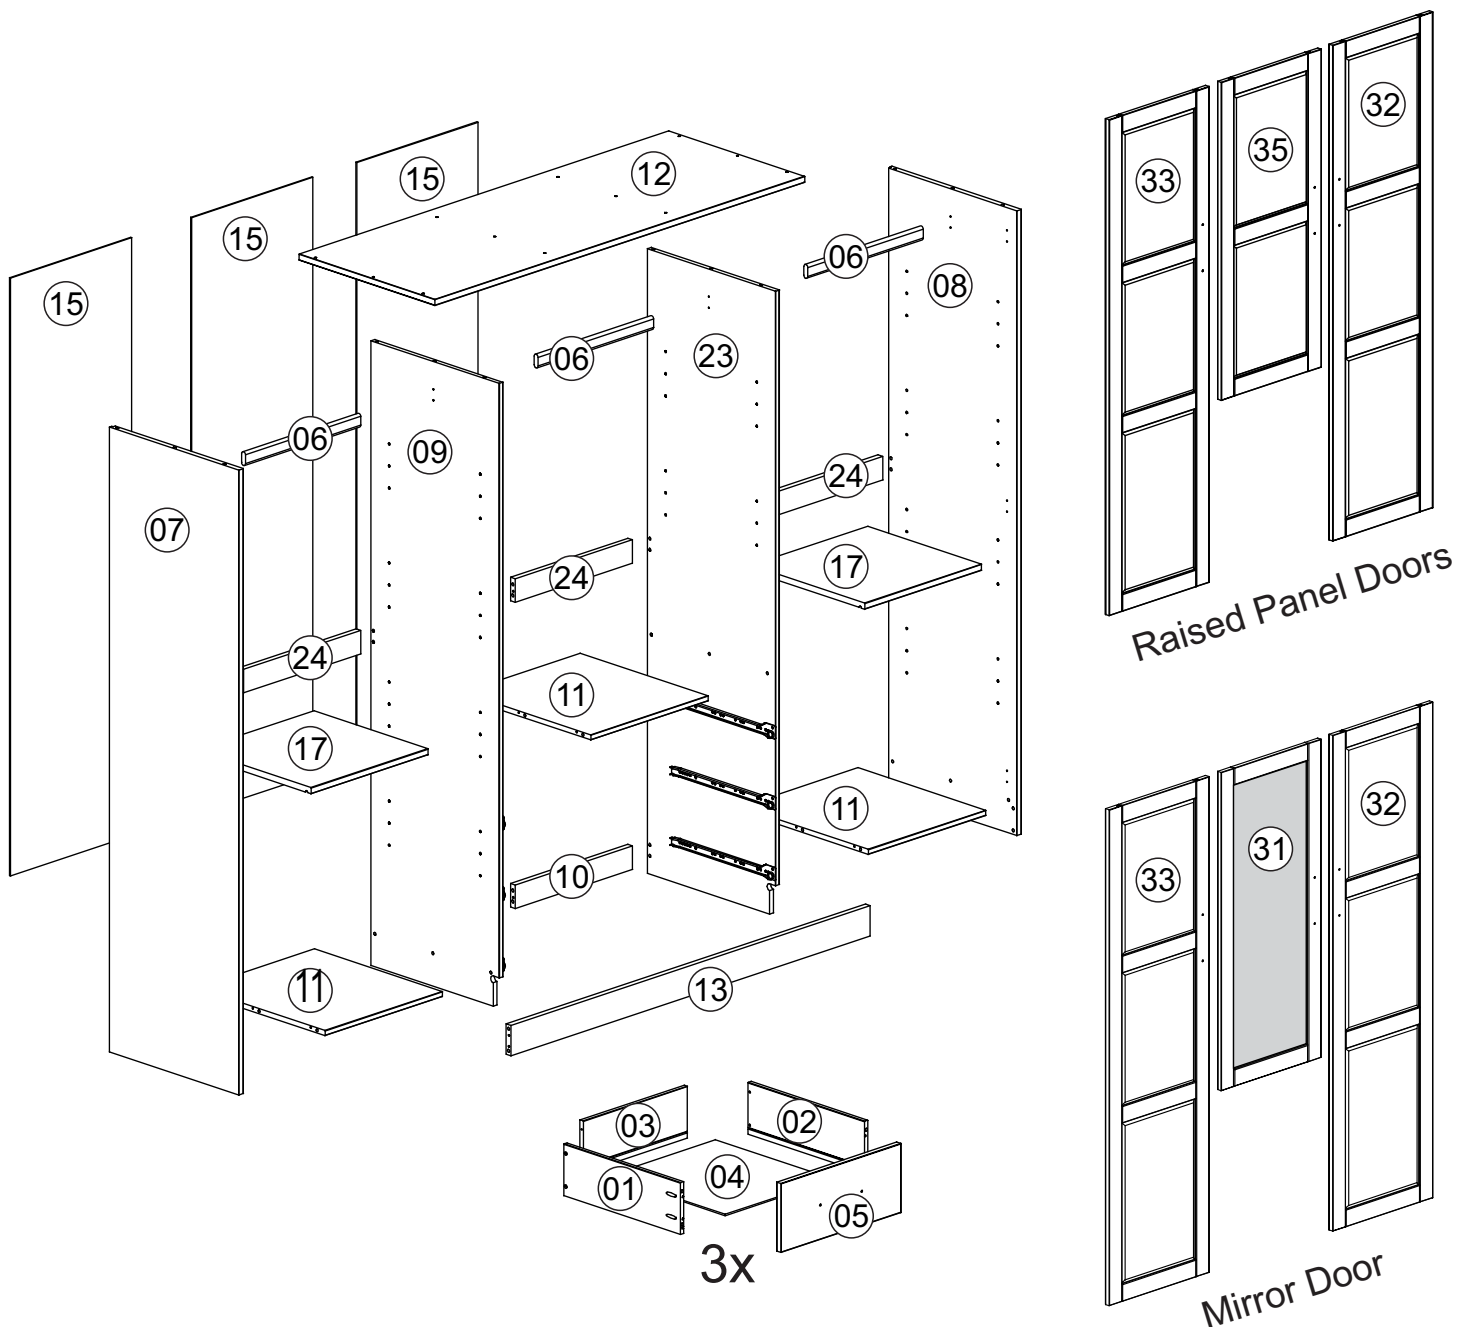

SCREWS ARE SHOWN IN ACTUAL SIZE


A1	 4,0x30	54+2
A16	 4,0x40	12+1
A25	 M4x25	12+1
A42	 4,0x14	24+1
A44	 3,5x14	50+2
C2	 8,0x25	62+3
D4		08+1
D10		06
D16		02
D27		10+1
E17	 450mm - 17 3/4"	03
E18	 450mm - 17 3/4"	03
F10		09
G1	 10x10	62
H12		06

FURNITURE ANTI-TIP KIT		
A8	 3,0x20	02+1
F8		02
F9		01

WARNING:
 **CHOKING HAZARD**
 Small Parts.
 Adult Supervision Required.
 Not for children under 3 years old.



WARNING:
 **FURNITURE TIPOVER CAN RESULT IN SERIOUS INJURY OR DEATH**
 This wardrobe includes tipover-prevention hardware that **MUST BE ATTACHED TO THE WALL** per the assembly instructions.

01)

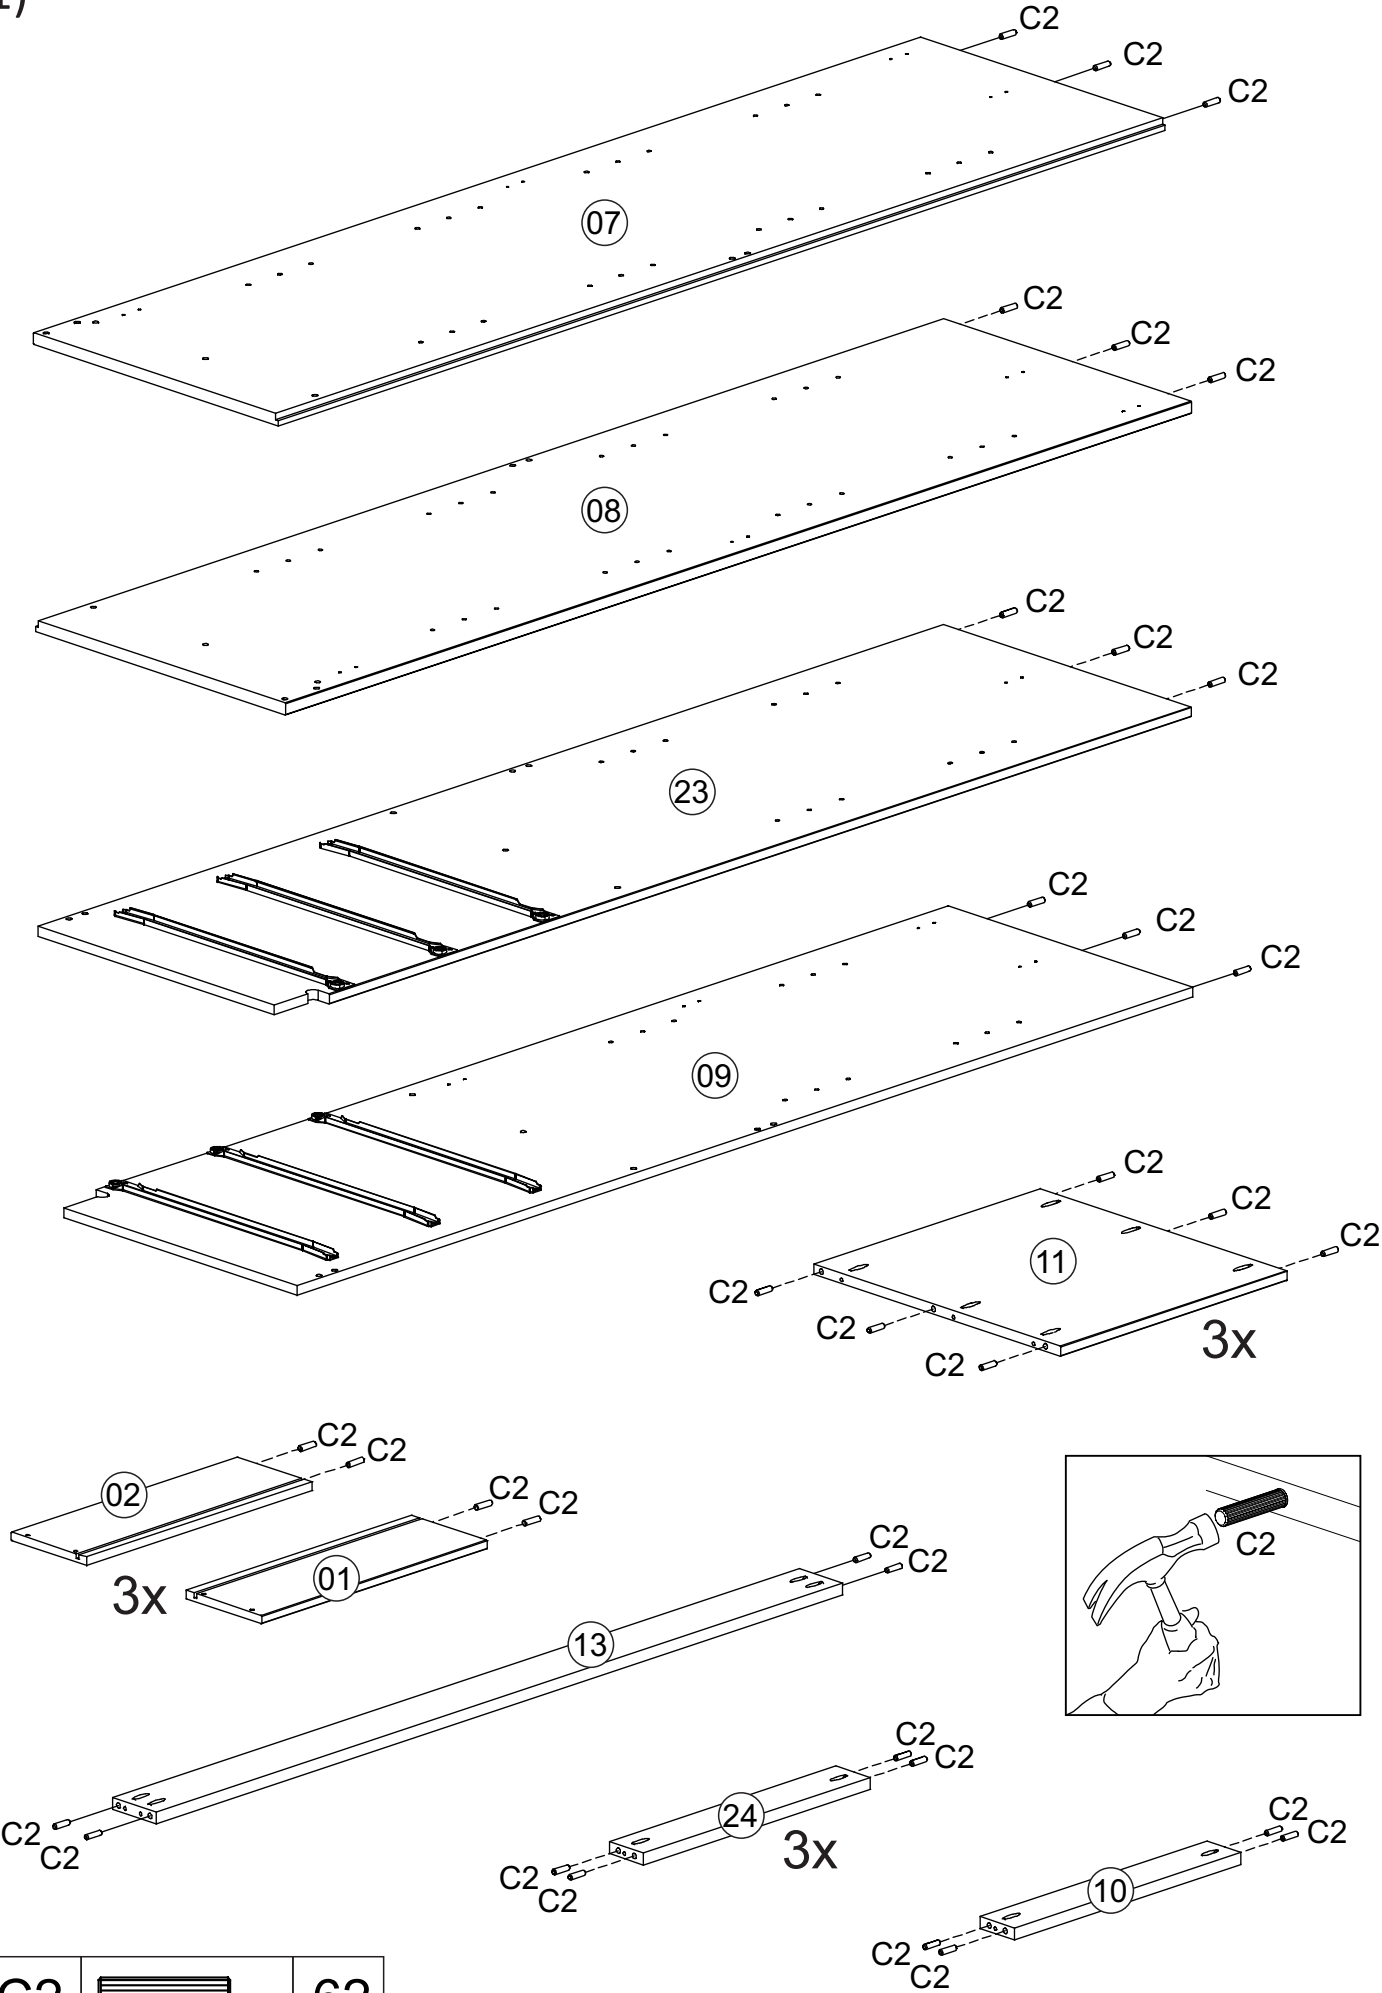



C2		62
8,0x25		

02)

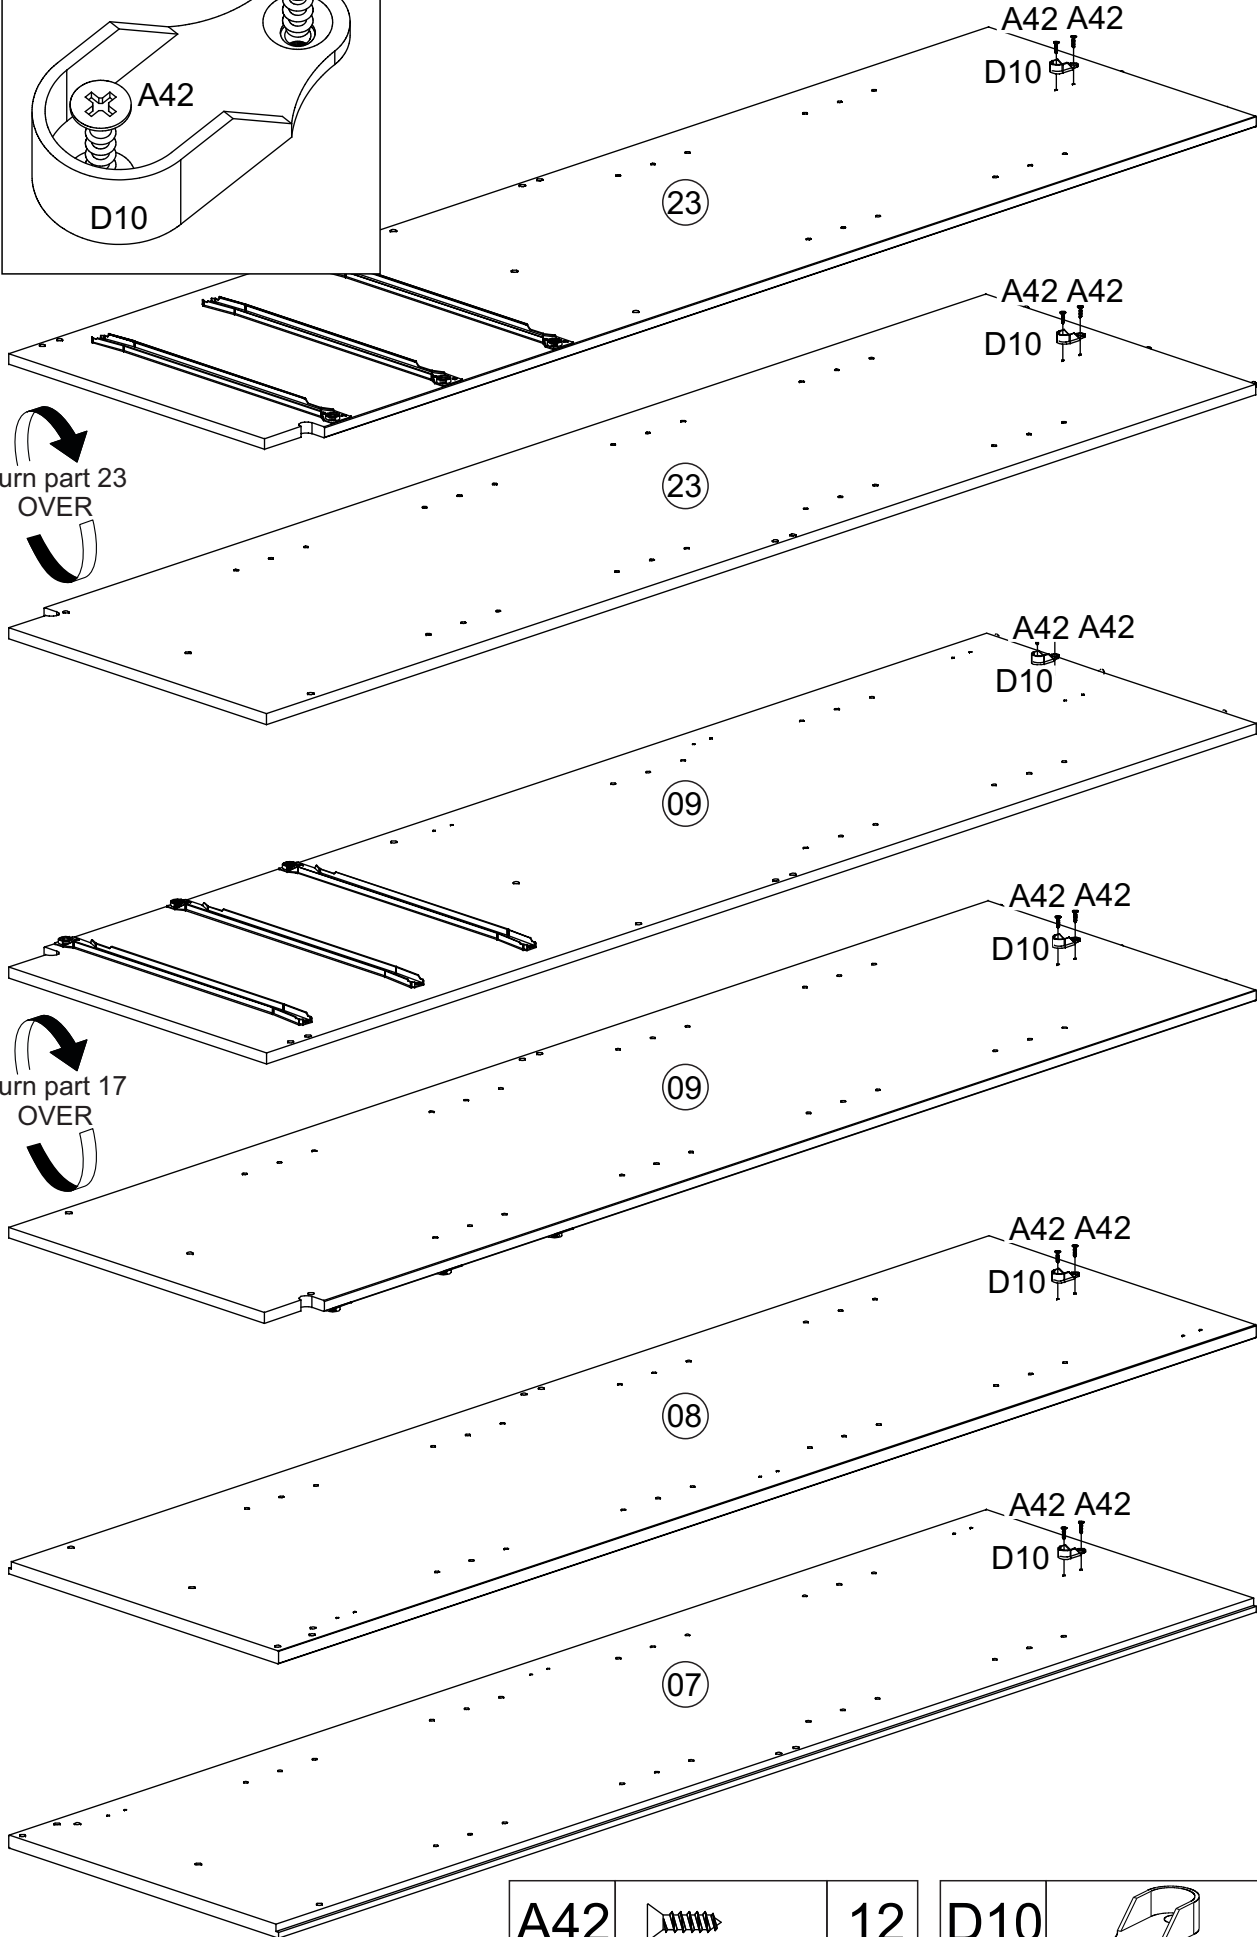
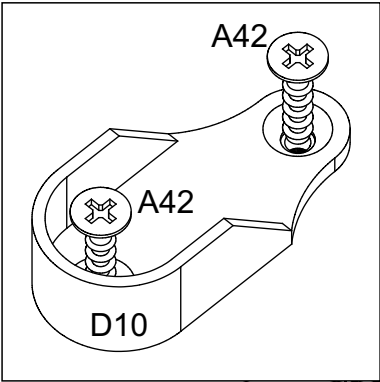


A42		12	D10		06
4,0x14					




03)

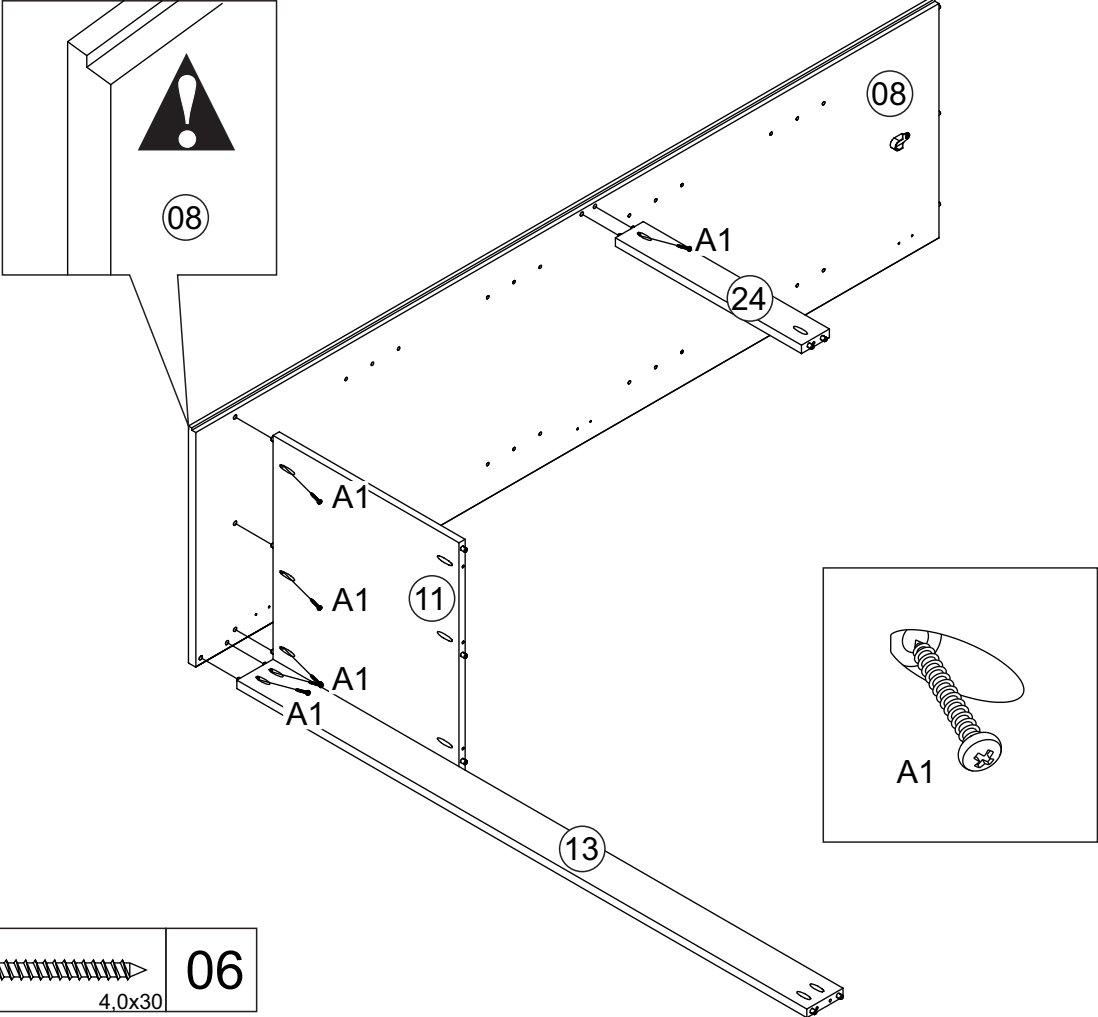




04)

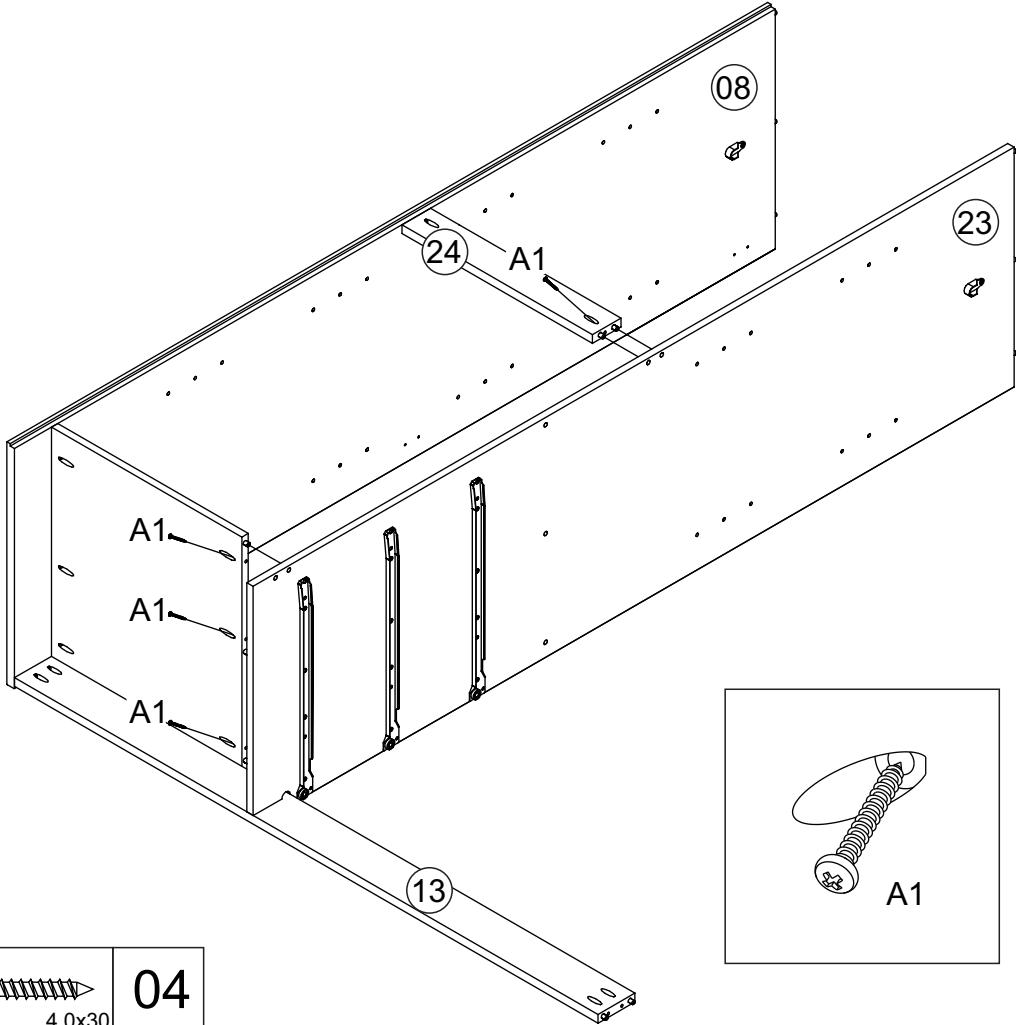




05)

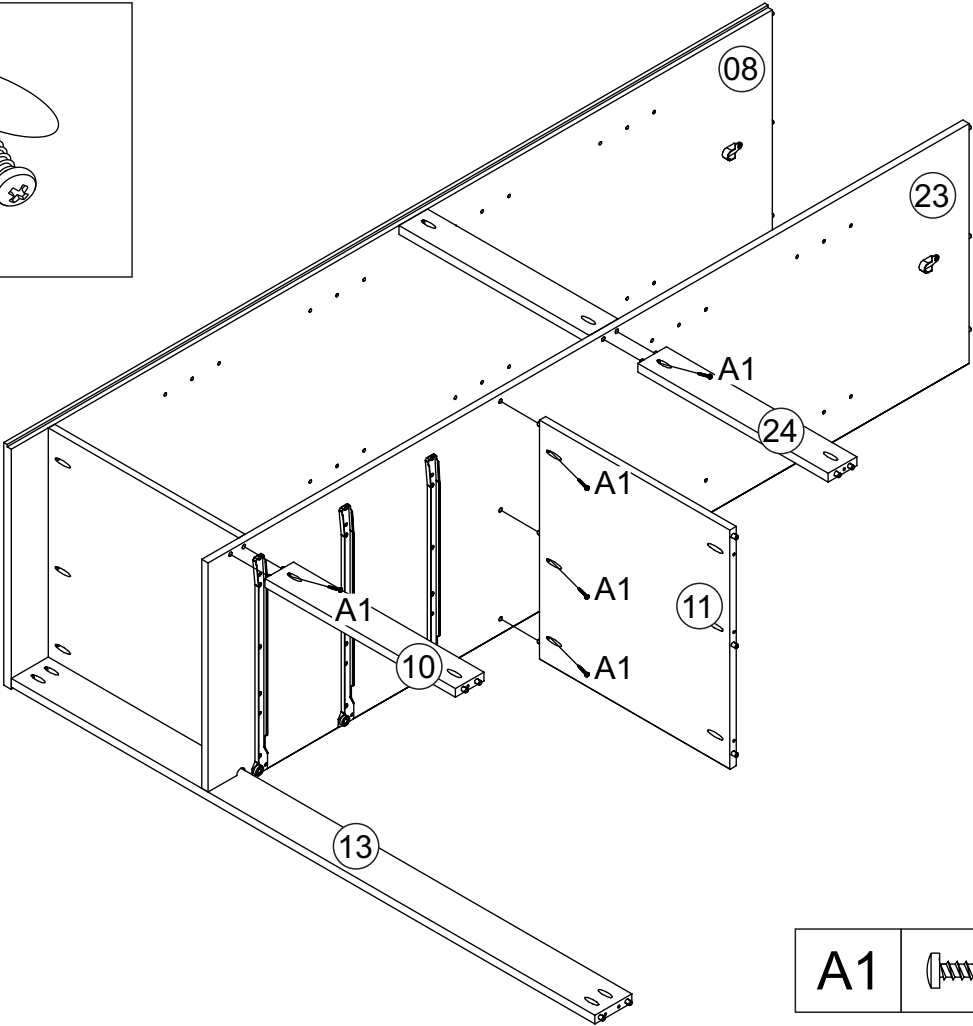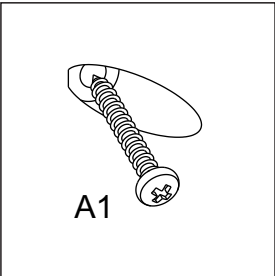




06)

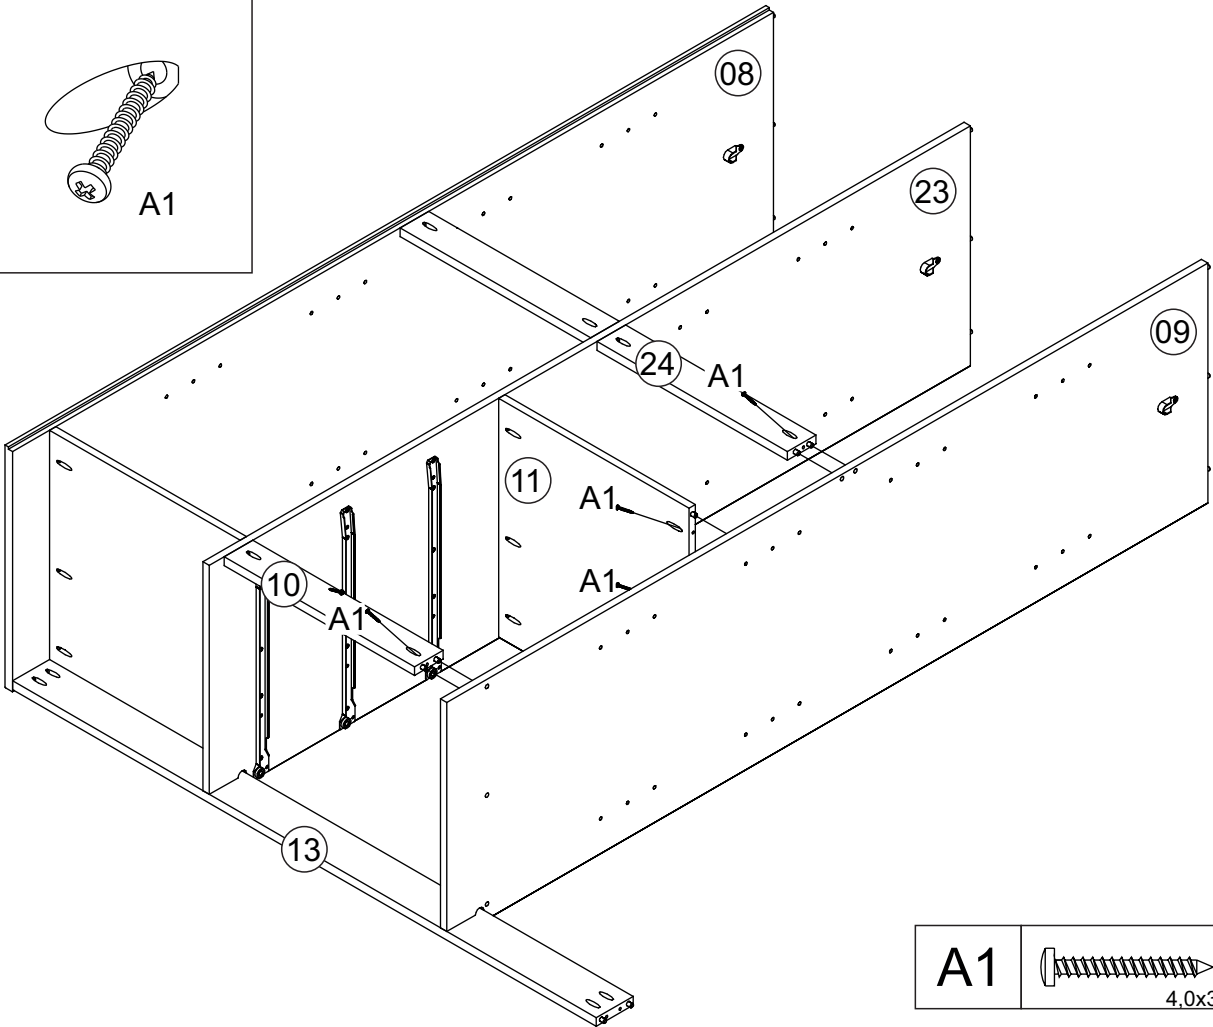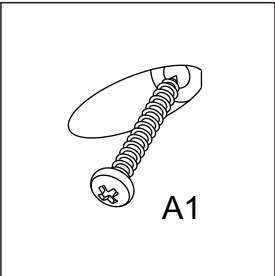


07)

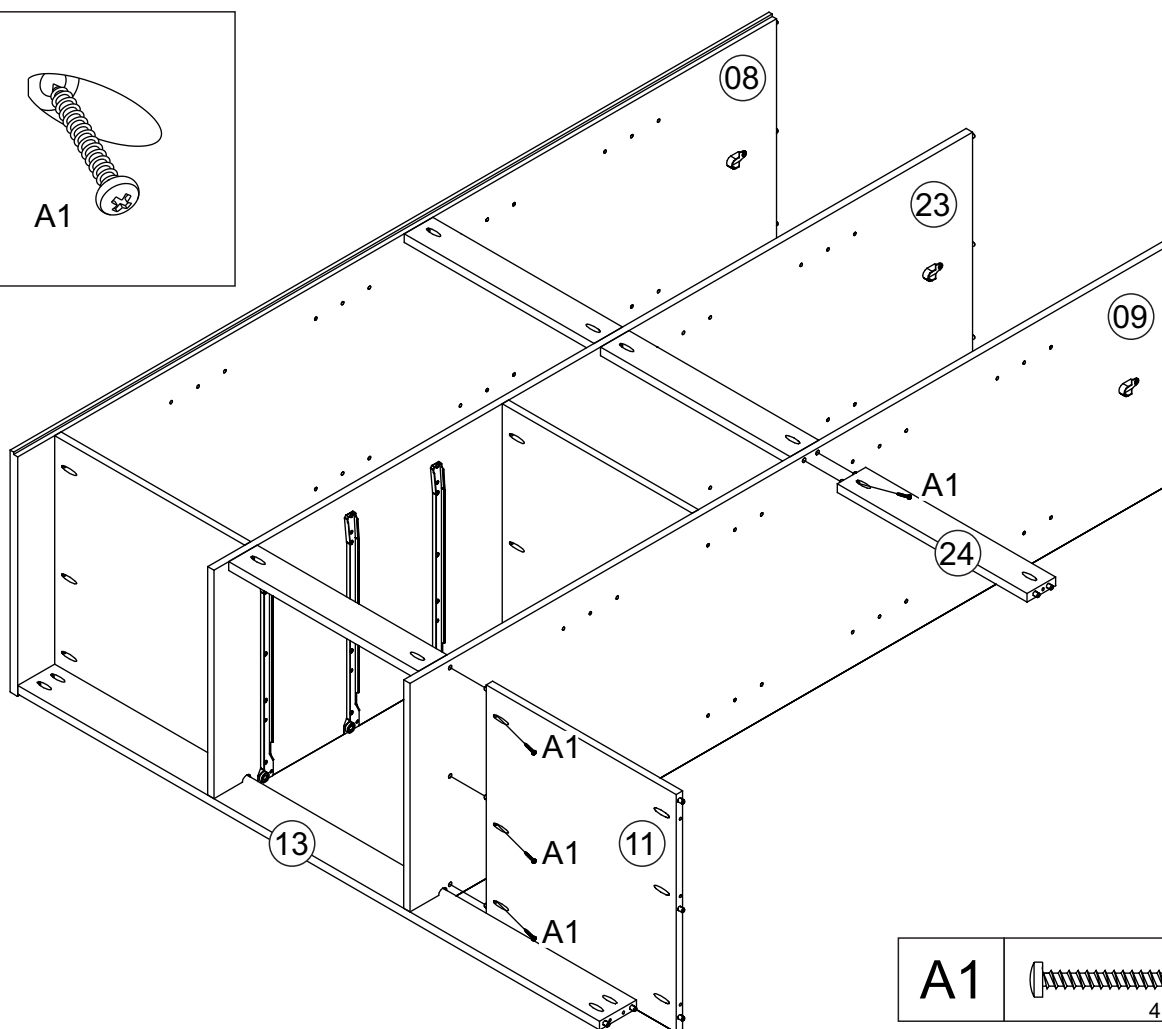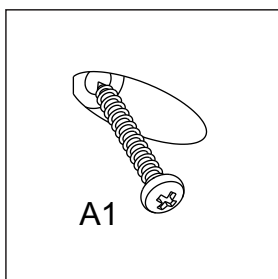


08)


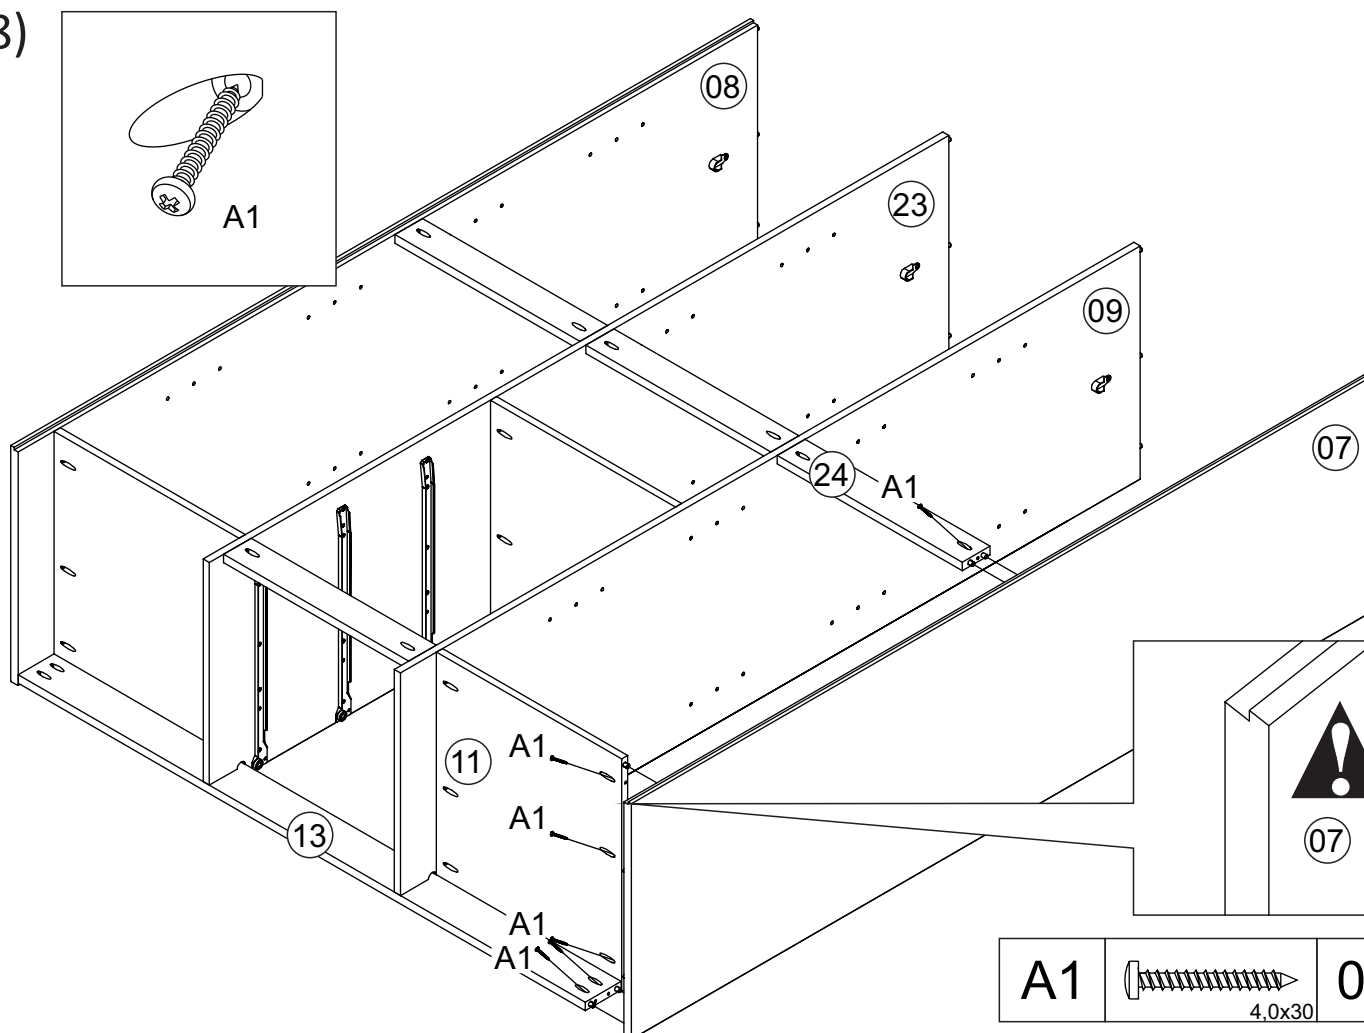
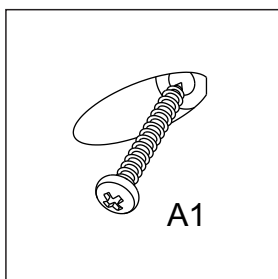



09)

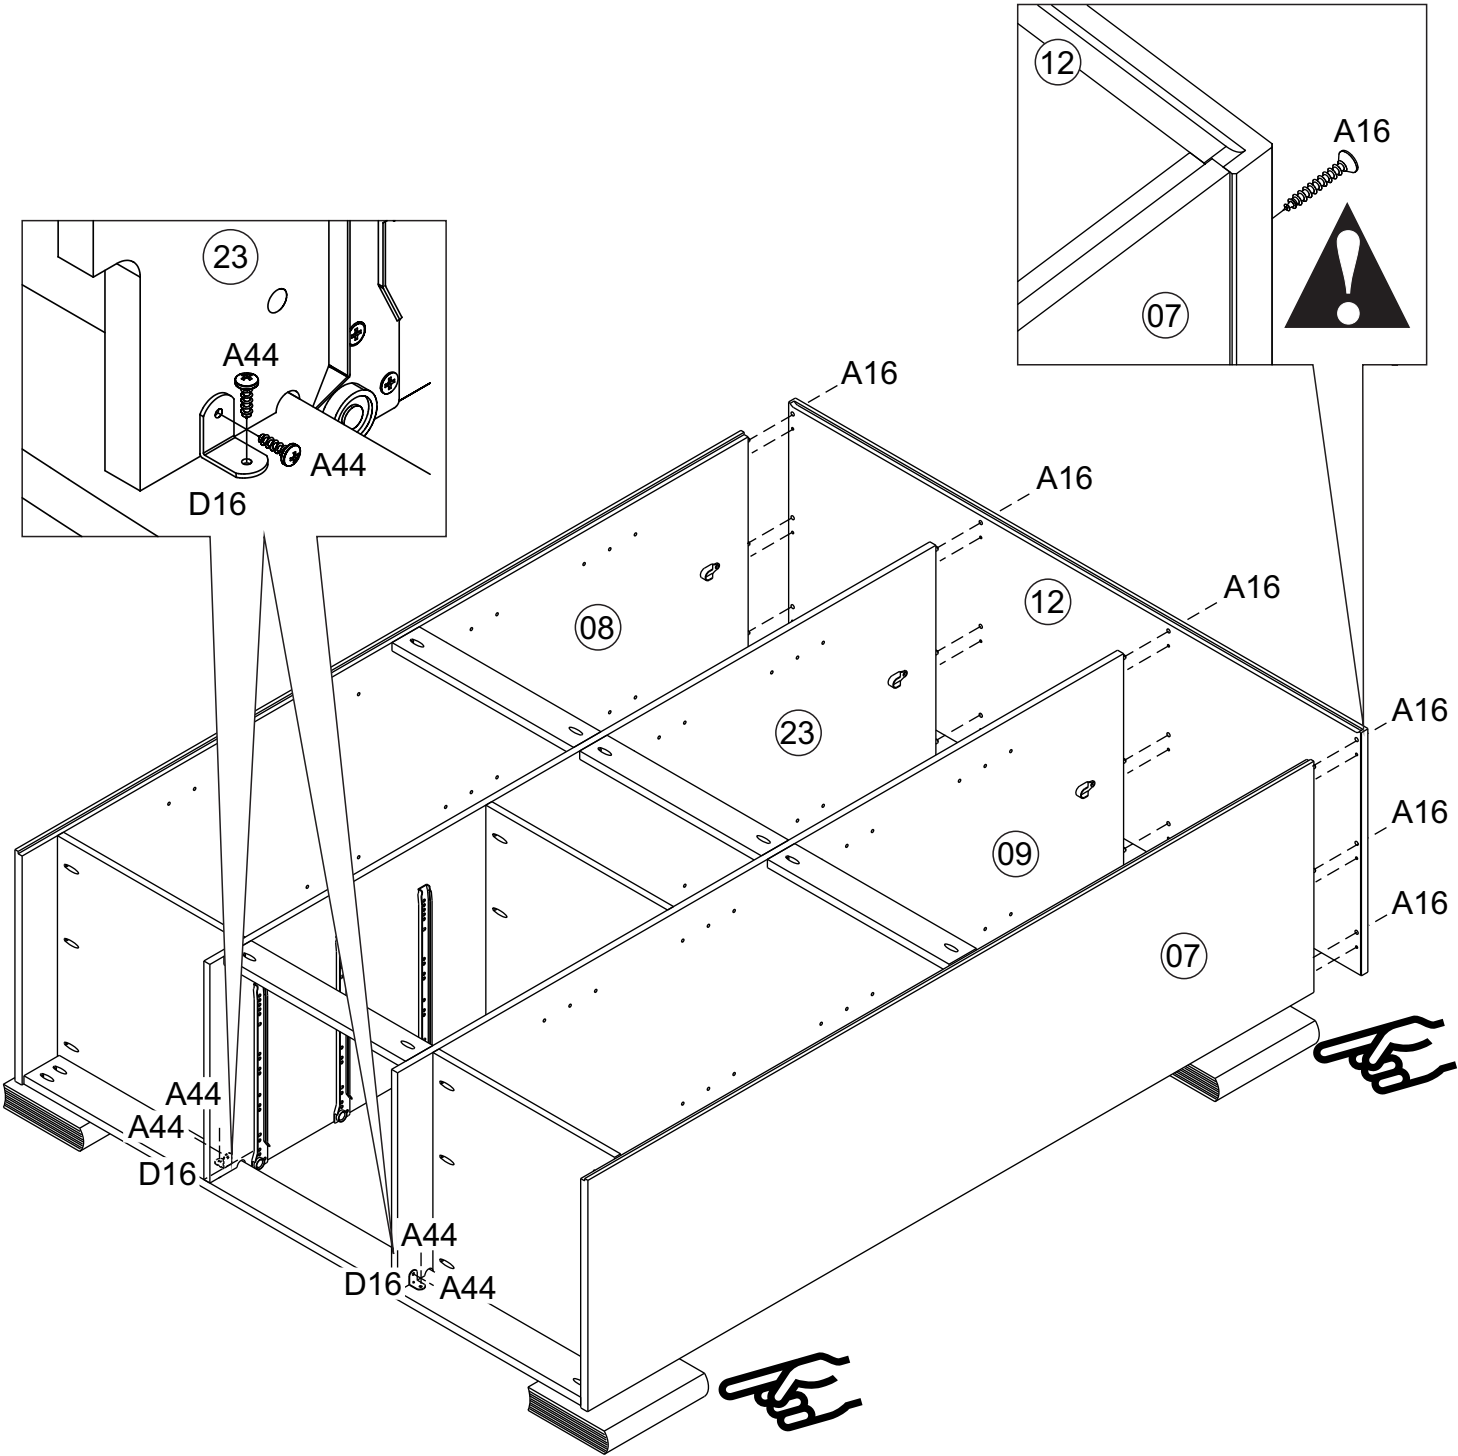

A16	 4,0x40	12
A44	 3,5x14	04
D16		02


10)

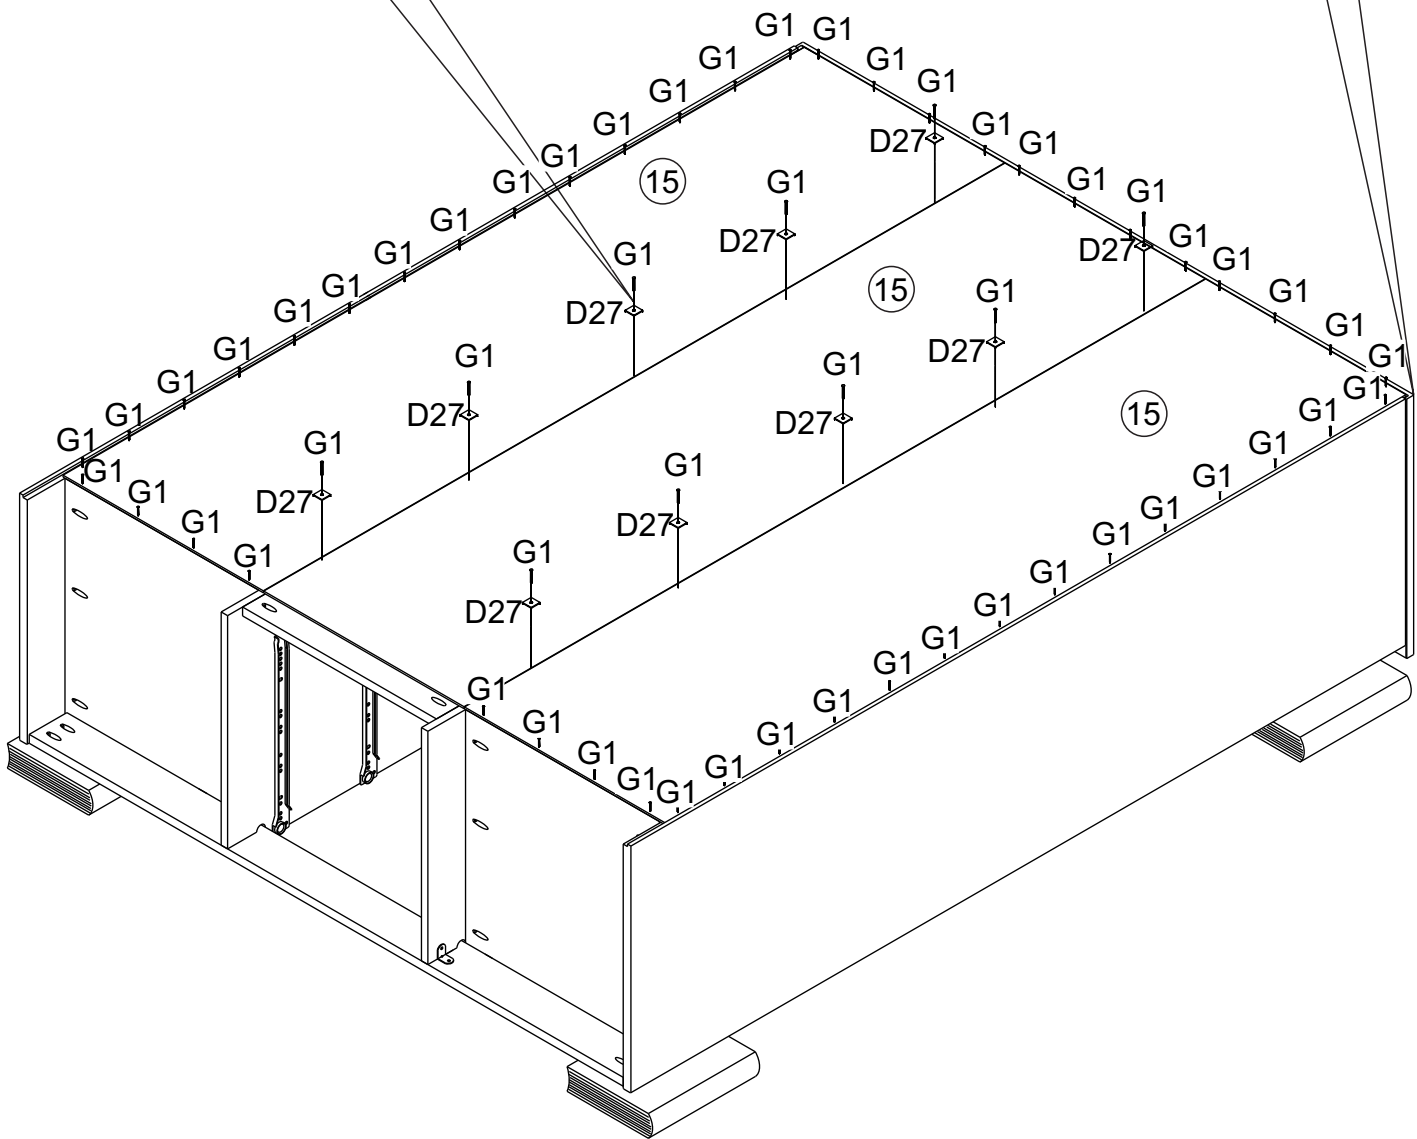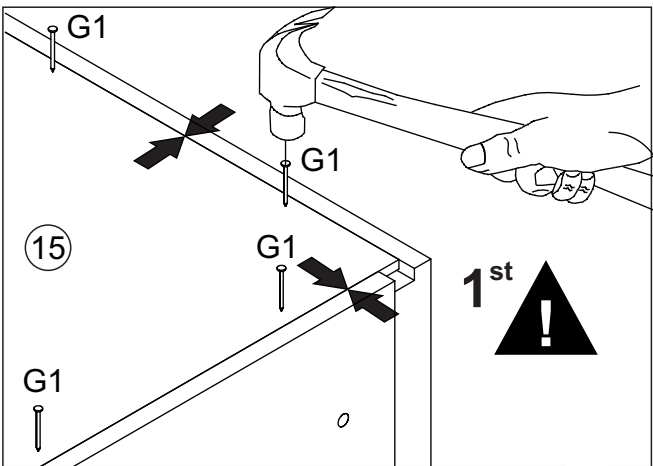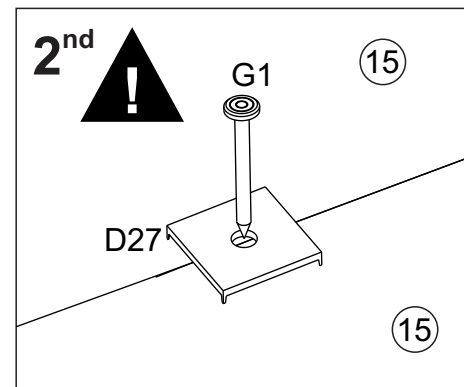


D27		10	G1		62
-----	---	----	----	--	----

10x10

11)

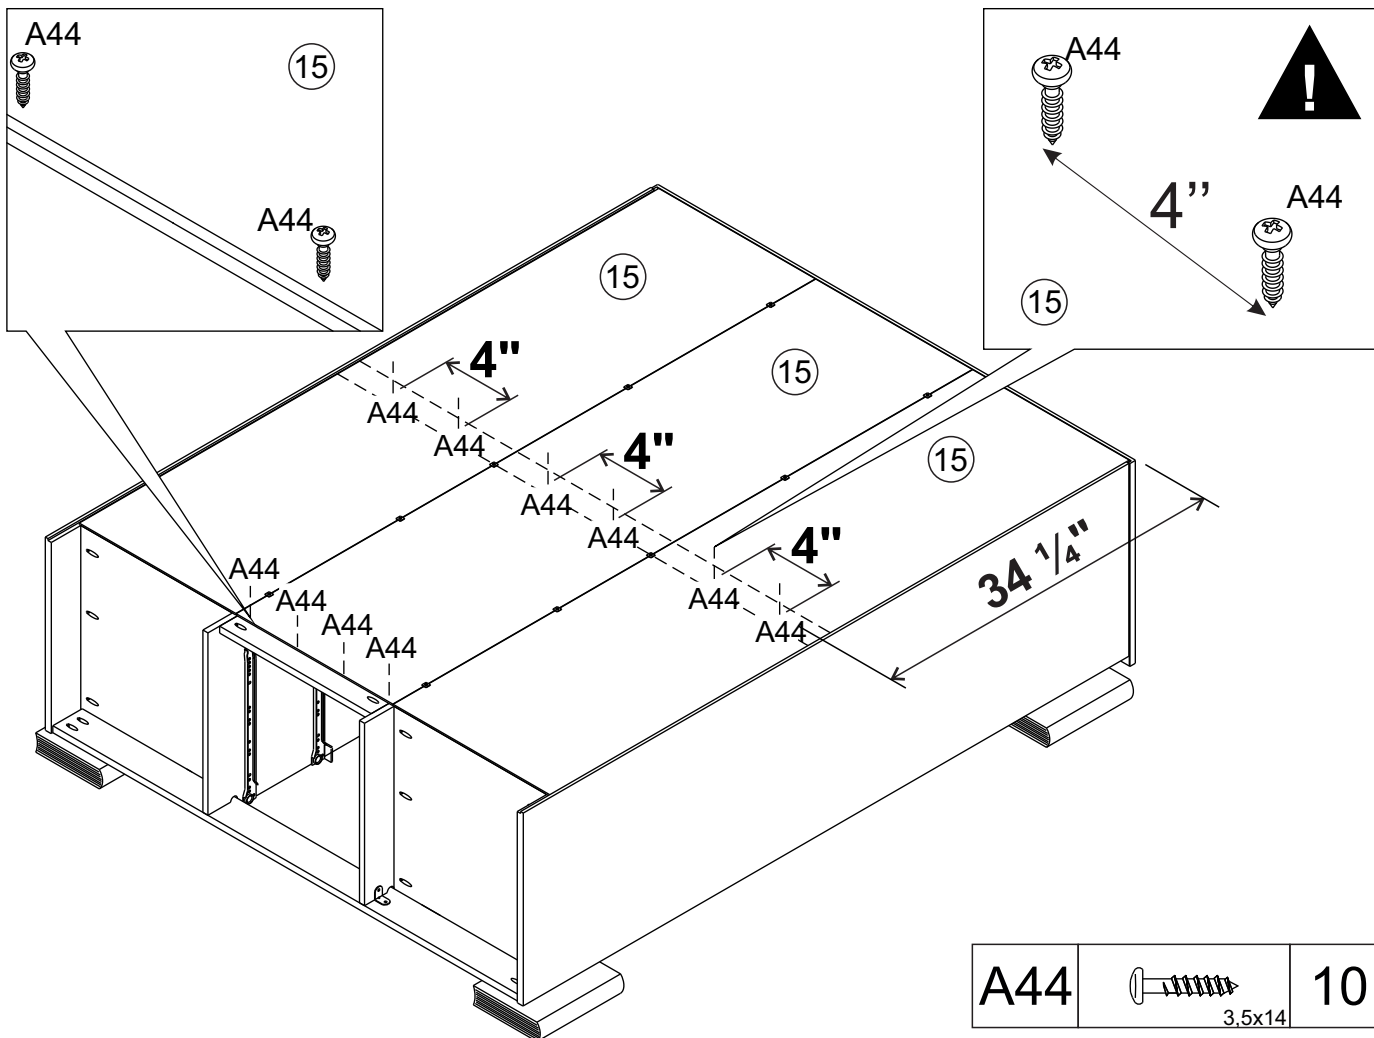


12)

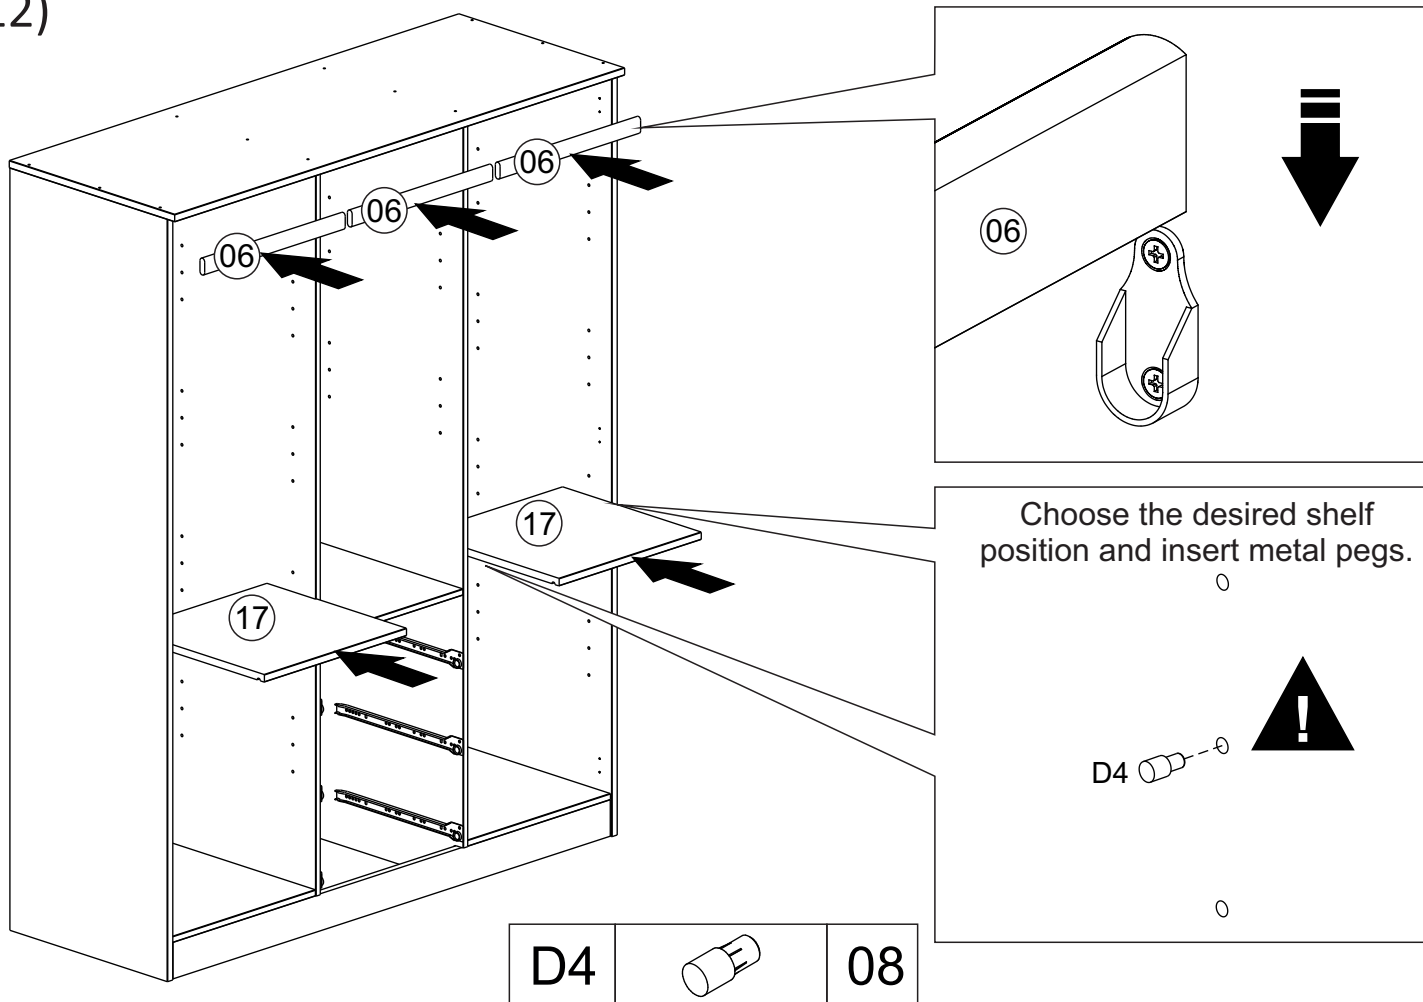



13)

Attach hinge (F10) to hinge plate if it comes separated.


Push hinge against plate until it clicks.

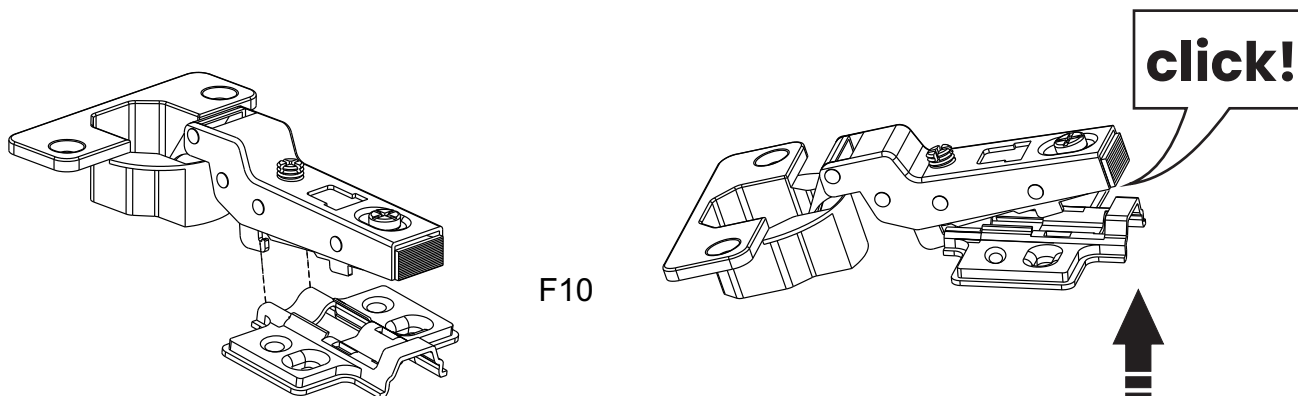

14)

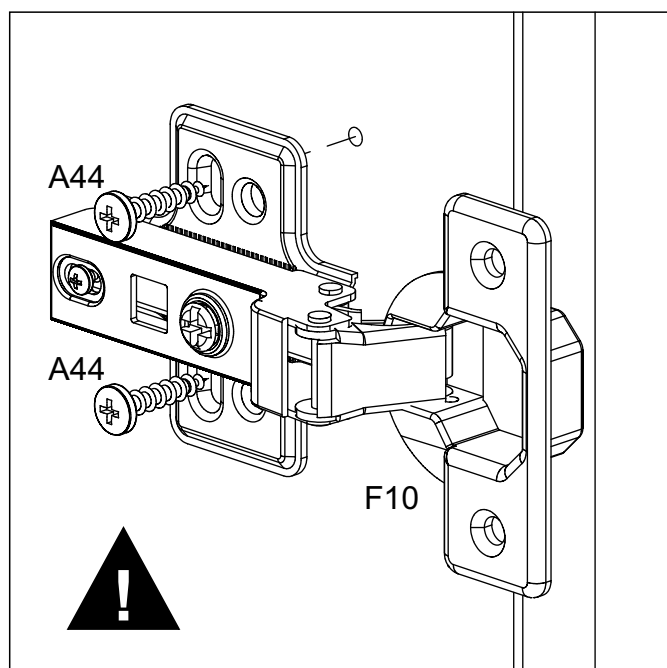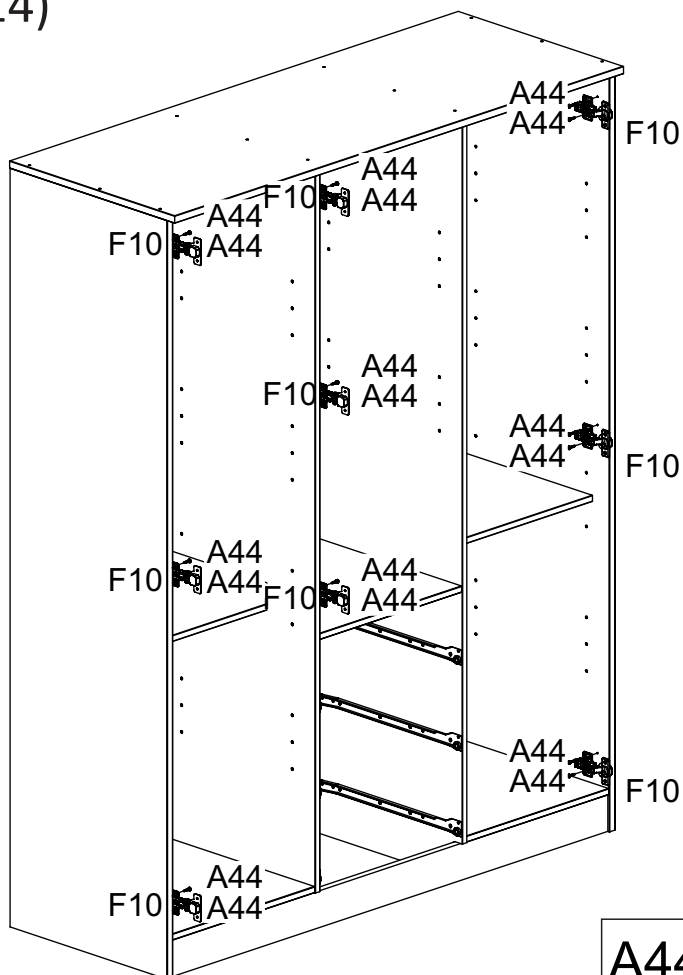

A44



3,5x14


18

F10




09


15)

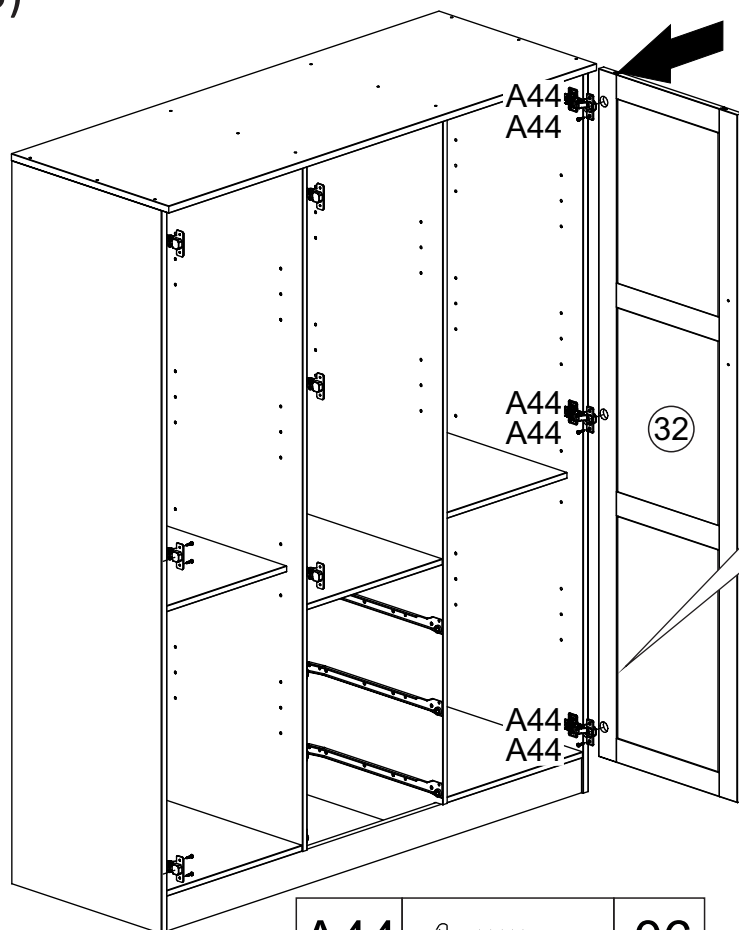

A44





06

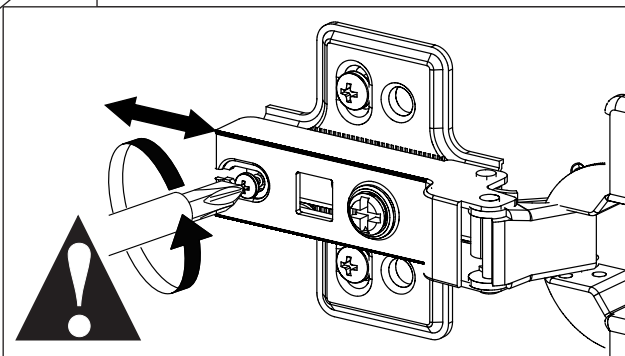


It might be necessary to adjust the hinges (F10) before hanging the doors.


16)

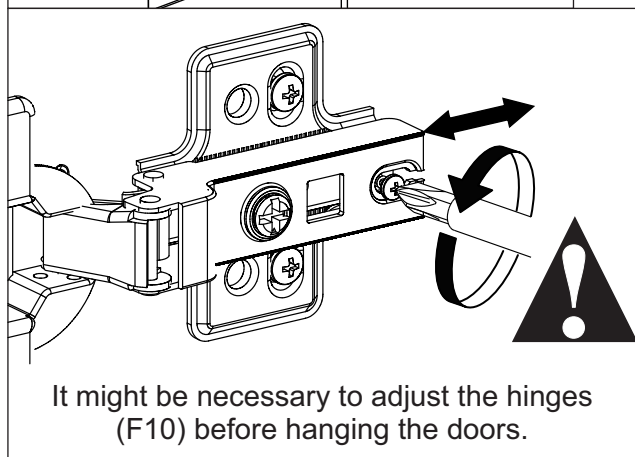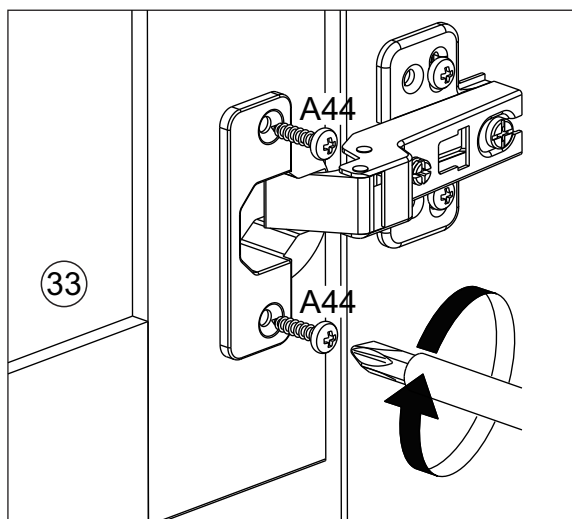

It might be necessary to adjust the hinges (F10) before hanging the doors.



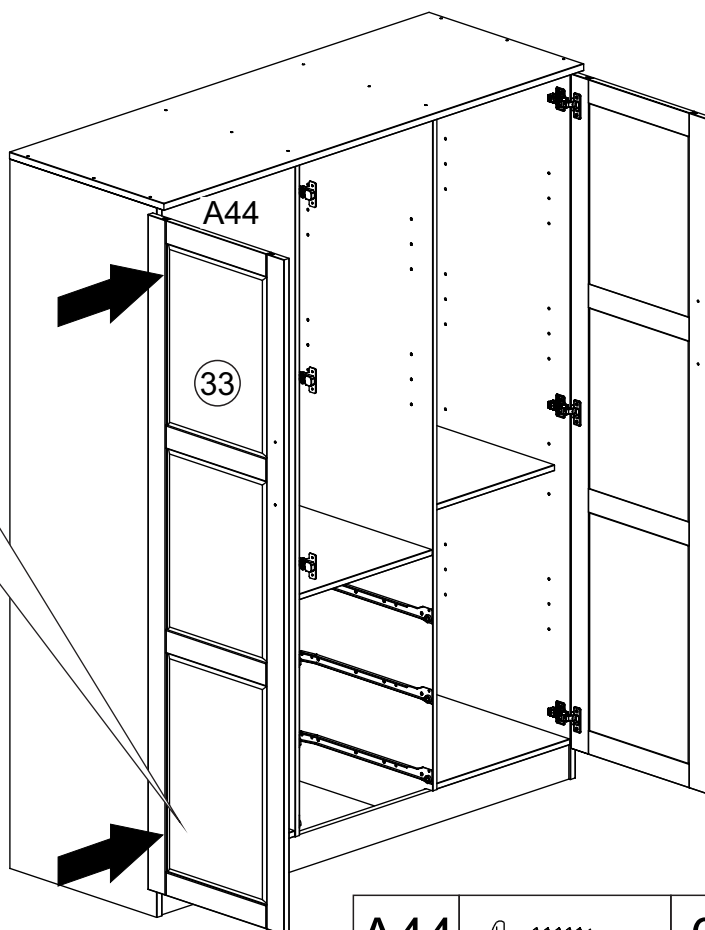


A44




06




17) Mirrored Door

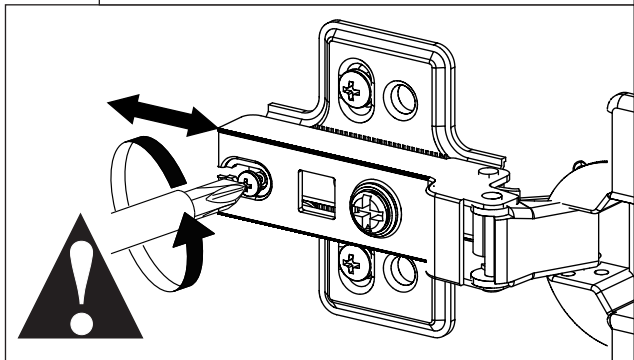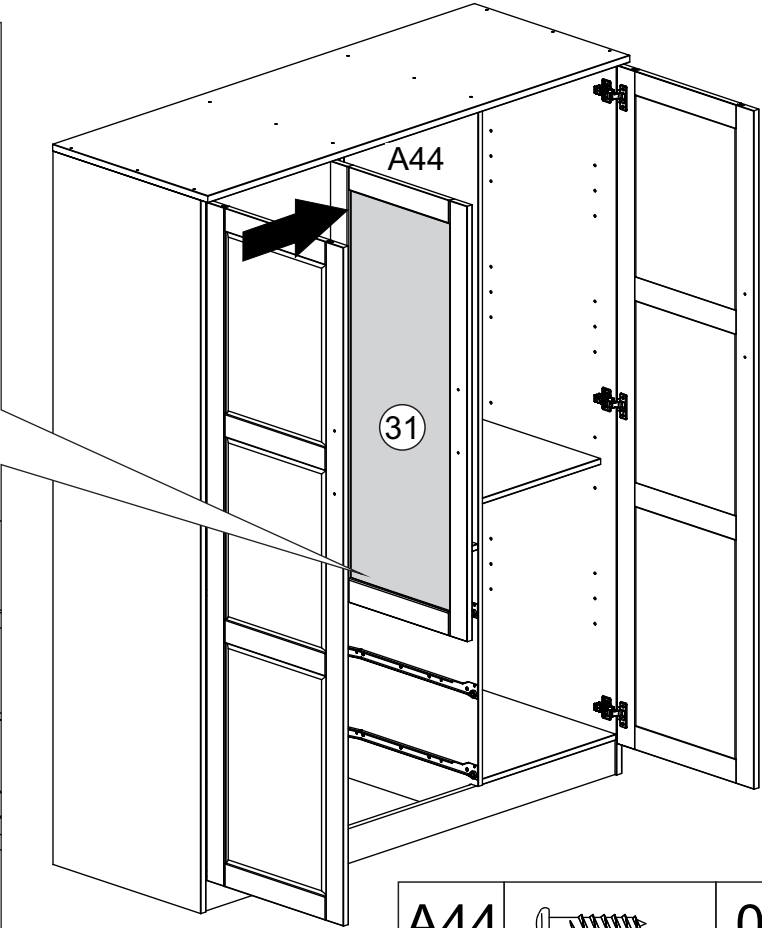
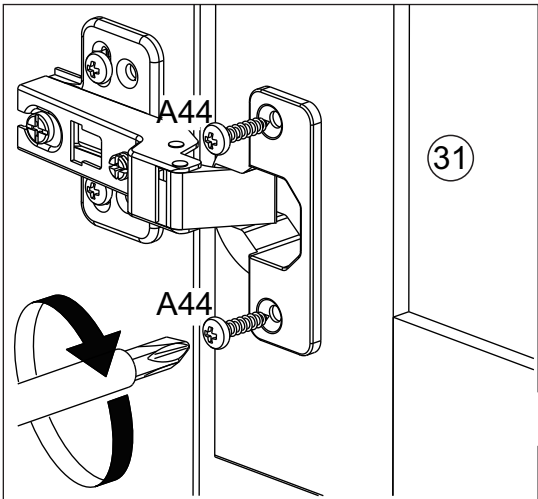


It might be necessary to adjust the hinges (F10) before hanging the doors.




A44		06
3,5x14		

18) Mirrored Door

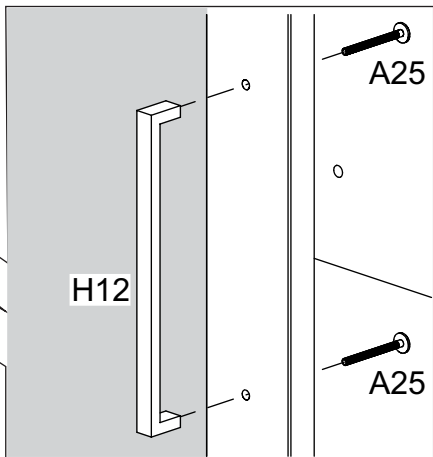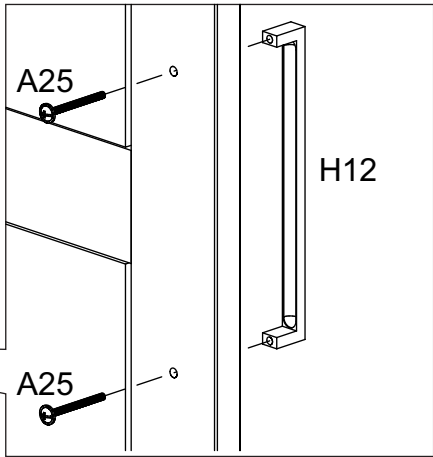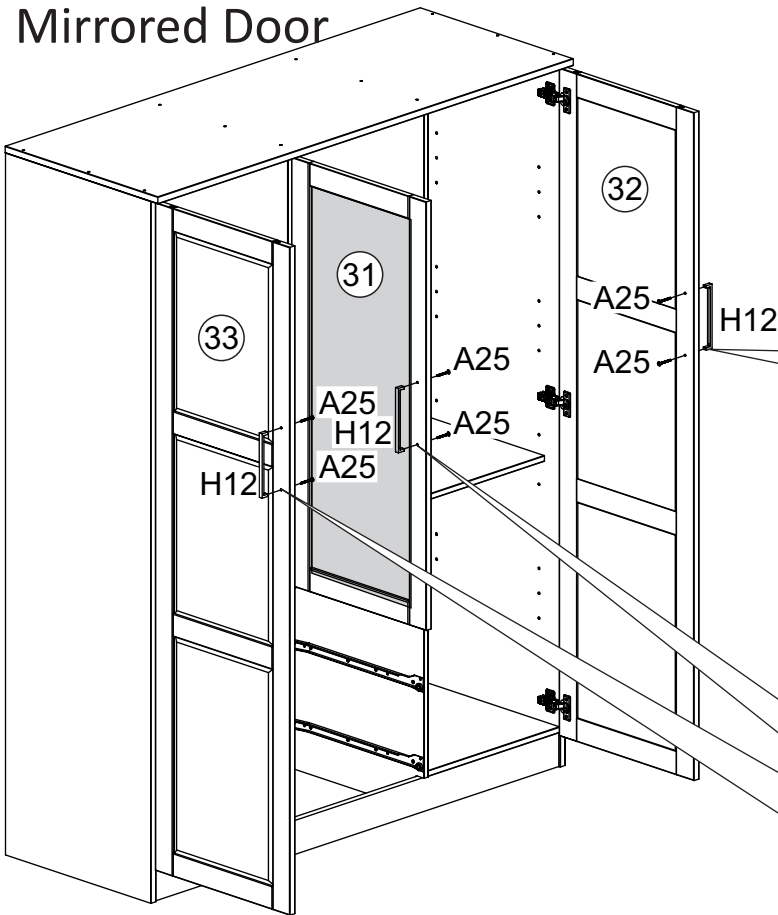


A25		06	H12		03
M4x25					




17) Raised Panel Door

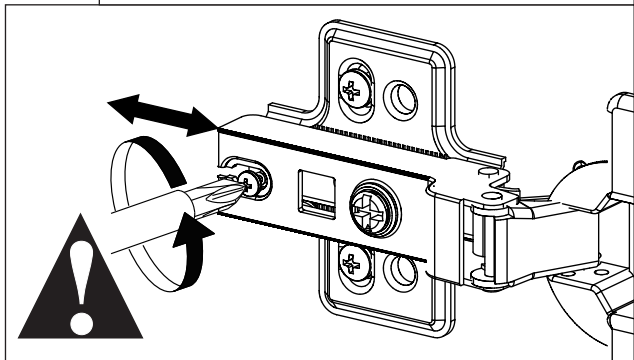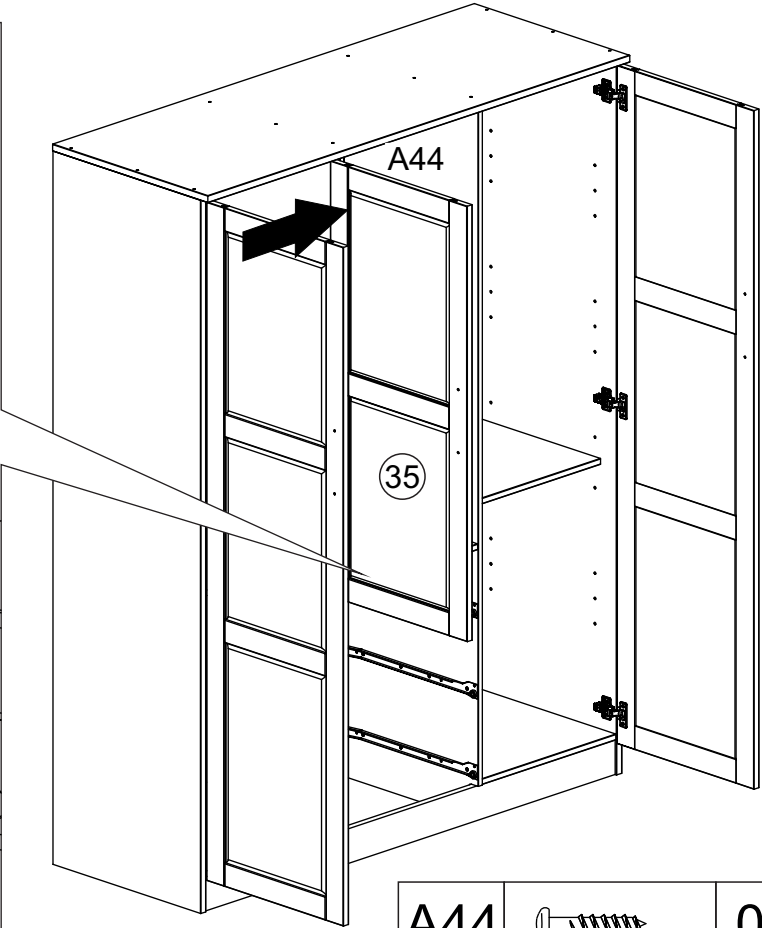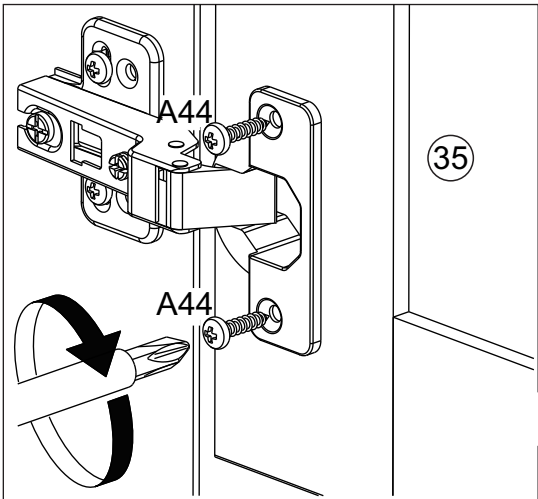

It might be necessary to adjust the hinges (F10) before hanging the doors.













A44		06
3.5x14		

18) Raised Panel Door



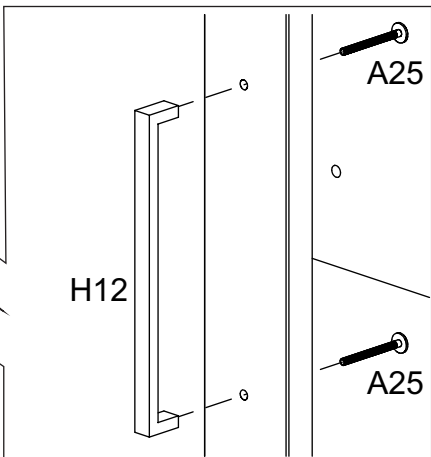
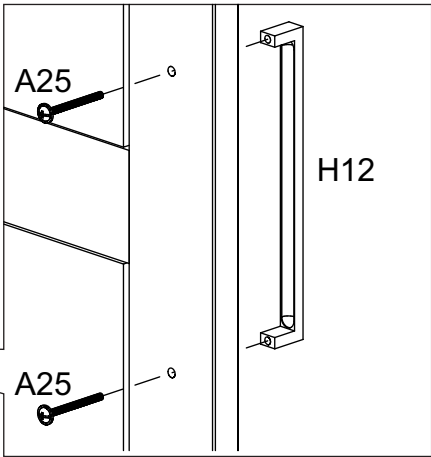
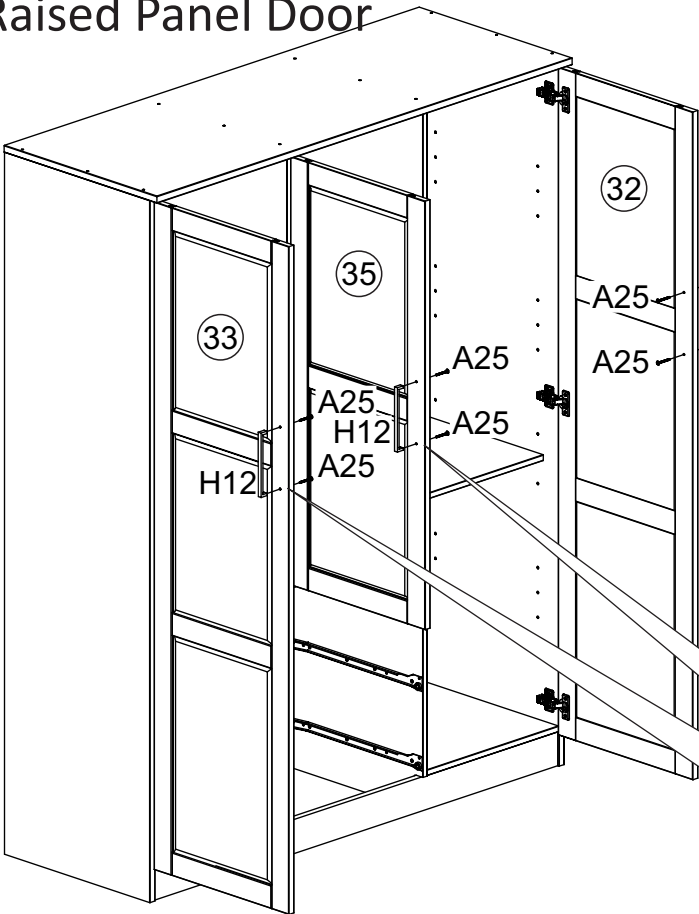




A25		06	H12		03
M4x25					

19)

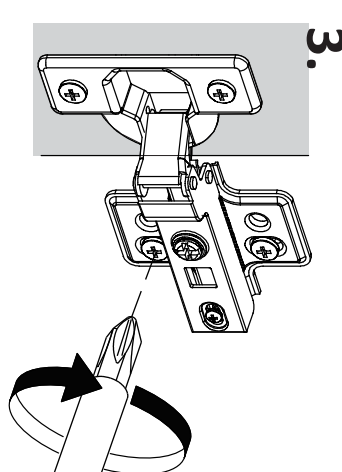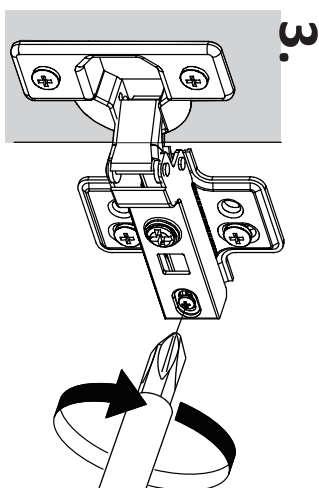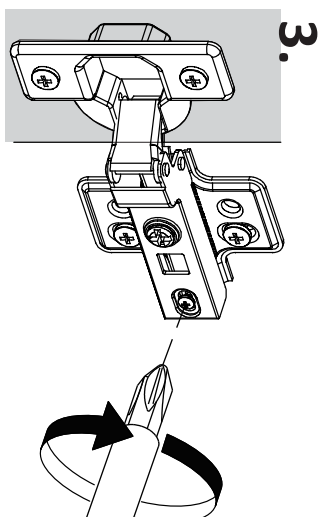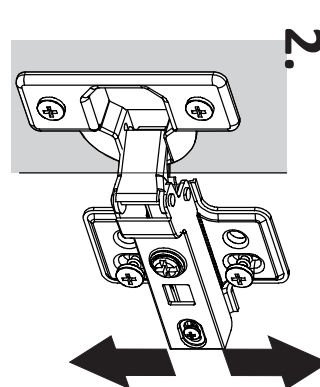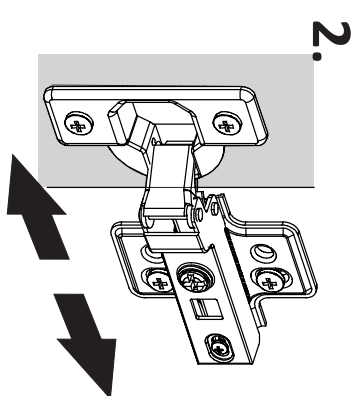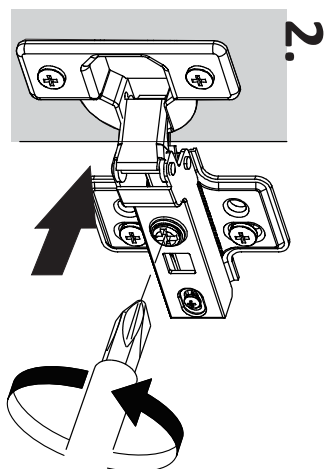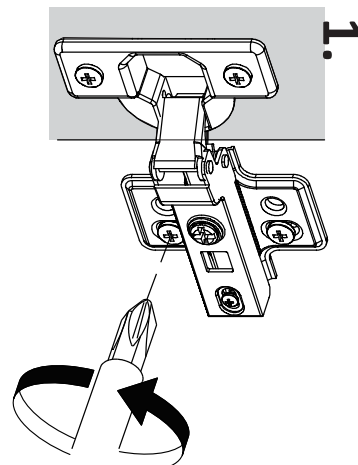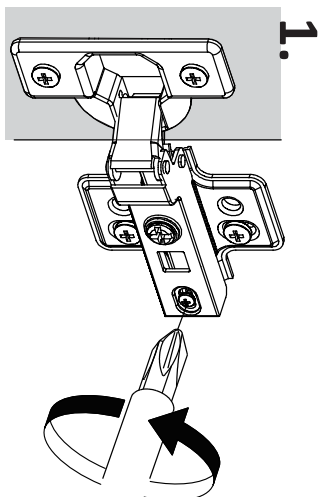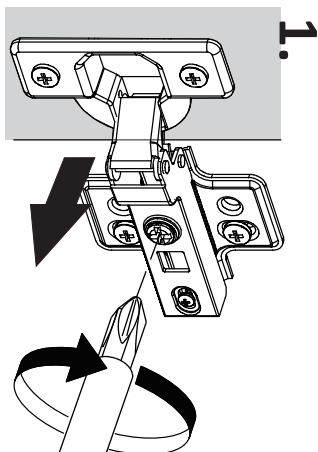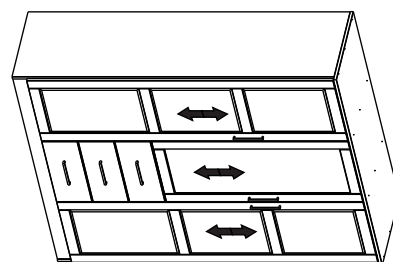
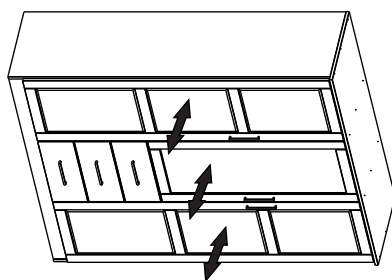
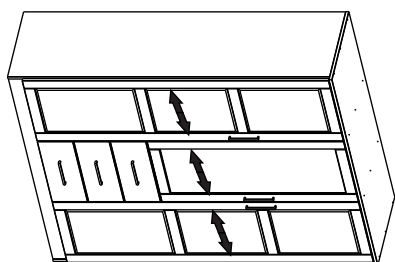


20) 3x

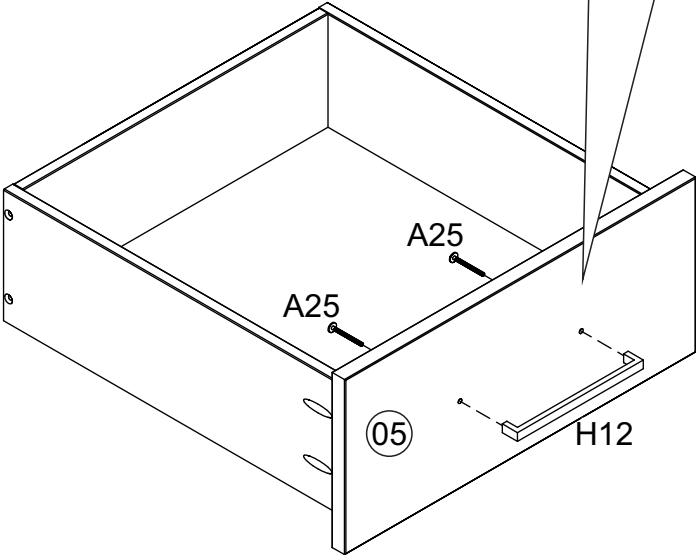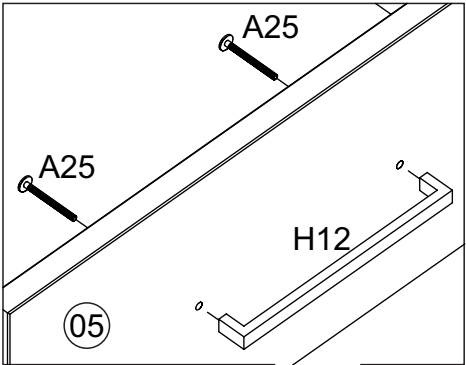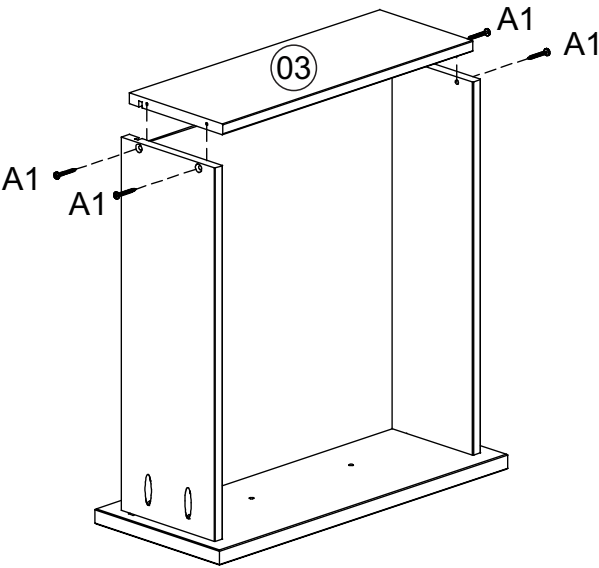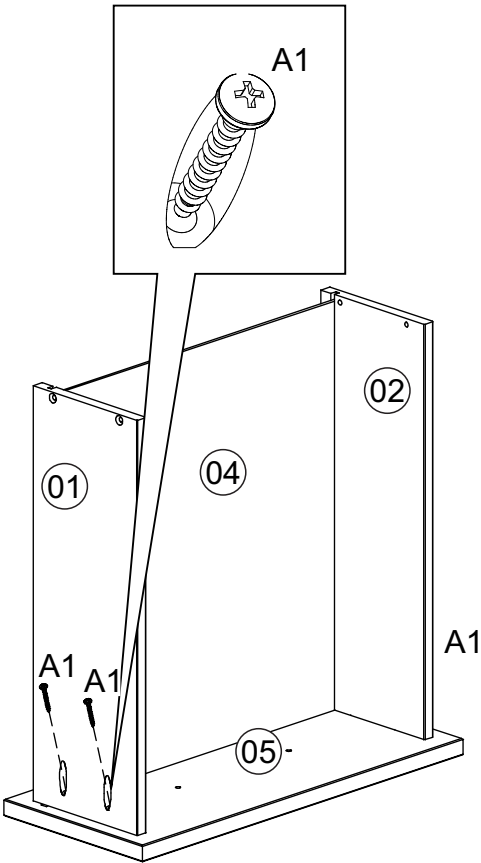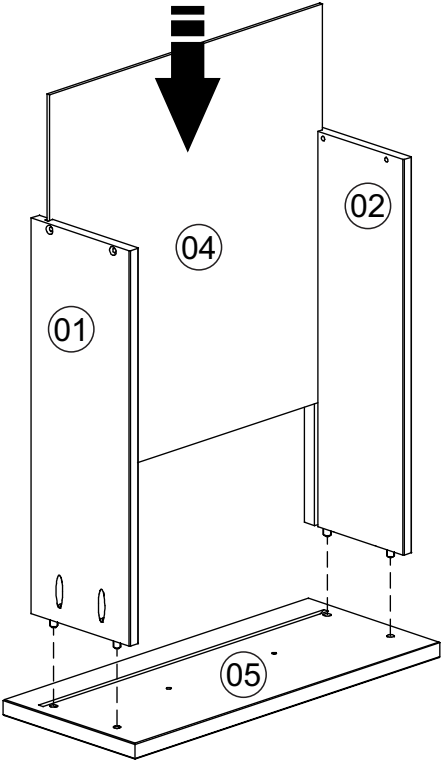

A1	 4.0x30	24
A25	 M4x25	06
H12		03




21) $3x$

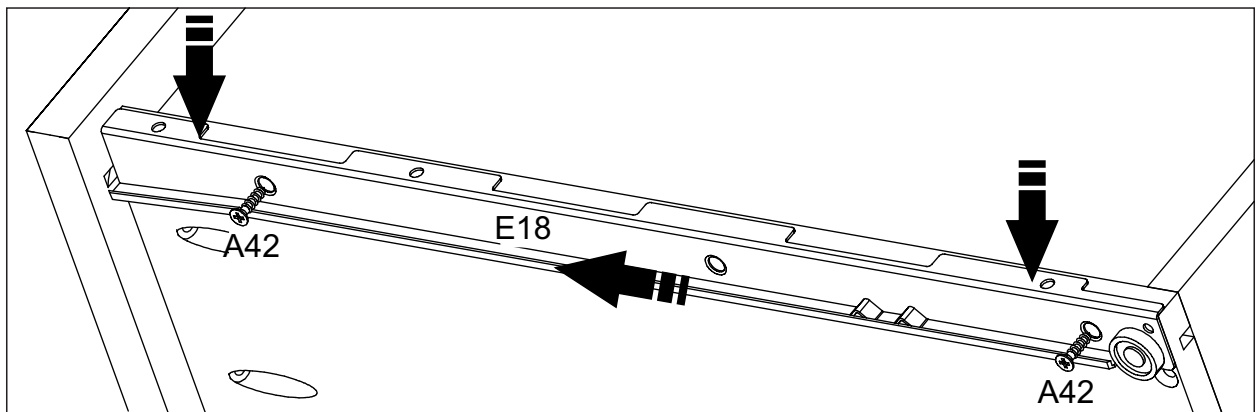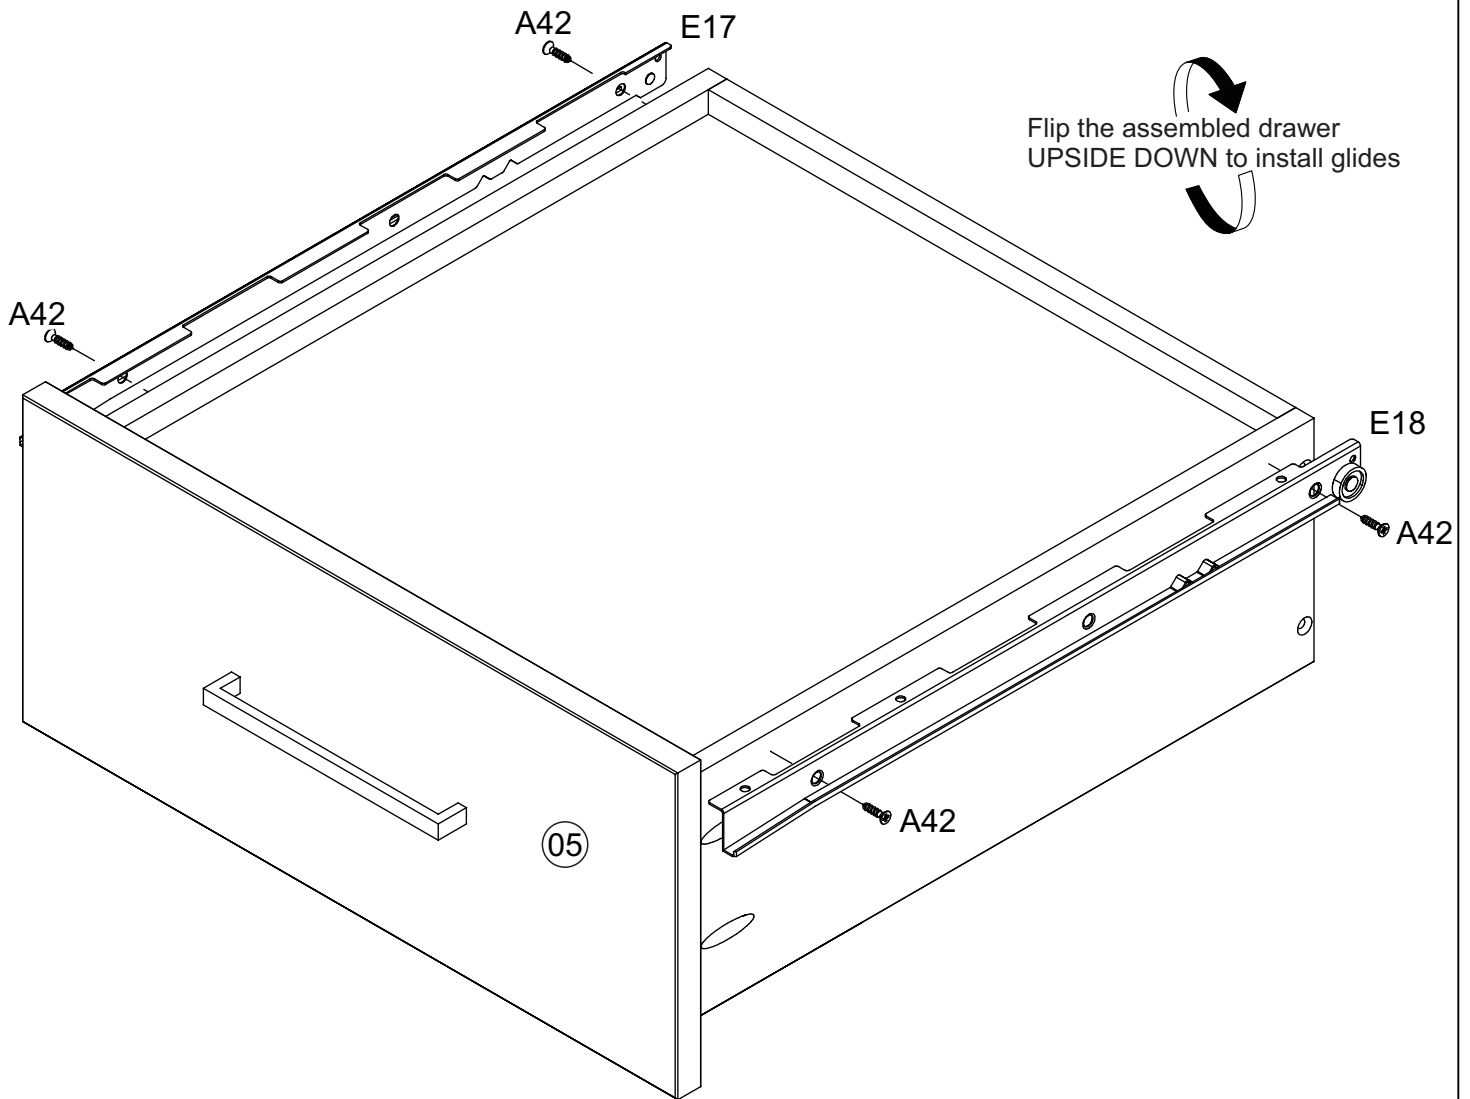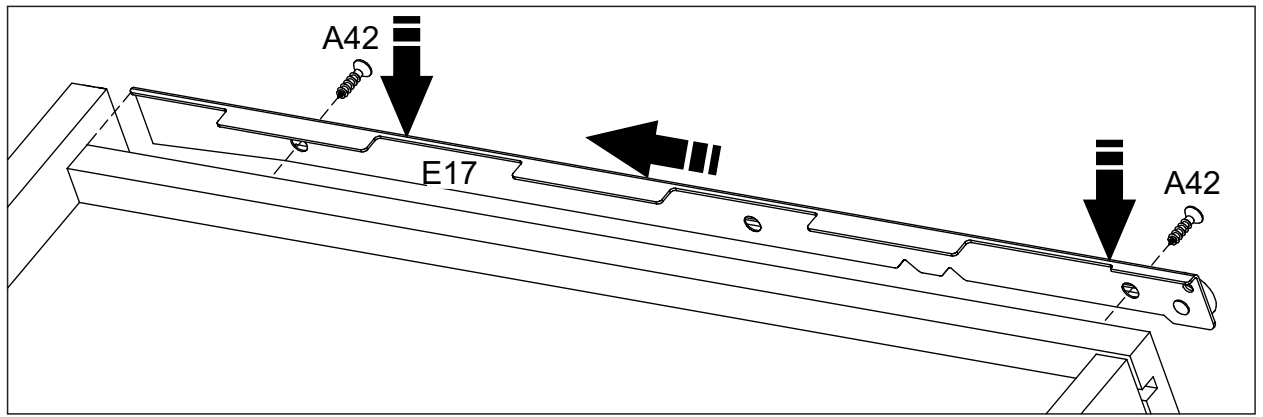






A42	 4.0x14	12	E17	 Drawer RIGHT 450mm - 17 3/4"	03	E18	 Drawer LEFT 450mm - 17 3/4"	03
-----	---	----	-----	--	----	-----	---	----


22)

Place the labeled drawer at the top.

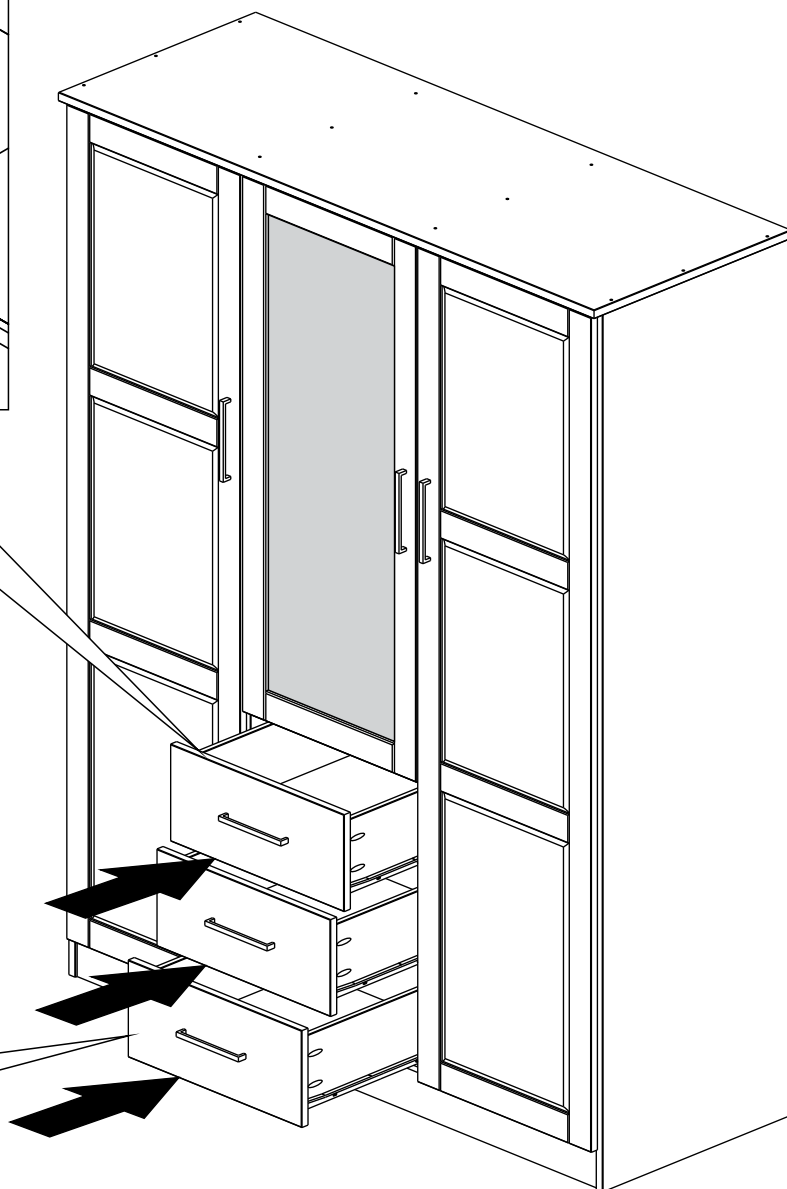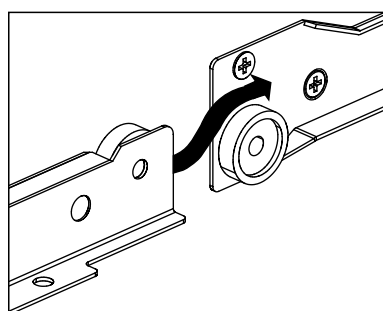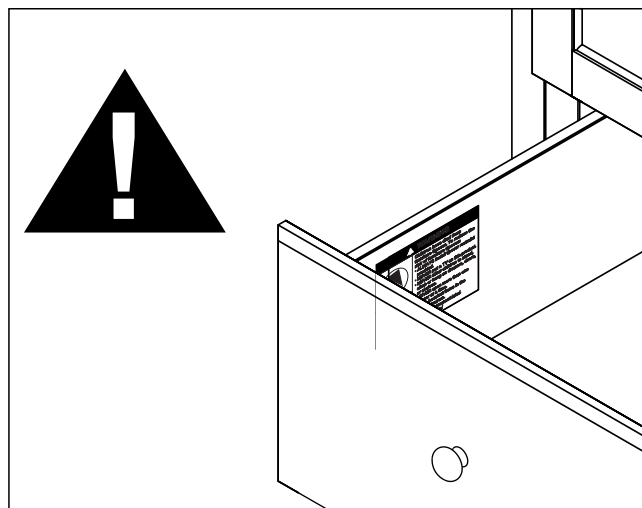

23) **FURNITURE TIPOVER PREVENTION KIT INSTALLATION**

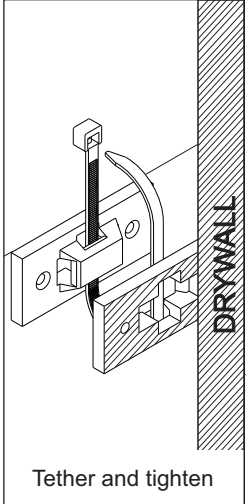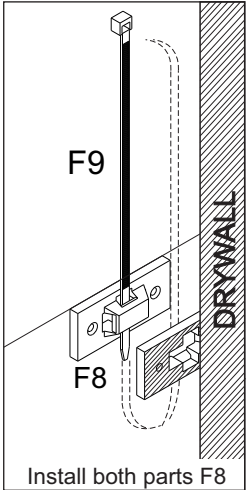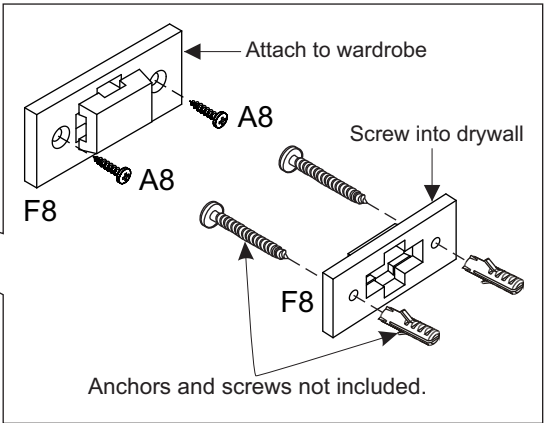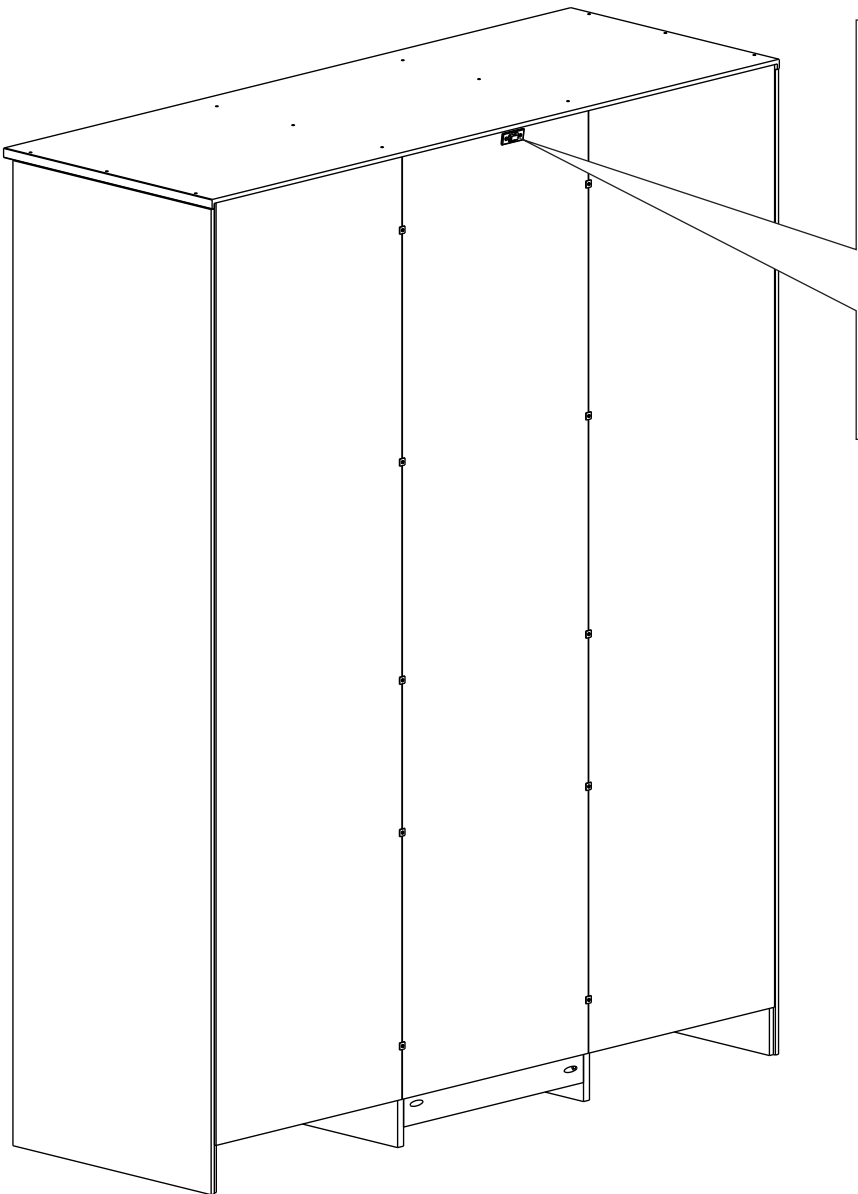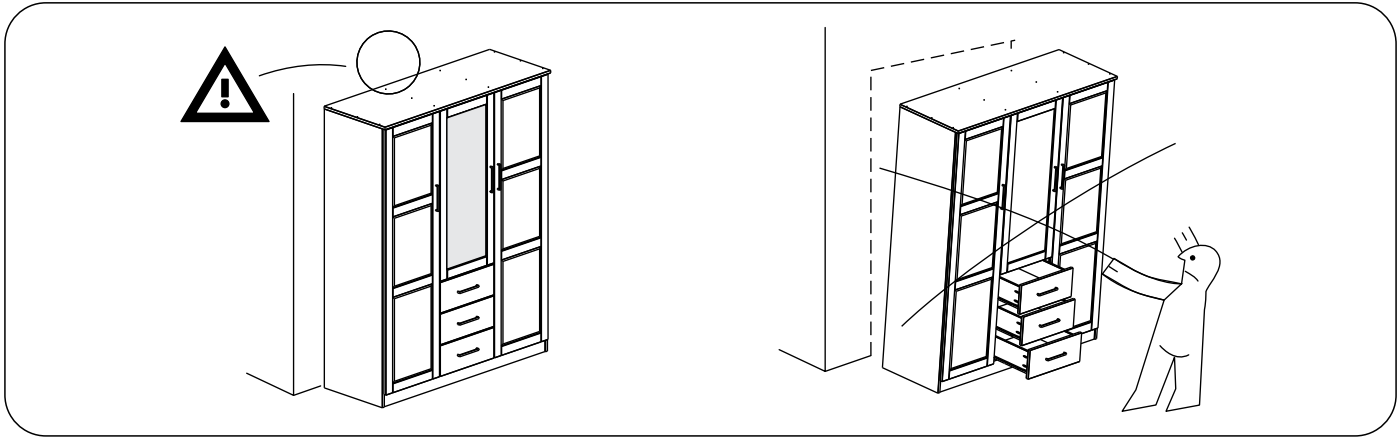

A8	 3,0x20	02
F8		02
F9		01