

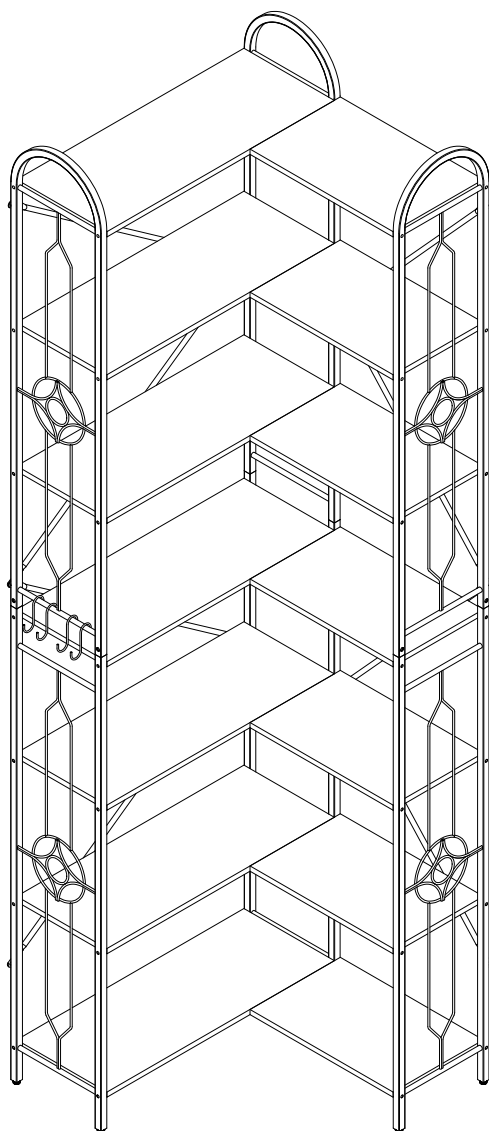







Seven layers with iron Angle frame



GAUTION: When tightening the screws , tighten sequentially.
Do not tighten any screws fully and then towards the next one.
When every part is OK , then tighten all the screws.


ASSEMBLY INSTRUCTIONS

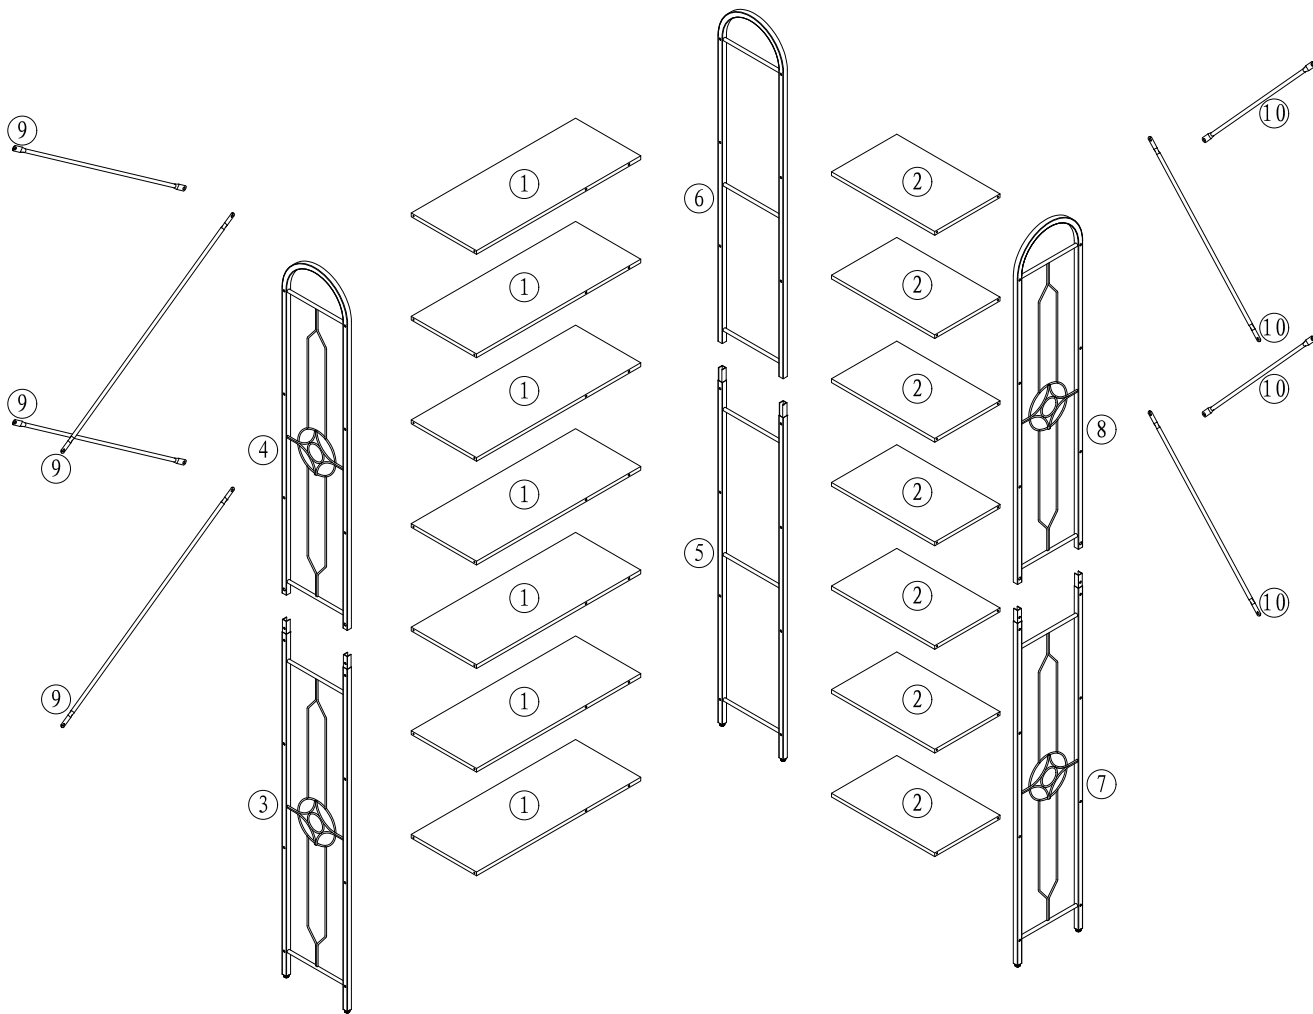

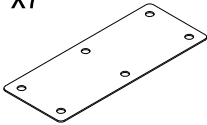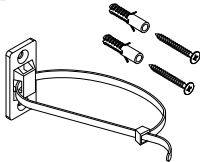A x14+2  Ø6*30mm	B x42+2  Ø5*38mm	C x16+2  M6*12mm	D x7  120*48*0.8mm	E x42+2  Ø4*10mm
F x4 	G x2 			


INSTALLATION INSTRUCTION

STEP 1

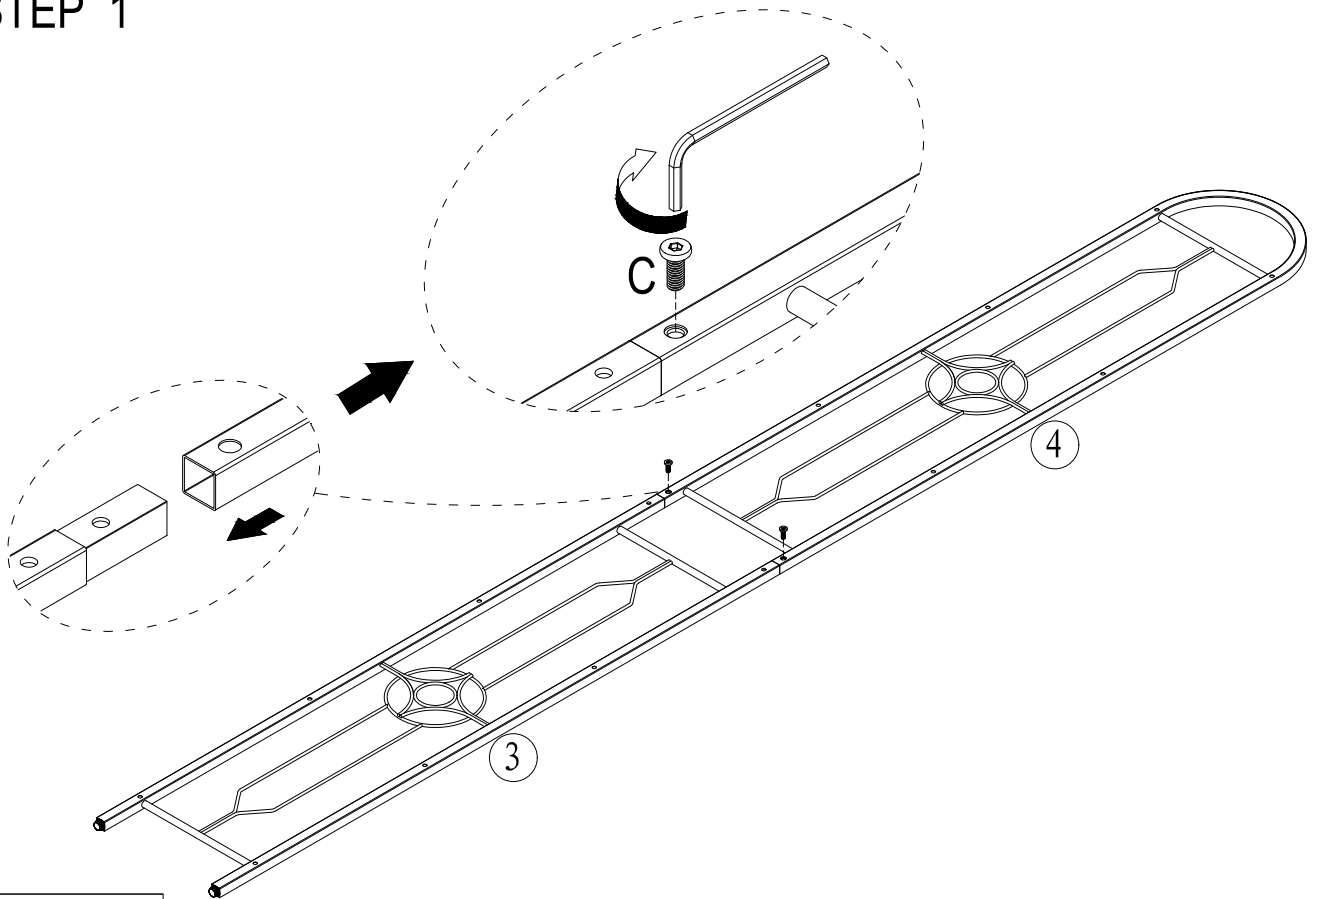

 C x2


STEP 2

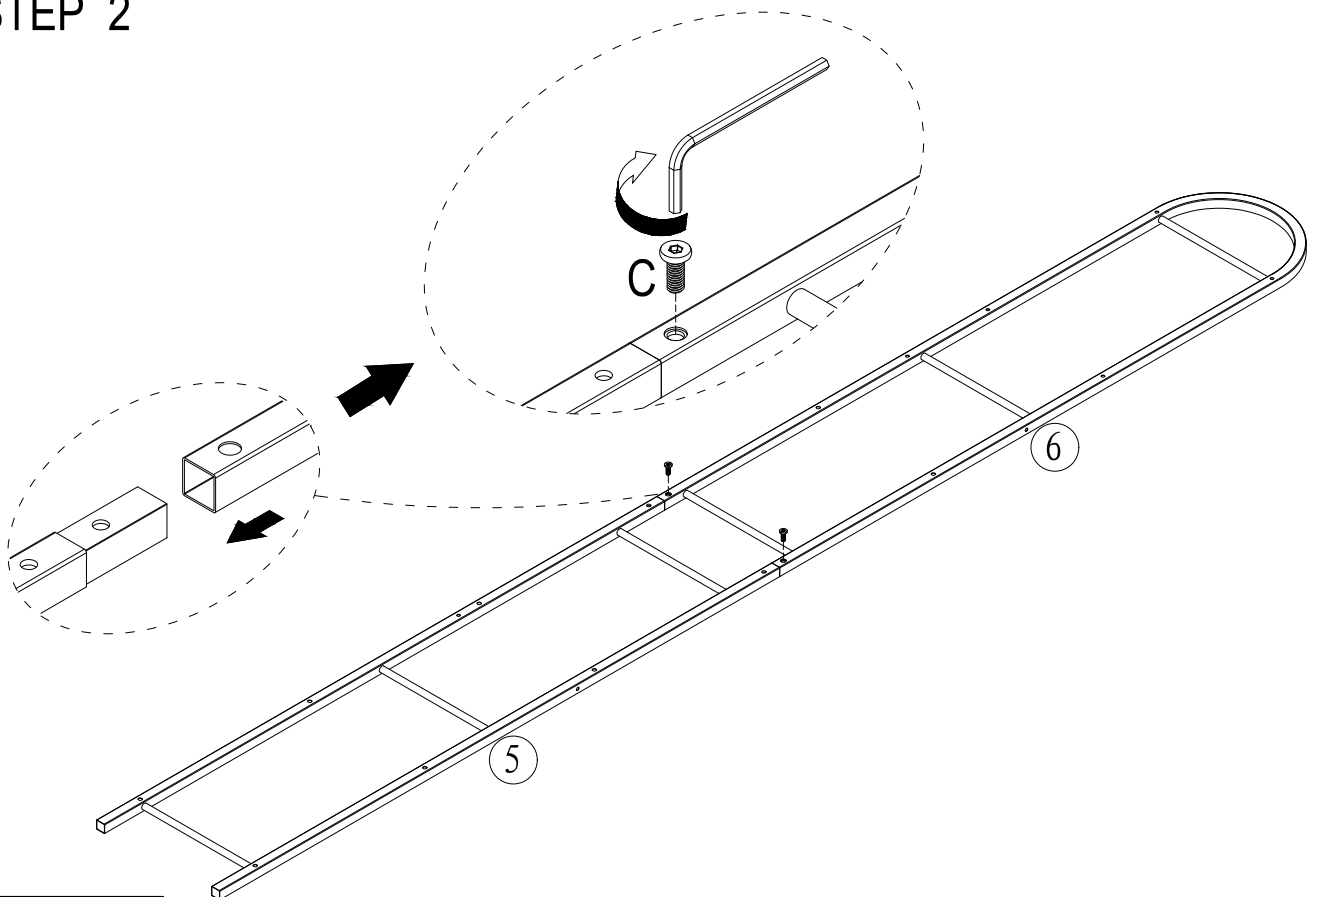


 C x2


INSTALLATION INSTRUCTION


STEP 3

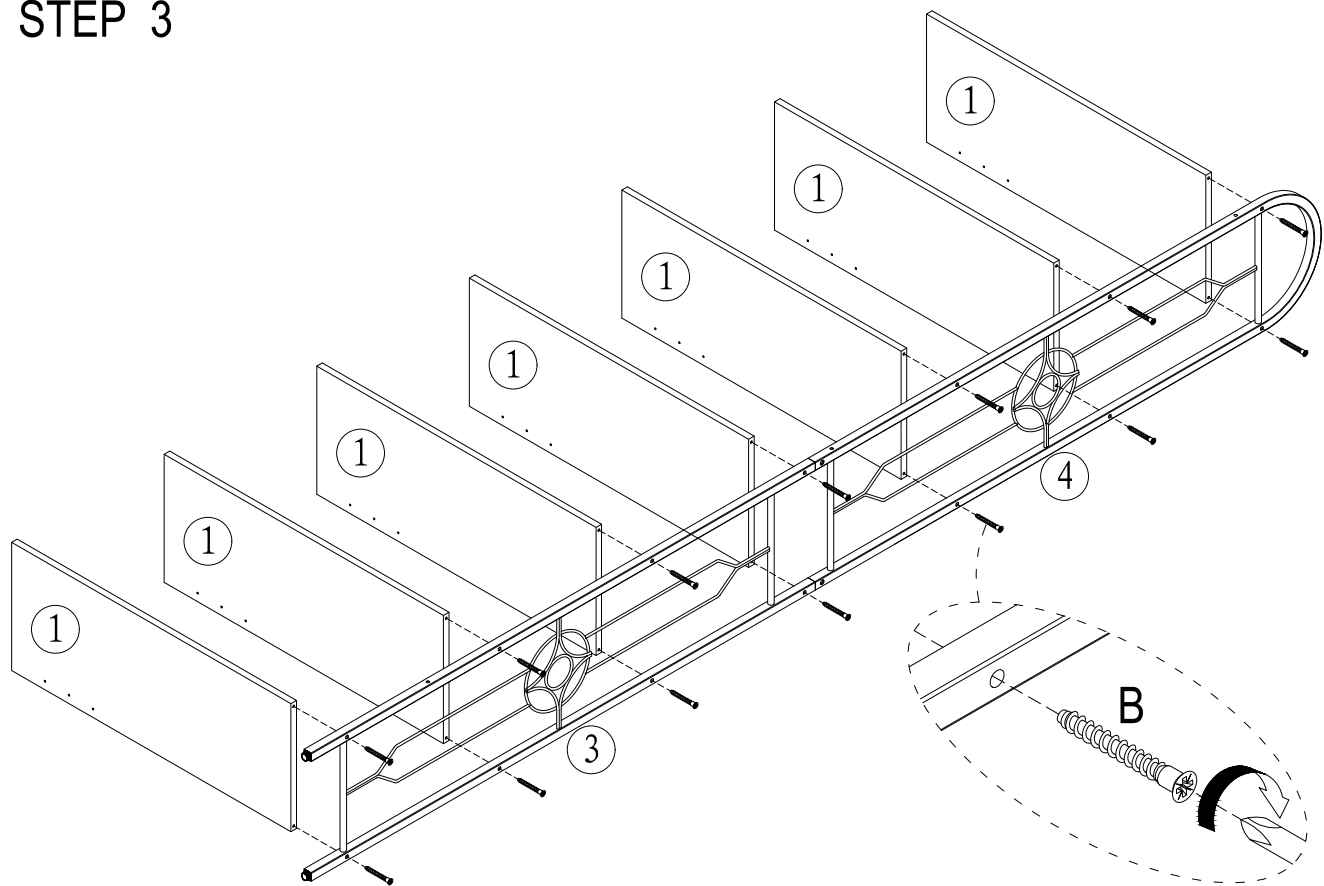

 B x14


STEP 4

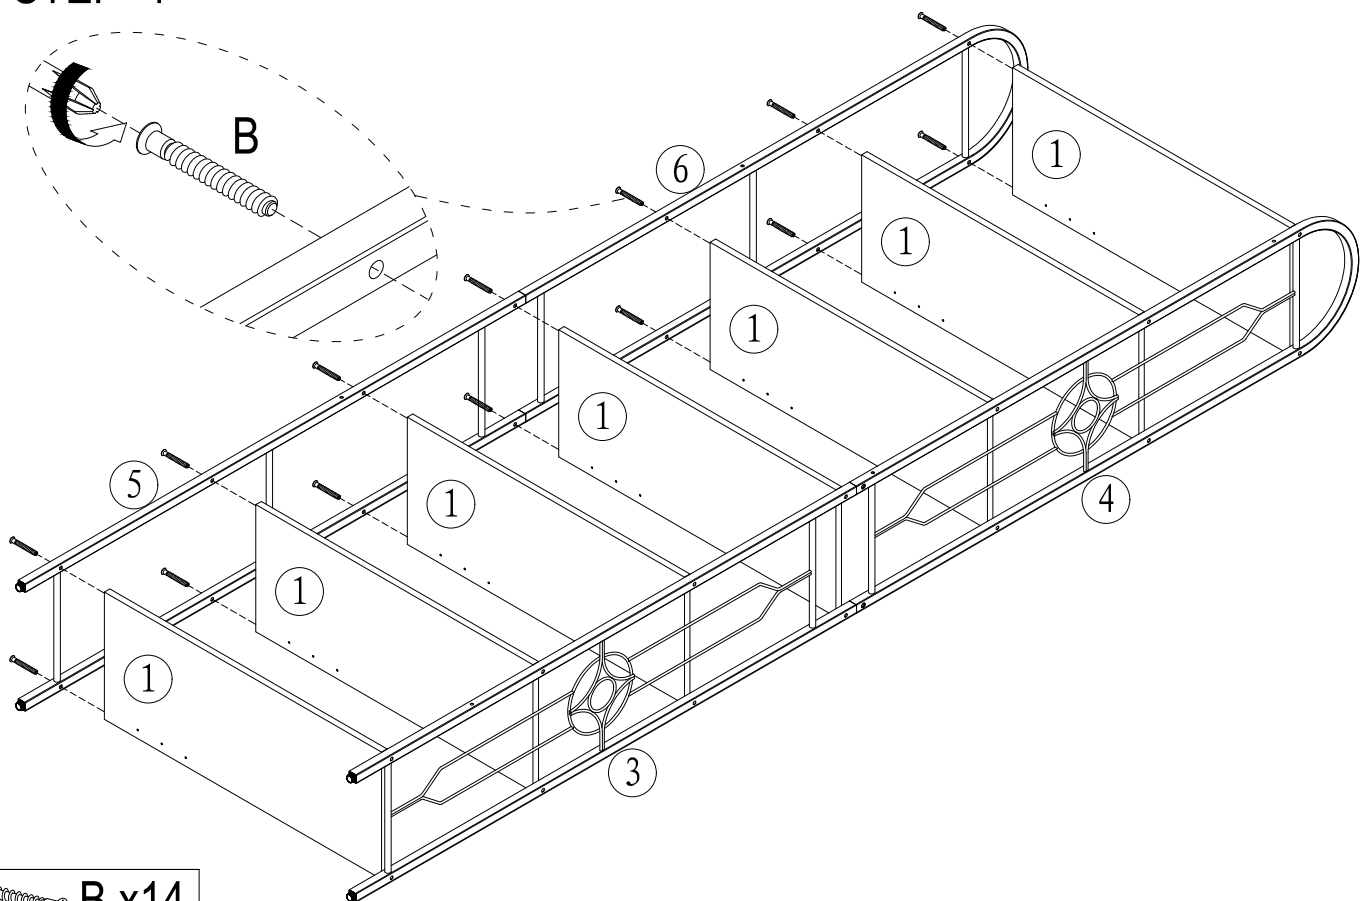

 B x14


INSTALLATION INSTRUCTION

STEP 5

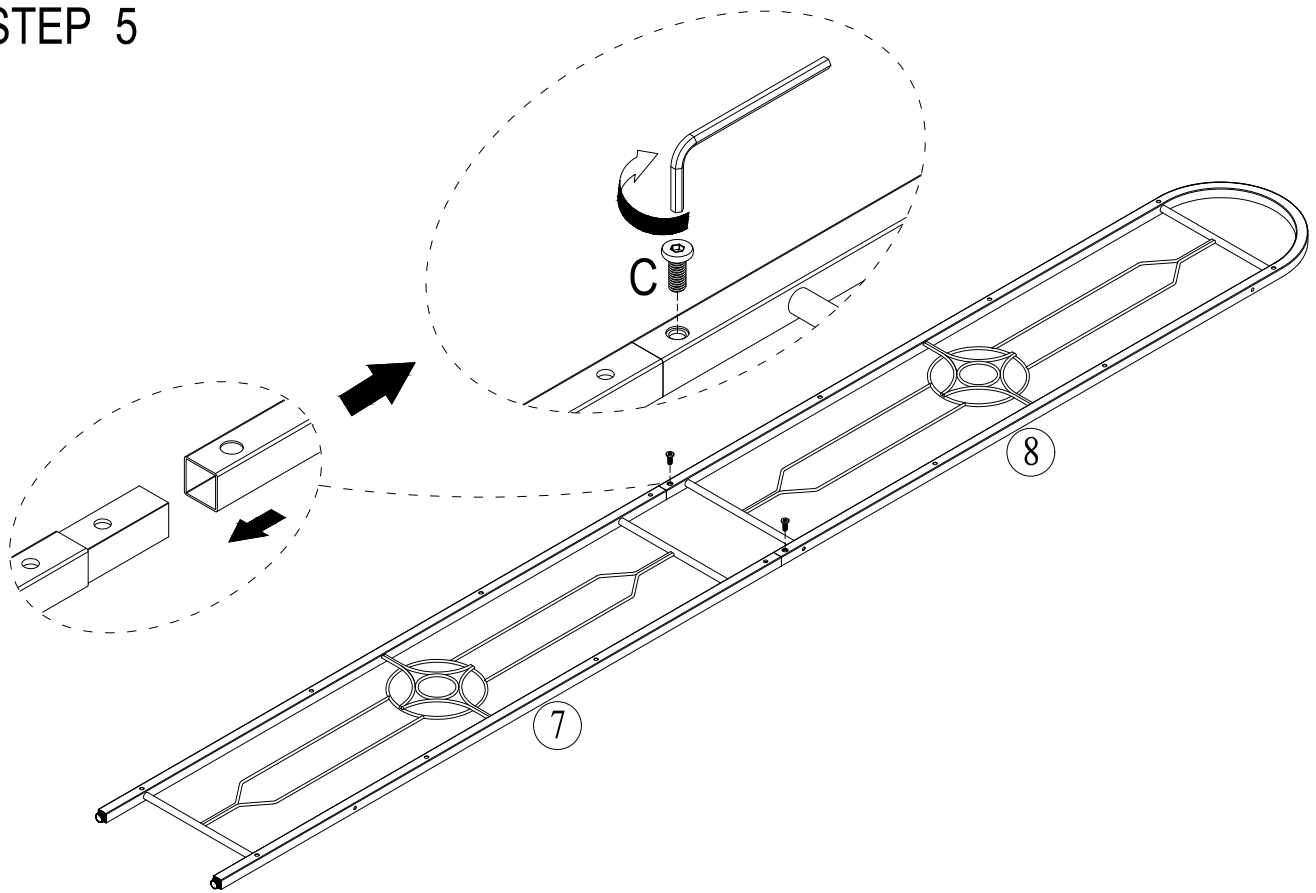

 C x2


STEP 6

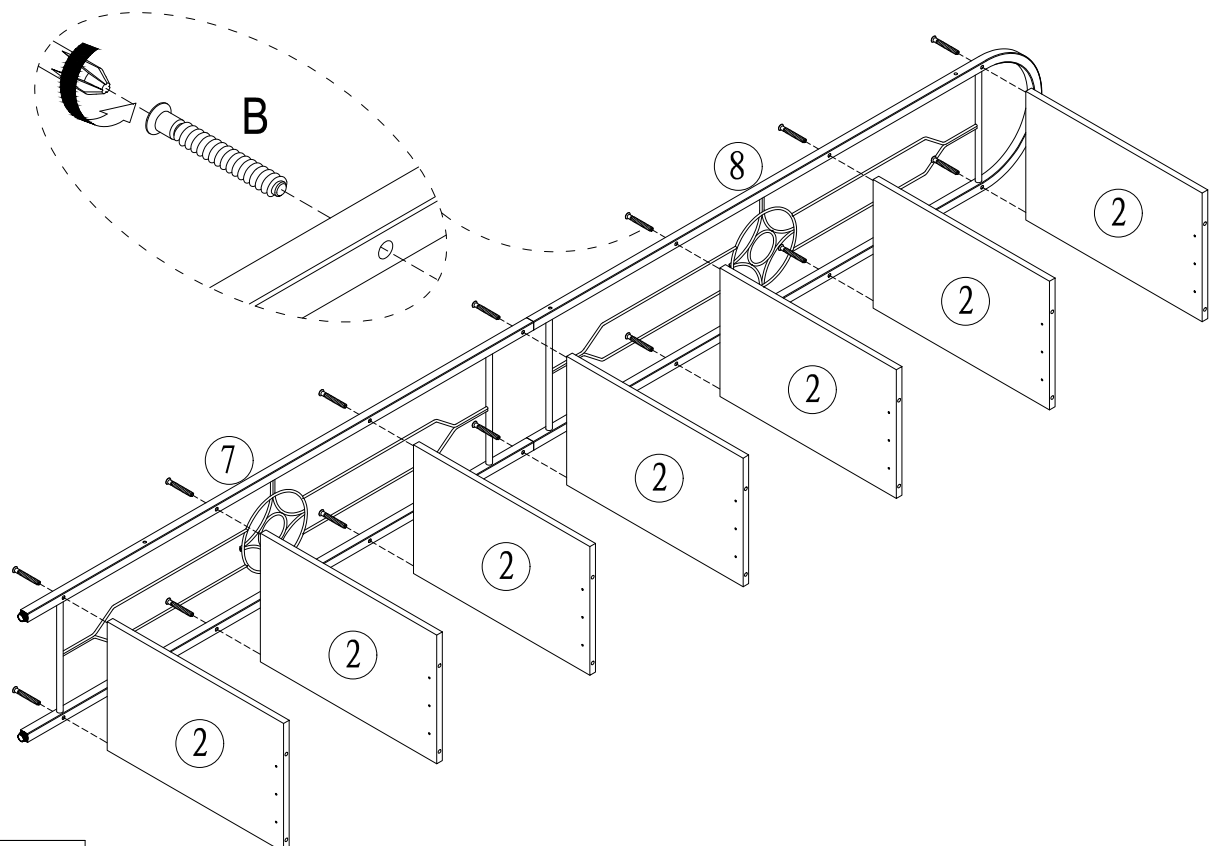

 B x14


INSTALLATION INSTRUCTION

STEP 7

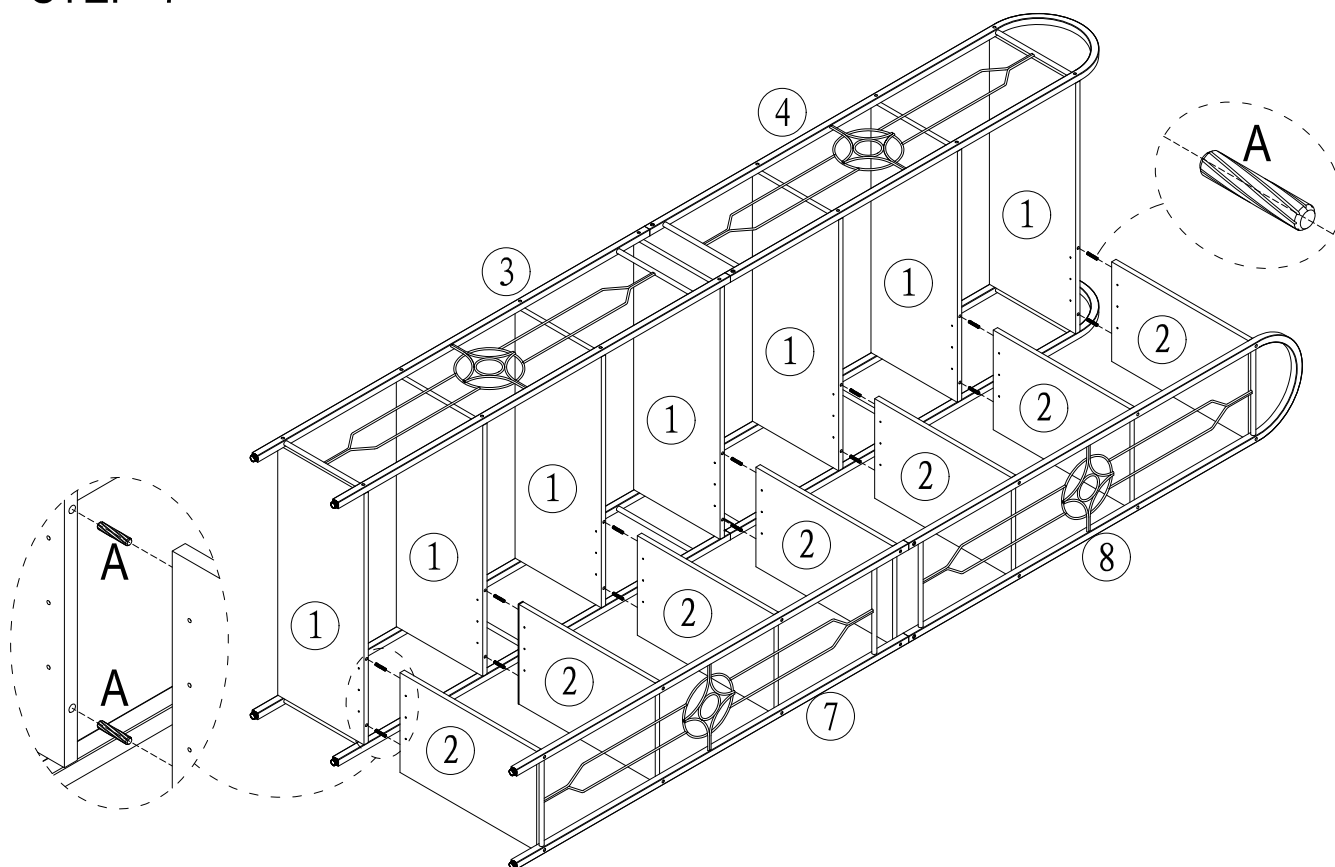

 A x14

STEP 8

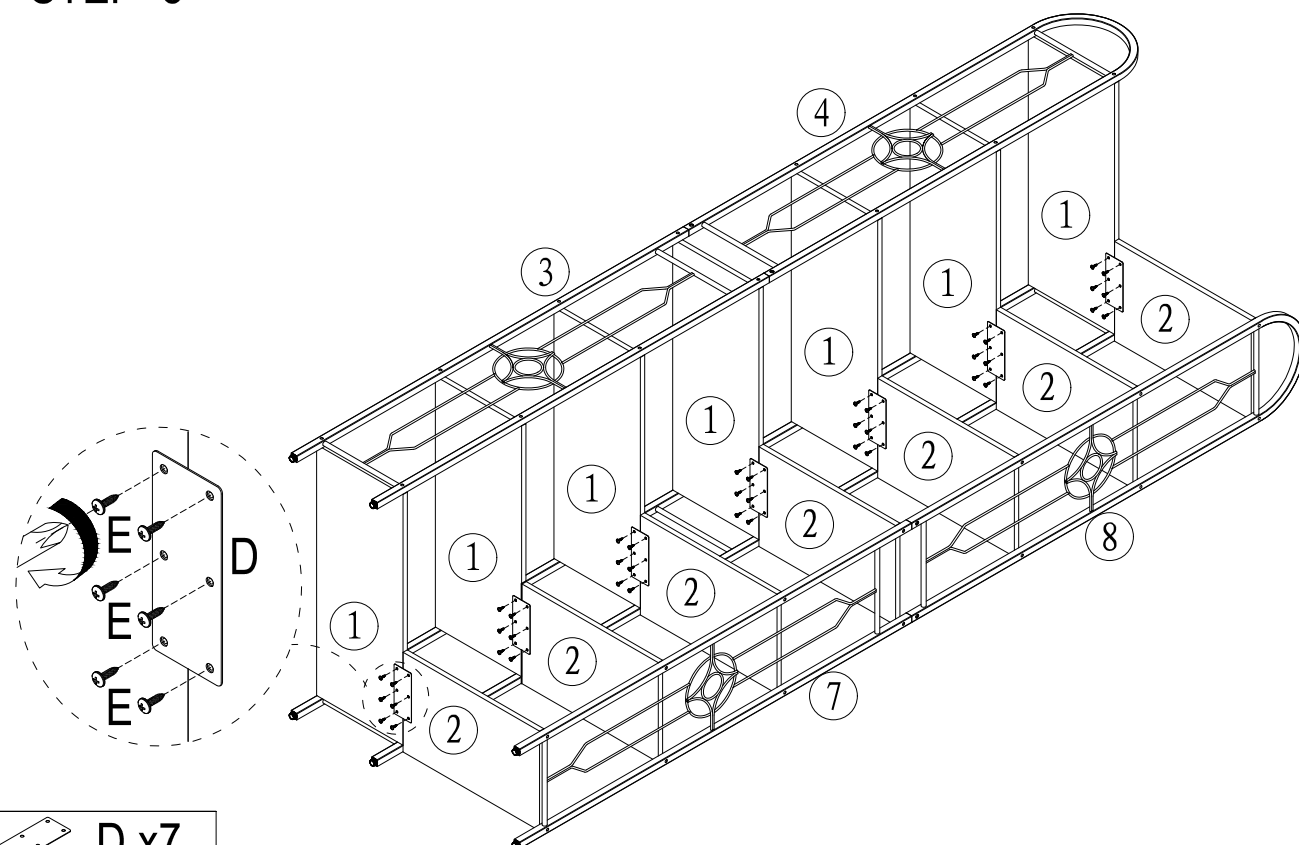


D x7



E x42

INSTALLATION INSTRUCTION


STEP 9

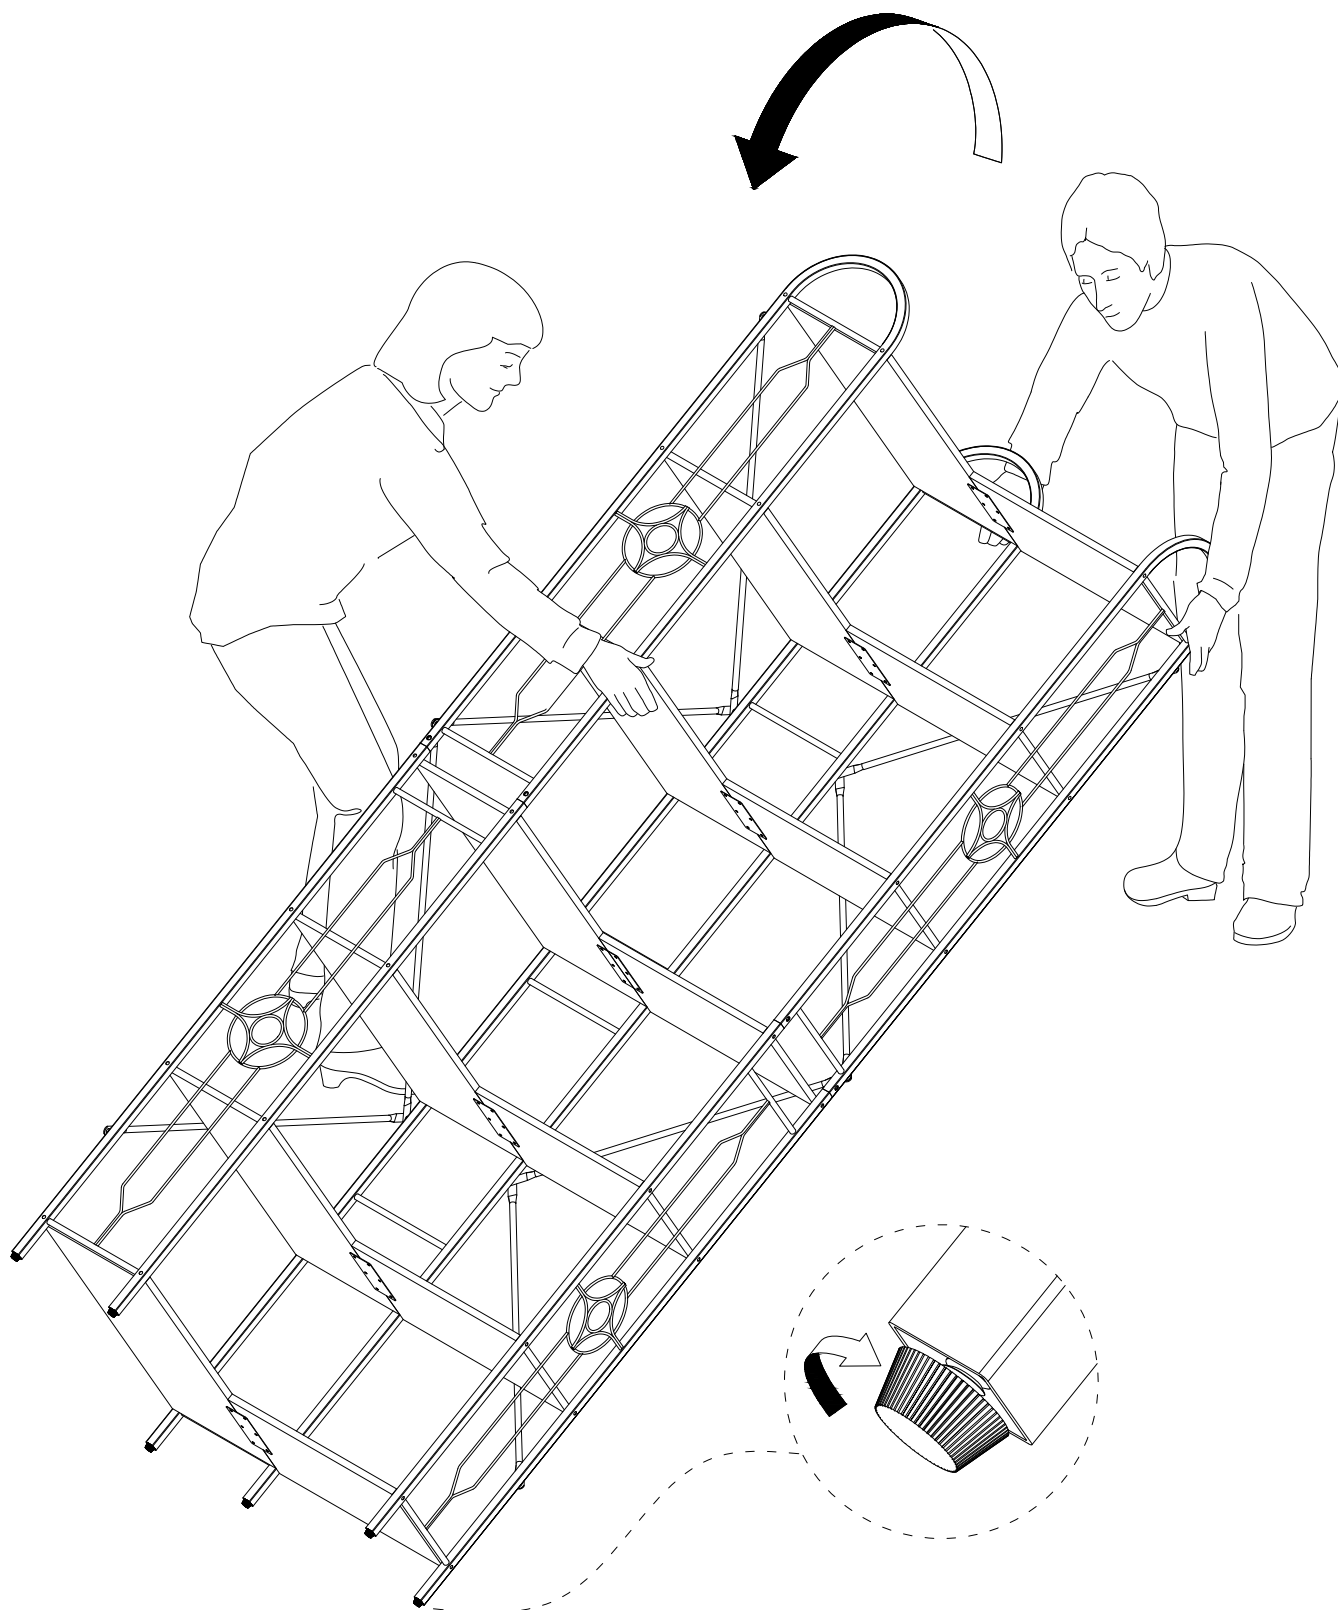

Please adjust the adjusting foot before lifting the corner frame.

INSTALLATION INSTRUCTION



STEP 10

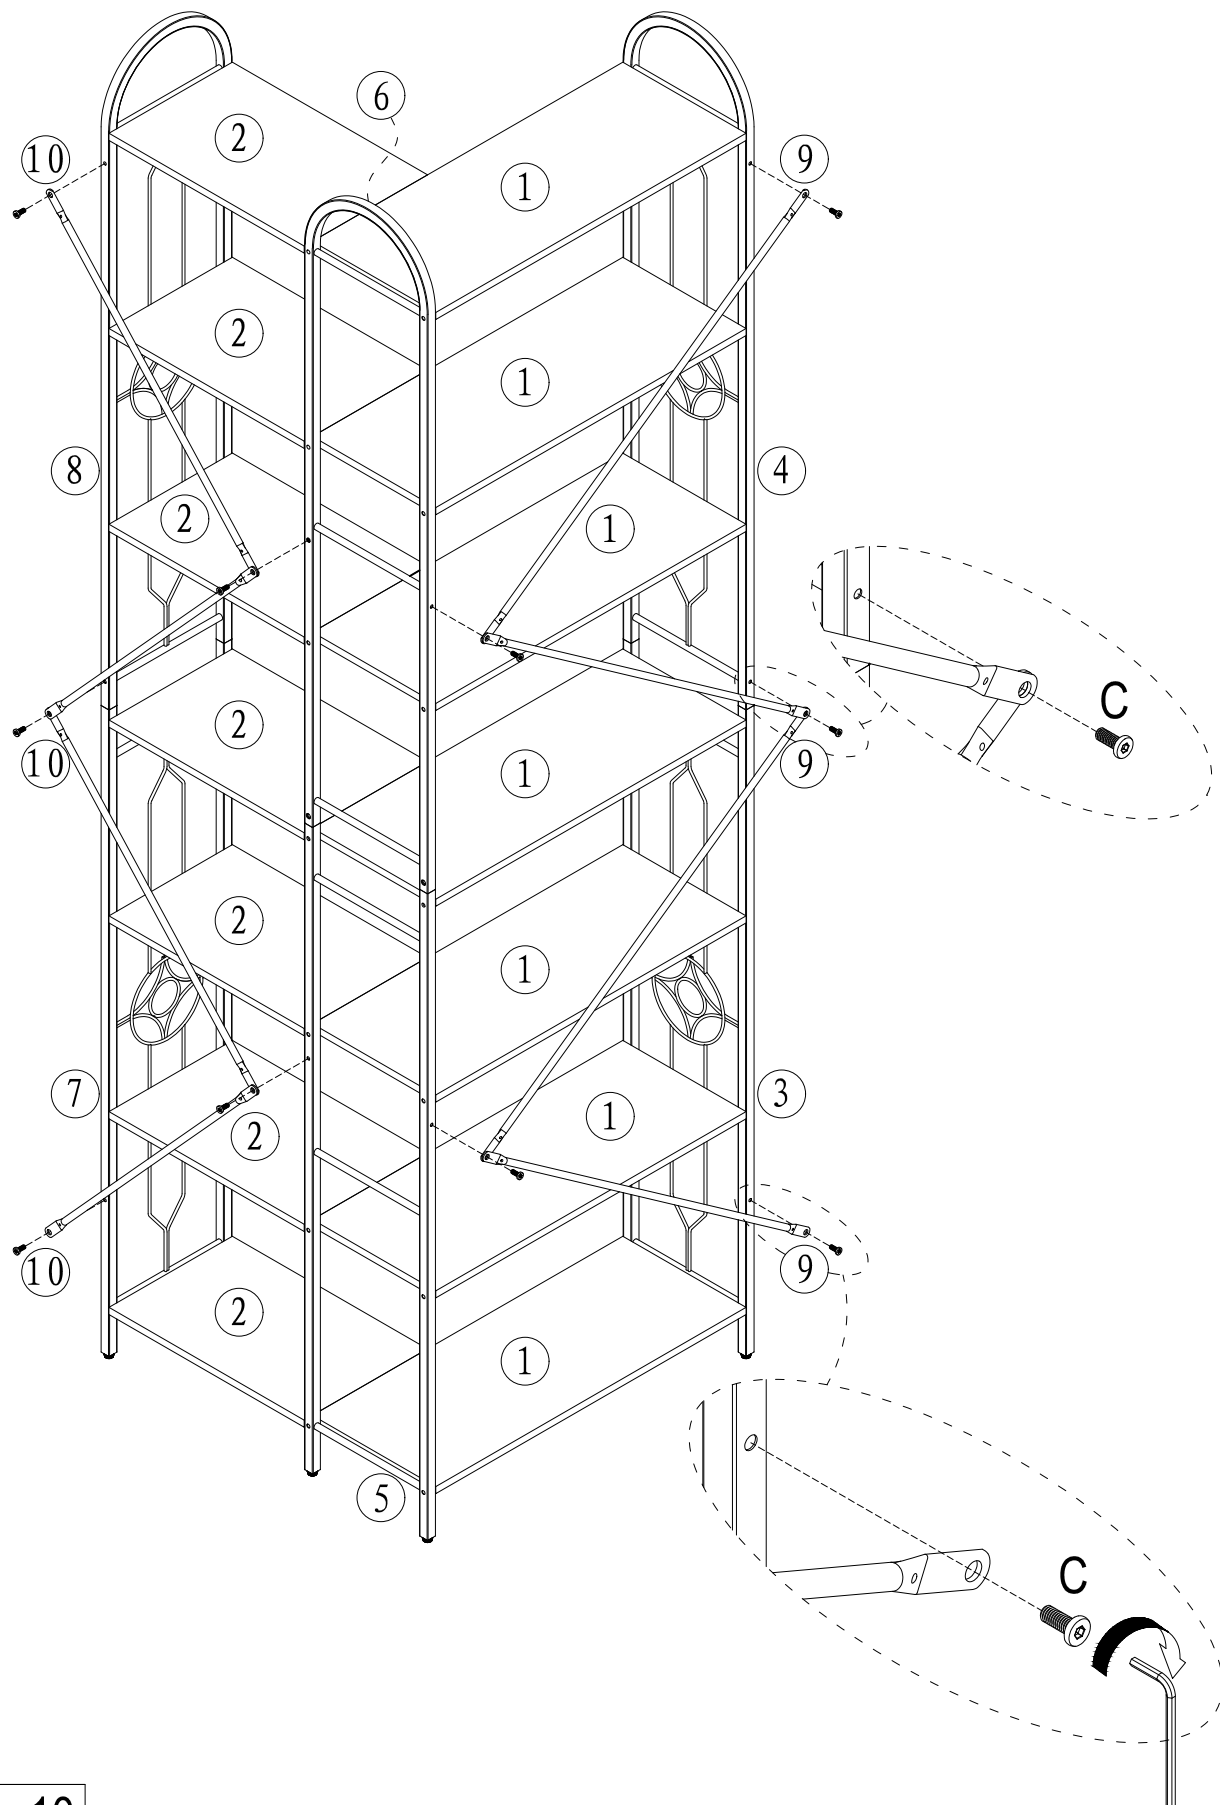

 C x10

INSTALLATION INSTRUCTION

STEP 11

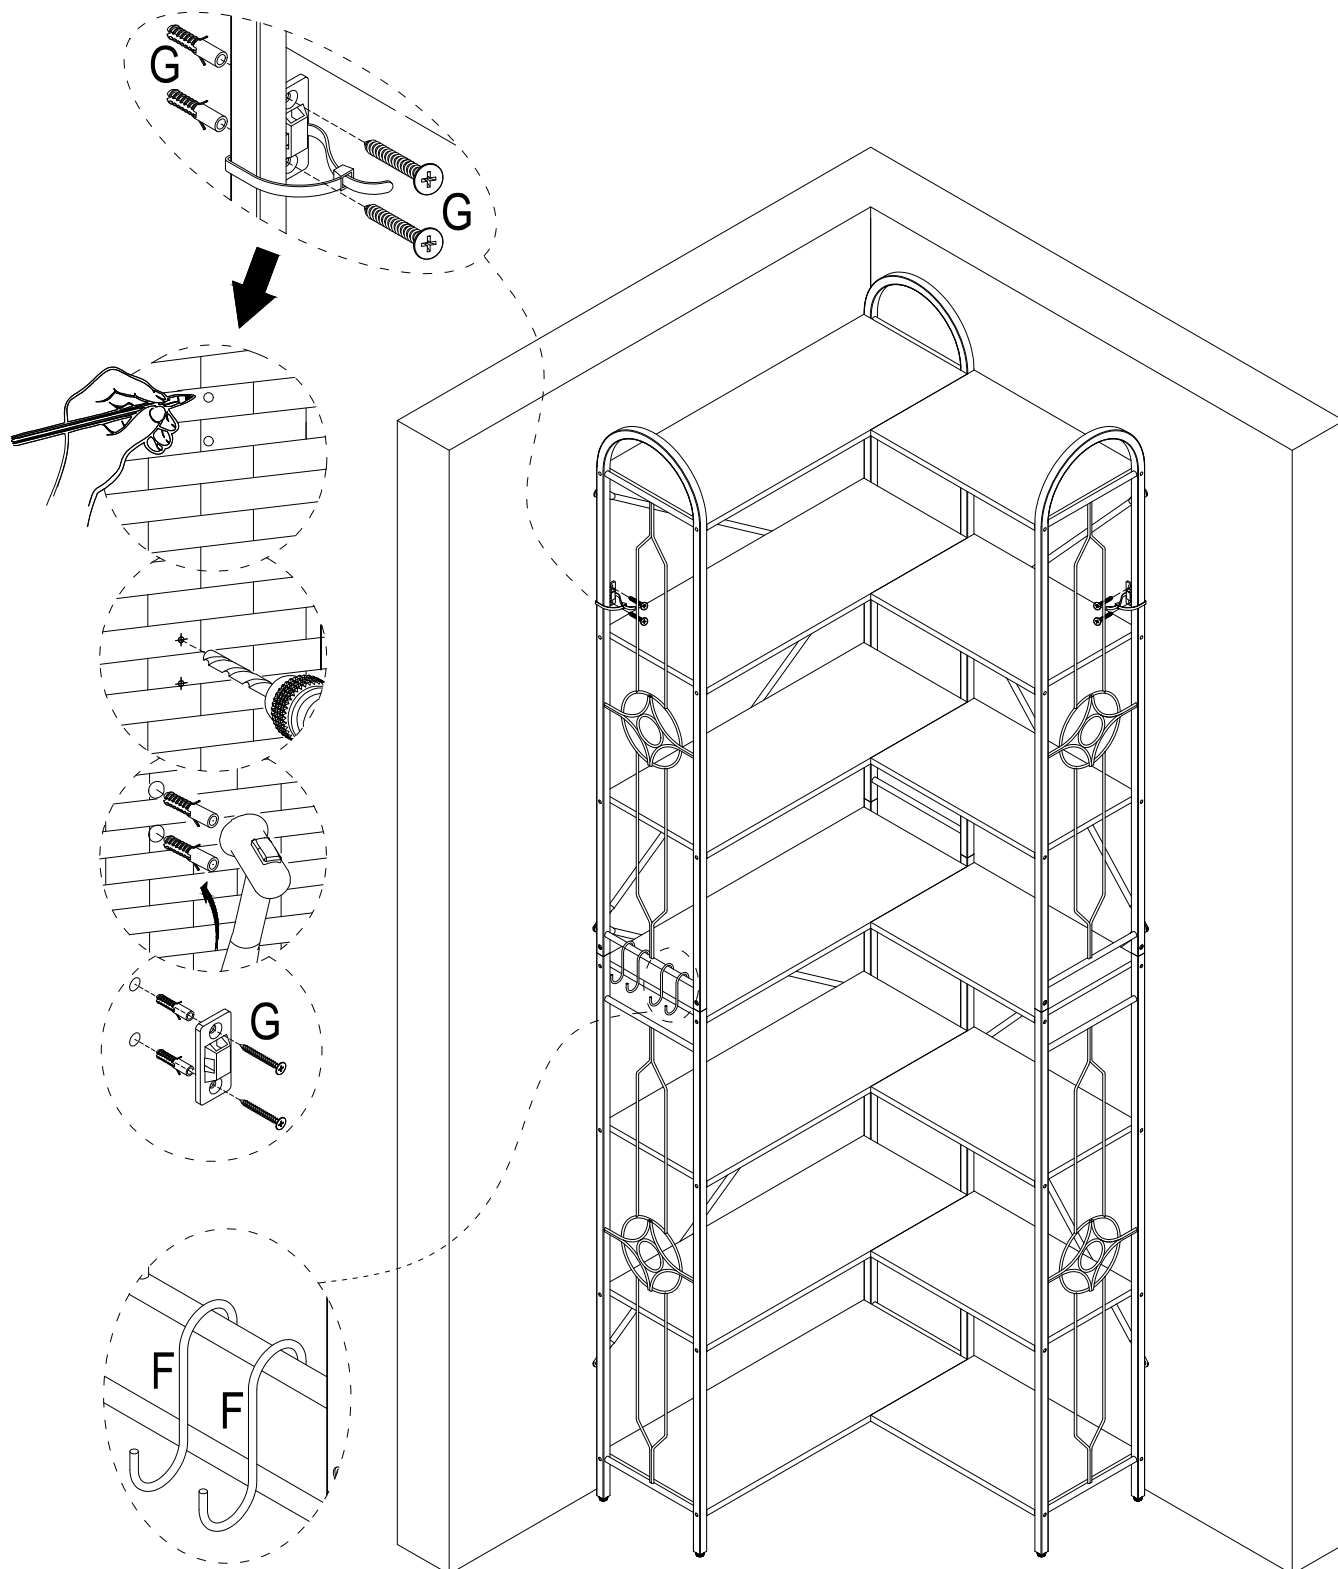

INSTALLATION INSTRUCTION

STEP 12

