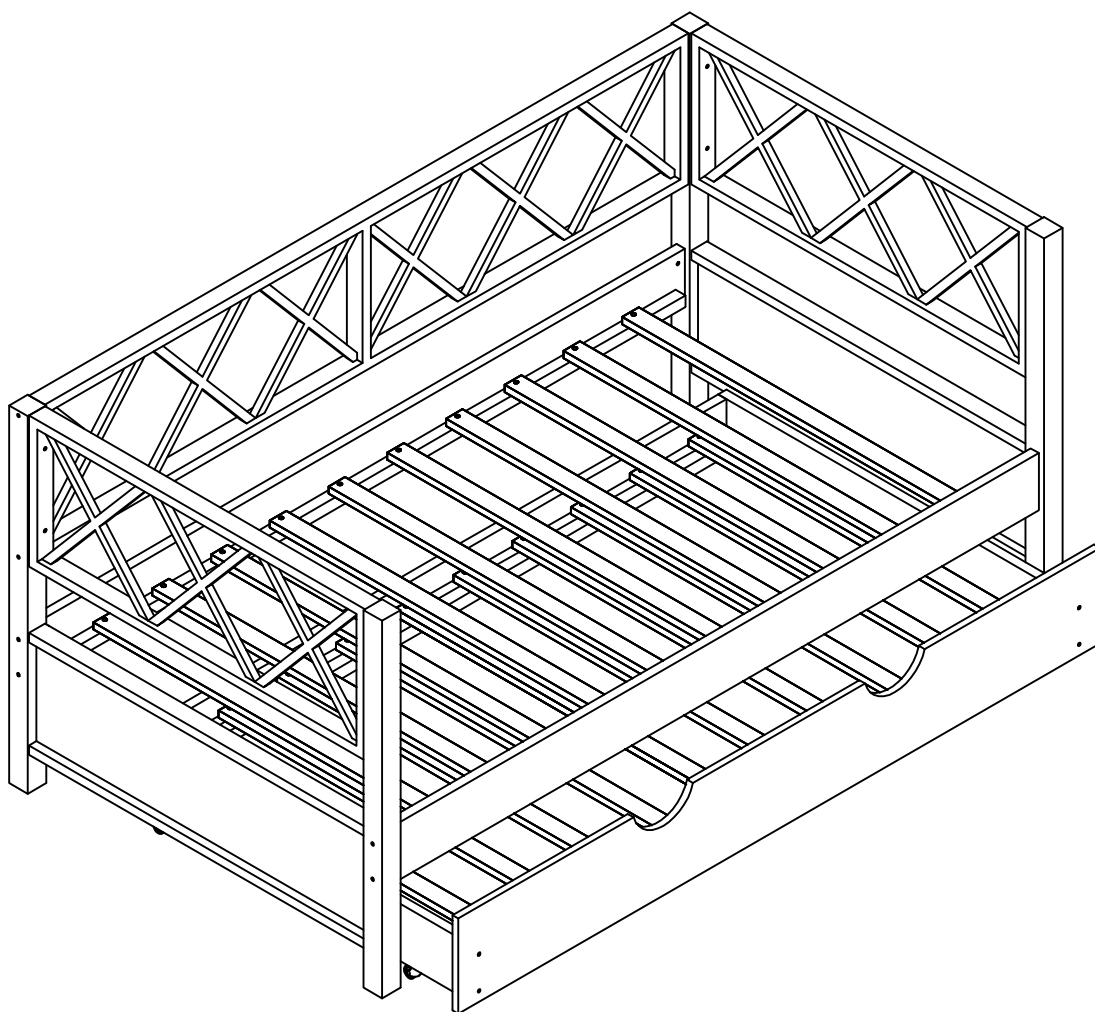
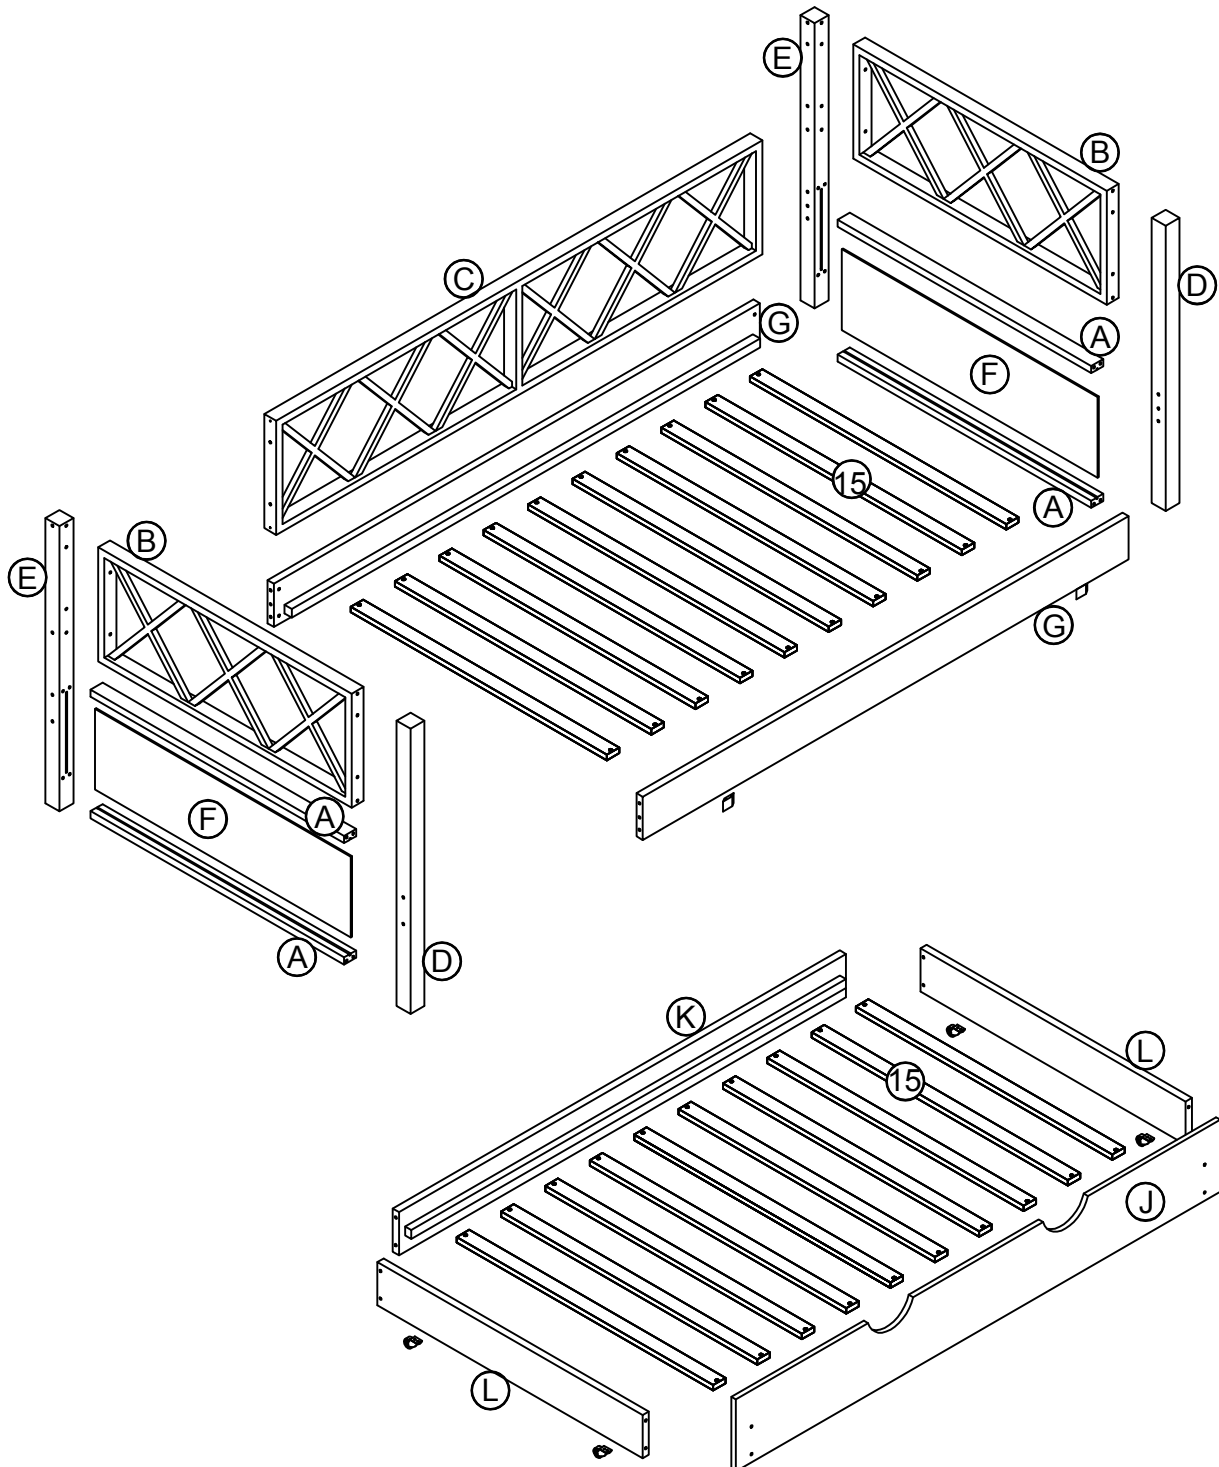


ASSEMBLY INSTRUCTIONS










DAYBED WITH TRUNDLE







DETAIL VIEW




PART LISTS

A		B		C	
Side bar - 4pcs		Side Frame - 2pcs		Back Frame - 1pc	
D		E		F	
Front leg HB (L/R) - 2pcs		Back leg HB&FB (L/R)-2pcs		Side panel - 2pcs	
G		15		J	
Side rail - 2pcs		Slat - 20pcs		Trundle front - 1pc	
K		L			
Trundle back - 1pc		Trundle Left/Right - 2pcs			

HARDWARE LISTS


1  Ø10" x 30 mm Wood dower 36pcs	2  Ø1/4" x 100 mm Hex-Head bolts (8pcs)	3  Ø1/4" x 100 mm Hex-Head wood Screws (4pcs)
4  Ø1/4" x 35 mm Hex-Head bolt (8pcs)	5  Ø1/4" x 15 mm(9.5mm) Horizontal-Hole nut 16pcs	6  #4*30mm Wood Screws (44pcs)
7  Wheels Ø32 (4pcs)	8  (1/4")4.5*58mm Allen Key (1pc)	9  #4*15mm Wood Screws (8pcs)
10  Ø1/4" x 65 mm Hex-Head bolts (8pcs)	11  Wood block 2pcs	

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

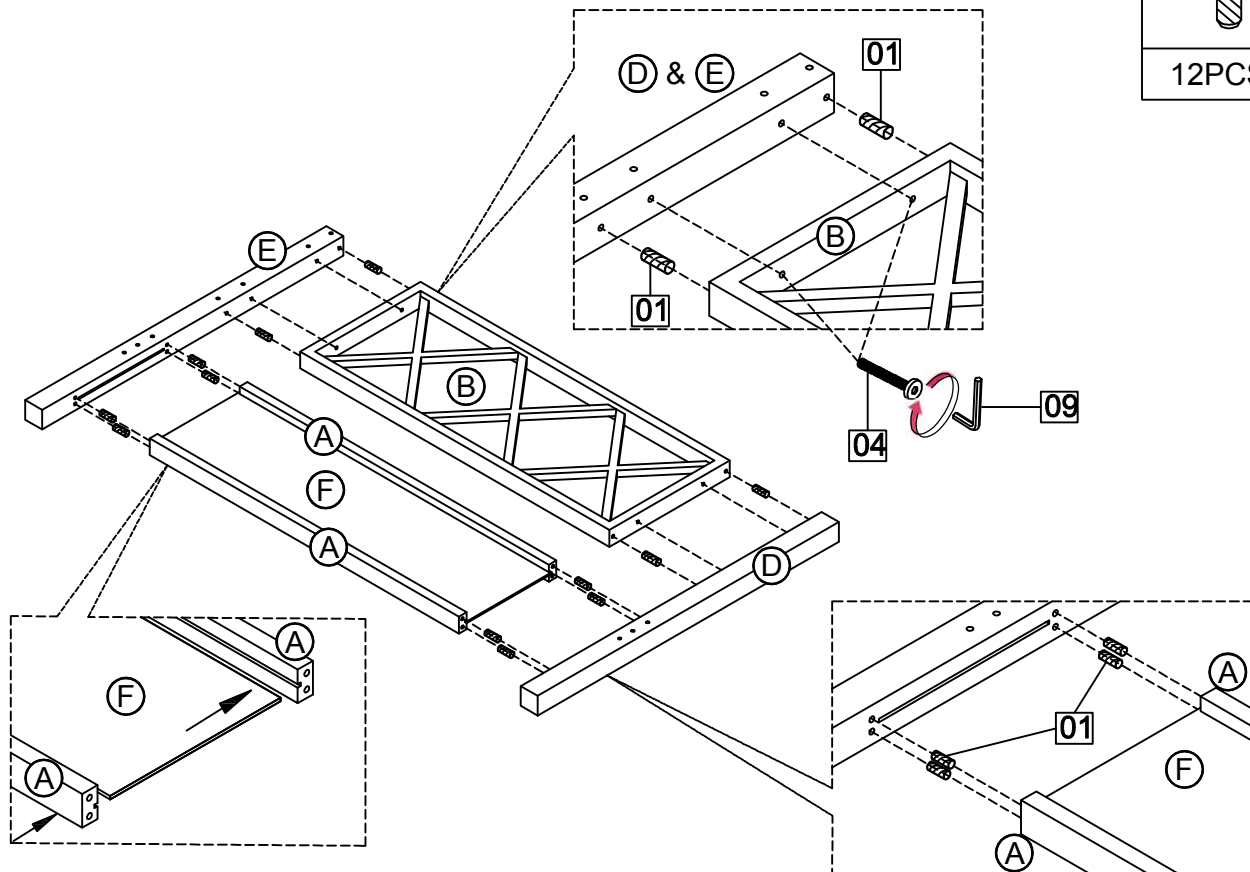STEP 1:




01		04	
12PCS		4PCS	

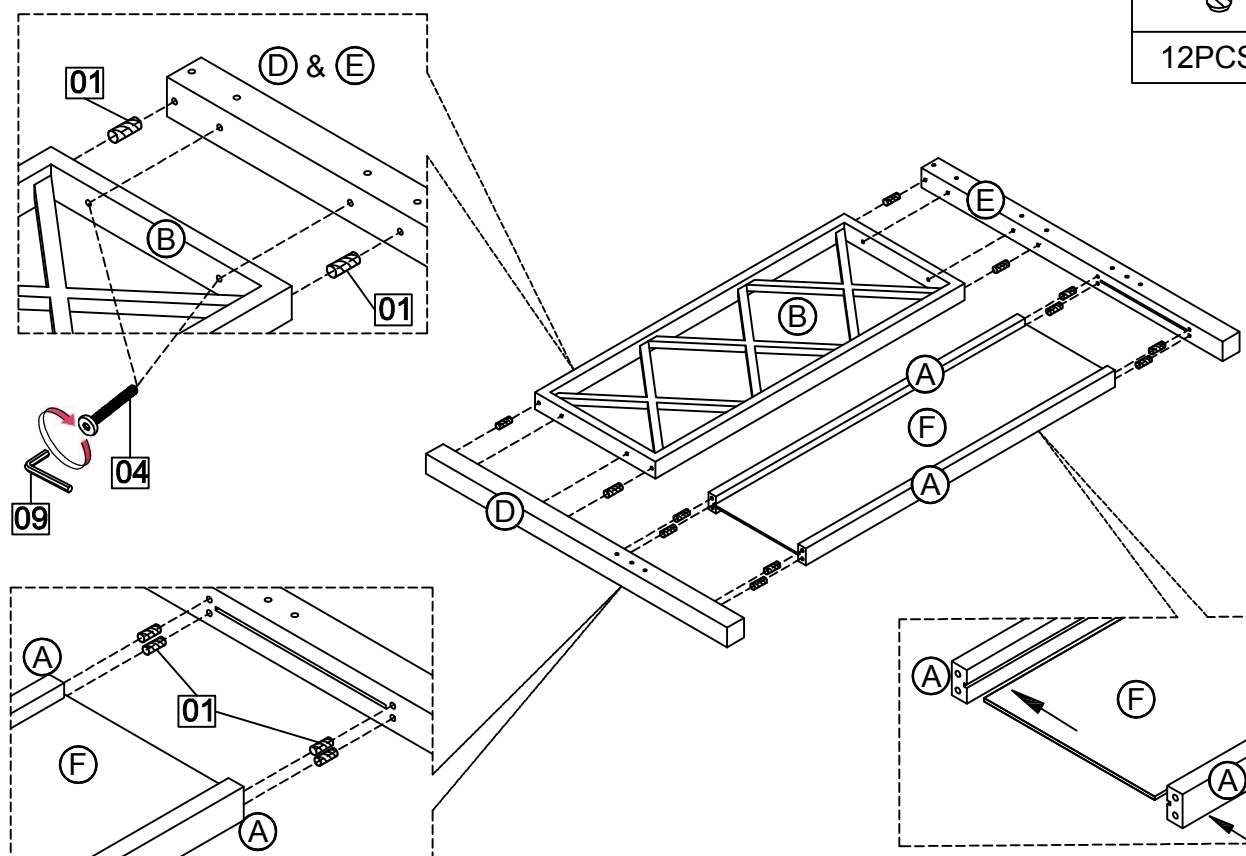STEP 2:




01		04	
12PCS		4PCS	

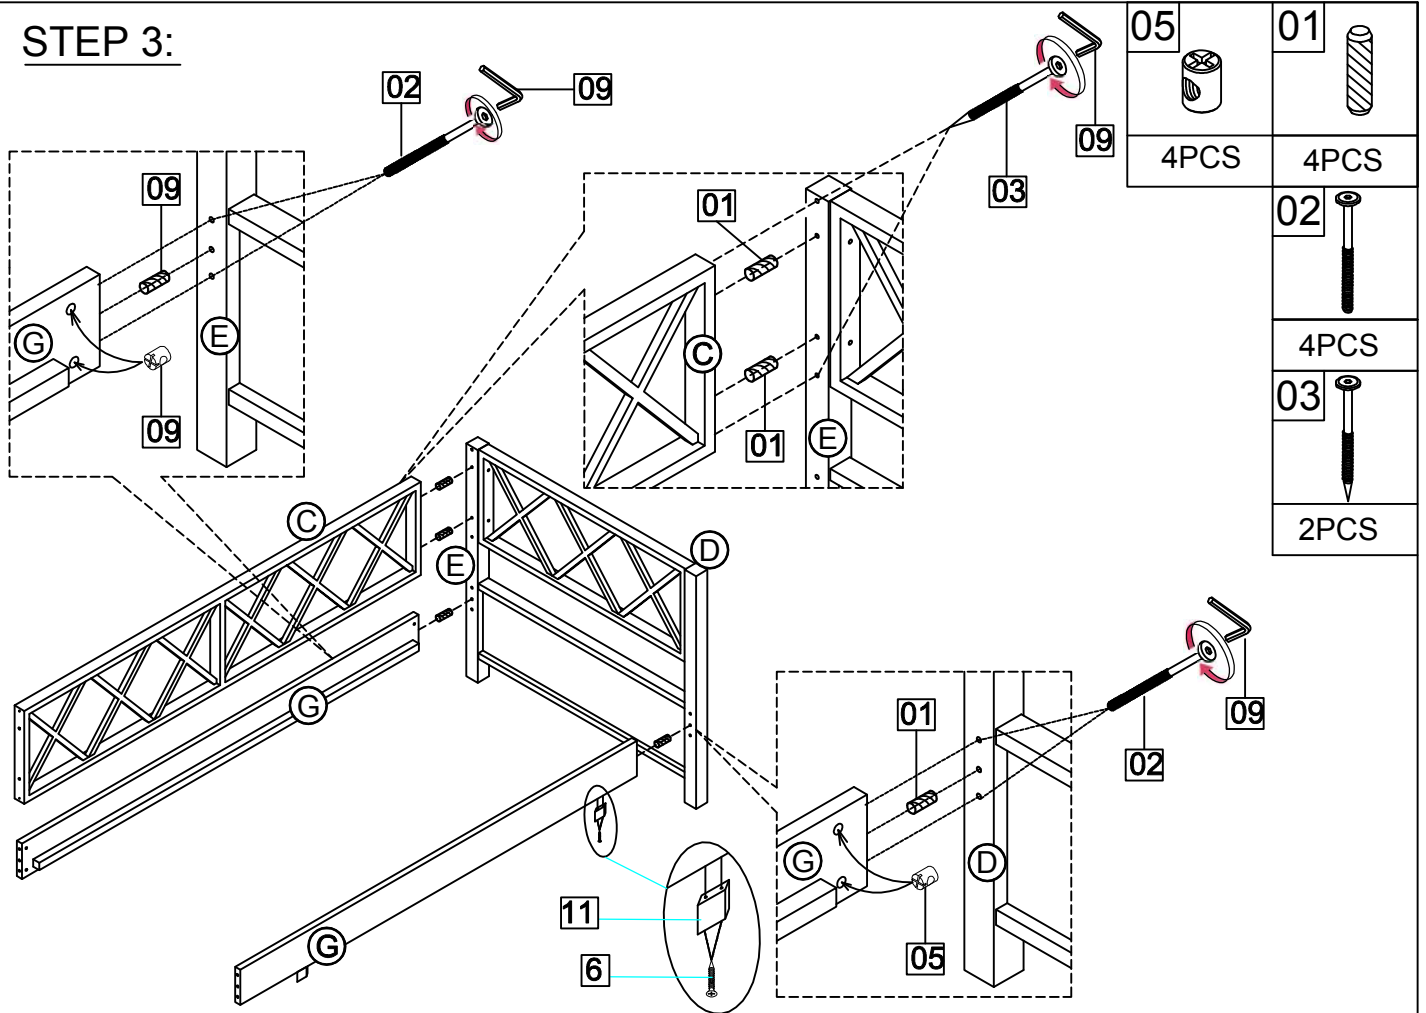
STEP 3:



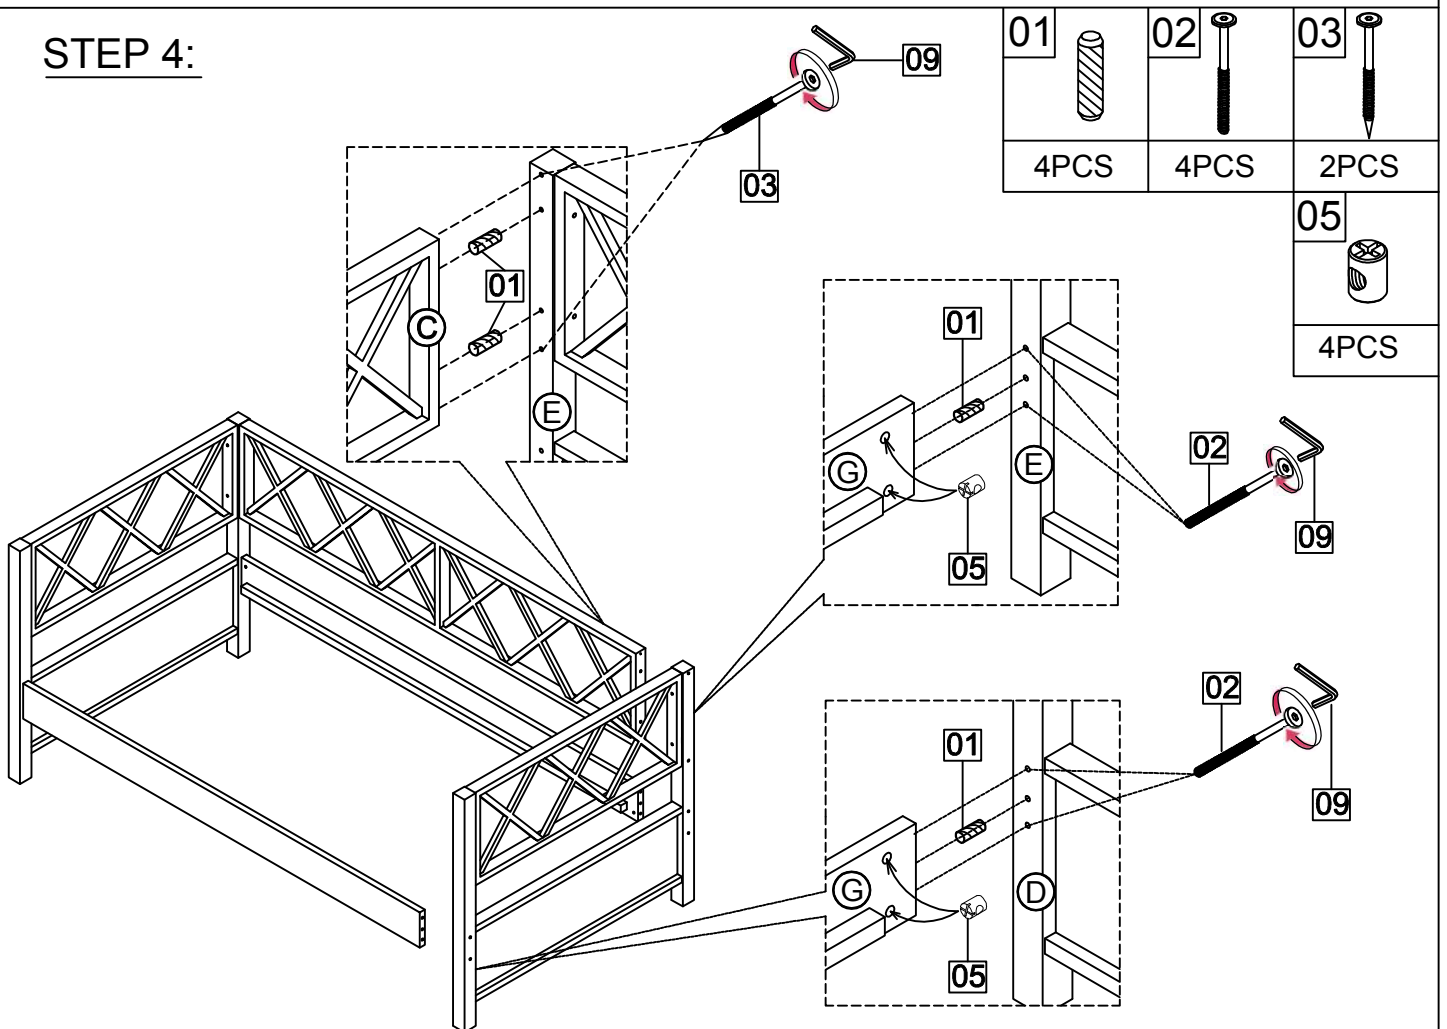STEP 4:




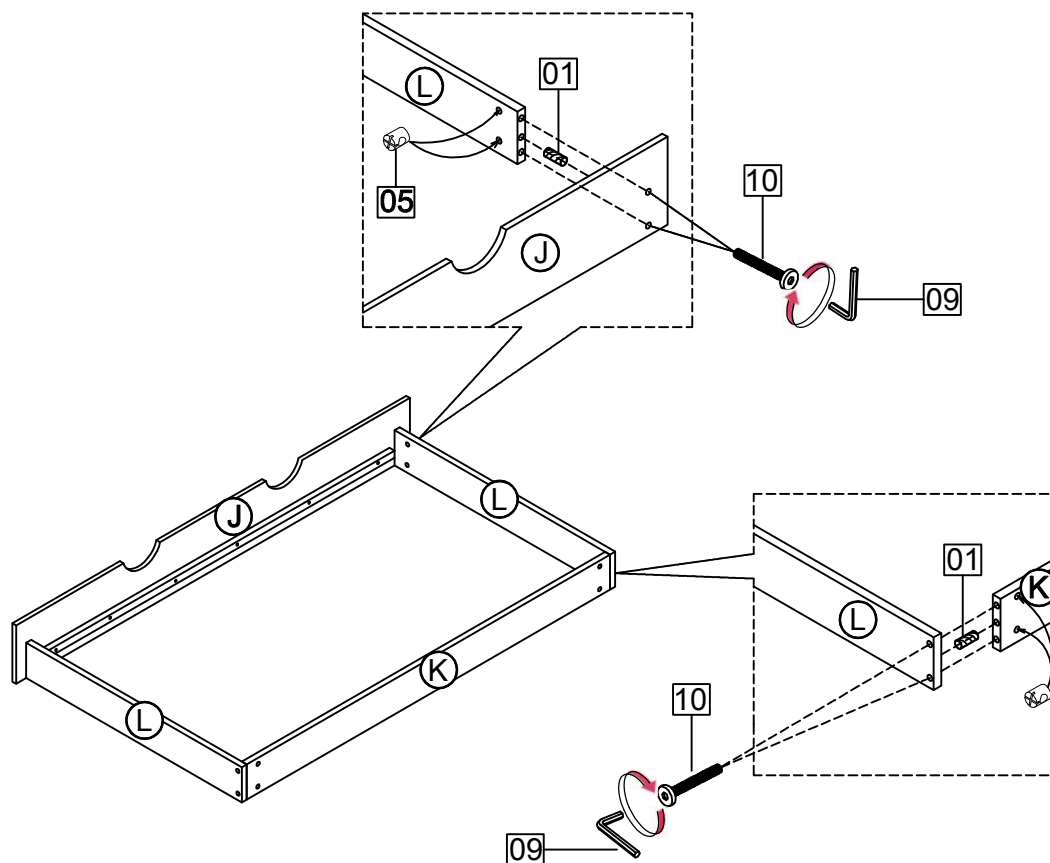STEP 5:



01		10	
4PCS		8PCS	
		05	
		8PCS	

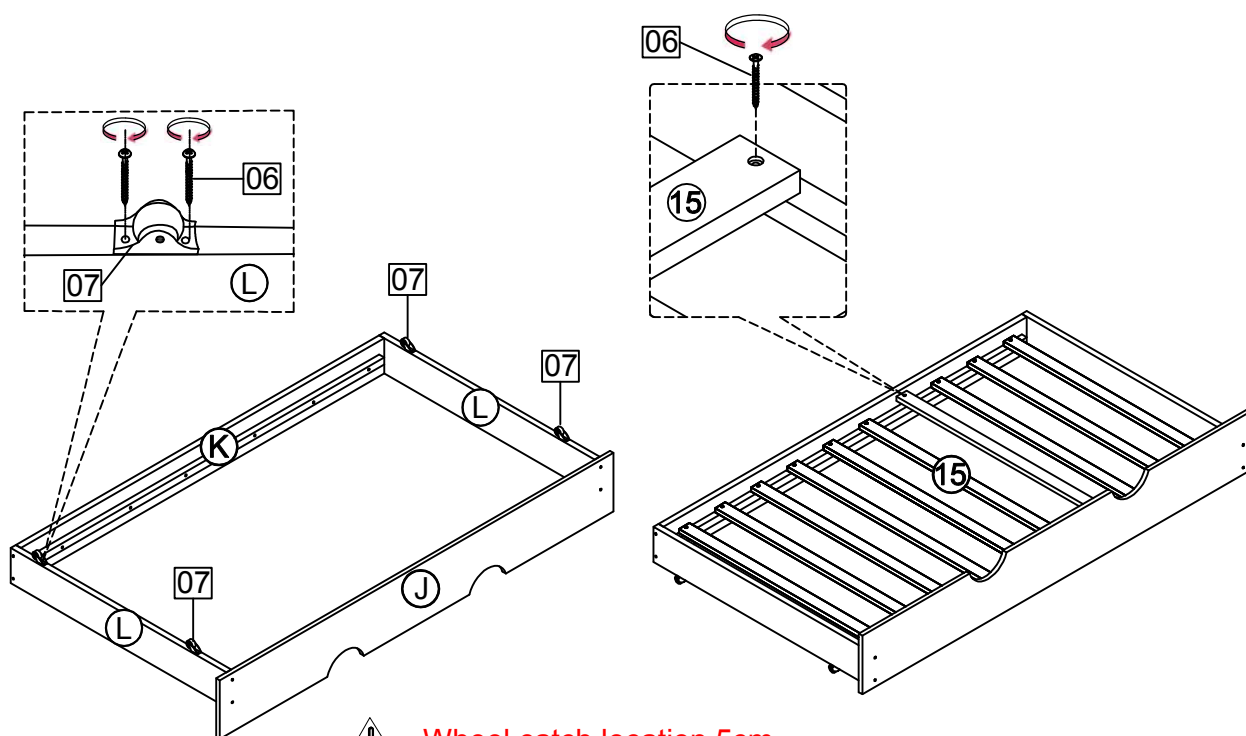STEP 6:




09		07	
8PCS		4PCS	

 Wheel catch location 5cm
from Trundle front

STEP 7:


06

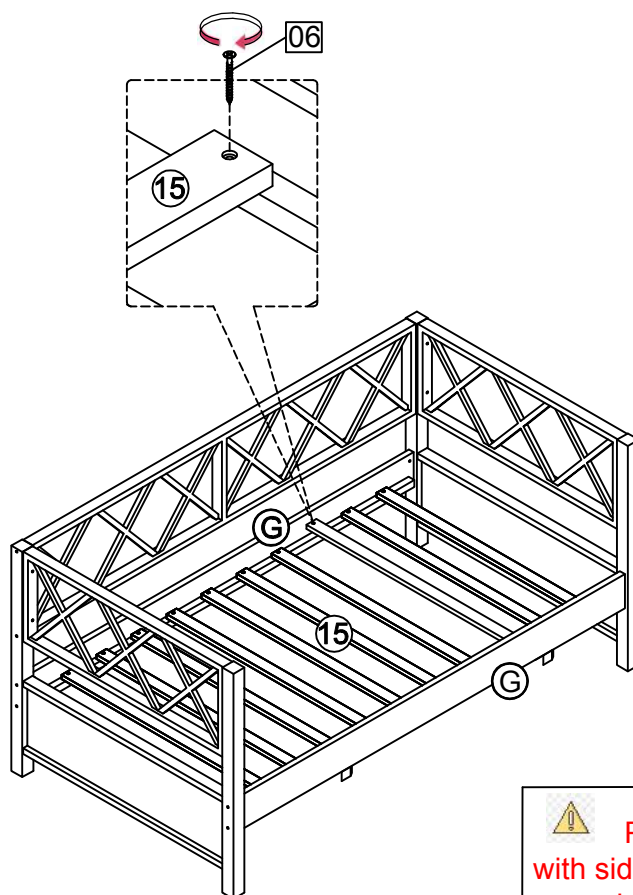20PCS



 Please complete screw all slats with side rail before put the mattress on and use

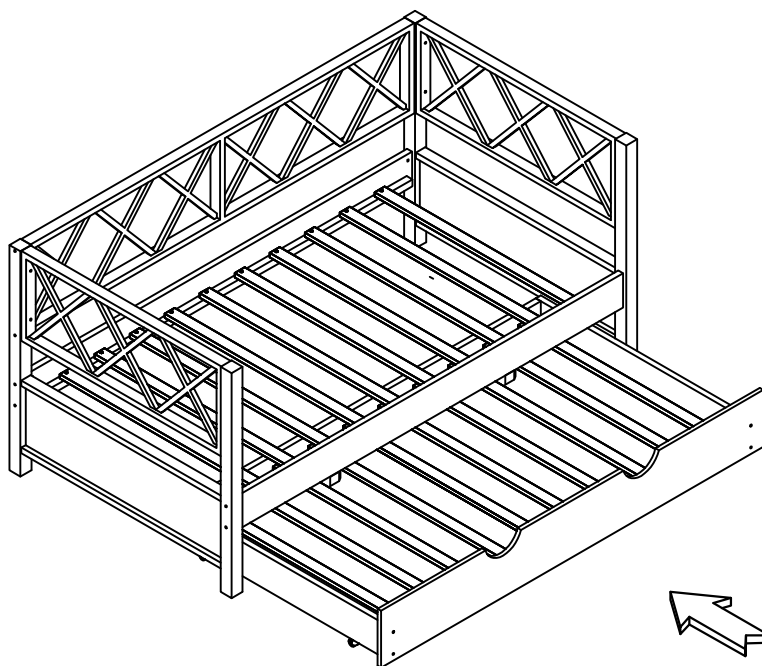STEP 8:



Assembly Complete