



ASSEMBLY INSTRUCTION

51-D

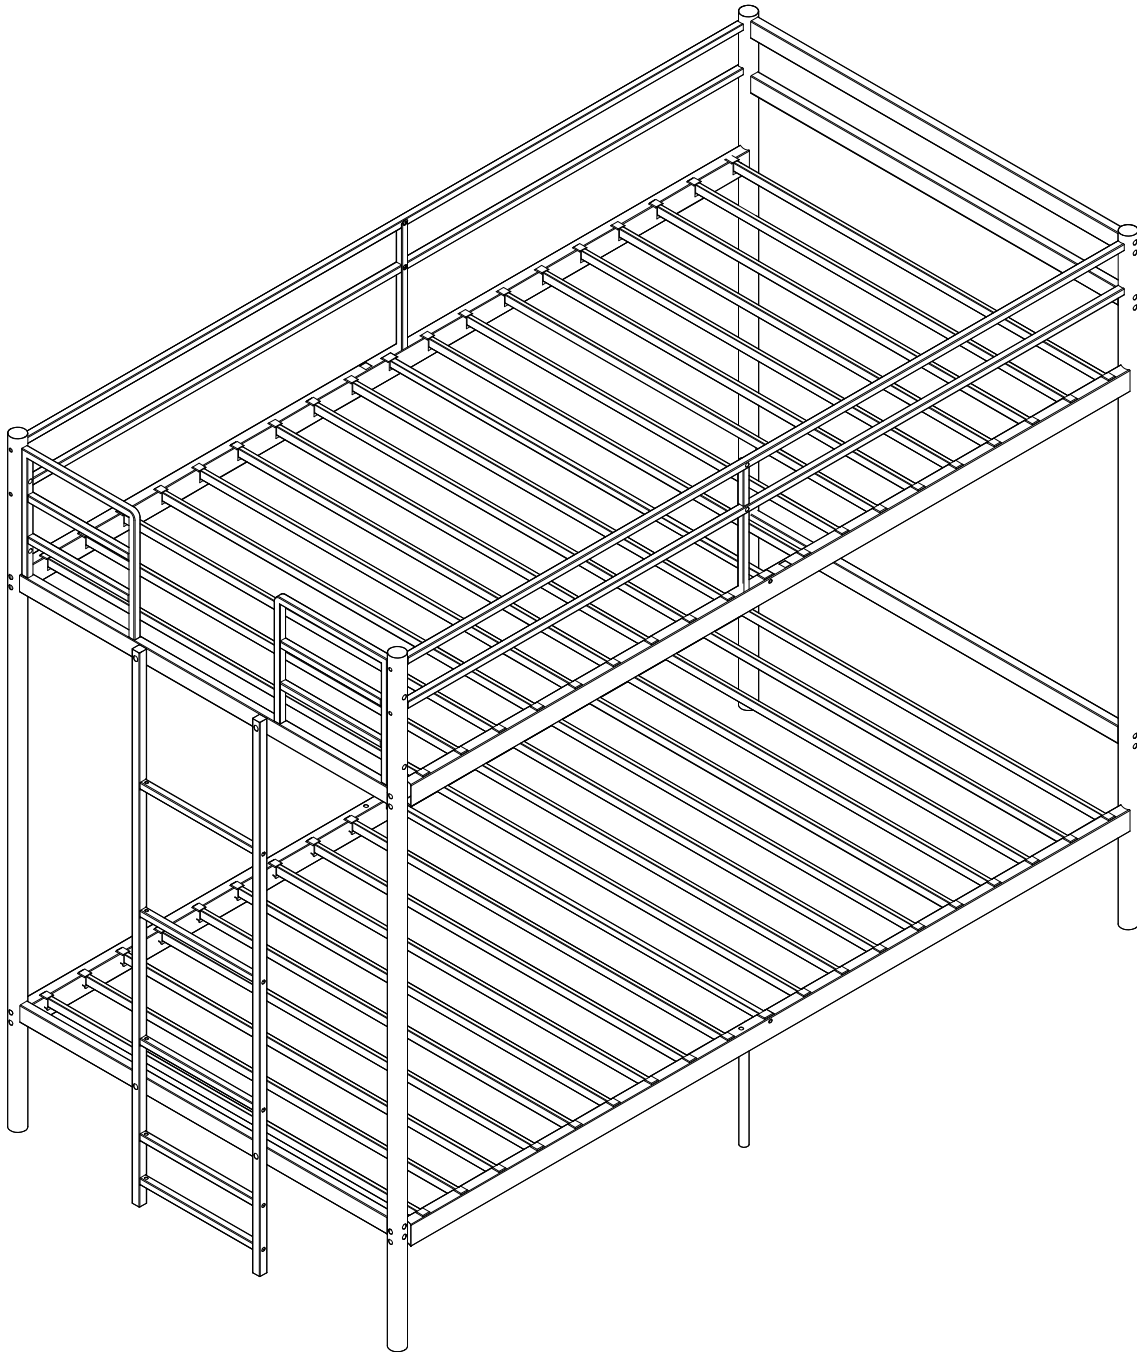


IMPORTANT NOTE

1. Please check that all parts are complete before installation.
2. Please strictly follow the installation steps to install.
3. Please install the bed on a clean and smooth surface to prevent any damage
4. Please do not use the power tools to assemble the bed.
5. Please periodically check all the fittings and re-tighten as necessary.
6. Please do not use the bed unless all bolts and screw are firmly secured.
7. When assembling the bed, first secure the screws loosely, then tighten them all at the end after all parts are assembled.

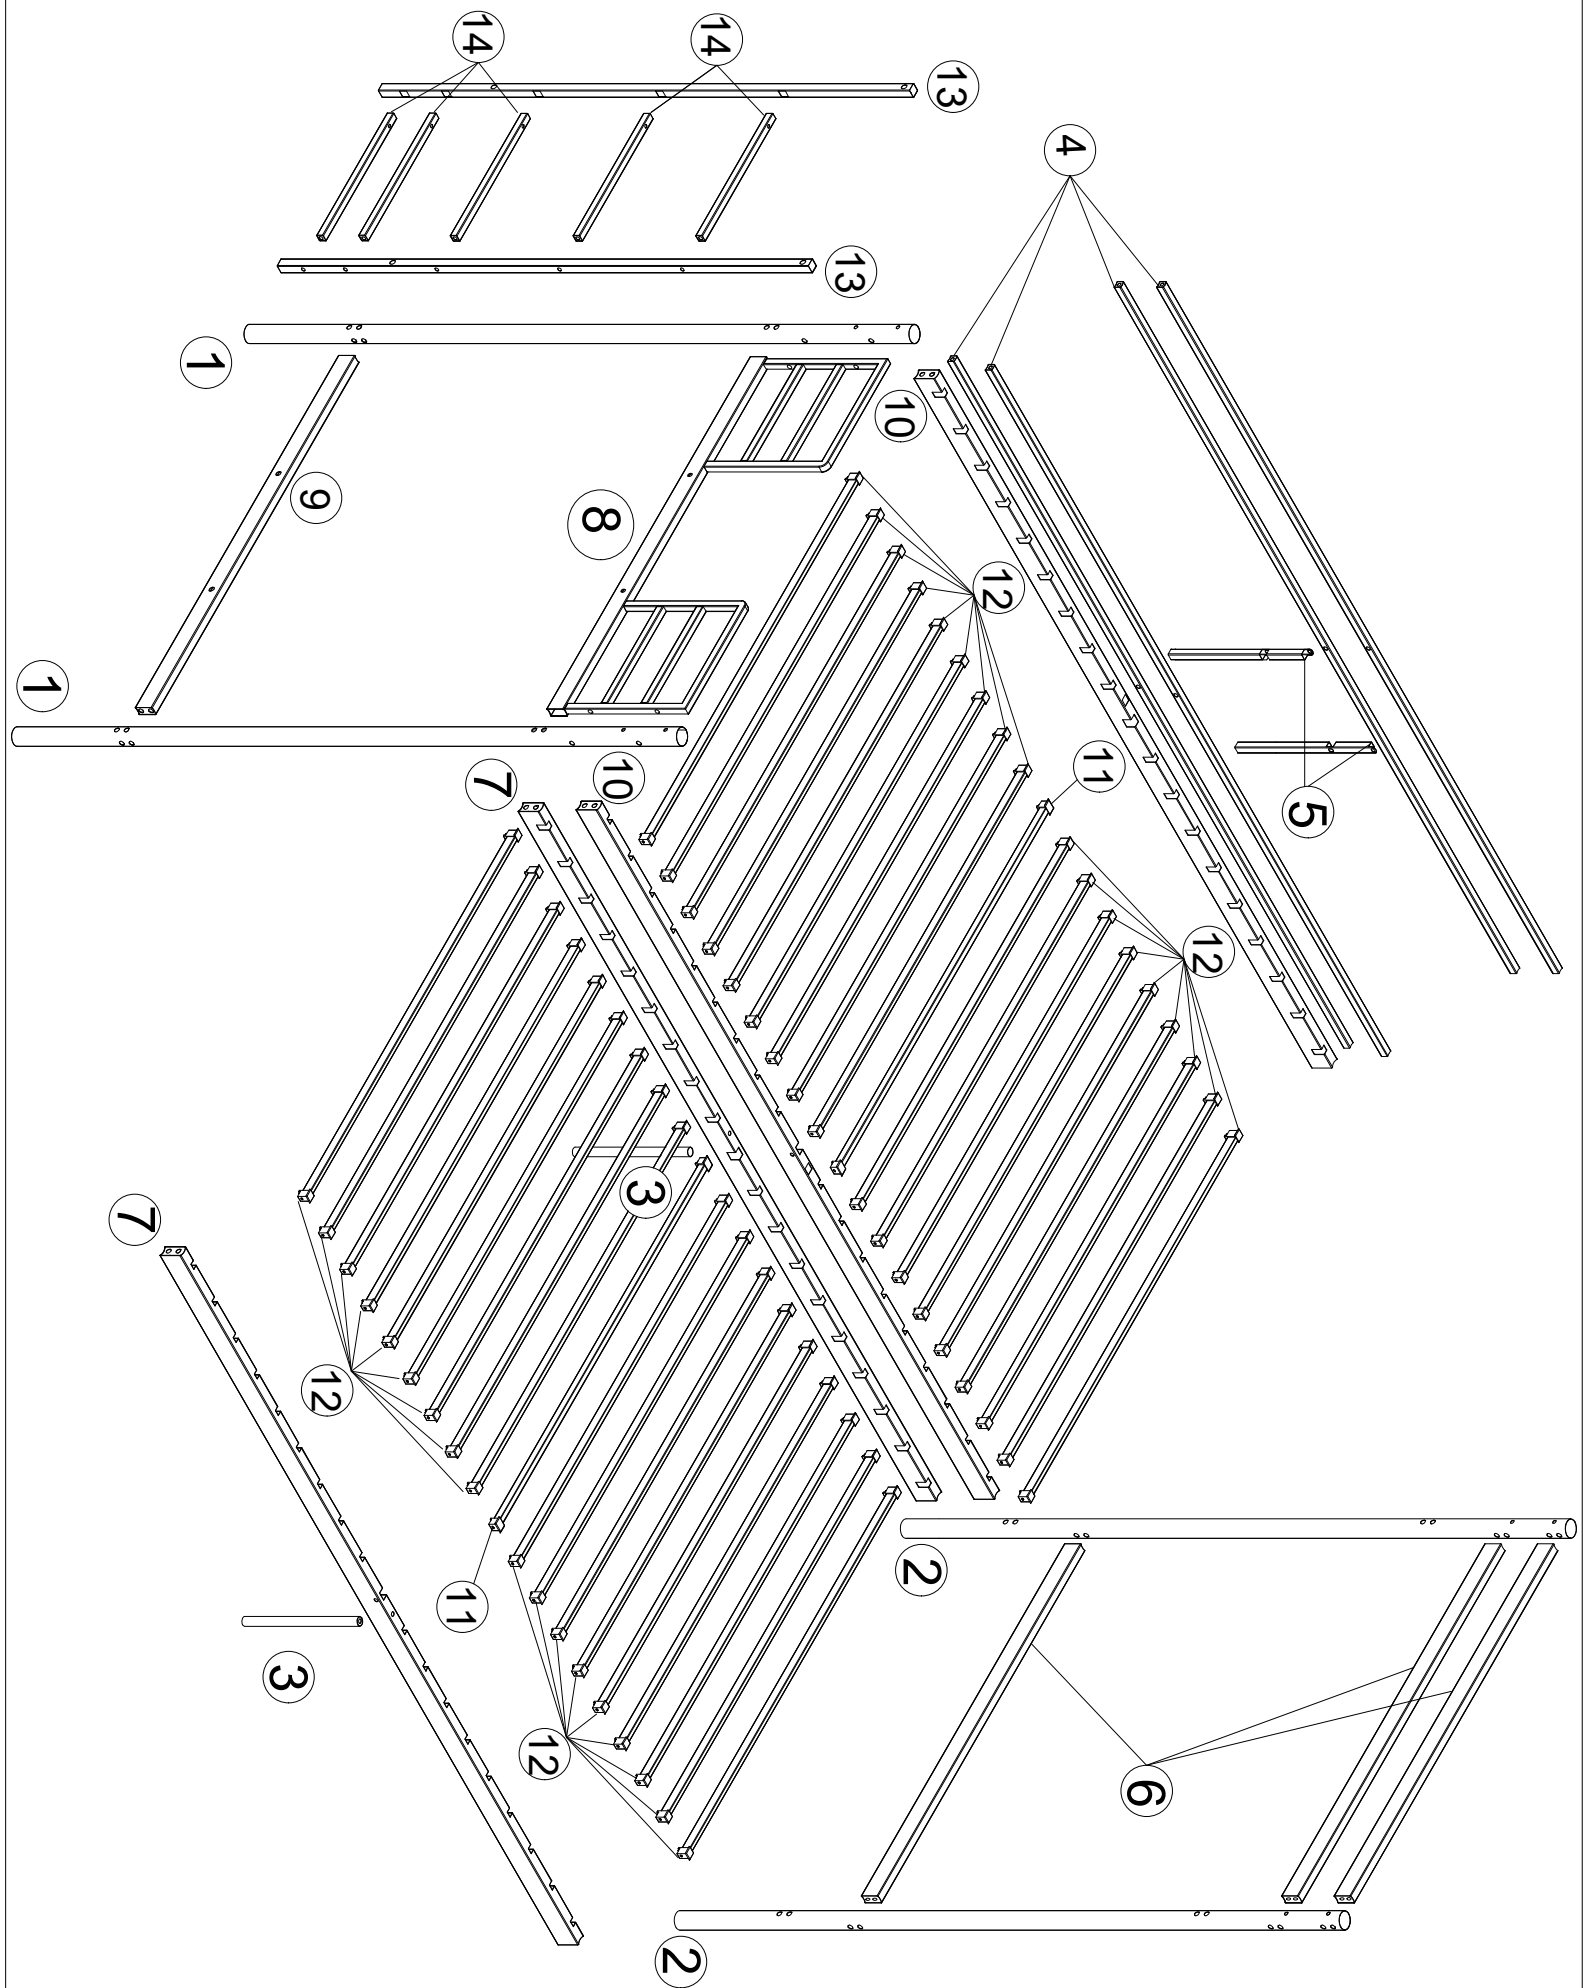


Components List


1 x2

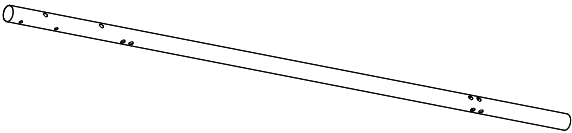


2 x2

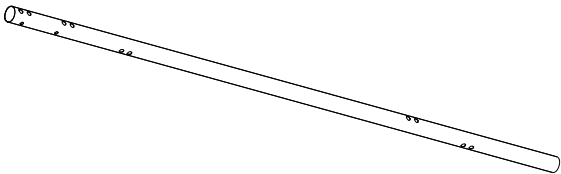


3 x2



4 x4

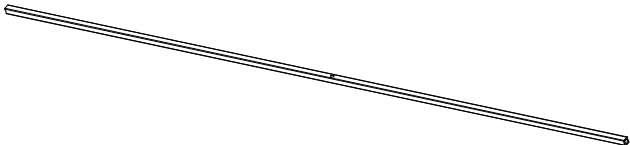


5 x2




6 x3




7 x2

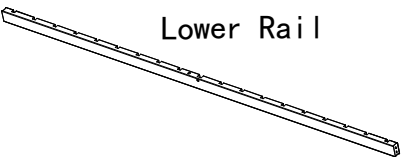


8 x1

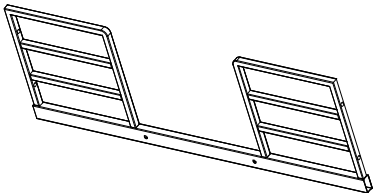


9 x1




10 x2

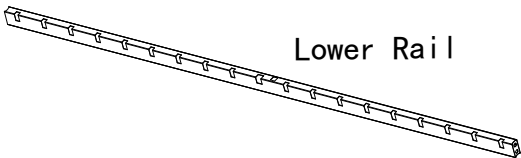


11 x2




12 x36




13 x2


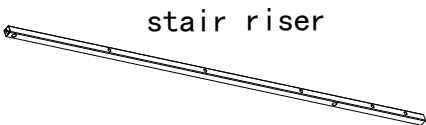


14 x5

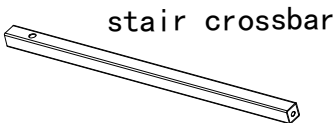


Hardwares List

Item	Description	Qty
(A)	 M8x60	32
(B)	 M8x50	4
(C)	 M8x30	4
(D)	 M8x16	2
(E)	 M6x60	8
(F)	 M6x20	12
(G)	 M6x12	4
(P)	 M6x40	4
(L)	 M8x25	8
(T)	 M6 x12	4
(H)	 $\phi 20$	40

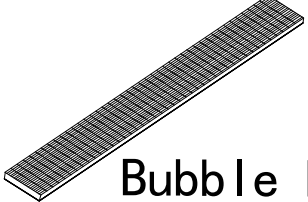Item	Description	Qty
(I)	 $\phi 25$	4
(J)	 (16*16)	4
(K)	 (10*20)	72
(M)	 Bubble Pads	5
(N)	 M6 Allen key	2
(R)	 M8 Allen key	2
(U)	 M6x35	4
(V)		4
(W)		2


STEP1

(A)		M8x60	16	(B)		M8x50	4	(L)		M8x25	4
(H)		φ20	16	(I)		φ25	4	(R)		M8 Allen key	2

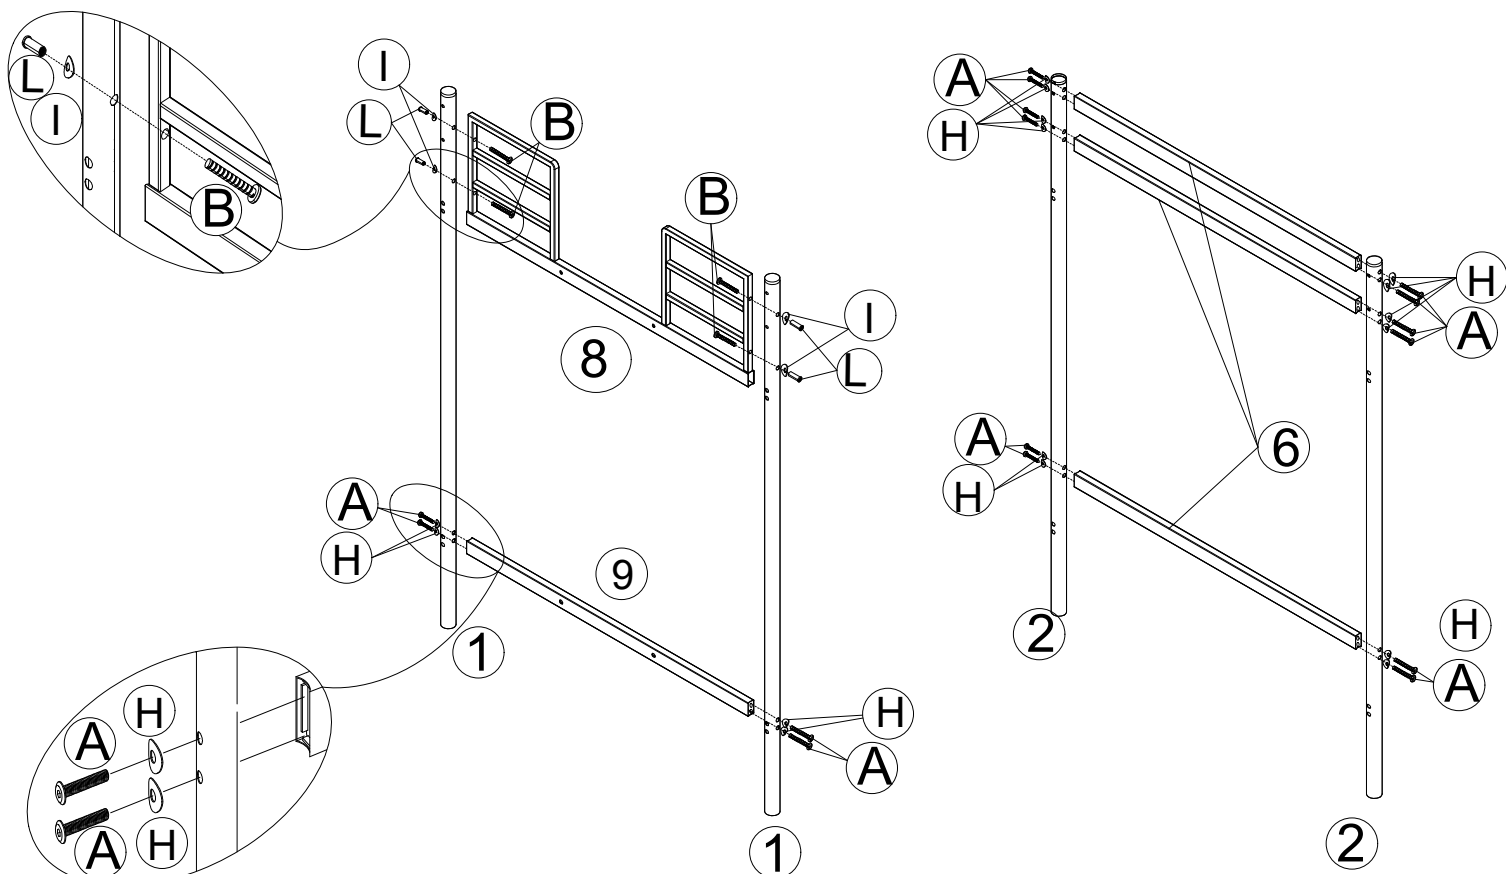


STEP2

(A)		M8x60	16	(D)		M8x16	2	(H)		φ20	16
------------	---	-------	----	------------	---	-------	---	------------	---	-----	----

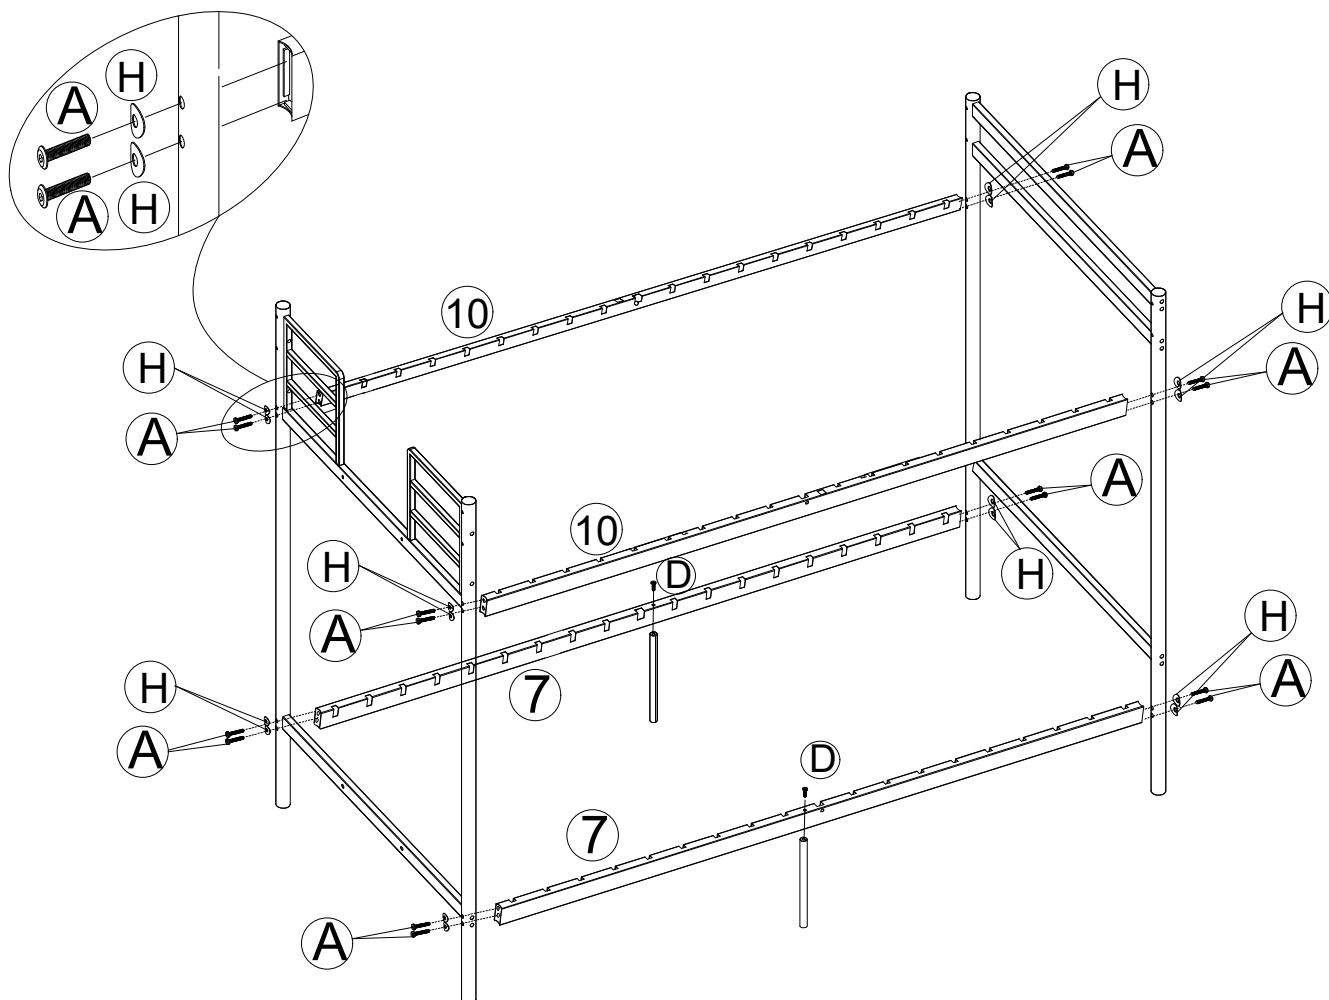


(J)		(16*16)	4	(K)		(10*20)	72
------------	---	---------	---	------------	---	---------	----

STEP3

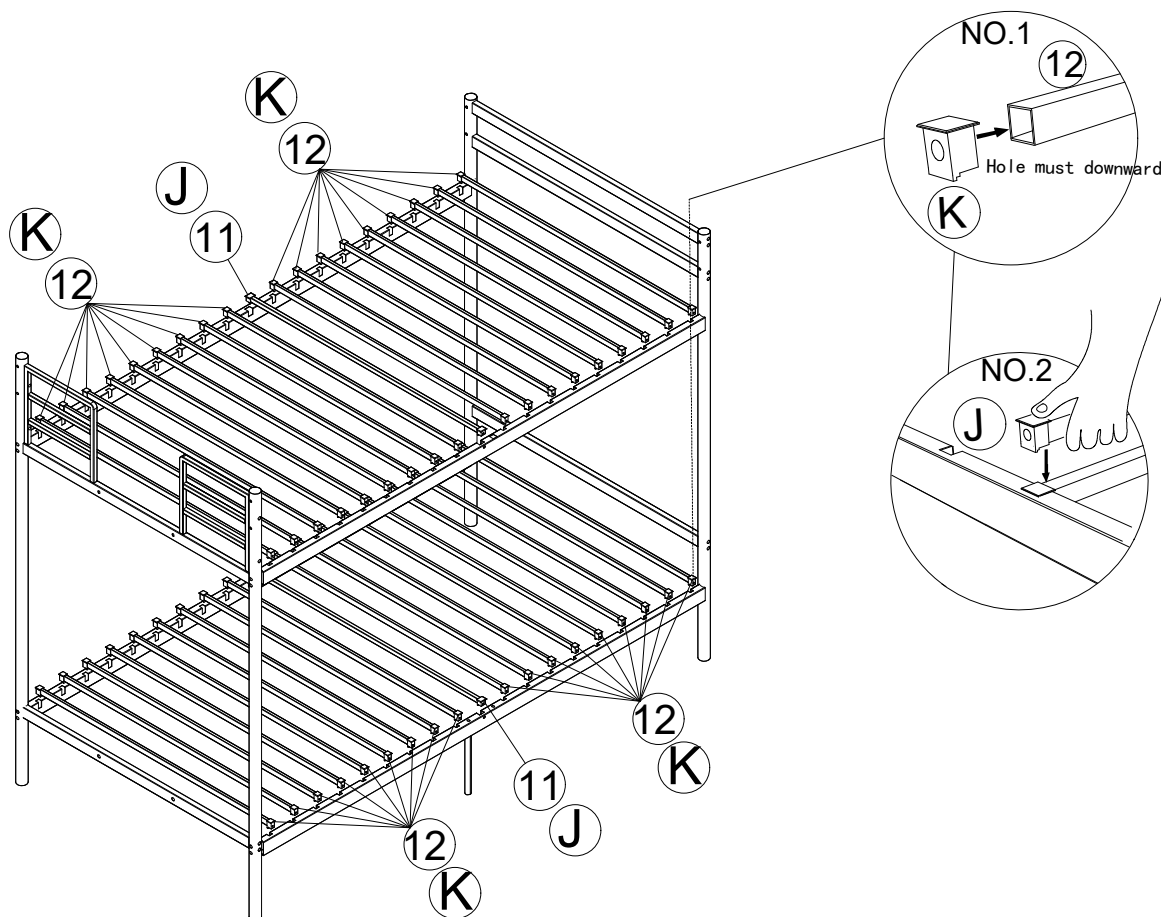

STEP4

(E)		M6x60	8	(F)		M6x20	2	(P)		M6x40	4
(T)		M6 x12	4	(G)		M6x12	4	(H)		φ20	8


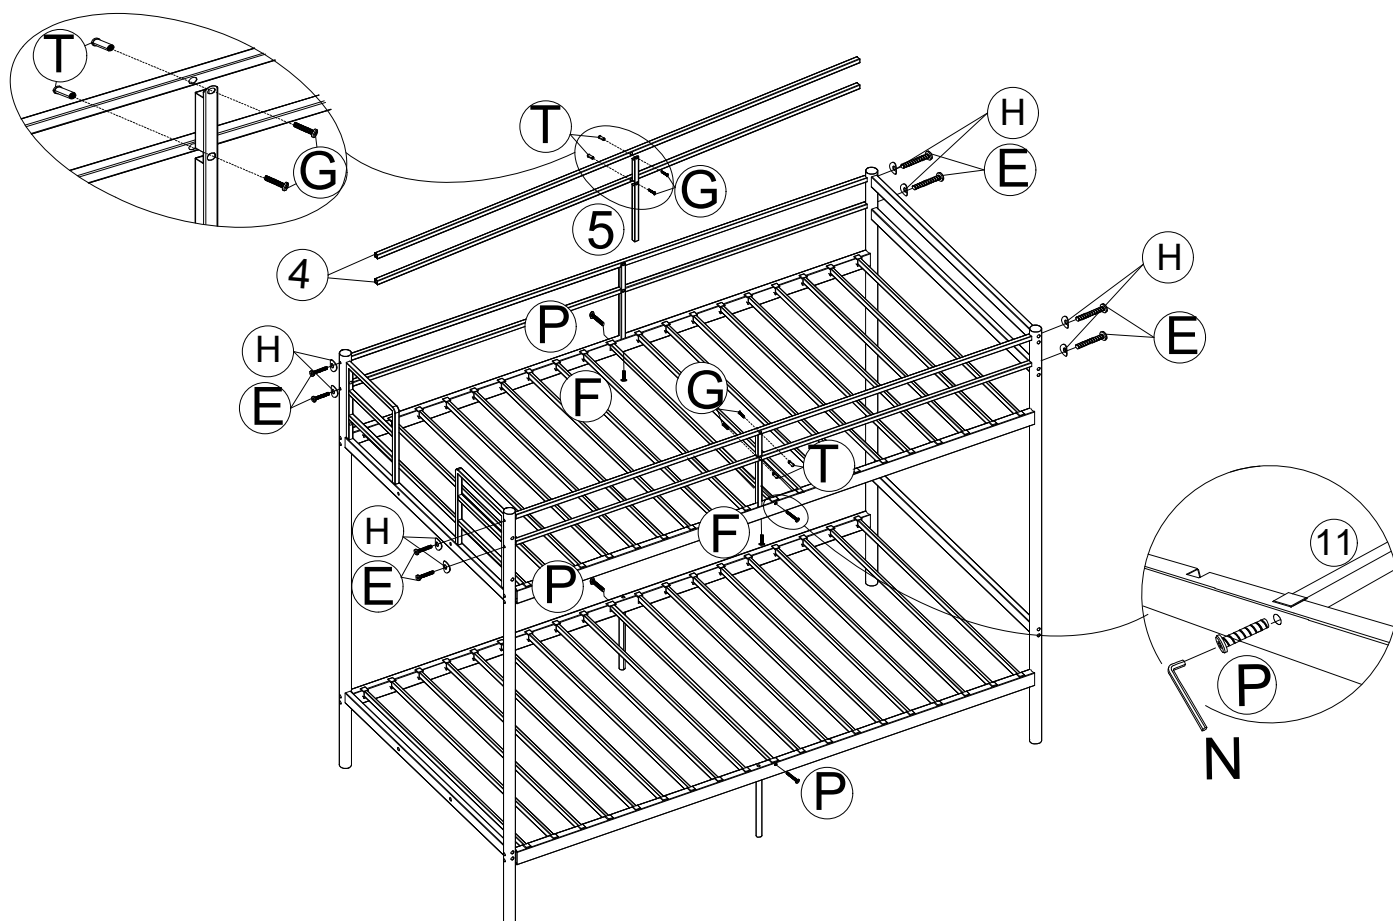


STEP5

		M8x30	4			M8 x25	4			M6x20	10
		Bubble Pads	5			M8 Allen key	2			M6 Allen key	2

REMARK: 11.1
Clean the sticking part and keep it clean before sticking the velcro, to avoid affecting the stickiness.

REMARK: 11.2
Tear off the white isolation paper on the back of Bubble Pads

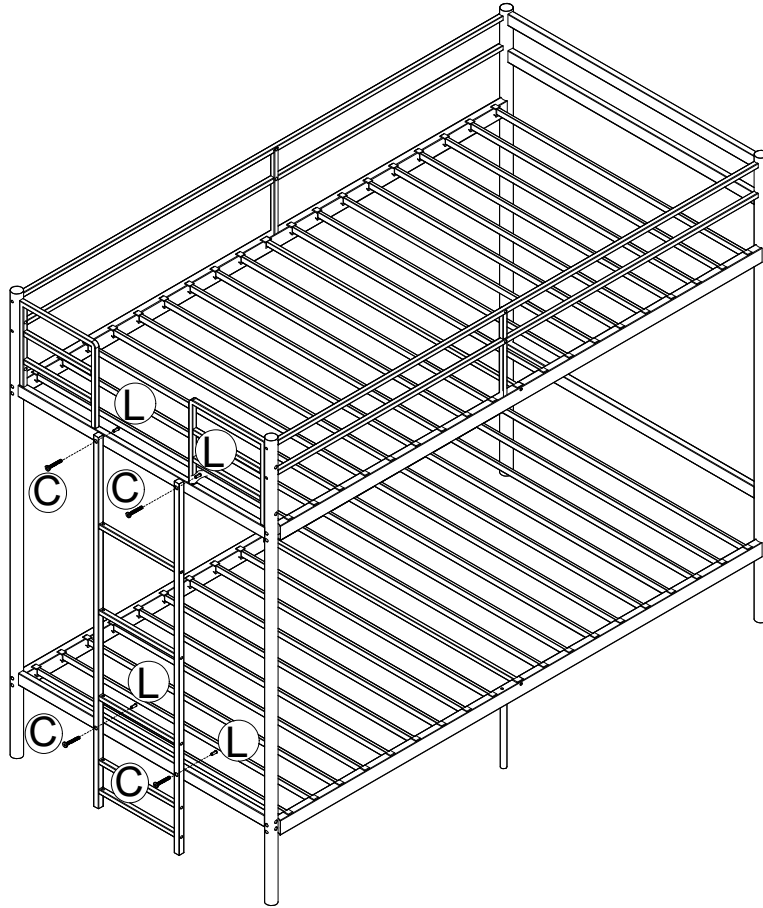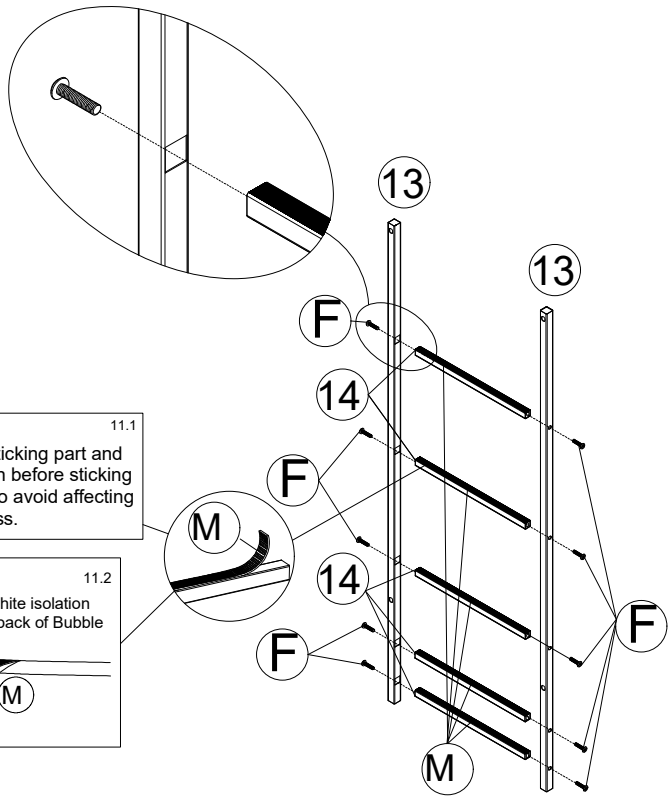

STEP6

		M6x35	4				4				2
---	---	-------	---	---	---	--	---	---	---	--	---

