


Electric Fireplace Installation Operating Instructions


Step 1: Open the package you received and dismantle the fireplace mainframe, as shown in the picture below.



Step 3: Remove the metal pressure strip on top of the main unit.

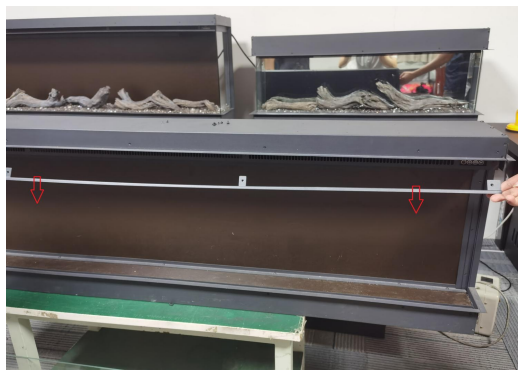


Step 5: After following step 4, push toward the arrow until you reach the bottom and the side small glass installation is completed. Both the left and right sides are the same installation.

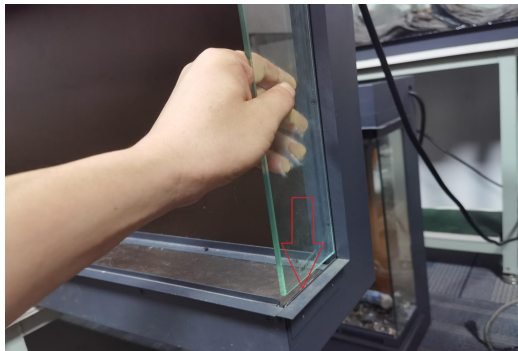

Step 7: Neatly place the realistic logs flat on top of the crystal stone, as shown below.



Step 2: Remove the four screws on the metal pressure strip with a Phillips screwdriver.

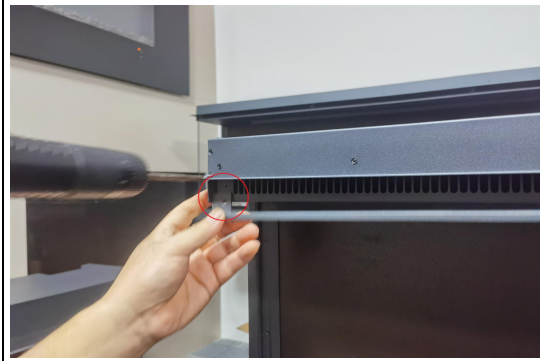

Step 4: Install the small glasses on the left and right sides, starting by aligning the slot in the upper right corner of the fireplace, as at the diamond icon, and slowly pushing into the bottom.



Step 6: Arrange the crystal stone ornament, just lay the crystal stone flat on the iron plate groove as shown in the picture below.



Step 8: Install the large front glass, aiming at the position of the slot below, and insert the front glass, as shown below.



Step 9: Tear off the protective film both on the front and back of the large glass.
Note: Before installing the metal pressure strip and the screws, you have to tear off the back protective film.



Step 11: Use a Phillips screwdriver to tighten the four screws of the metal pressure strip.



Step 10: Install the metal pressure strip in order to secure the large glass and square up to align the screw holes' position.



Step 12: Finish installing the rendering and check if the fireplace can be turned on properly.



NOTE

1. If the electric fireplace doesn't work, it may not be paired successfully. You need to press the switch button on the fireplace for 3-5 seconds until the indicator light is on, and then press the switch button on the remote control to pair successfully.
2. If any questions, please feel free to contact us at email