




PACKAGE DELIVERY BOX ASSEMBLY MANUAL

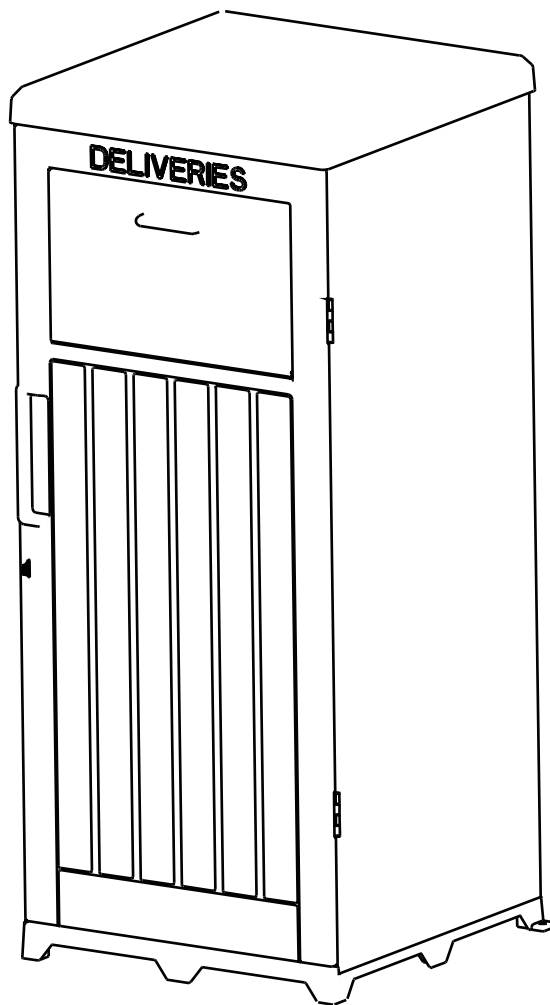

SKU: LNCF0598

Missing part? Damaged? Contact us via email at

service@domioutdoorliving.com

www.domioutdoorliving.com





BEFORE STARTING ASSEMBLY














- ① Please check all parts and components to ensure that there are no damages or missing items BEFORE starting the construction of the product.
- ② For ease of construction, you may need a Power Drill (Cordless, Variable Speed).
- ③ It would be much easier to assemble the product with two or more people.
- ④ Some parts have metal edges. Please be careful when handling components.

IMPORTANT: Please contact Customer Service if you have any problems or discover any missing parts.



USA & Canada:
1-833-807-3550

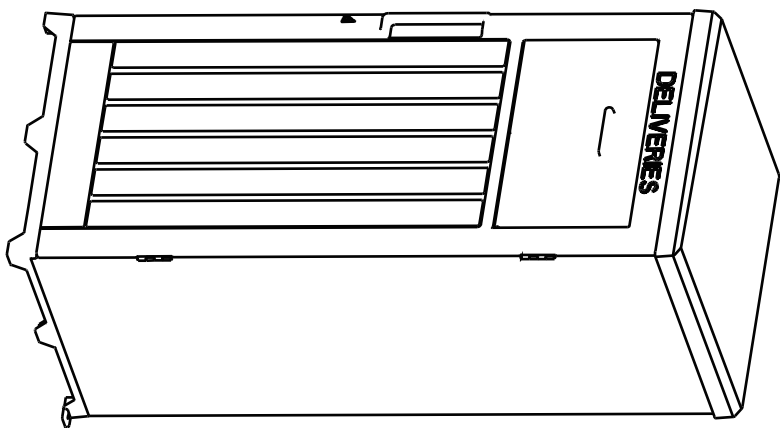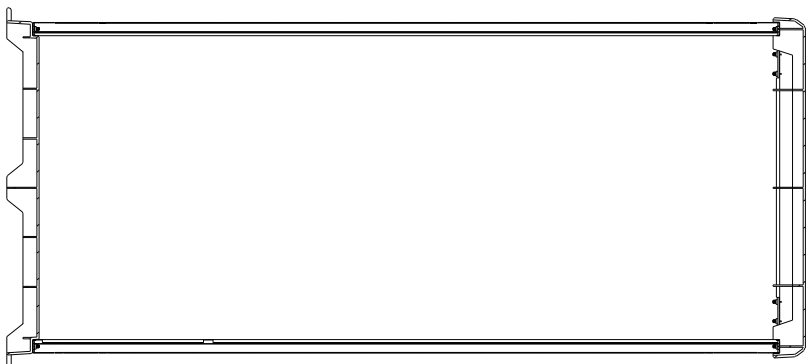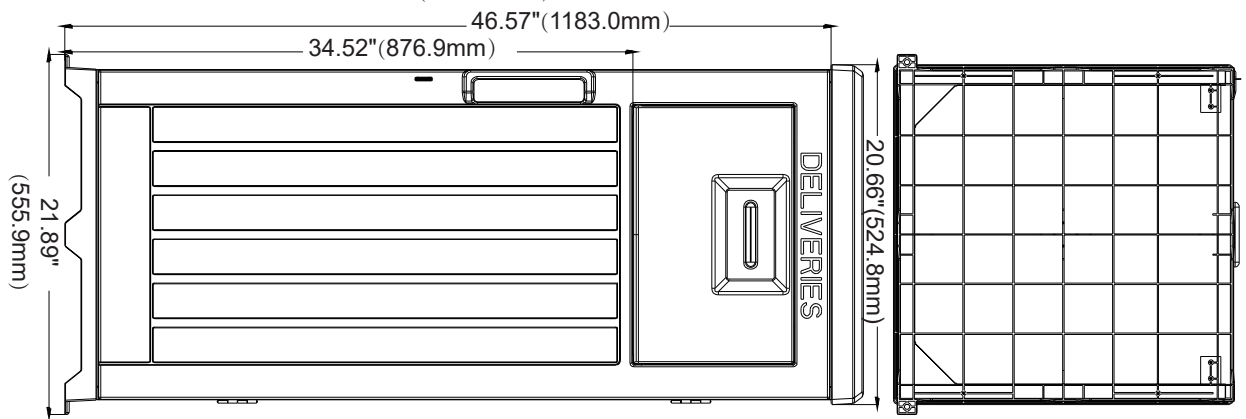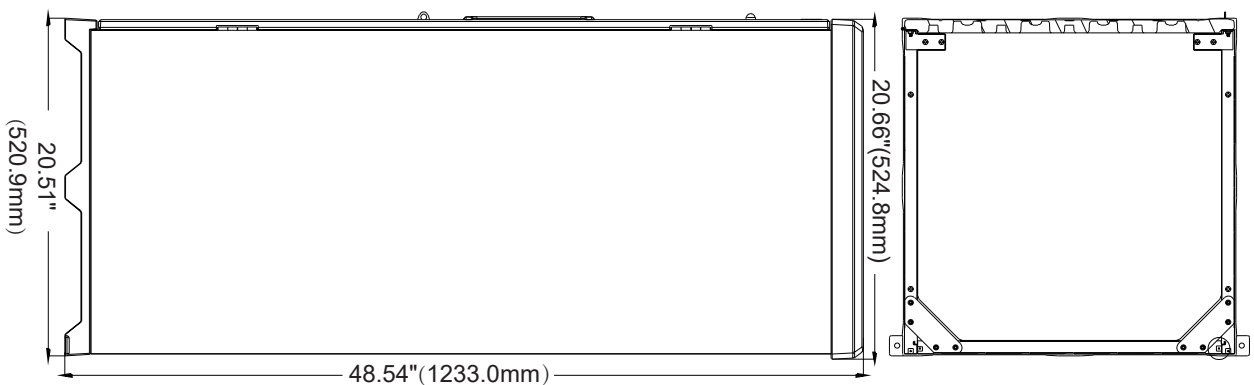

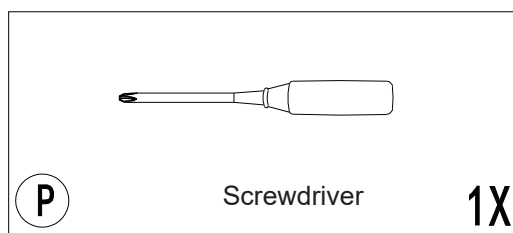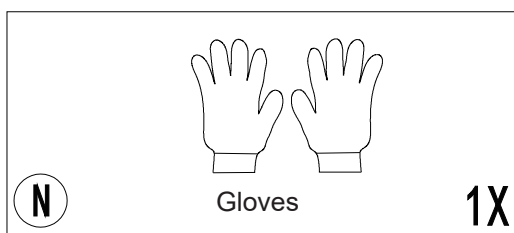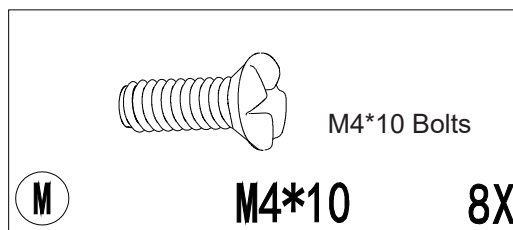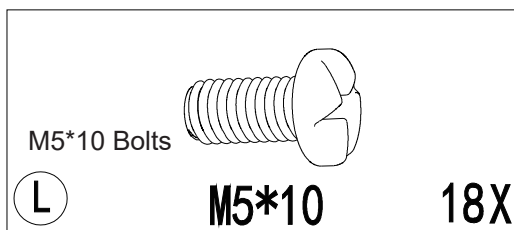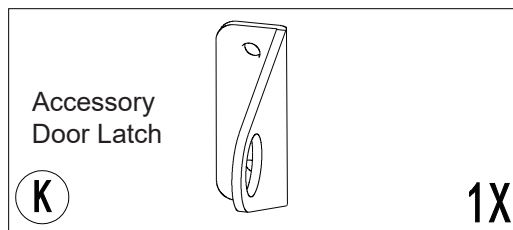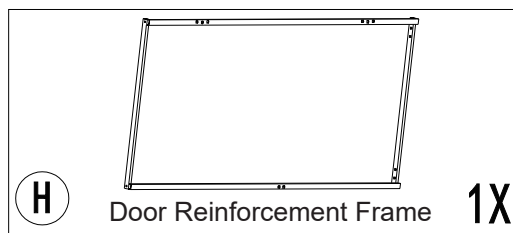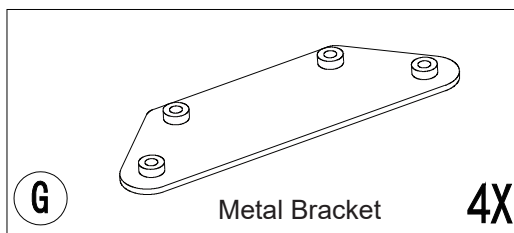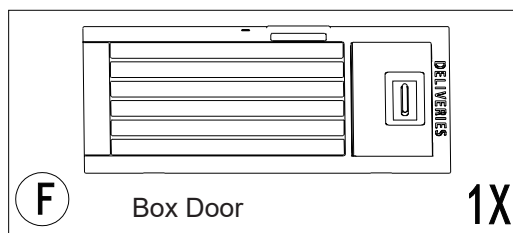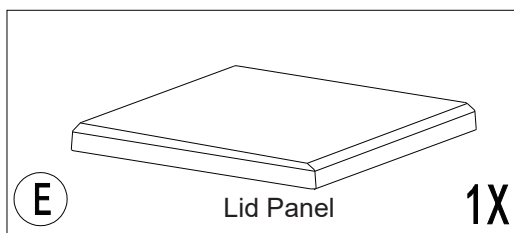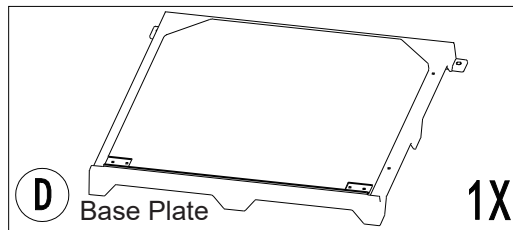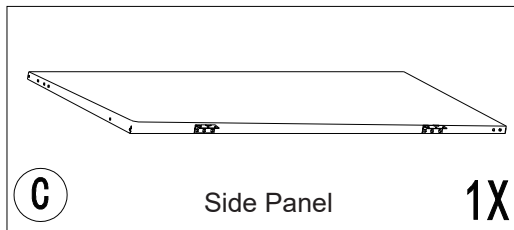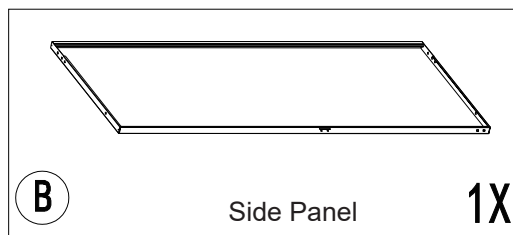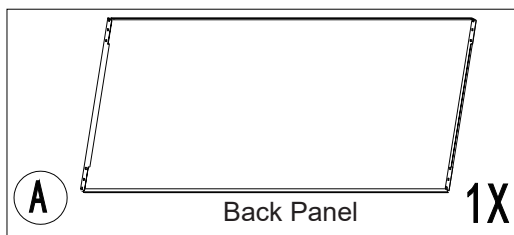







Side Panels and Back Panel Assembly

Step 1:

Attach the Back Panel #A and Side Panel #B together, securing them with 2 Metal Plate #G and 8 Bolts #L(M5*10). Repeat above procedures to install Back Panel #A and Side Panel #C.


Please note the distinction between Side Panel #B and #C. (# C has two hinges.)

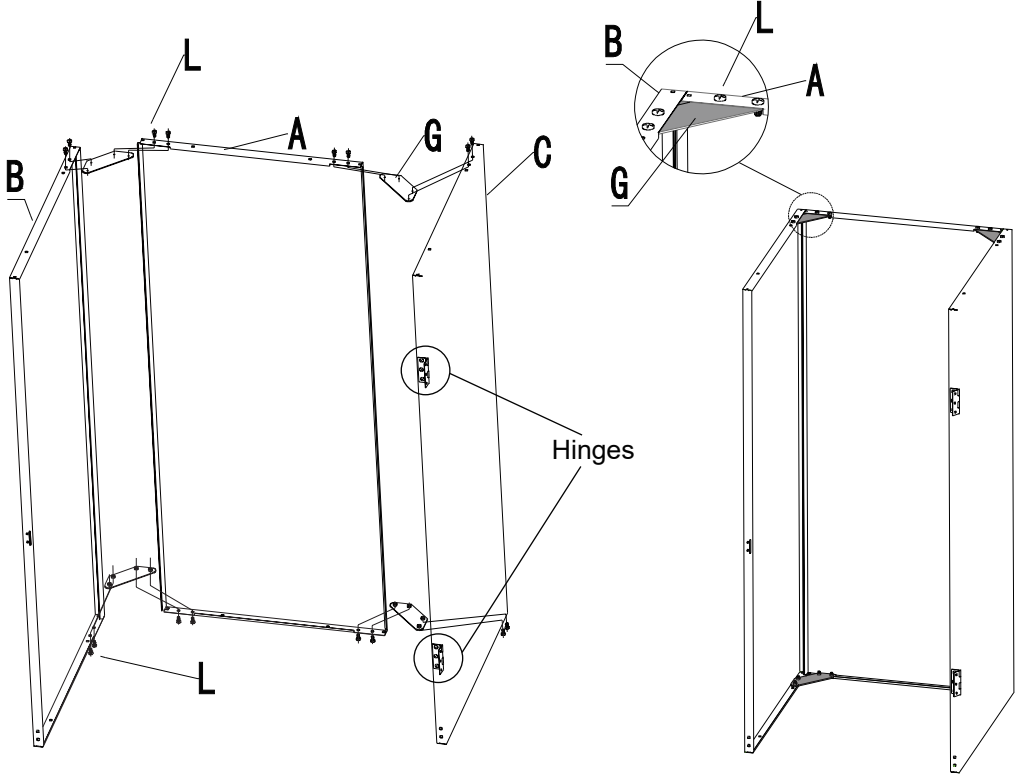Step 1:	
<div><div>A</div><div></div><div>1X</div></div> <div><div>B</div><div></div><div>1X</div></div> <div><div>C</div><div></div><div>1X</div></div> <div><div>G</div><div></div><div>4X</div></div> <div><div>L</div><div></div><div>M5*10 16X</div></div>	<div></div>

Base Panel Assembly

Step 2:


Place the Panels #A,#B and #C on the Base Plate #D, align the holes and secure them with 6 screws #J(ST5*20) as shown.

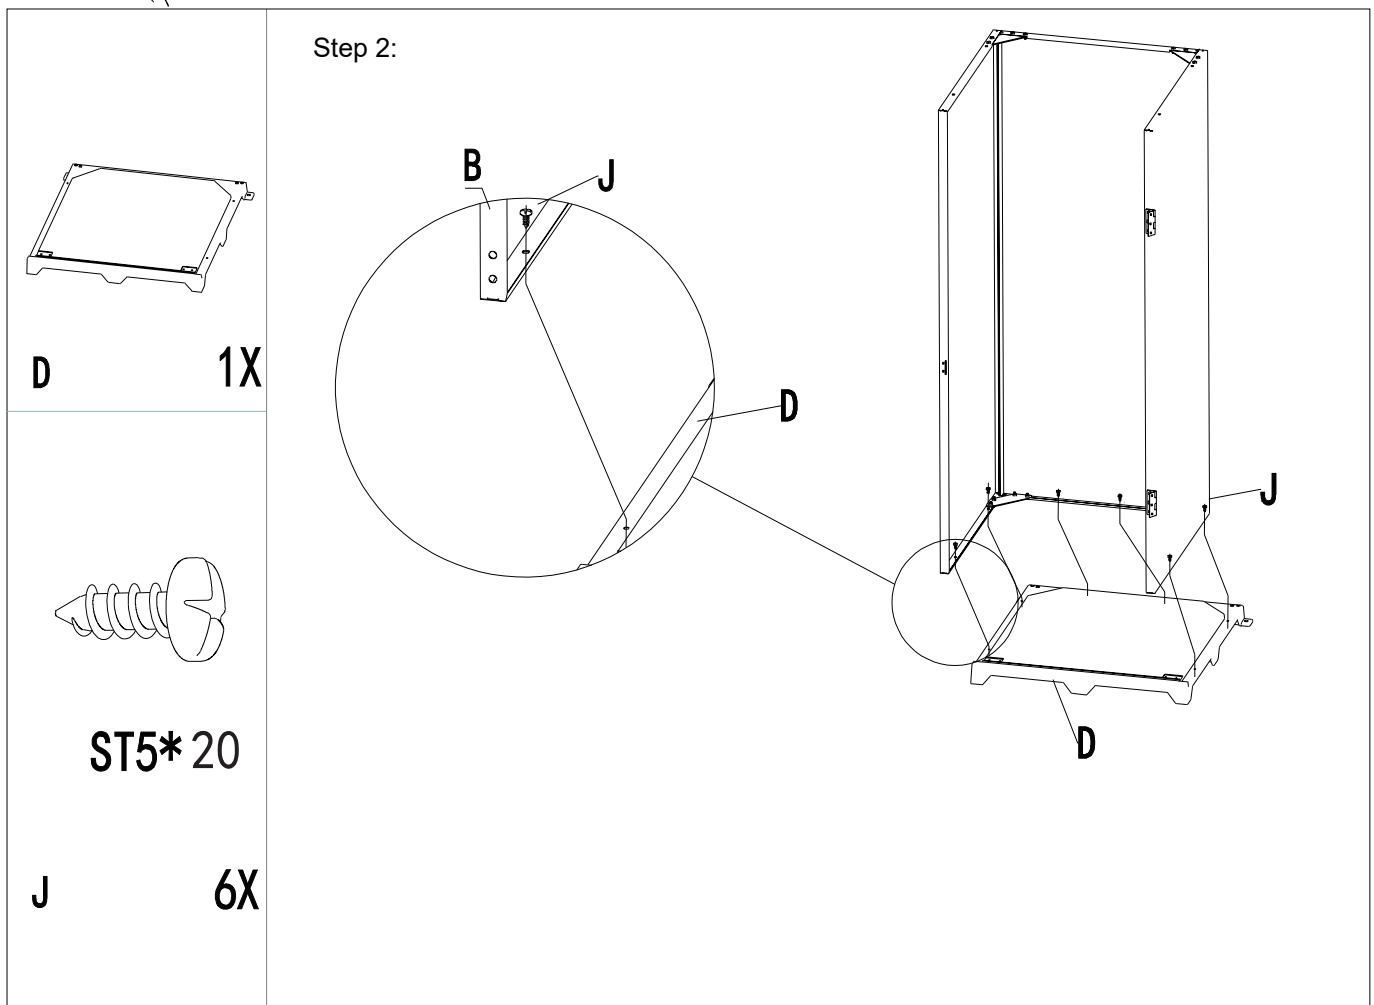

Accessory Door Latch Assembly

Step 3:

Insert the Accessory Door Latch #K into the hole of the Side Panel #B(from inside), and secure them with 2 Bolts #M(M4*10).

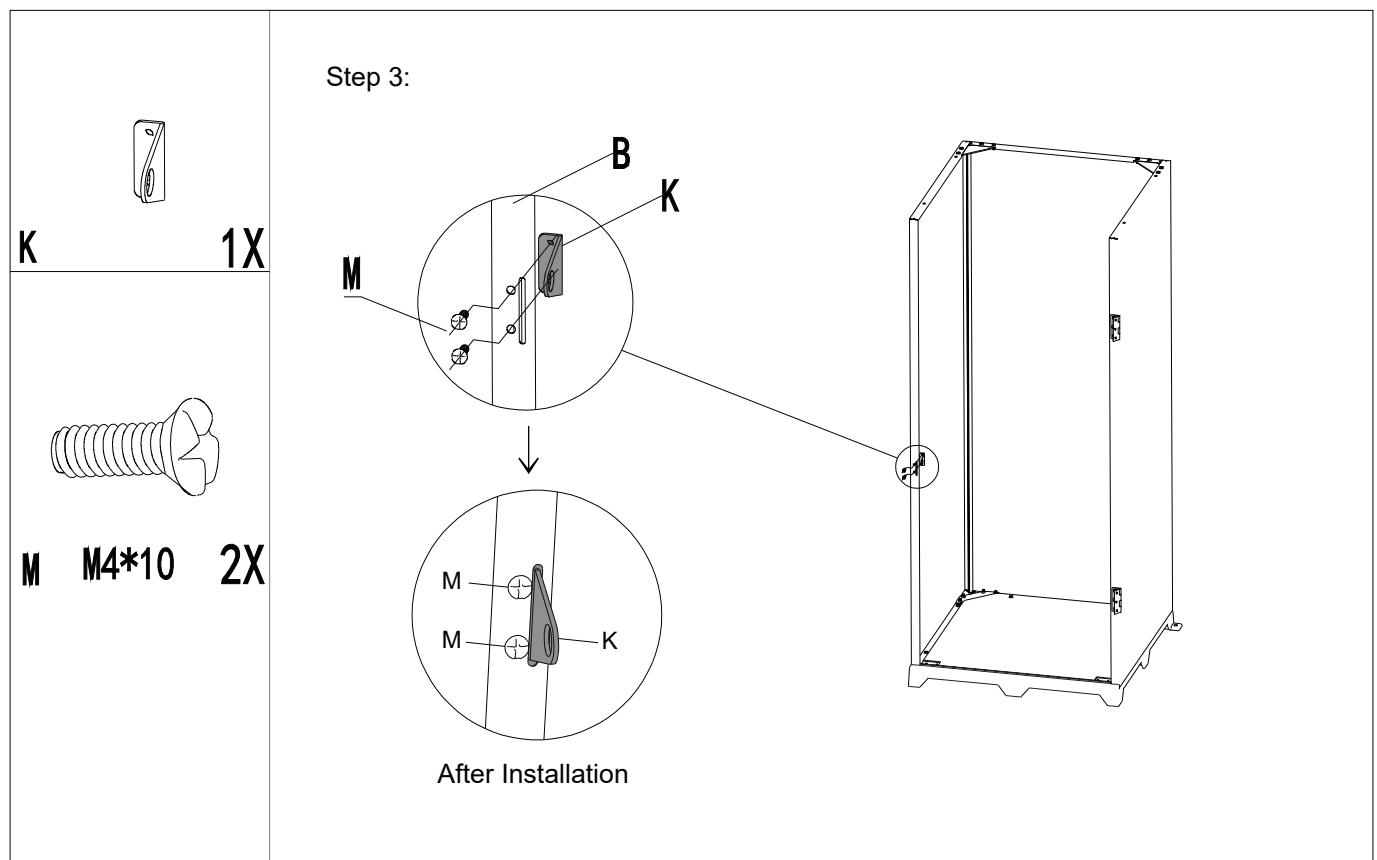


Door Reinforcement Frame Assembly

Step 4:

Make sure the side of the Door Reinforcement Frame #H with the holes is facing down. Insert it from the front and adjust its position to align with the screw holes on the Side Panels #B, #C, and the Base Panel #D.

Use 4 Screws #J(ST5*20) to secure the Door Reinforcement Frame #H to the Base Plate #D.


Use 2 Bolts #L(M5*10) to secure the Side Panels #B, #C with Door Reinforcement Frame #H.

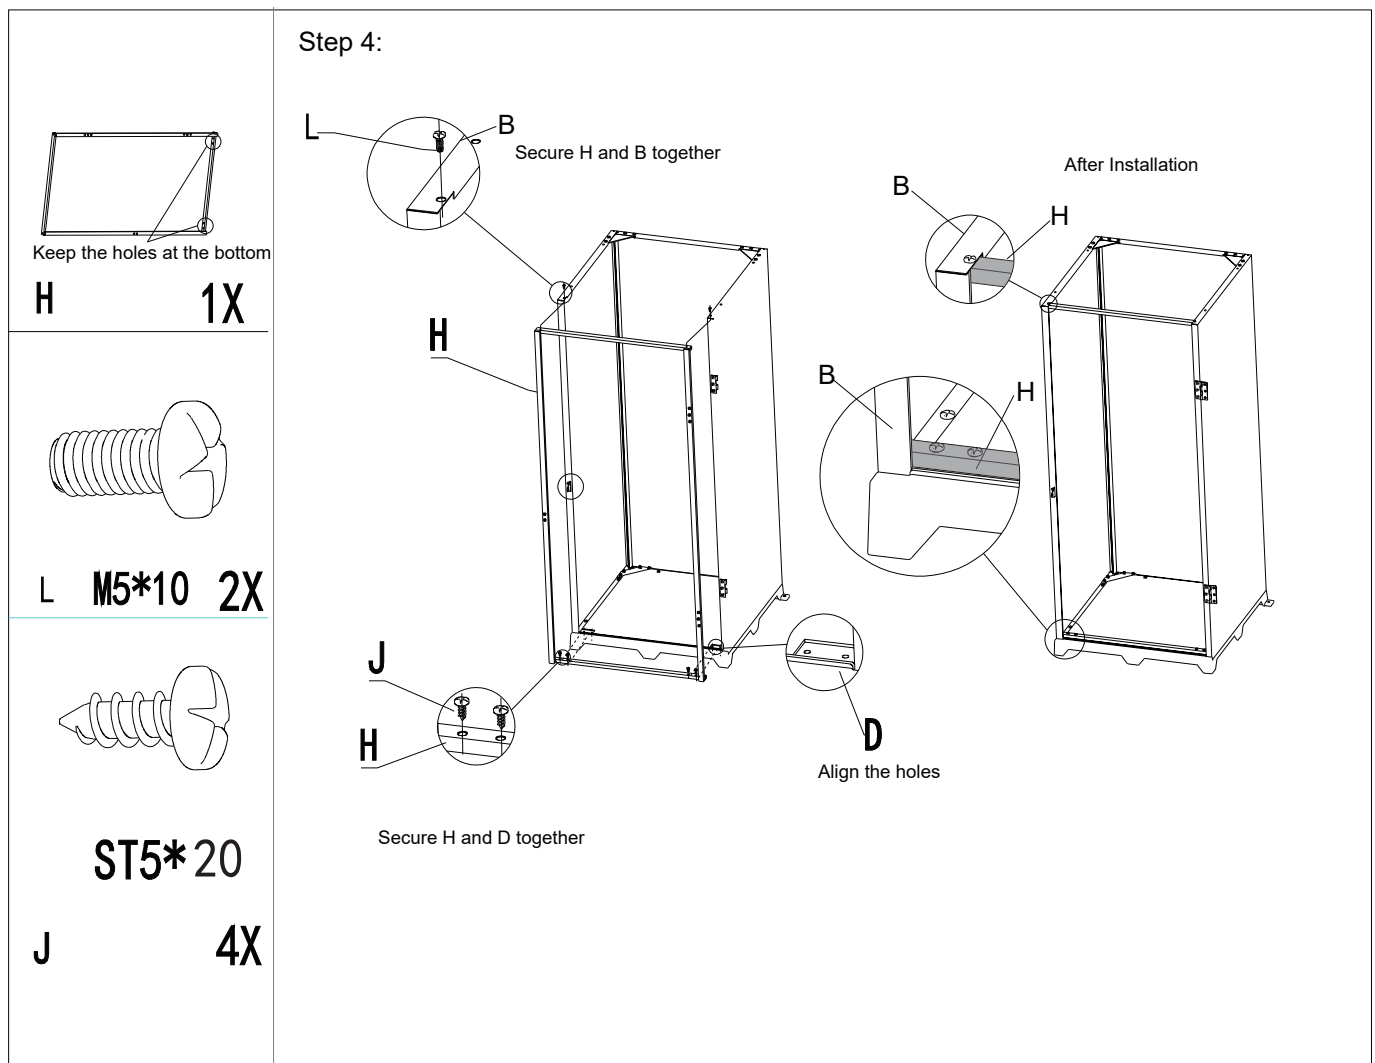


Lid Panel and Box Door Assembly

Step 5:

Put Lid Panel #E on Side Panels #A,#B and #C, align the holes and secure with 4 Screws #J(ST5*20) from bottom to top.





E 1X




ST5* 20

J 4X

Step 5:

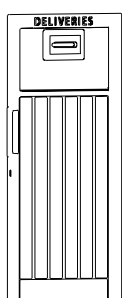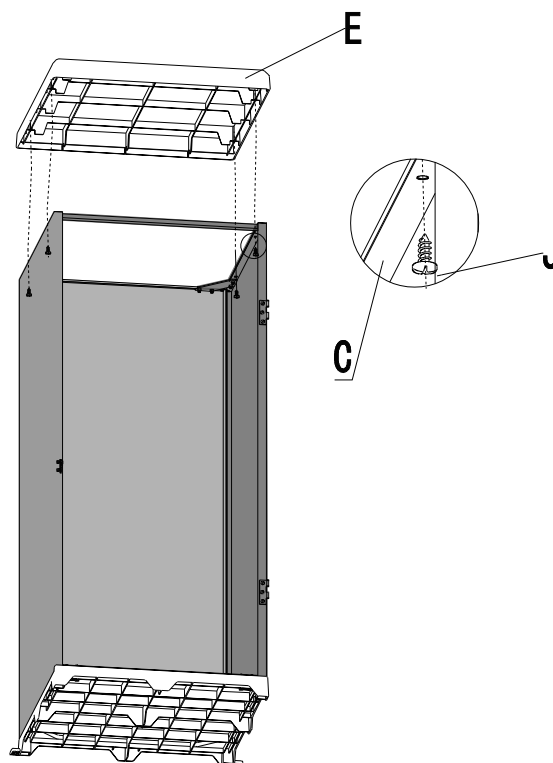

F 1X




M4*10

M 6X

Step 6:

Attach the Side Panels #C to Box Door #F using the hinges on Side Panel #C, and secure them with 6 Bolts #M (M4*10).

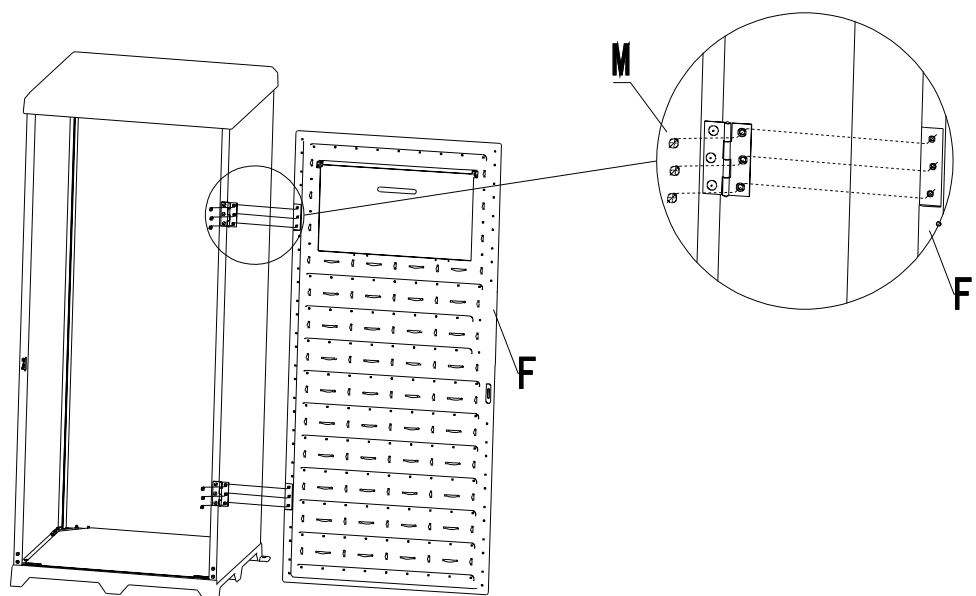



Thanks for your purchase.

At domi outdoor living, we believe in our products.

That's why we provide a 12-month warranty and friendly, easy-to-reach after-sales service. So, if you have any questions about our product or assembly, please feel free to contact us. We are here for you.

Support:  

After-sales contact email:

service@domioutdoorliving.com

Business cooperation contact email:

marketing@domioutdoorliving.com

Please have your order ID available if you reach out for support.

If you have damaged parts or product, please send us photos for an immediate response.