









Installation instructions

HOGA-J0015

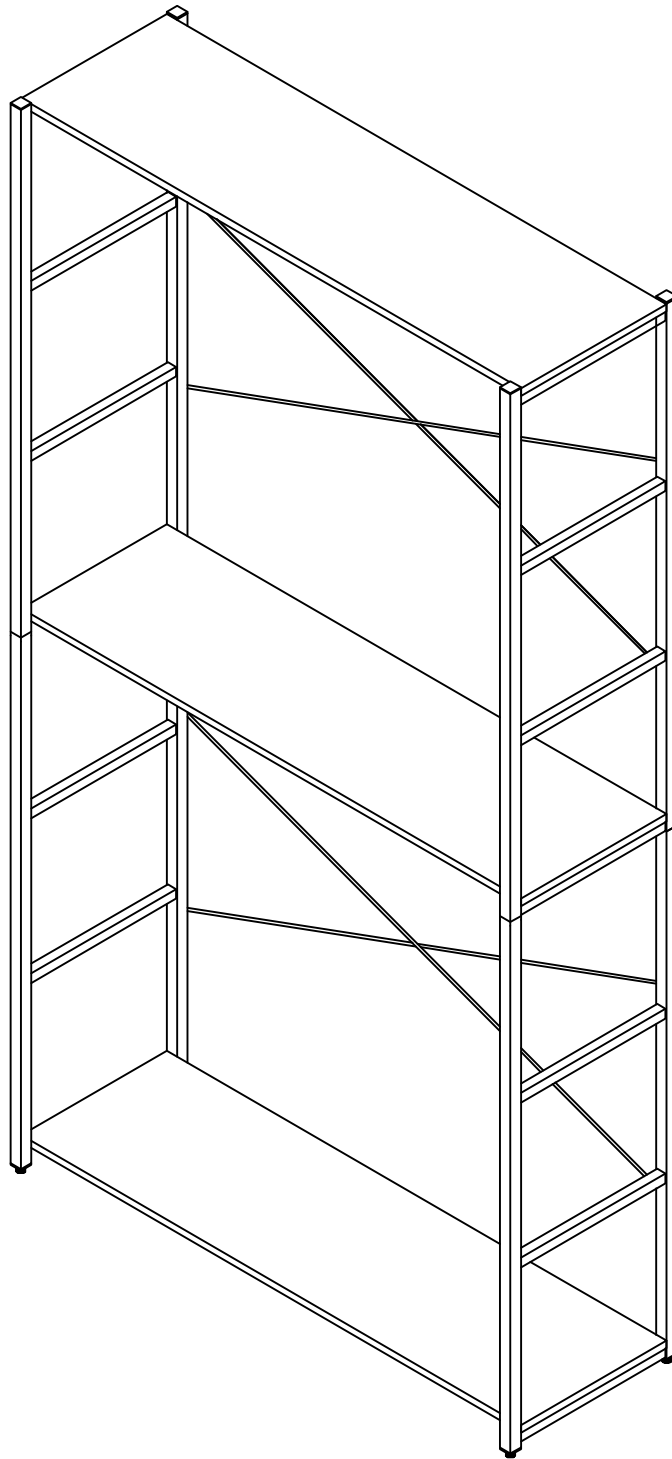


Tribesigns
Way to origin

Accessories show

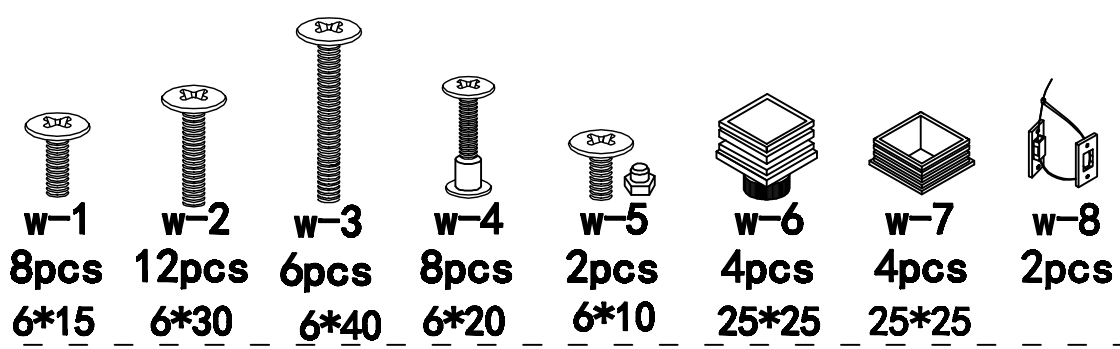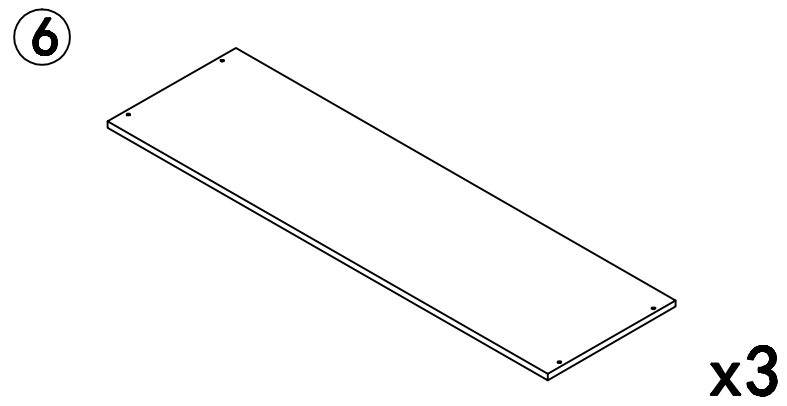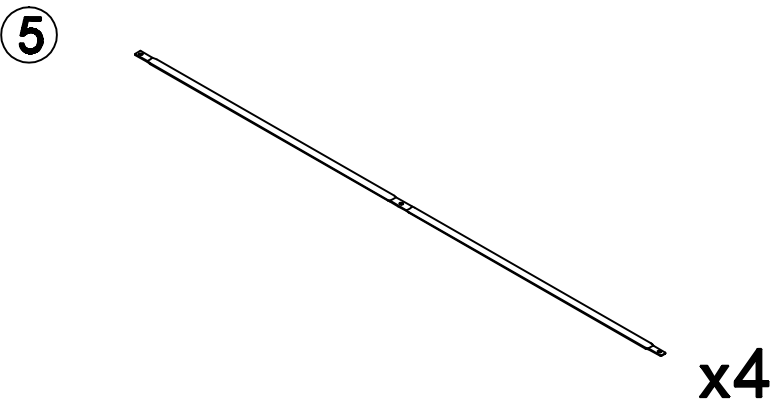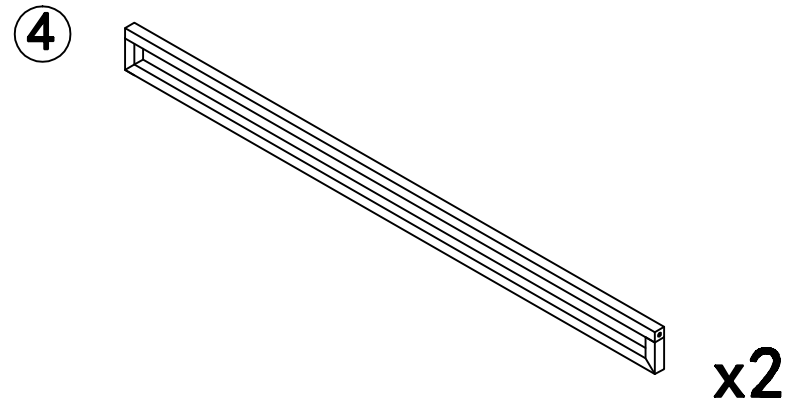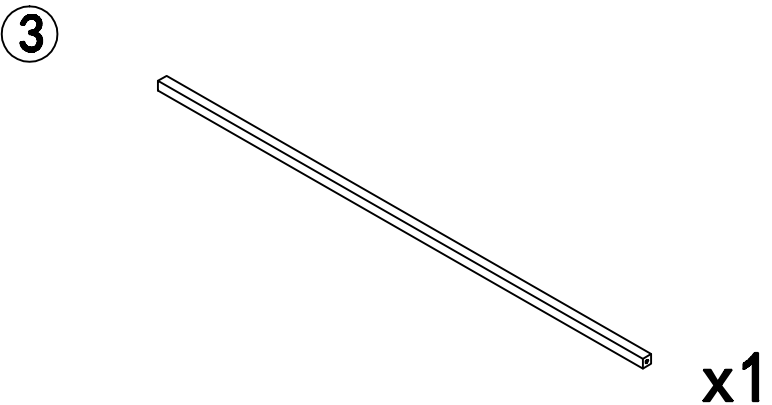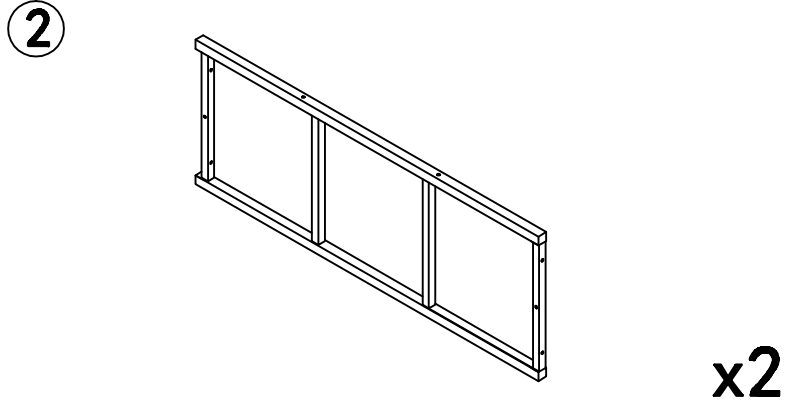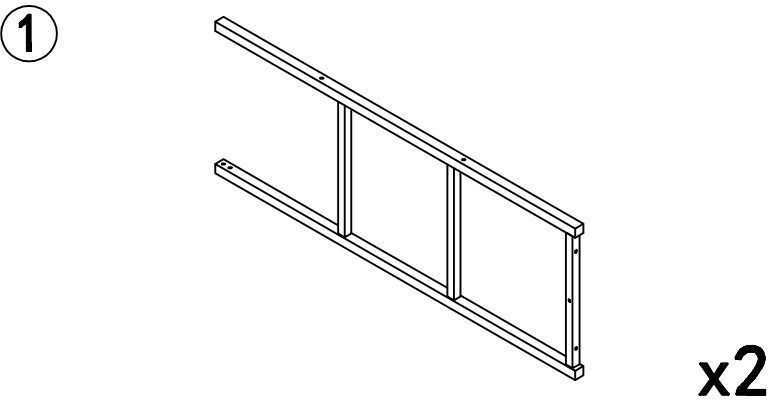


NOTES: Don't tighten screws completely at first, just in case parts were assembled wrong and need disassembled. Tighten screws at last when all parts are put together.

STEP 1

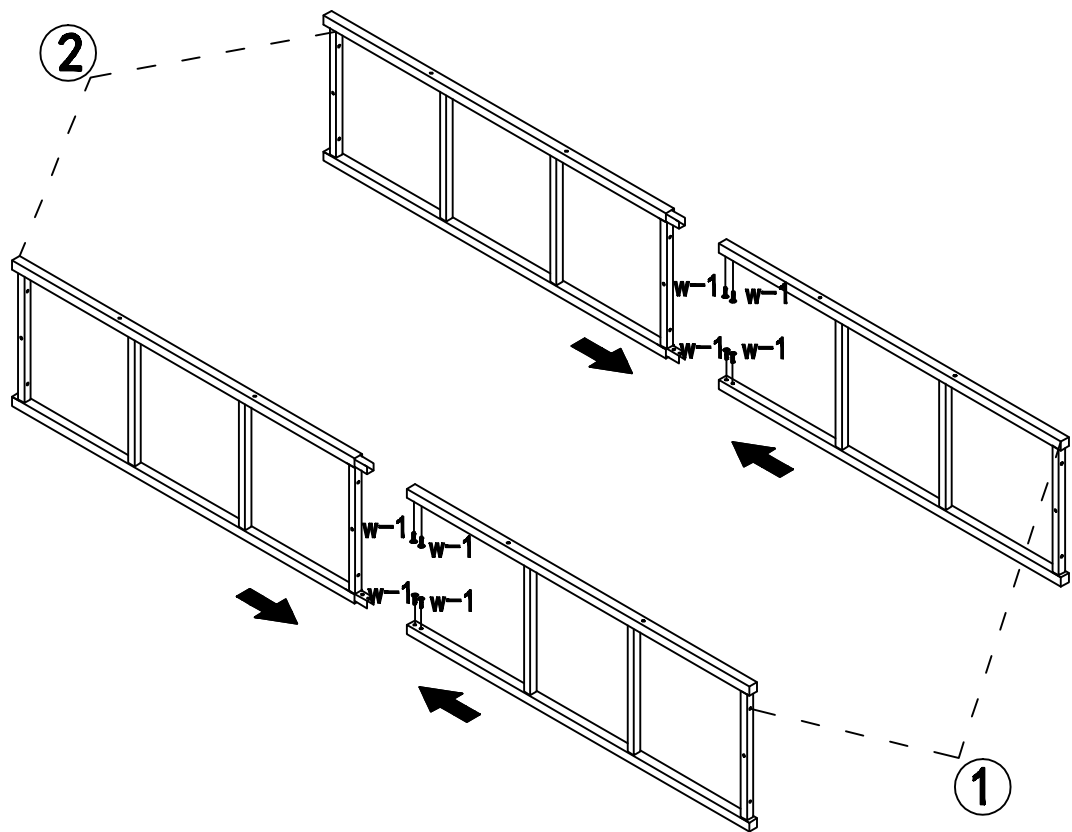



w-1
8pcs

STEP 2


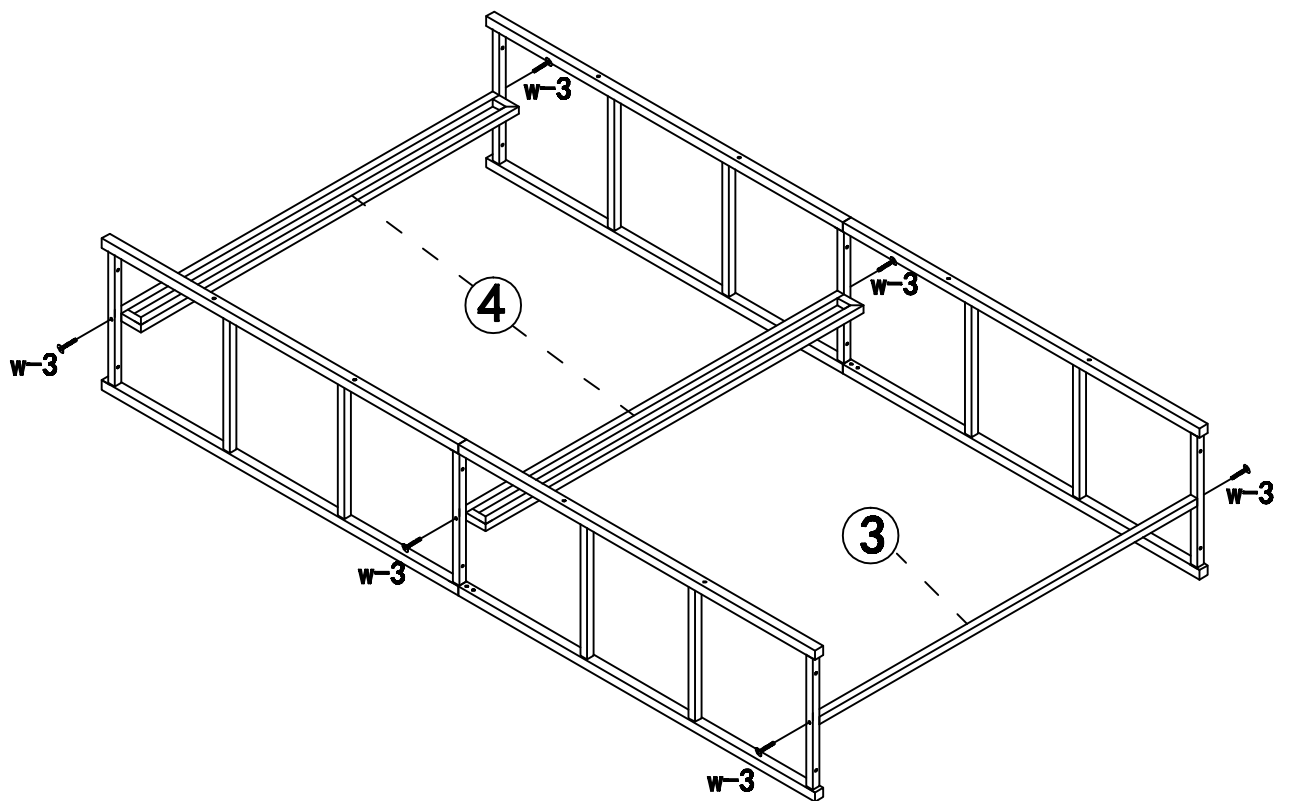


w-3
6pcs


STEP 3

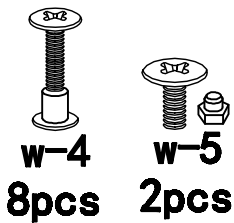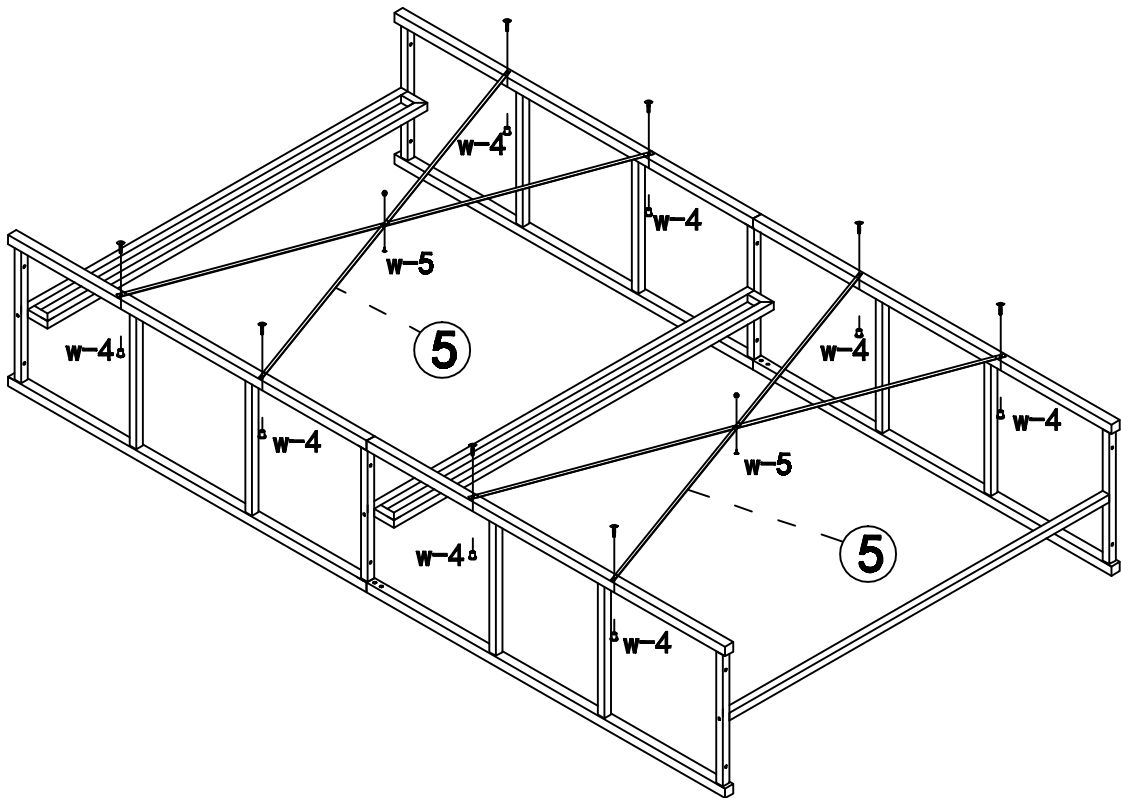


STEP 4

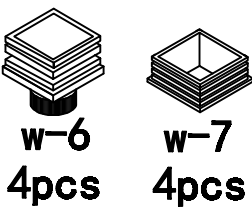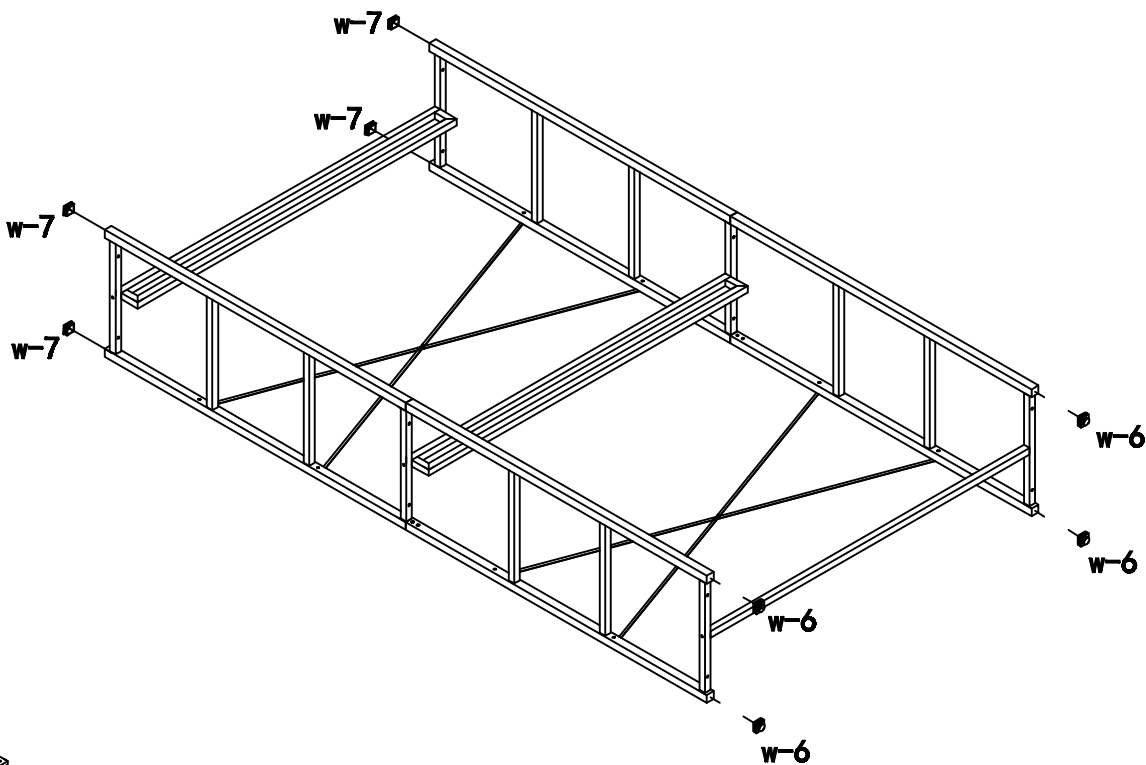

STEP 5

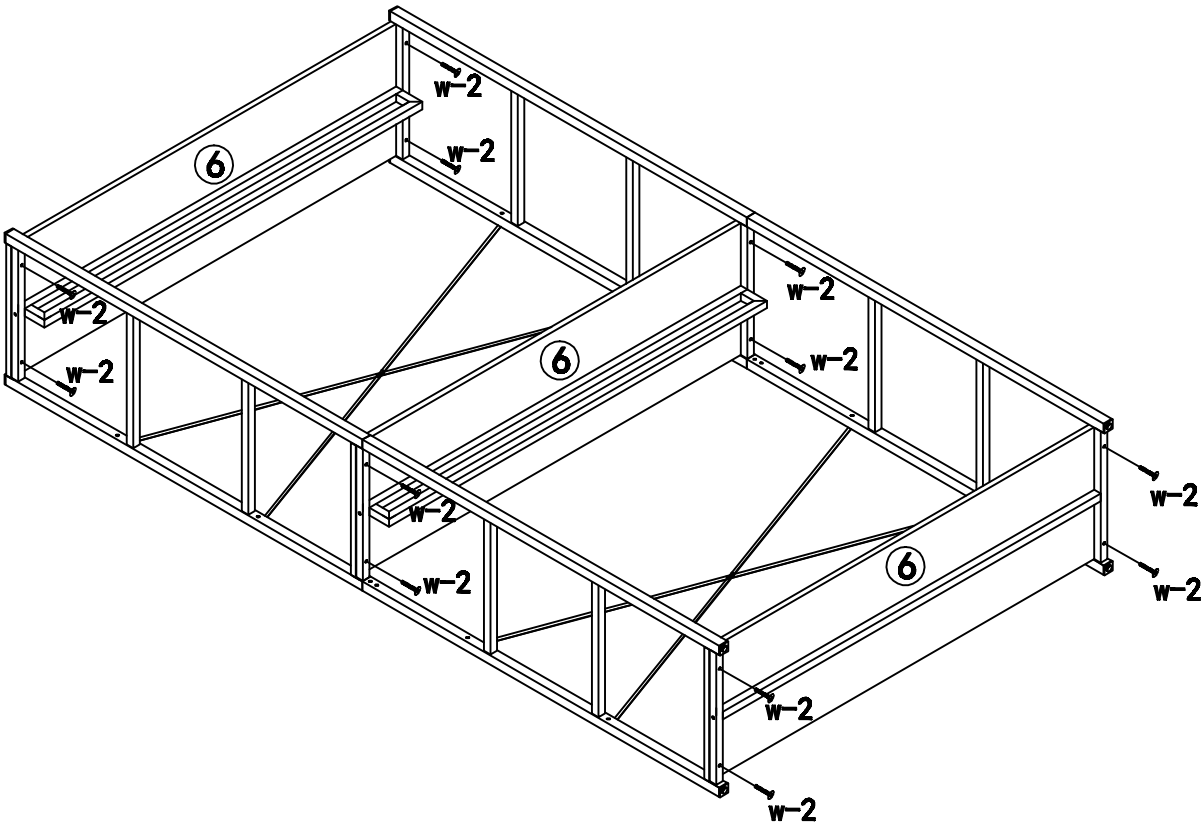


STEP 6

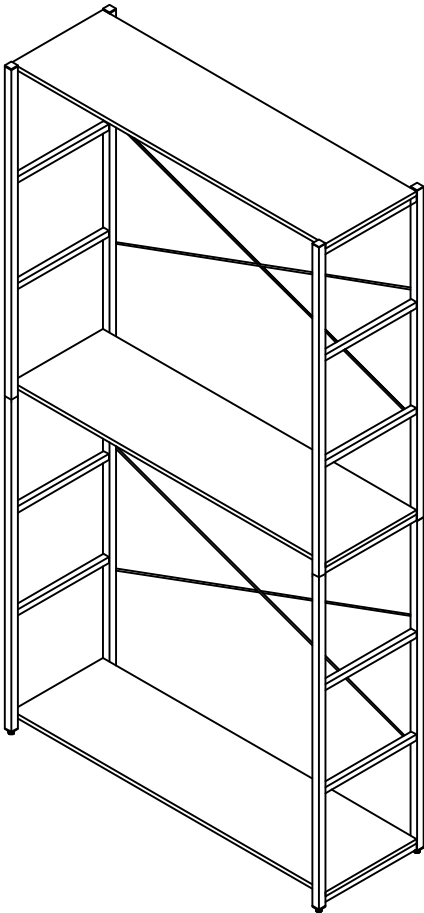

STEP 7


Accessor the bookshelf to the wall

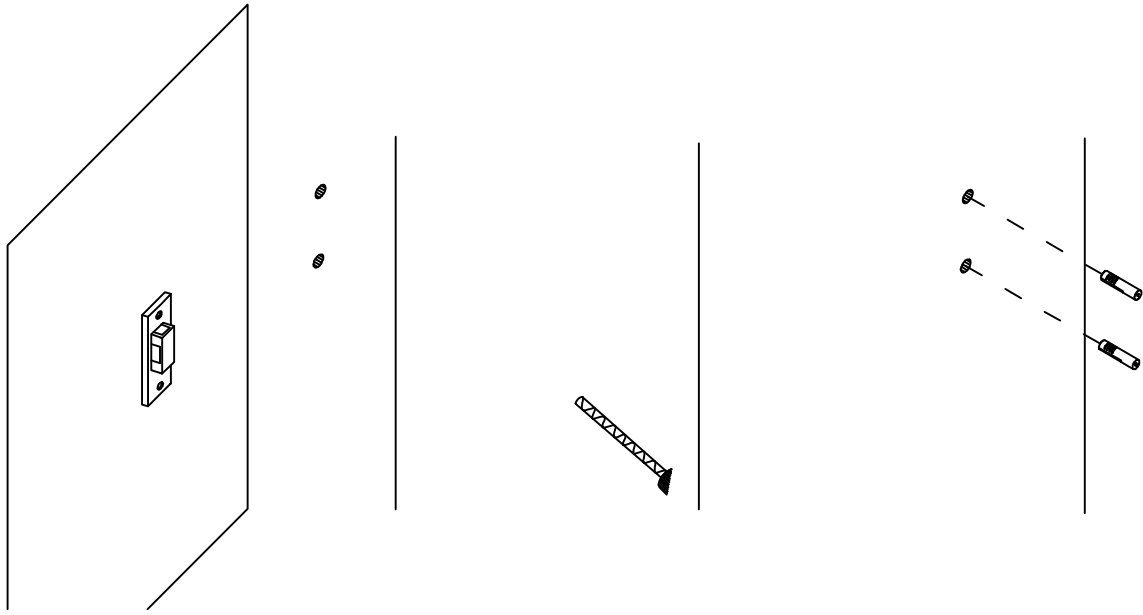

**Step1:Mark holes
on the wall**

Step2:Drill holes

**Step3:Push the plastic
plug tu the hole**

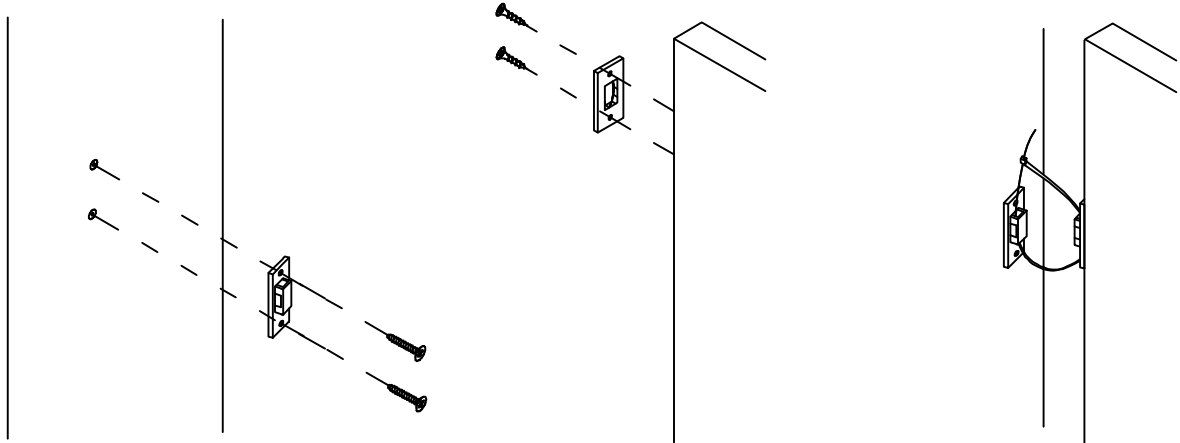

Step4:Tighten screws

**Step5:Install plastic
tap to the side board
of the 8th shelf (#D**

Step6: *complete*

Thanks for choosing Tribesigns poduct
your satisfaction is our priority If you have
any damages caused by shi pping
feel free to contact us at"support@tribesigns.com"
our friendly customer service will solve problem for
you.