
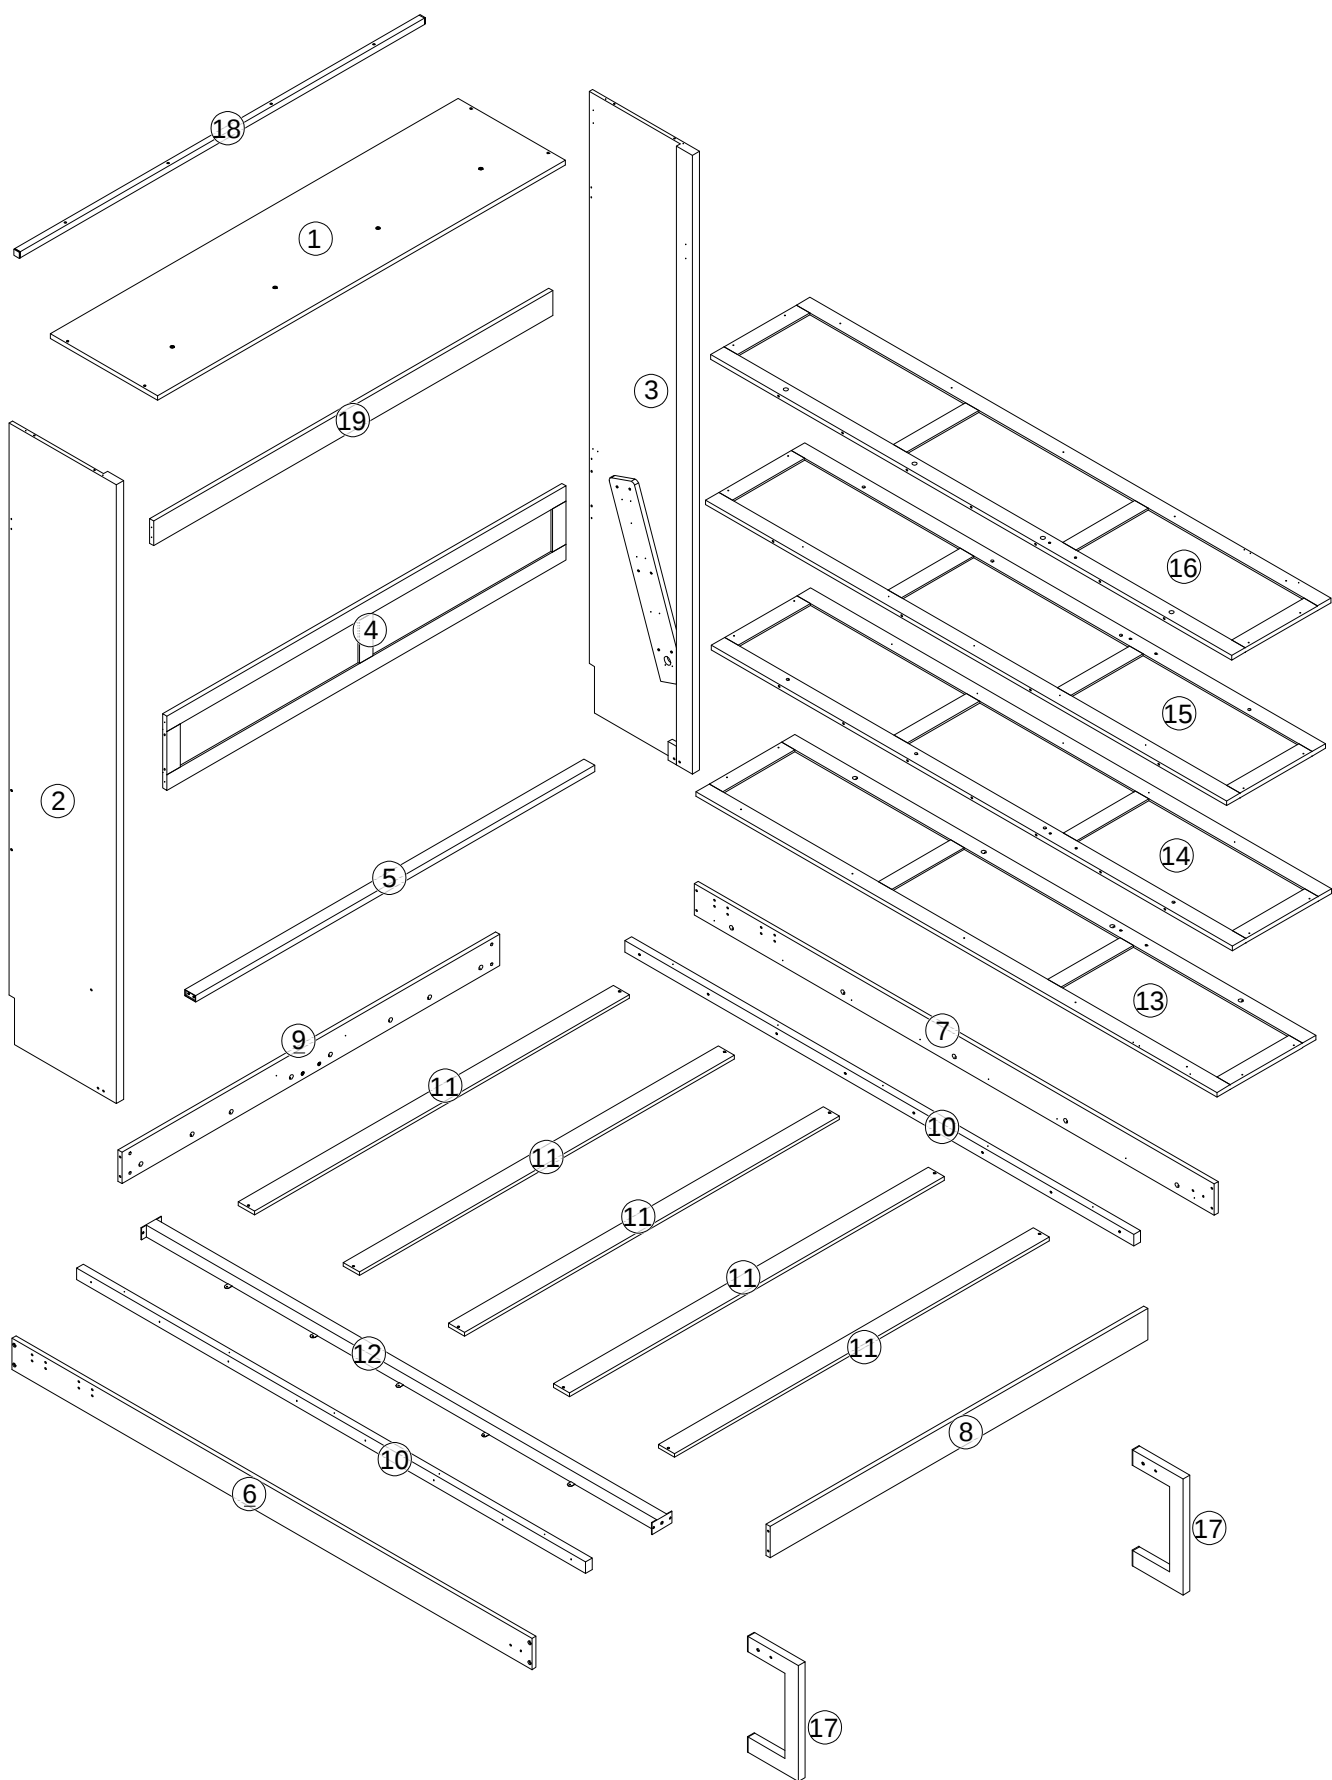
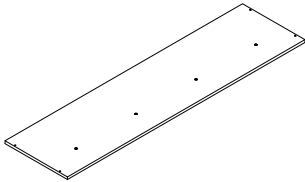
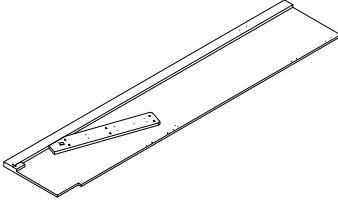
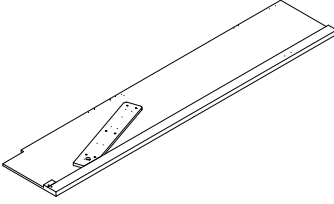
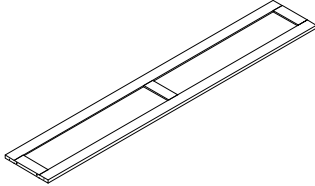
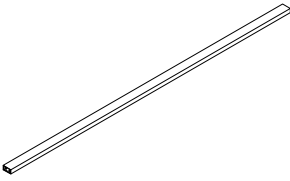
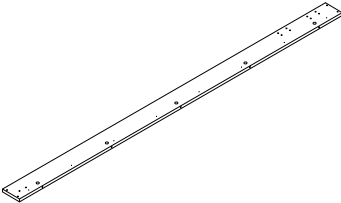
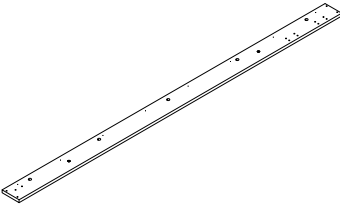
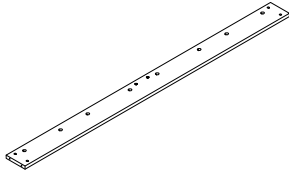
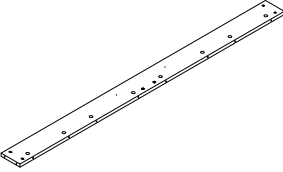
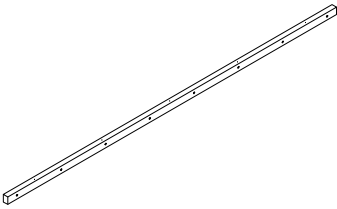
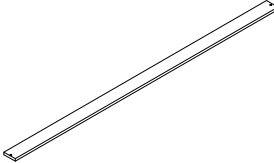
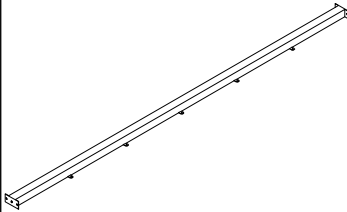
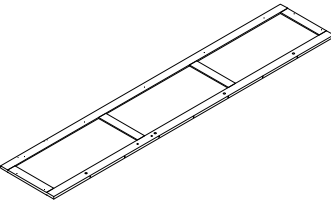
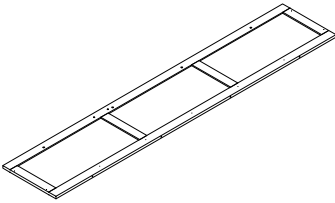
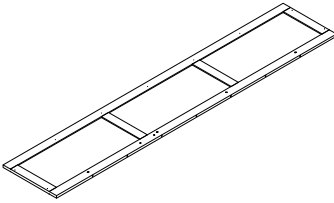
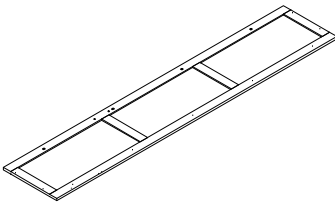
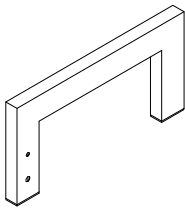
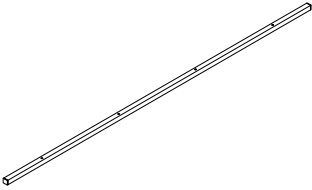





















Installation instruction

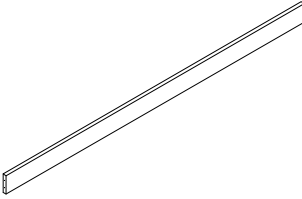

Parts and Operation Elements

							
①	1 pc	②	1 pc	③	1 pc	④	1 pc
							
⑤	1 pc	⑥	1 pc	⑦	1 pc	⑧	1 pc
							
⑨	1 pc	⑩	2 pcs	⑪	5 pcs	⑫	1 pc
							
⑬	1 pc	⑭	1 pc	⑮	1 pc	⑯	1 pc
							
⑰	2 pcs	⑱	1 pc	⑲	1 pc		





Hardware

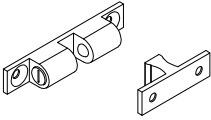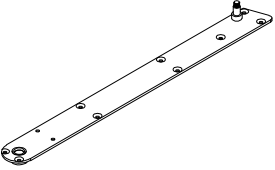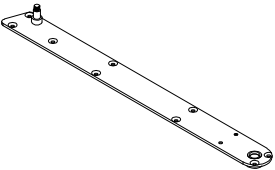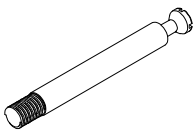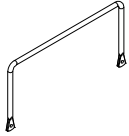 Cam bolt		 Cam Lock		 6x30mm Wood dowel		 3x12mm screw	
A	26+3 pcs	B	34+3 pcs	C	8+1 pcs	D	10+1 pcs
				 4x12mm screw			
E	2 pcs	F	2 pcs	G	32+3 pcs	H	2 pcs
				 Gas Spring		 6x45mm screw	
J	1 pc	K	1 pc	L	2 pcs	M	4 pcs
 5x45mm screw							
N	12+1 pcs	O	1 pc	P	2 pcs	Q	2 pcs
		 6x30mm screw		 30mm wall plug		 4x35mm screw	
R	4 pcs	S	2 pcs	T	4 pcs	U	20+2 pcs
 Cam bolt				 8x40mm Wood dowel			
V	8 pcs	W	16 pcs	X	10+1 pcs	Y	1 pc











SPARE BAG

THE SPARE BAG INCLUDED EXTRA HARDWARE FOR DAMAGED
OR MISSING SMALL HARDWARE WHILE YOU ARE ASSEMBLING

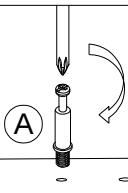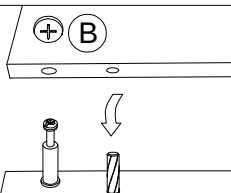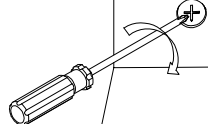 A		 C		Arrow must face hole  B		 Y	
Gently screw cam bolt into the threaded anchor.		Insert the wood dowel halfway into hole.				Screw the camlock firmly into locked position.	





Hardware

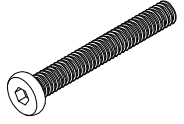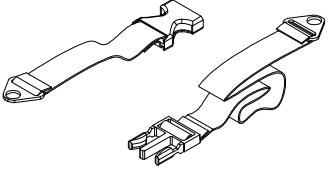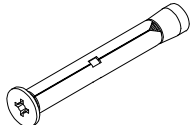							
6x12mm screw		6x50mm screw		4x12mm screw			
Z	10+1 pcs	AA	8 pcs	BB	10+1 pcs	CC	2 pcs
							
6x28mm screw						4x16mm screw	
DD	6 pcs	EE	2 pcs	FF	4 pcs	GG	8 pcs
							
4x25mm screw		6x25mm screw					
HH	10+1 pcs	JJ	16+1 pc	KK	2 pcs	LL	2 pcs
							
8x60mm screw							
MM	2 pcs	NN	1 pc				











SPARE BAG



THE SPARE BAG INCLUDED EXTRA HARDWARE FOR DAMAGED OR MISSING SMALL HARDWARE WHILE YOU ARE ASSEMBLING

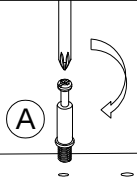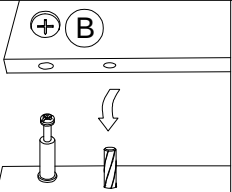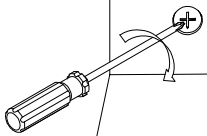							
Gently screw cam bolt into the threaded anchor.		Insert the wood dowel halfway into hole.		Arrow must face hole		Screw the camlock firmly into locked position.	




1

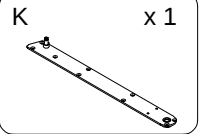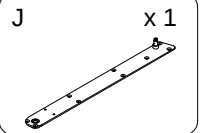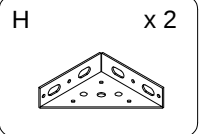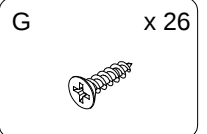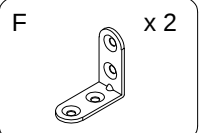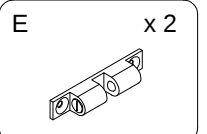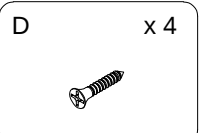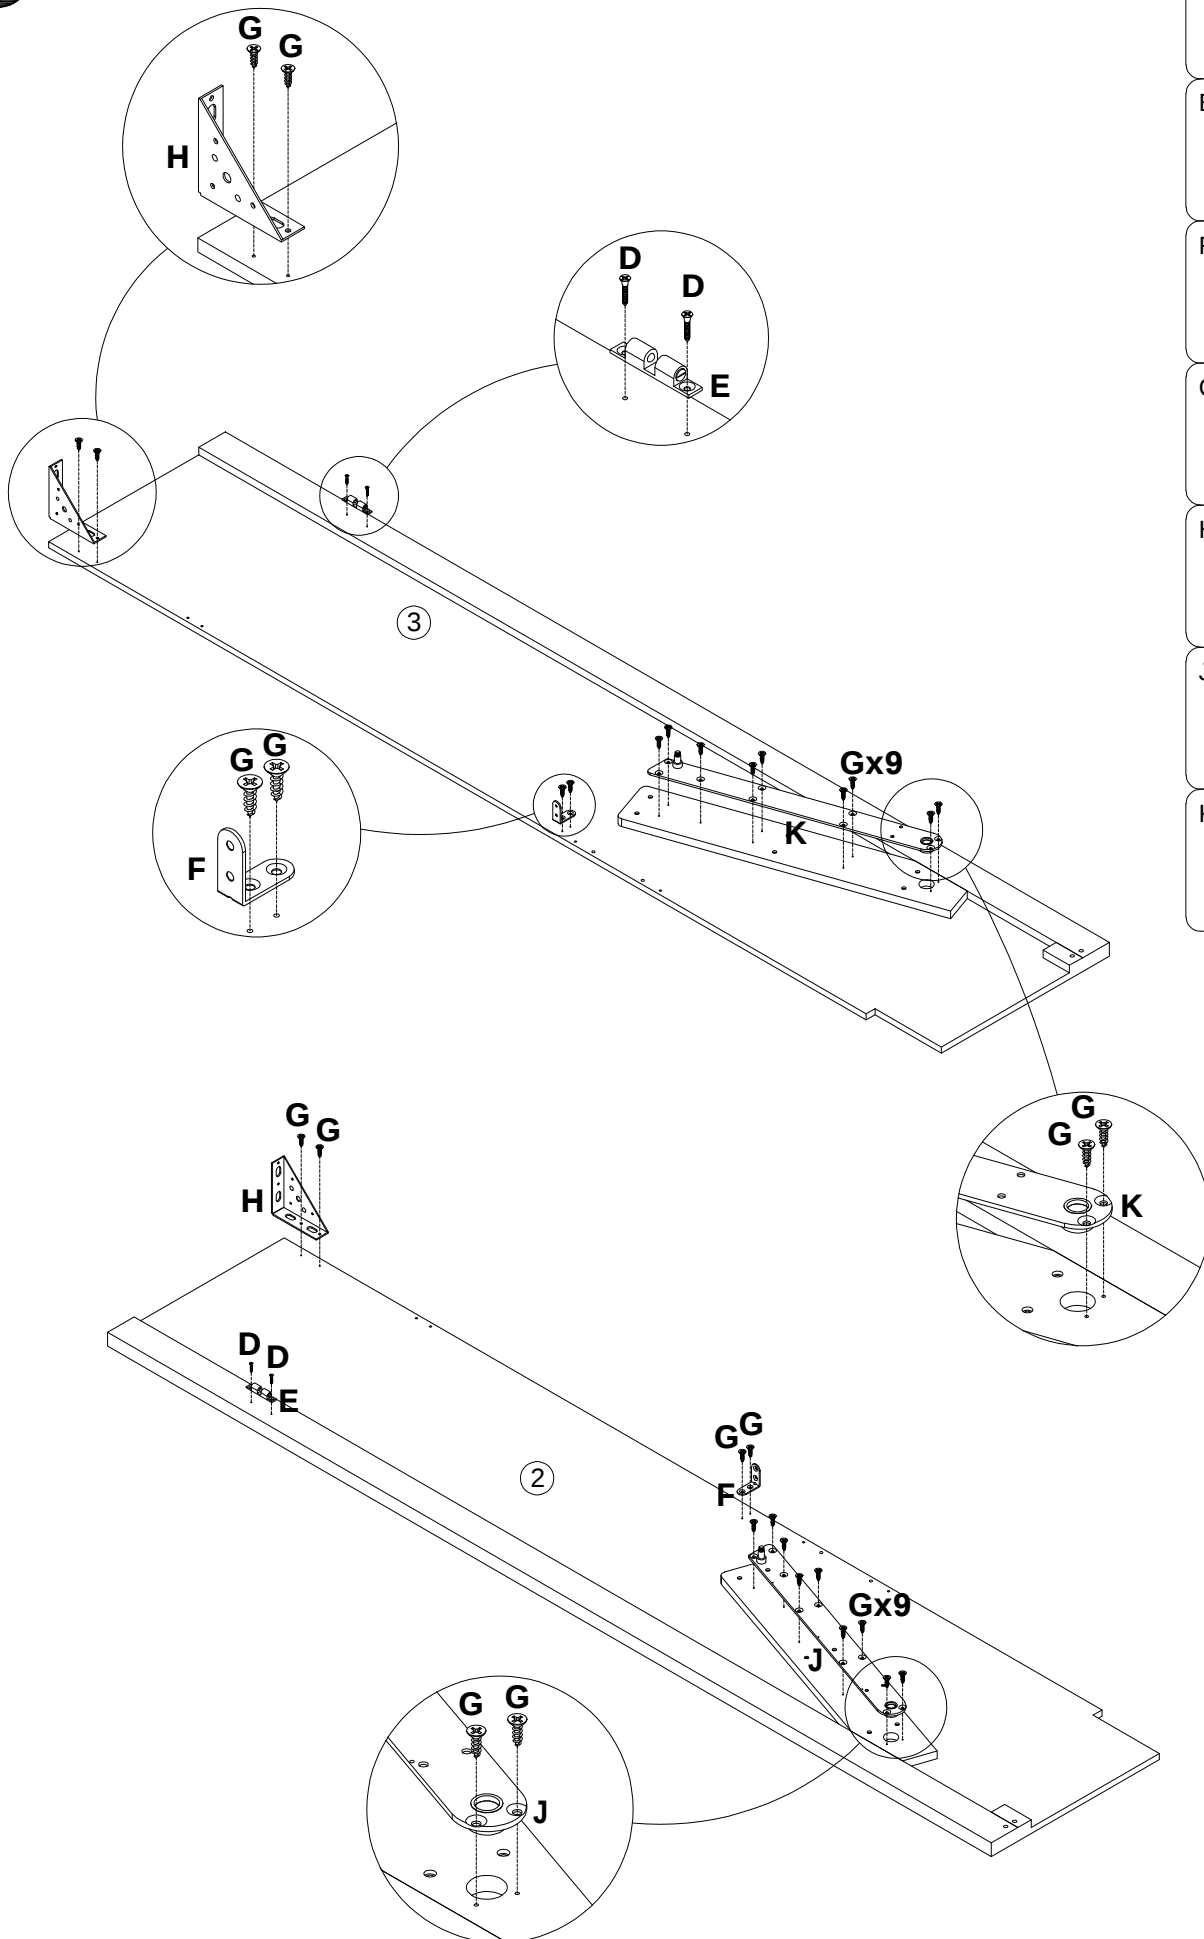





2

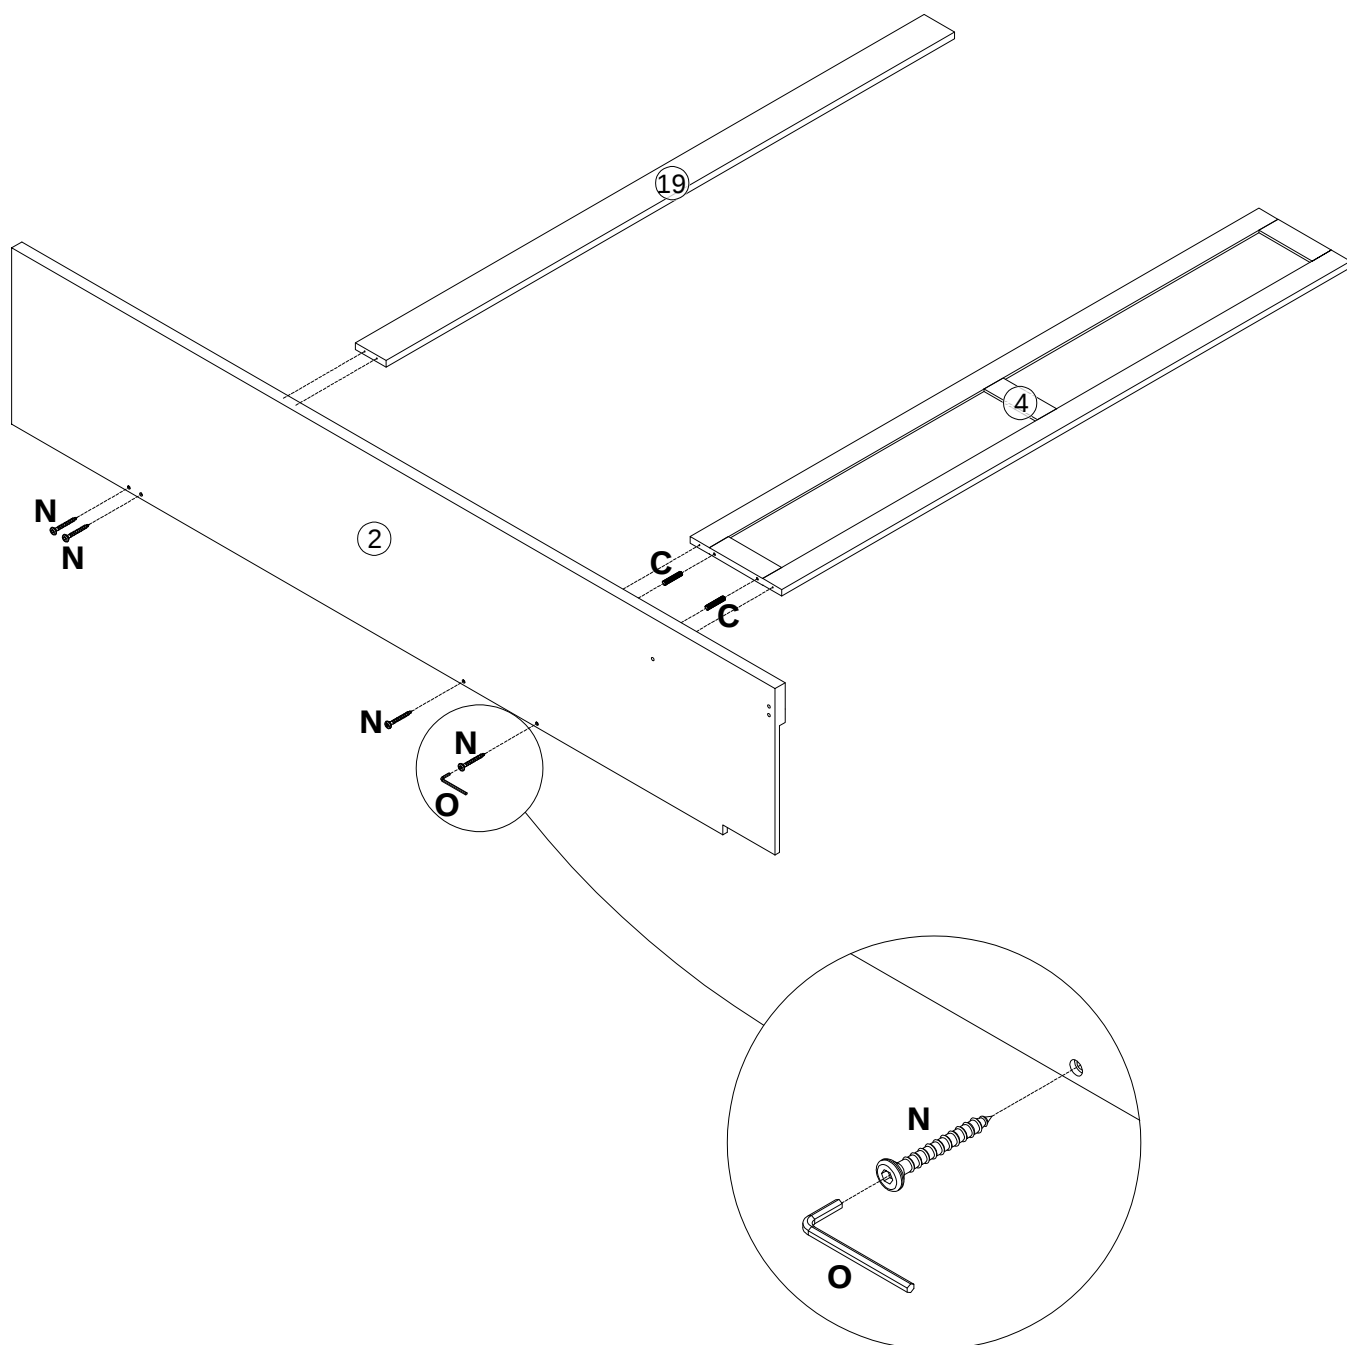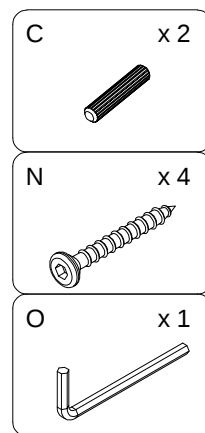



3

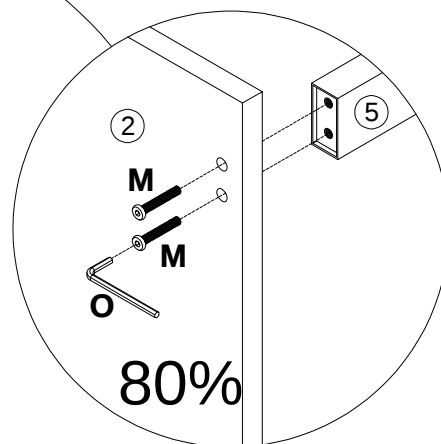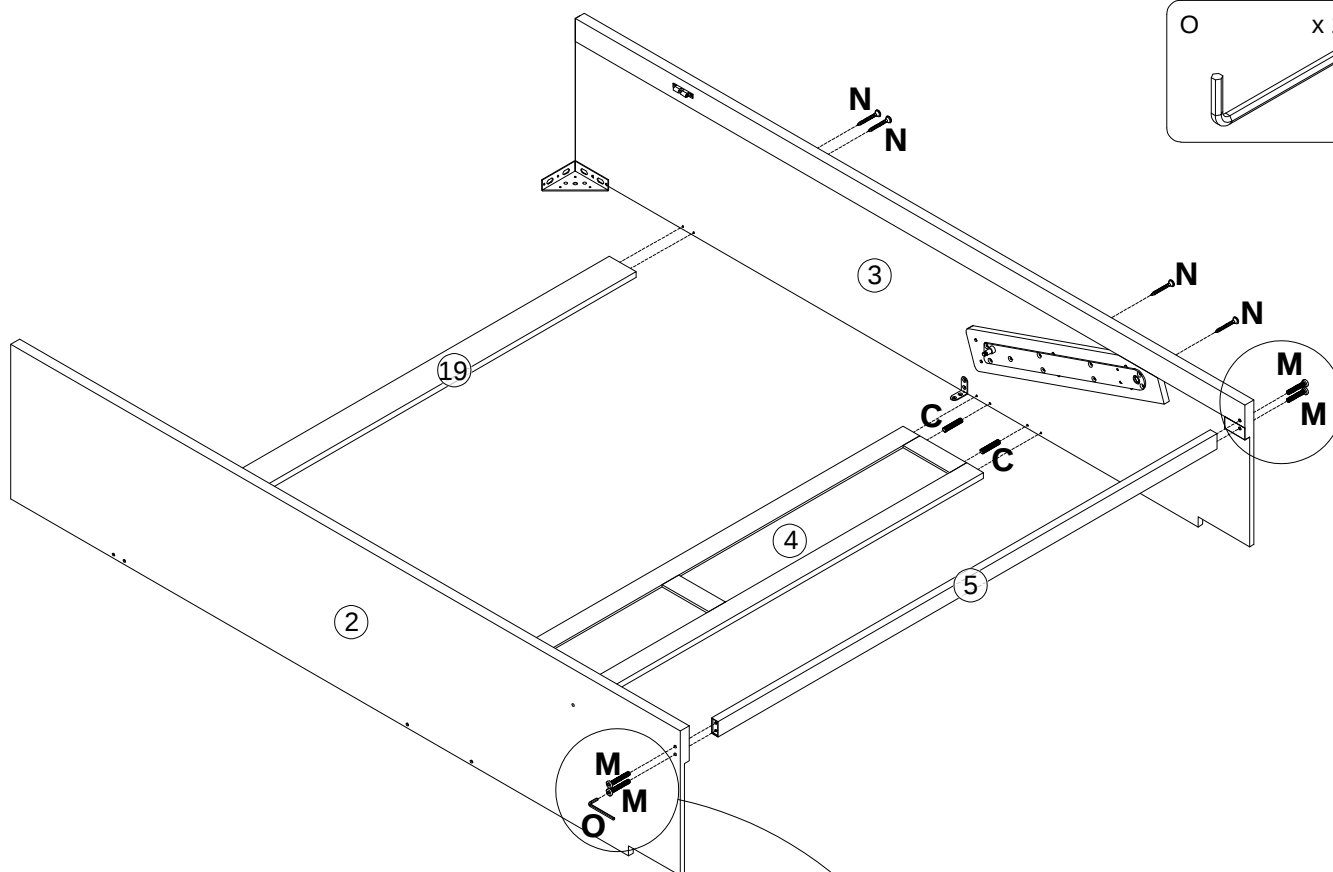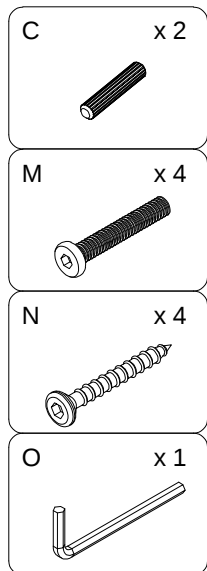

4



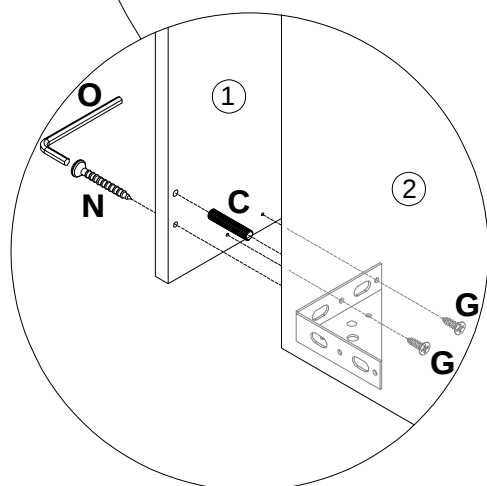
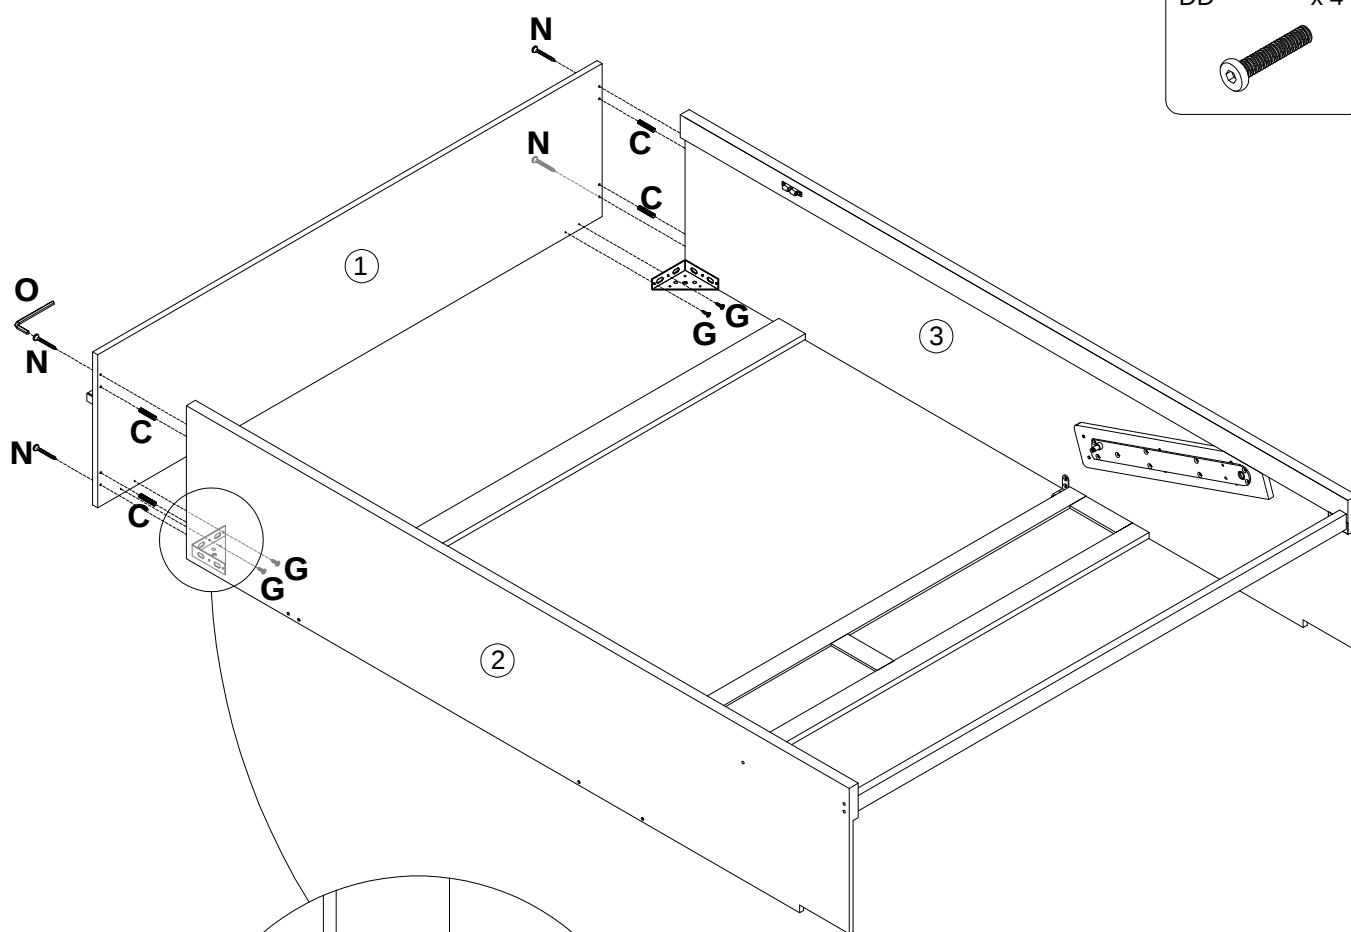
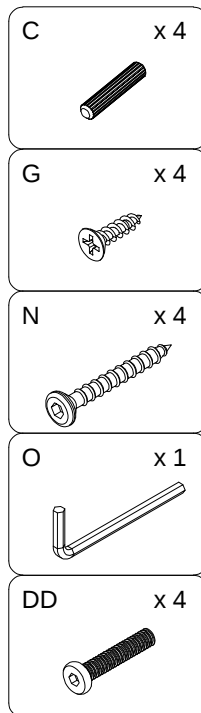
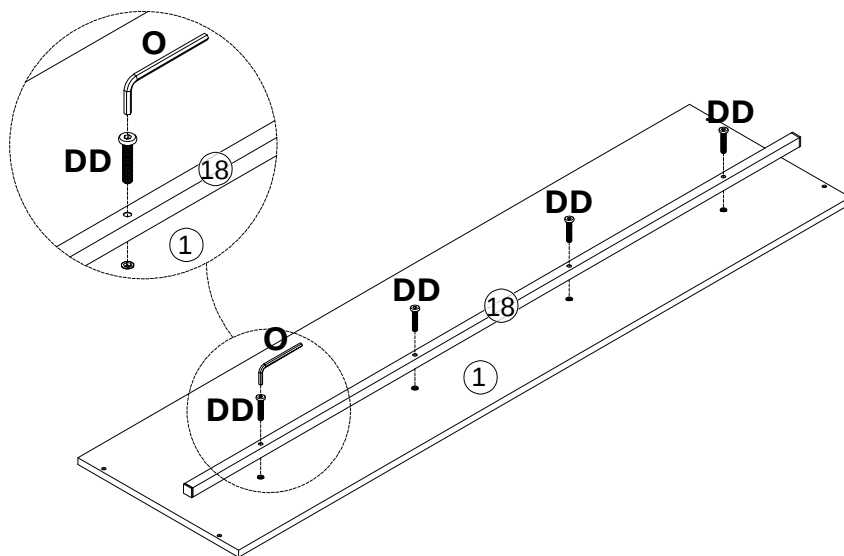


5



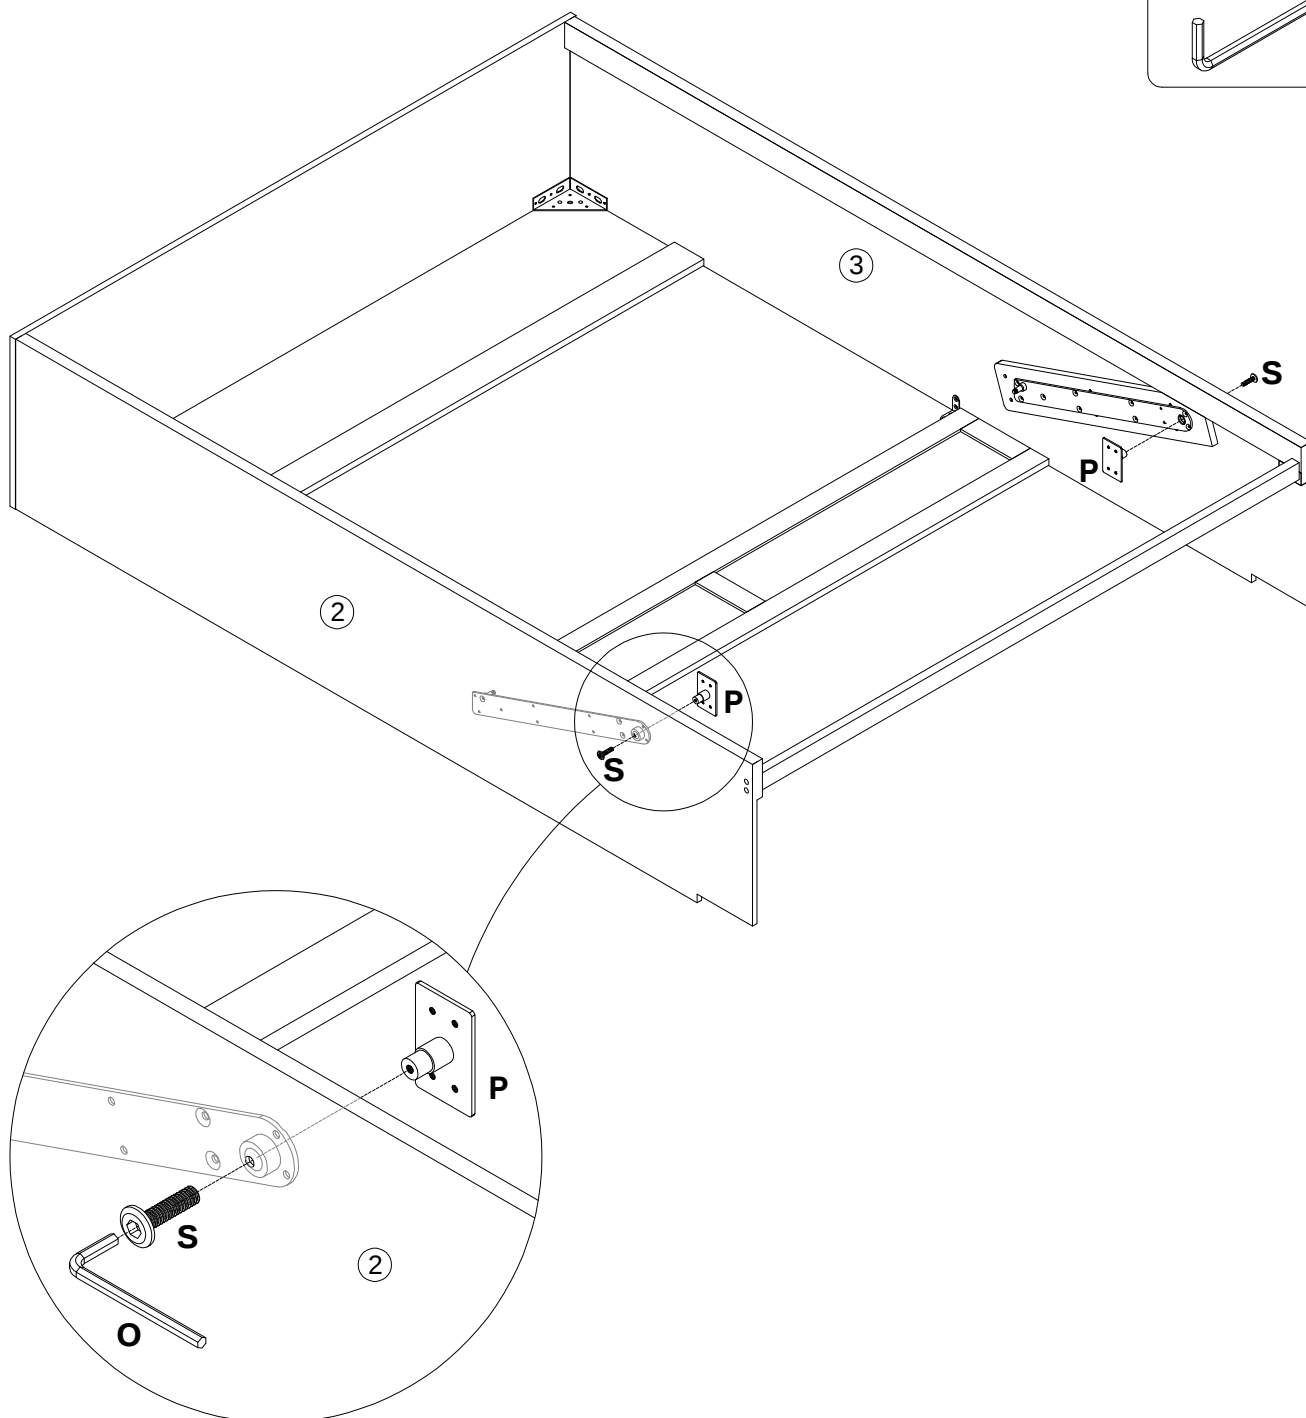
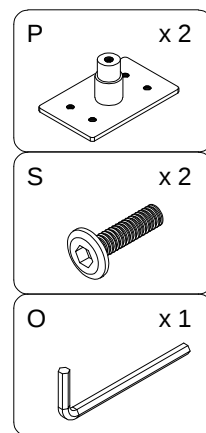


6

WARNING: The frame must be securely mounted to a suitable wall before proceeding with the remaining installation steps. Failure to do so poses a serious safety hazard.

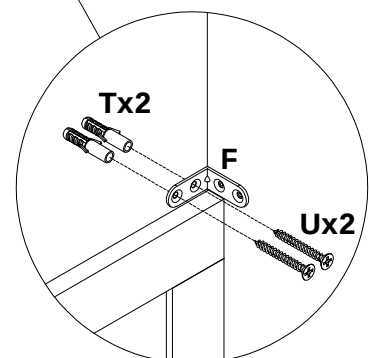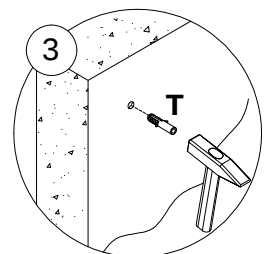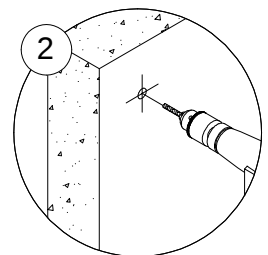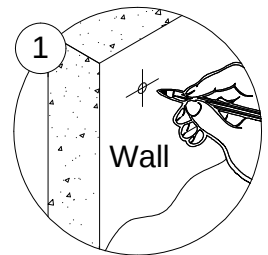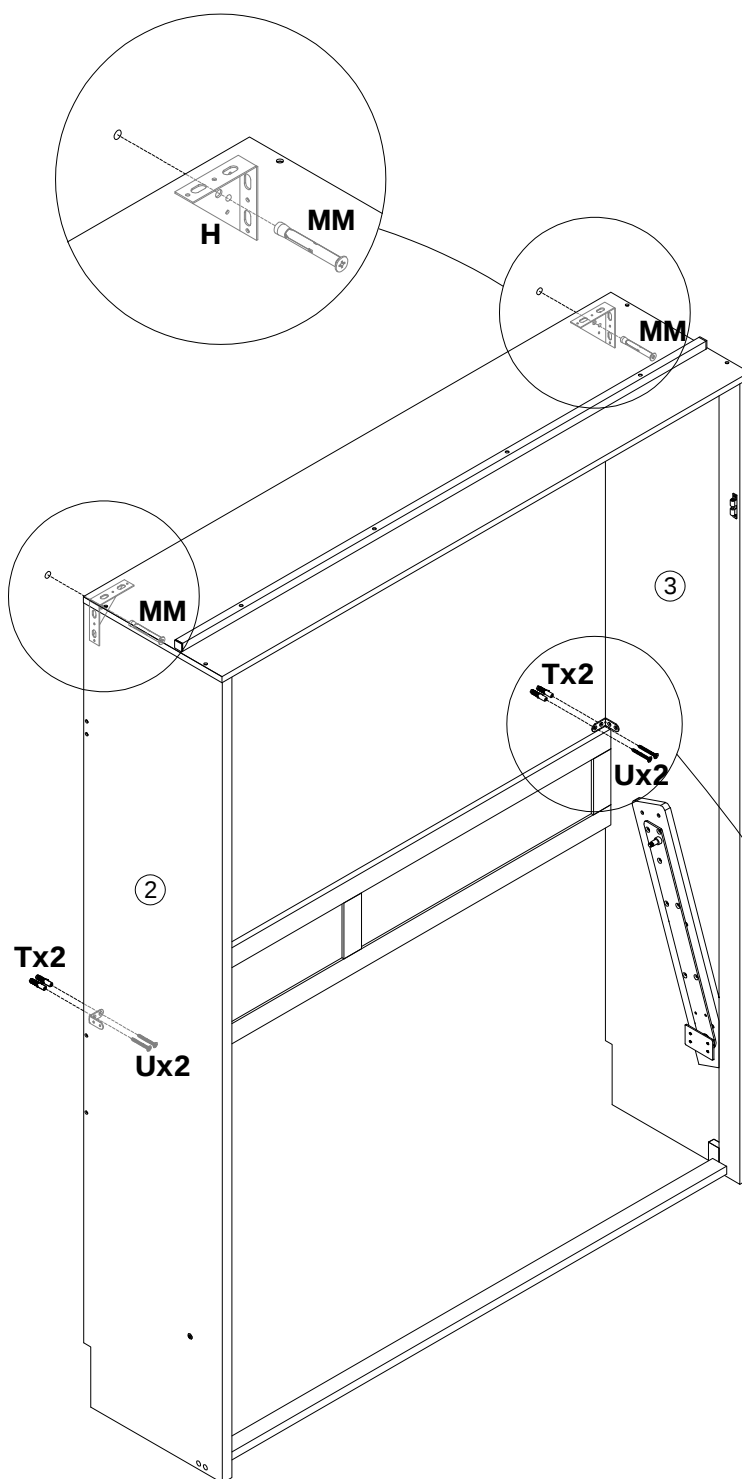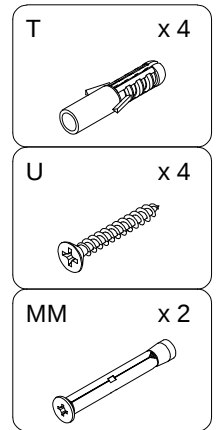

7

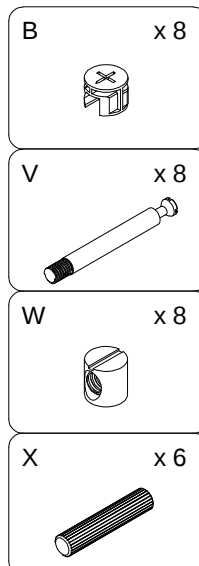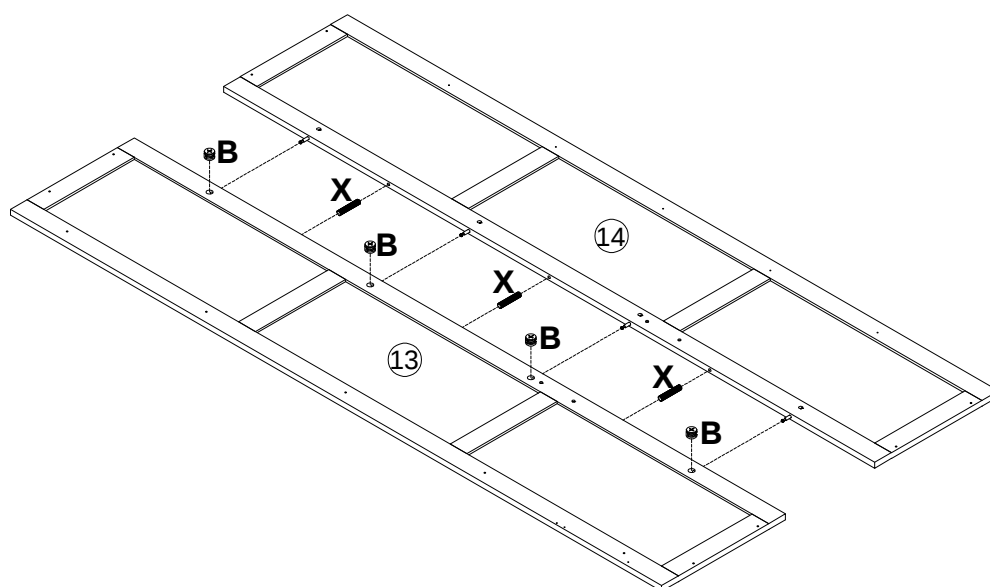
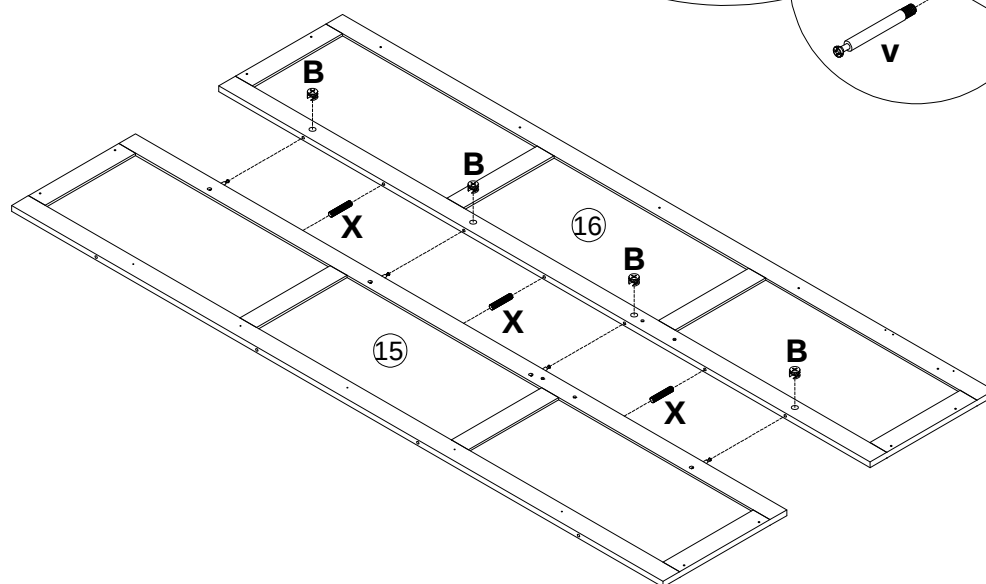
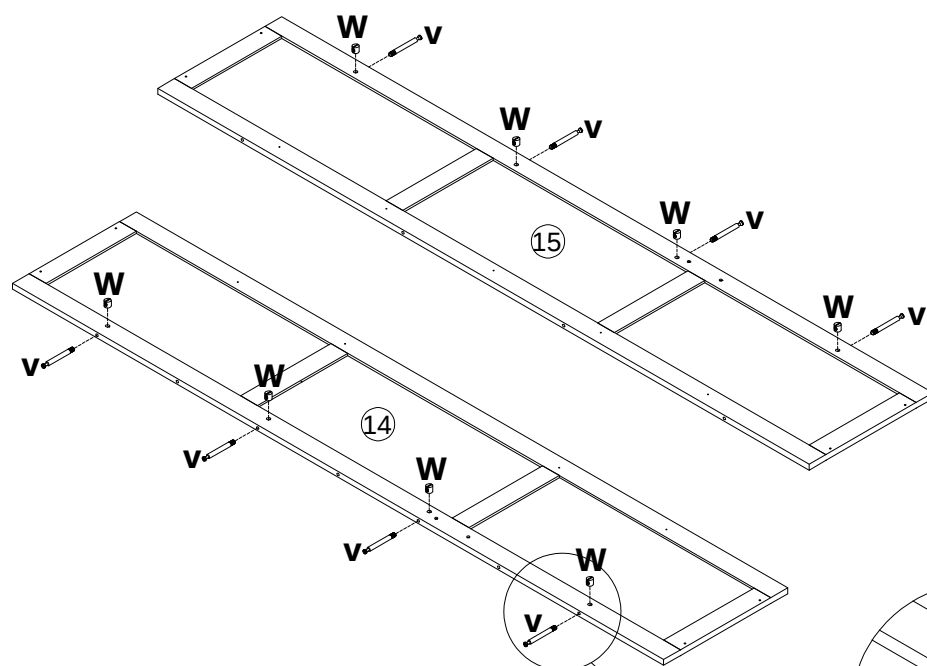


8







A x 26




X x 4

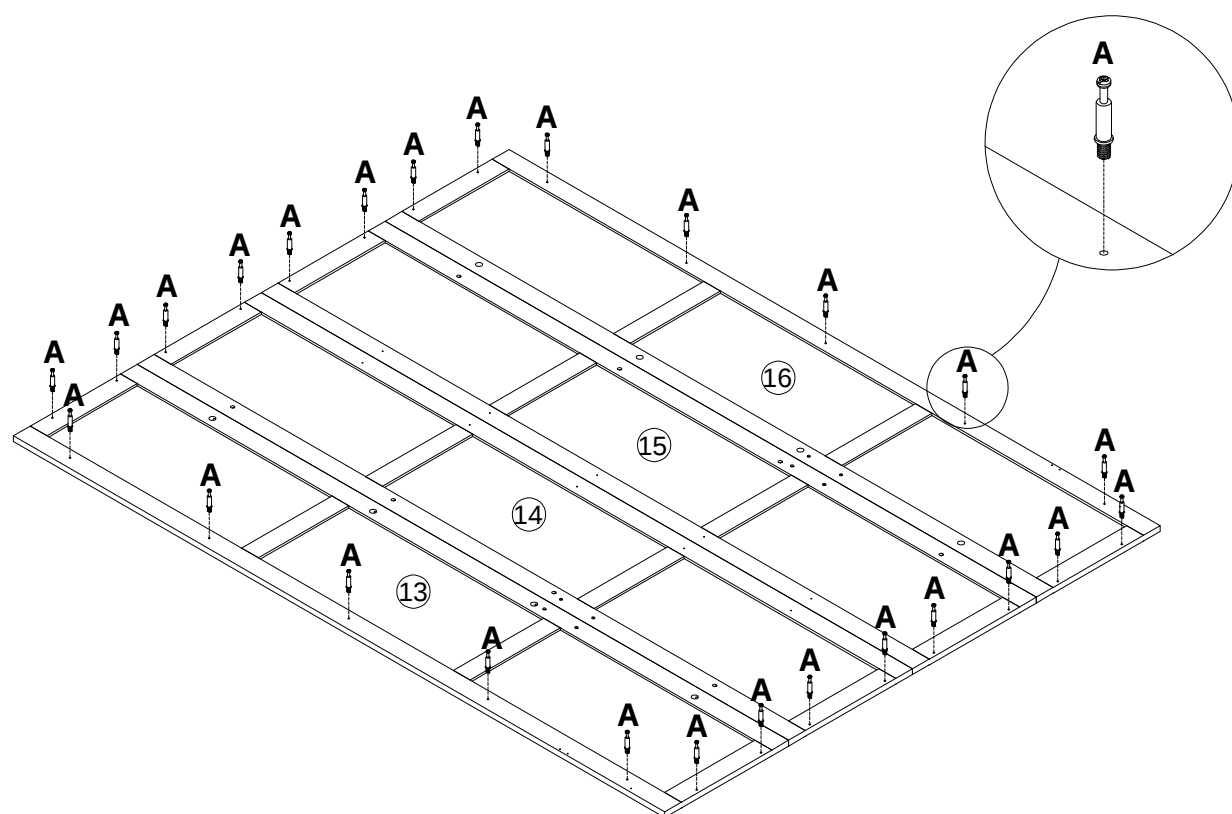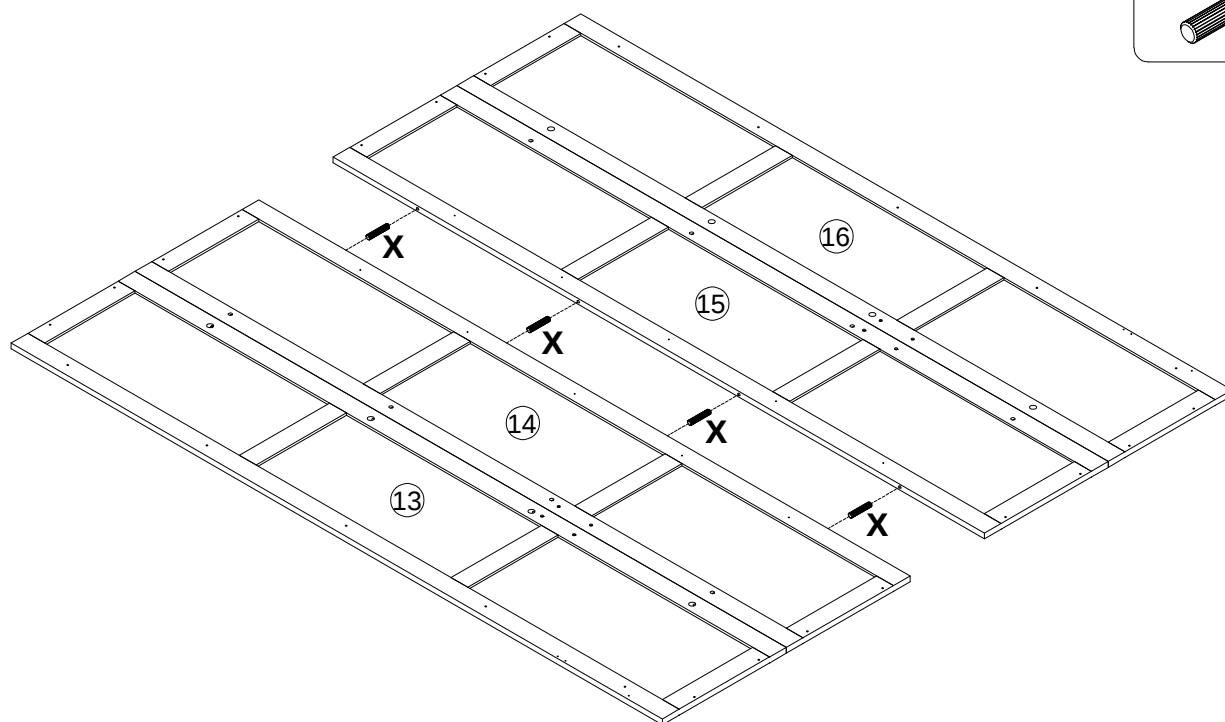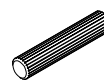



9

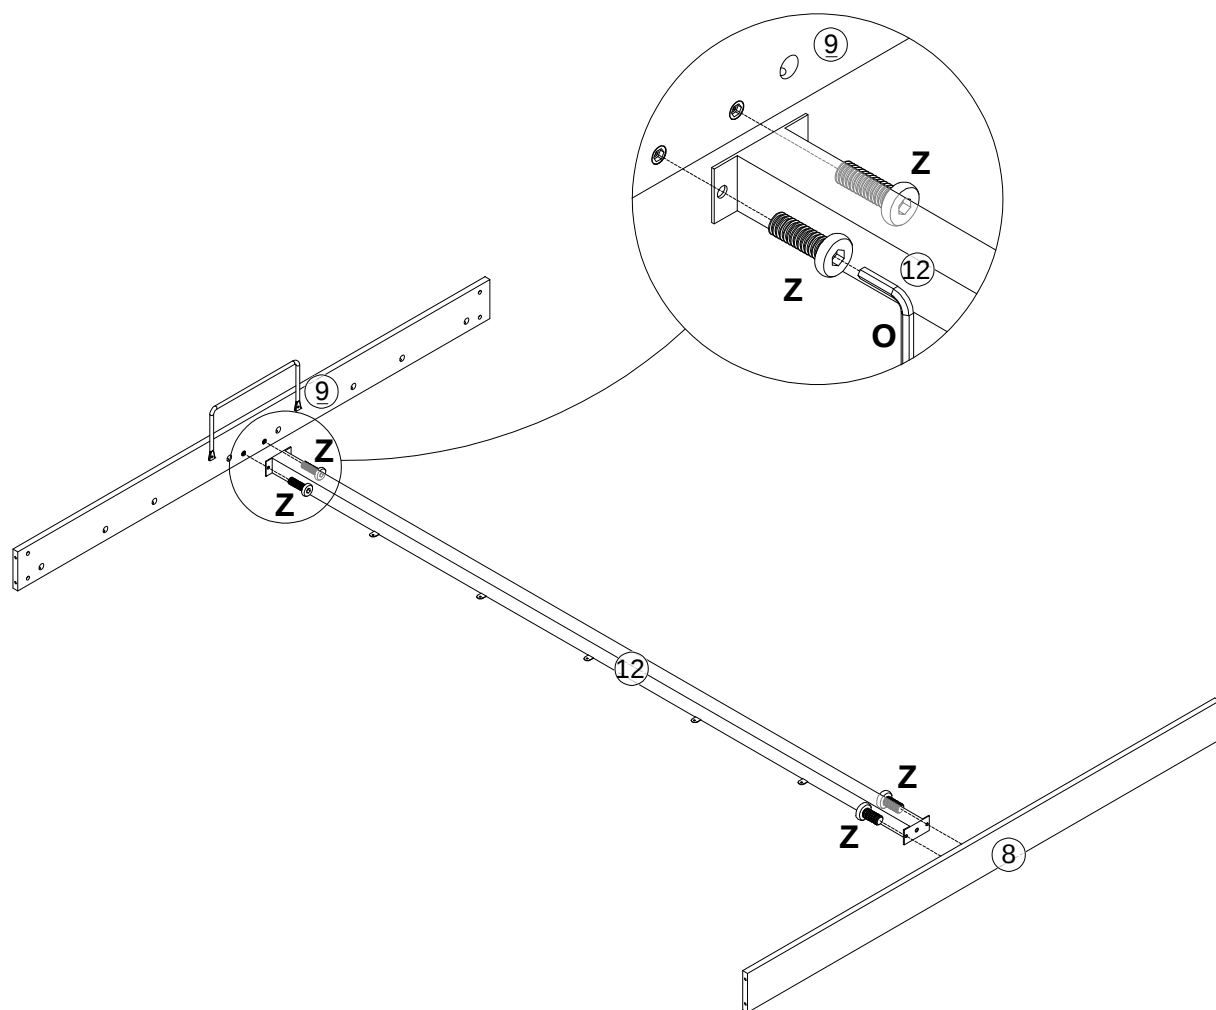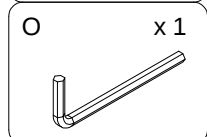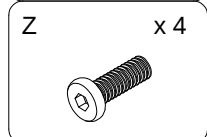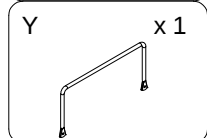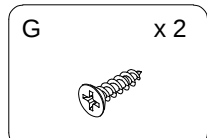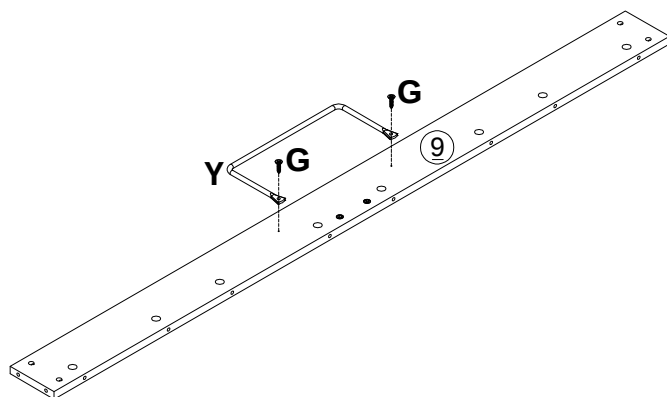


W	x 8
AA	x 8
O	x 1

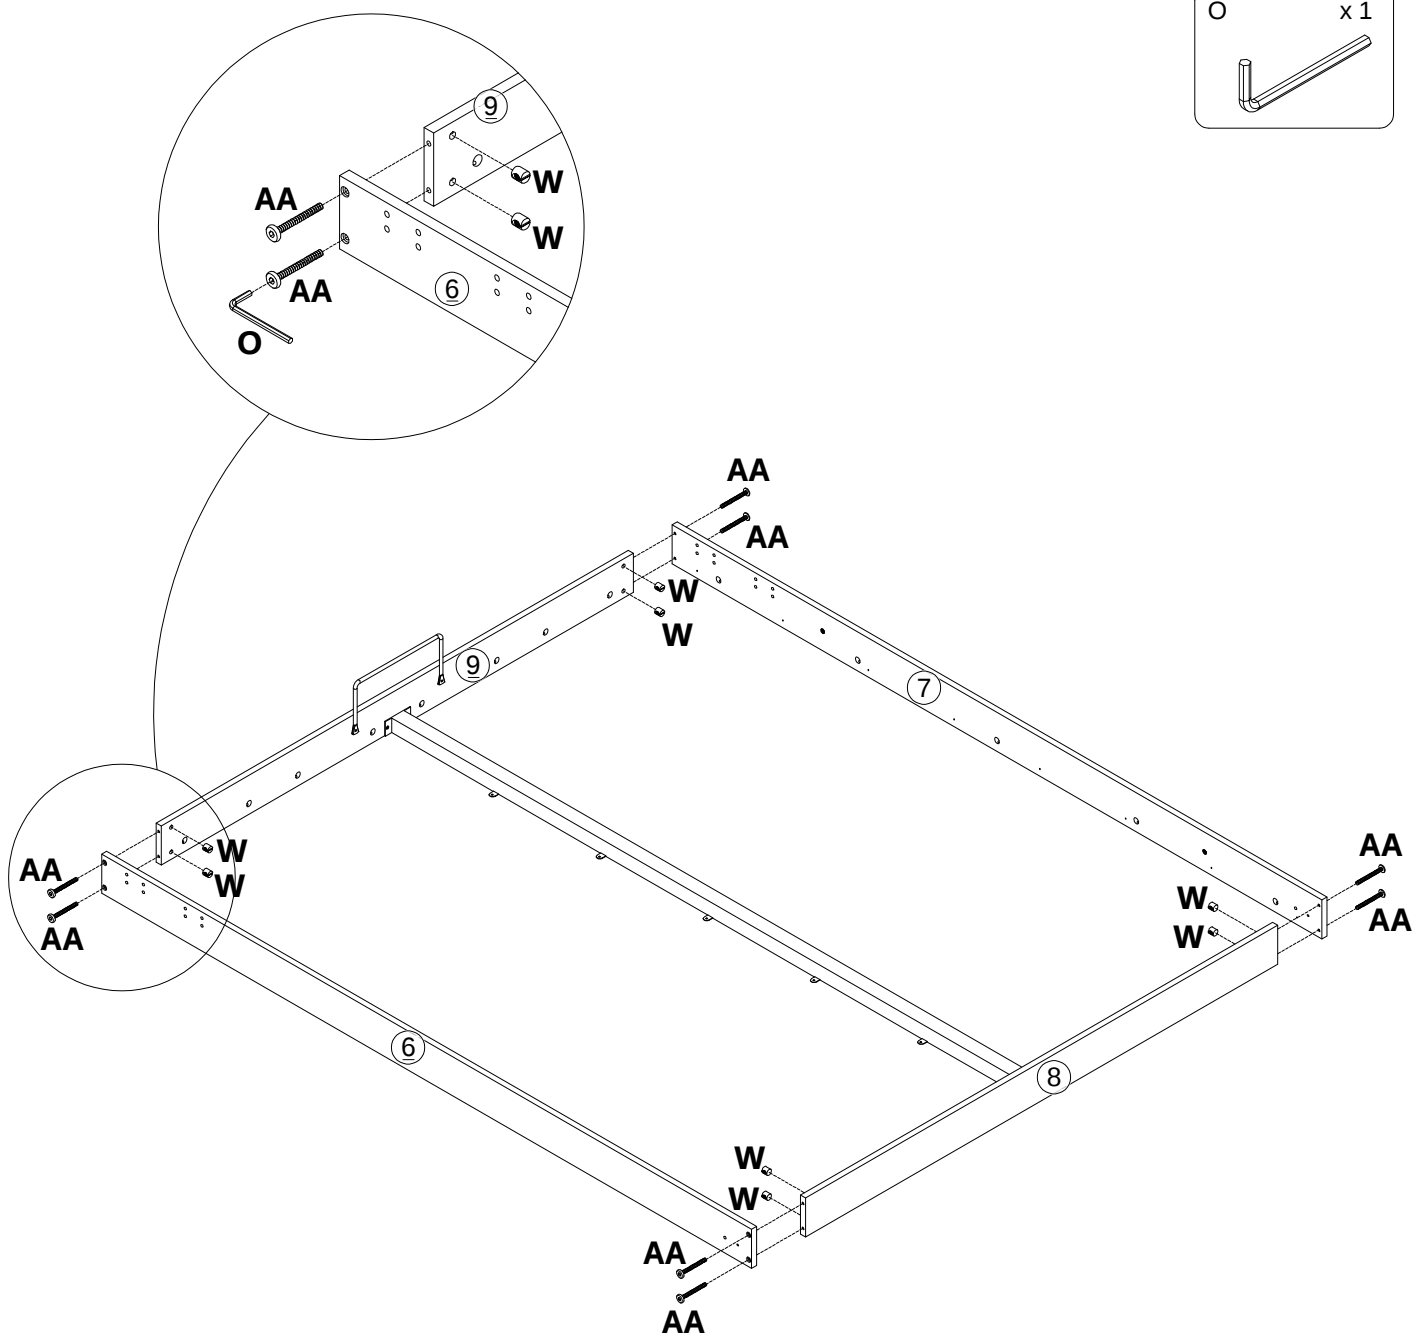


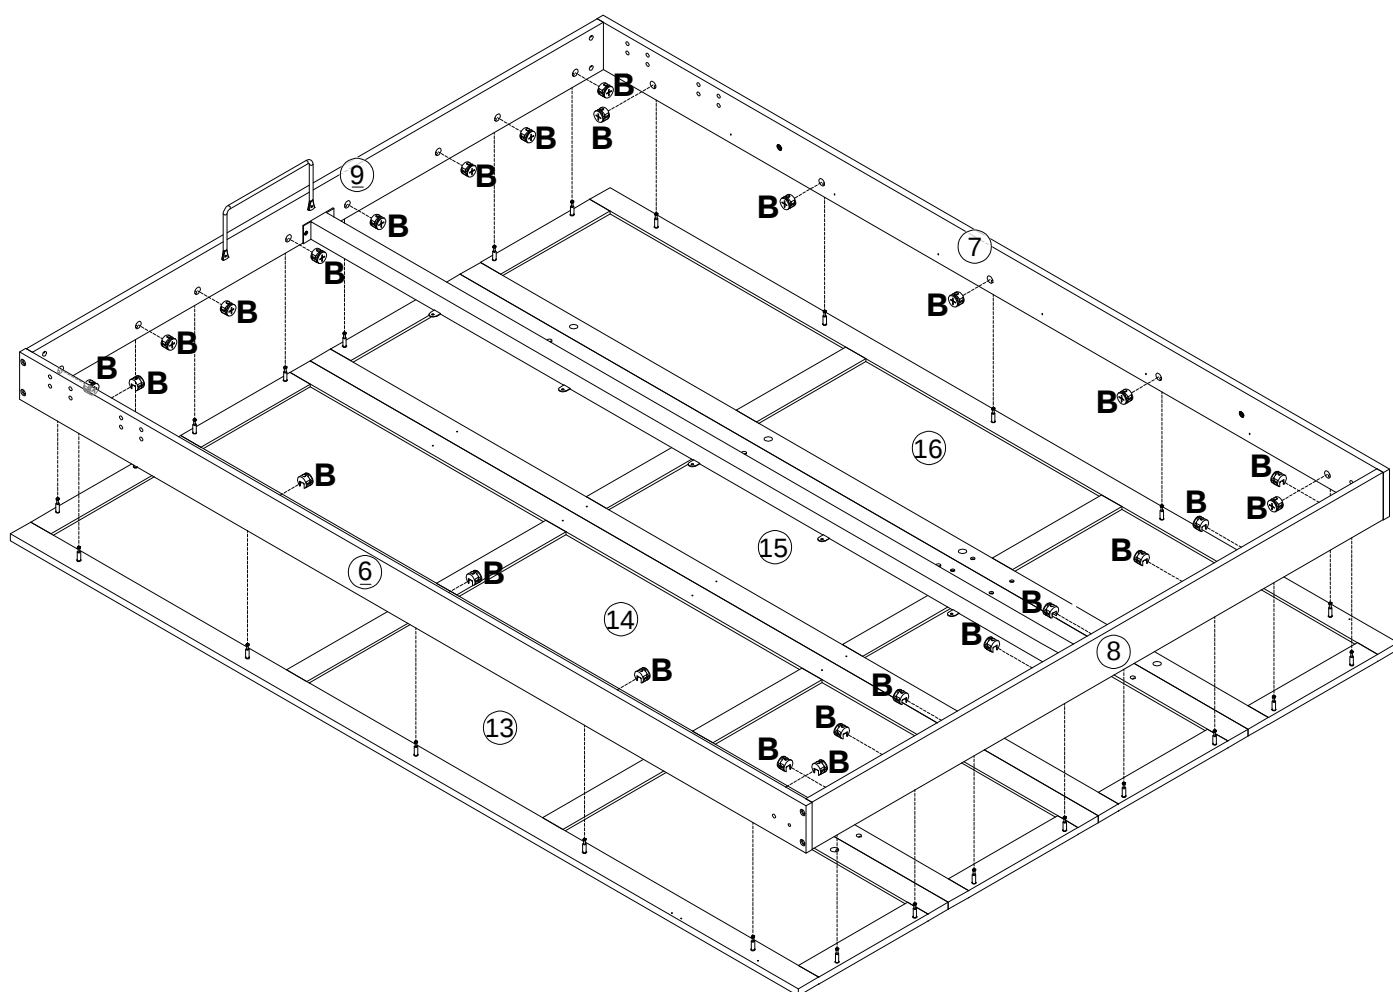


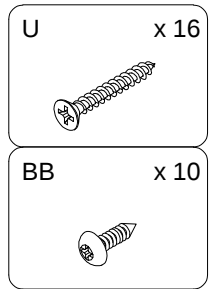



Hole position facing upward

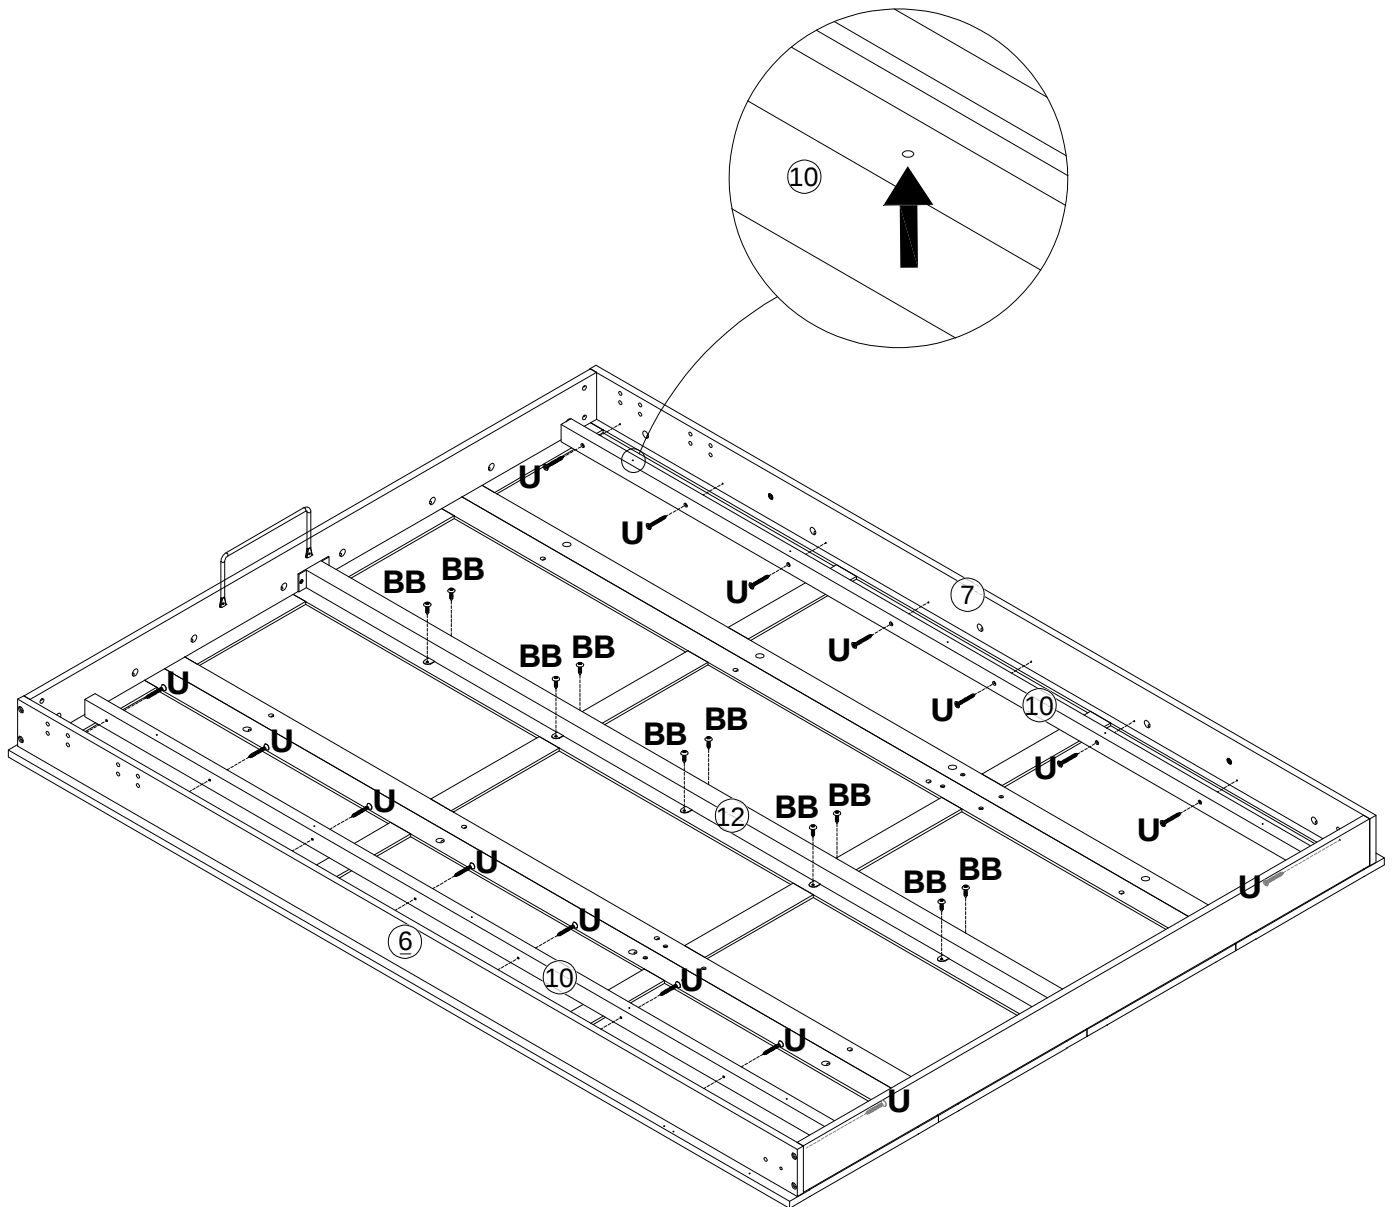


13

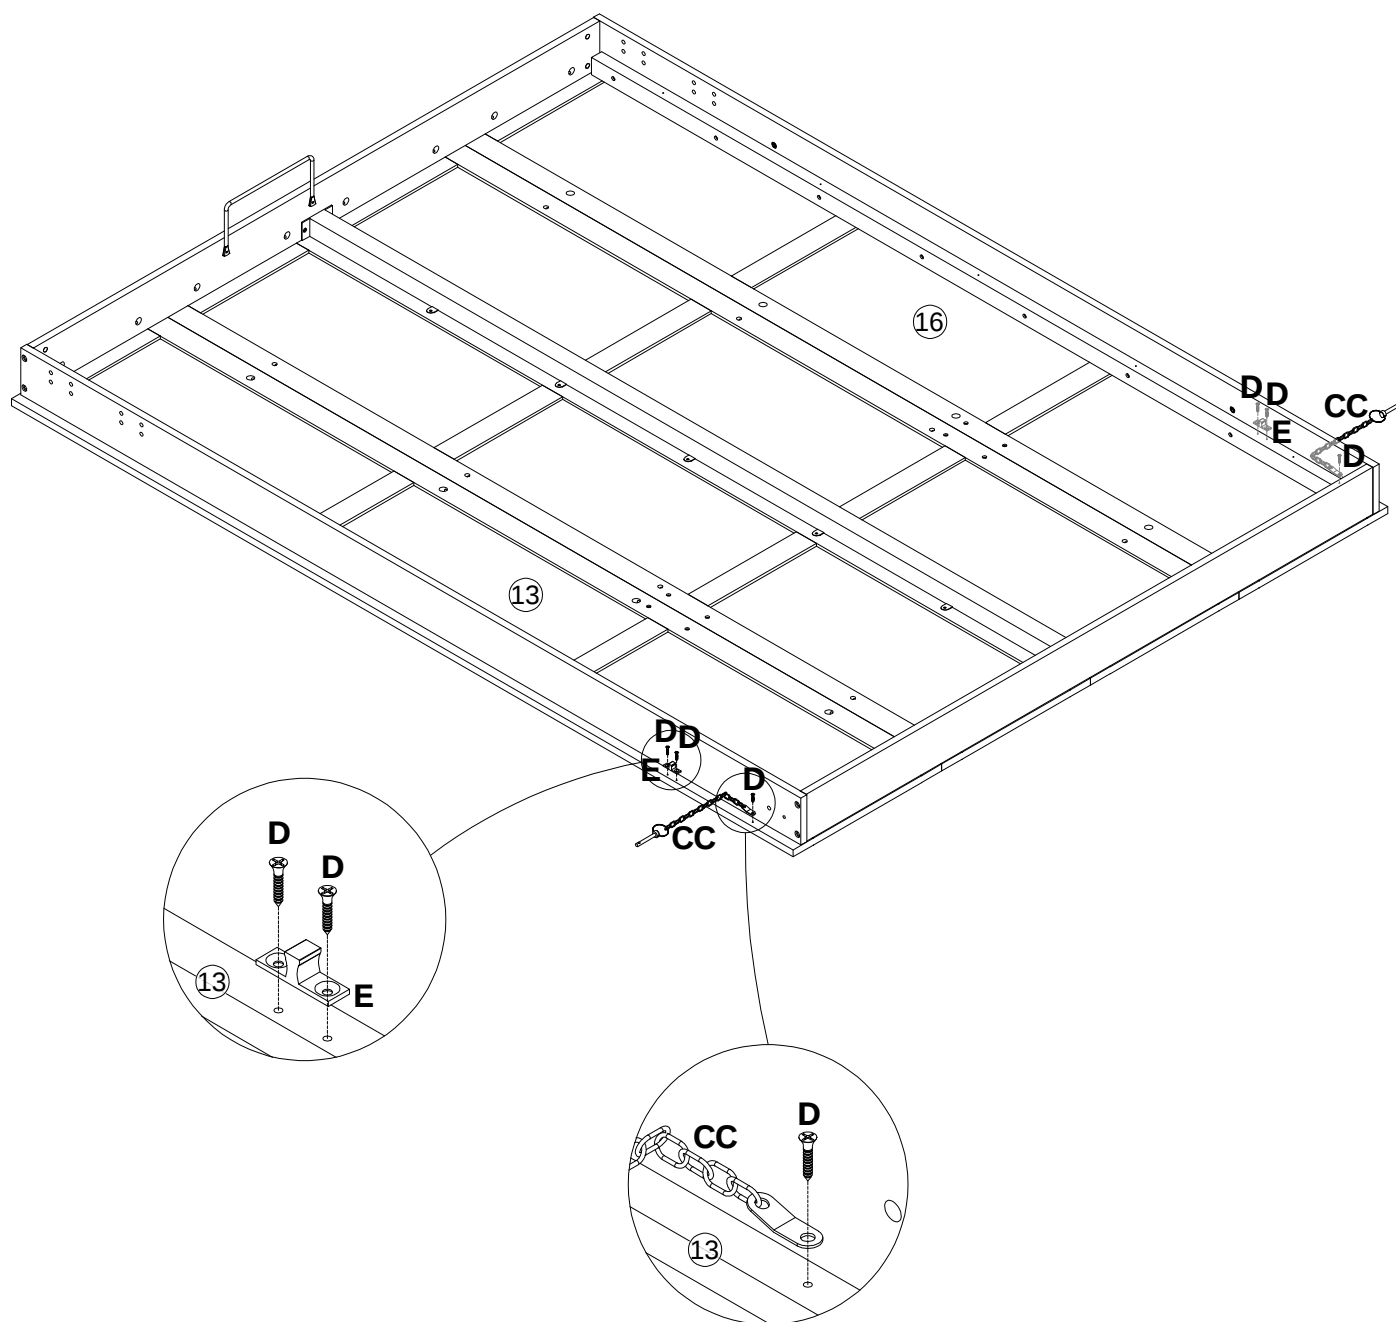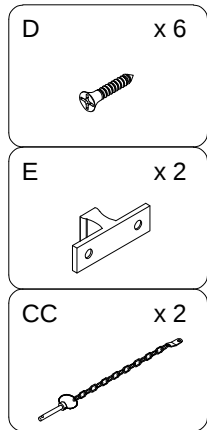

14

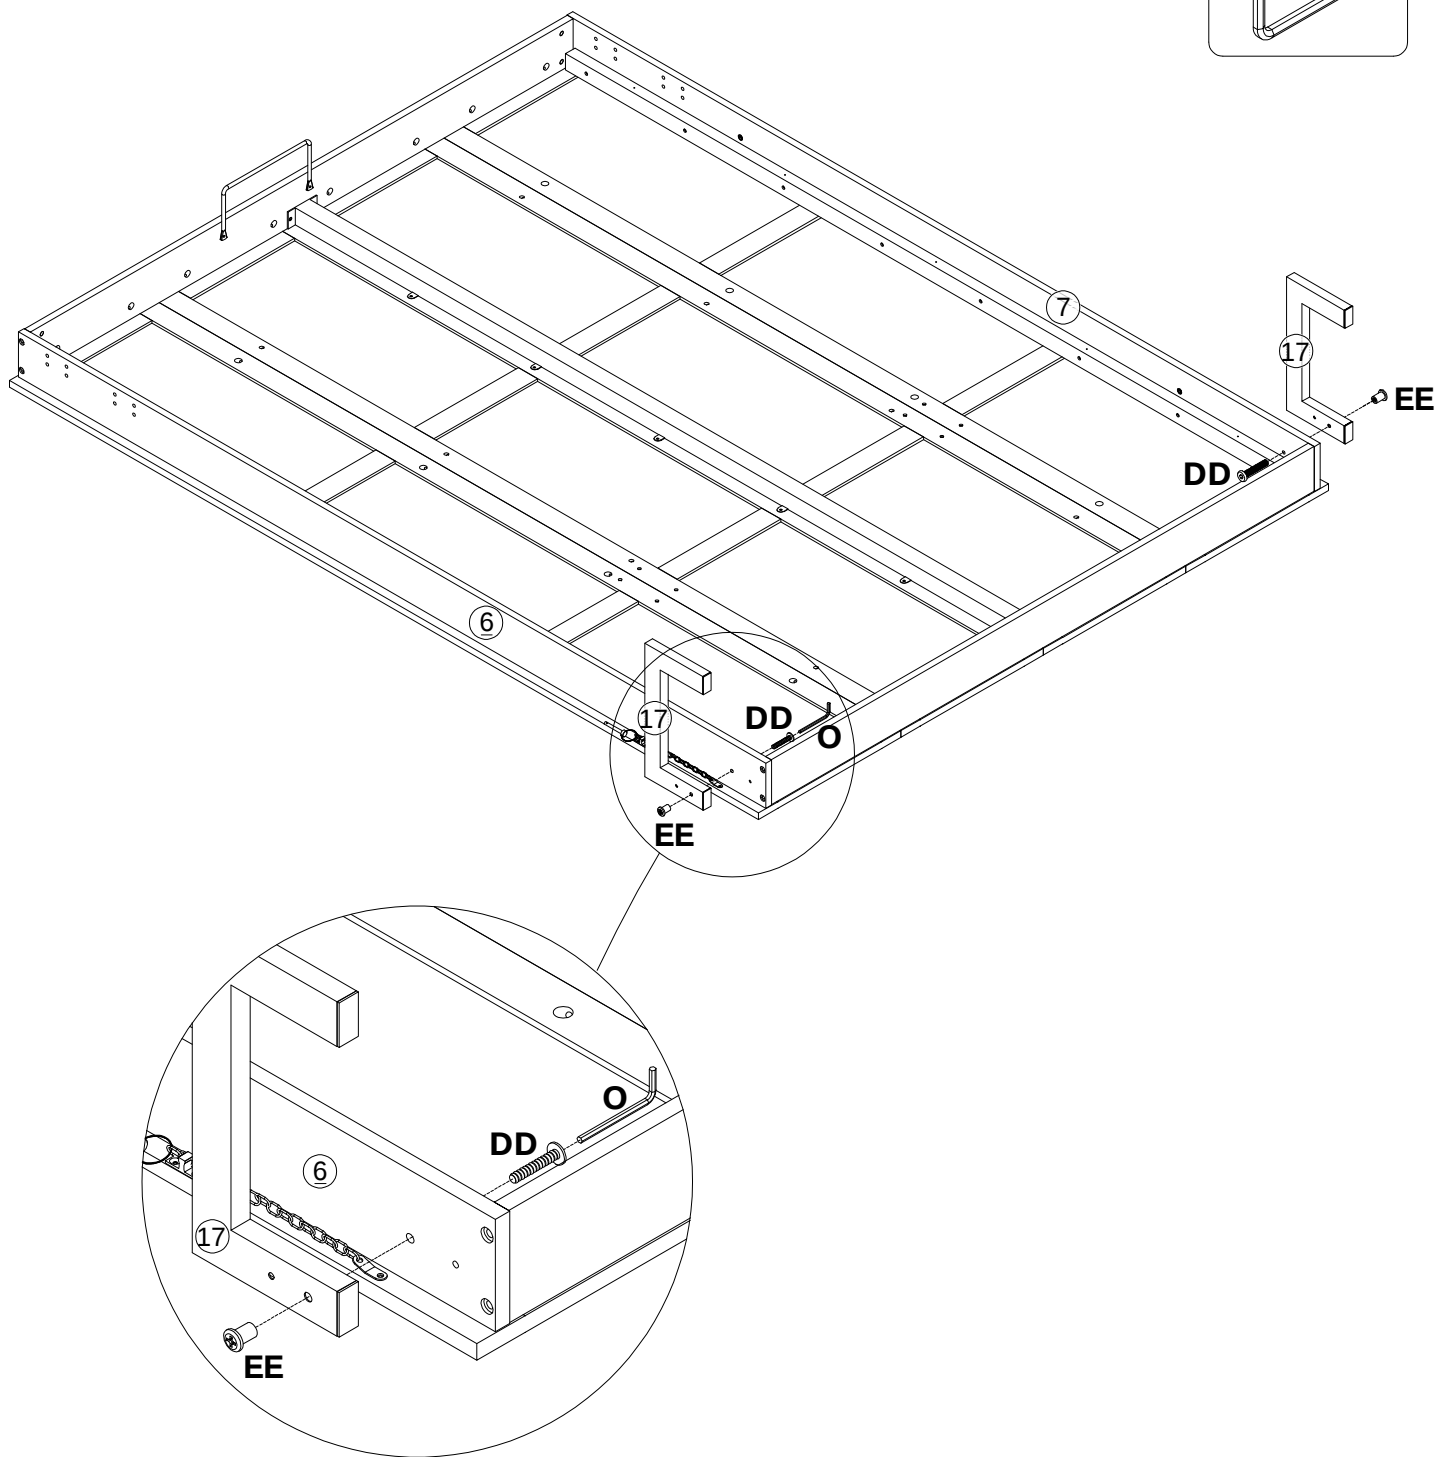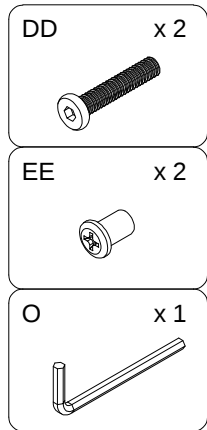


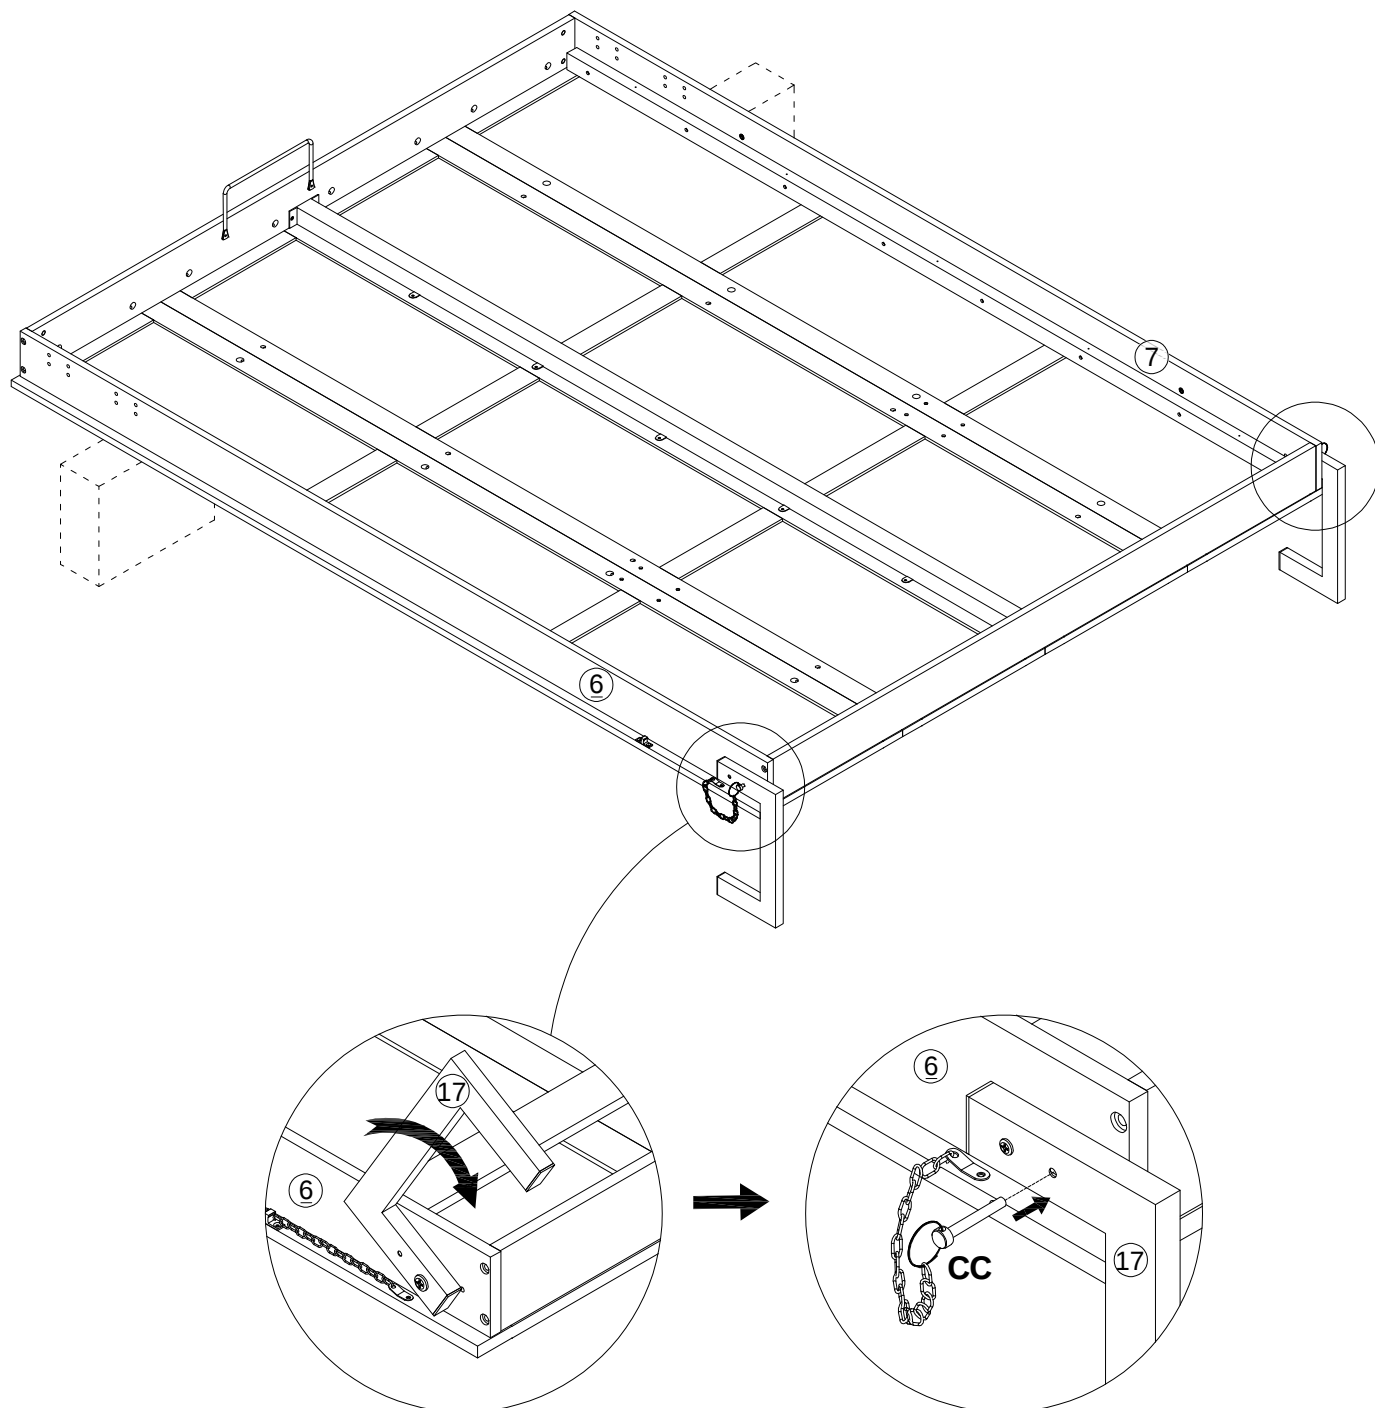


16



Need items to elevate the bed frame


FF x 4


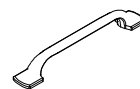


GG x 8

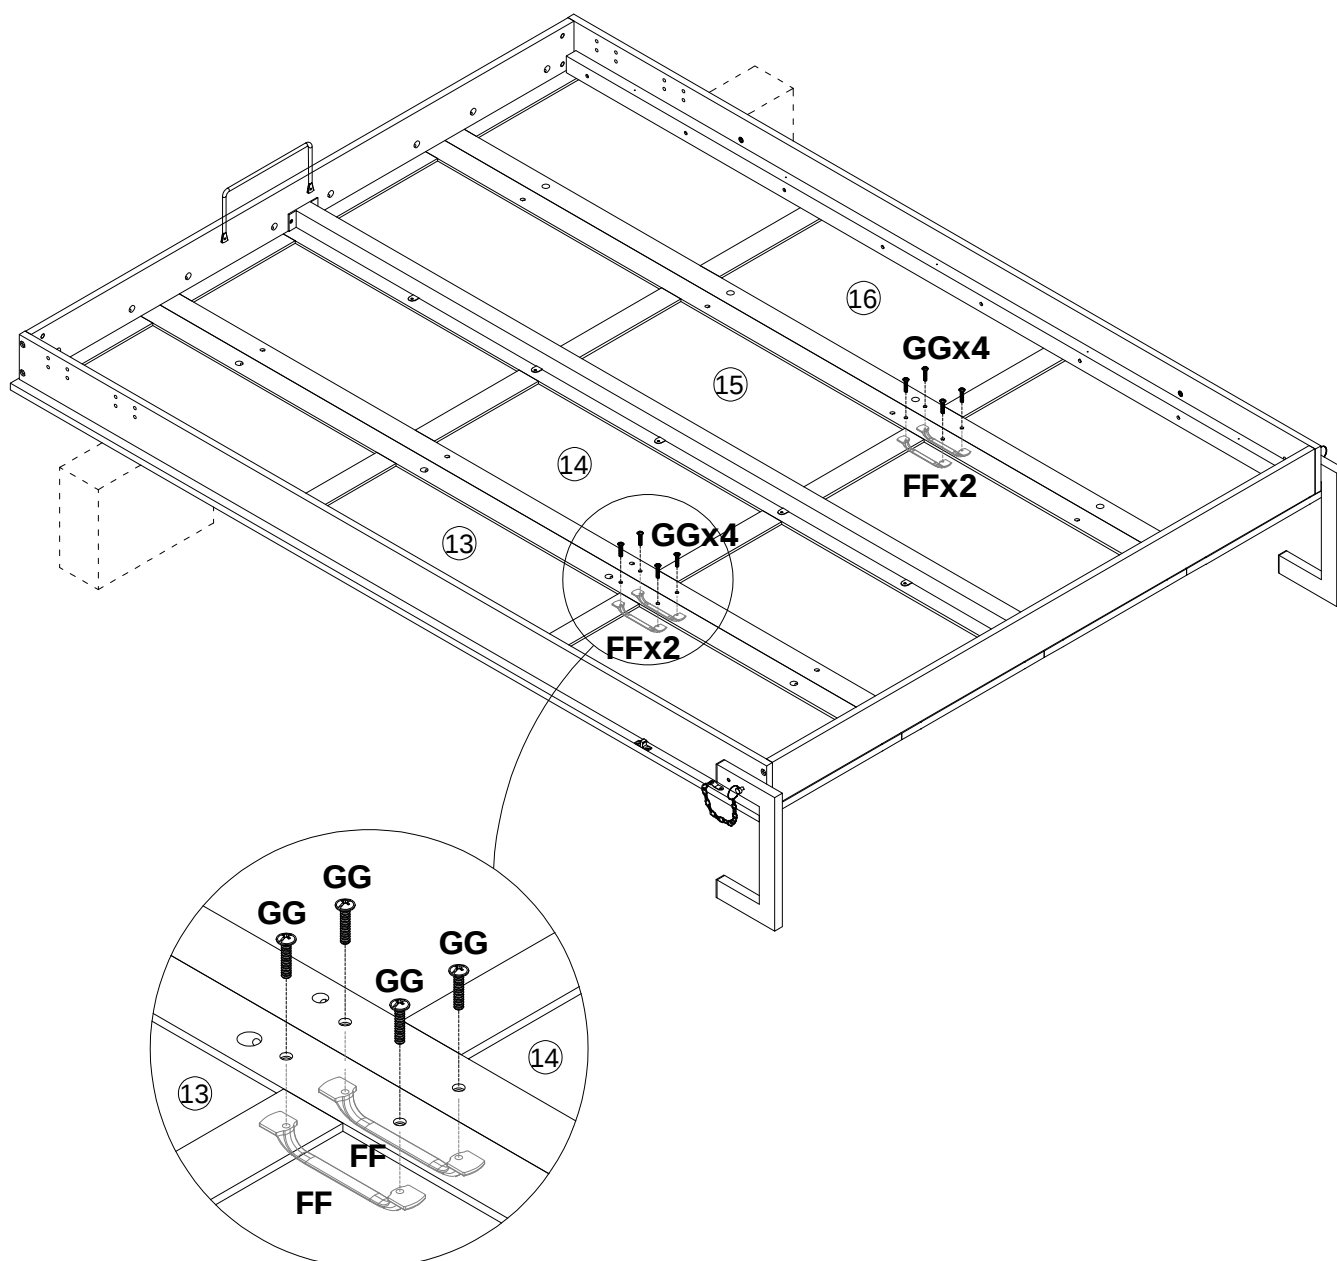

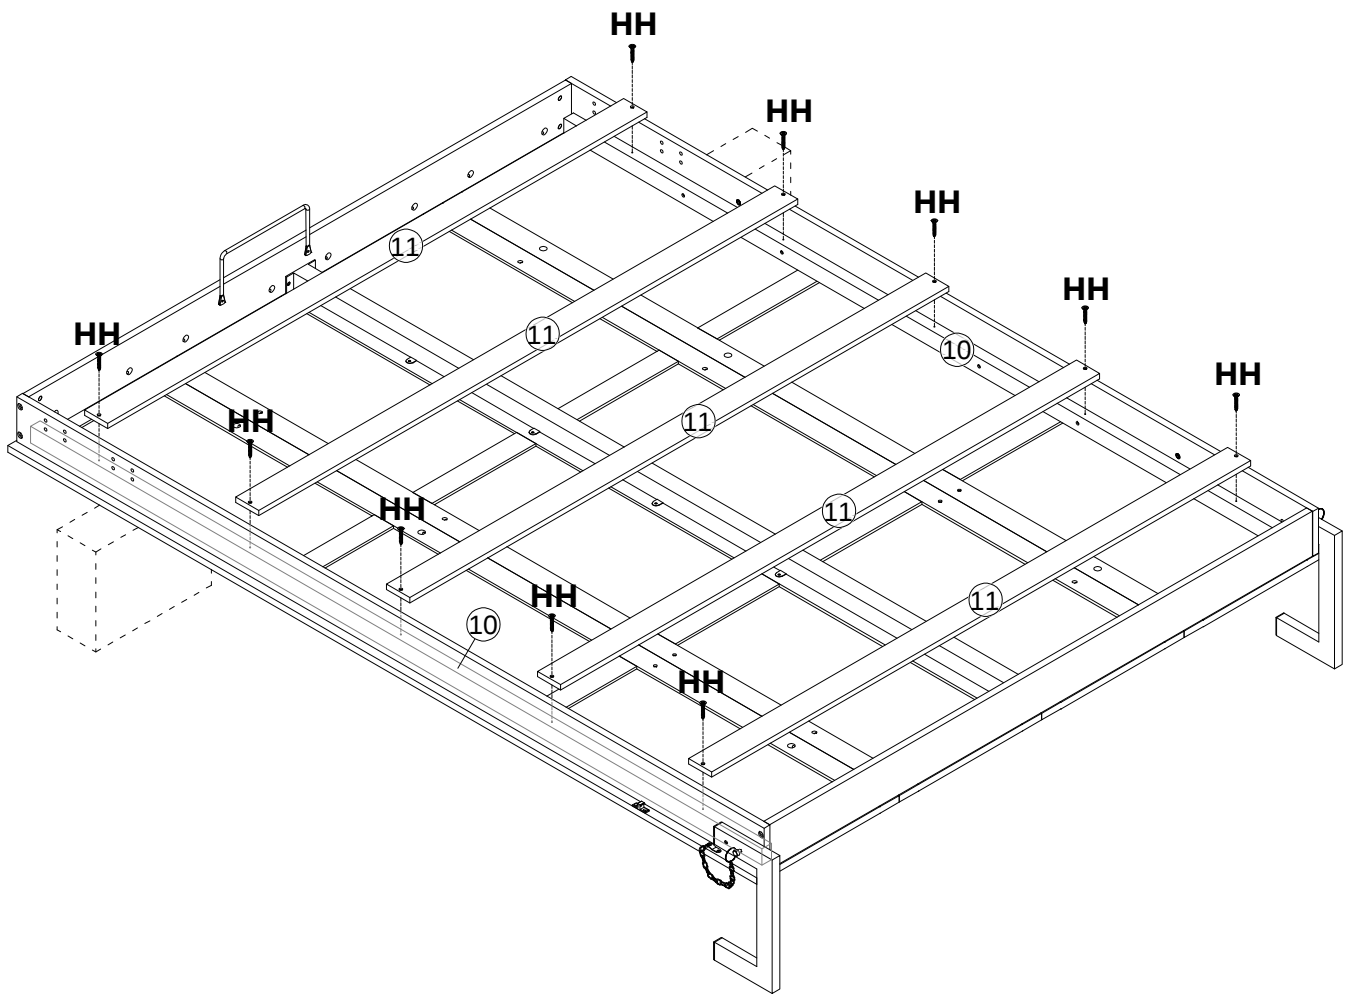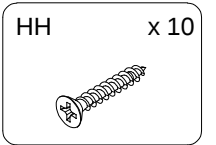




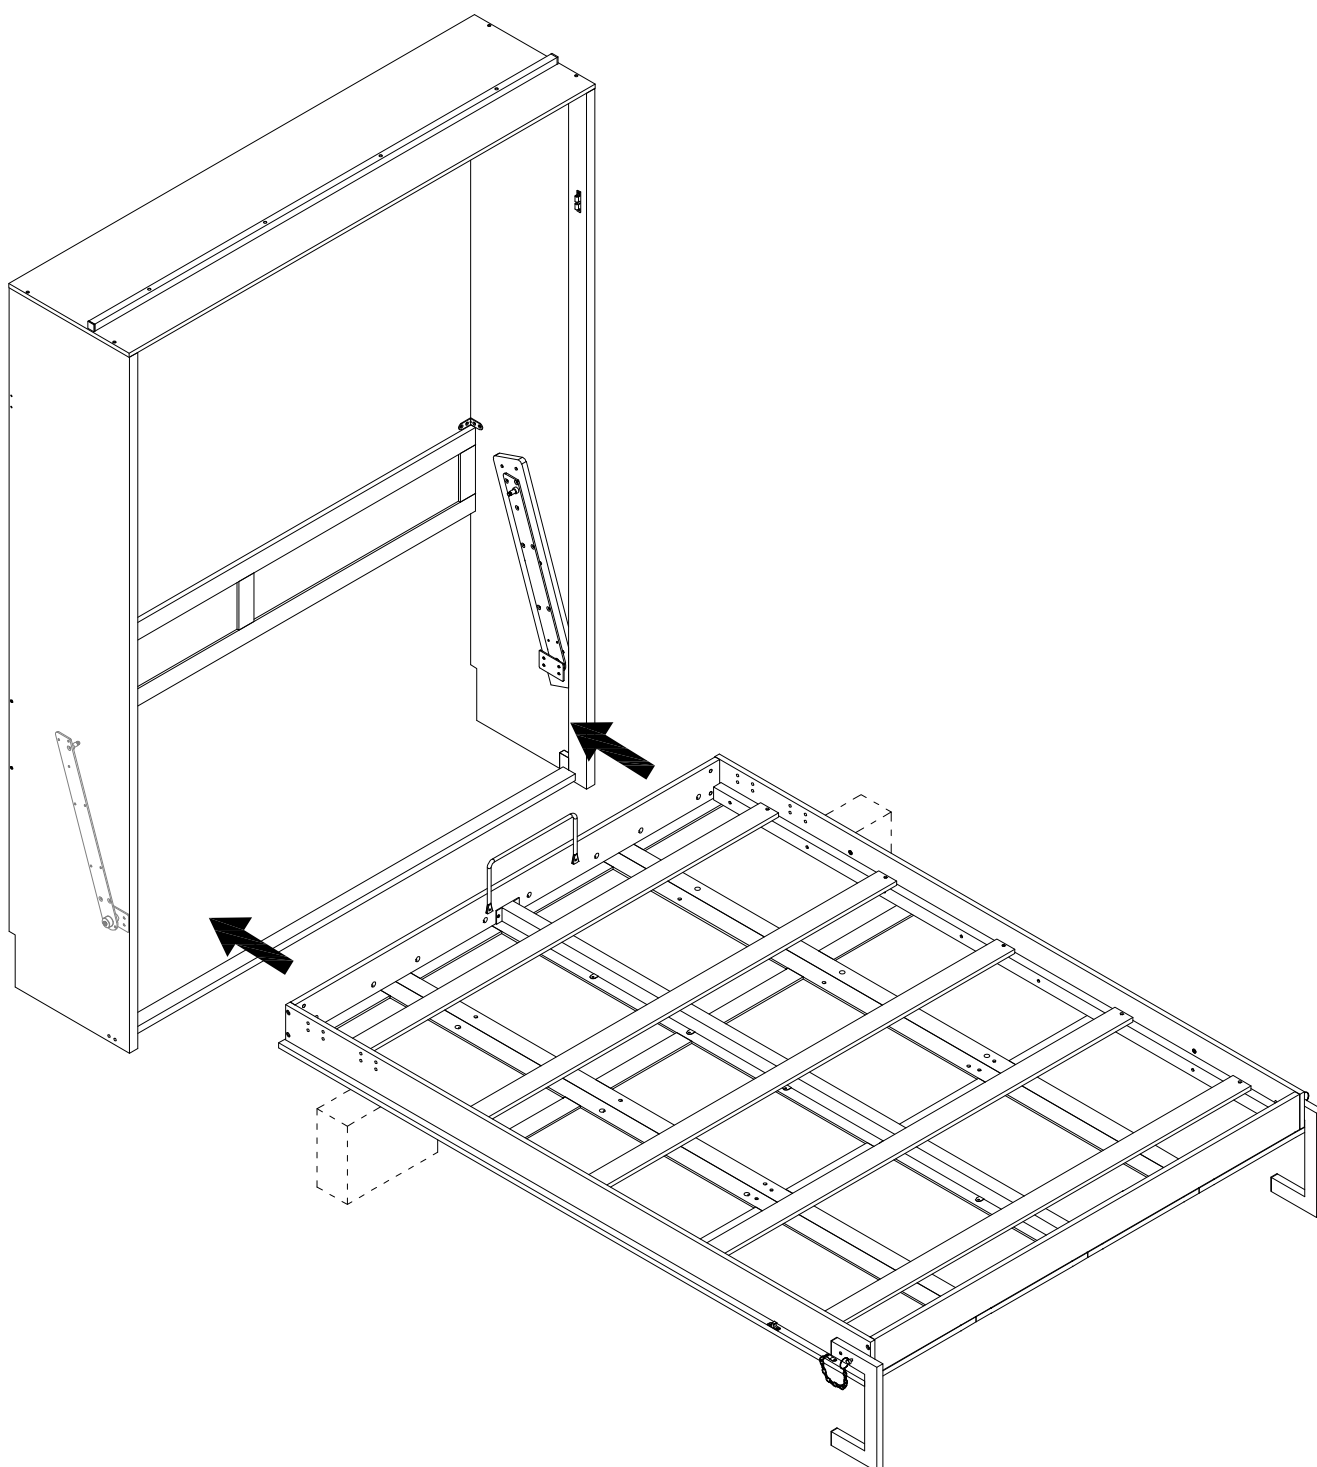


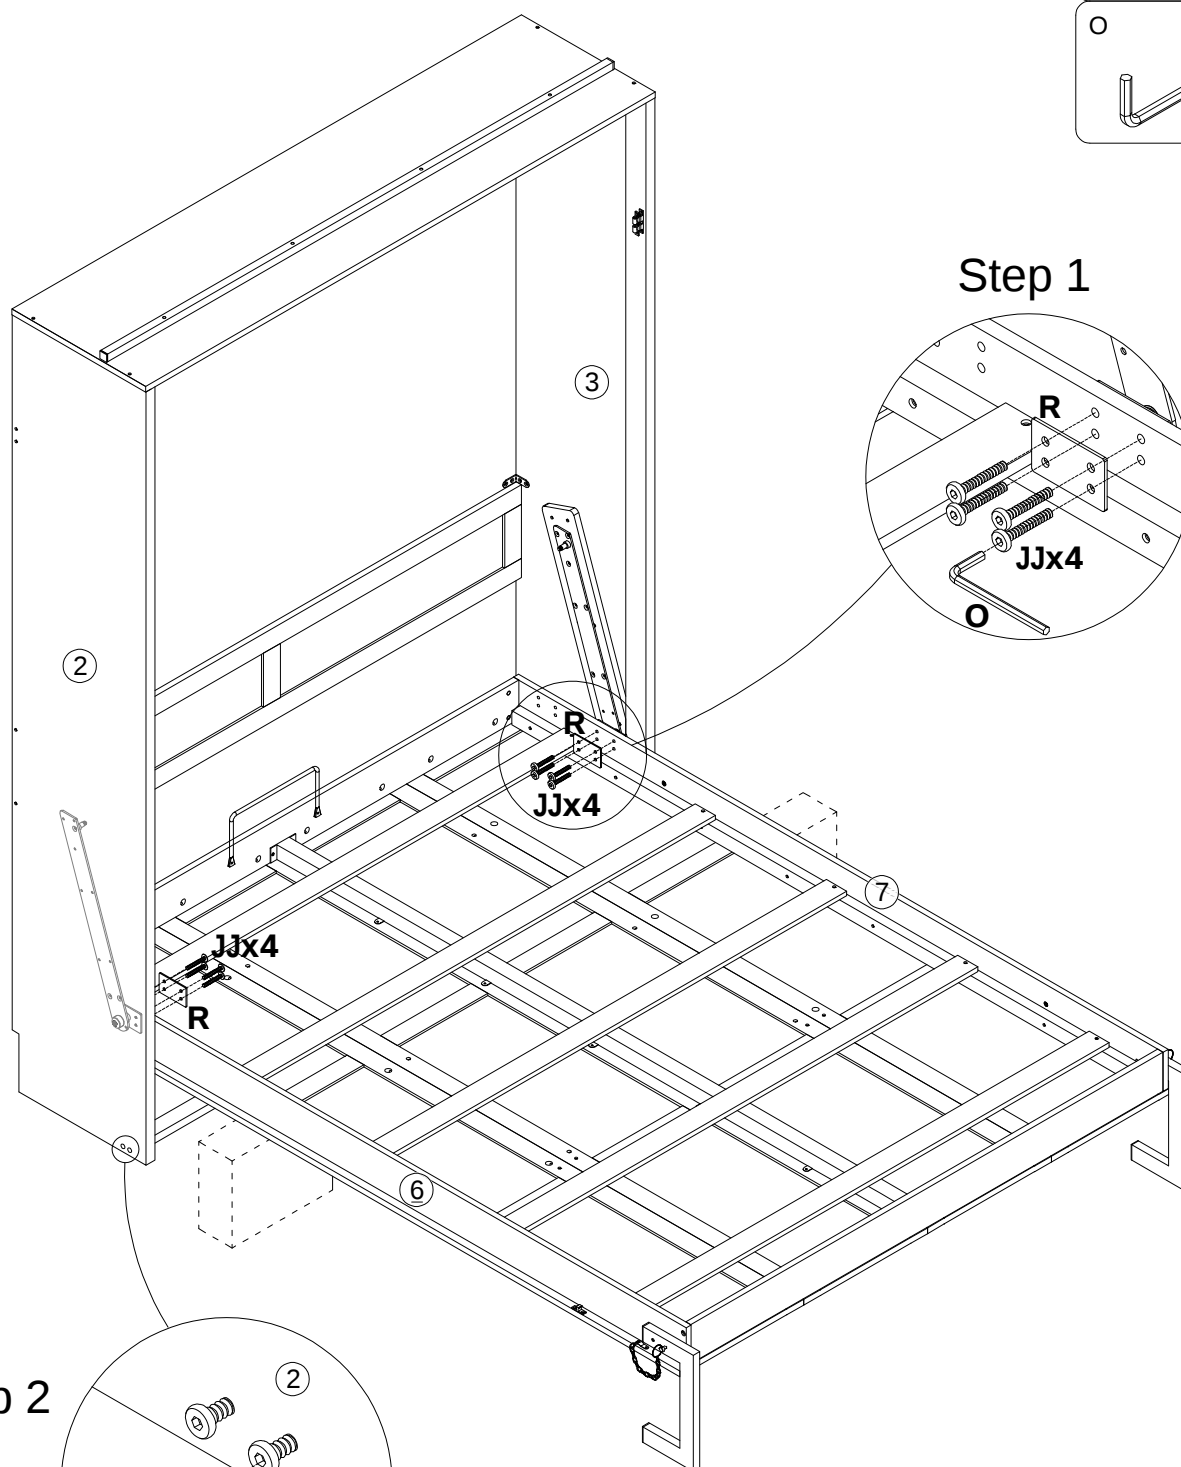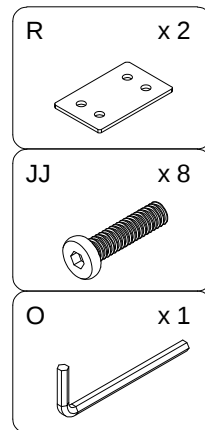


Step 1




Step 2

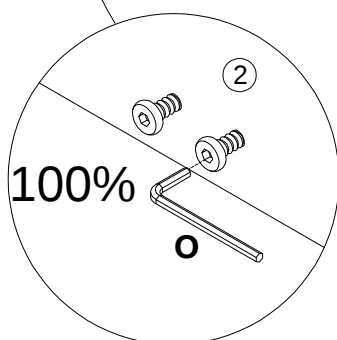


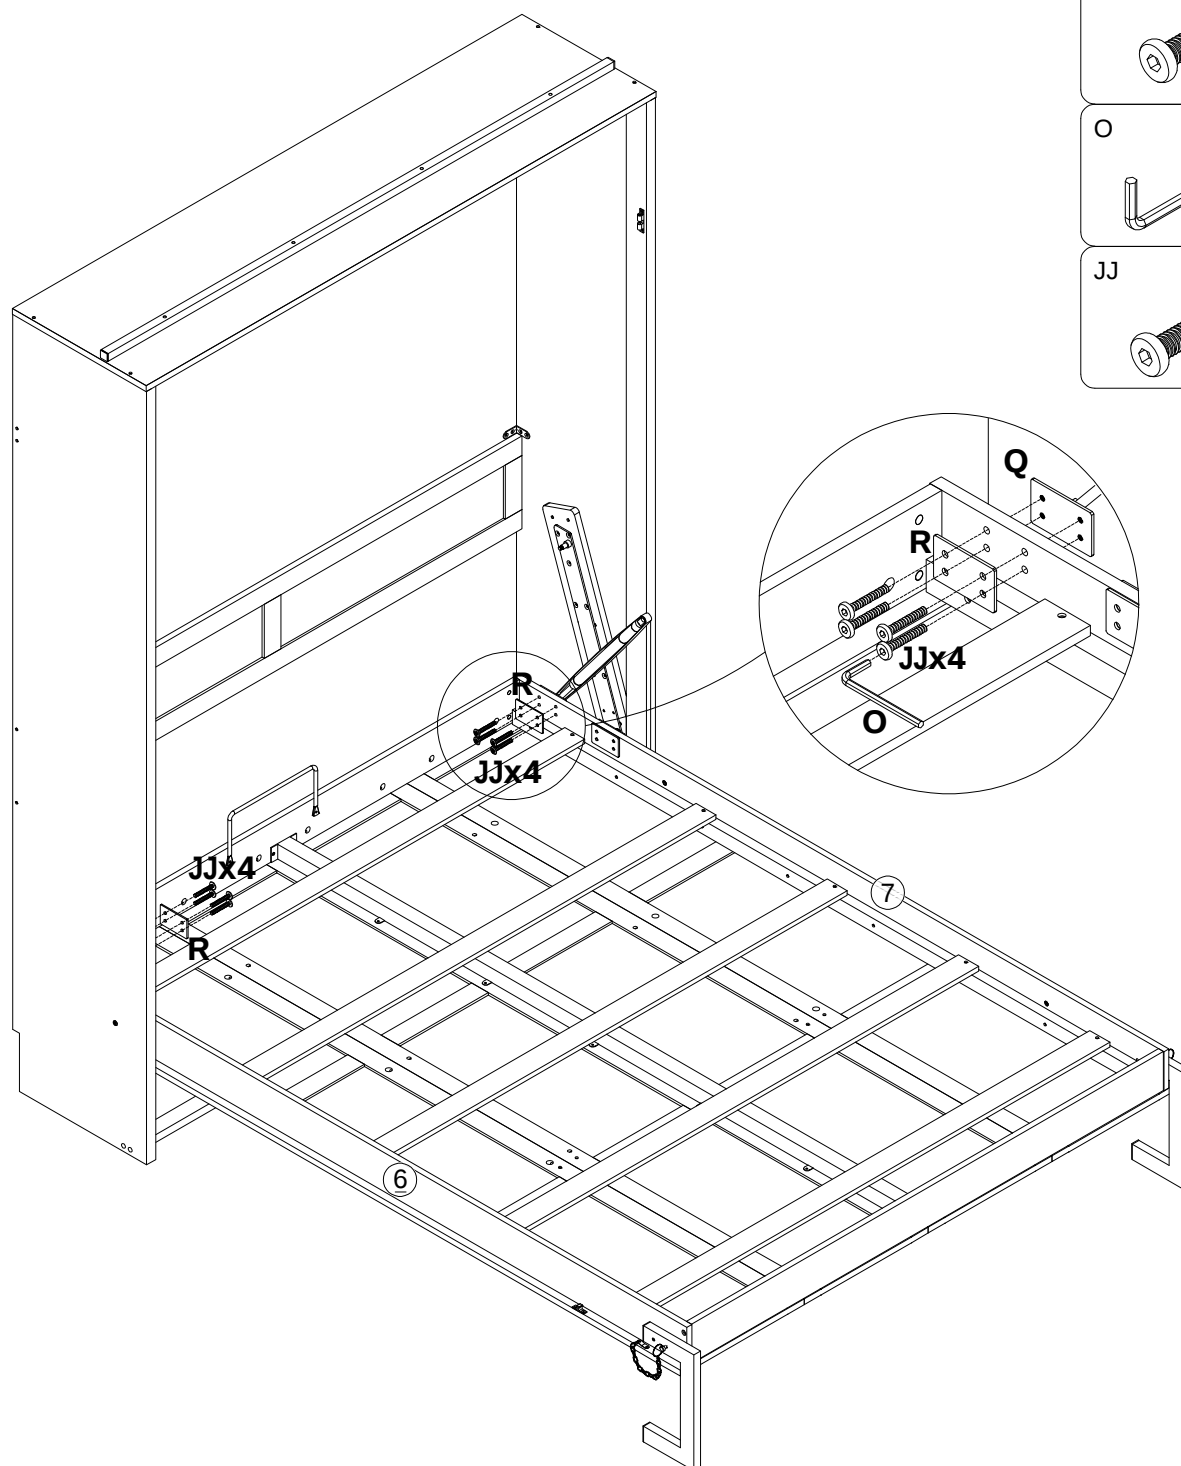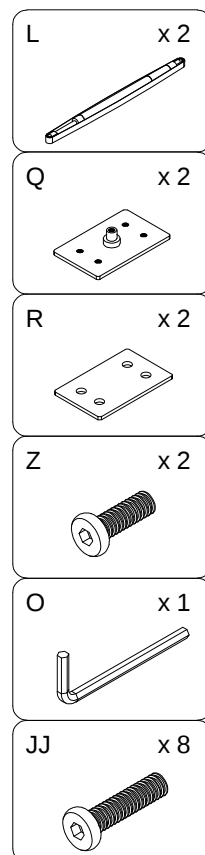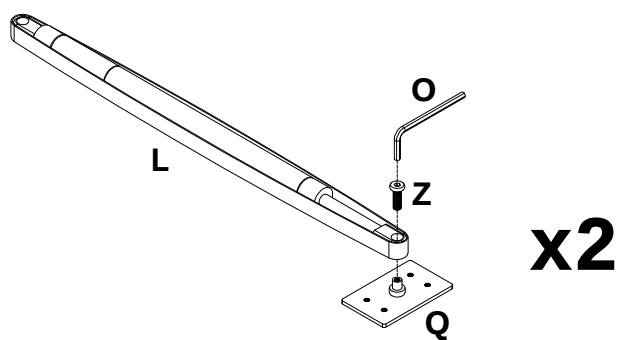

KK	x 2
	
NN	x 1
	

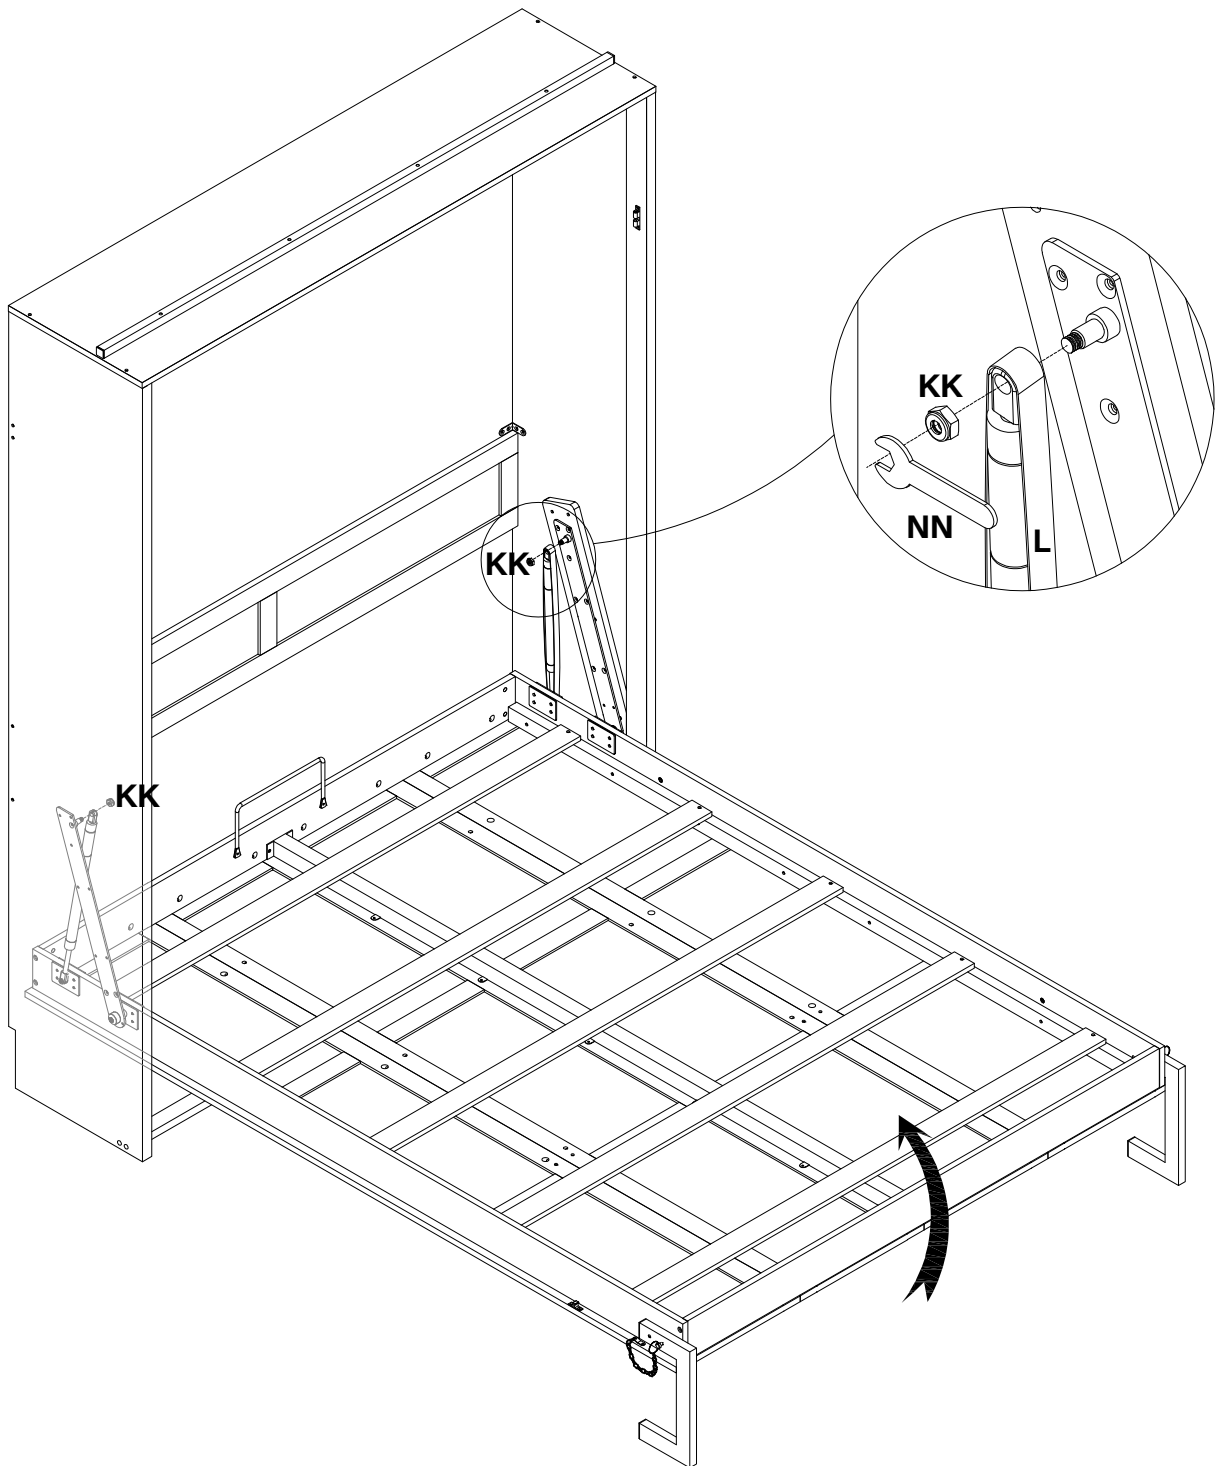

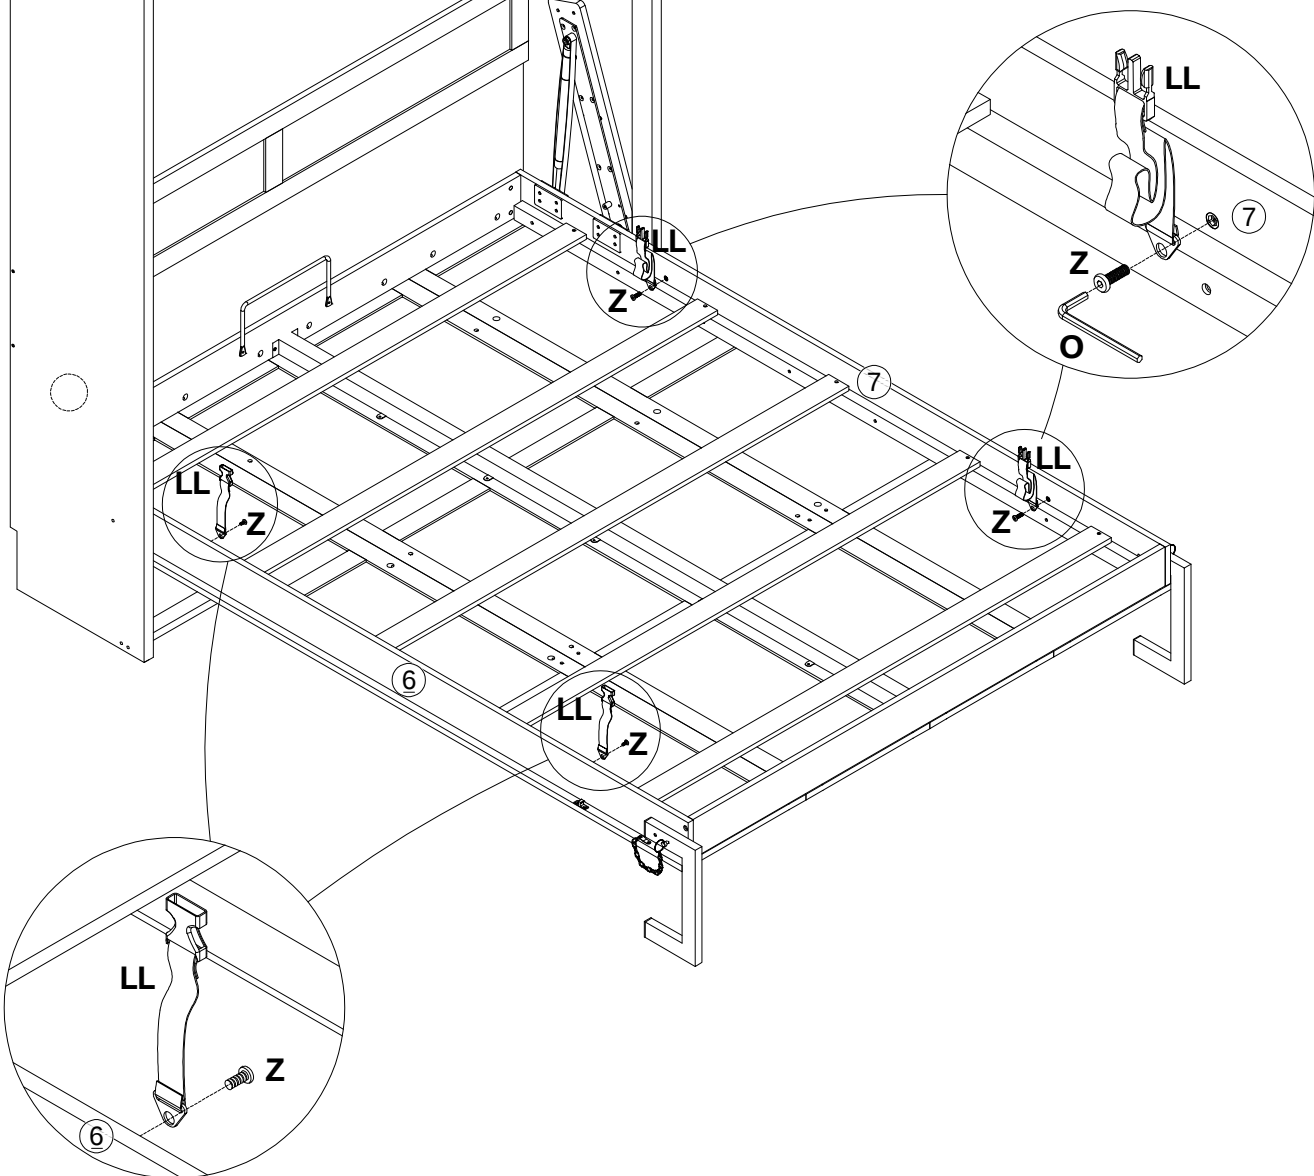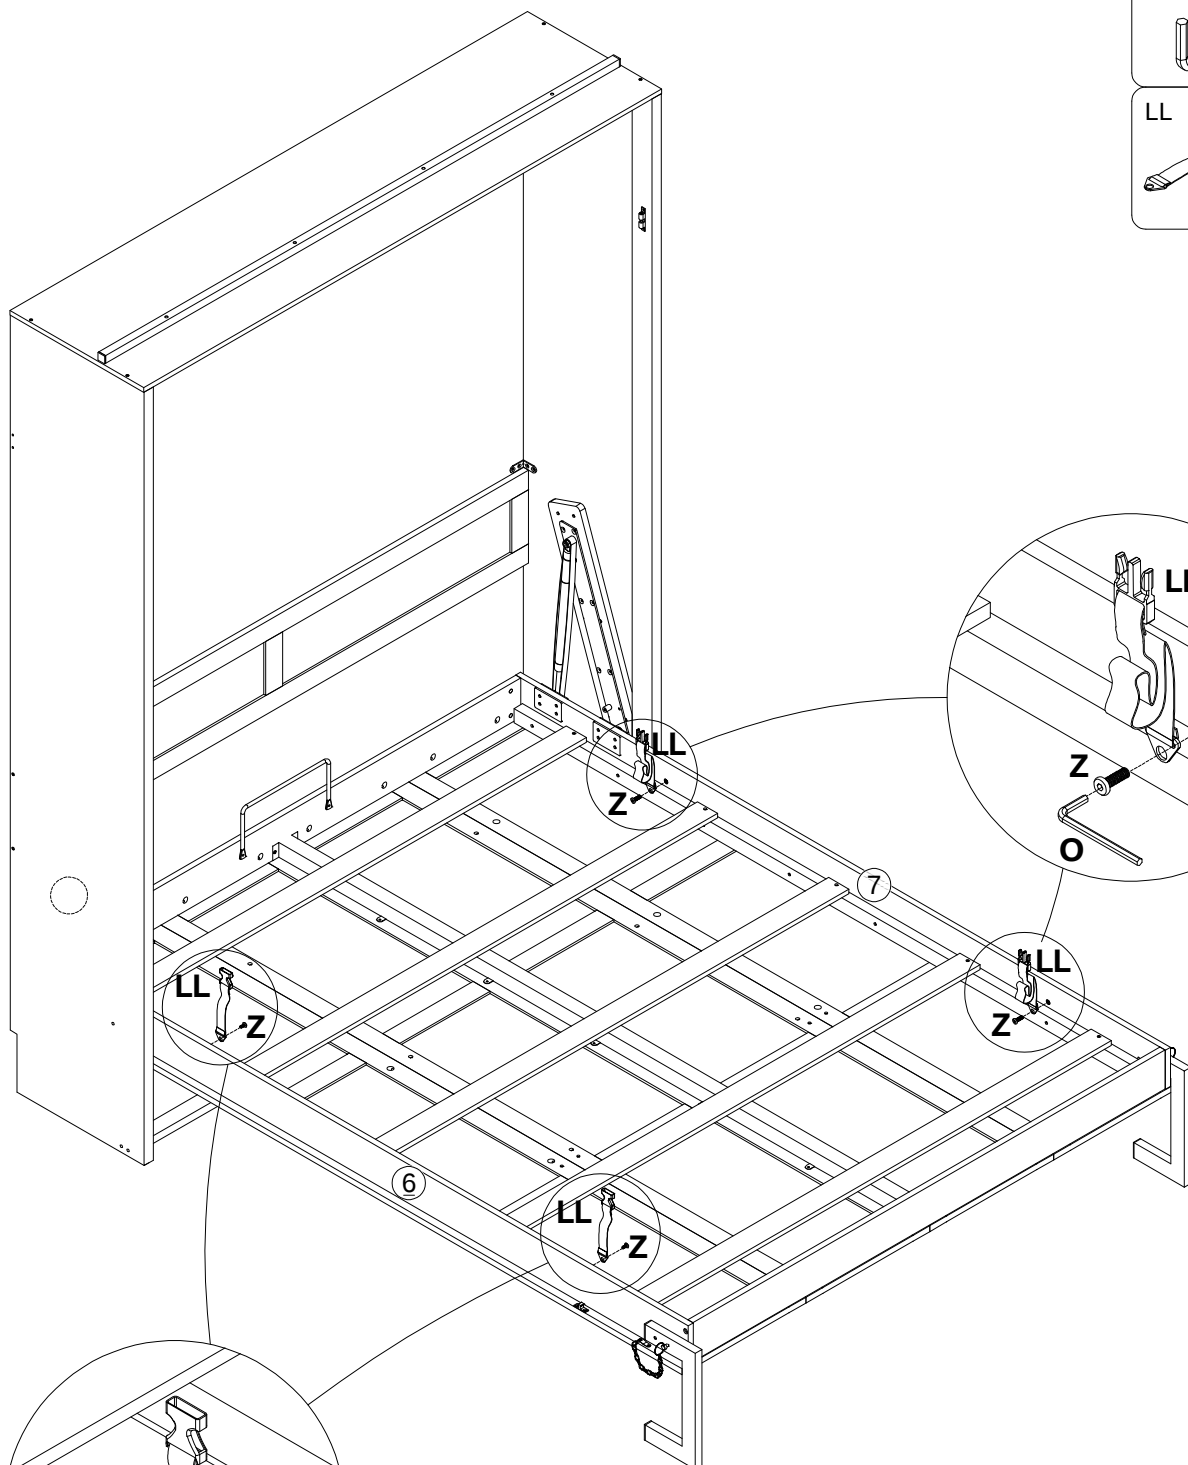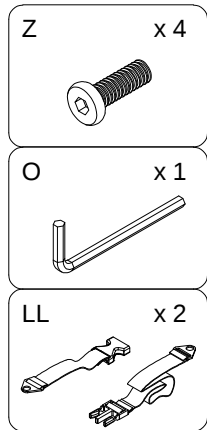

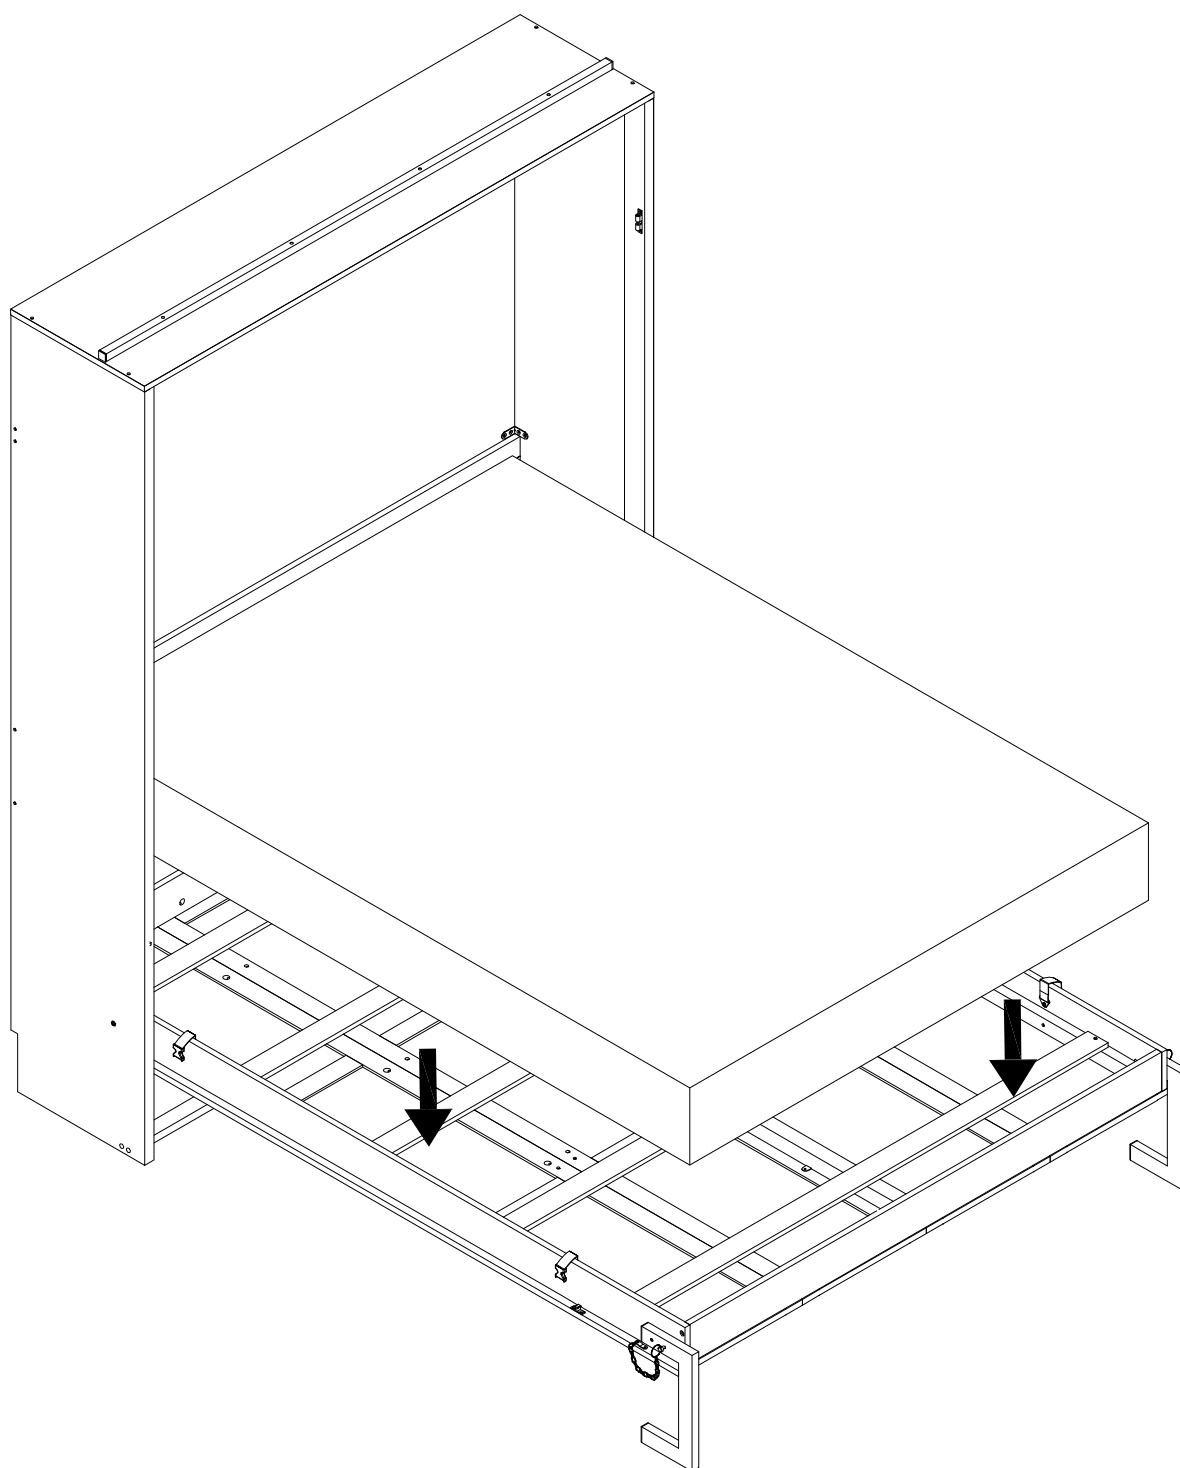

WARNING: Before cutting the zip tie on the gas spring 'L', please place the mattress on the bed frame and secure it with the strap 'LL'. Alternatively, press down the end of the bed with weights of at least 20 kg to prevent it from lifting up.

