





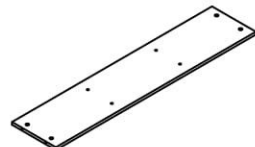
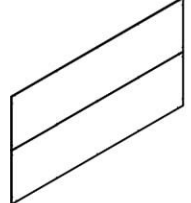
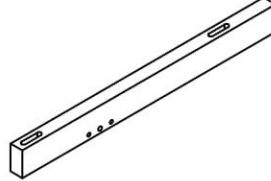
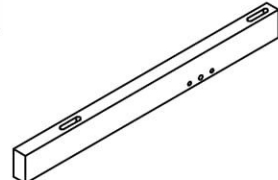
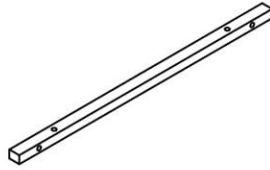
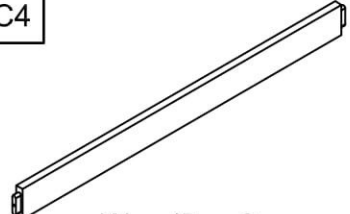
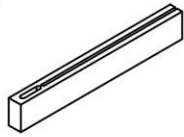
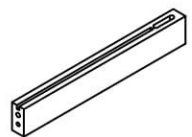




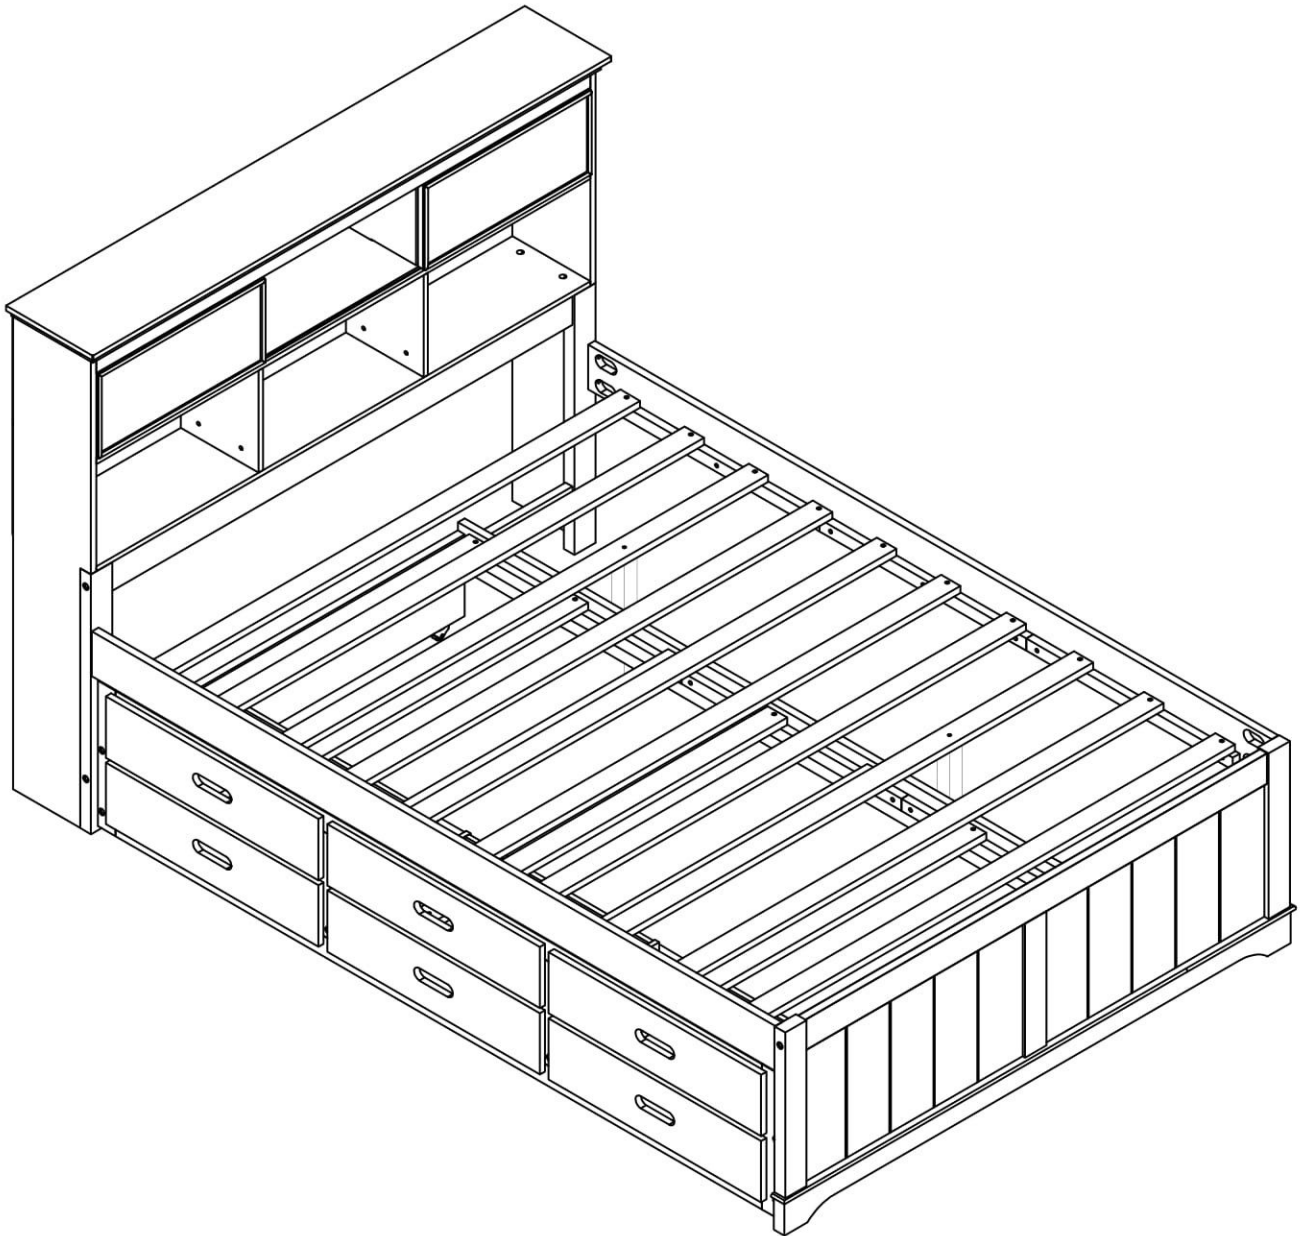
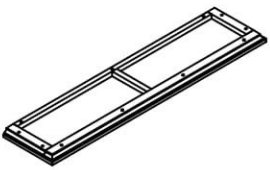




ASSEMBLY INSTRUCTION

















This set is included 2 boxes if don't receive full 2 boxes please contact our customer service team

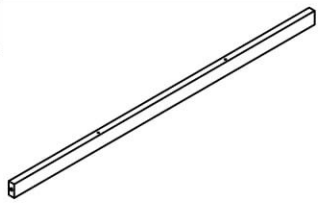

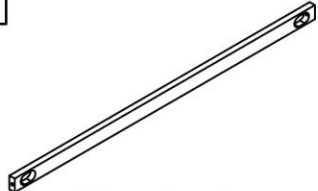

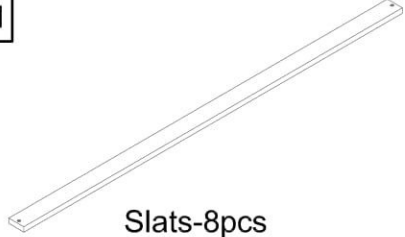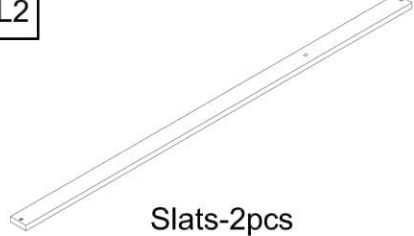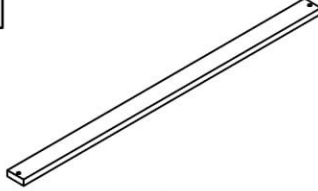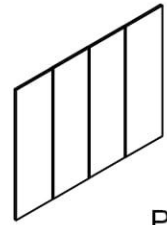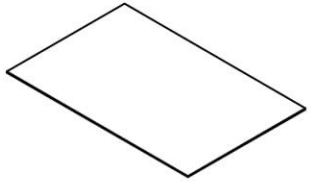
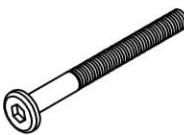
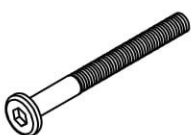



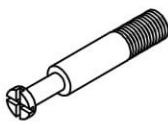


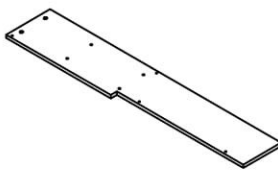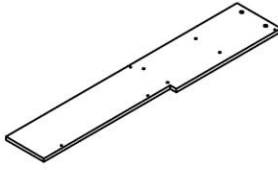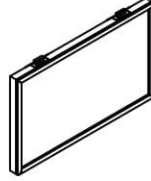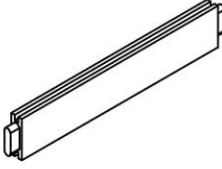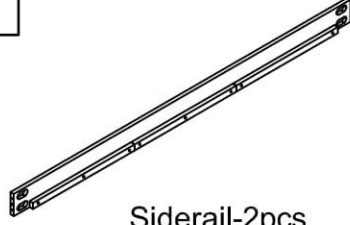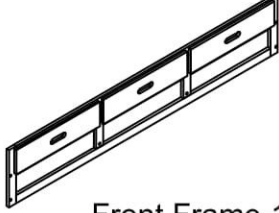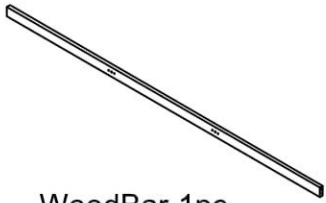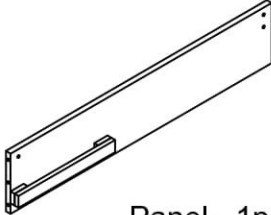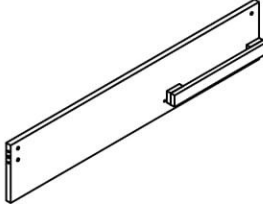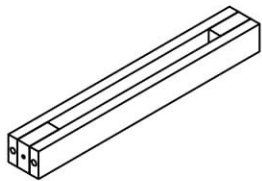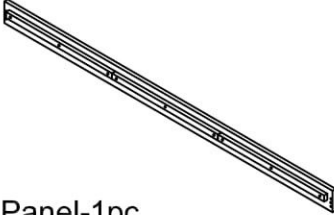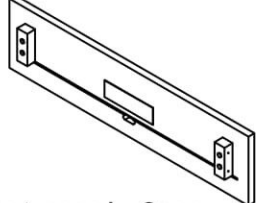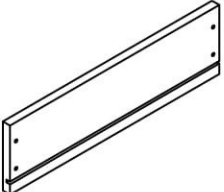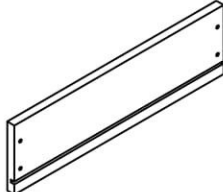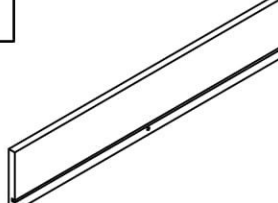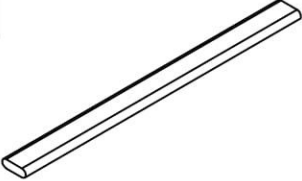



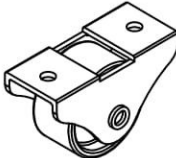
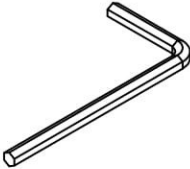
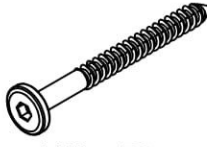


Part List (BOX 1)

<p>A</p>  <p>Top Panel-1pc</p>	<p>B3</p>  <p>Panel-2pcs</p>	<p>B5</p>  <p>Wood Bar -1pc</p>	
<p>B6</p>  <p>WoodBar-1pc</p>	<p>B7</p>  <p>Panel-1pc</p>	<p>B8</p>  <p>Panel-1pc</p>	
<p>B9</p>  <p>Panel-2pcs</p>	<p>C1</p>  <p>Leg - 1pc</p>	<p>C2</p>  <p>Leg-1pc</p>	
<p>C3</p>  <p>Connect Bar -2pcs</p>	<p>C4</p>  <p>WoodBar-2pcs</p>	<p>C5</p>  <p>Leg-1pc</p>	<p>C6</p>  <p>Leg-1pc</p>
<p>C8</p>  <p>WoodBar-1pc</p>	<p>C9</p>  <p>WoodBar-1pc</p>	<p>L1</p>  <p>Slats-8pcs</p>	
<p>L2</p>  <p>Slats-2pcs</p>	<p>L3</p>  <p>Slats-7pcs</p>	<p>E1</p>  <p>Panel - 2pcs</p>	
<p>F5</p>  <p>Drawer bottom panel -3pcs</p>	<p>G</p>  <p>Wood Bar - 2pcs</p>		


Part List & Hardware List (BOX 2)

<p>B1</p>  <p>Panel-1pc</p>	<p>B2</p>  <p>Panel-1pc</p>	<p>B4</p>  <p>Sliding Door - 2pcs</p>
<p>C7</p>  <p>Leg-1pc</p>	<p>D</p>  <p>Siderail-2pcs</p>	<p>E2</p>  <p>Front Frame-1pc</p>
<p>E3</p>  <p>WoodBar-1pc</p>	<p>E4</p>  <p>Panel - 1pc</p>	<p>E5</p>  <p>Panel-1pc</p>
<p>E6</p>  <p>WoodBar-2pcs</p>	<p>E7</p>  <p>Panel-1pc</p>	<p>F1</p>  <p>Drawer front panel - 3pcs</p>
<p>F2</p>  <p>Drawer side panel - 3pcs</p>	<p>F3</p>  <p>Drawer side panel - 3pcs</p>	<p>F4</p>  <p>Drawer back panel - 3pcs</p>
<p>F6</p>  <p>Drawer support bar -3pcs</p>		


Hardware List (BOX 2)

<p>1</p>  <p>1/4" x 70 Screws = 6pcs</p>	<p>2</p>  <p>Ø1/4" x 30 Hex-Head Bolts = 14pcs</p>	<p>3</p>  <p>Ø1/4" x 40 Hex-Head Bolts = 12pcs</p>
<p>4</p>  <p>Ø1/4" x 60 Hex-Head Bolts = 12pcs</p>	<p>5</p>  <p>Ø1/4" x 70 Hex-Head Bolts = 2pcs</p>	<p>6</p>  <p>Ø8x30mm Wood Dowel = 12pcs</p>
<p>7</p>  <p>Ø10x40mm Wood Dowel = 8pcs</p>	<p>8</p>  <p>Half Moon = 8pcs</p>	<p>9</p>  <p>Campbolt = 12pcs</p>
<p>10</p>  <p>Camplock = 12pcs</p>	<p>11</p>  <p>Ø1/4" x 13 mm Horizontal-Hole bolts 12pcs</p>	<p>12</p>  <p>M4x15mm Wood Screws = 23pcs</p>
<p>13</p>  <p>M4x30mm Wood Screws = 61pcs</p>	<p>14</p>  <p>M4x50mm Wood Screws = 3pcs</p>	<p>15</p>  <p>M3x15mm Wood Screws = 8pcs</p>
<p>16</p>  <p>Wheels = 4pcs</p>	<p>17</p>  <p>Allen key = 1pc</p>	<p>18</p>  <p>1/4" x 50 Screws = 2pcs</p>
<p>19</p>  <p>Ø13 / Ø6 x 1 mm Washer 4pcs</p>	 <p>Assembly Tools Required (Not Included)</p>	


STEP 1: Following below illustration.

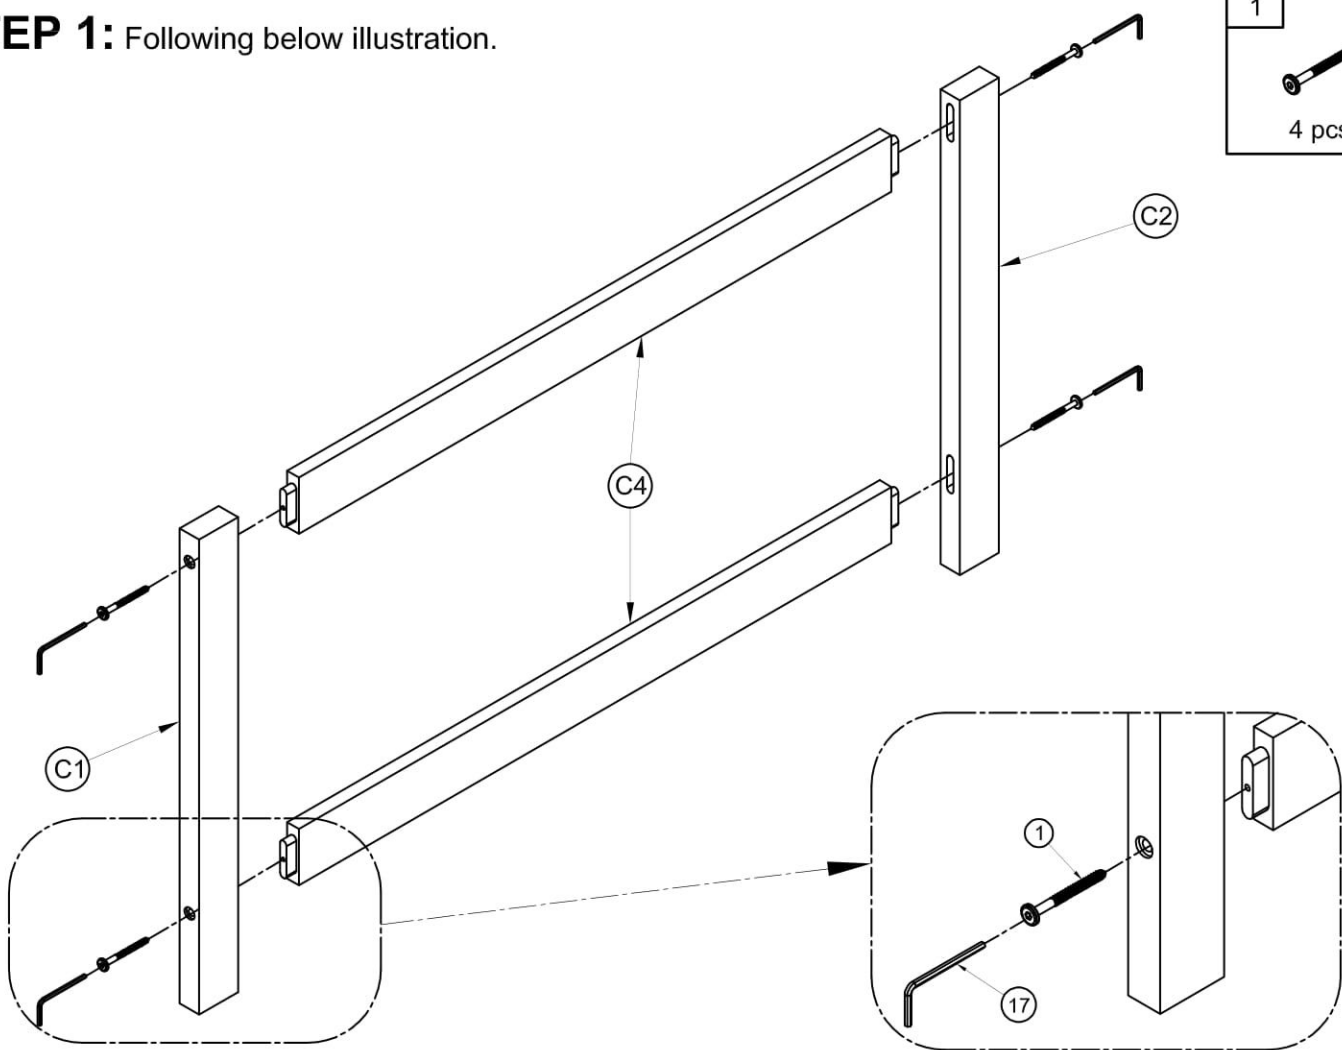


STEP 2: Following below illustration.

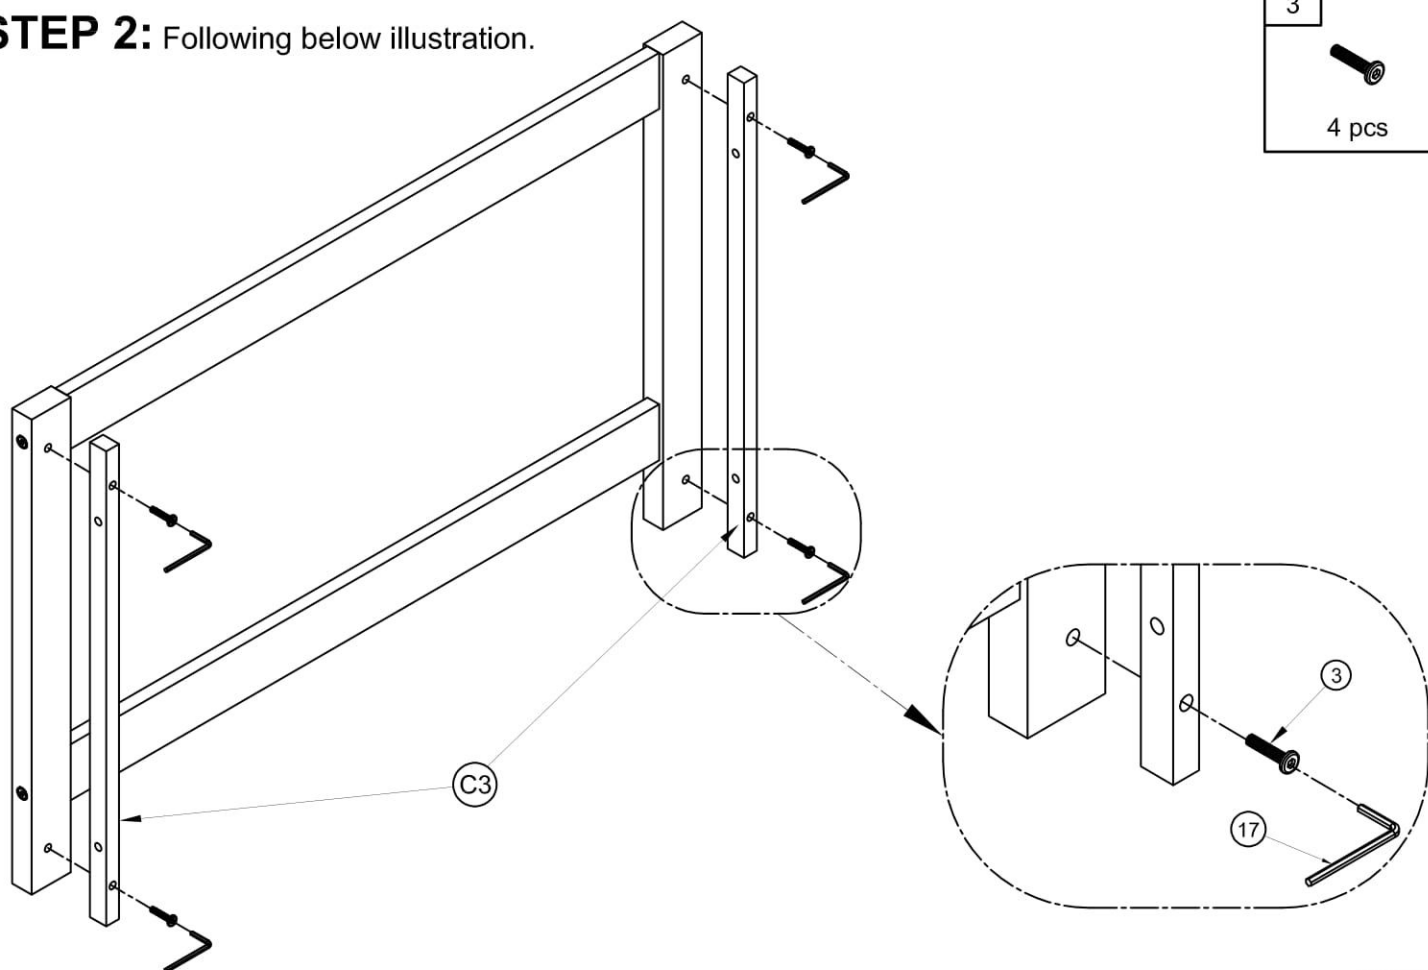

STEP 3: Following below illustration.

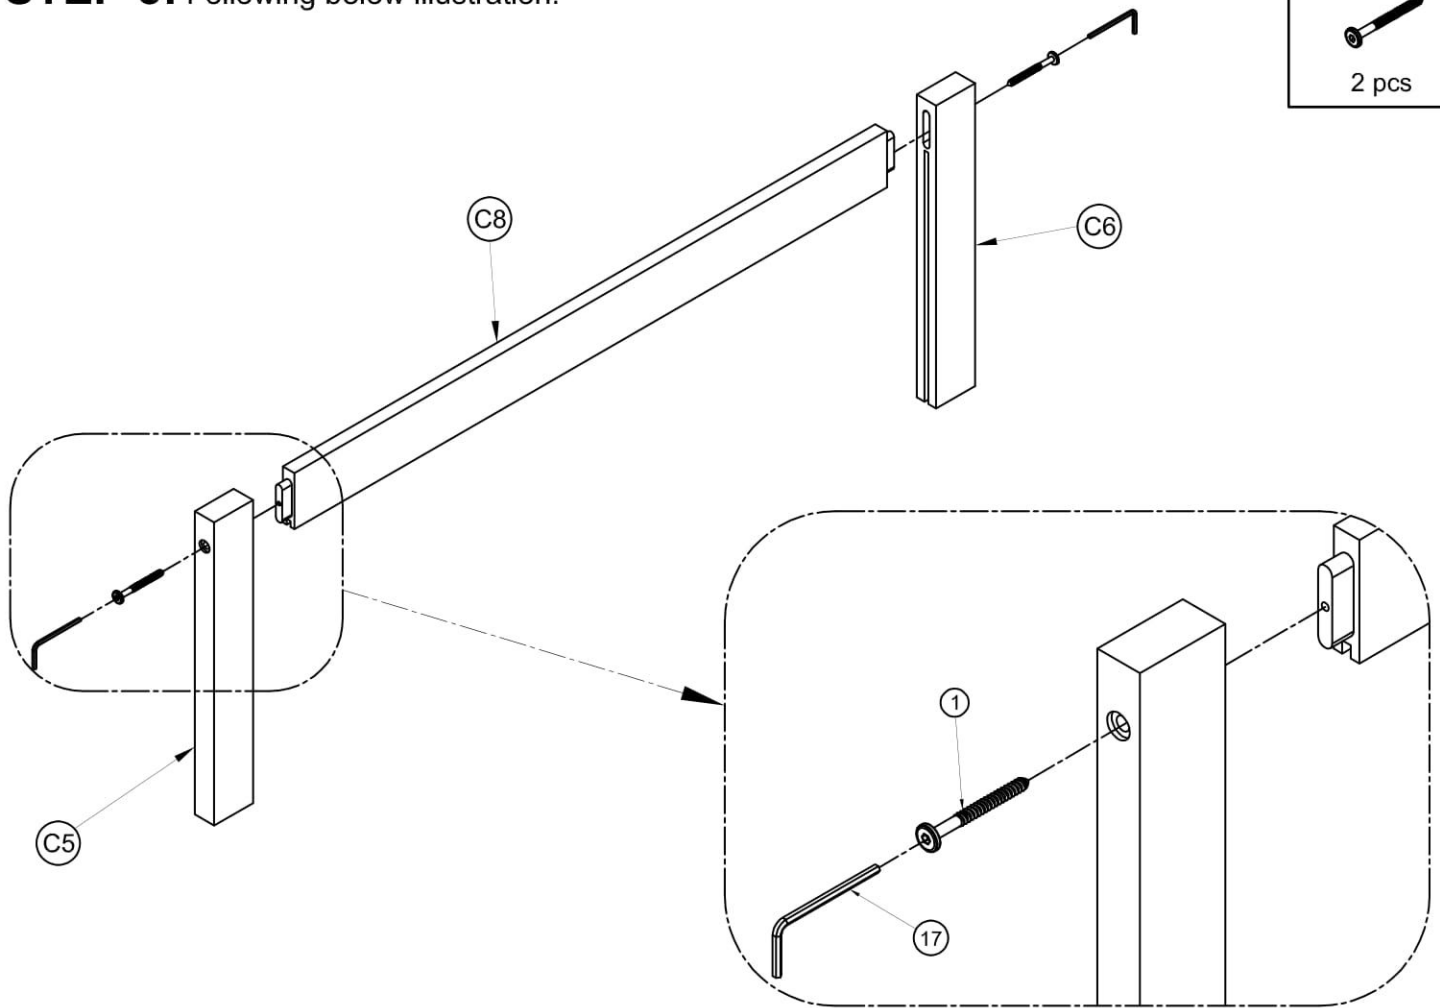

STEP 4: Following below illustration.

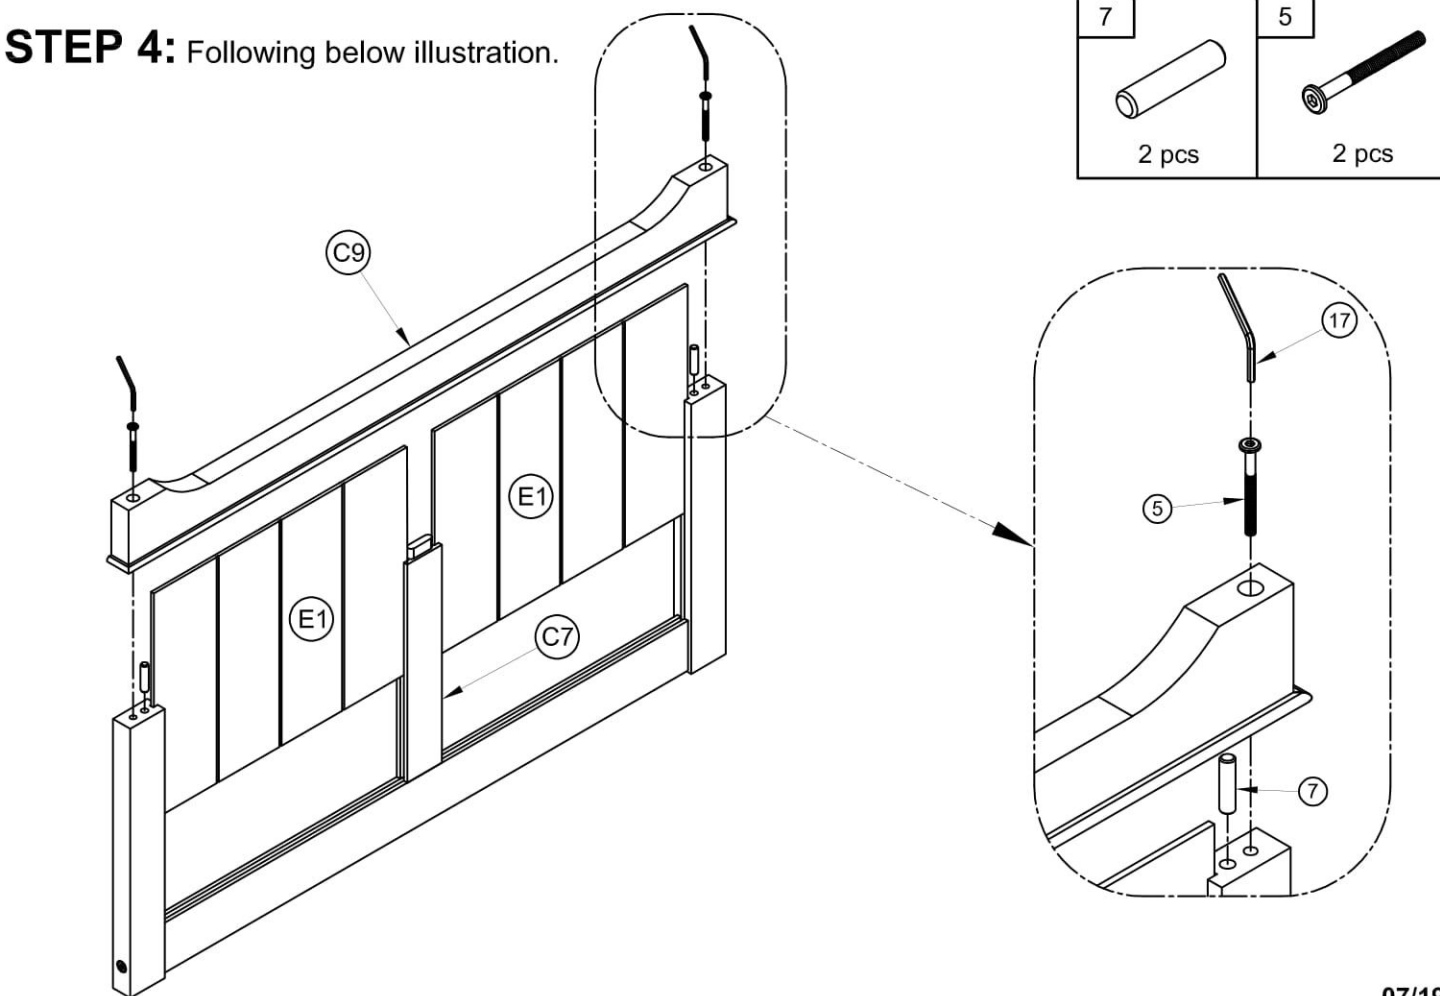

STEP 5: Following below illustration.

8



8 pcs

7





4 pcs





3






8 pcs

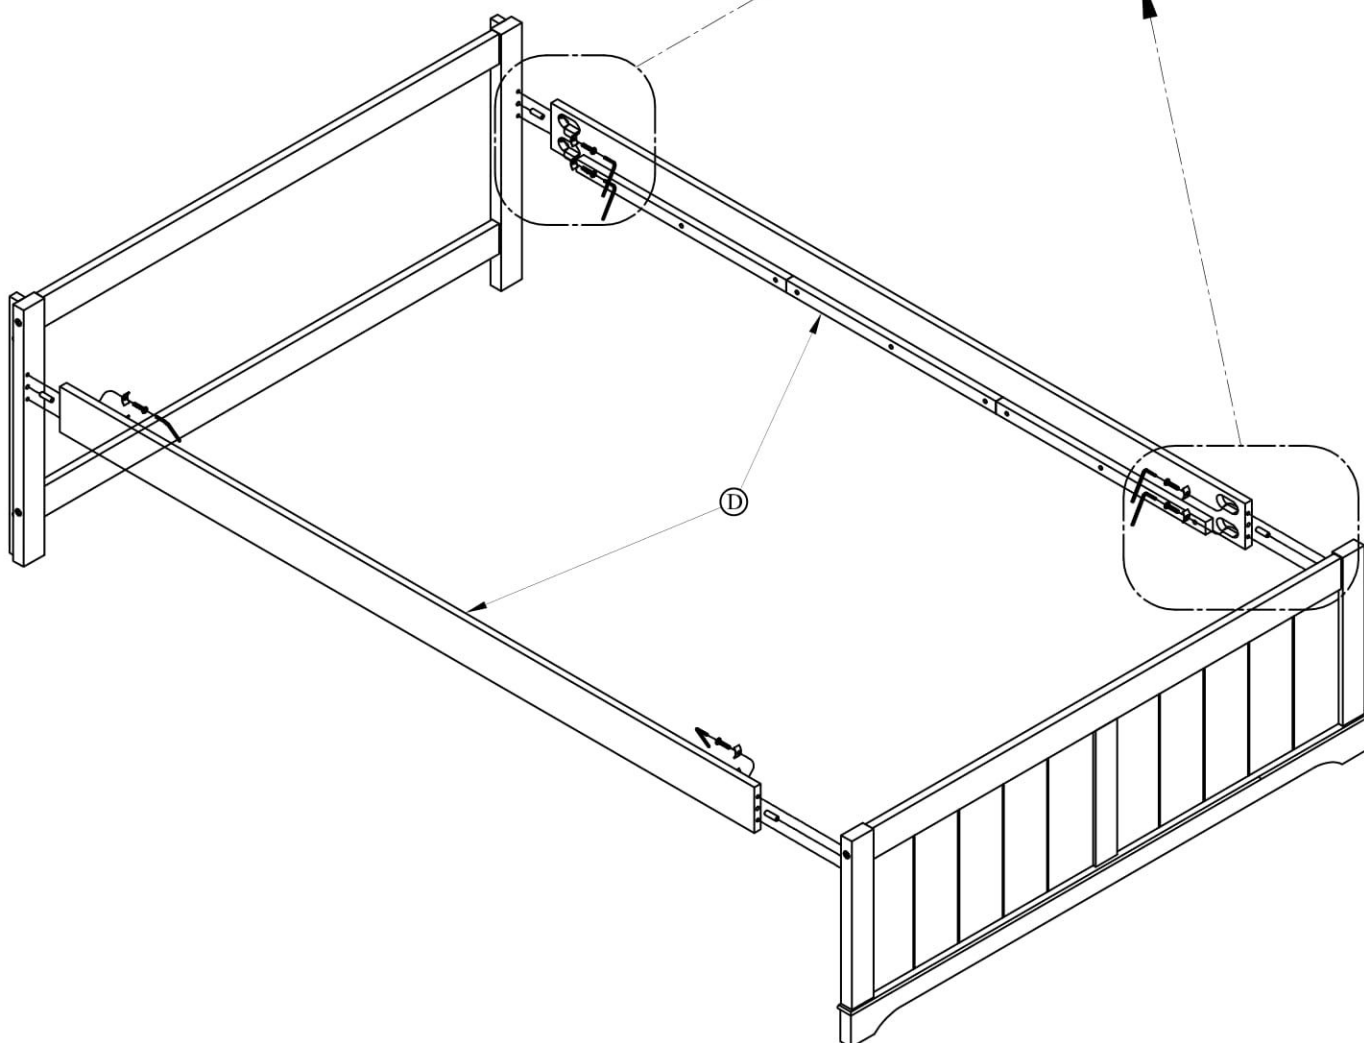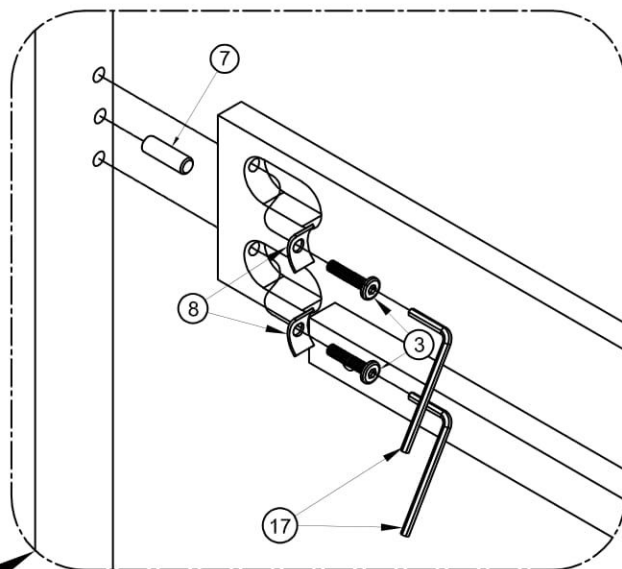


STEP 6: Following below illustration.

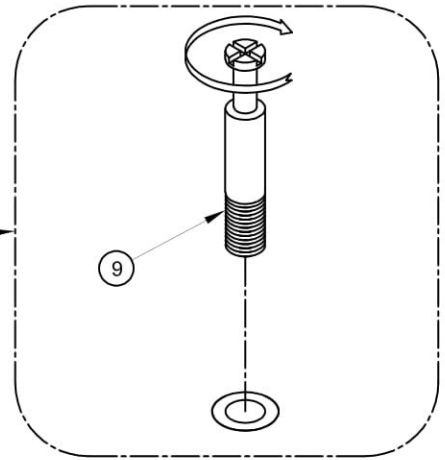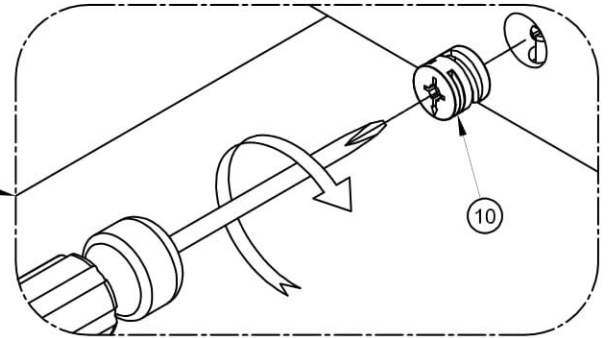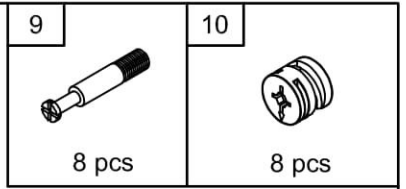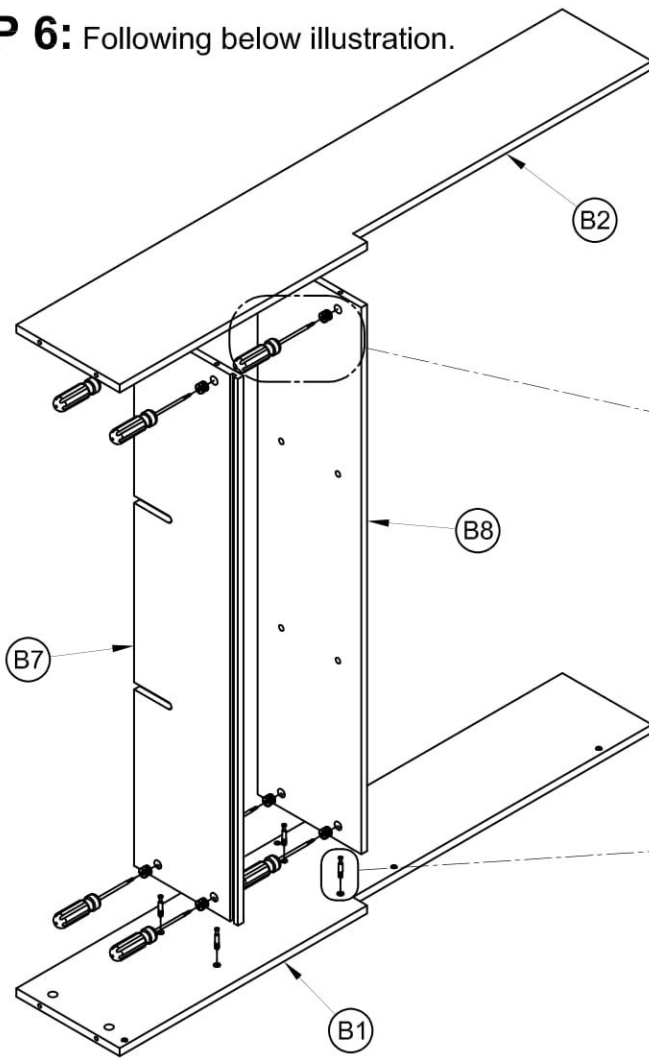




STEP 7: Following below illustration.

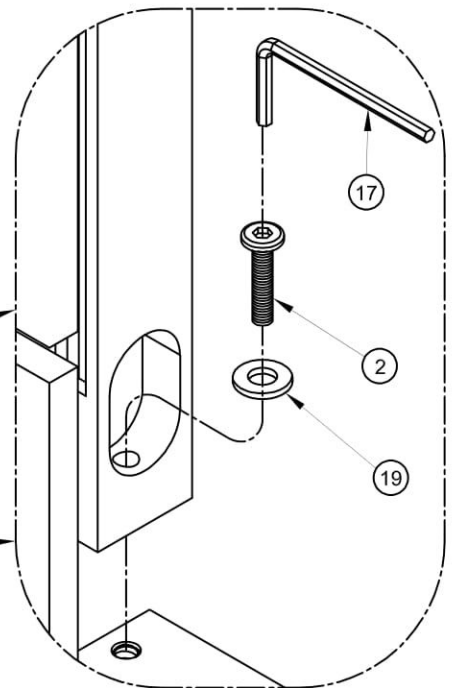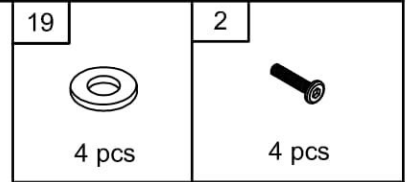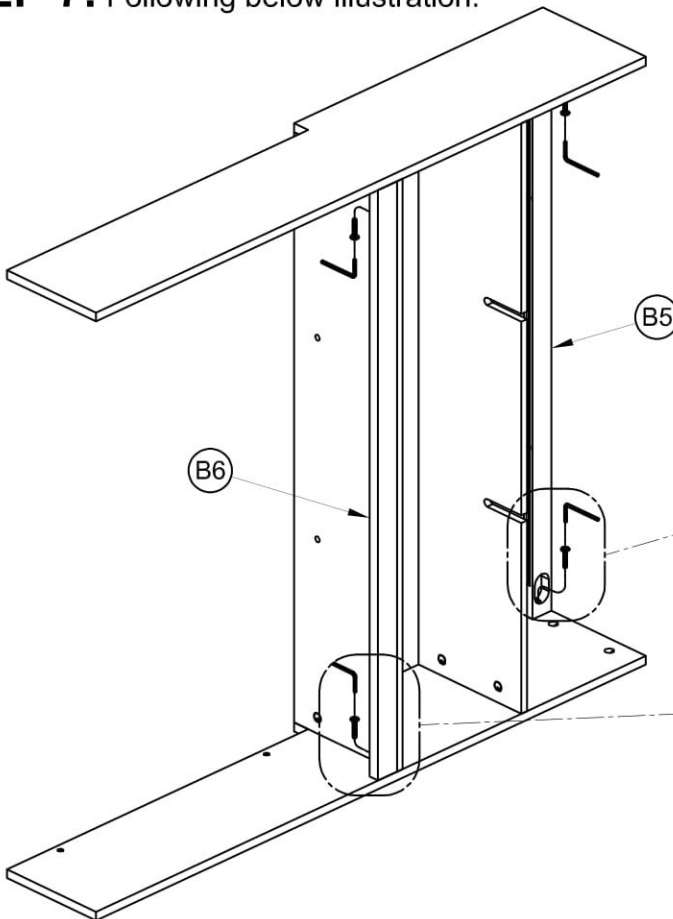


STEP 8: Following below illustration.

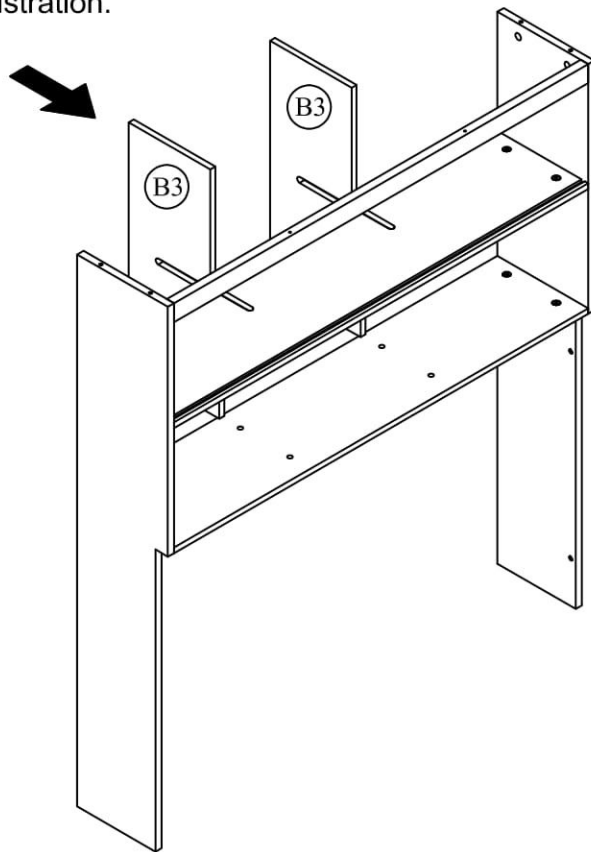


STEP 9: Following below illustration.

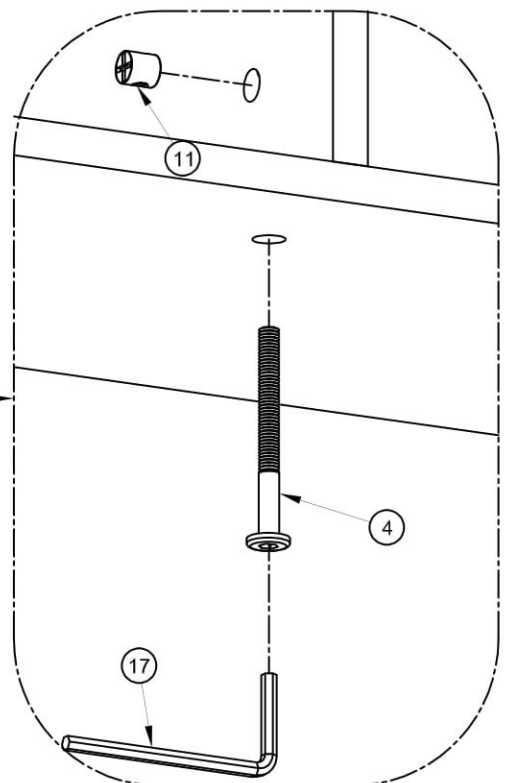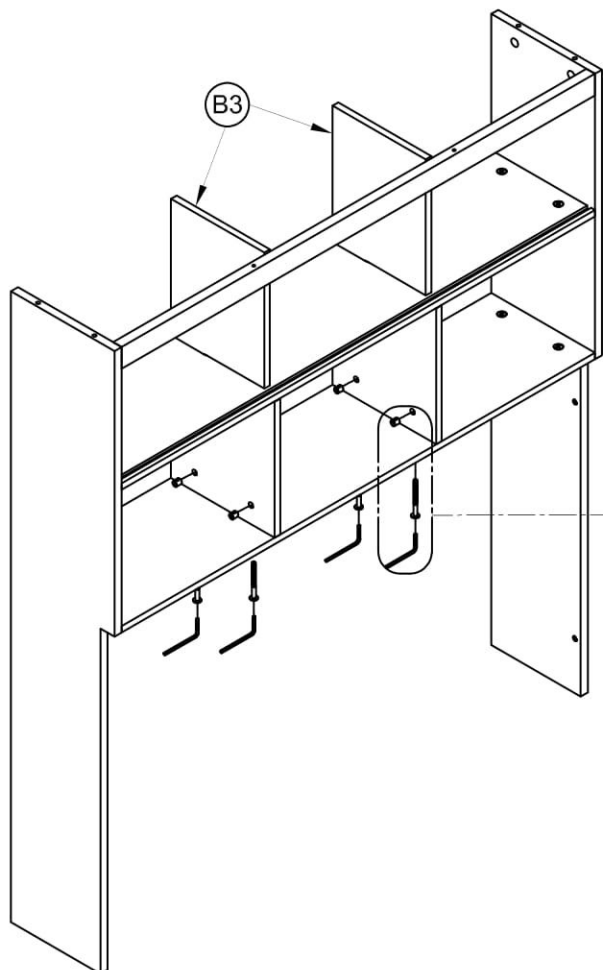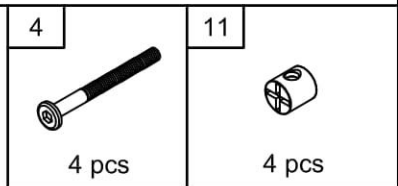


STEP 10: Following below illustration.

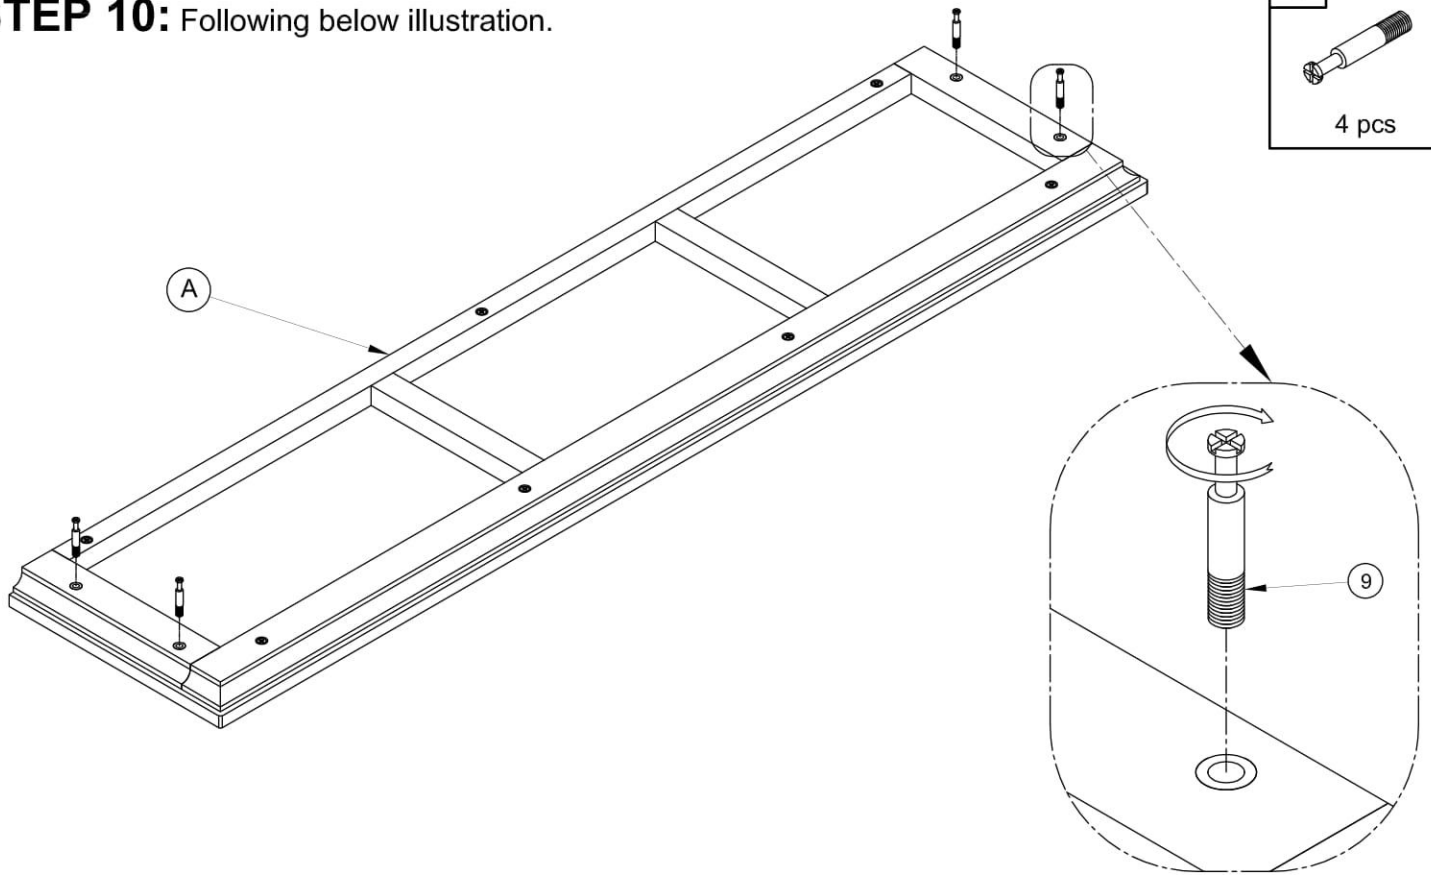


STEP 11: Following below illustration.

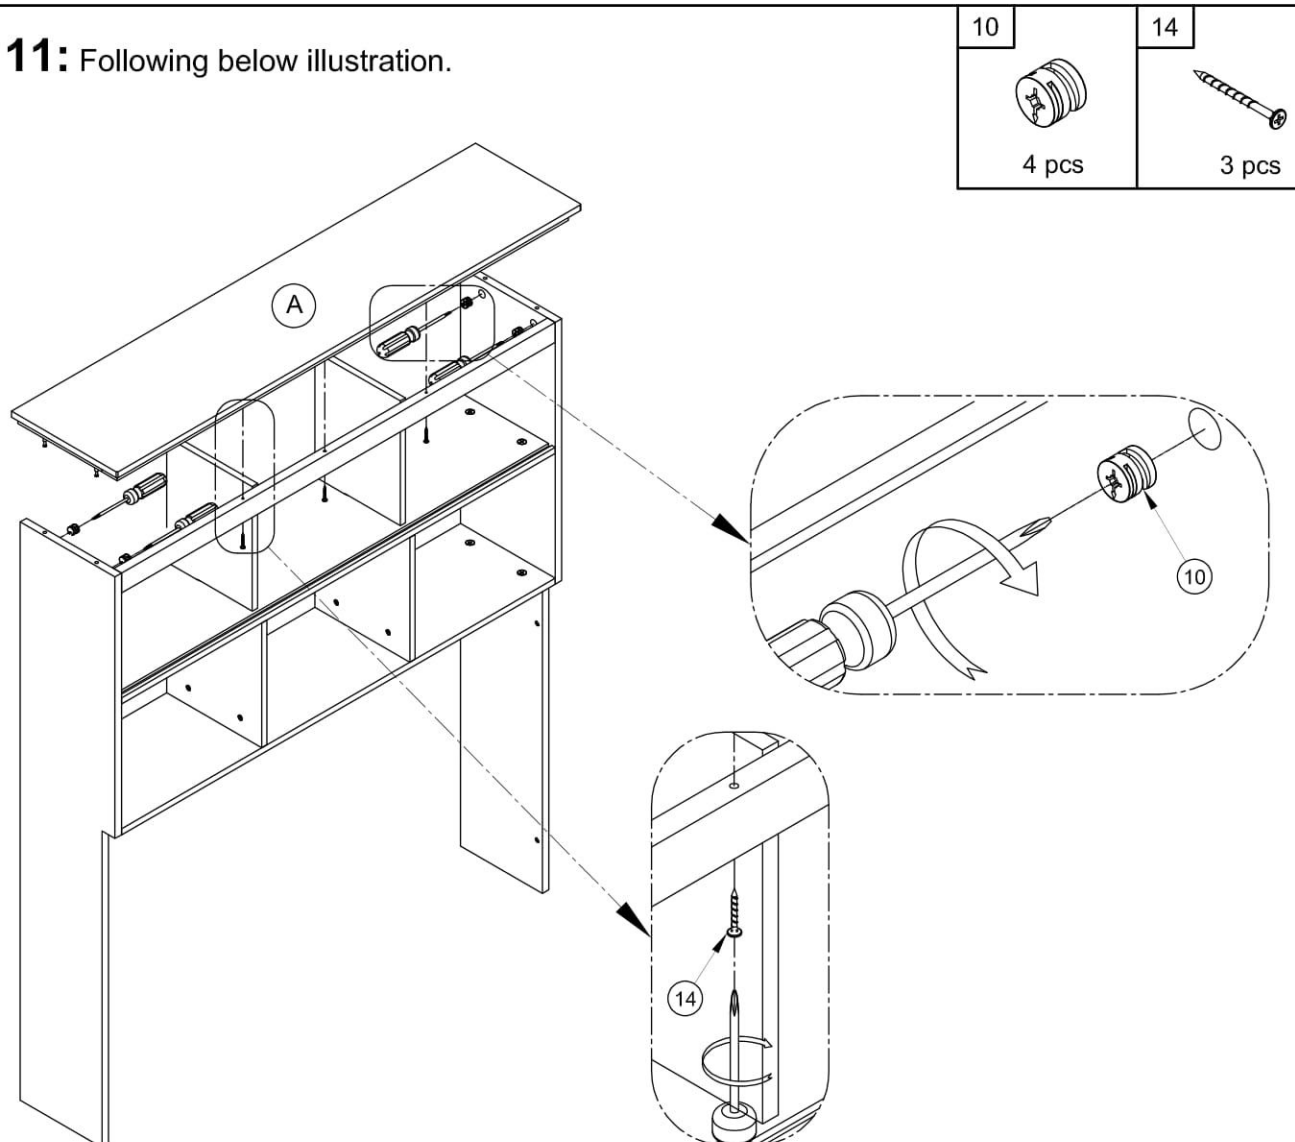


STEP 12: Following below illustration.

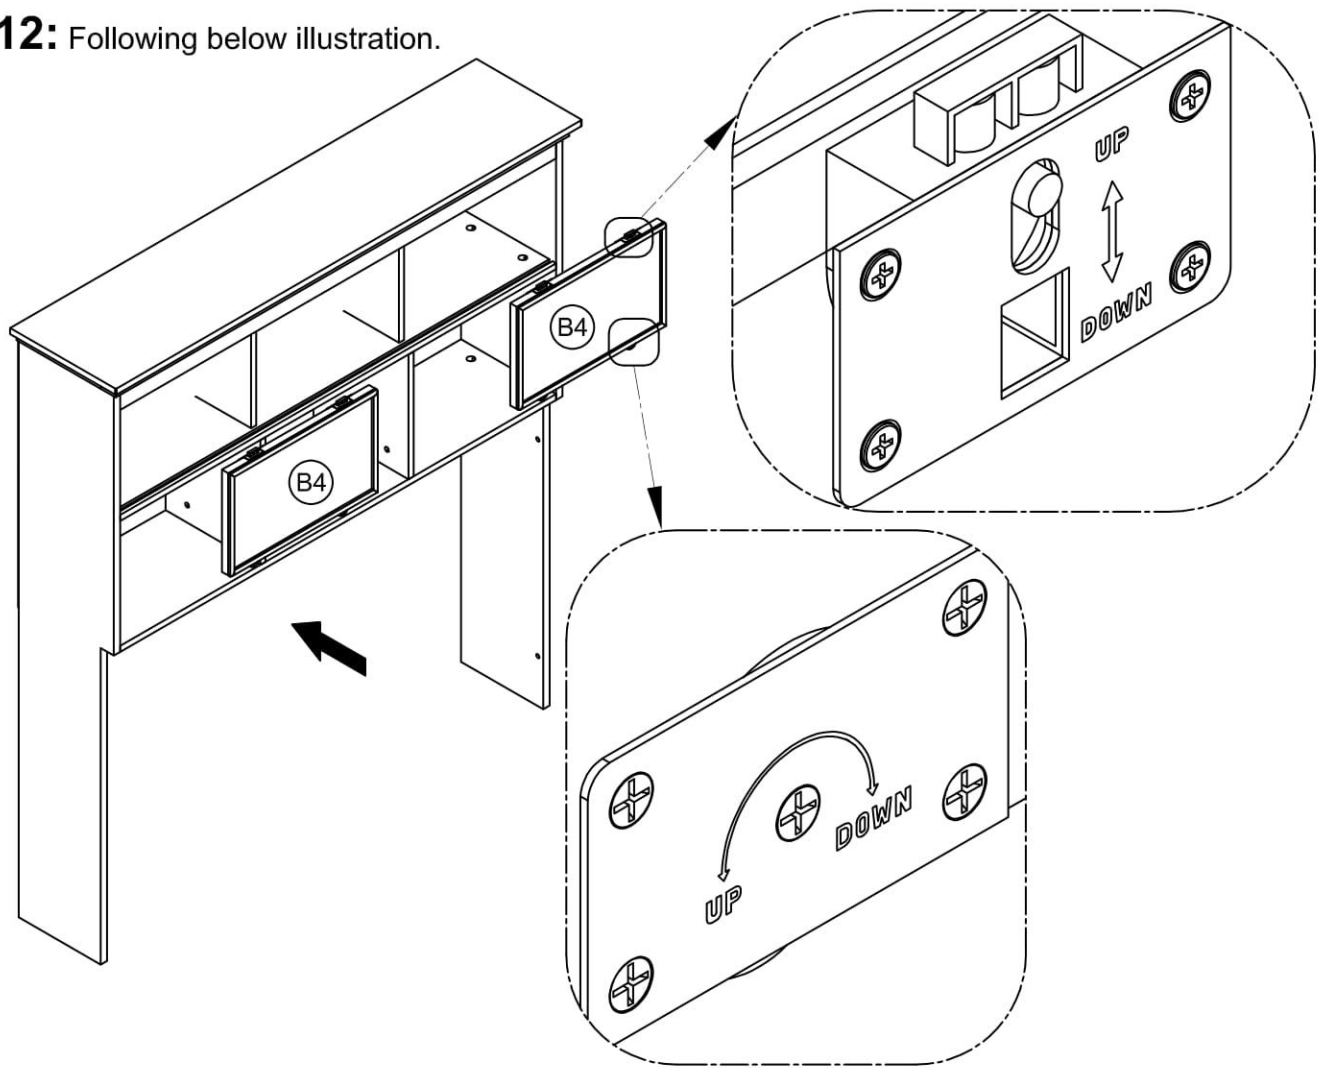

STEP 13: Following below illustration.

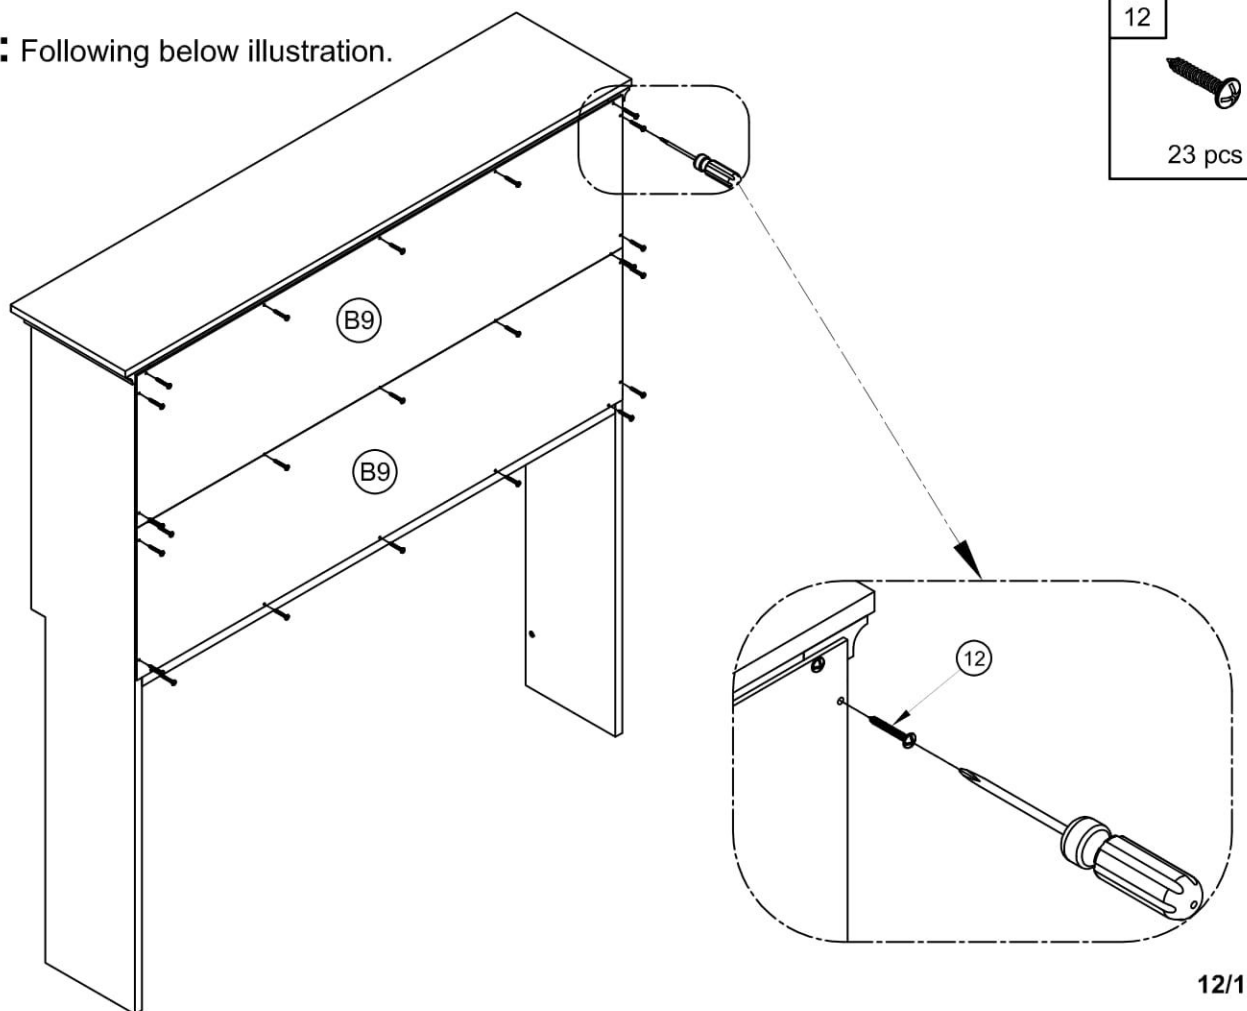


STEP 14: Following below illustration.

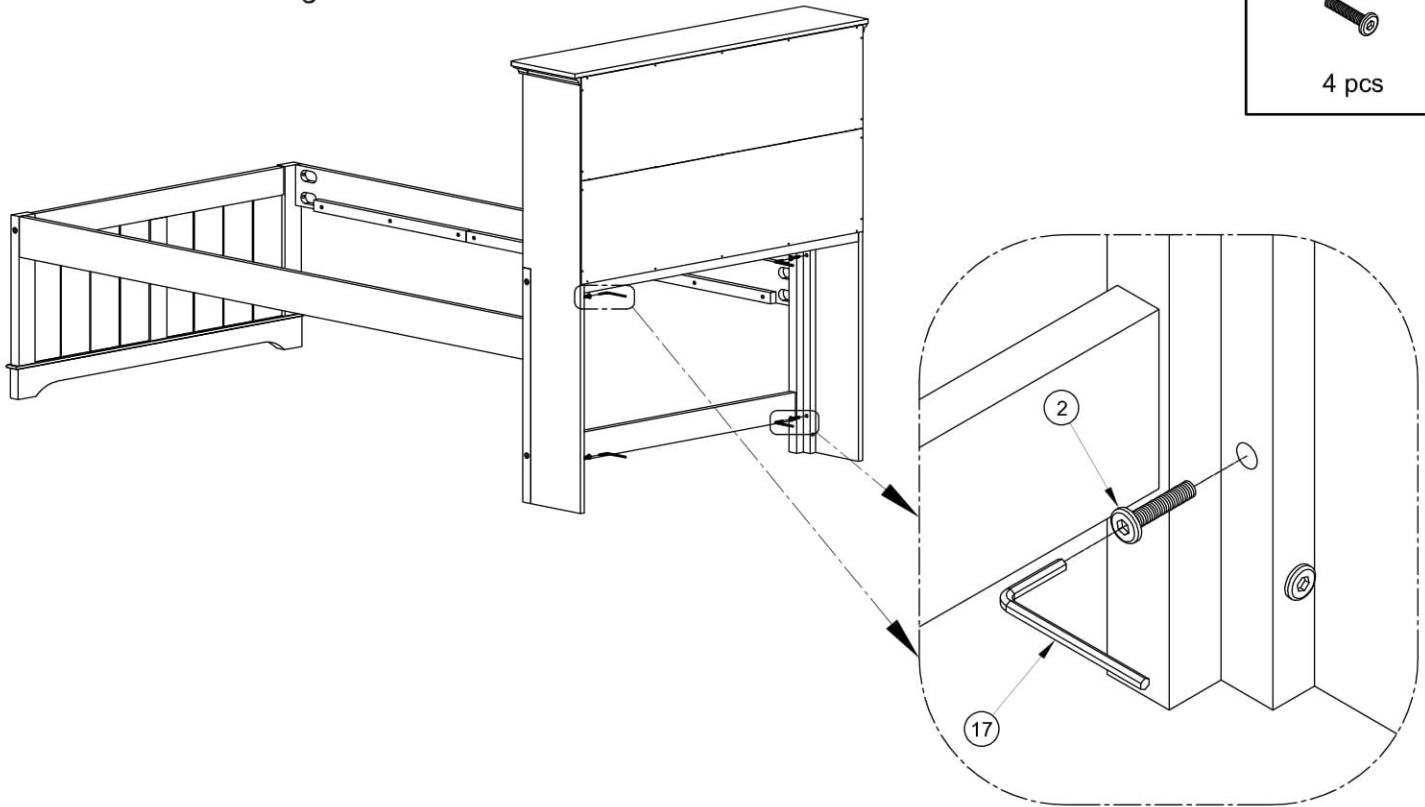

2
4 pcs


STEP 15: Following below illustration.

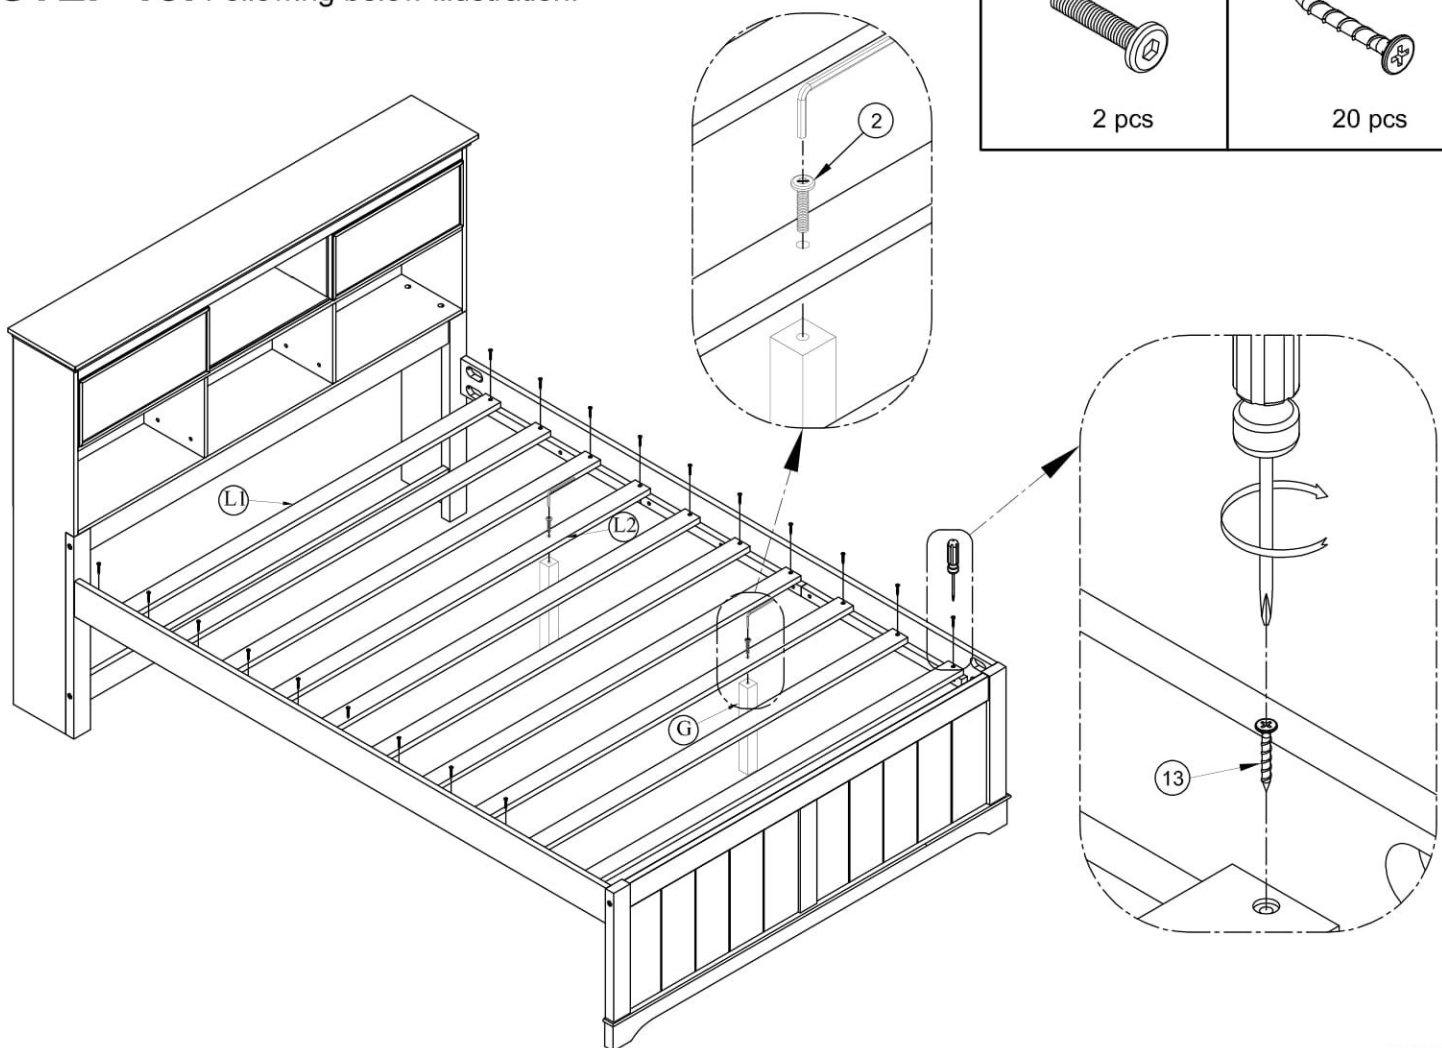


2
2 pcs

13
20 pcs


STEP 16: Following below illustration.

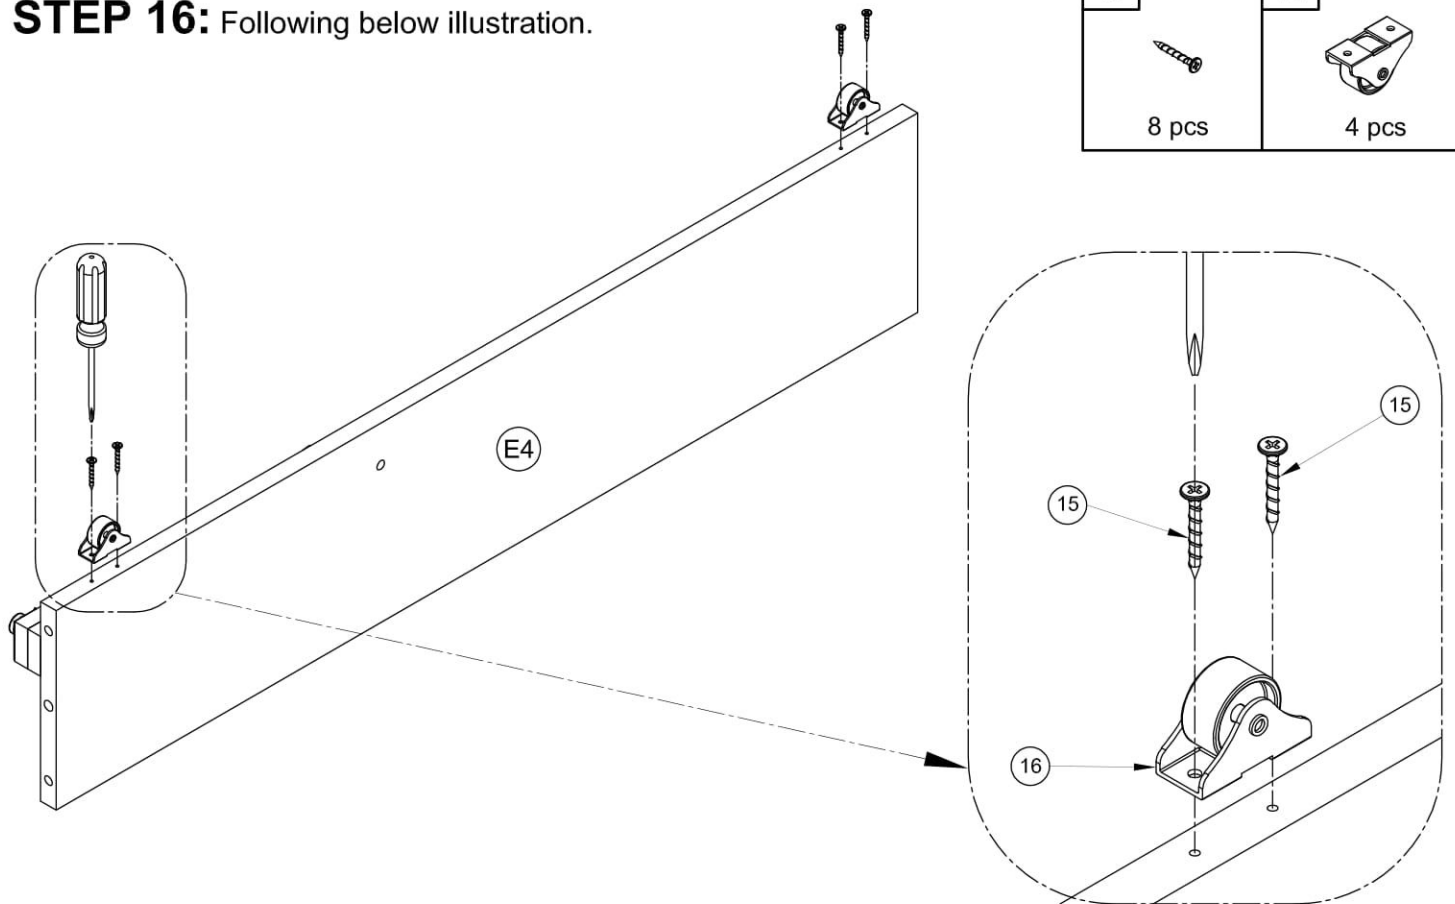


STEP 17: Following below illustration.

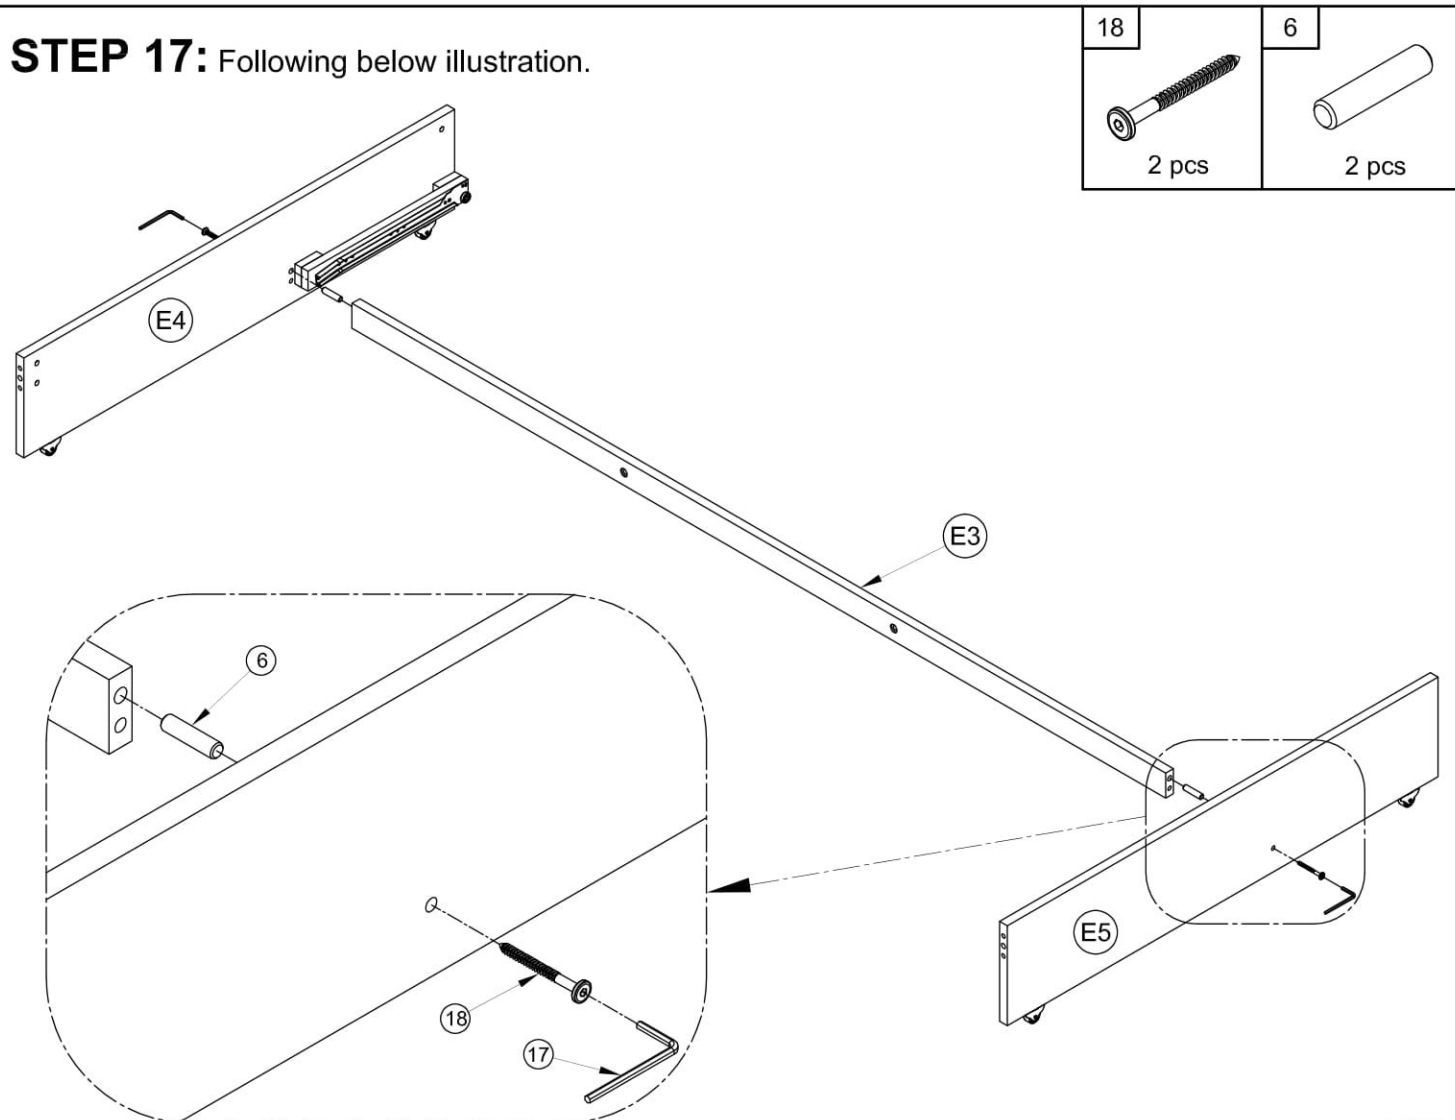



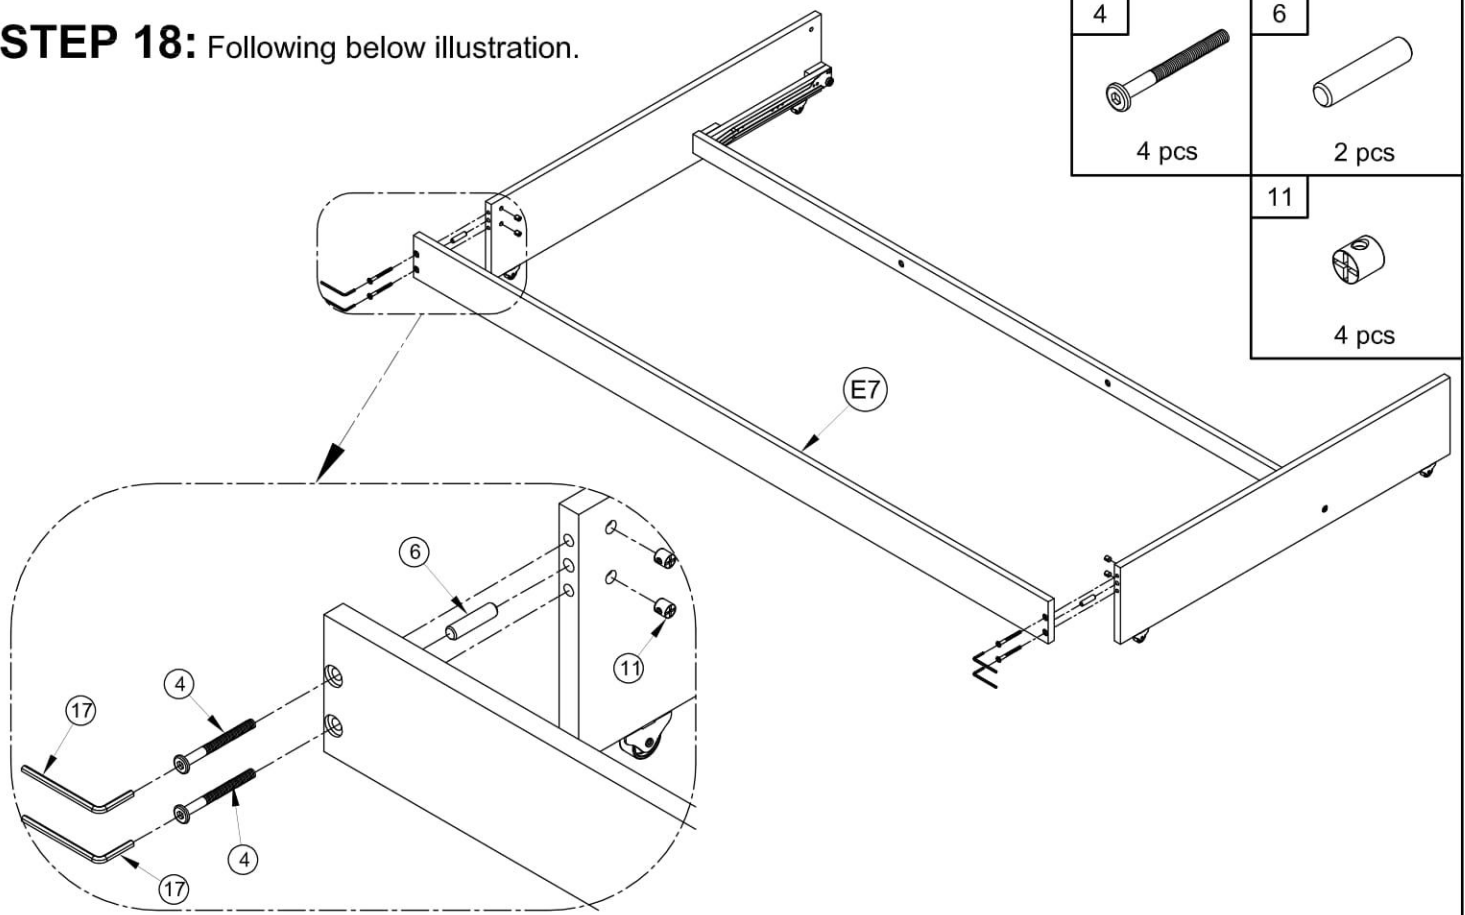


STEP 18: Following below illustration.


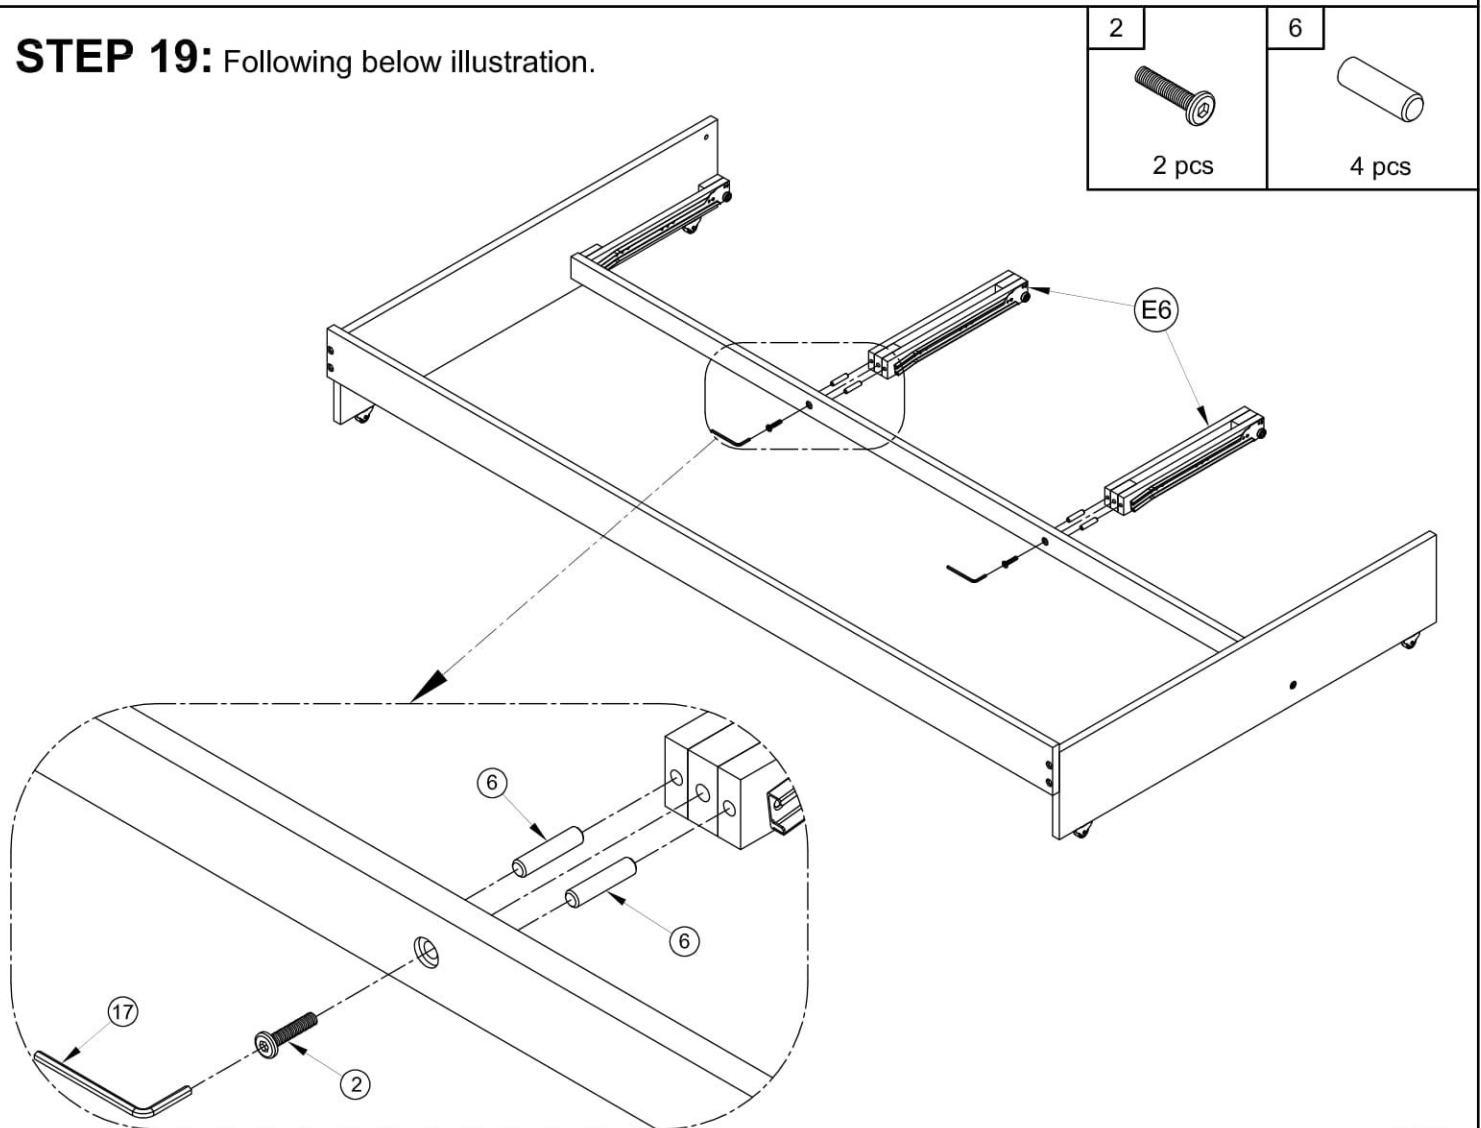


STEP 19: Following below illustration.





STEP 20: Following below illustration.

2		4		6	
2 pcs		4 pcs		4 pcs	
7		11			
2 pcs		4 pcs			

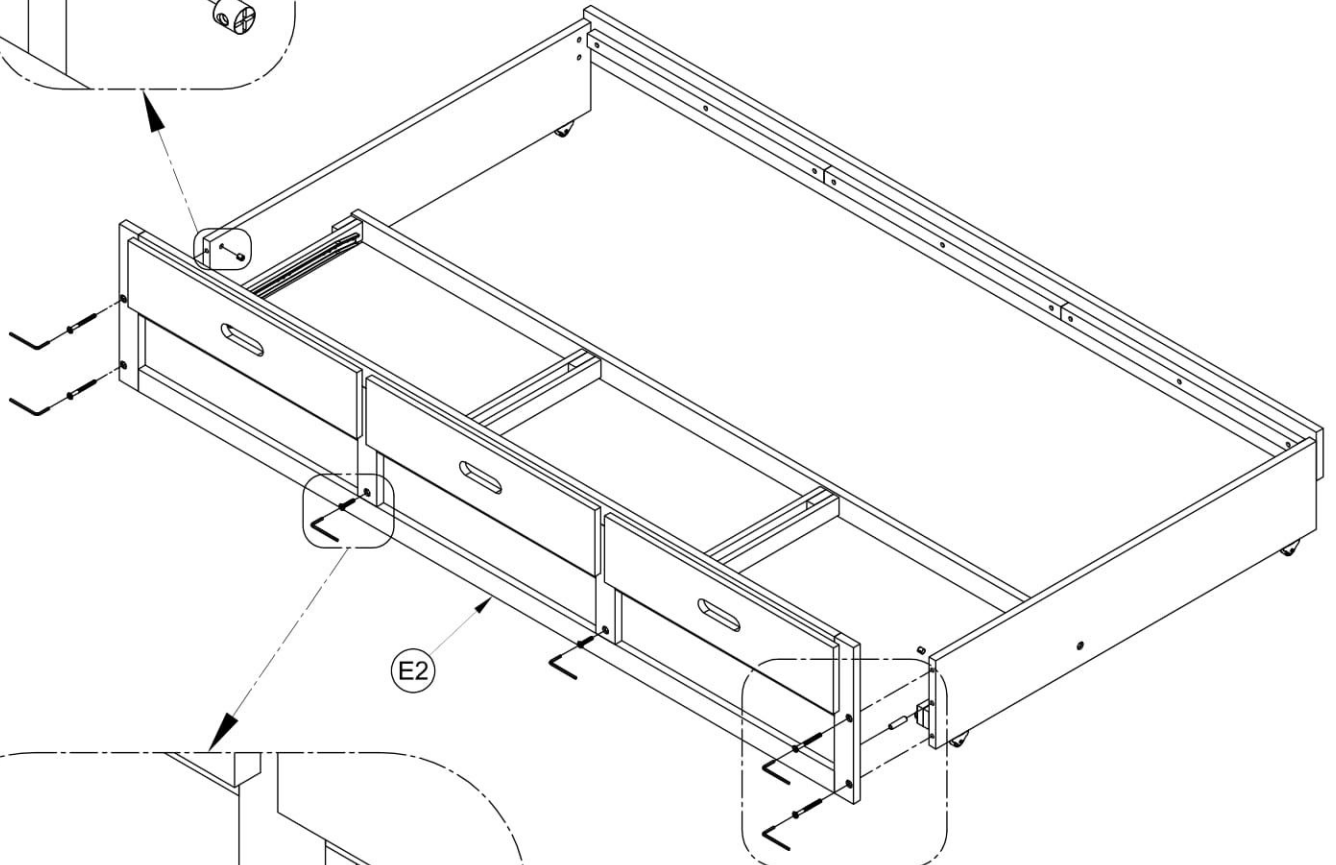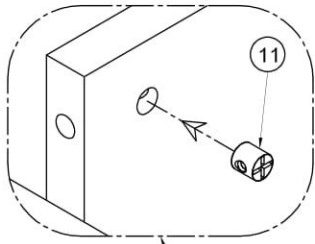

E2

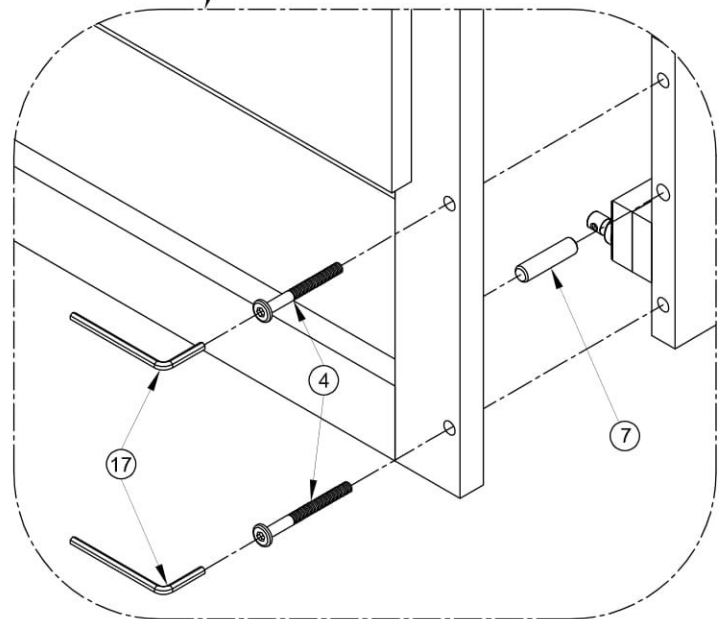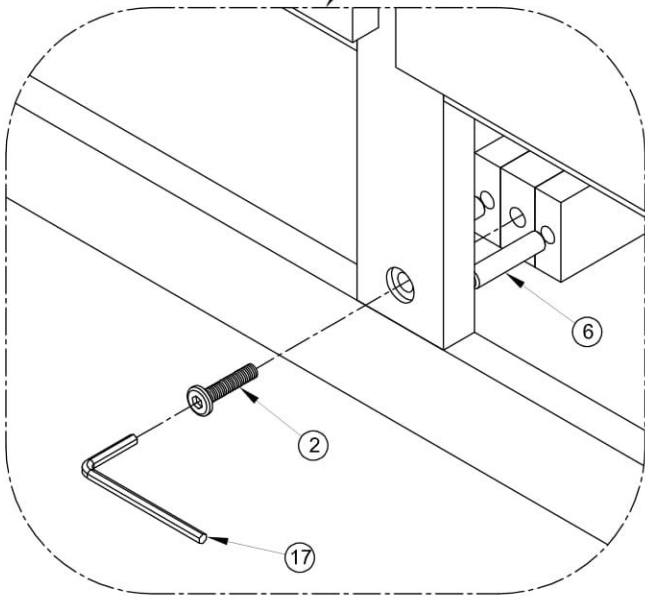


STEP 21 x 3: Following below illustration.

13



12 pcs

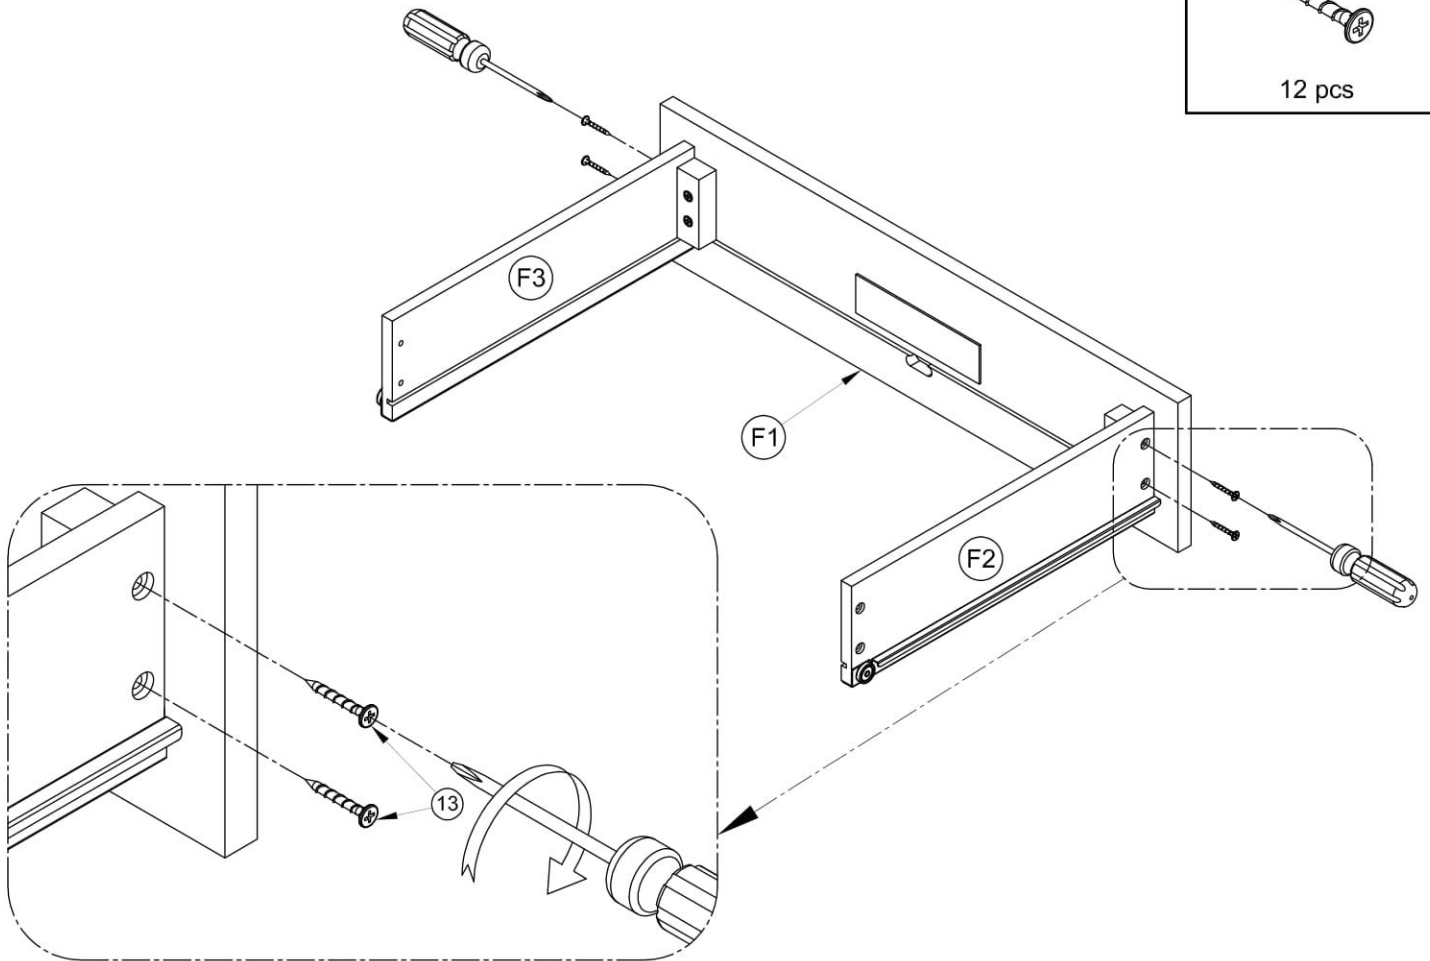


STEP 22 x 3: Following below illustration.

13



15 pcs


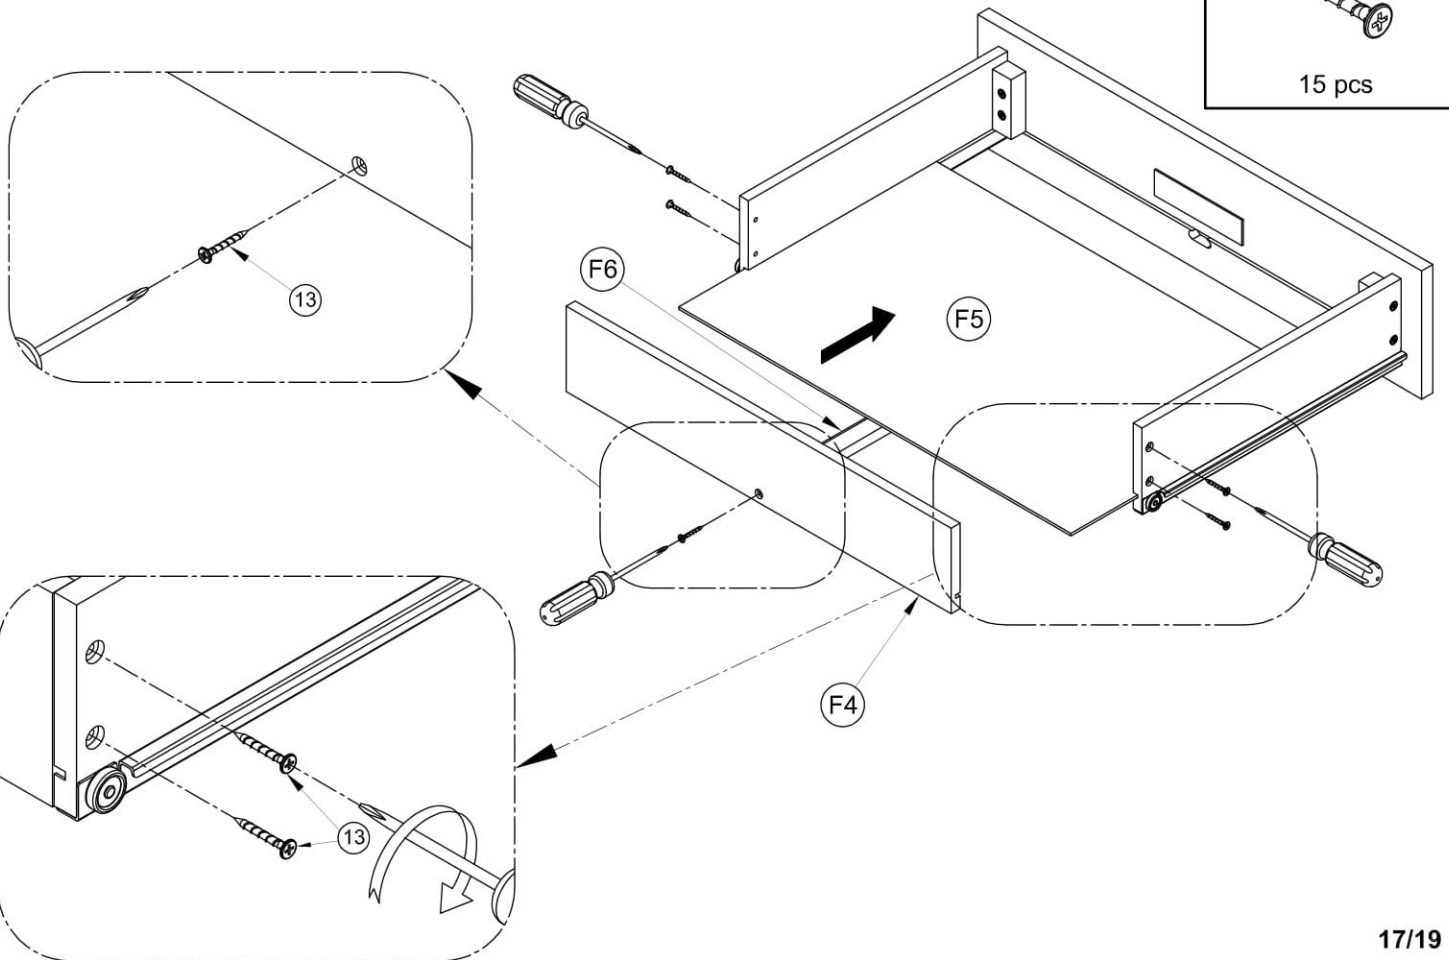


STEP 23: Following below illustration.

13



14 pcs

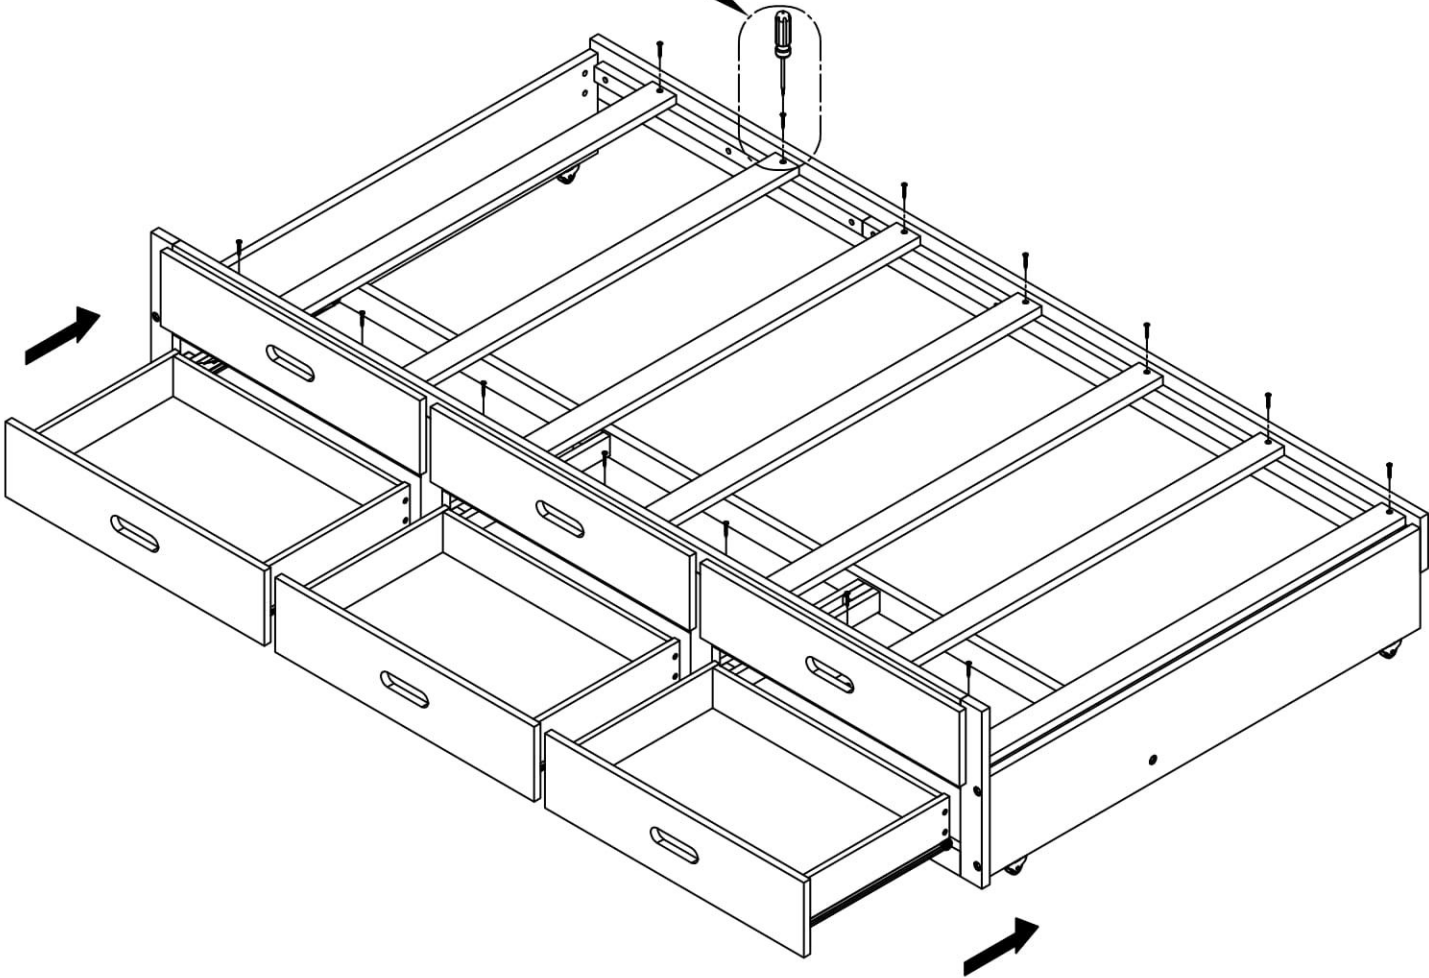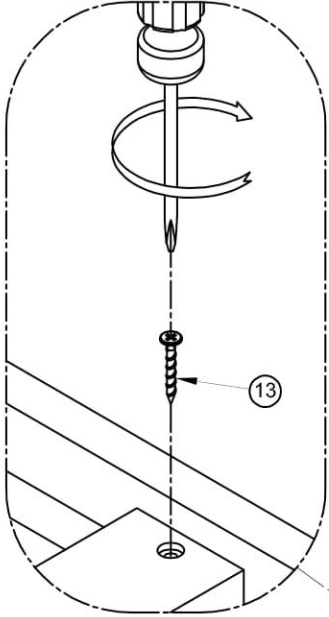

STEP 24: Following below illustration.

