
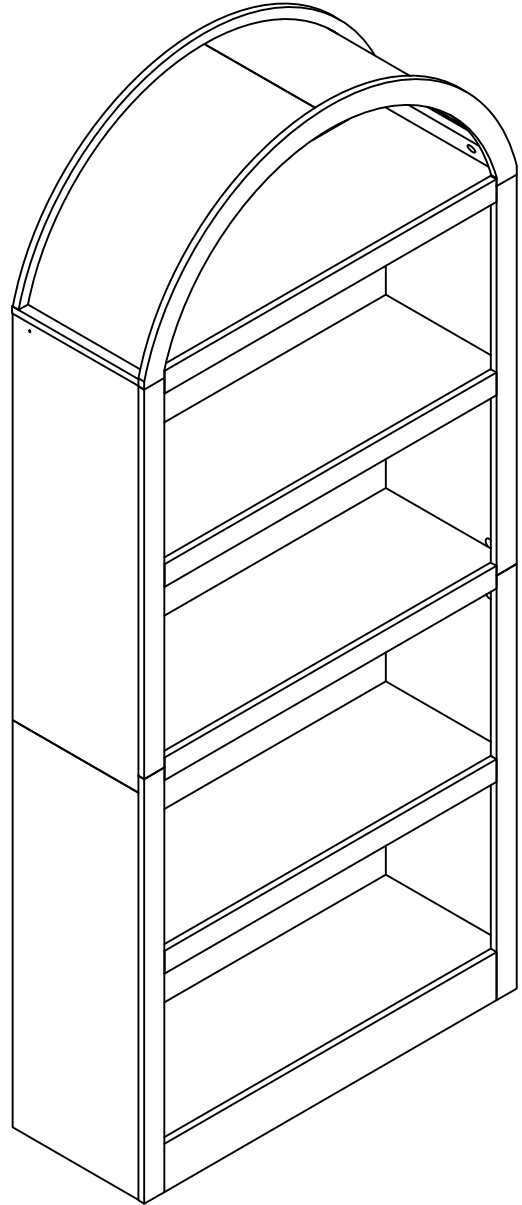


Bookshelf

Assembly Instructions - Please keep for future reference

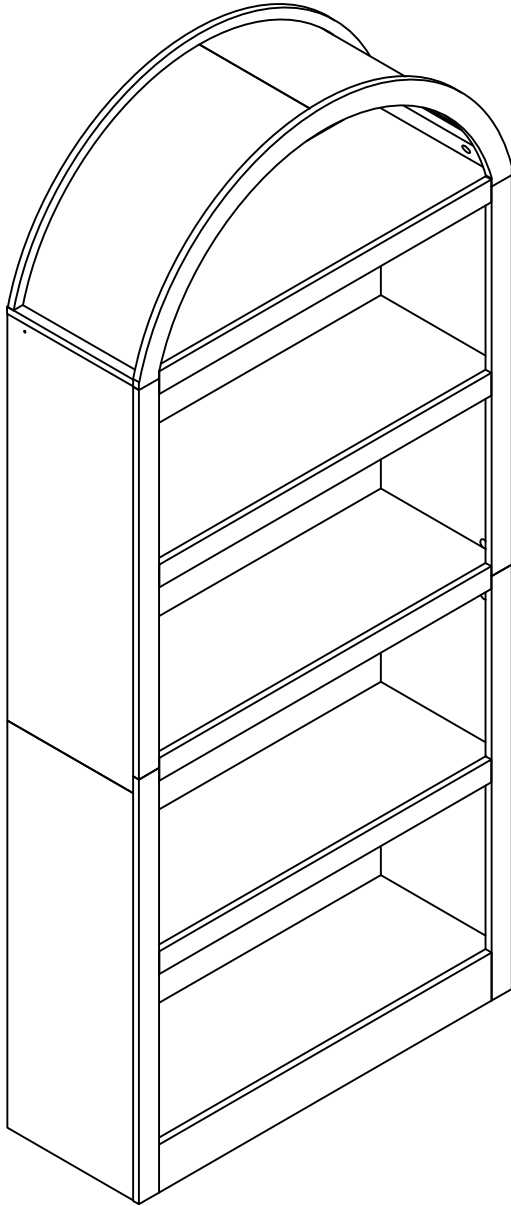

Single Dimensions

Width-29.921inch

Depth-10.63inch

Height-68.898inch



WARNING



This product is NOT a Clothing Storage Unit (CSU).
DO NOT use it for clothing storage.
Improper use may cause furniture tipover.

Important - Please read these instructions fully before starting assembly



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



power drill is set on a low torque setting.

- To reduce the likelihood of damaging your product please ensure that your

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightened properly.

WARNING
In order to help prevent overturning –
please follow these instructions







To help prevent product toppling over please follow the below steps:-

Use the anti tip strap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

Components-Fittings

Please check you have all the panels listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required

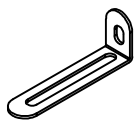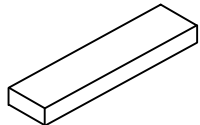(A)  6*35mm Cam Bolt x 146	(B)  15*10mm Cam Lock x 146	(C)  6*30mm Dowel x 164	(D)  4*35mm Screw x 4
(E)  3*16mm Screw x 44	(F)  4.0*14mm Screw x 4	(G)  Anti-tilt Angle iron x 4	(H)  Phillips screwdriver x1
(I)  Back panel buckle x 44	(J)  Plastic expansion bolt x 4	(K)  Reinforcing iron sheet x 8	(L)  Hole position sticker x 20
(M)  3.5*12mm Screw x 20	(N)  EVA pad x 8		

Tools required



Phillips screwdriver


Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.

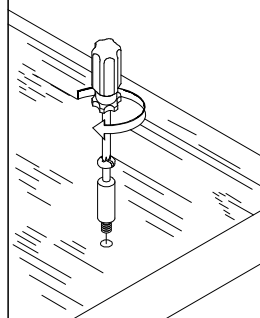

Step 2

Push the male camlock into the entry hole.

2

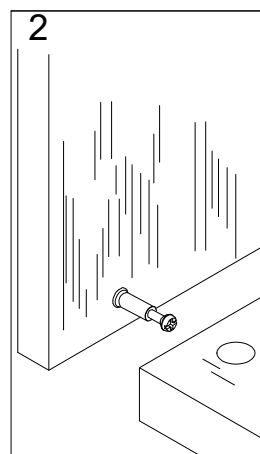


Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

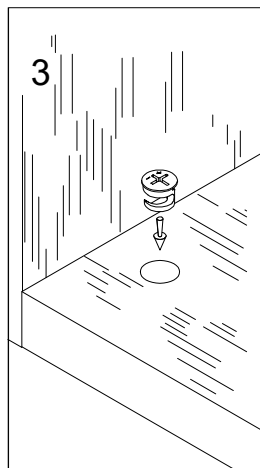


Step 4

Turn the female camlock clockwise with a screwdriver.


You should feel a click when the camlock is locked in place.

The joint is now secure.













4

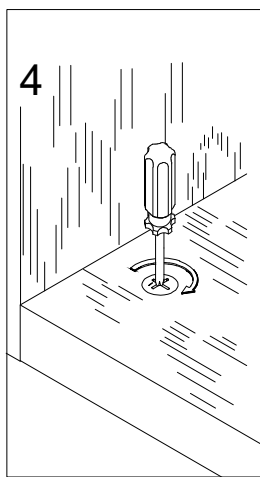

Assembly Instructions

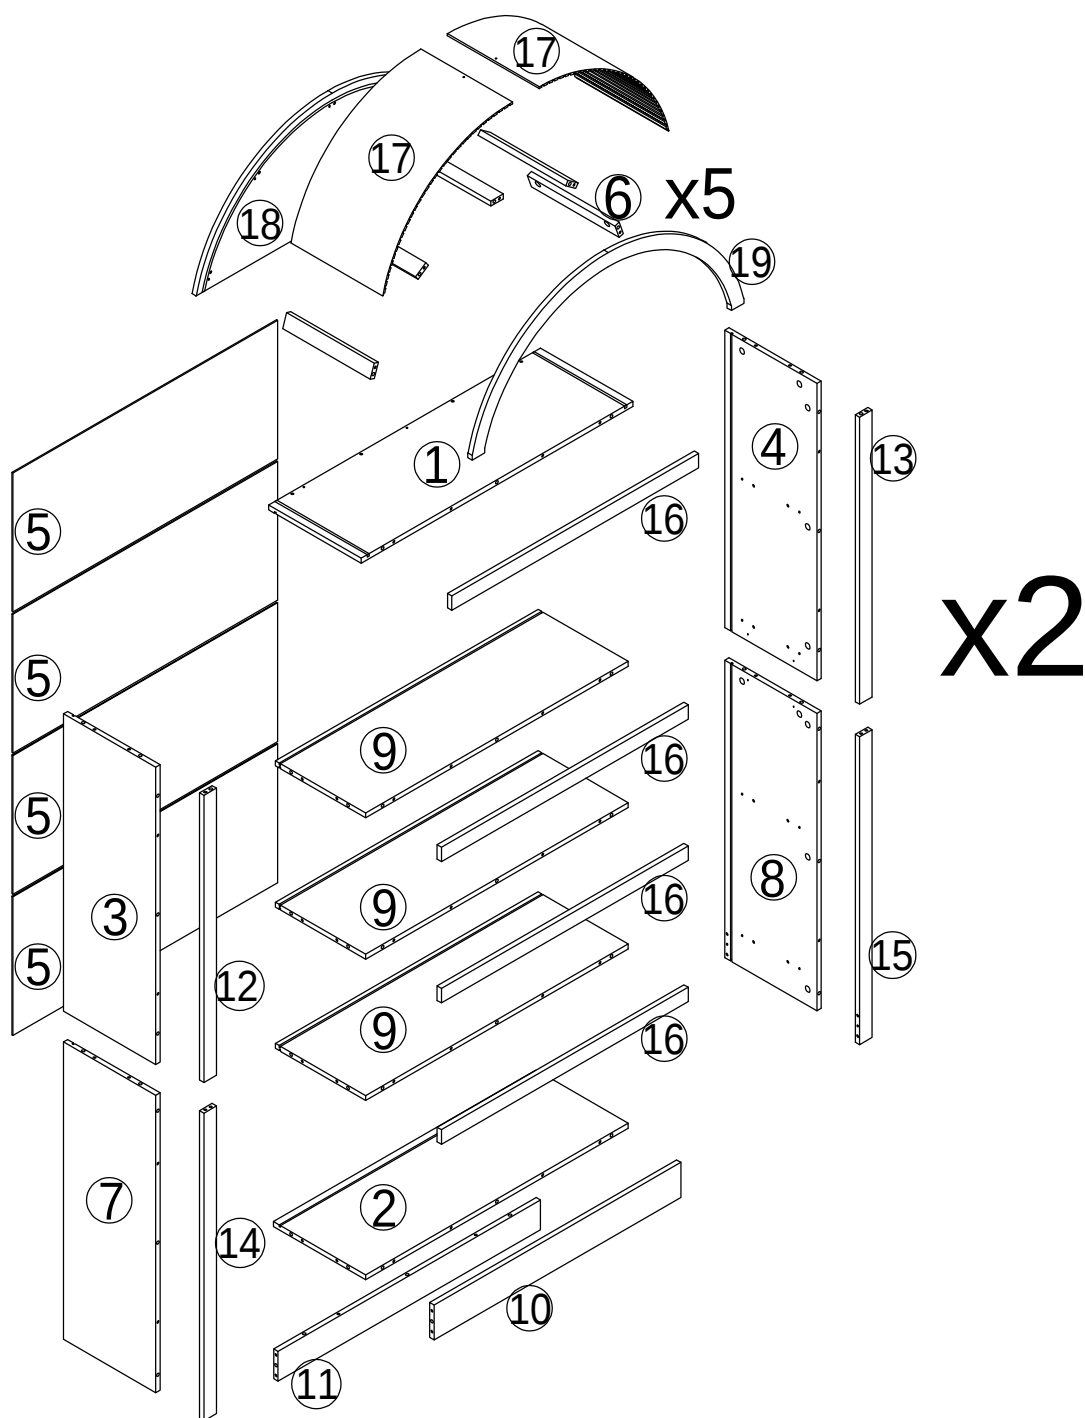


Assembly Instructions

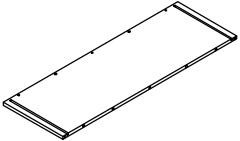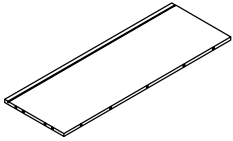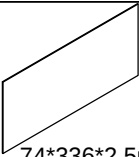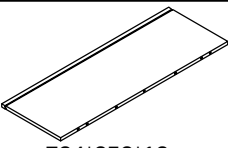
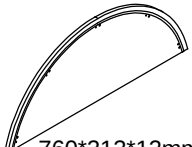
 760*258*12mm ①X2	 734*258*12mm ②X2	 720*258*12mm ③X2	 720*258*12mm ④X2
 74*336*2.5mm ⑤X8	 245*35*12mm ⑥X10	 720*258*12mm ⑦X2	 720*258*12mm ⑧X2
 734*252*12mm ⑨X6	 690*85*12mm ⑩X2	 734*72*12mm ⑪X2	 695*35*12mm ⑫X2
 695*35*12mm ⑬X2	 745*35*12mm ⑭X2	 745*35*12mm ⑮X2	 690*35*12mm ⑯X8
 500*257*5mm ⑰X4	 760*313*12mm ⑱X2	 760*301*12mm ⑲X2	

Assembly Instructions


Step 1

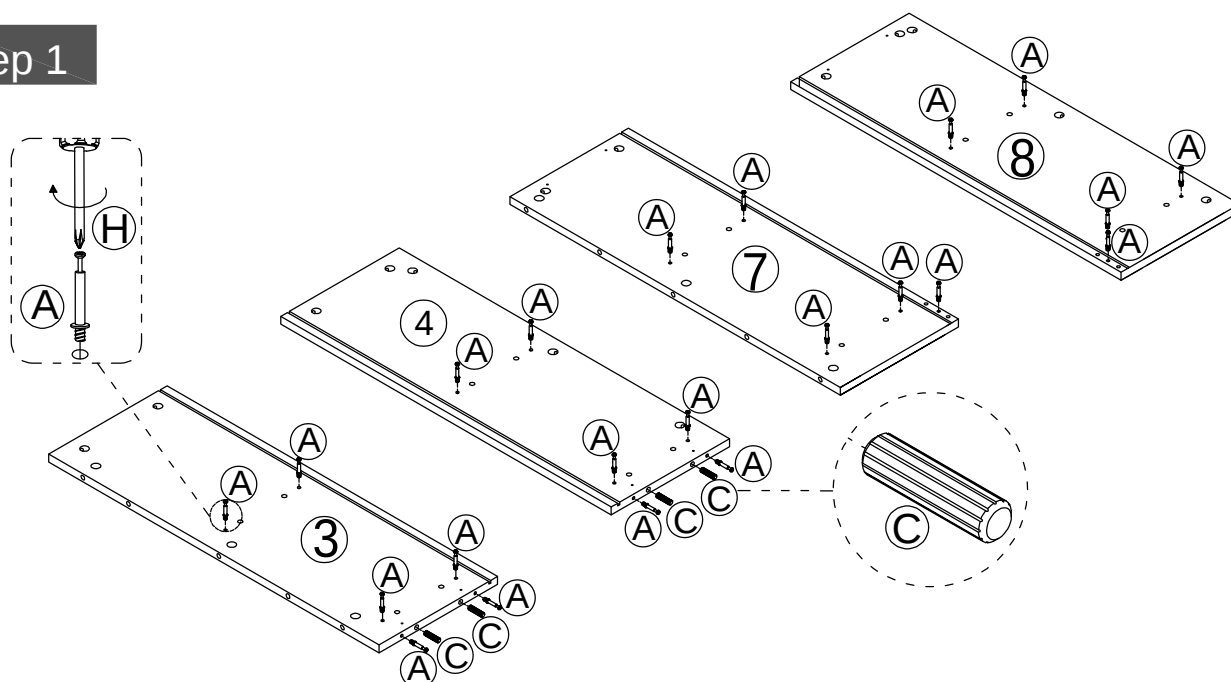


x2

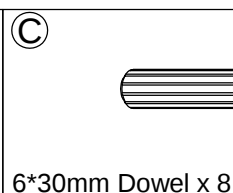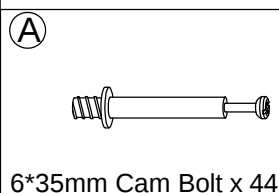

Step 2

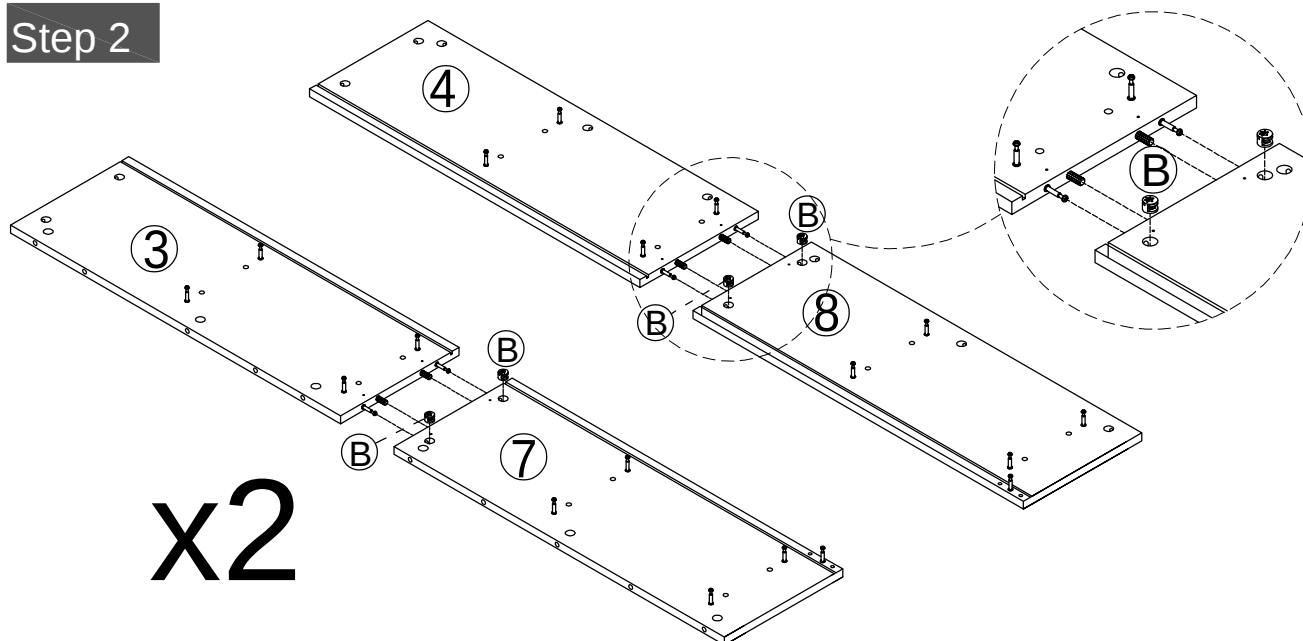


x2

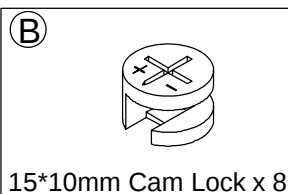

Step 1


Step 2

Step 3

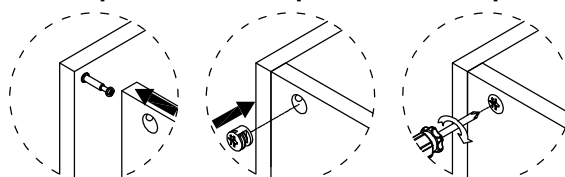

Assembly Instructions


Step 3

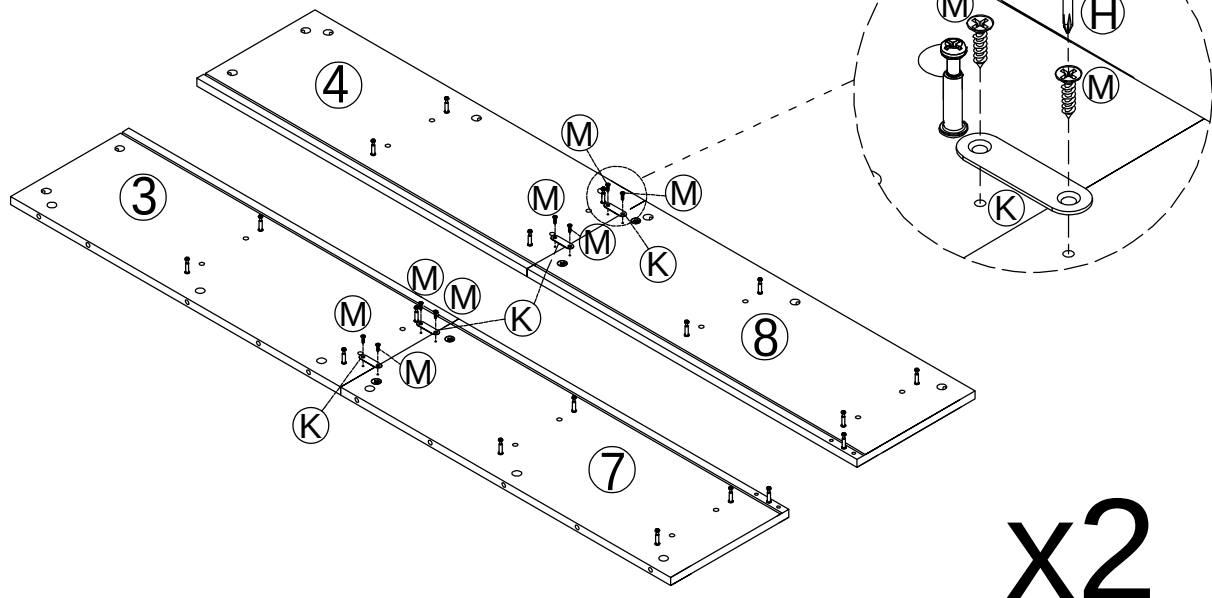


x2

(K)  Reinforcing iron sheet x 8	(M)  3.5*12mm Screw x 16
--	---

Step 4

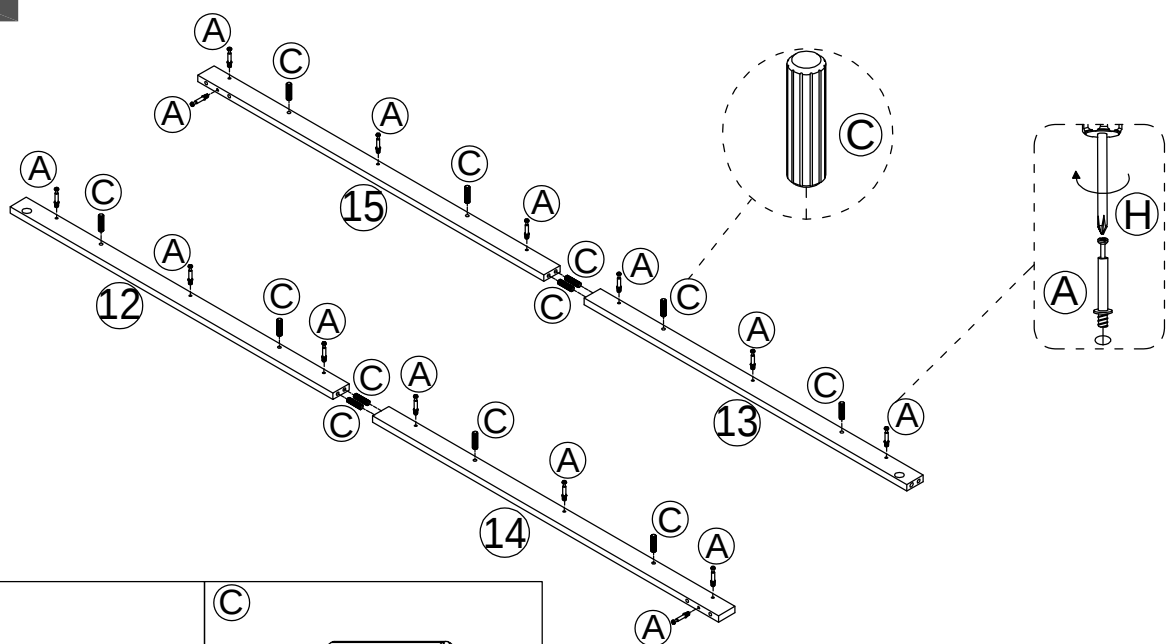


(A)  6*35mm Cam Bolt x 28	(C)  6*30mm Dowel x 24
--	---

x2


Assembly Instructions

Step 5

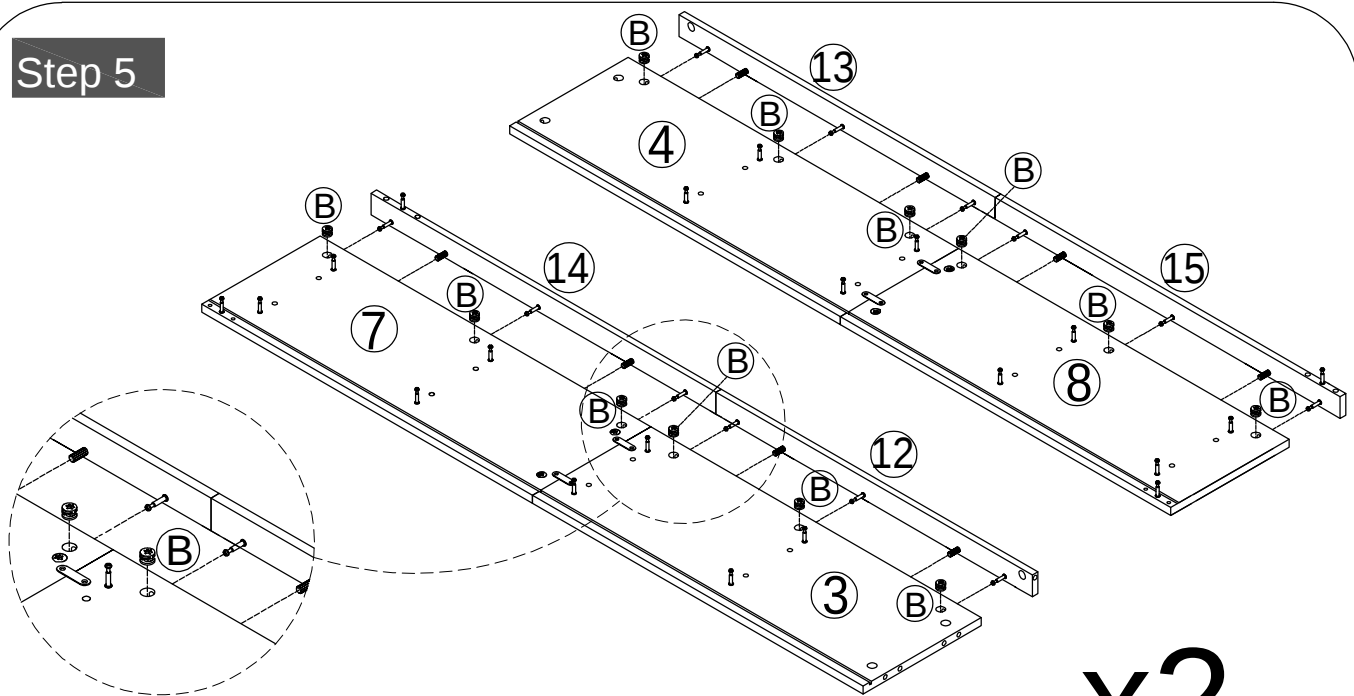


x2

(B)




15*10mm Cam Lock x 24


Step 1

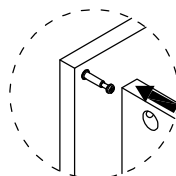


Step 2

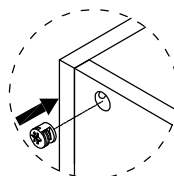

Step 3

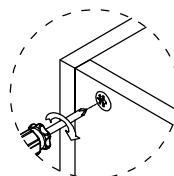


Step 6

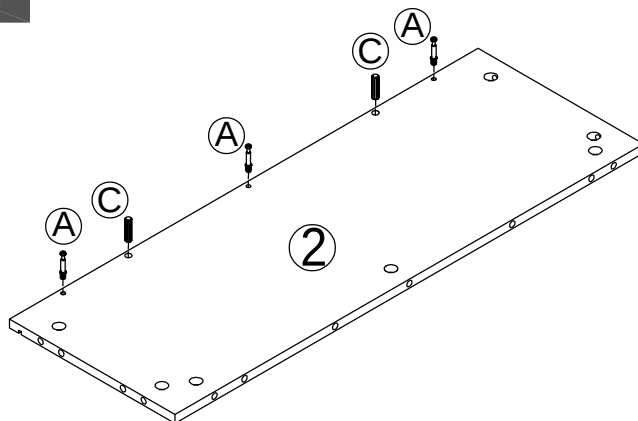

x2

(A)




6*35mm Cam Bolt x 12

(C)




6*30mm Dowel x 12

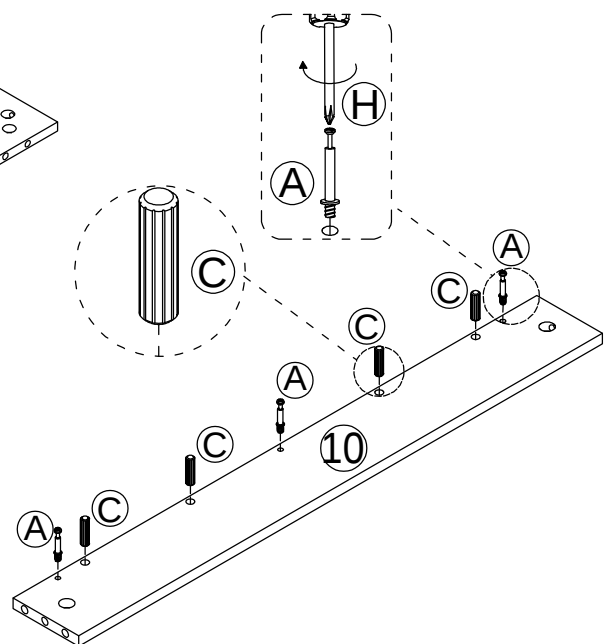


Assembly Instructions

Step 7


Step 1

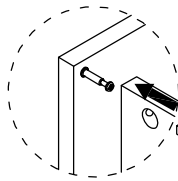


Step 2

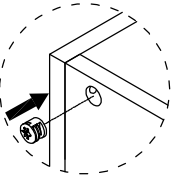

Step 3


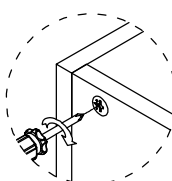


(B)




15*10mm Cam Lock x 12

x2

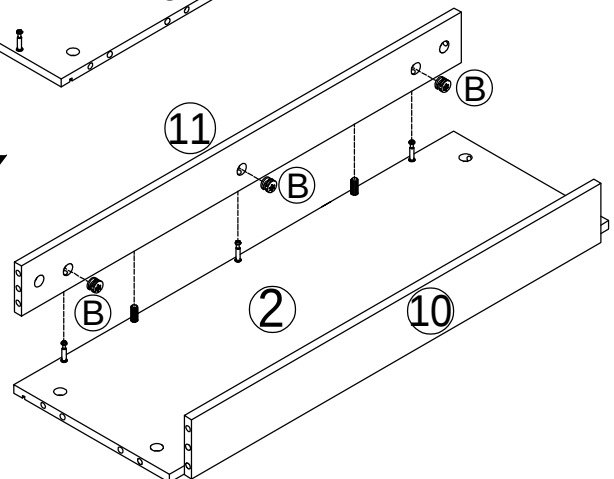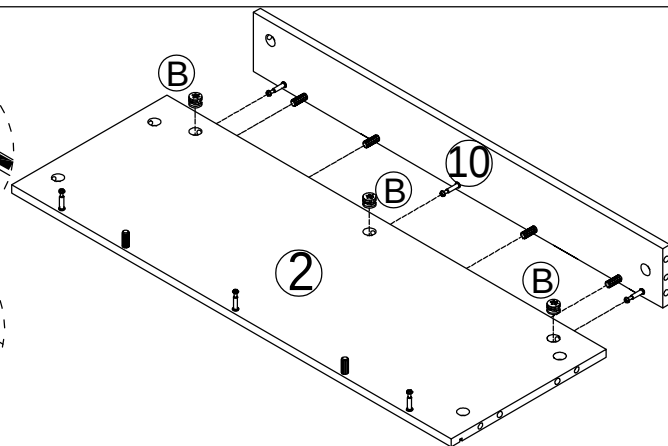


Step 8


Step 1

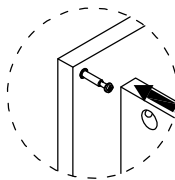


Step 2

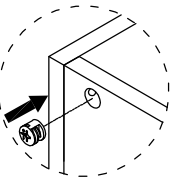

Step 3

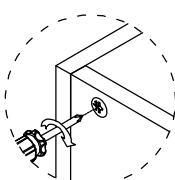

(B)




15*10mm Cam Lock x 8

(C)







6*30mm Dowel x 24

x2
10


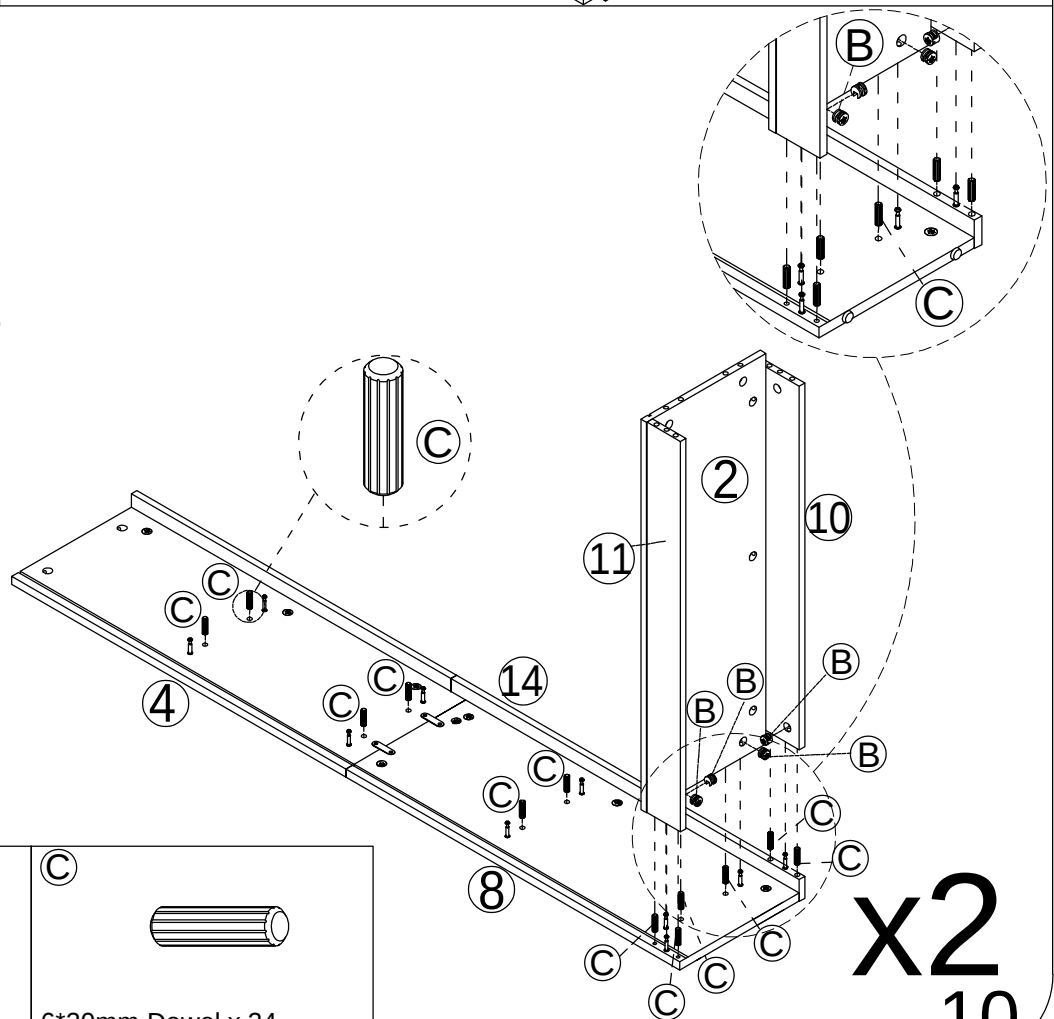


Assembly Instructions

Step 9

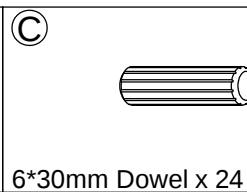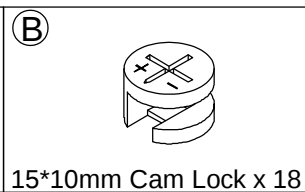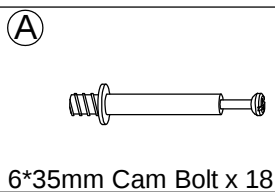
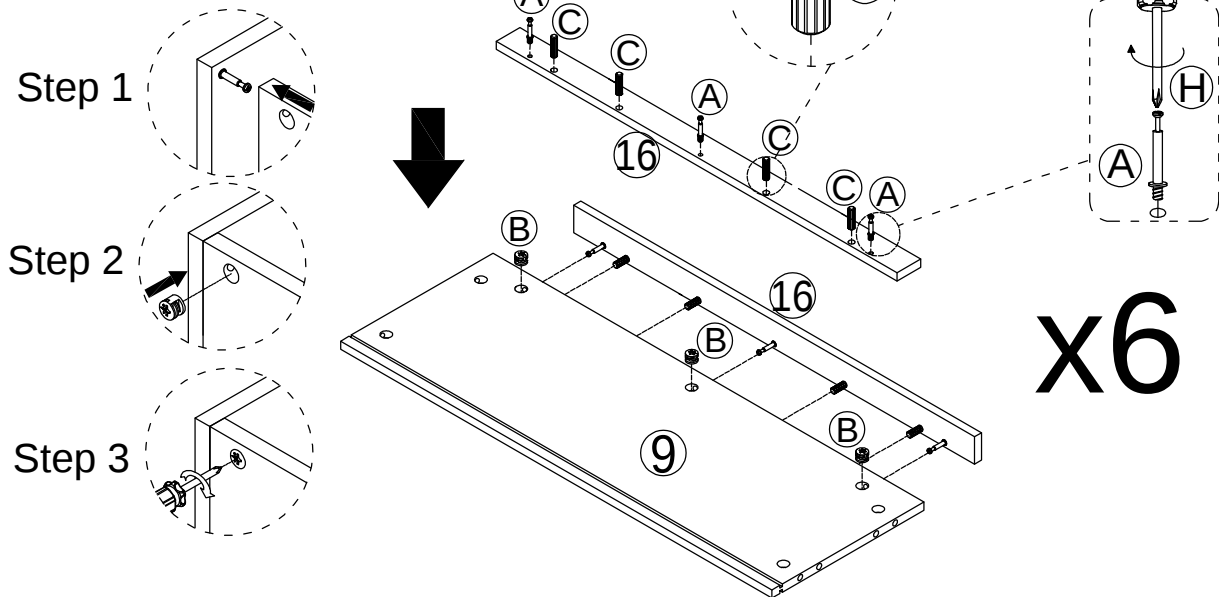


Step 10

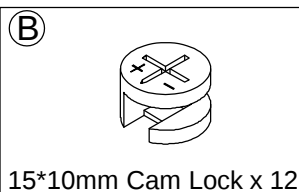
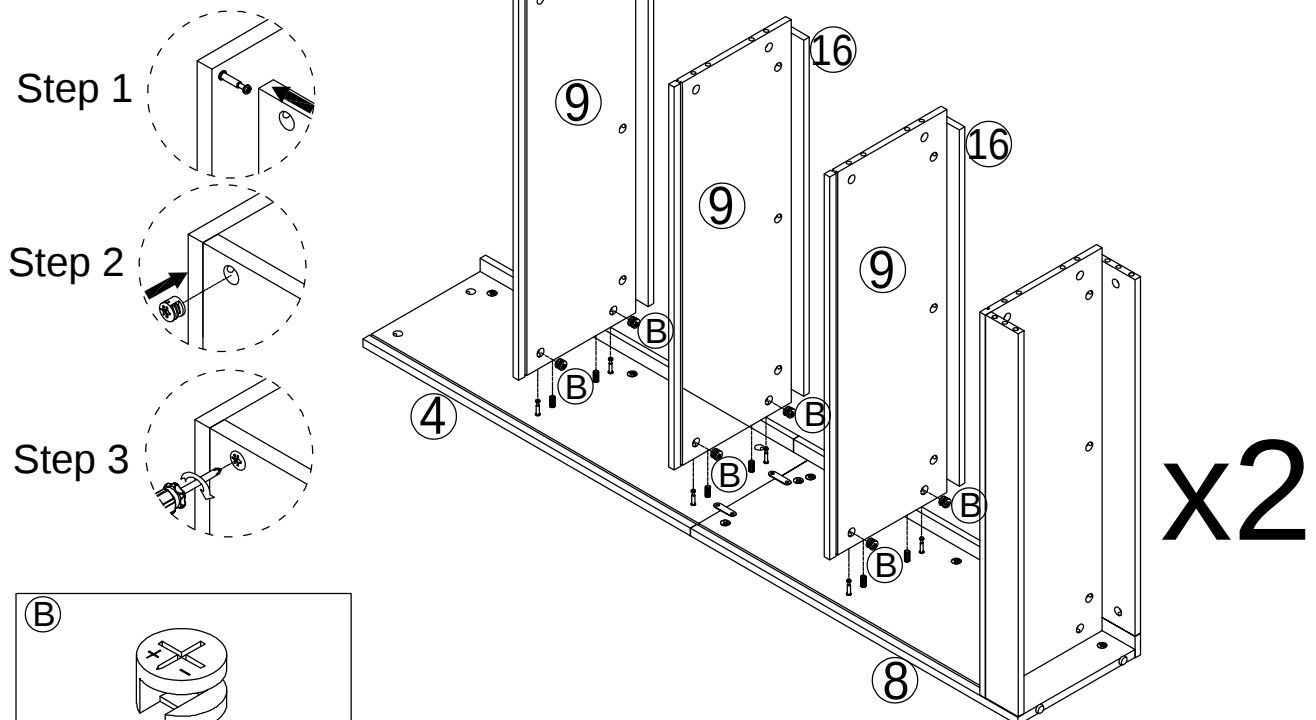


Assembly Instructions

Step 11

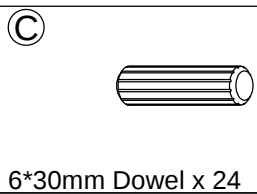
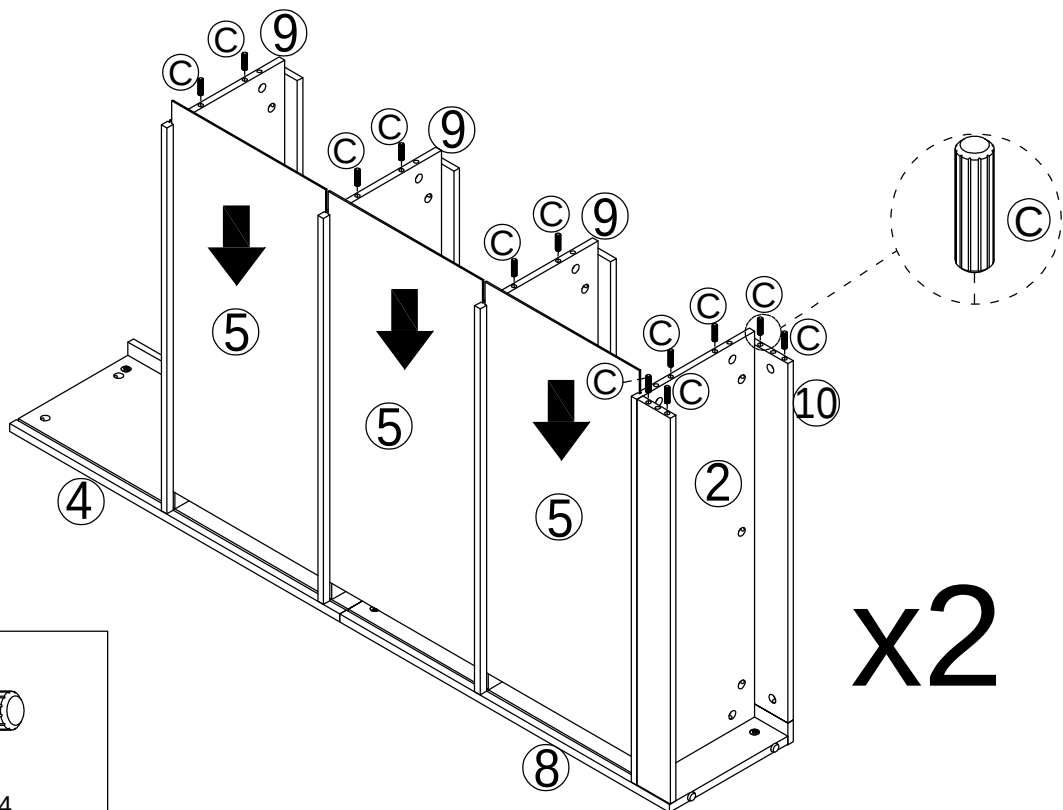


Step 12

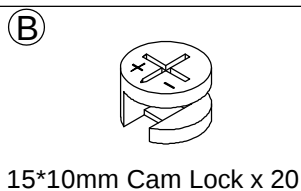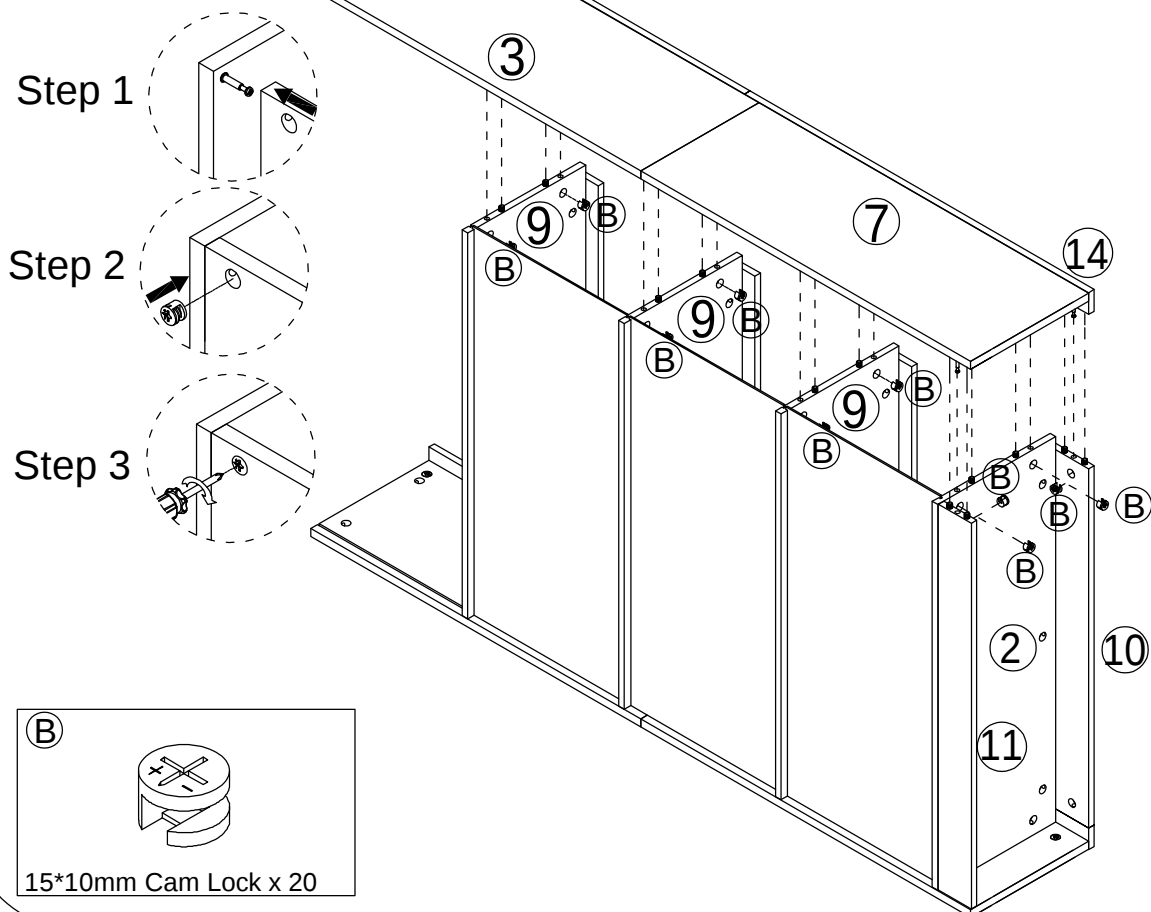


Assembly Instructions

Step 13

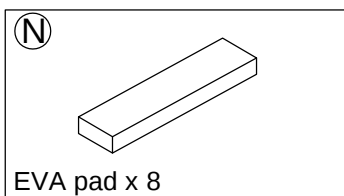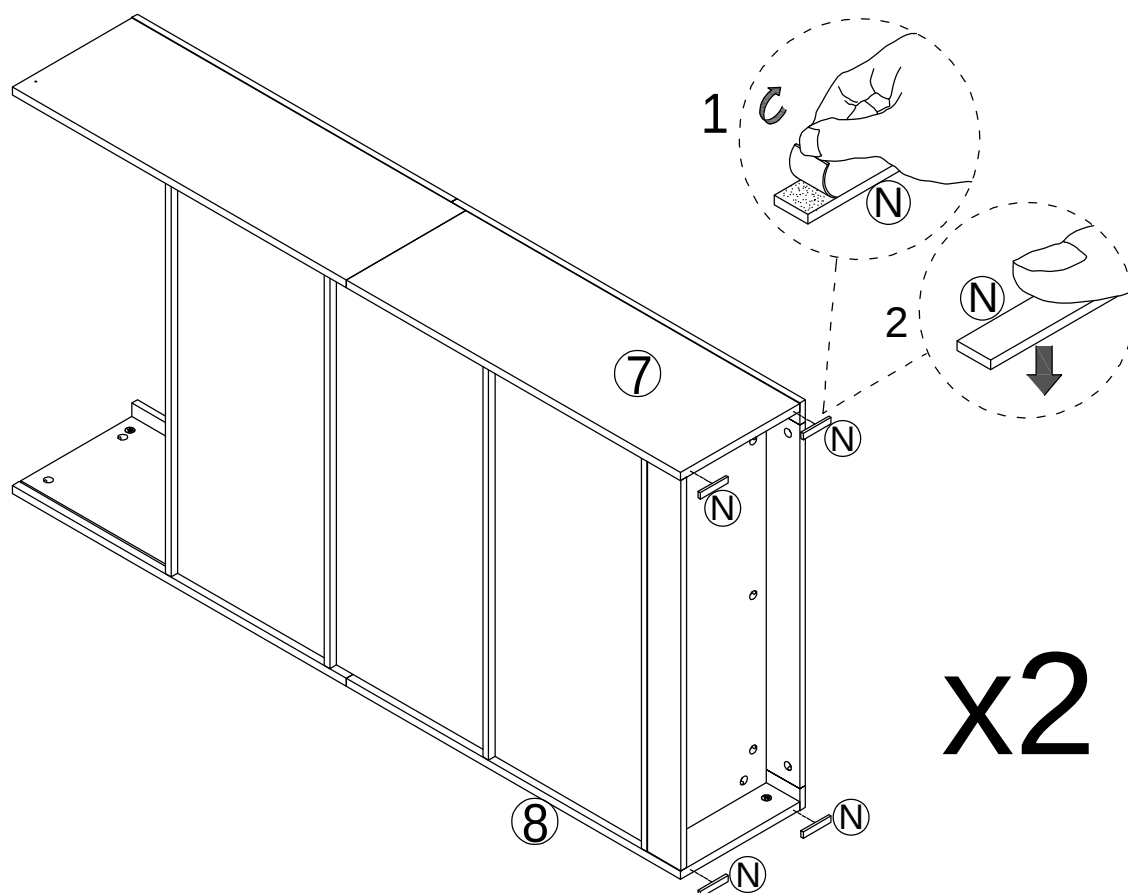

Assembly Instructions

Step 14

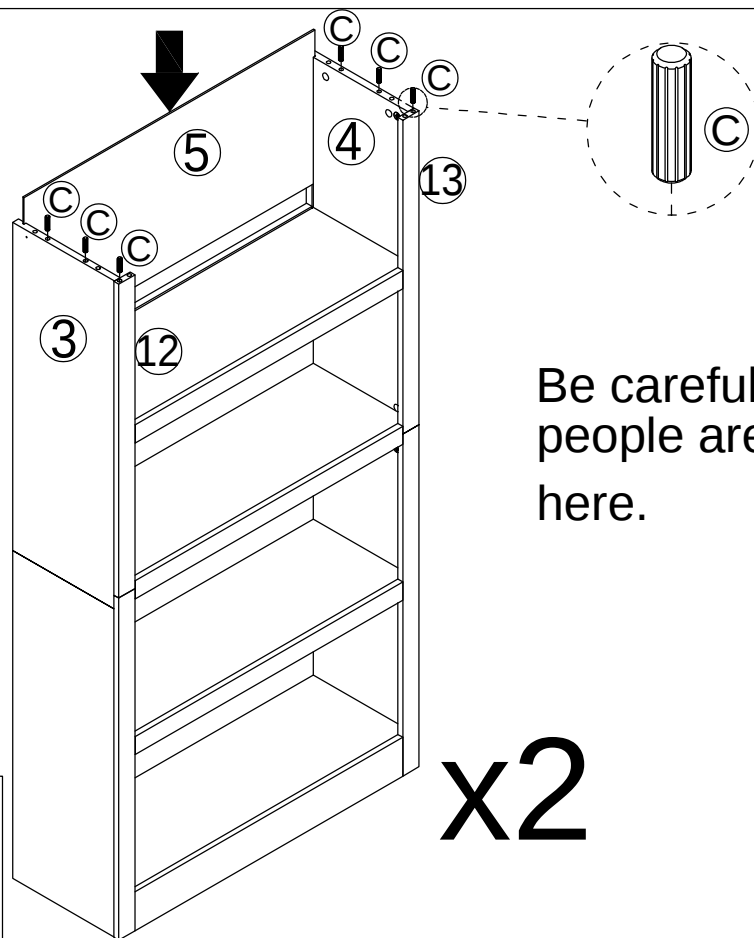


C




6*30mm Dowel x 12

Step 15

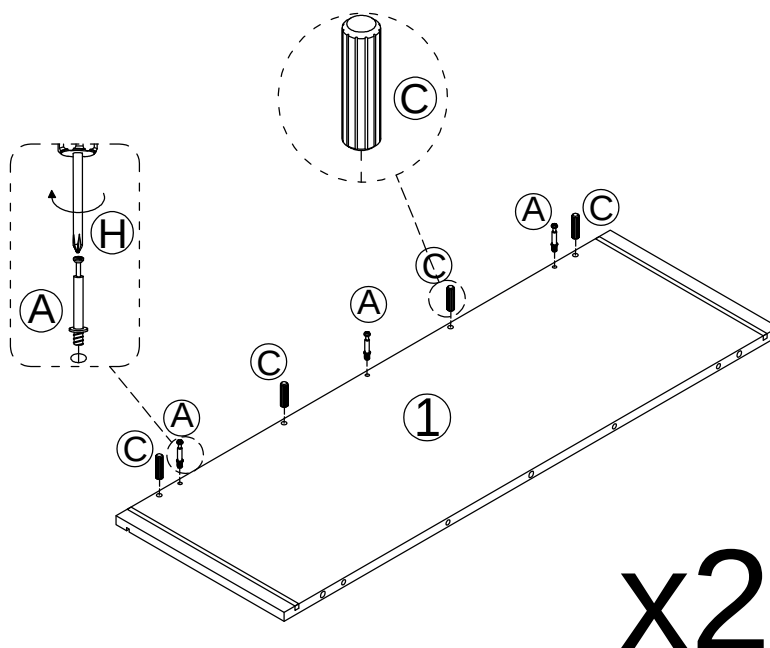


A



6*35mm Cam Bolt x 6

C



6*30mm Dowel x 8

Assembly Instructions





Step 16

x2

Step 1




Step 2

Step 3

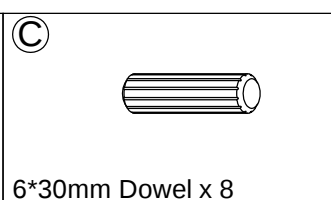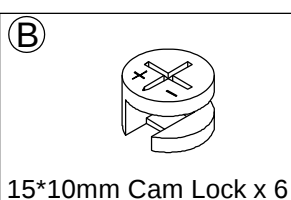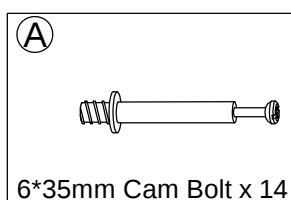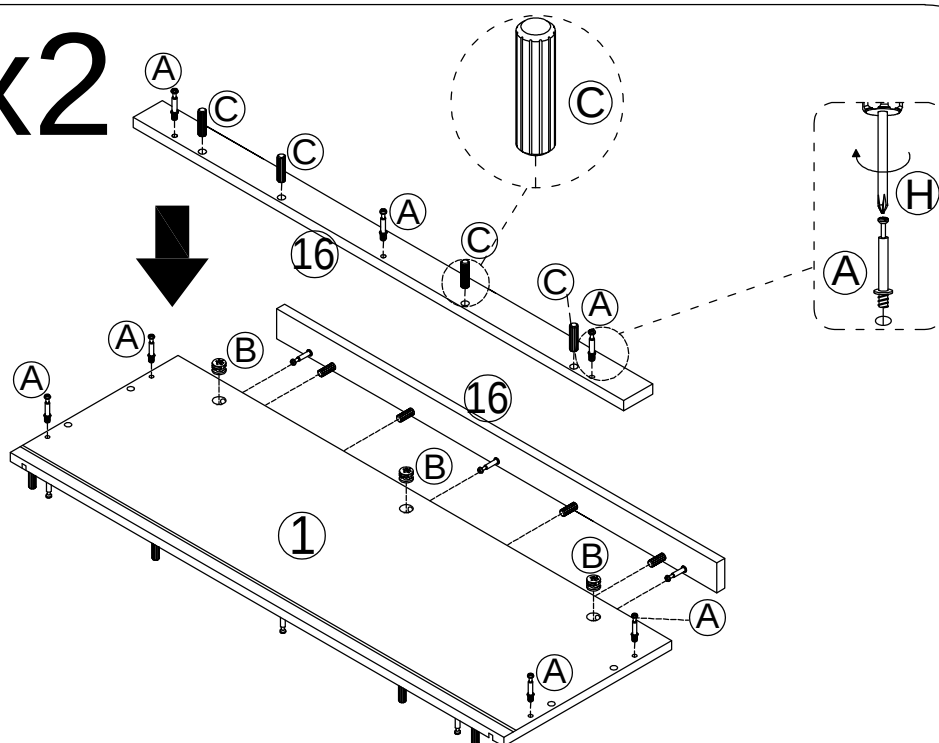



Step 17

x2

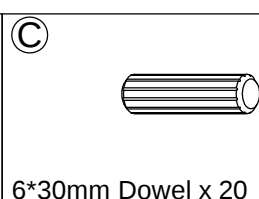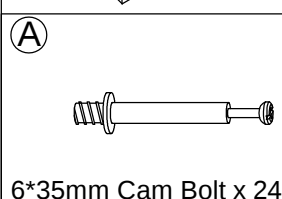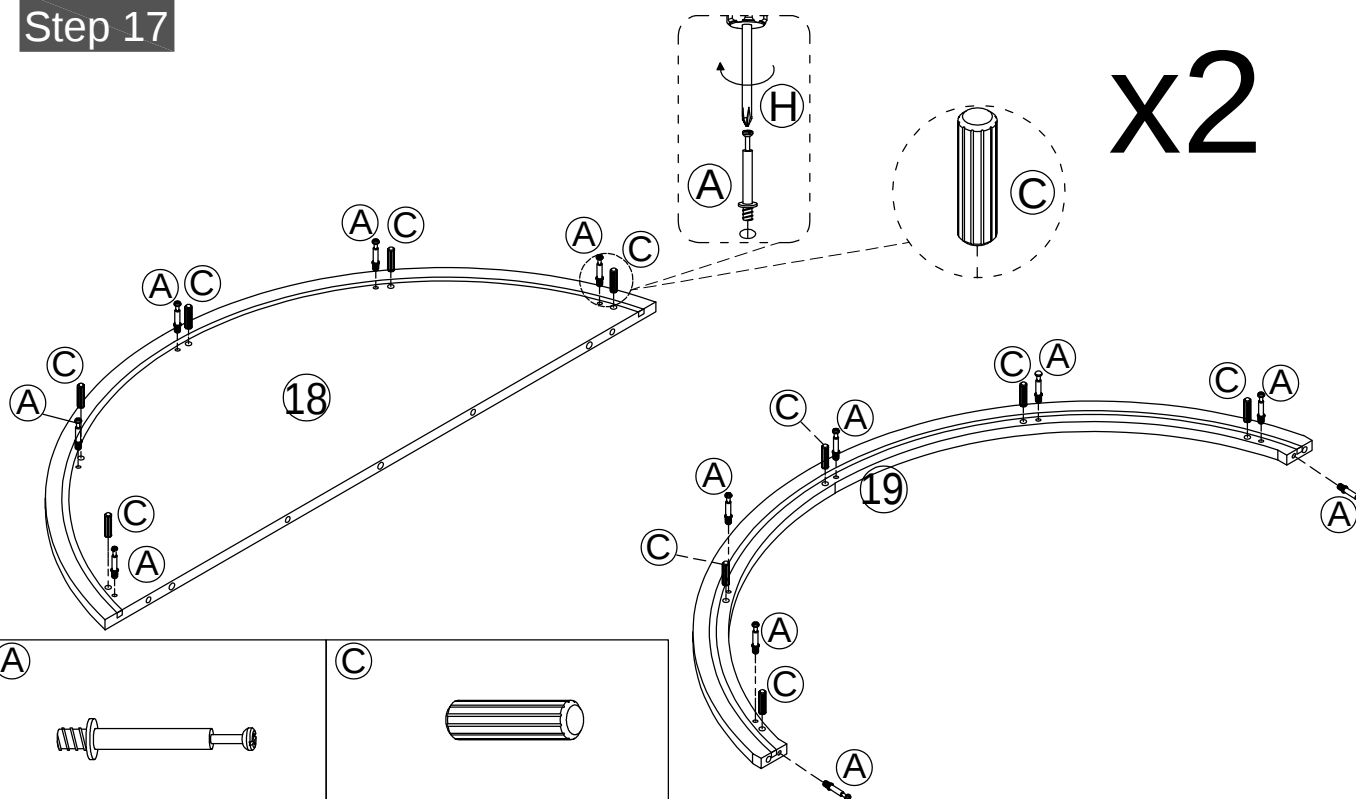

Assembly Instructions

Step 18


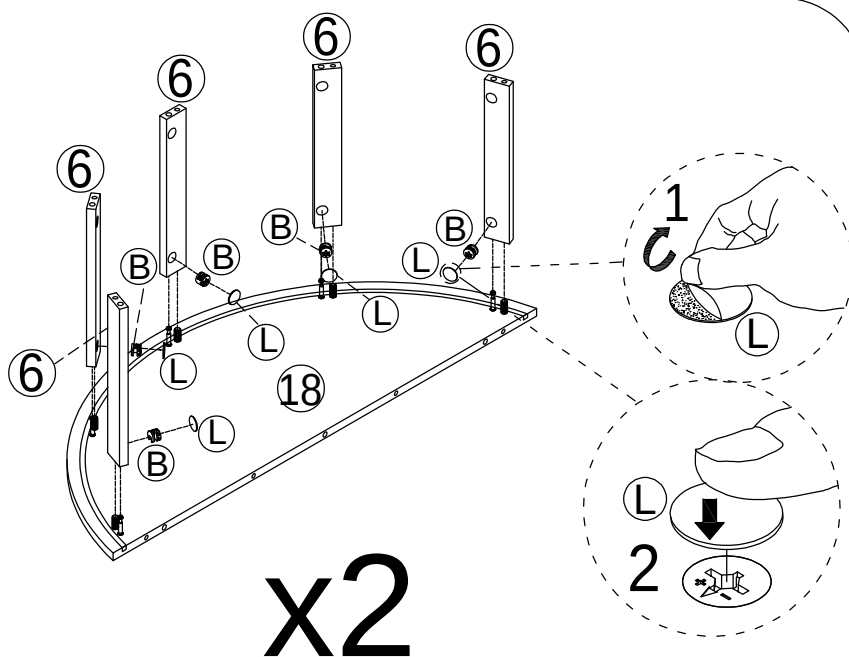
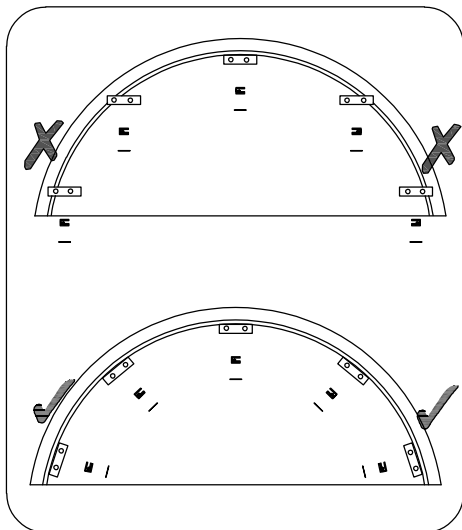


x2

Step 1

Step 2

Step 3

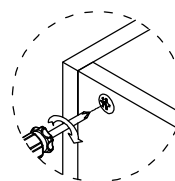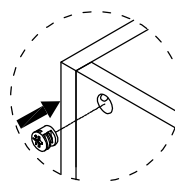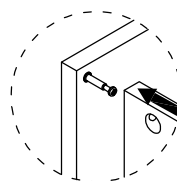


(B)



15*10mm Cam Lock x 10


(L)




Hole position sticker x 10

Step 19


Step 1

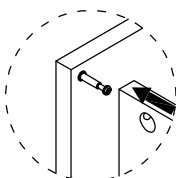


Step 2

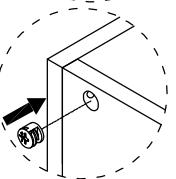


Step 3

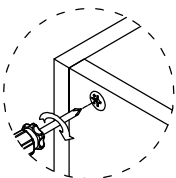

x2

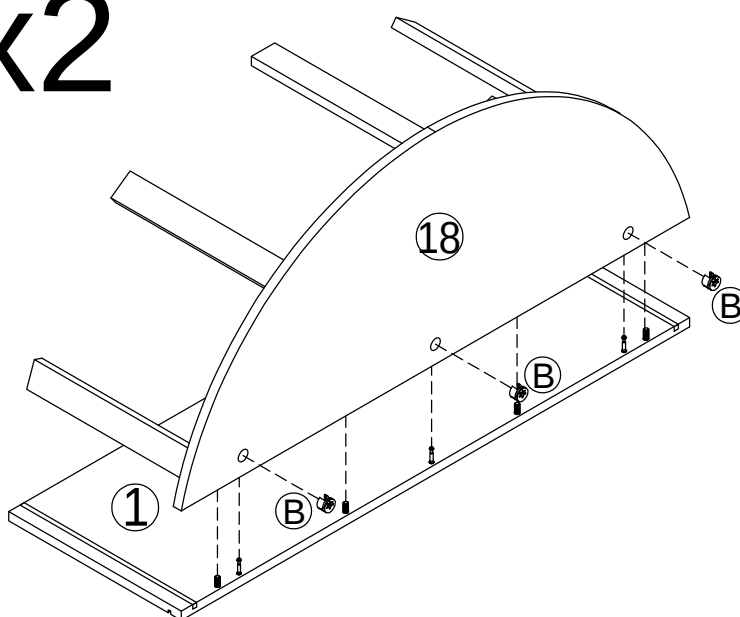


(B)




15*10mm Cam Lock x 6

Assembly Instructions

Step 20


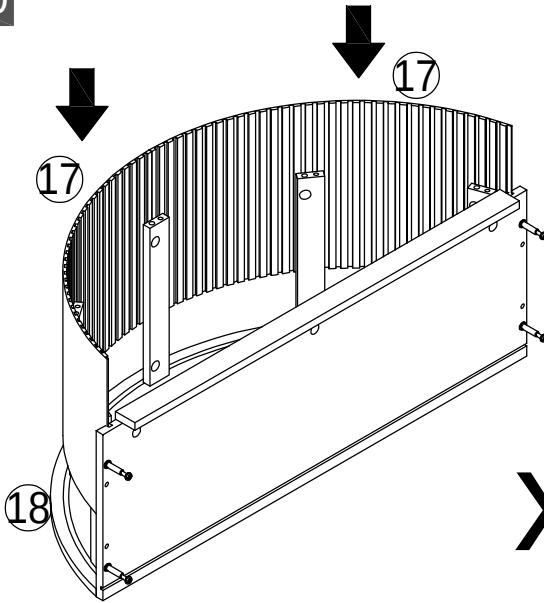


Be careful! At least two people are required here.

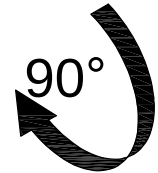

x2

Step 21

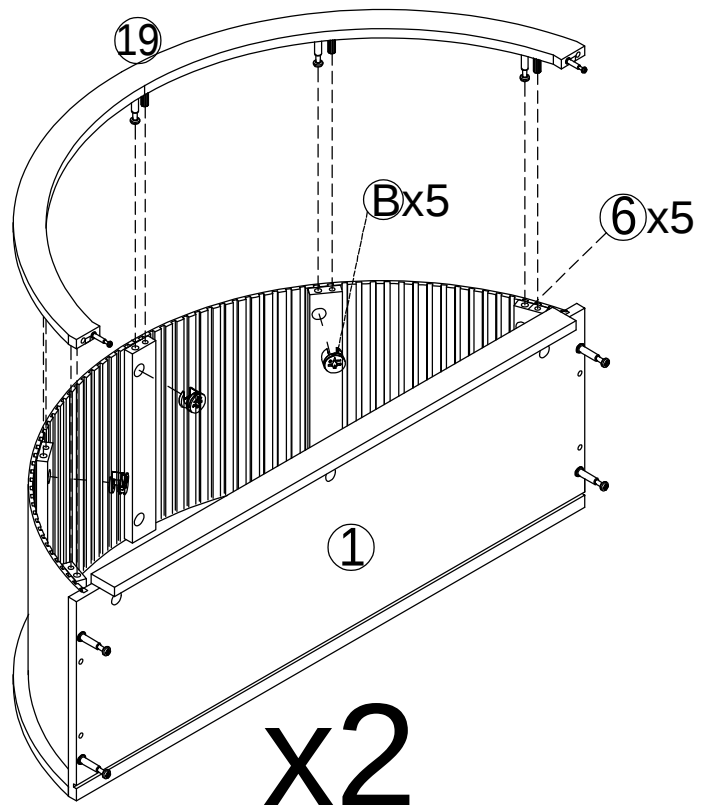
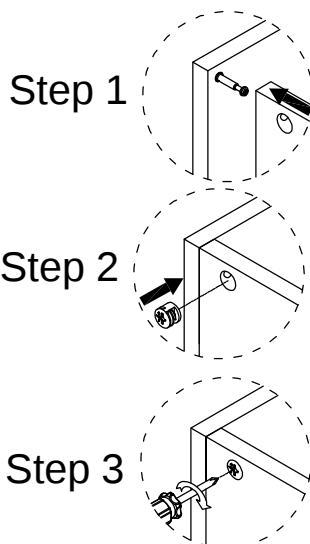


x2





Assembly Instructions

Step 22

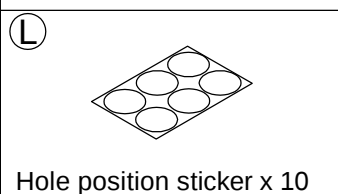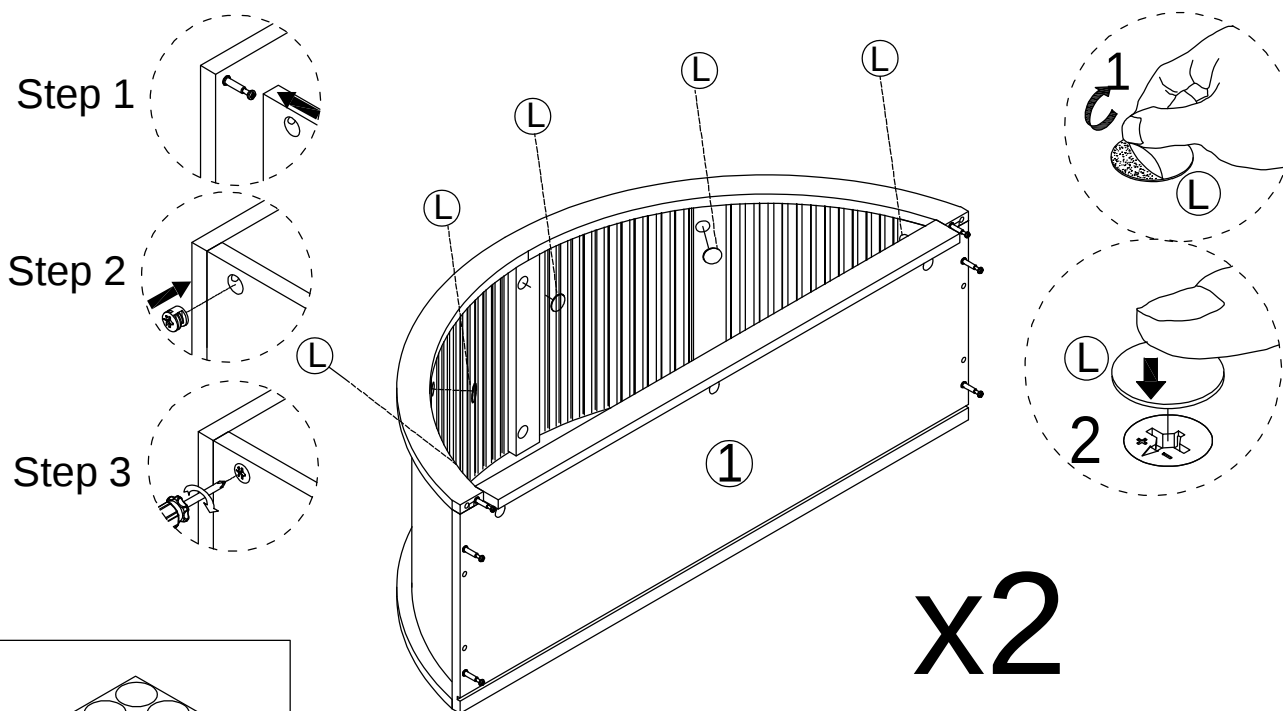


Step 23

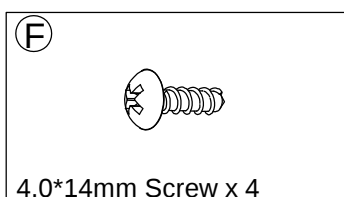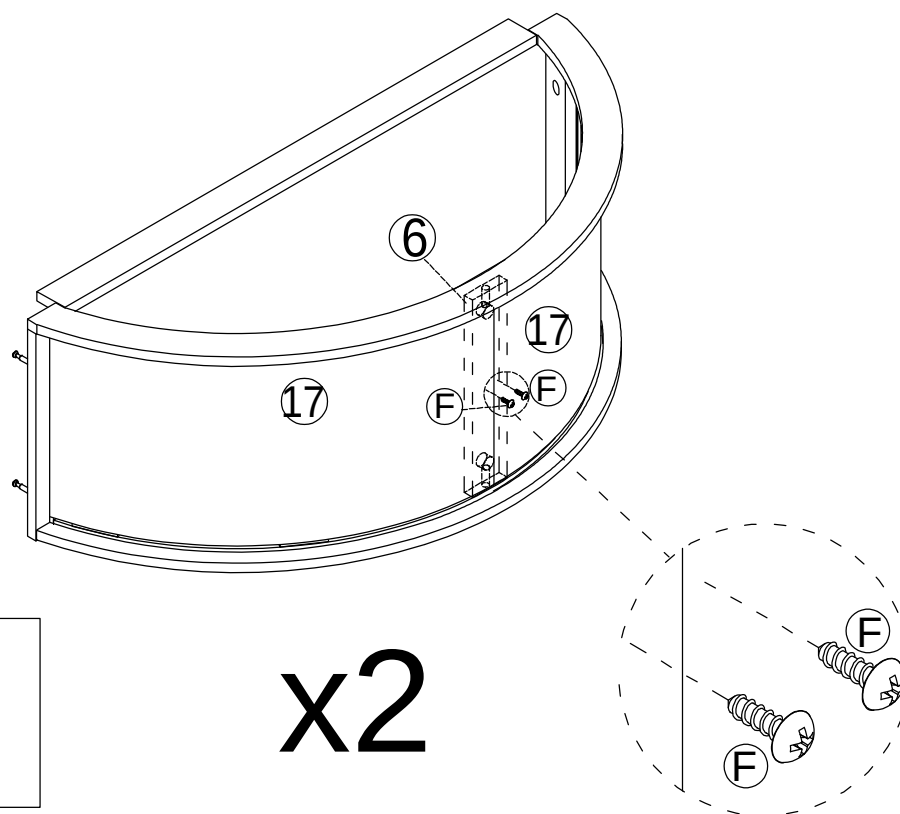


Assembly Instructions

Step 24



Step 1

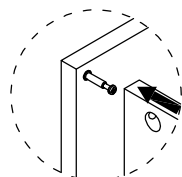

Step 2

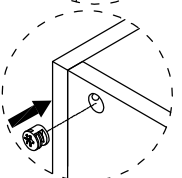


Step 3

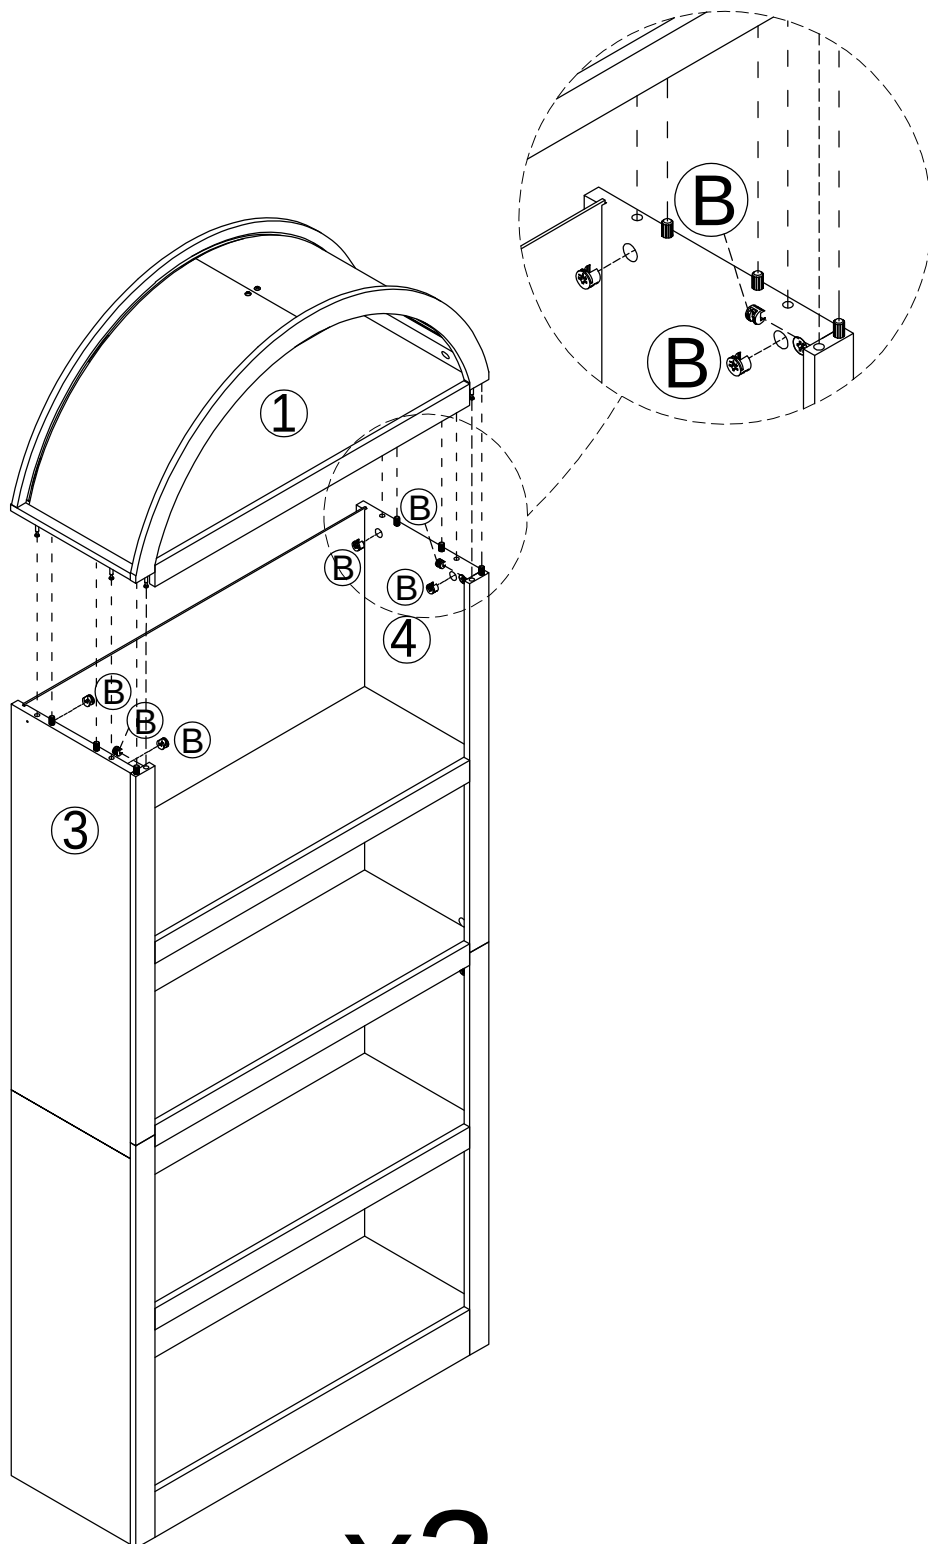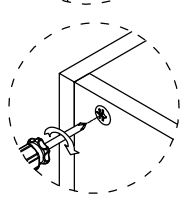

x2


(B)



15*10mm Cam Lock x 12

Assembly Instructions


Step 25

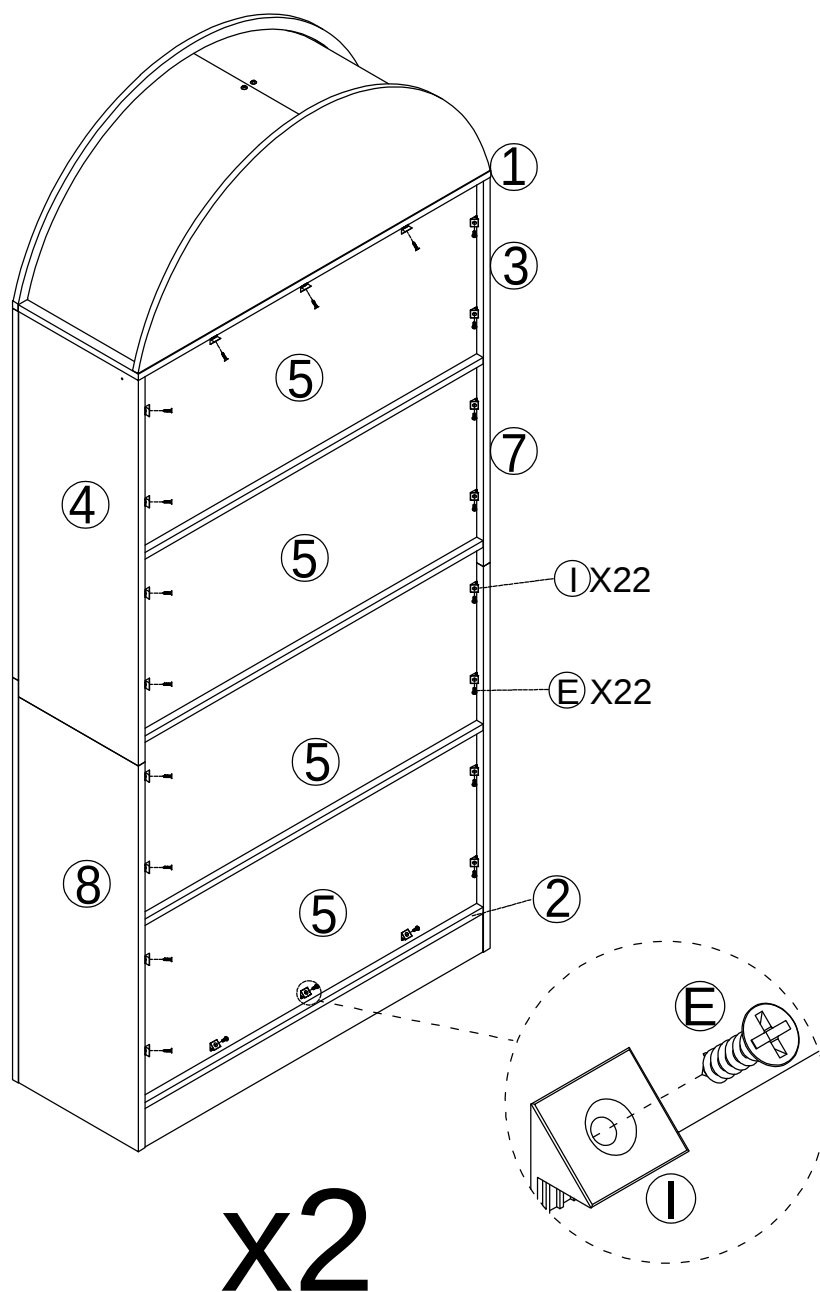

 3*16mm Screw x 44	 Back panel buckle x 44
--	---

Assembly Instructions

Step 26

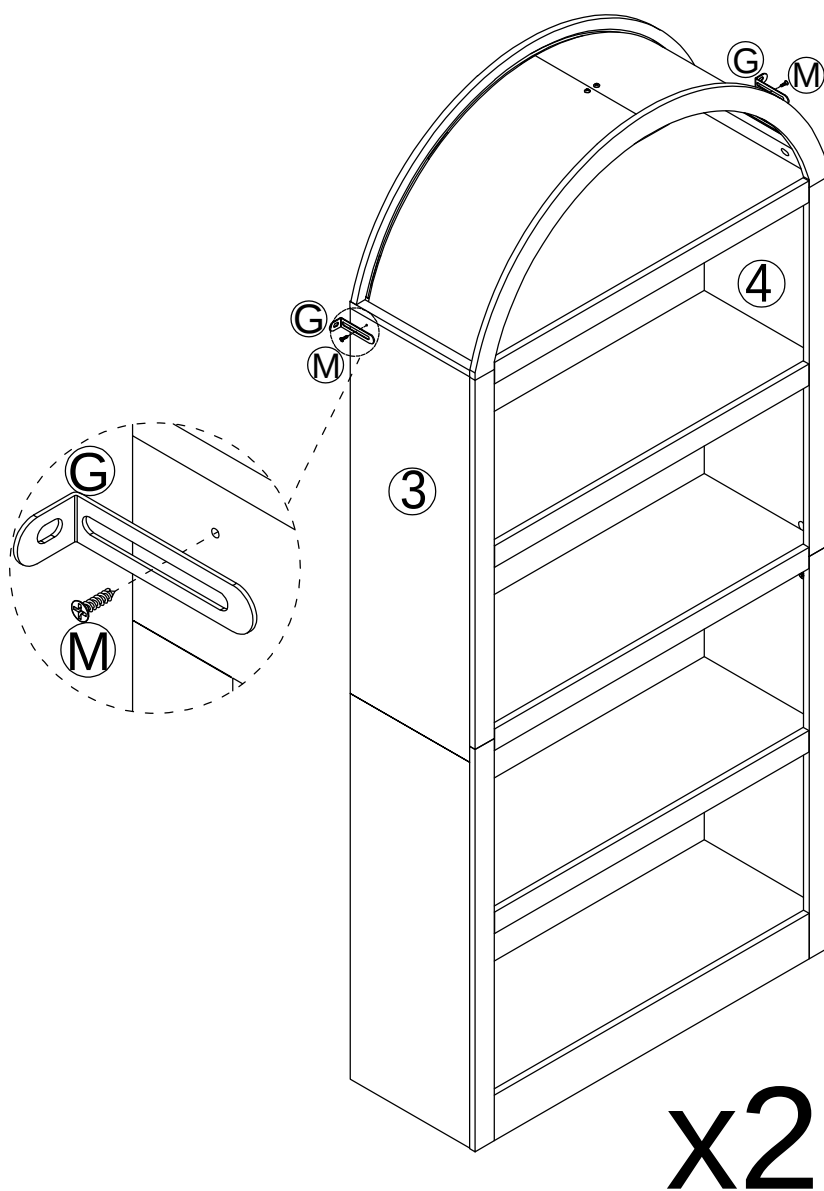


(M)



3.5*12mm Screw x 4


(G)




Anti-tilt Angle iron x 4

Assembly Instructions

Step 27

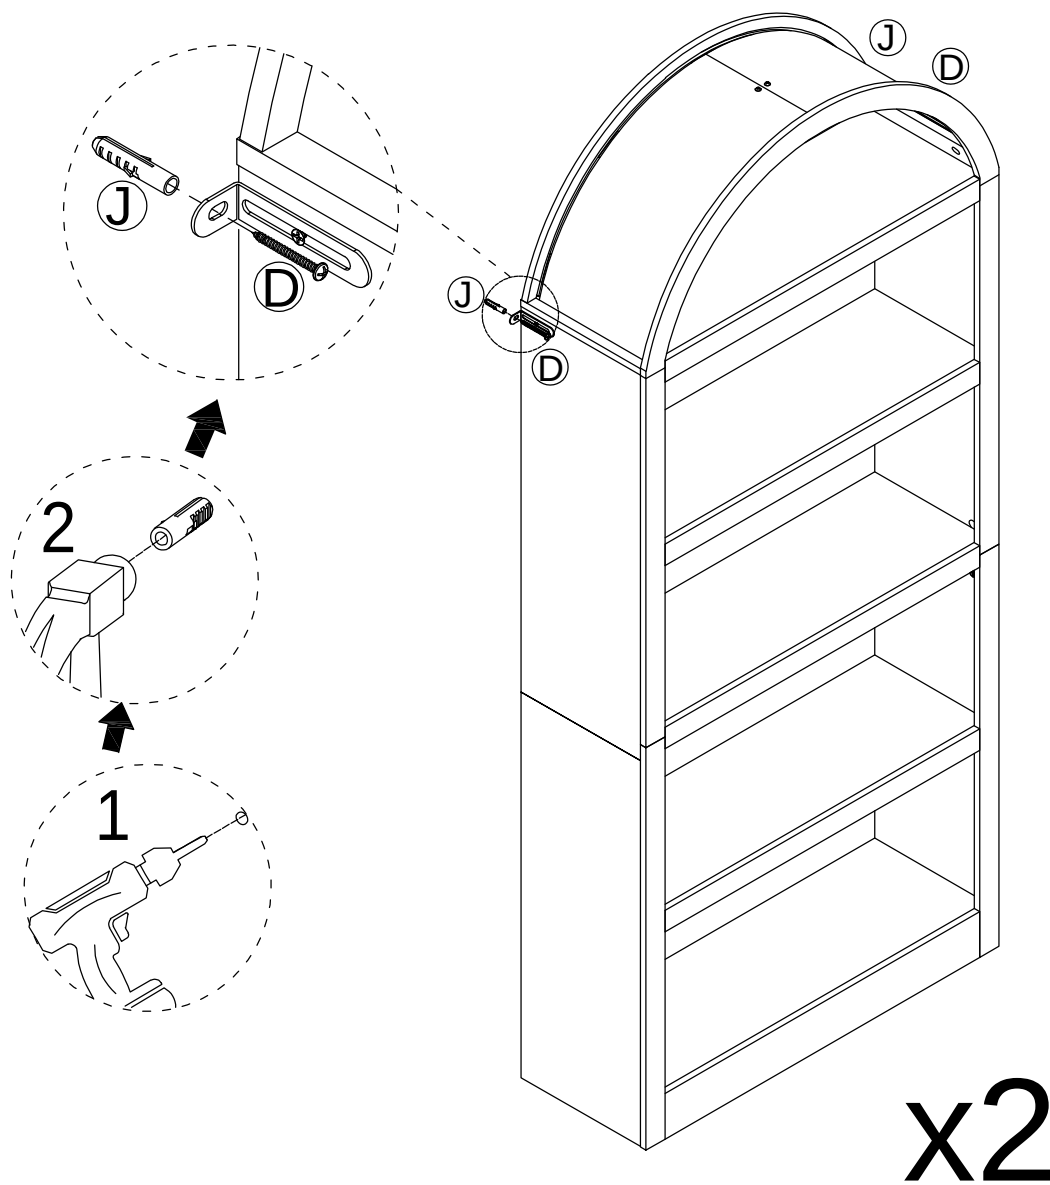


D



4*35mm Screw x 4

J



Plastic expansion bolt x 4

Assembly Instructions

Step 28

