

INSTALLATION MANUAL



Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.



Before You Start



-  Please read all instructions carefully.
-  Retain instructions for future reference.
-  Separate and count all parts and hardware.
-  Read through each step carefully and follow the proper order.
-  We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
-  Always place the product on a flat, steady and stable surface.
-  Keep all small parts and packaging materials for this product away from babies and children as they potentially pose a serious choking hazard.

Assembly Instructions

We have designed our furniture with you, the customer in mind. Our clear, easy to follow step by step instructions will guide you through the project from start to finish. Feel confident that this will be a fun and rewarding project. The final product will be a quality piece of furniture that will go together smoothly and give years of enjoyment.





Please do not return to the store
Broken or missing Hardware?
Need help with Assembly?

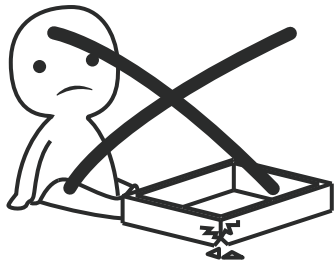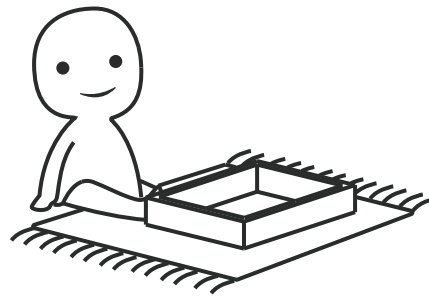

AVOID SCRATCHES!

In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

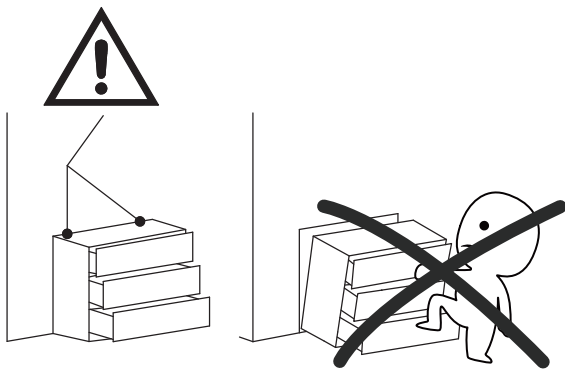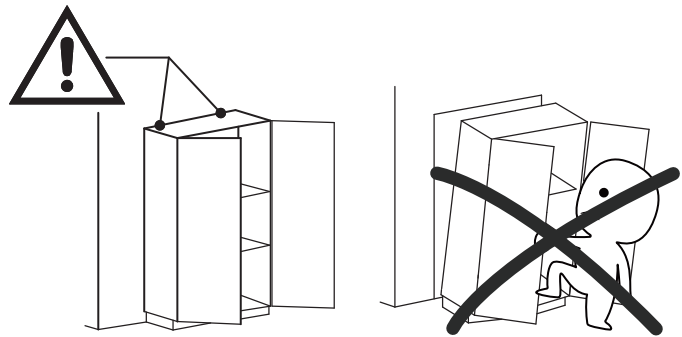

ANTI-TOPPLE WARNING !

Overtured furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.


IMPORTANT !

It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.


For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.














Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.







Completed Assembly

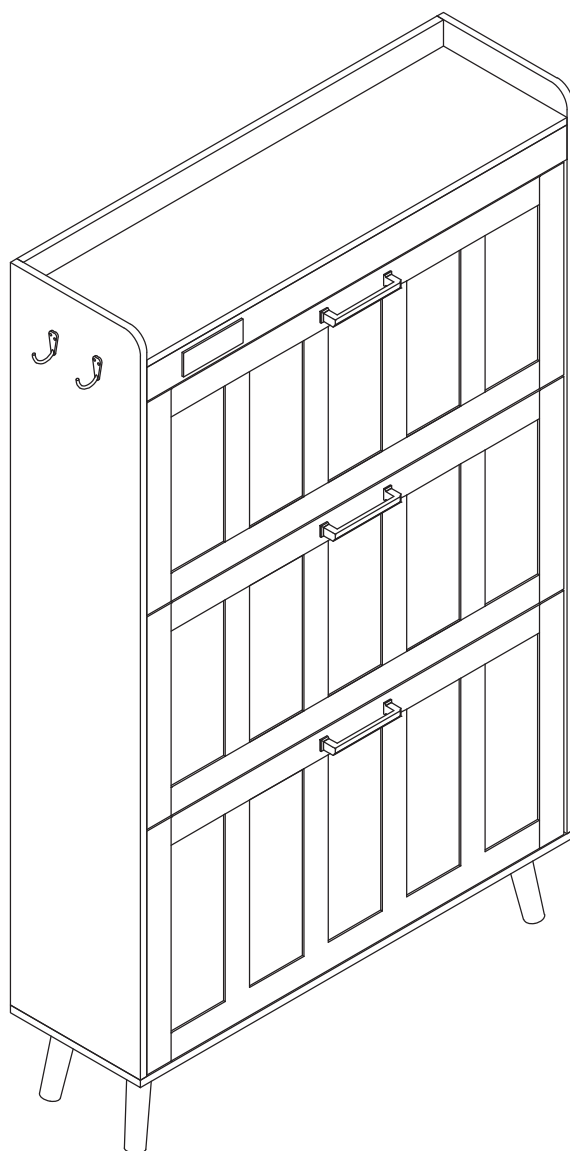

Parts Description

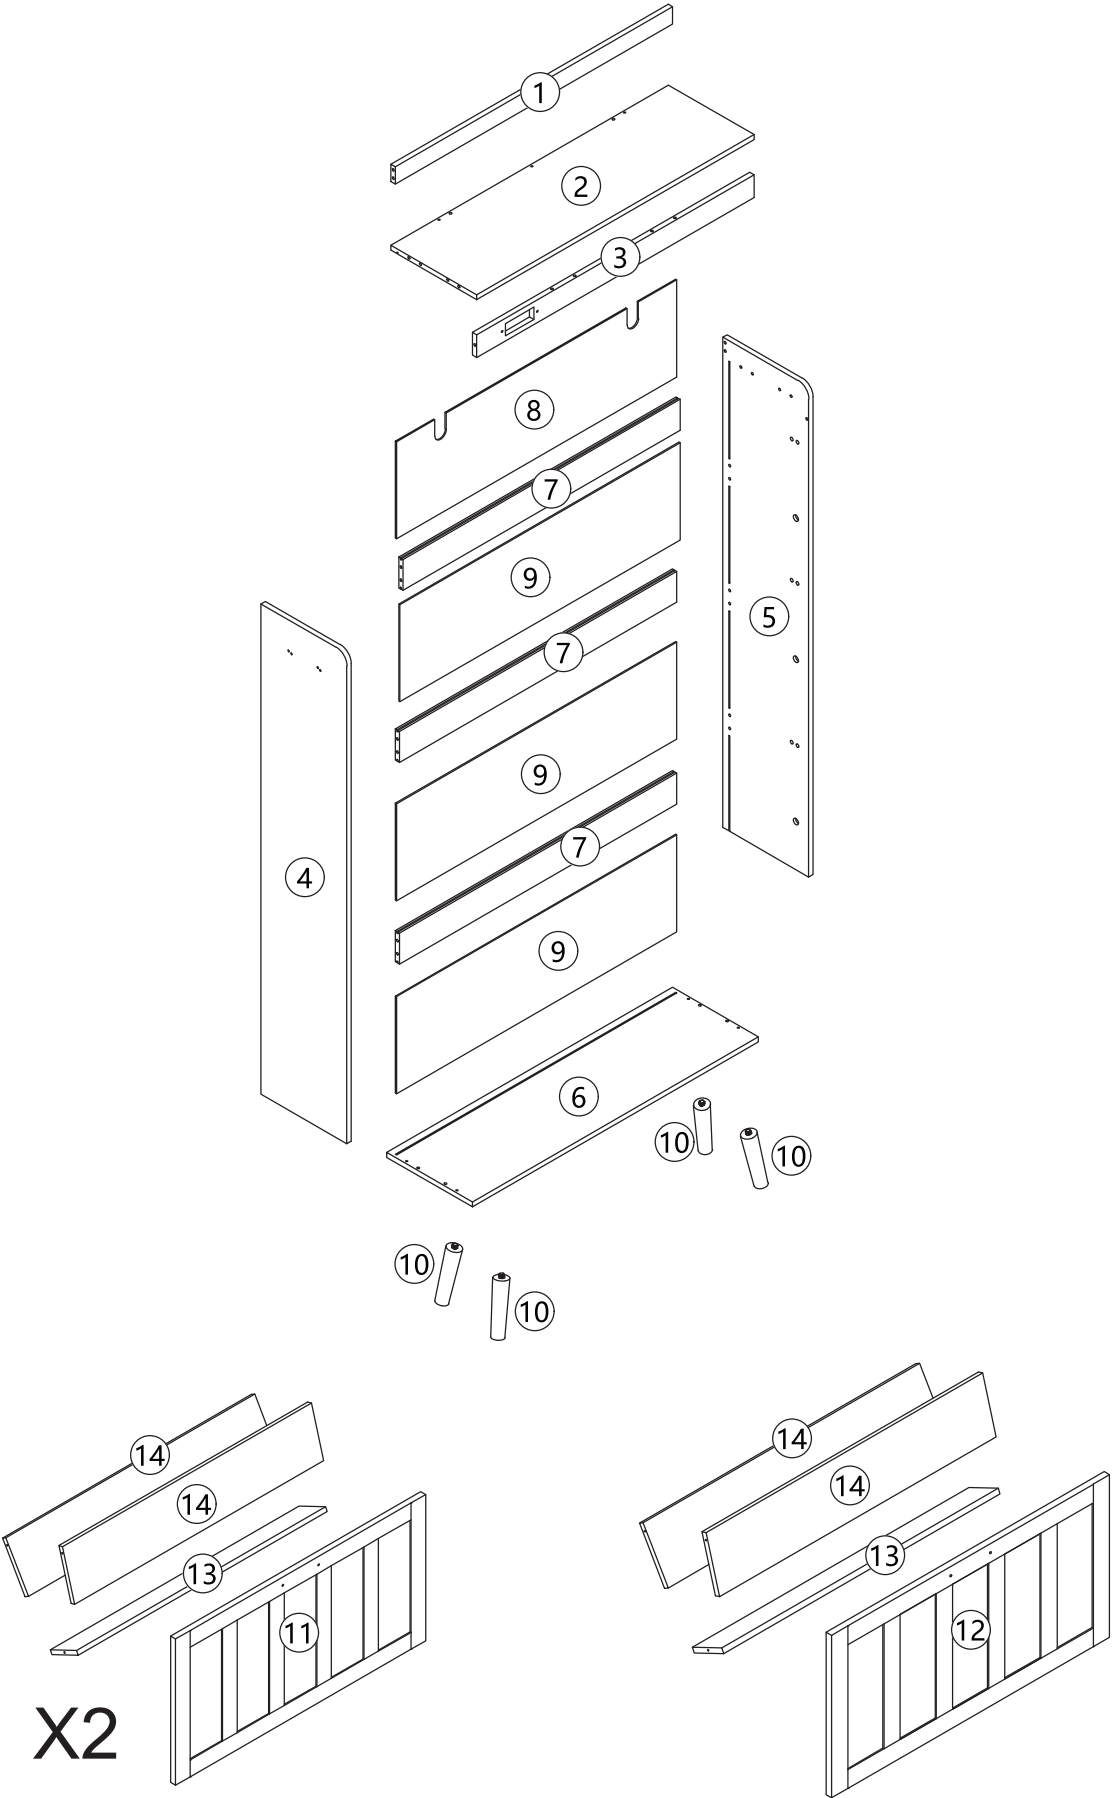
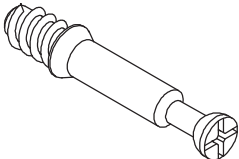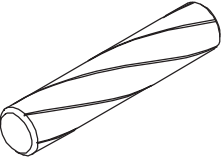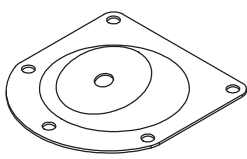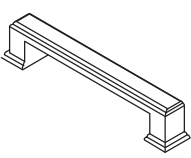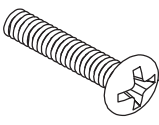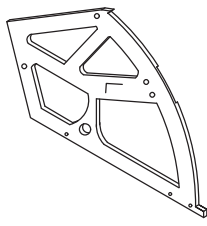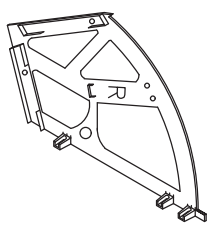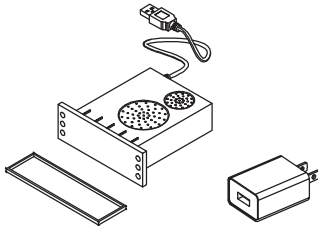
<p>A</p>  <p>Cam Bolt x22+2</p>	<p>B</p>  <p>Cam Lock x22+2</p>	<p>C</p>  <p>Wooden Dowel Ø6x30mm x14+1</p>
<p>D</p>  <p>Screw Ø4x35mm x7</p>	<p>E</p>  <p>Screw Ø3x12mm x8</p>	<p>F</p>  <p>Screw Ø4x14mm x36+2</p>
<p>G</p>  <p>Plastic hinge pin x6</p>	<p>H</p>  <p>Plastic hinge pin&Screw x6</p> <p>Ø4x10mm</p>	<p>I</p>  <p>Semi-circular metal plate x4</p>
<p>J</p>  <p>Screw Ø4x12mm x20</p>	<p>K</p>  <p>Handle x3</p>	<p>L</p>  <p>Screw Ø4x20mm x6</p>
<p>M</p>  <p>Shoe rack panel x3</p>	<p>N</p>  <p>Shoe rack panel x3</p>	<p>O</p>  <p>Deodorizer x1</p>
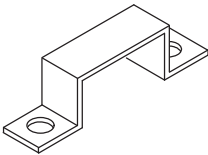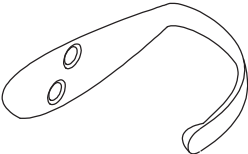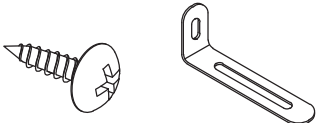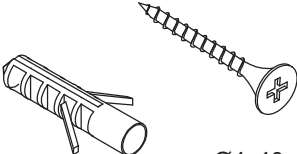
<div>P</div> <div></div> <div>Wire clip</div> <div>x1</div>	<div>Q</div> <div></div> <div>Hook</div> <div>x2</div>	<div>R</div> <div> Ø4x12mm</div> <div>Anti-tip kit</div> <div>x2</div>
<div>S</div> <div> Ø4x40mm</div> <div>Anti-tip kit</div> <div>x2</div>	<div>T</div> <div> Ø3x14mm</div> <div>Back panel fastener&Screw</div> <div>x16</div>	<div>U</div> <div></div> <div>Felt pad</div> <div>x4</div>



Note: Please do not use any power tools. Use of power tools may cause damage and void manufacture warranty.

Instructions For Fastening Cam Bolt and Cam Lock





CAM BOLT





CAM LOCK

Cam Bolt

Place Cam Bolt on the designated pre-drilled hole on the panel. Use a Phillips Screwdriver to screw in Cam Bolt vertically until shoulder is snug and flushed with panel. Do not over-tighten or under-tighten Cam-bolt. See illustrations below.

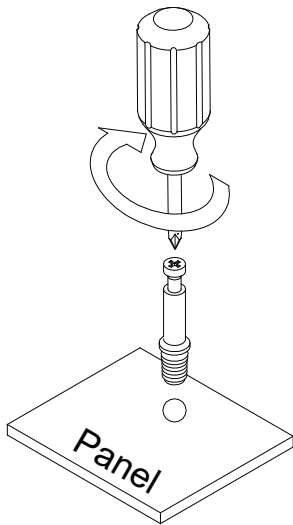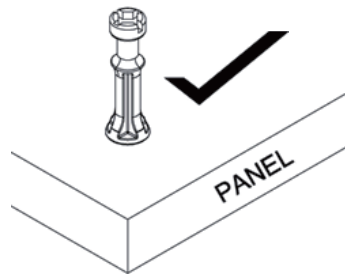



Shoulder is flushed
(on the same level)
with the panel.

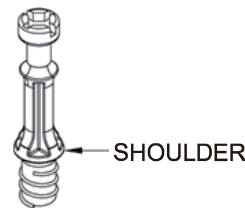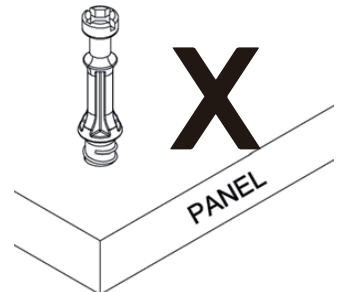

Shoulder is
above the panel.

CAM-LOCK

Align the arrow on the Cam-lock to the
Cam-bolt head and insert the Cam-lock.

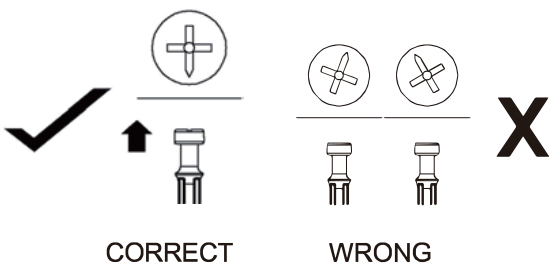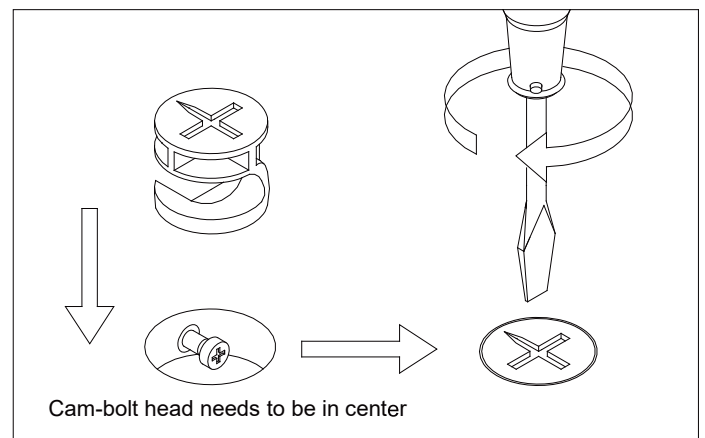

Use a Flat-head Screwdriver to turn Cam Lock clockwise to lock onto the head of the Cam Bolt. Turn until it is snug (about a half turn) – over-tightening could damage Cam Lock and/or Cam Bolt.



Step 1

Hardware Needed

A



X2

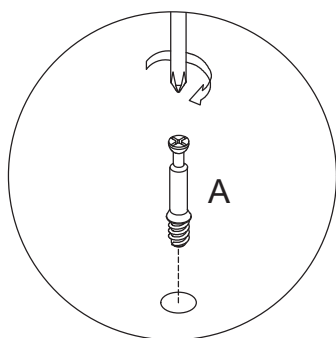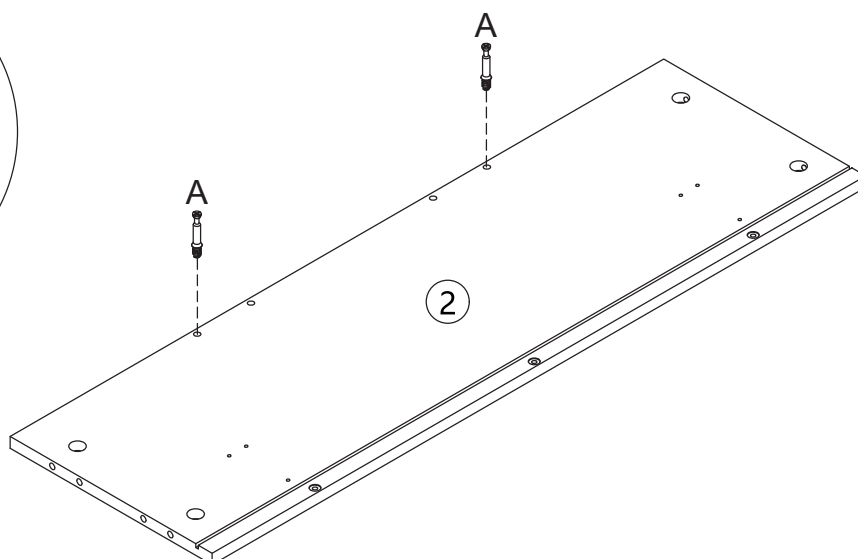

Step 2

Hardware Needed

B





X2



C




X2

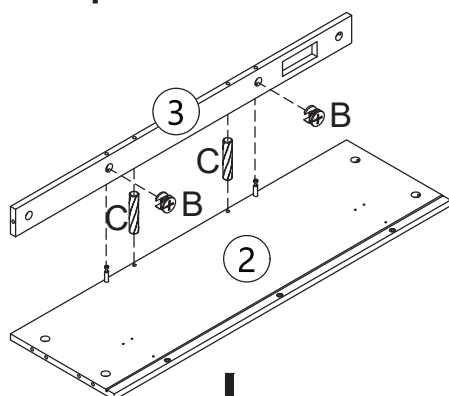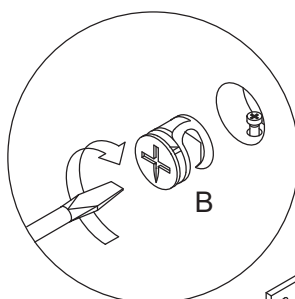

OR

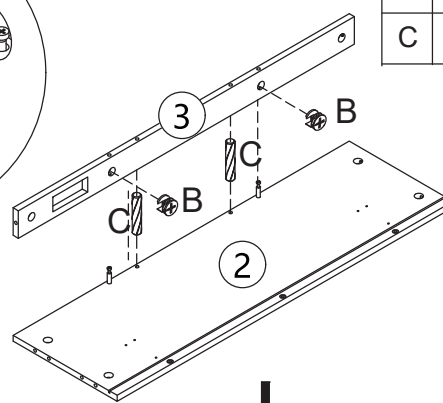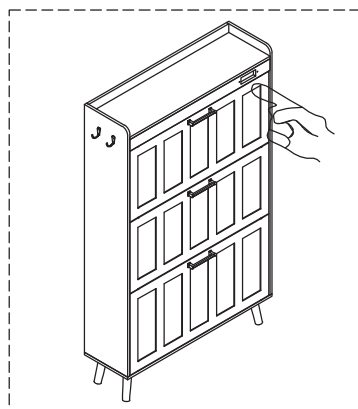


Tips:
According to your
needs, the deodorizer
can be installed in
different locations

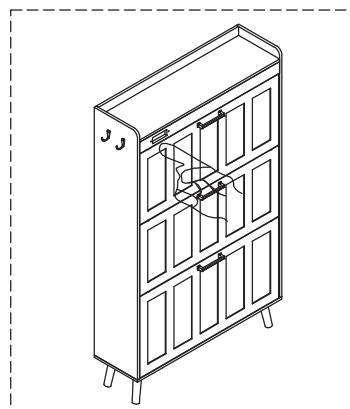


Step 3

Hardware Needed		
C		X2
D		X3

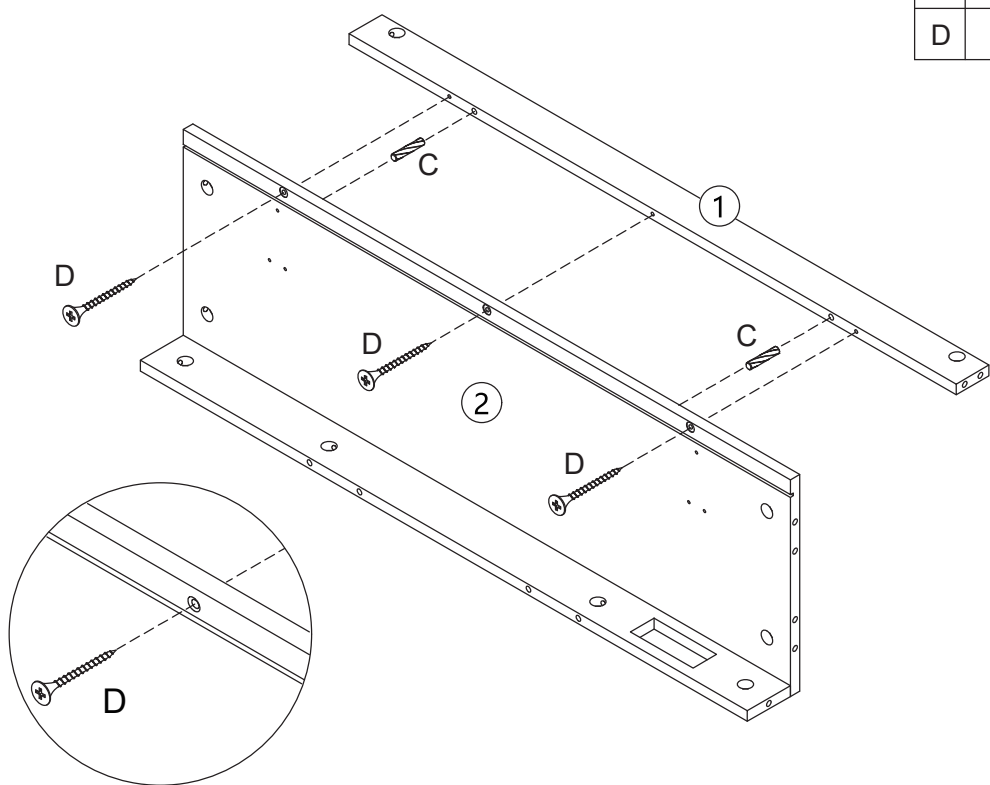


Step 4

Hardware Needed		
A		X20
G		X6

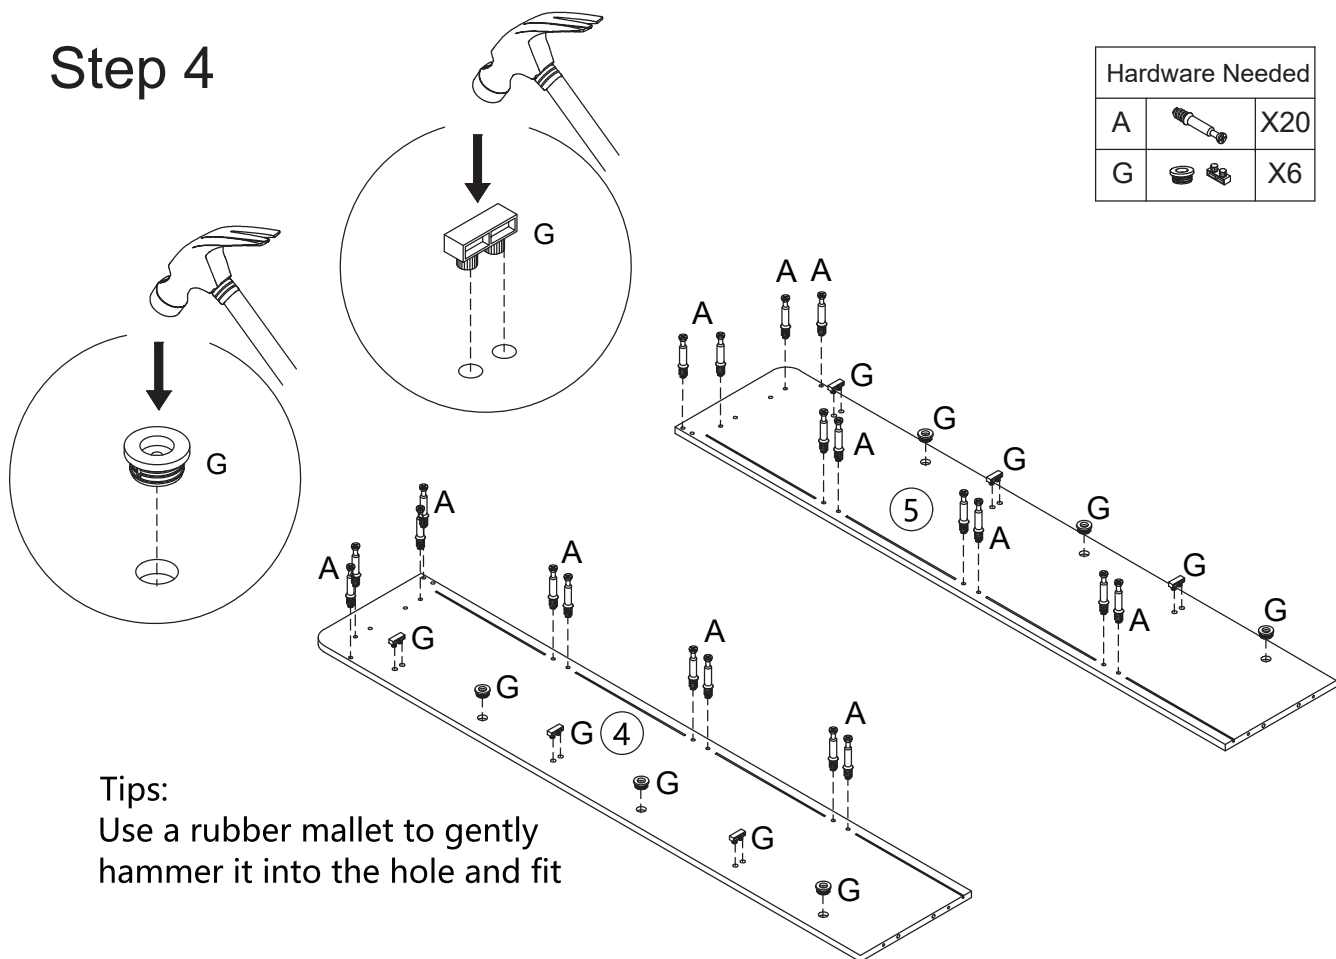


Tips:
Use a rubber mallet to gently
hammer it into the hole and fit

Step 5

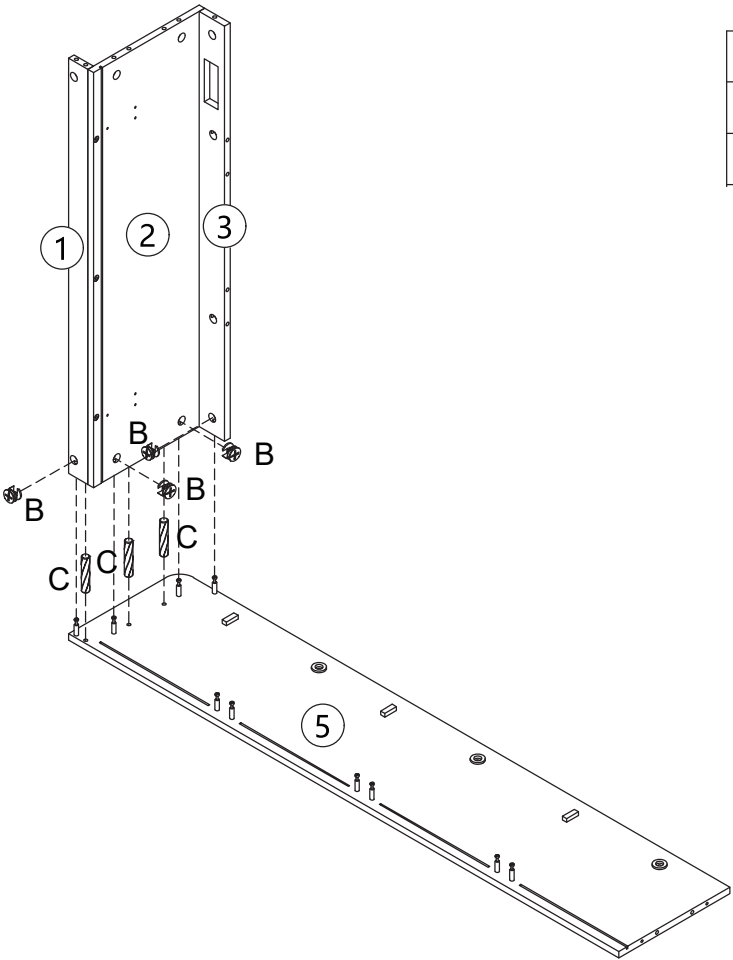


Hardware Needed		
B		X4
C		X3

Step 6

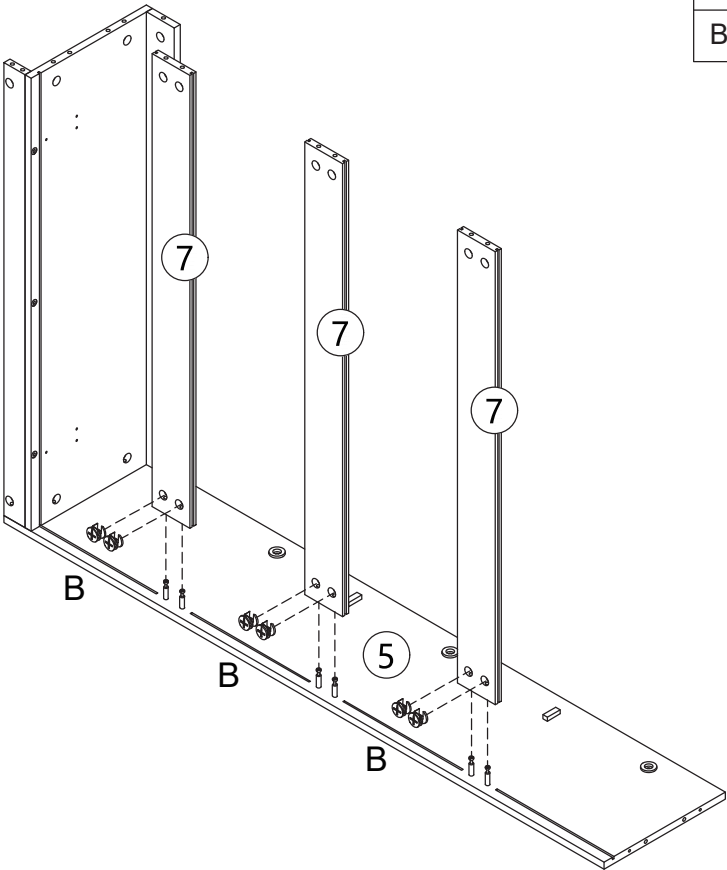


Hardware Needed		
B		X6

Step 7

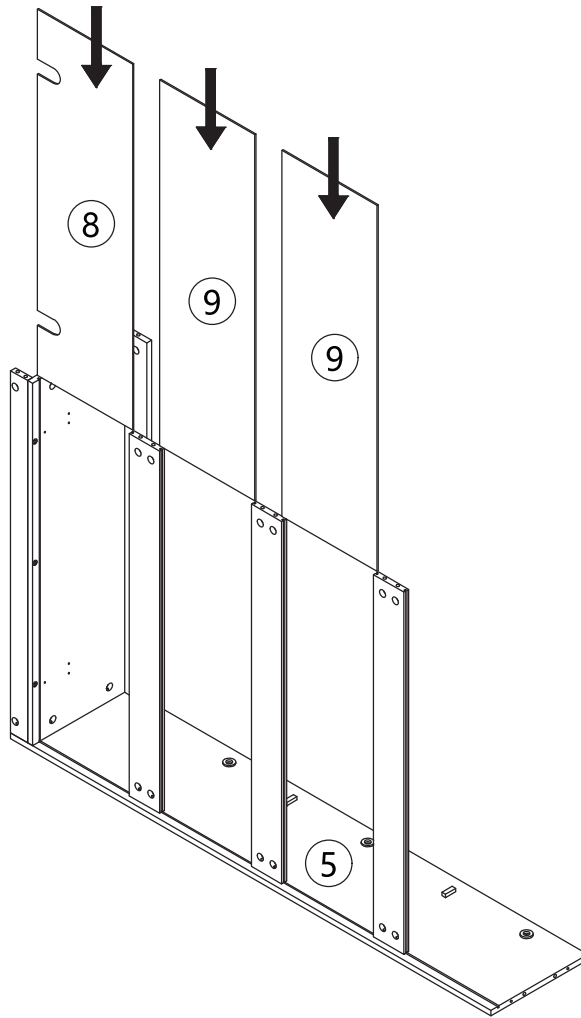


Step 8

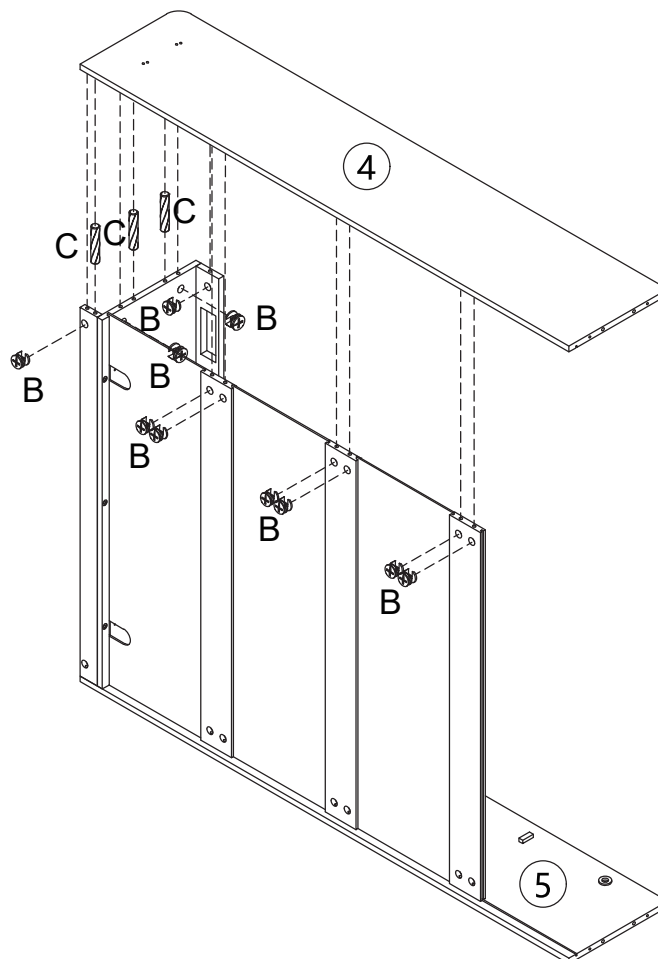


Hardware Needed		
B		X10
C		X3

Step 9

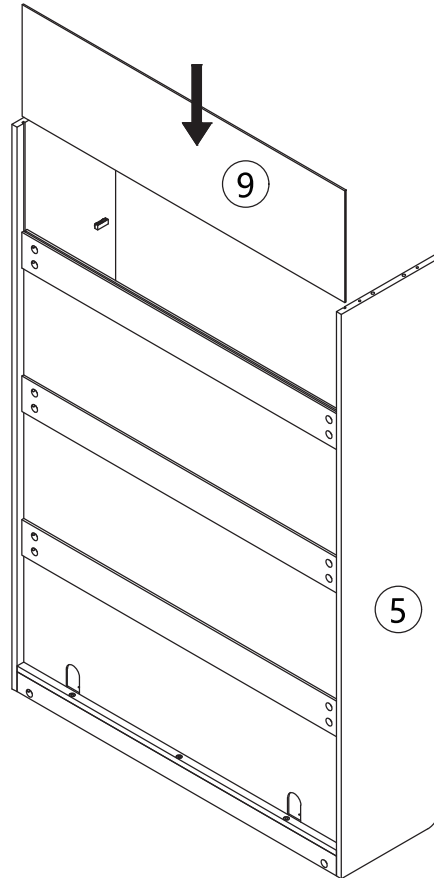


Step 10

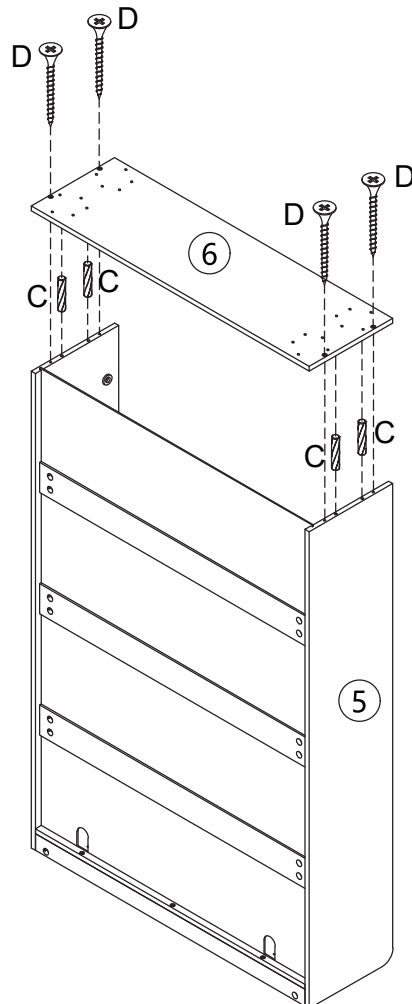


Hardware Needed		
C		X4
D		X4

Step 11


Hardware Needed		
I		X4
J		X20

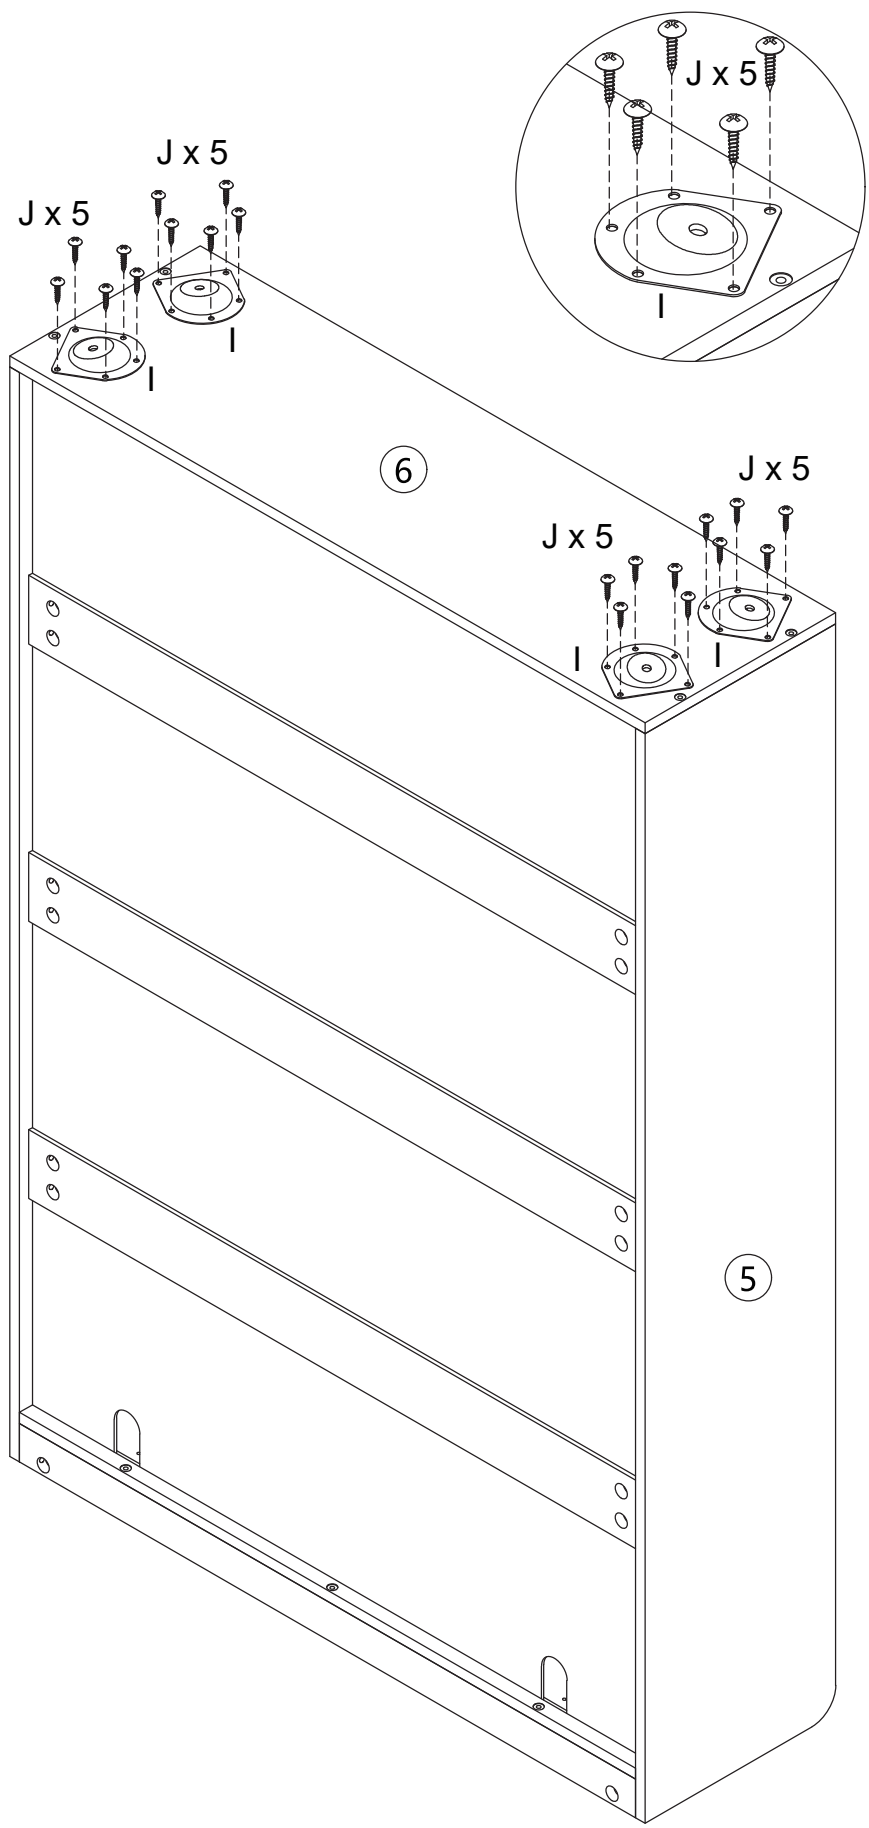

Step 12

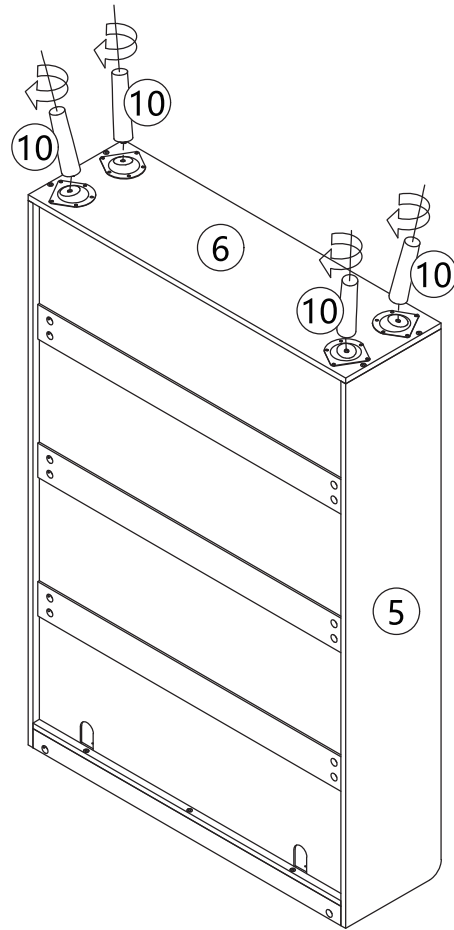


Step 13

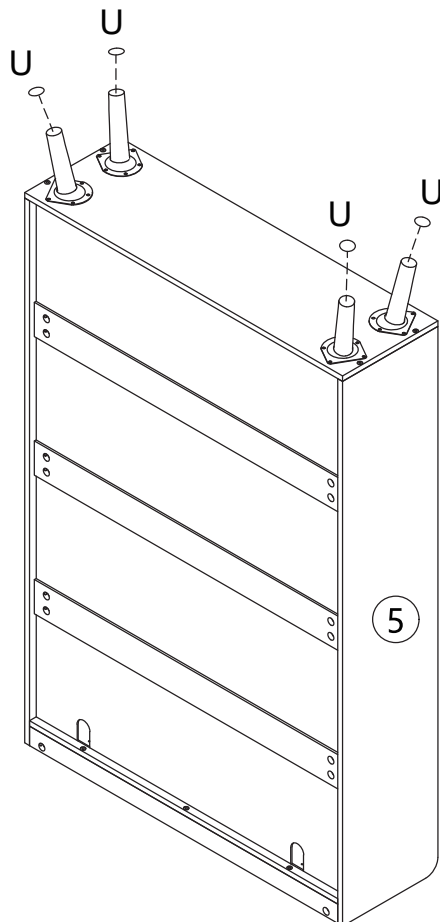


Hardware Needed		
U		X4

Step 14


Installation step Details

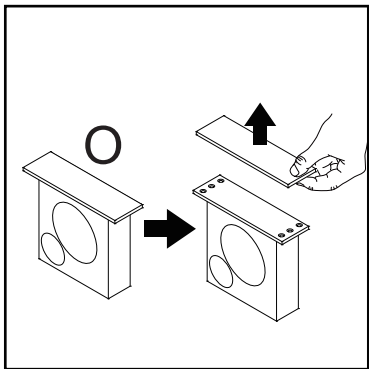


①

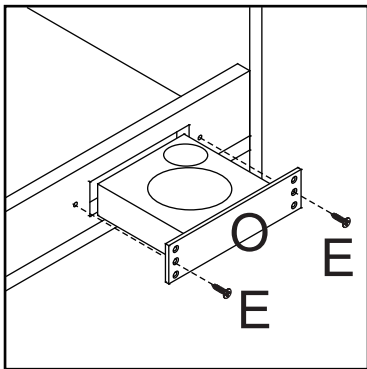


②

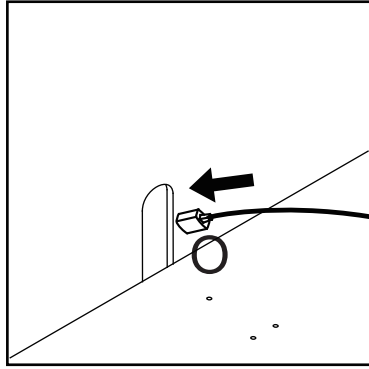


③

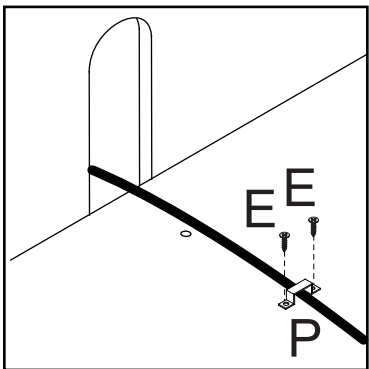


④

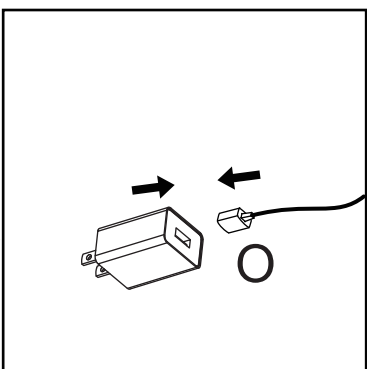

⑤

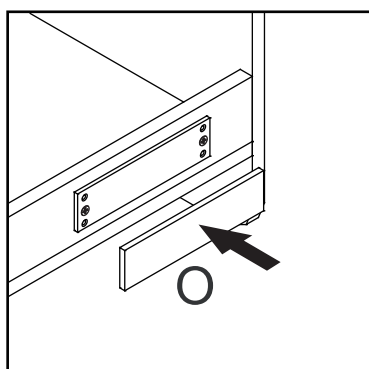

⑥

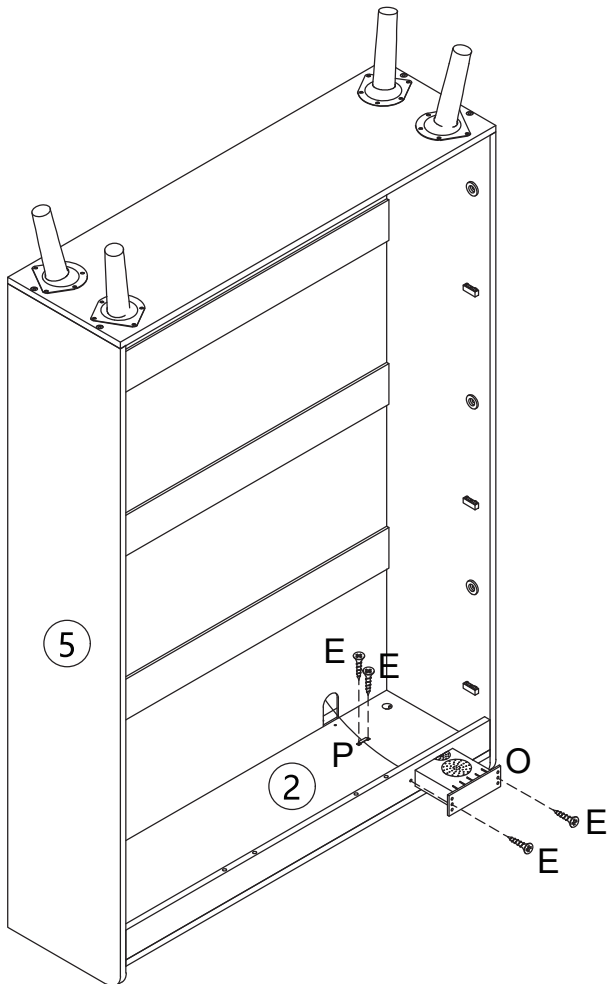

Hardware Needed		
E		X4
O		X1
P		X1


Step 15

Hardware Needed


R




X2

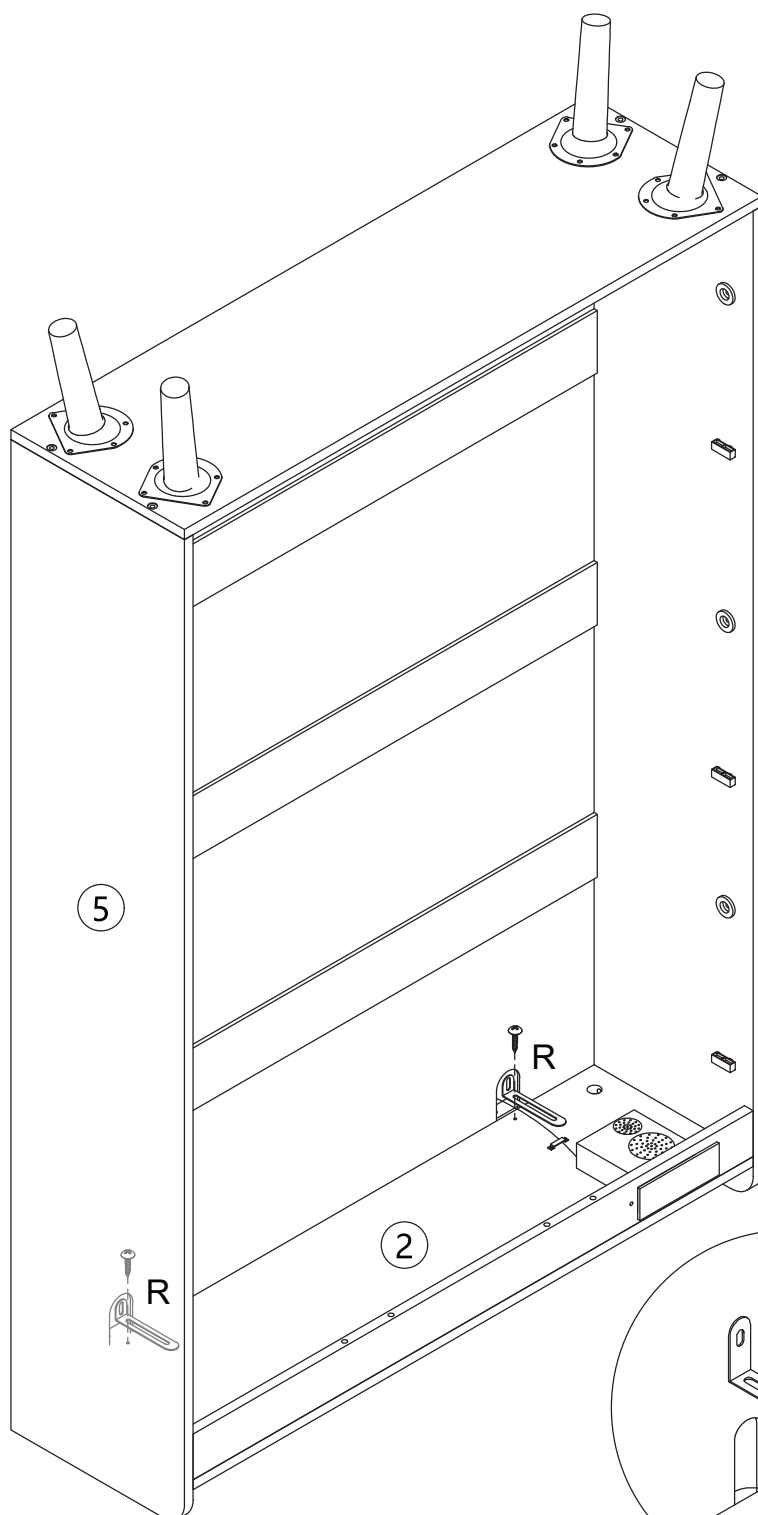


Tips:
When installing the R
component, avoid the
lines of the deodorizer.

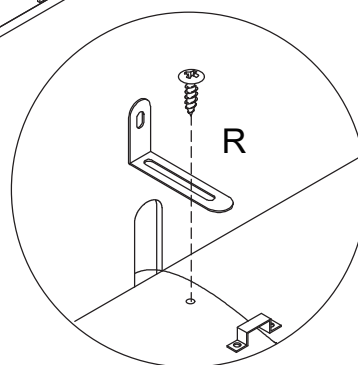


Step 16

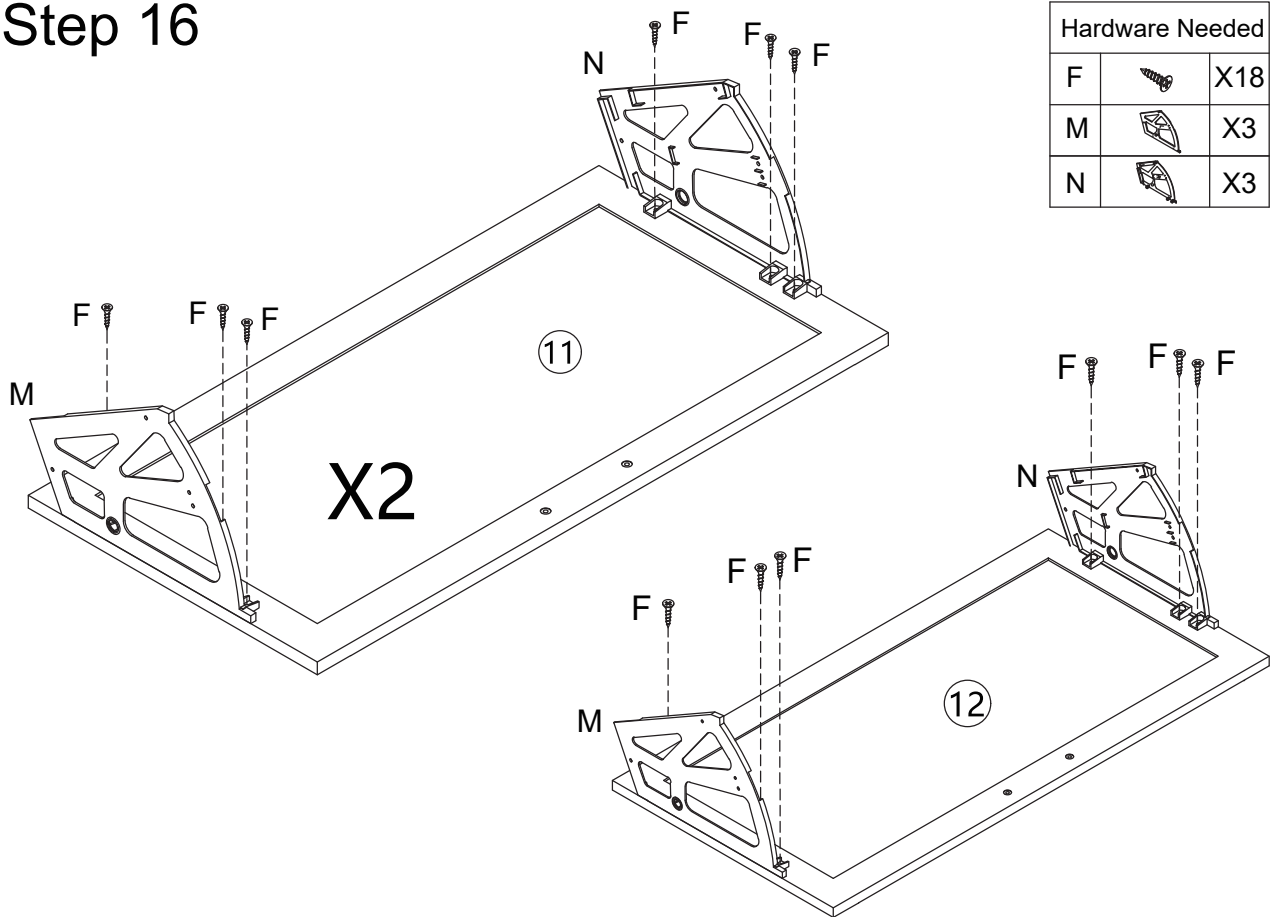

Step 17


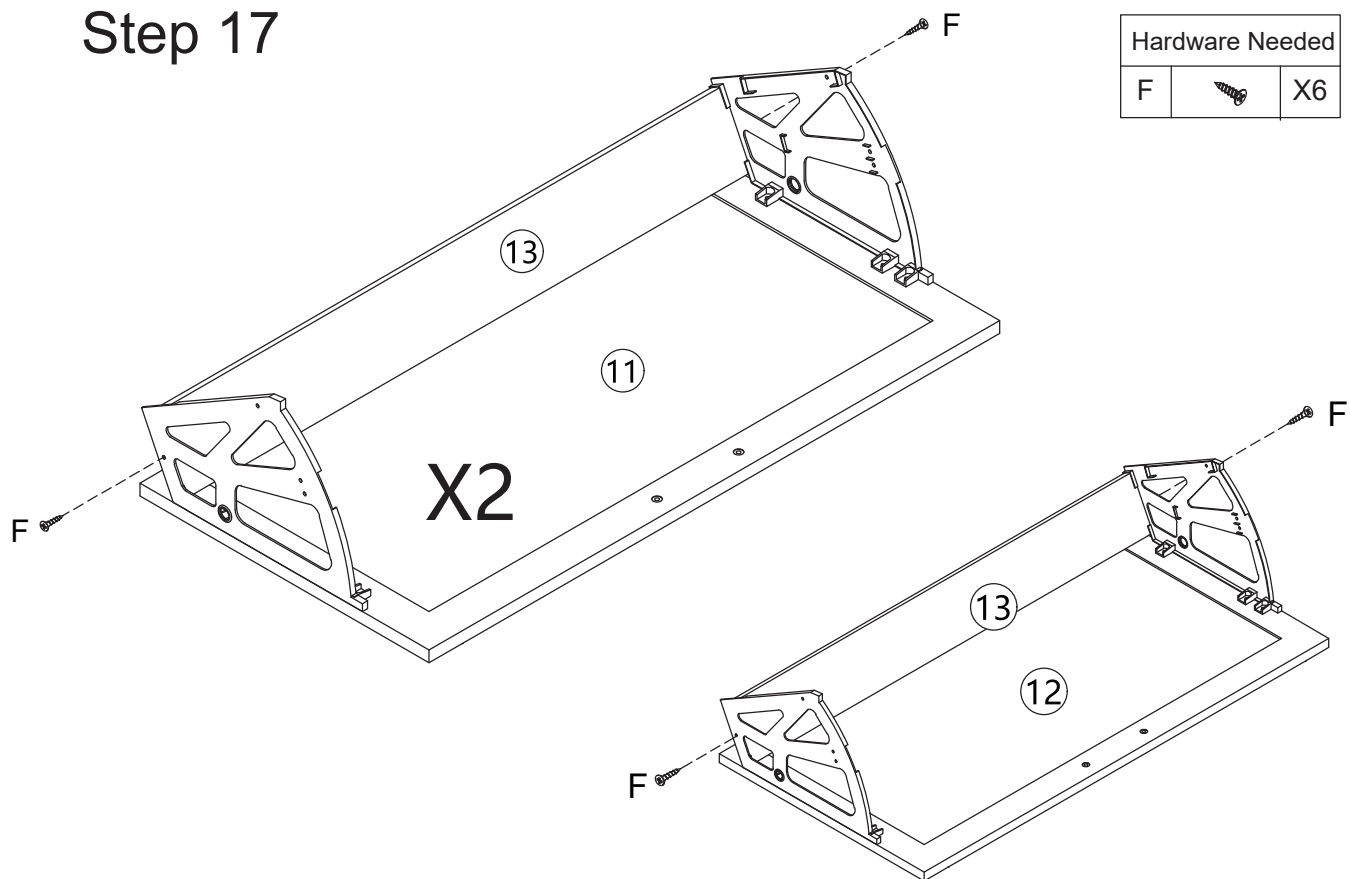


Step 18

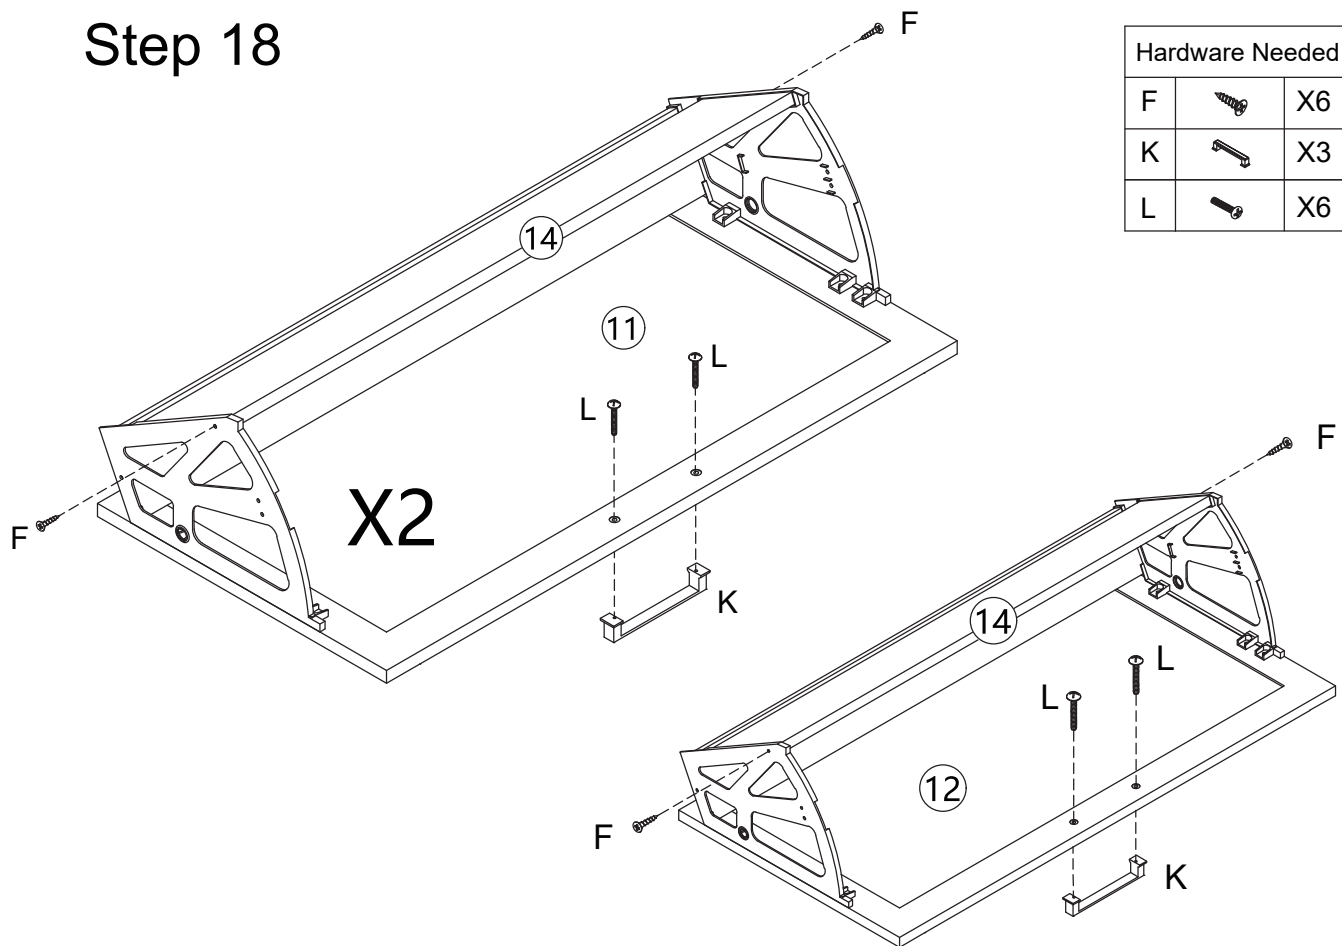


Step 19

Tips:
Two persons are
required to perform
this step

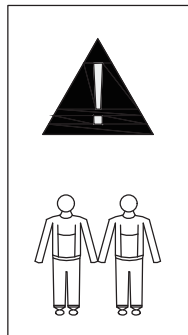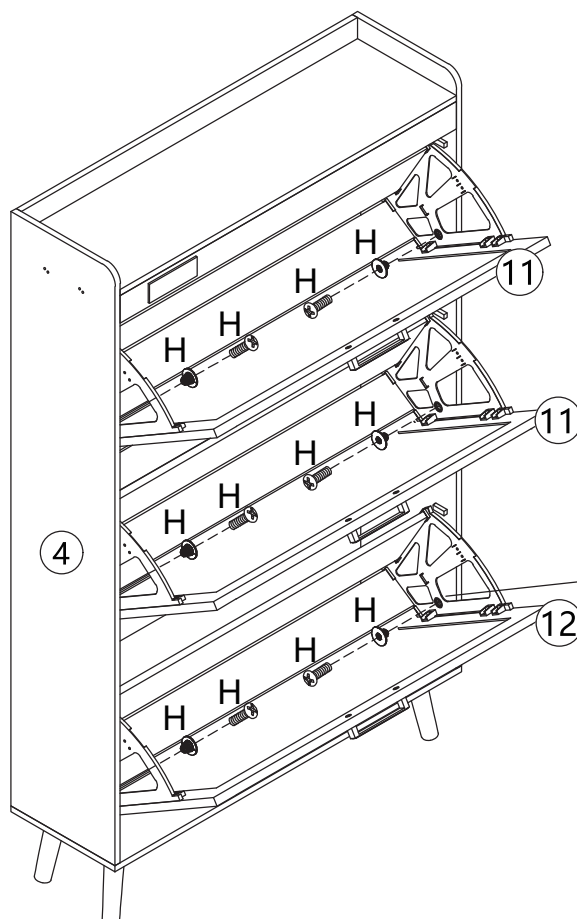


After aligning the holes,
first insert plastic cap H,
then secure it with screw H.

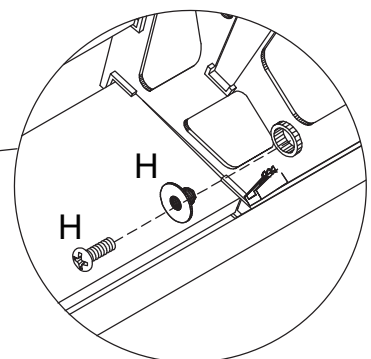

Hardware Needed		
H		X6

Step 20

Hardware Needed			
T			X16

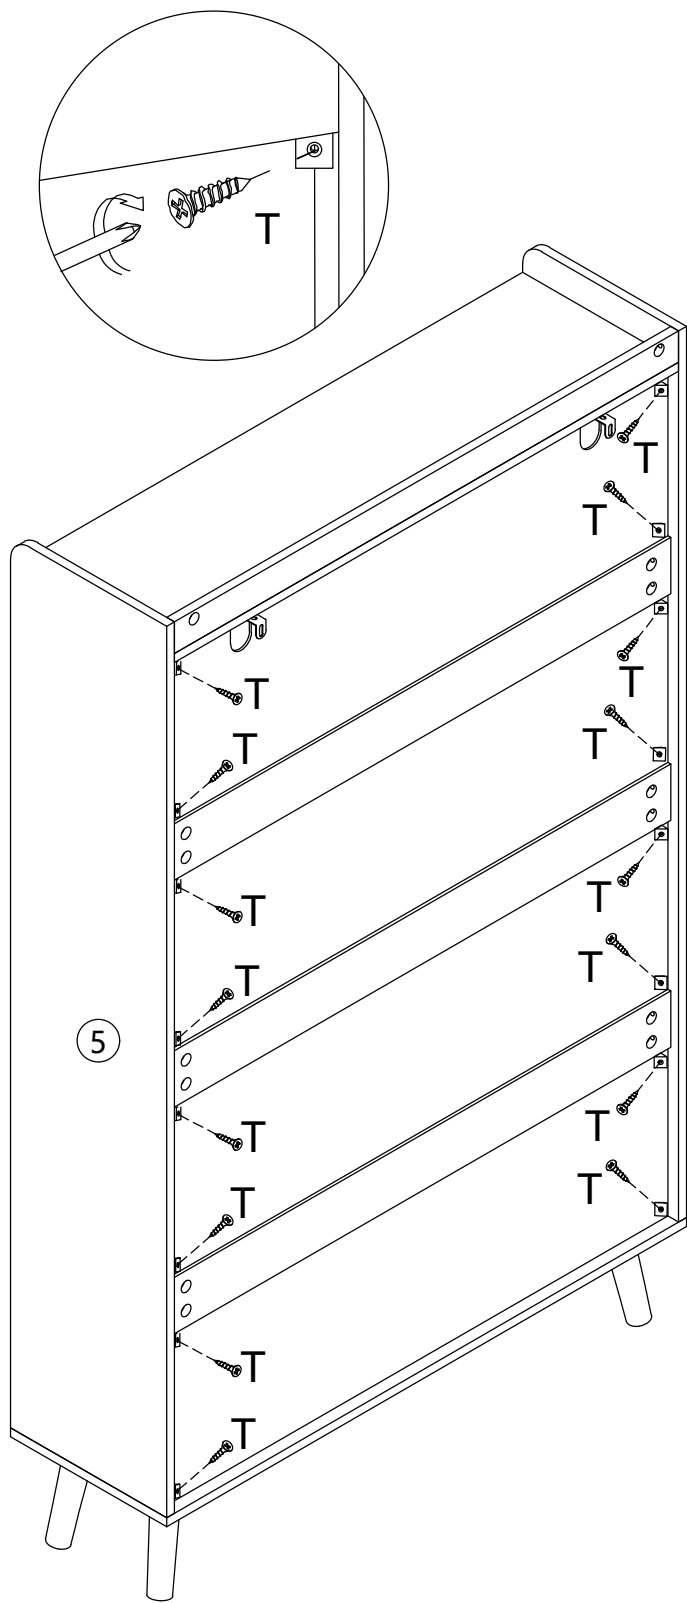


Step 21

Hardware Needed		
S		X2

Tips:

Because it is a narrow cabinet, we strongly recommend that it be fixed to the wall with an anti-toppling device to prevent the shoe cabinet from tipping over. It will be very stable and safe when locked on the wall.

1. Mark the drill position on the wall with a pencil.
2. Drill holes on the marked position using a bit.
Gently insert the wall anchor (S) into the drilled hole with the help of a hammer
3. Fixed the cabinet to the wall with provided screws (S)

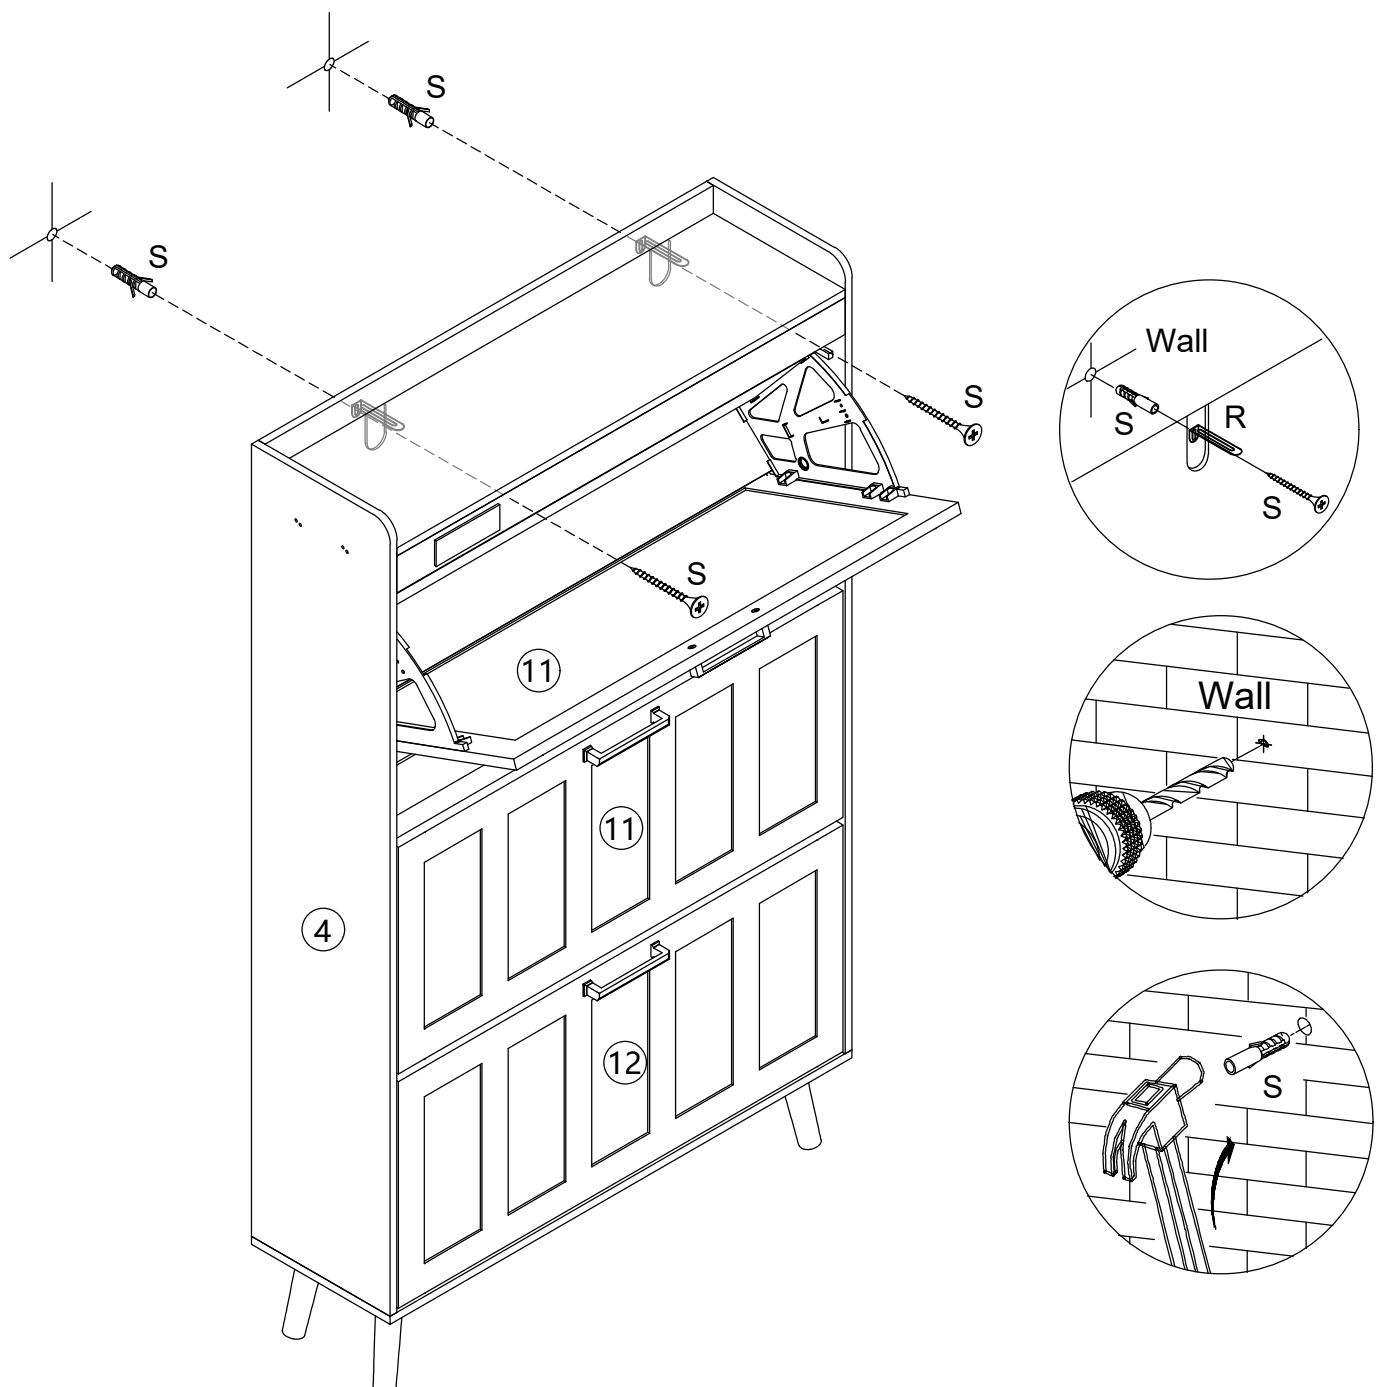


Step 22

Hardware Needed		
F		X6



Tips:

Adjust board 14 to the right position according to your needs and then lock the F.

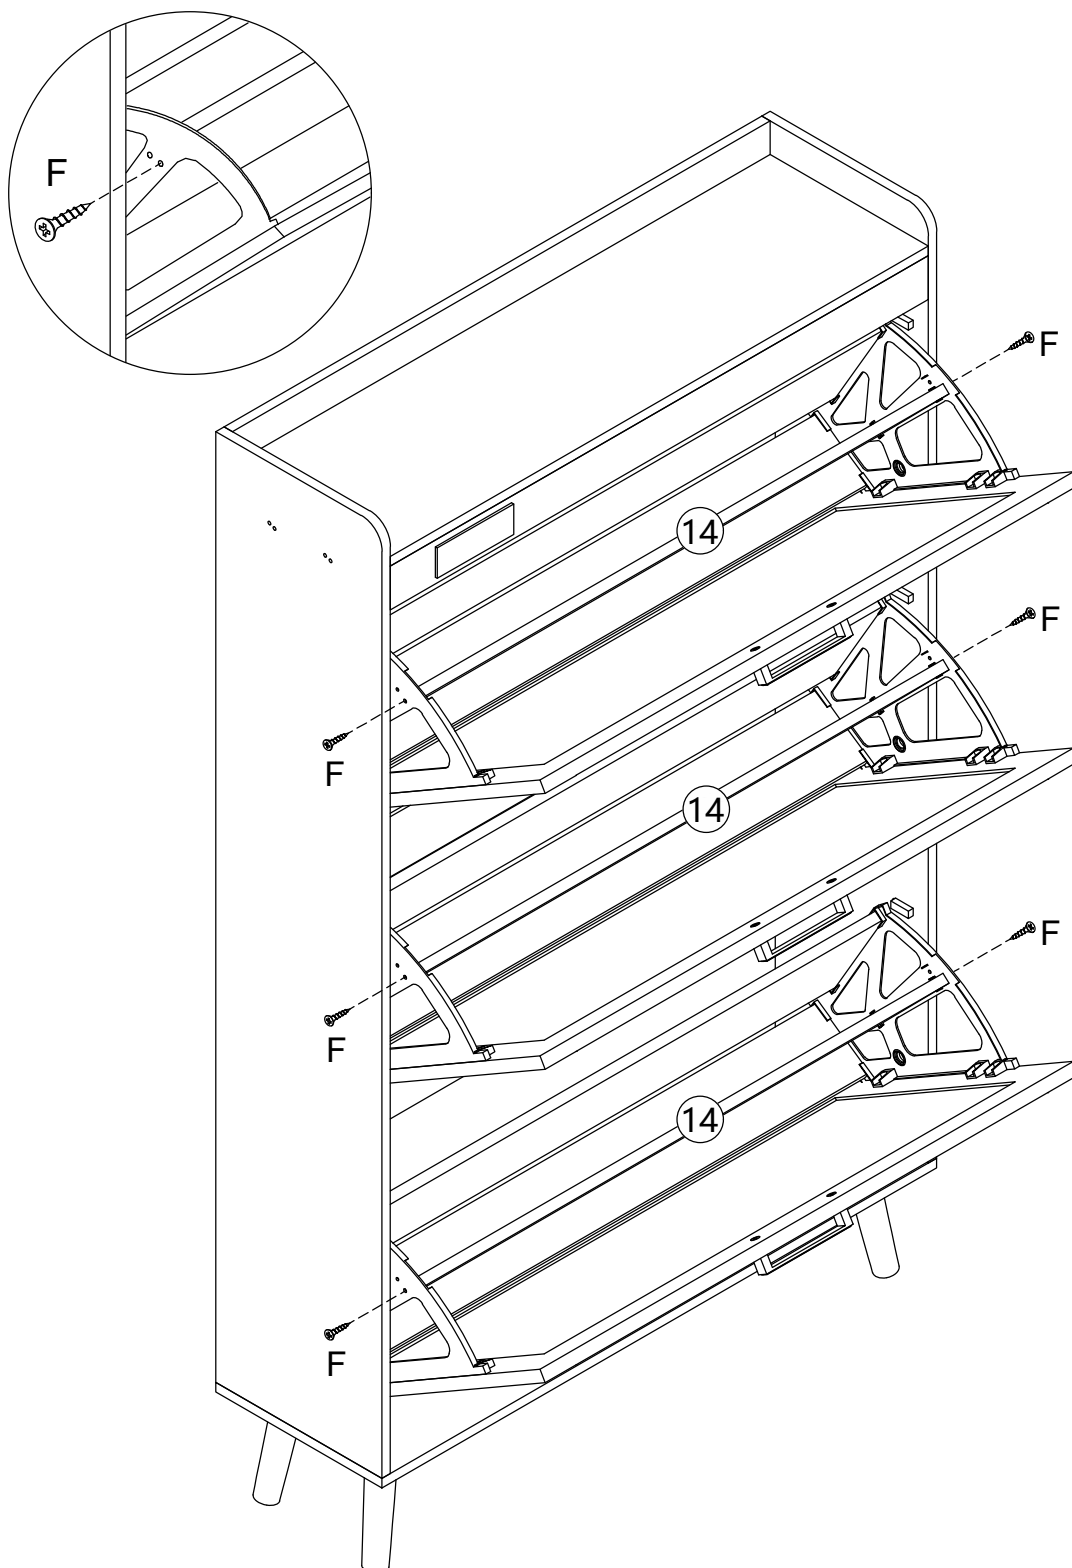

Step 23

Hardware Needed		
E		X4
Q		X2

