



# ASSEMBLY INSTRUCTIONS

















## TWIN BED WITH 2 DRAWERS

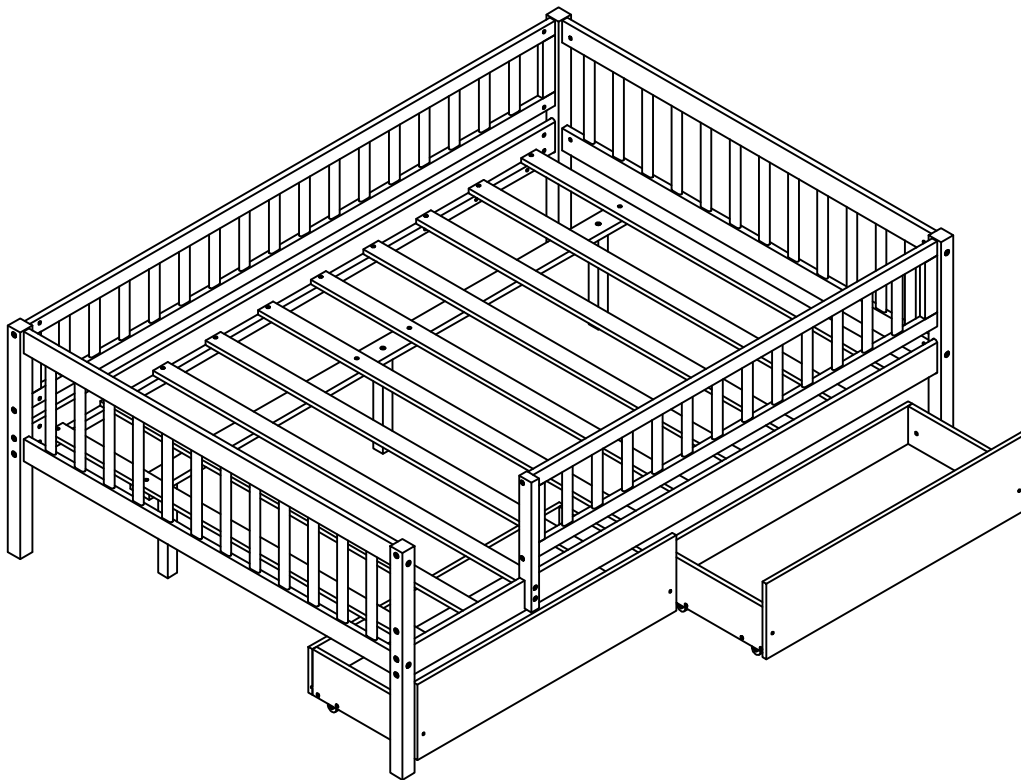



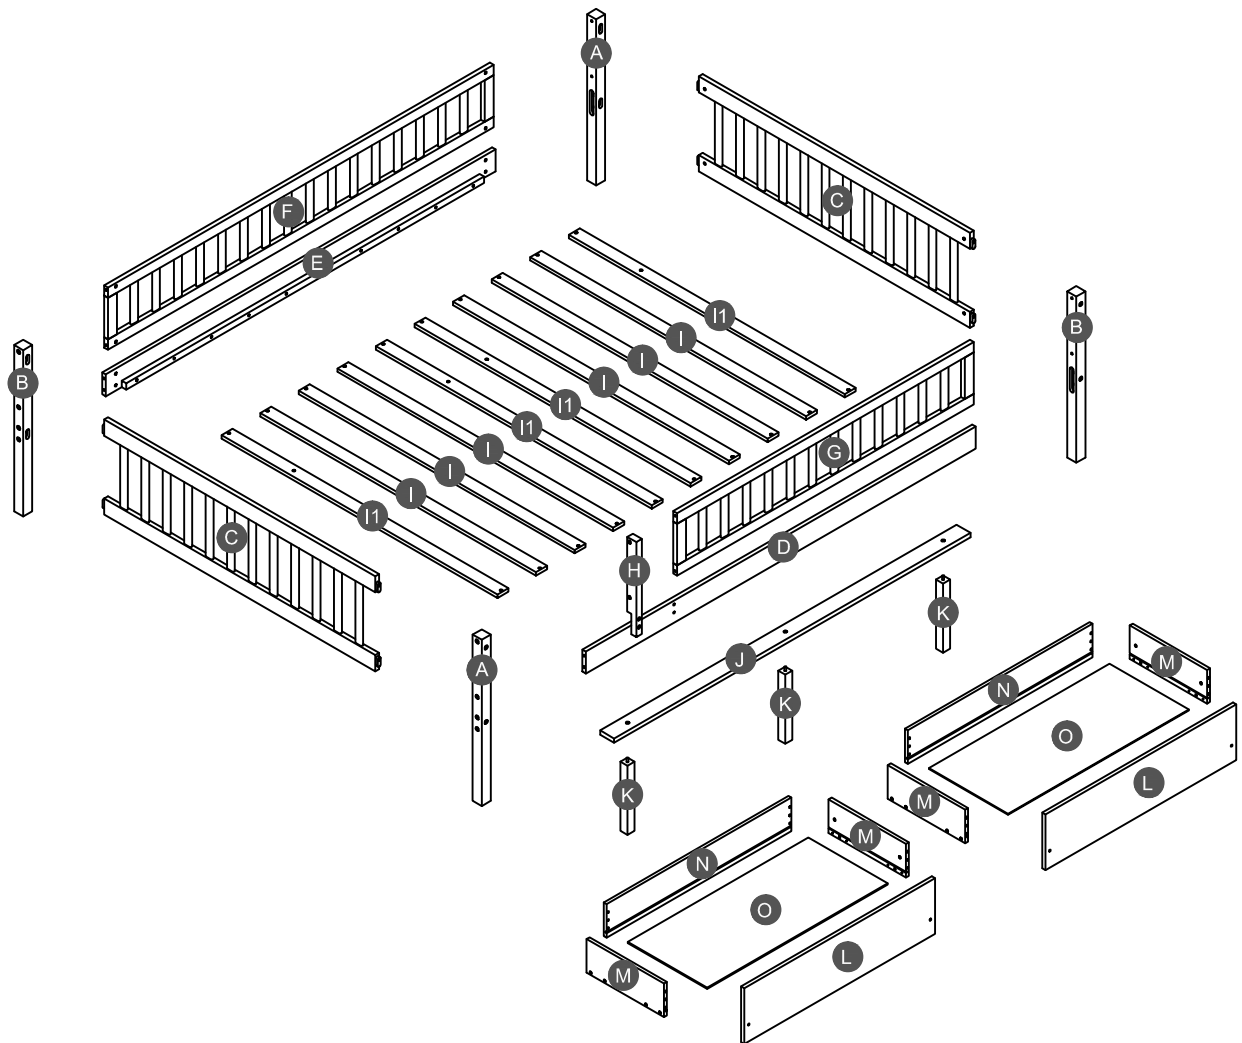








## Detail View




# Part List

<b>A</b>  Leg (Left Front/Right Back) - 2pcs	<b>B</b>  Leg (Left Back/Right Front) - 2pcs	<b>C</b>  Frame HB/FB - 2pcs
<b>D</b>  Side rail (Front) - 1pc	<b>E</b>  Side rail (Back) - 1pc	<b>F</b>  Long guard rail (Back) - 1pc
<b>G</b>  Short guard rail (Front) - 1pc	<b>H</b>  Support guard rail(Left) - 1pc	<b>I</b>  Slats - 6pcs
<b>I1</b>  Slats - 4pcs	<b>J</b>  Lower support slat - 1pc	<b>K</b>  Leg support - 3pcs
<b>L</b>  Front drawer panel - 2pcs	<b>M</b>  Left / right drawer panel - 4pcs	<b>N</b>  Back drawer panel - 2pcs
<b>O</b>  Drawer bottom - 2pcs		

## Hardware List


<b>1</b>	 (Ø15)1/4"*100mm Hex-Head bolts (14pcs)	<b>2</b>	 (Ø15)1/4"*80mm Hex-Head bolts (10pcs)	<b>3</b>	 (Ø15)1/4"*60mm Hex-Head bolts (8pcs)
<b>4</b>	 (Ø12)1/4"*35mm Hex-Head bolts (2pcs)	<b>5</b>	 1/4"*15 (9.5mm) Horizontal-Hole bolts(32pcs)	<b>6</b>	 Ø4*30mm Wood screws (46pcs)
<b>7</b>	 (1/4")4.5*58mm Allen key (1pc)	<b>8</b>	 100*54*20 mm Wheels (8pcs)	<b>9</b>	 70*35*19 mm Drawer stopper (3pcs)
<b>10</b>	 Ø8*30mm Wood dowel (16pcs)	<b>11</b>	 Ø10*20mm Wood dowel (8pcs)		

### ASSEMBLY TOOLS REQUIRED ( NOT INCLUDED )




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

## STEP 1:

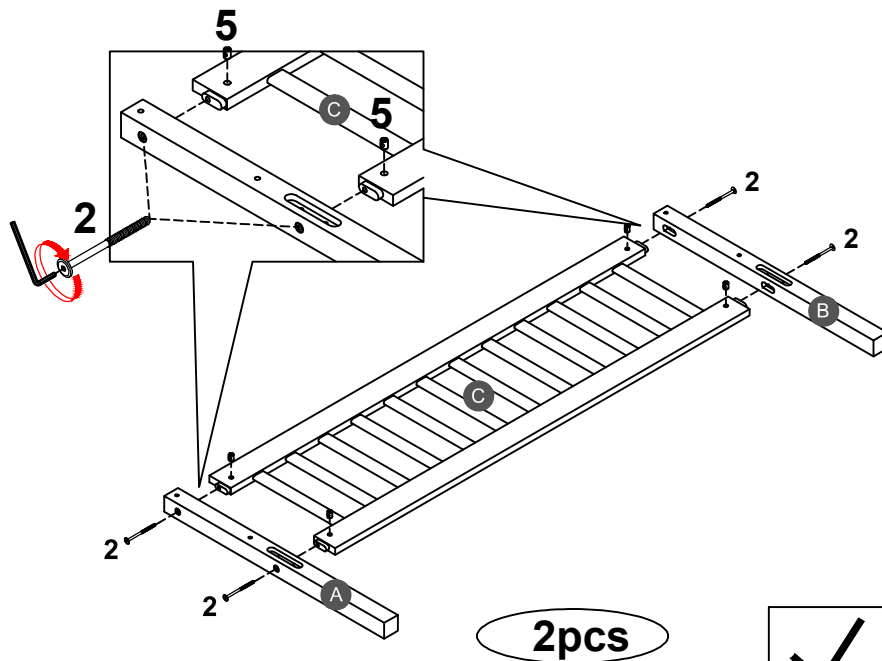


2	
8PCS	
5	
8PCS	

Note: Part 5 will face up with the "x" mark on it, otherwise it cannot be tightened

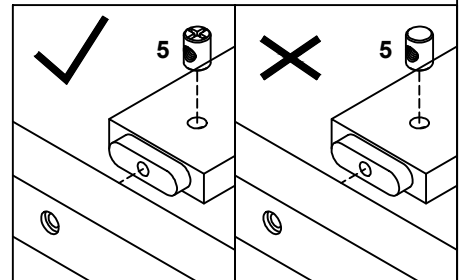


## STEP 2:

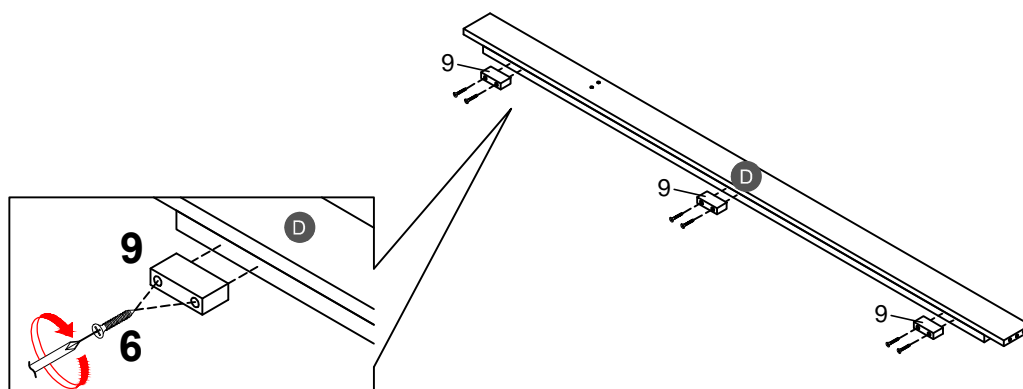


6		9	
6PCS		3PCS	

Drawer stopper (9) with lower side rail front (D) by using screw (6).


### STEP 3:

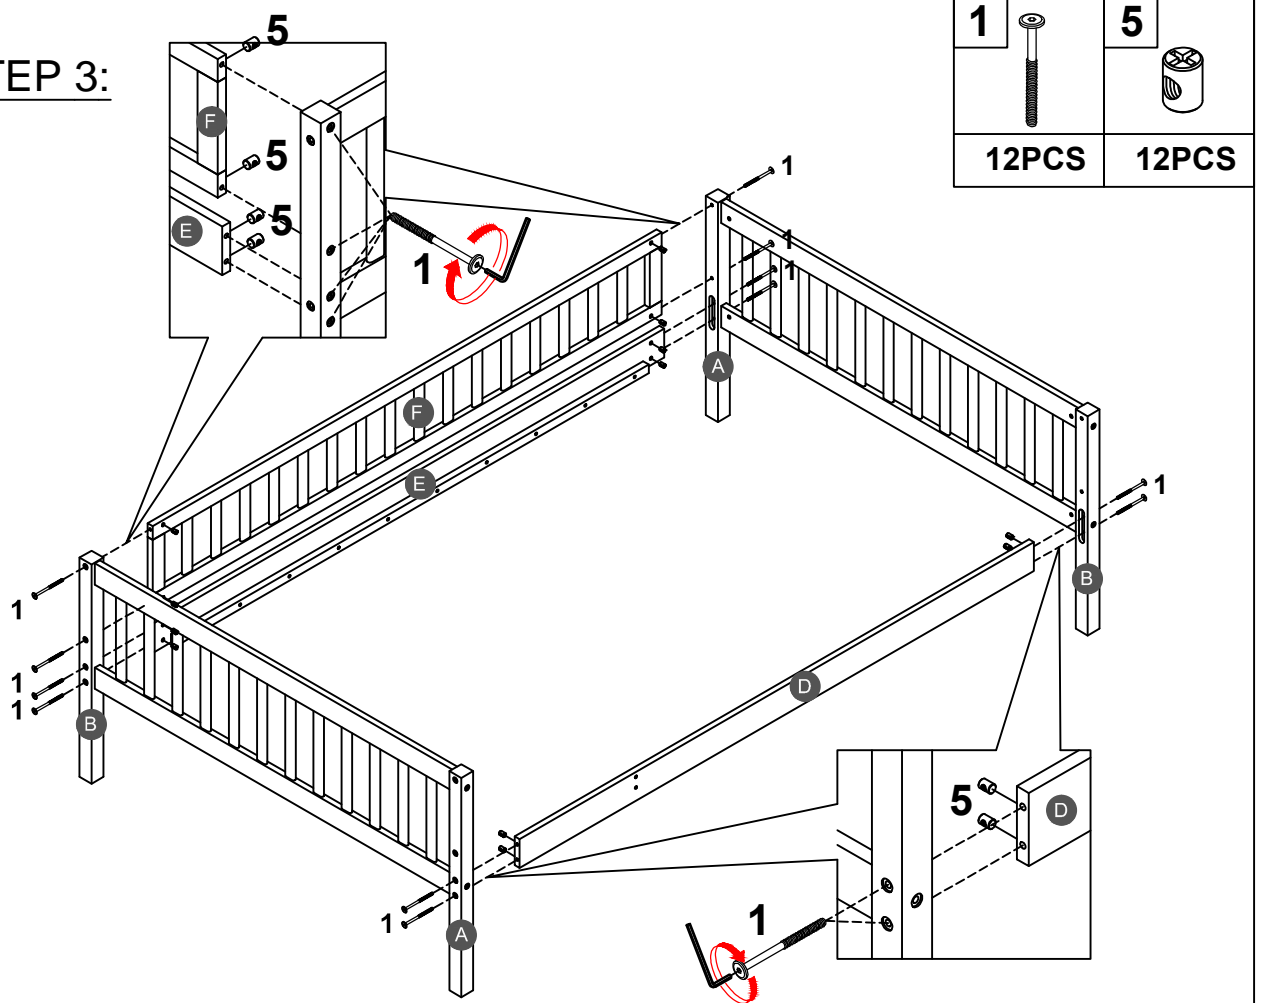


### STEP 4:

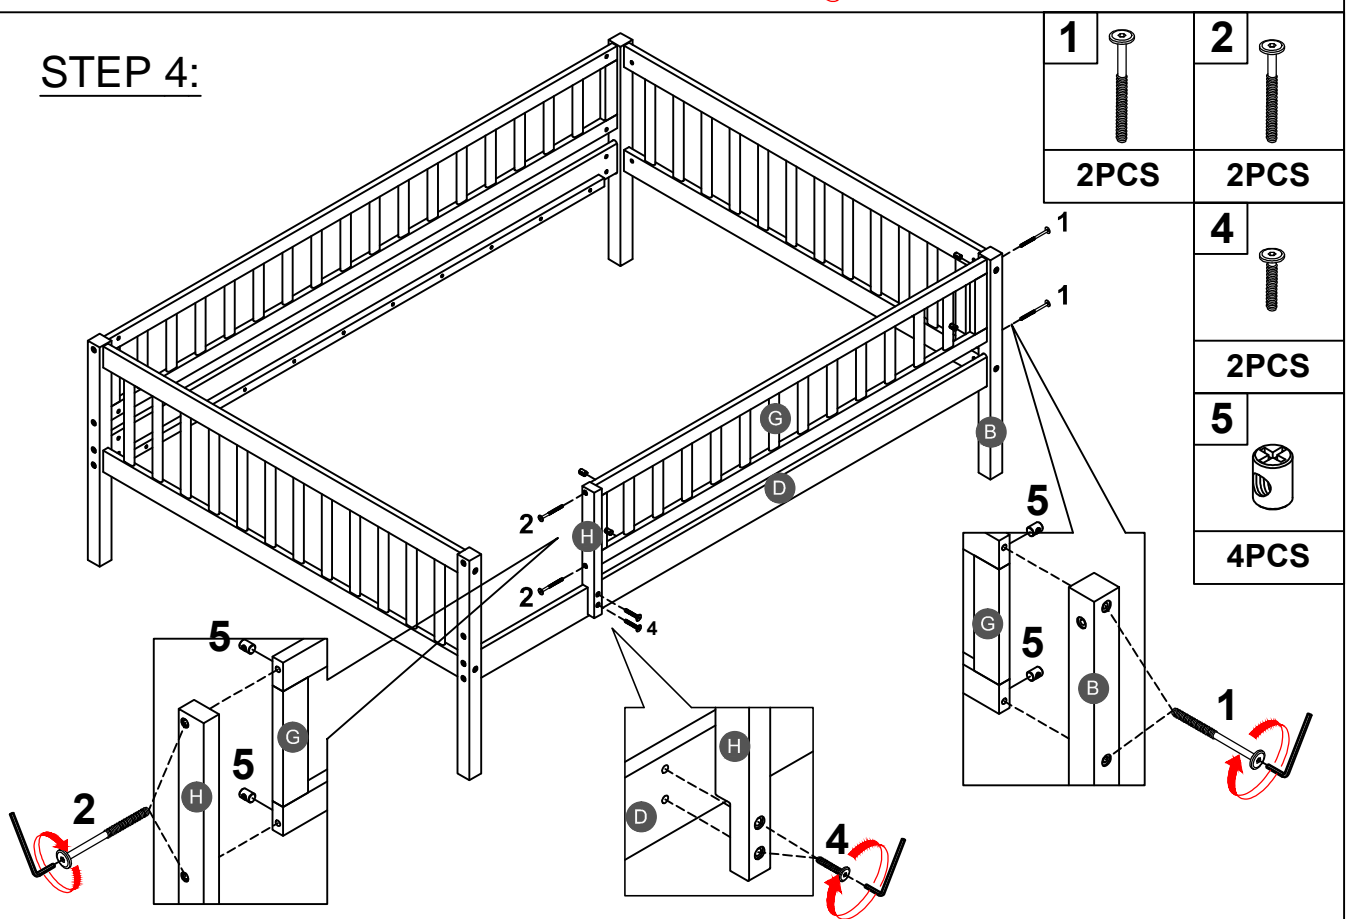

## STEP 5:

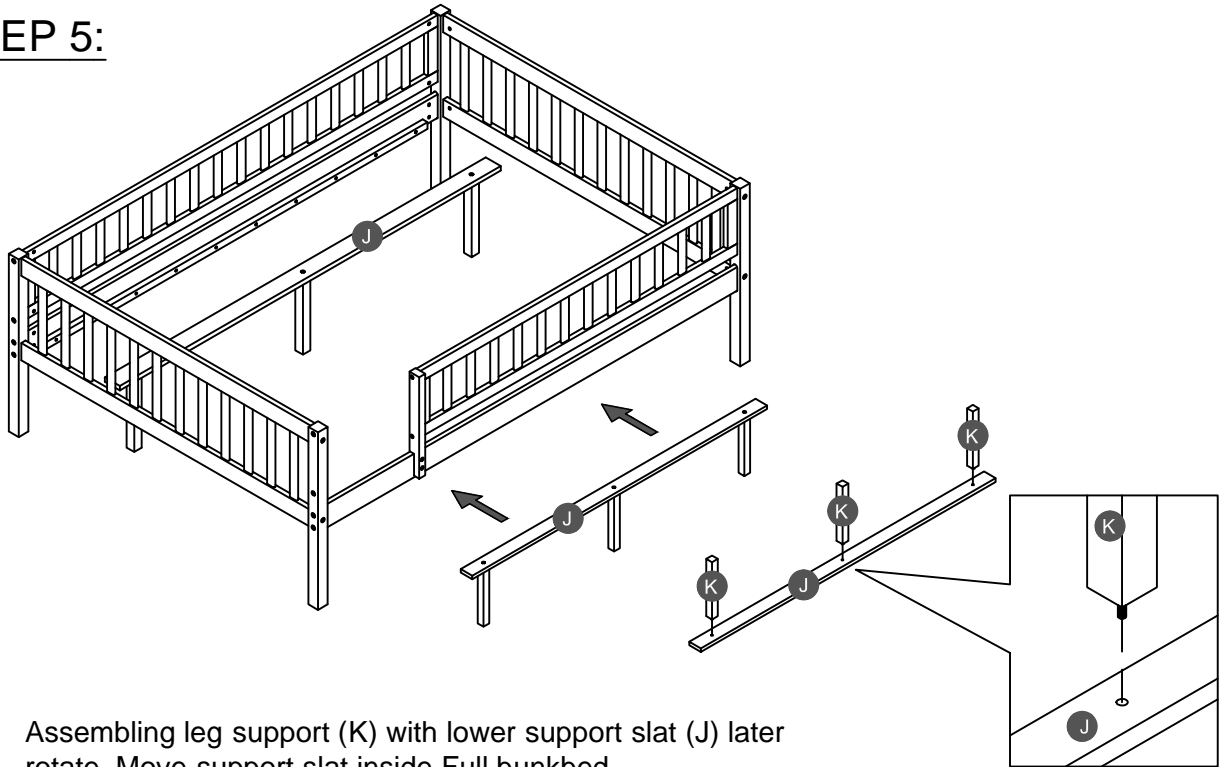


## STEP 6:

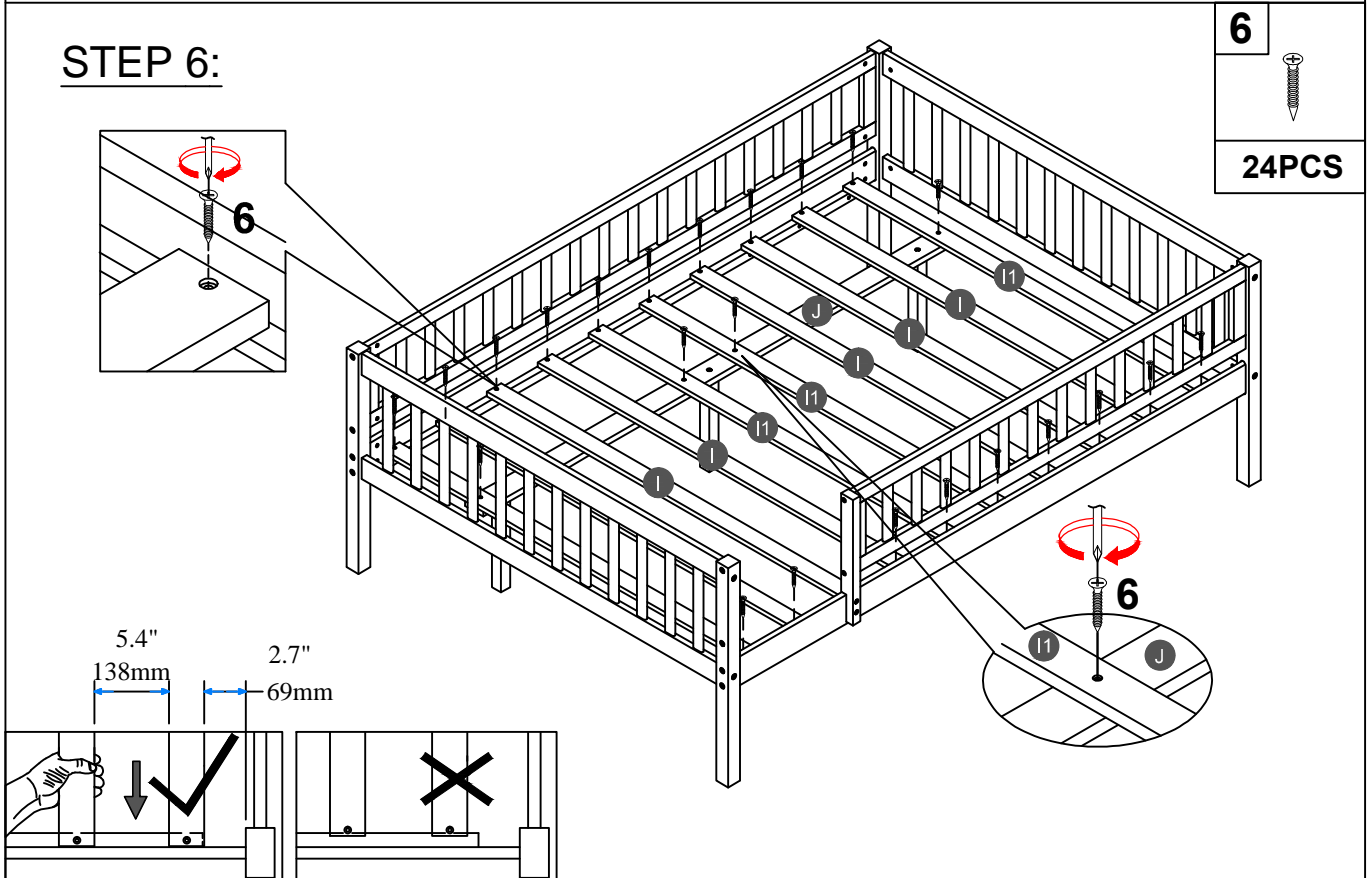

## STEP 7:


<b>3</b>		<b>5</b>		<b>10</b>	
<b>4PCS</b>		<b>4PCS</b>		<b>8PCS</b>	

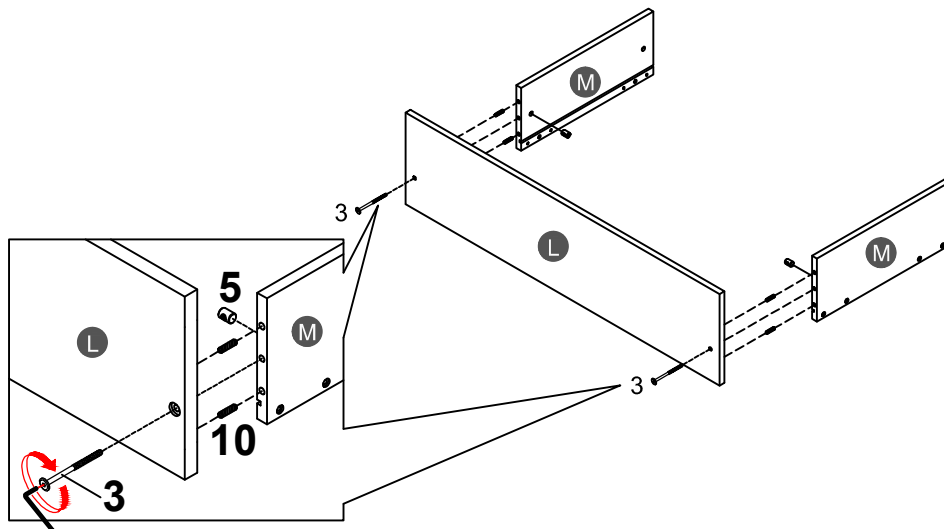

**x 2**

## STEP 8:

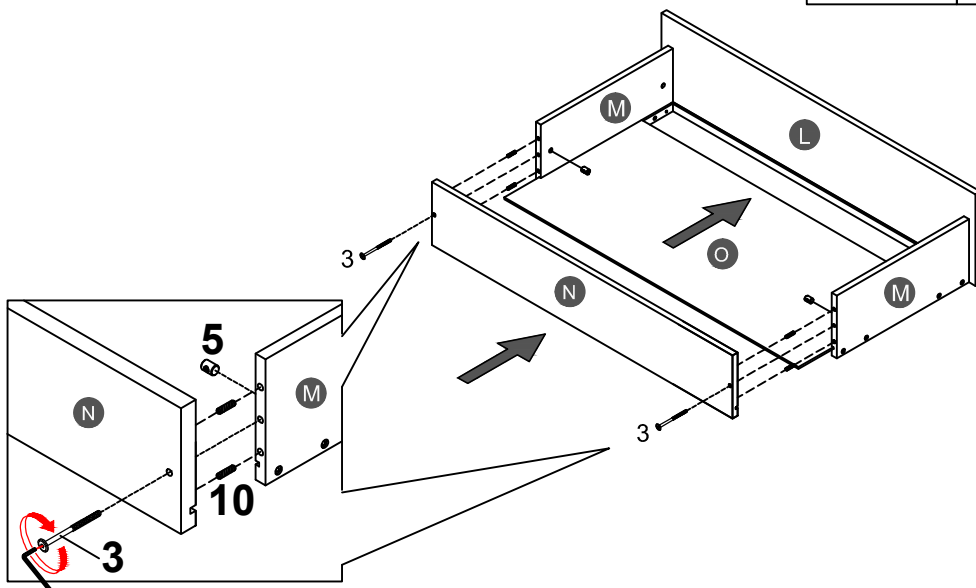


<b>3</b>		<b>5</b>		<b>10</b>	
<b>4PCS</b>		<b>4PCS</b>		<b>8PCS</b>	





**x 2**




STEP 9:

<b>6</b>		<b>8</b>		<b>11</b>	
<b>16PCS</b>		<b>8PCS</b>		<b>8PCS</b>	

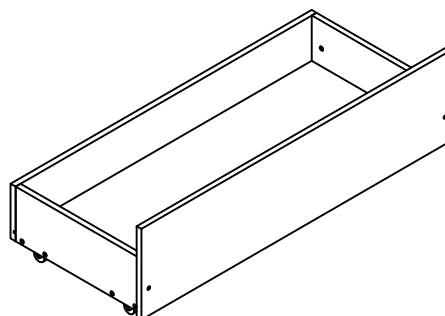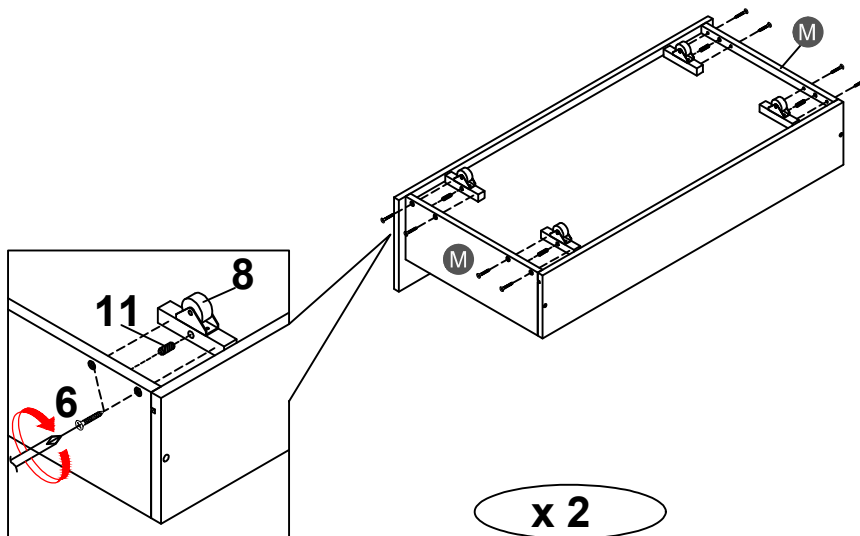

STEP 10:

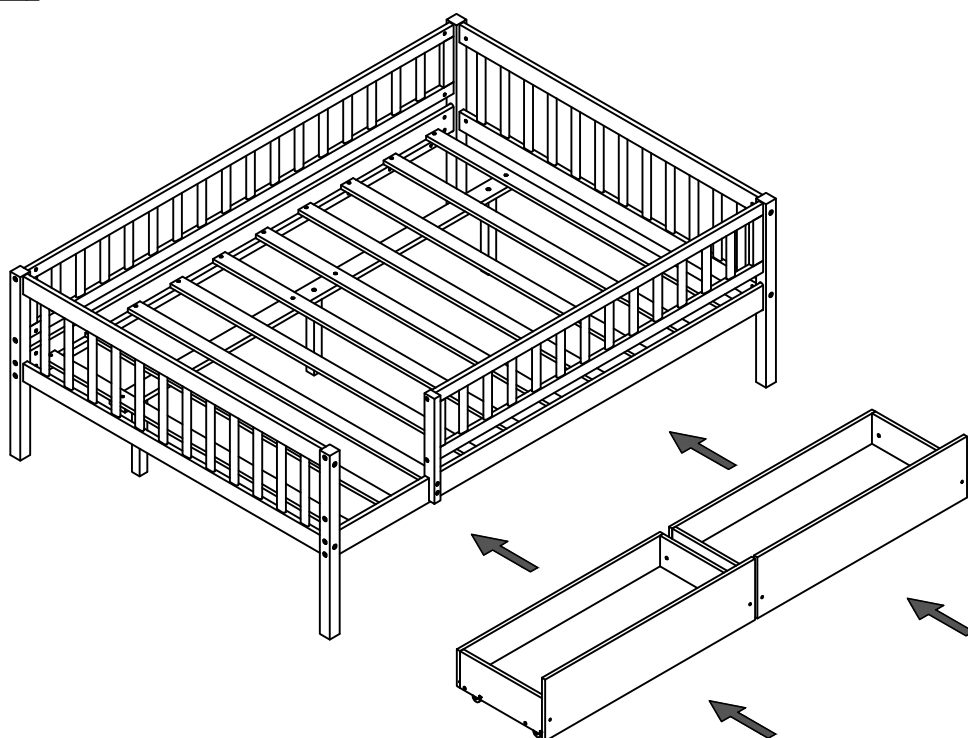

Push Trundle and Drawer under the bottom of Bunkbed.

