


7


SIDE RODS

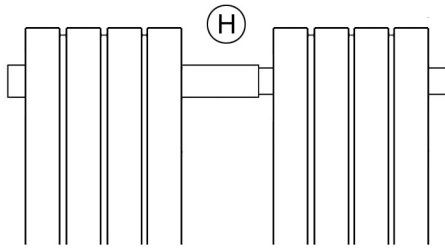

Extend telescoping rod (H) slightly. Place drapery panels (not included) on the rod.


8

SIDE RODS

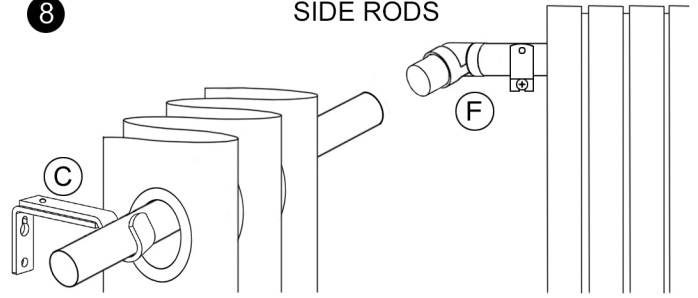


Extend rod to desired length. Hang rod on bracket (C) and insert rod onto corner connector (F). Repeat for other side rod.

9

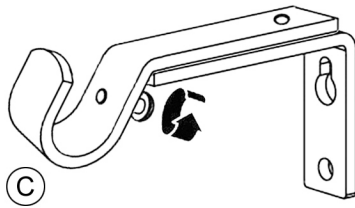

Tighten set screws on all brackets (C) to secure rods in place.

10

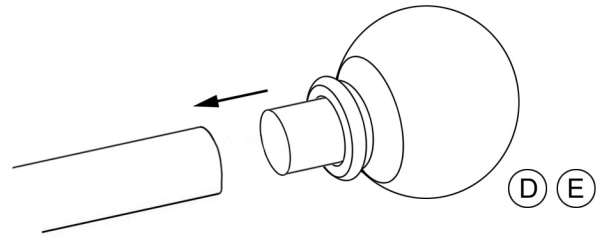

Insert finials (D & E) into the ends of the rods.
Note: Finial (D) with smaller post fits to smaller diam. rod, finial (E) with larger post fits to larger diam. rod.