





accessory

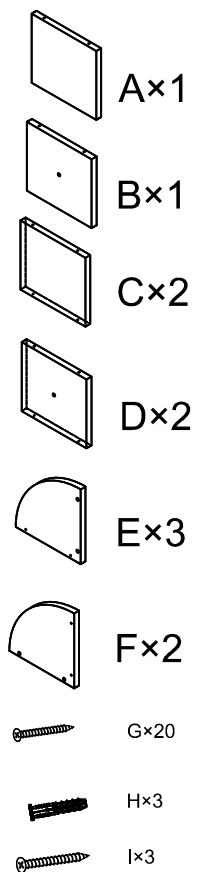

Installed as shown.

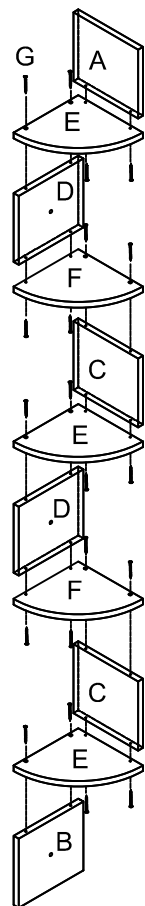


installation complete

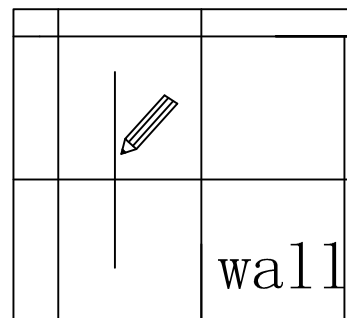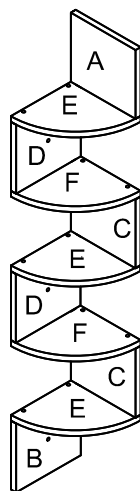

Step 1: Draw a vertical line on the wall first, and then mark the location of the three points in turn.

Step 2: The three points with percussion drill hole, and then will knock into the wall hole expansion pipe.

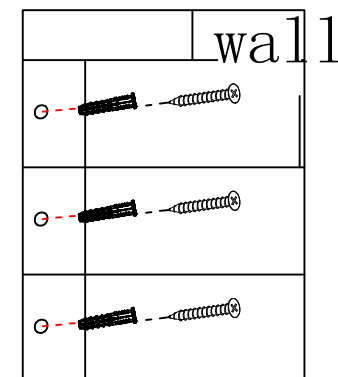

Step 3: Object hole after screwed holes are aligned with the wall, installation is complete.