
PLASTIC STORAGE SHED

8(W)x10(D)FT WITH WINDOWS

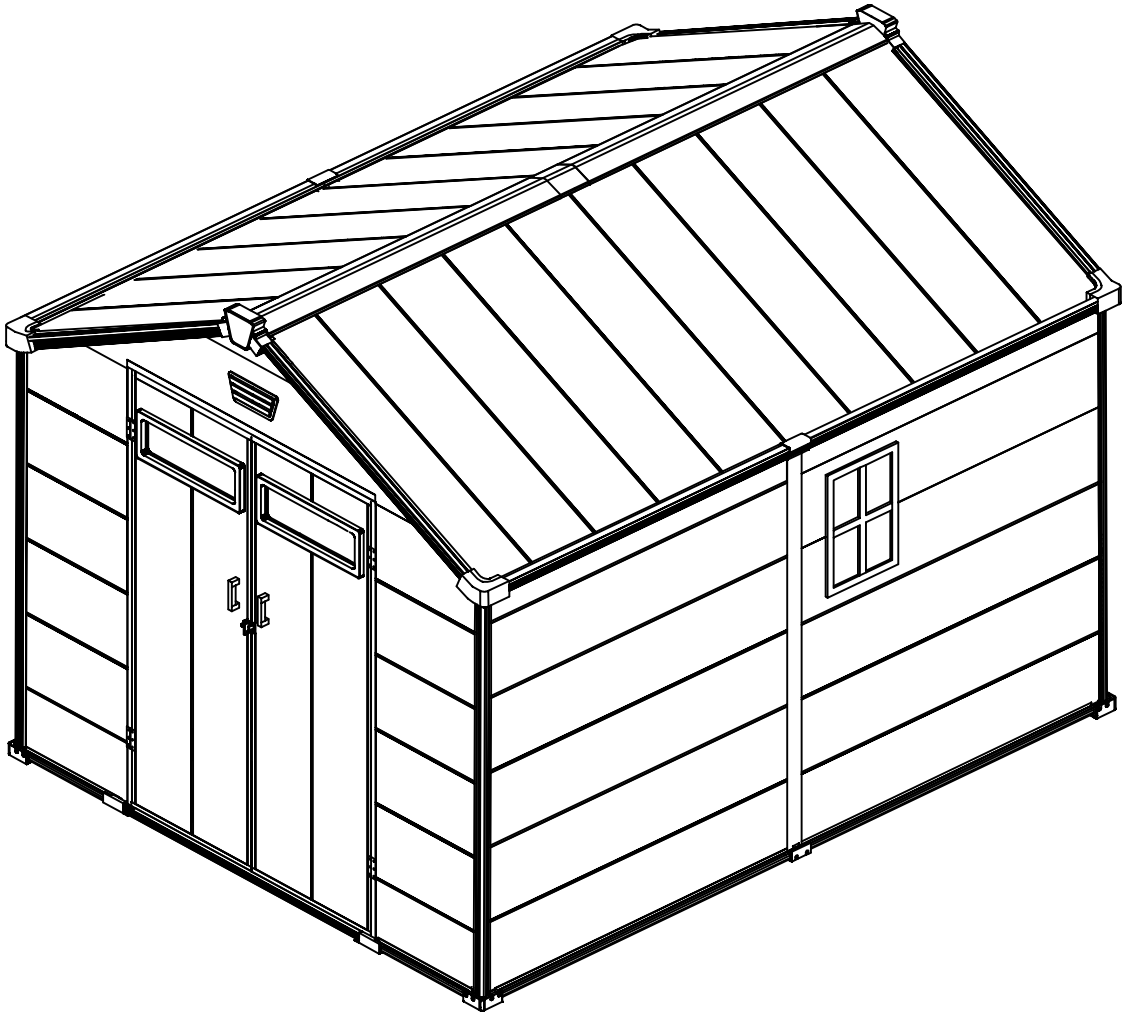

EASYHAWKservice@out look.com

Our team is available 24/7 to help with any product questions. Contact us anytime!

Recommended to wear gloves to avoid scratches.
Please read the instructions COMPLETELY before assembly.



1.Please check the quantity of all parts before installation (refer to the Parts Lists) and the appearance of the products. Make sure the product is correct before installation.

2.Protect spare parts carefully in case any losing,scratch or demage occured during installation. Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, unapproved modification, or **neglect** of this product.

CARE AND SAFETY GUIDELINES

• The shed is intended for storage purposes only. It is not designed for habitation.
• It is strongly recommended to secure the shed to an immovable object or anchor to the round by drilling holes in the shed floor (at the pre-marked locations) and inserting proper screws into the ground (screws are not included).
• Do not attempt assembly on windy or cold days.
• Periodically check the shed to ensure that it is stable and that the site is level.
• Be careful when handling parts with steel edges.
• When assembling or handling the shed, use only those tools listed in the user manual.
• Always wear work gloves, safety goggles and long sleeves when assembling or performing any maintenance on your shed.
• Avoid using a lawnmower or mechanical scythe near the shed.
• Wear safety goggles and always follow the manufacturer’s instructions when using power tools.
• Wash the shed with a garden hose or a mild detergent solution. Do not use a metal brush or abrasive cleaners, including degreasers and oil- or acetone-based cleaning materials, as these may stain or damage the shed.
• Do not store hot items, such as recently used grills and blowtorches, and volatile chemicals in the shed.
• Avoid placing heavy items against the walls, as this may cause distortion.
• Avoid placing sharp items directly on floor which may cause broken.
• Keep the roof clear of accumulated snow and leaves. Large amounts of snow on the roof can damage the shed, making it unsafe to enter.
• Wind direction is an important factor to consider when determining the location of the shed. Reduce exposure to the wind, in general, and of the door side in particular. Keep doors closed and locked when the shed is not in use to prevent wind damage.
• Do not stand on the roof.
• Consult your local authorities to check if permits are required to erect the shed.

Safety Precautions

We recommend **two adults** to complete the installation.
Two adults installed together will make the installation process easier and safer.
The gloves must be carried to prevent hand cuts during installation.
Take care when using power tools near water the use of a residual current device (RCD) is advised.
Please use the electric driver carefully during screwing to prevent the screw from slipping and hurting your hand.
Be careful not to fall when installing the roof. Please steady the ladder and make sure the product placed on a flat ground.

PLEASE KEEP THIS INSTRUCTION FOR FUTURE REFERENCE.

Installation precautions

1.Site preparation


Leveling the ground.


Please place the product on a flat ground to prevent leaning and collapse.
If the ground is uneven, the door may can't be closed.




2. Set up the base

It is recommended to build a wooden base or concrete base.

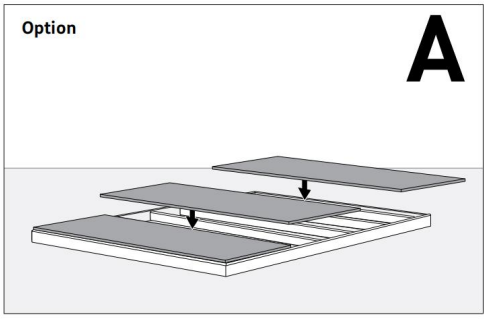


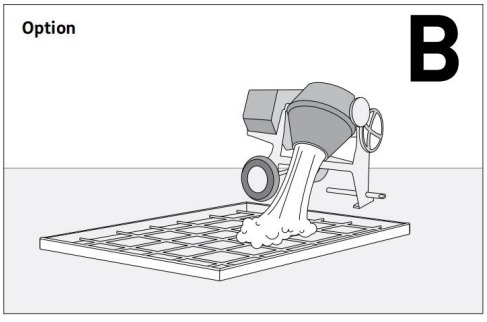

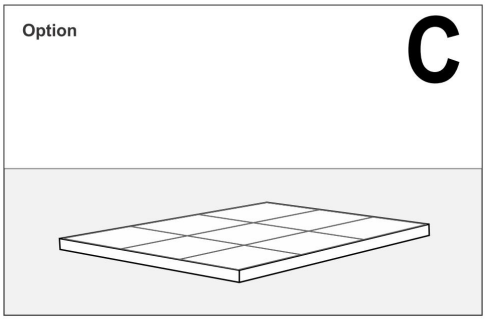

3. Leave enough space

Operating space shall be reserved for external installation work.

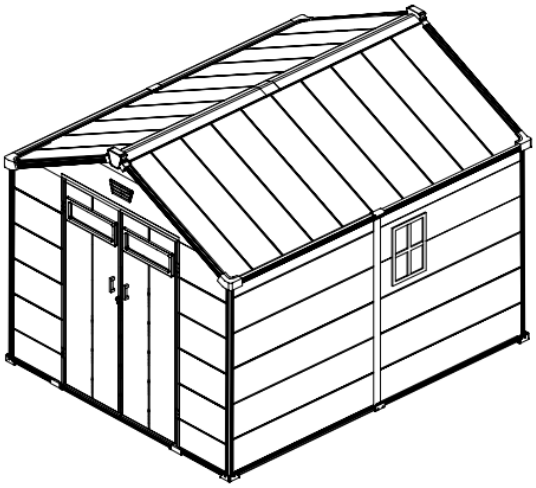

4. Tools required for installation

（**Note:** Installation requires two people to work together.）









5. Parts are placed after unpacking


Don’t lean the panels to avoid distortion.

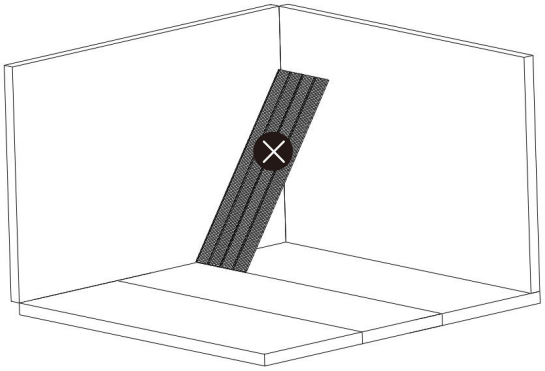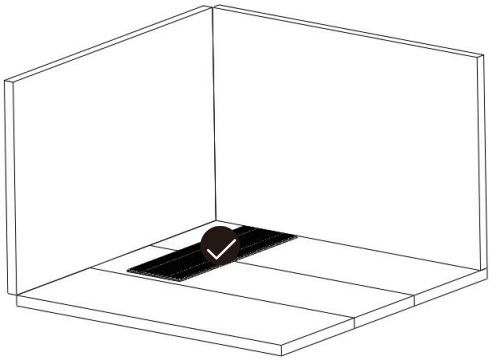
6. Protect The Floor

Disassemble the packaging cardboard box, unfold it and lay it on the floor to protect.

Directly use the ladder may cause floor demage.

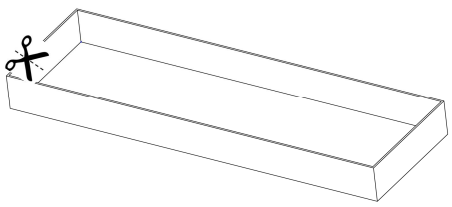

Ⅰ.【Product Introduction】

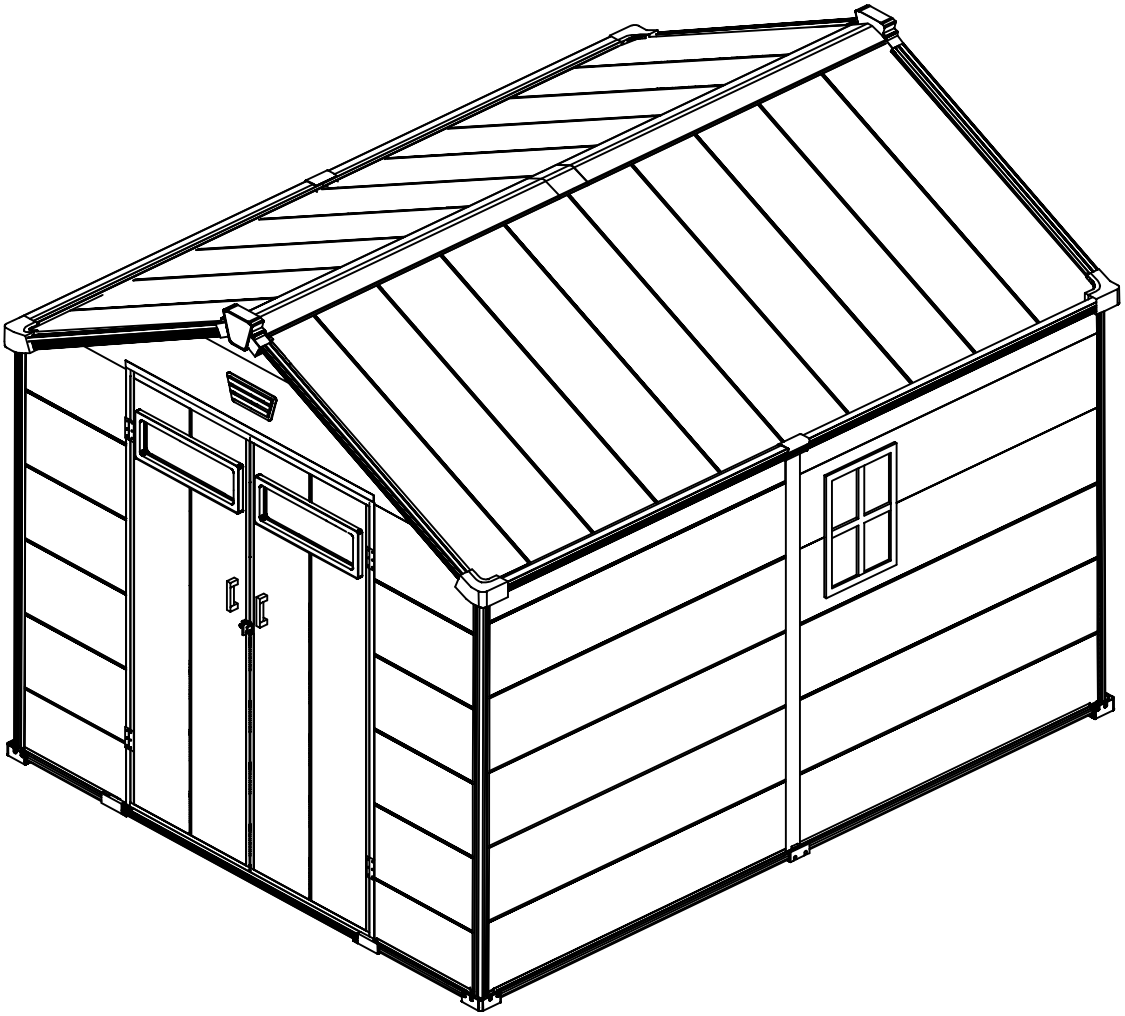



Installation Precautions for Plastic Tool Huts:


1. Before installation,ensure the installation platform is level and free of unevenness.Unevenness may cause slight misalignment of the panels duringinstallation, but in most cases, the product can still be successfully assembled.
2. All plastic panels must be fully inserted, especially wheninstalling components into the floor grooves. Make sure they arecompletely inserted. Assembly may require using a rubber mallet totap the panels (tap gently, do not use excessive force).
3. Plastic toolhuts contain some metal parts. Ensure all screws on the metal partsare tightened.


【 Resin Storage Shed_8x10ft】

EXP VIEW

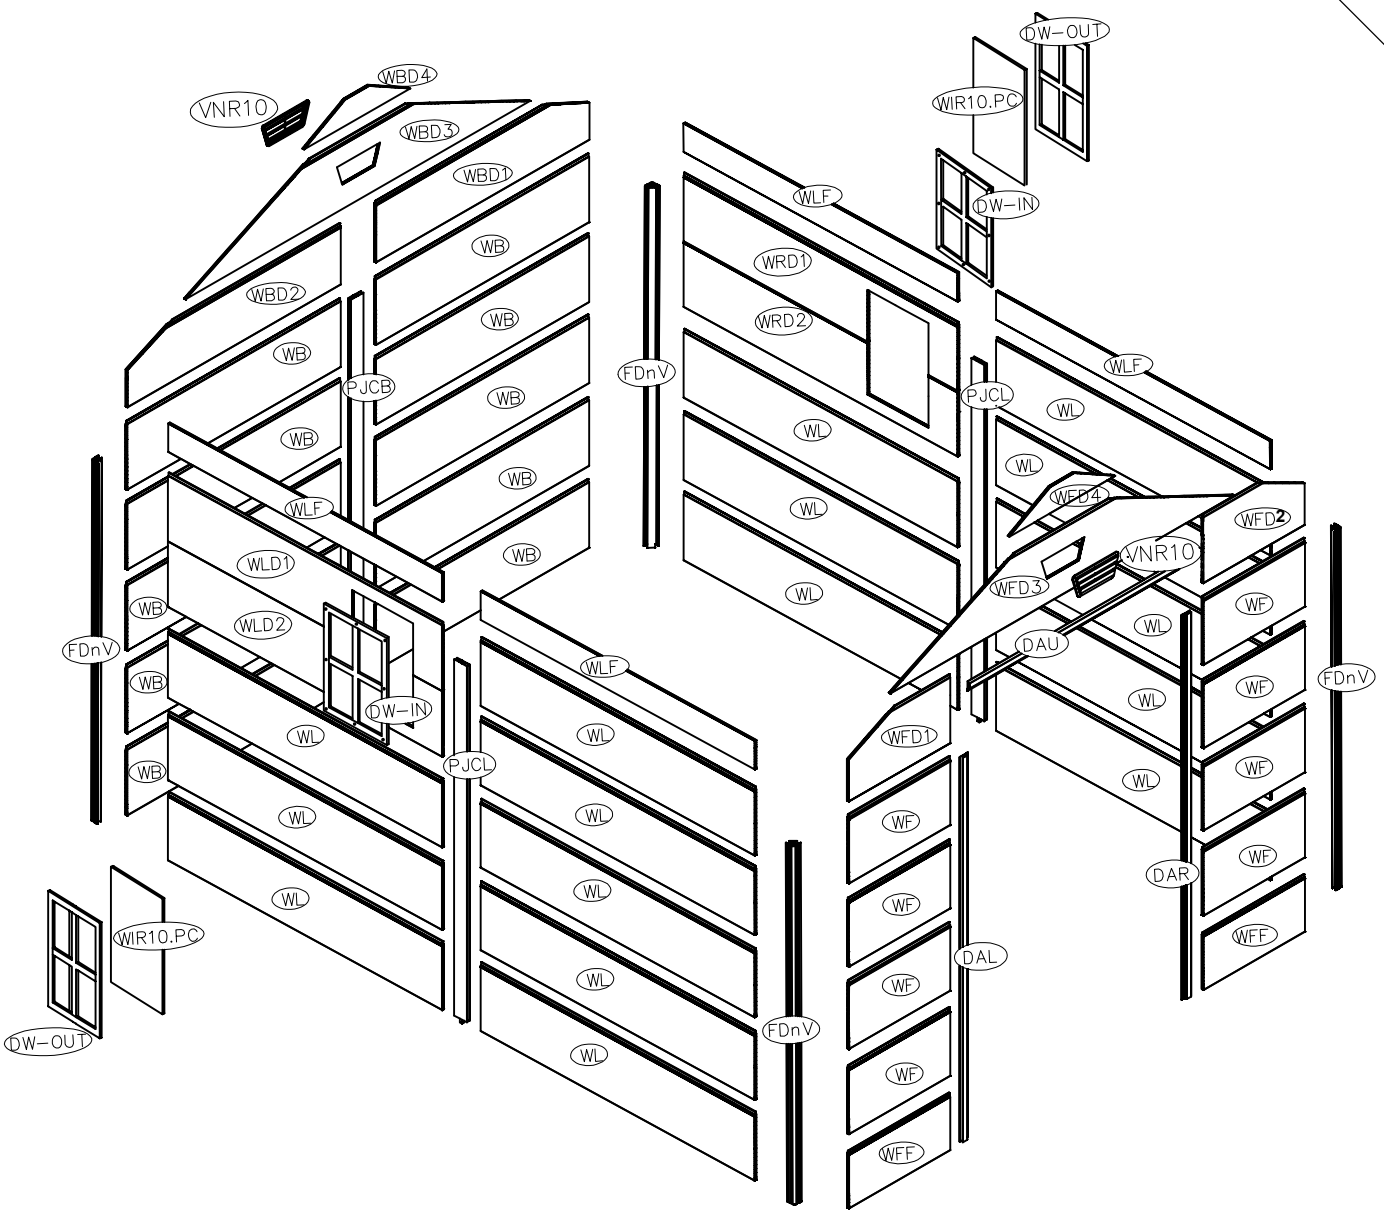

DW-OUT
WBD4
VNR10
WBD3
WBD1
WIR10.PC
WLF
DW-IN
WB
WRD1
WBD2
WRD2
WB
FDnV
WB
PJCB
PJCL
WLF
WB
WL
WB
WL
WB
WL
WLF
WFD4
WFD2
WB
WL
WLD1
VNR10
WB
WFD3
WF
WLD2
WL
FDnV
DAU
WLF
WB
WF
FDnV
DW-IN
WL
WL
PJCL
WFD1
WB
WF
WL
WL
WF
WL
WF
DAR
WF
WL
WF
WF
WIR10.PC
DAL
WL
WF
WFF
DW-OUT
FDnV
WF
WL
WFF

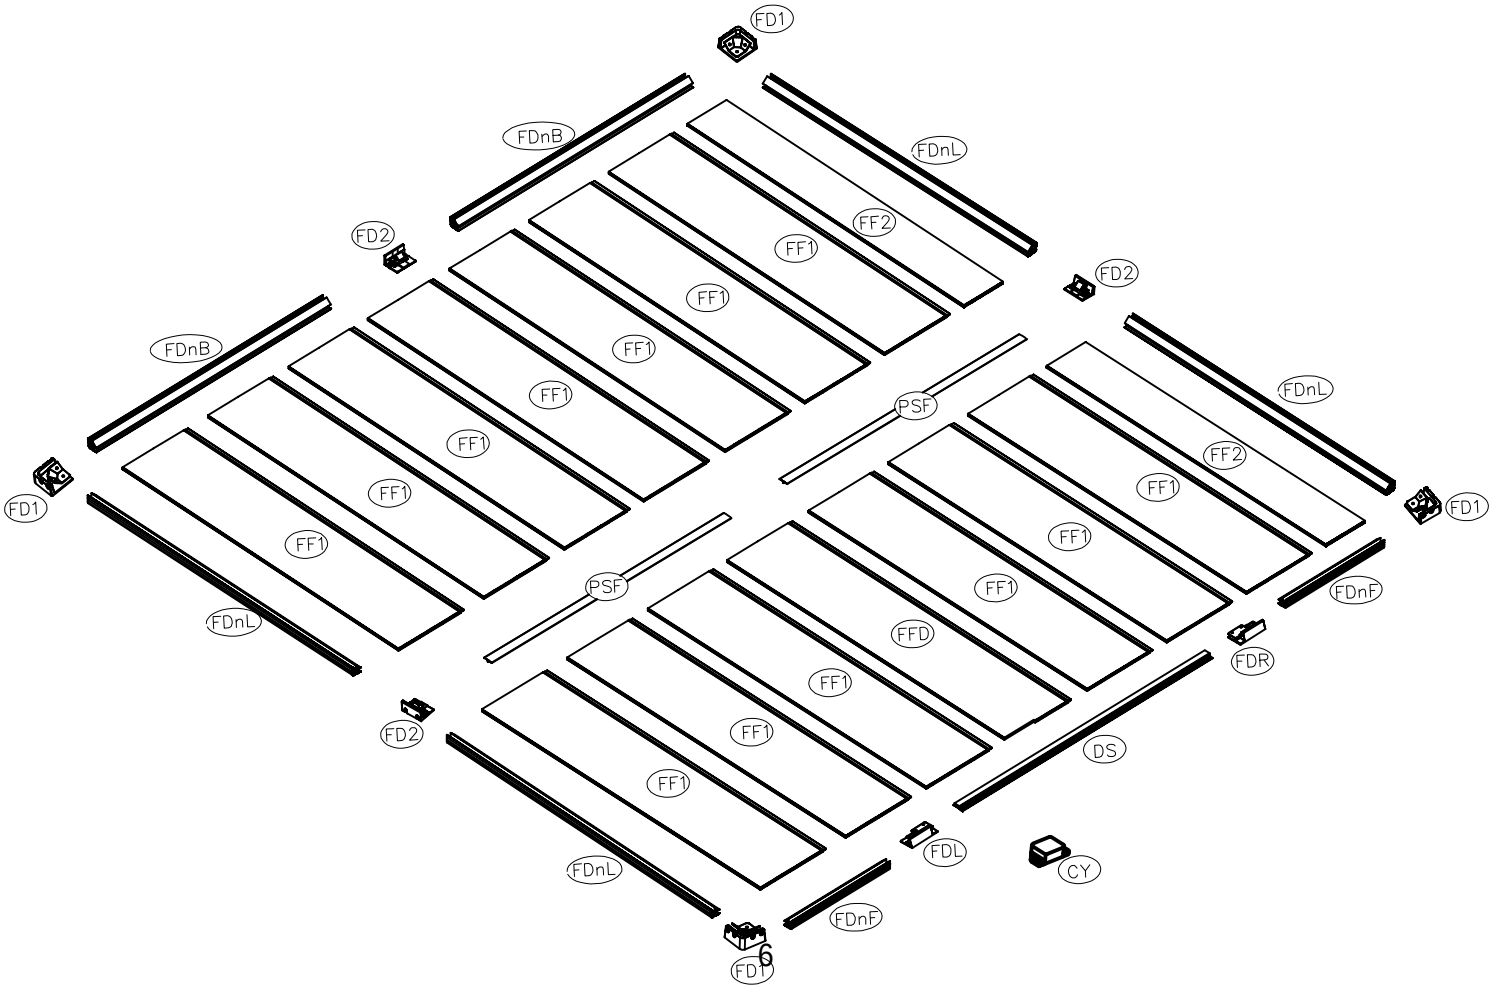
FD1
FDnB
FDnL
FF2
FD2
FF1
FD2
FF1
FDnB
FF1
FF1
PSF
FDnL
FF1
FD1
FF1
FD1
FF1
FF1
FDnF
PSF
FDnL
FFD
FDR
FF1
FD2
FF1
DS
FF1
FDL
CY
FDnL
FDnF
FD1











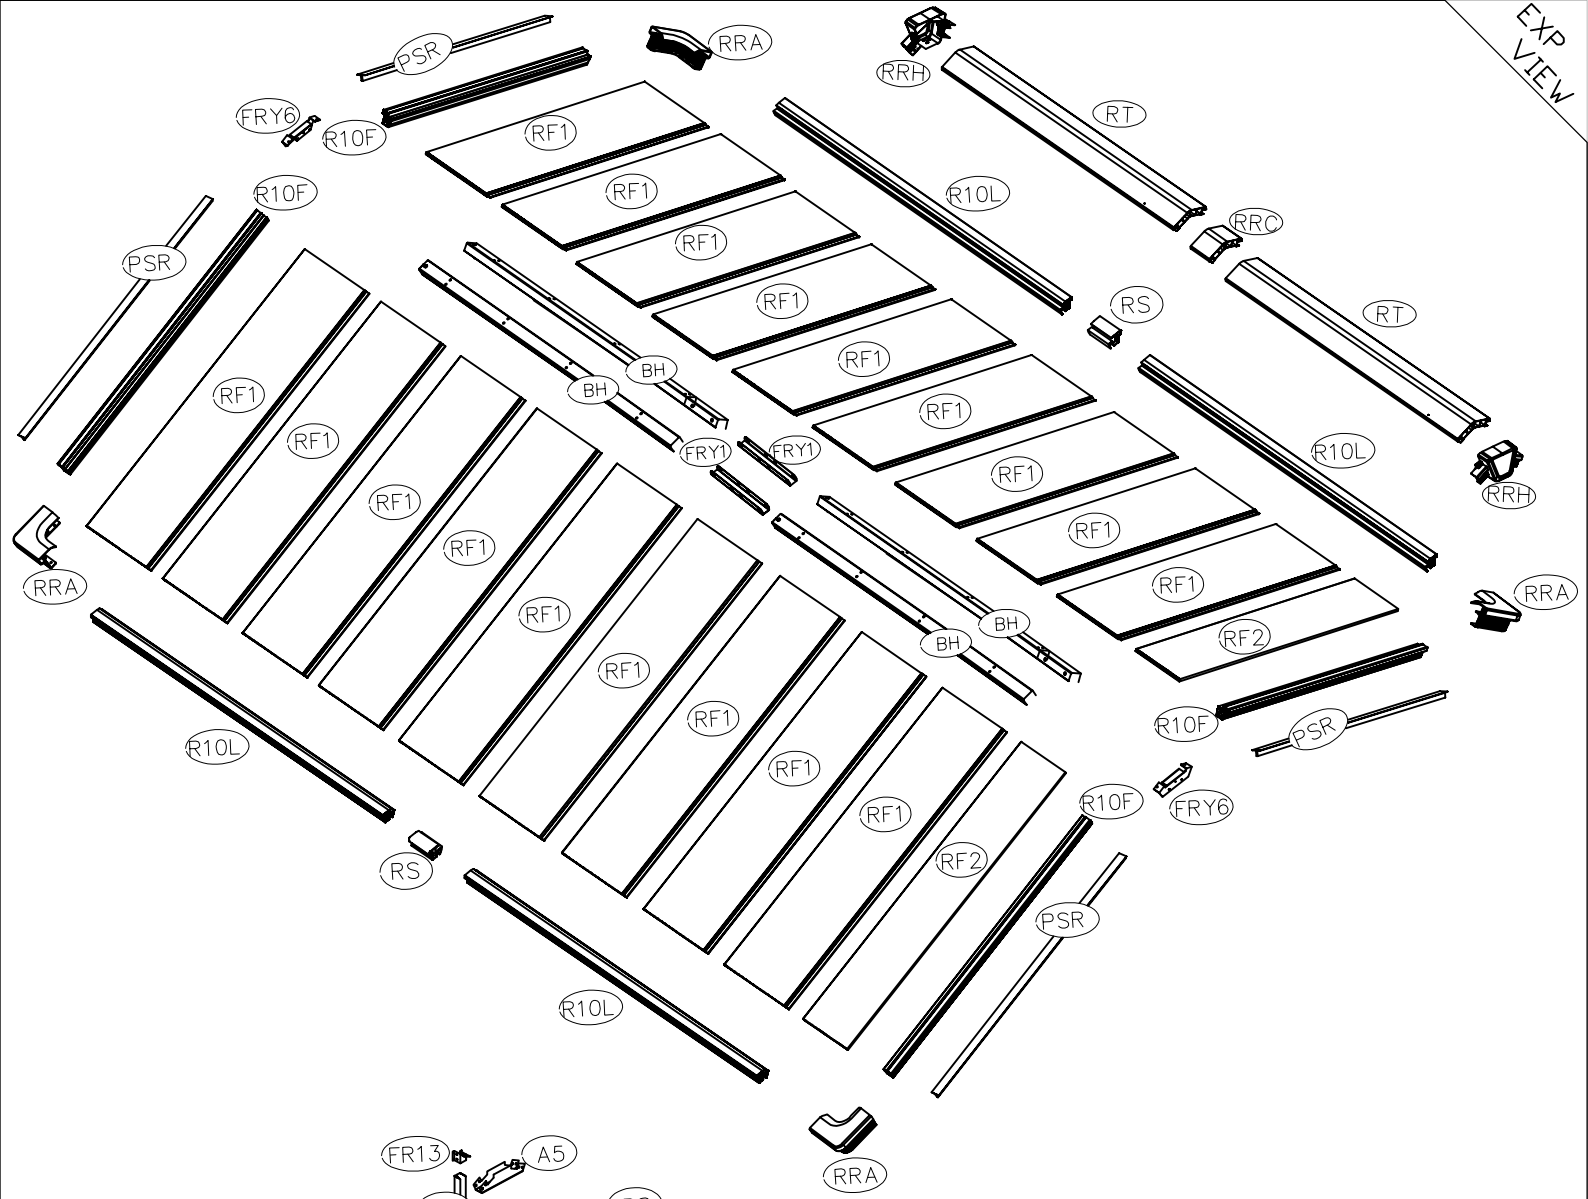

EXP VIEW
PSR
RRA
RRH
FRY6
R10F
RF1
RT
R10L
RRC
RS
BH
FRY1
RF2
RRA

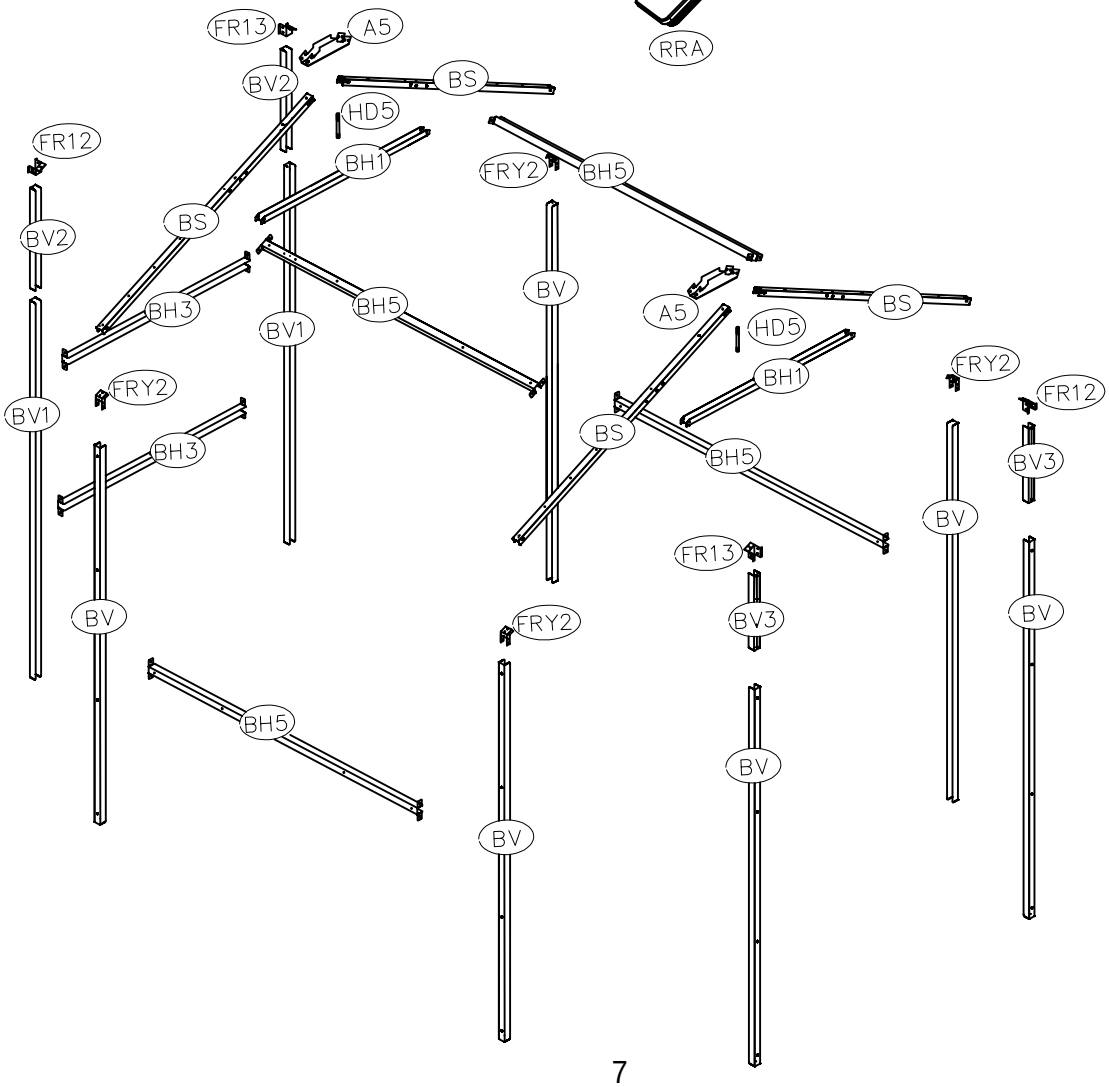
FR13
A5
BV2
BS
HD5
FR12
BH1
FRY2
BH5
BV
BH3
BV1
BV3
FR13
BV
BH5
FRY2
BV
BV
BV

EXP VIEW




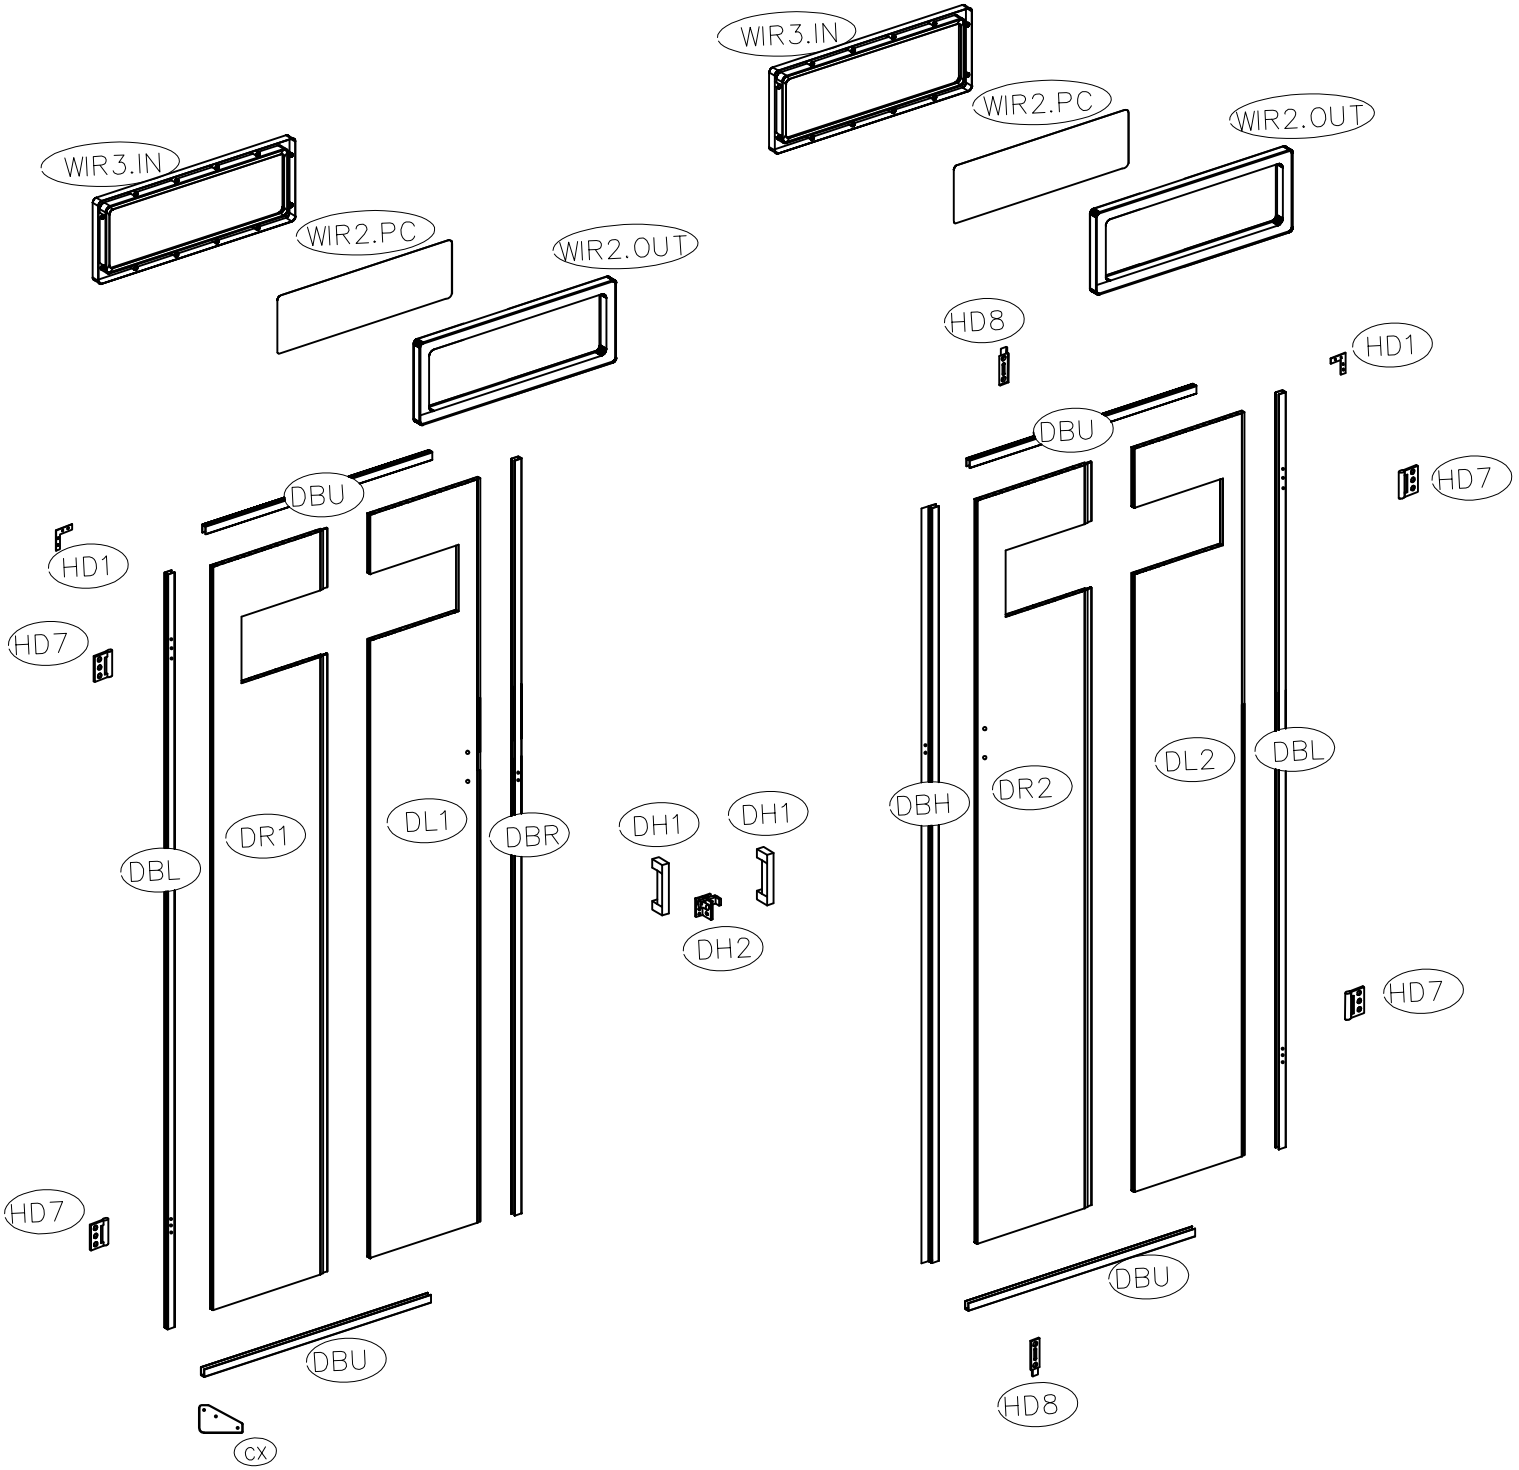

WIR3.IN
WIR2.PC
WIR2.OUT
HD1
HD7
DBU
DR1
DL1
DBR
DBL
DH1
DH2
HD8
DR2
DBH
DL2
cx






FLOOR

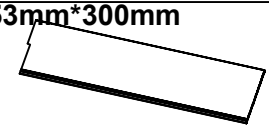Item no.	Reference Image	Qty.
DS	**1165mm** 	X1
FDnB	**1120mm** 	X2
FDnL	**1412mm** 	X4
FDnF	**482mm** 	X2
FD1		X4
FD2		X3
FDR		X1
FDL		X1
FF1	**1453mm*300mm** 	X13
FF2	**1453mm*230mm** 	X2
FFD	**1453mm*300mm** 	X1
PSF	**1140mm** 	X2












Item no.	Reference Image	Qty.



WALL

Item no.	Reference Image	Qty.
WL	**1448mm*300mm** 	X16
WLF	**1448mm*130mm** 	X4
WLD1	**1448mm*130mm** 	X1
WLD2	**1448mm*130mm** 	X1
WRD1	**1448mm*130mm** 	X1
WRD2	**1448mm*130mm** 	X1
WB	**1158mm*300mm** 	X10
WBD1	**1158mm*300mm** 	X1
WBD2	**1158mm*300mm** 	X1
WFD1	**565mm*300mm** 	X1
WFD2	**565mm*300mm** 	X1
WBD3	**1704mm*300mm** 	X1
WBD4	**588mm*135mm** 	X1
WFD3	**1906mm*300mm** 	X1











Item no.	Reference Image	Qty.
WFD4	**791mm*190mm** 	X1
WF	**565mm*300mm** 	X8
WFF	**565mm*261mm** 	X2
PJCL	**1595mm** 	X2
PJCB	**1795mm** 	X1
VNR10		X2
DW-OUT	**548mm*386mm** 	X2
DW-IN	**548mm*386mm** 	X2
WIR10.PC	**483mm*321mm** 	X2
FDnV	**1630mm** 	X4







DOOR

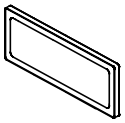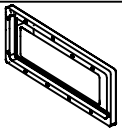Item no.	Reference Image	Qty.
DAL	1758mm 	X1
DAR	1758mm 	X1
DAU	1245mm 	X1
DBL	1745mm 	X2
DBR	1745mm 	X1
DBU	589mm 	X4
DBH	1745mm 	X1
DR1	1740mm*300mm 	X1
DL1	1740mm*285mm 	X1
DL2	1740mm*300mm 	X1
DR2	1740mm*285mm 	X1
WIR2.OUT		X2
WIR2.PC	459mm*159mm 	X2
WIR3.IN		X2




Item no.	Reference Image	Qty.
HD7		X4
DH1		X2
DH2		X1
HD1		X2
HD8		X2
CX		X1
CY		X1


ROOF

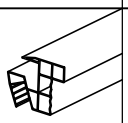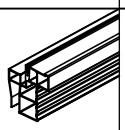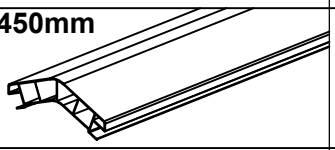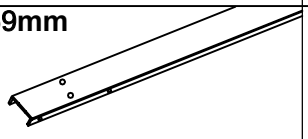Item no.	Reference Image	Qty.
RF2	**1270mm*255mm** 	X2
RF1	**1270mm*300mm** 	X18
R10L	**1415mm** 	X4
R10F	**1210mm** 	X4
RT	**1450mm** 	X2
PSR	**1210mm** 	X4
RRH		X2
RRA		X4
RRC		X1
BH	**1459mm** 	X4
FRY6		X2
FRY1	**240mm** 	X2
BH1	**885mm** 	X2
BH5	**1500mm** 	X4


Item no.	Reference Image	Qty.
BH3	**1000mm** 	X2
A5		X2
RS		X2
BS	**1225mm** 	X4
FR12		X2
FR13		X2
BV	**1615mm** 	X6
BV1	**1635mm** 	X2
FRY2		X4
BV2	**607mm** 	X2
BV3	**357mm** 	X2


ACCESSORY

Item no.	Reference Image	Qty.
FT1 (M5x14)		X164
FT2 (M4x8)		X265
FT3 (M5x20)		X92
FT14B		X4
FT14 (M8*20)		X4
FT7 (M6*40)		X72
FT7A (M6)		X78
FT8 (M6x16)		X4
FT14A (M8)		X4
Rubber sealing strip		X1
HAMMER		X1

Item no.	Reference Image	Qty.
GLOVE		X2
OPEN END WRENCH		X1
HEXSOCKET		X1
FT12 (M8*80)		X4
FT11 (M4x12)		X66
FT9 (M6)		X2
FT10 (M6)		X2
HD5 (M6*230)		X2

1

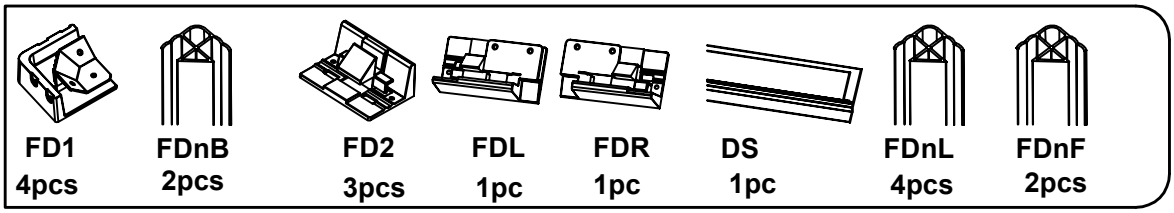

FD1
4pcs
FDnB
2pcs
FD2
3pcs
FDL
1pc
FDR
1pc
DS
1pc
FDnL
4pcs
FDnF
2pcs

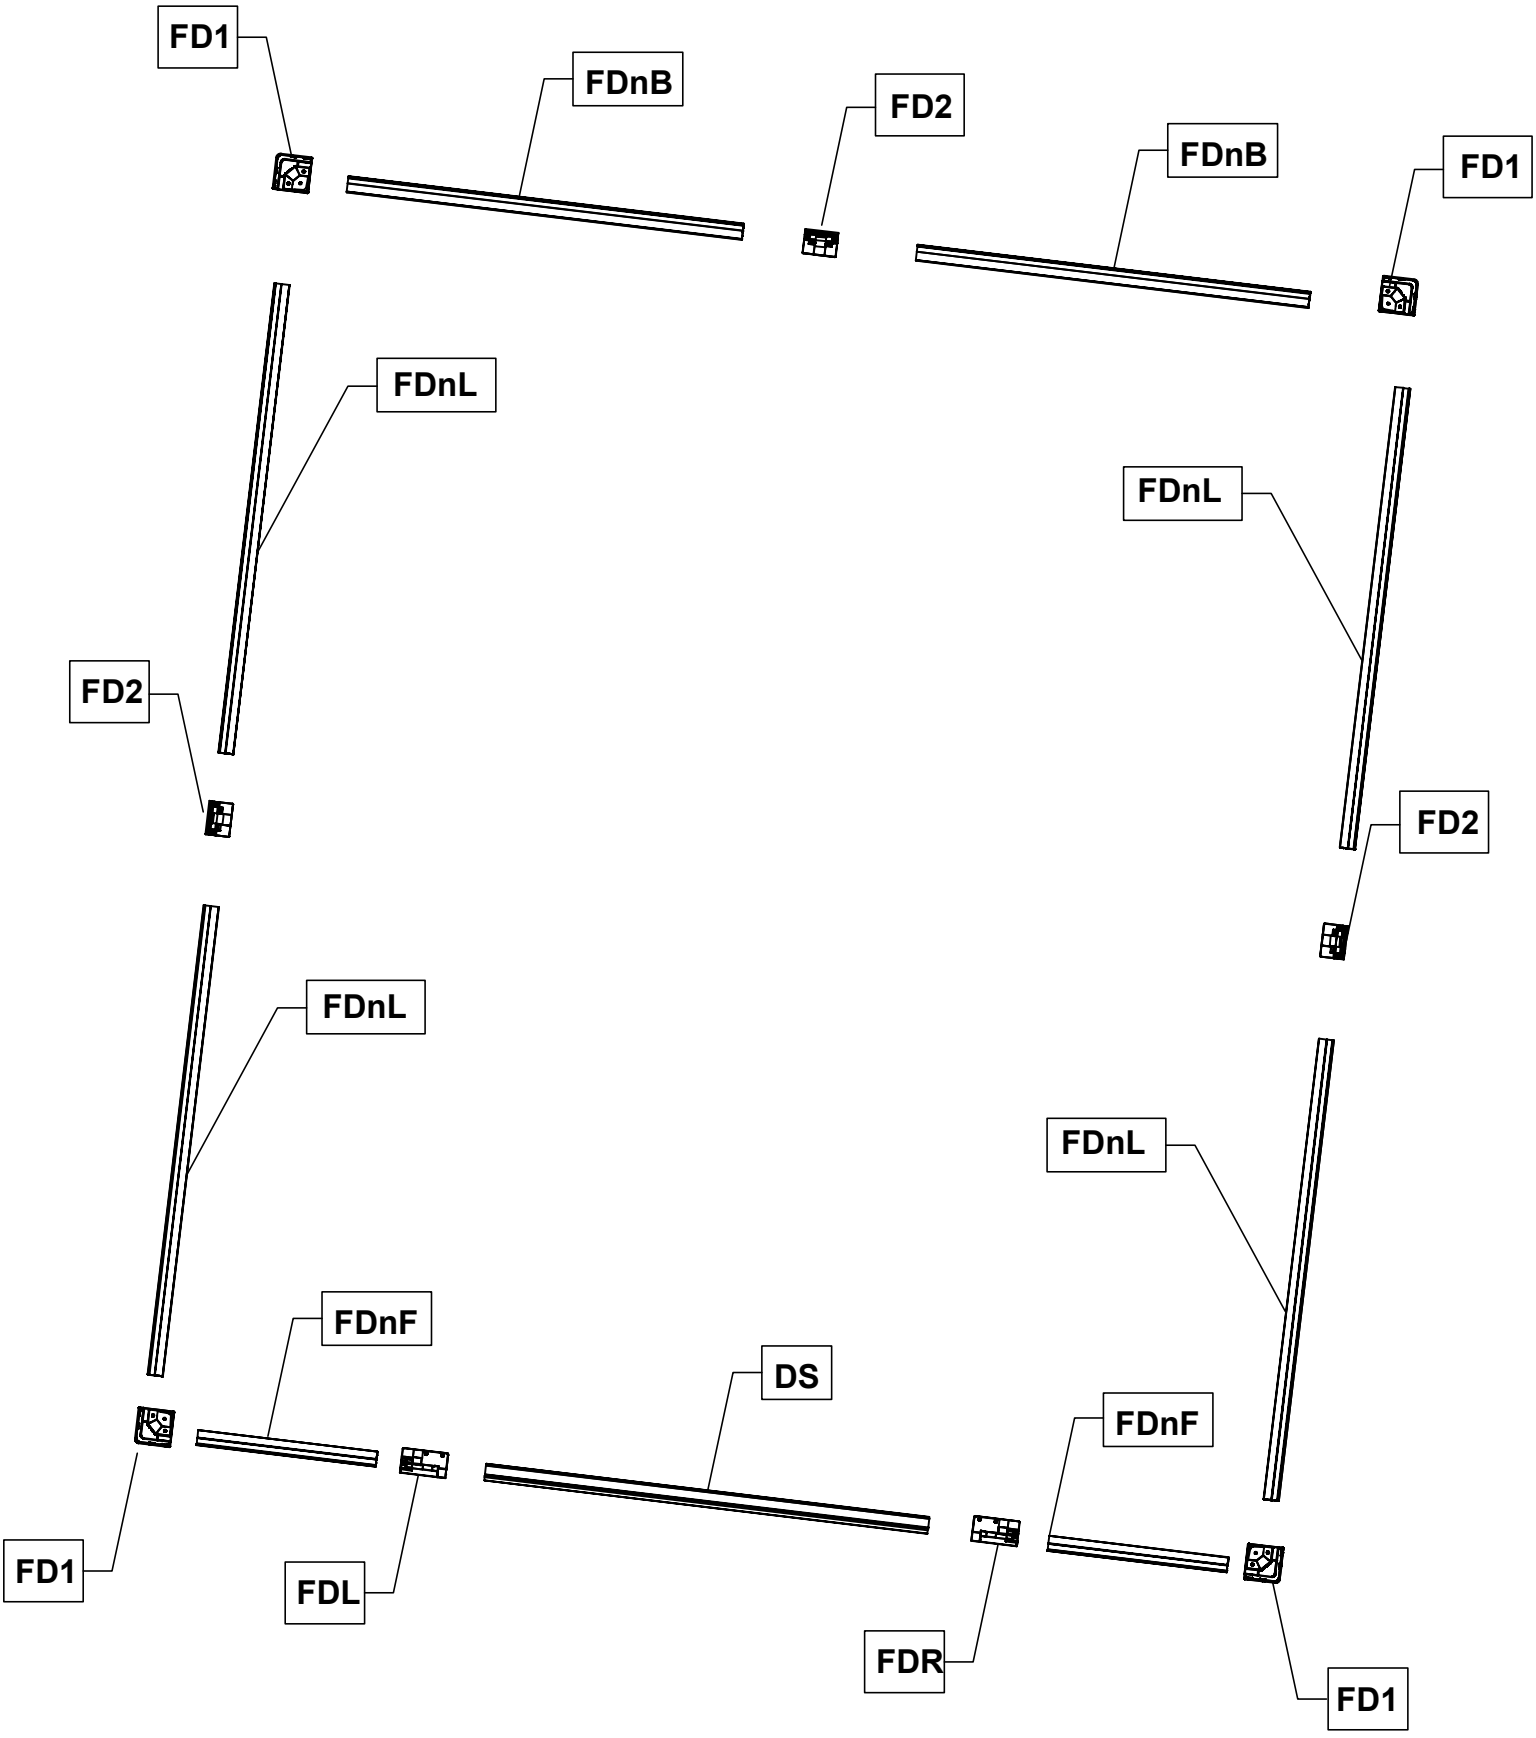
FD1
FDnB
FD2
FDnB
FD1
FDnL
FDnL
FD2
FD2
FDnL
FDnL
FDnF
DS
FDnF
FD1
FDL
FDR
FD1


2





Don't install the right side first

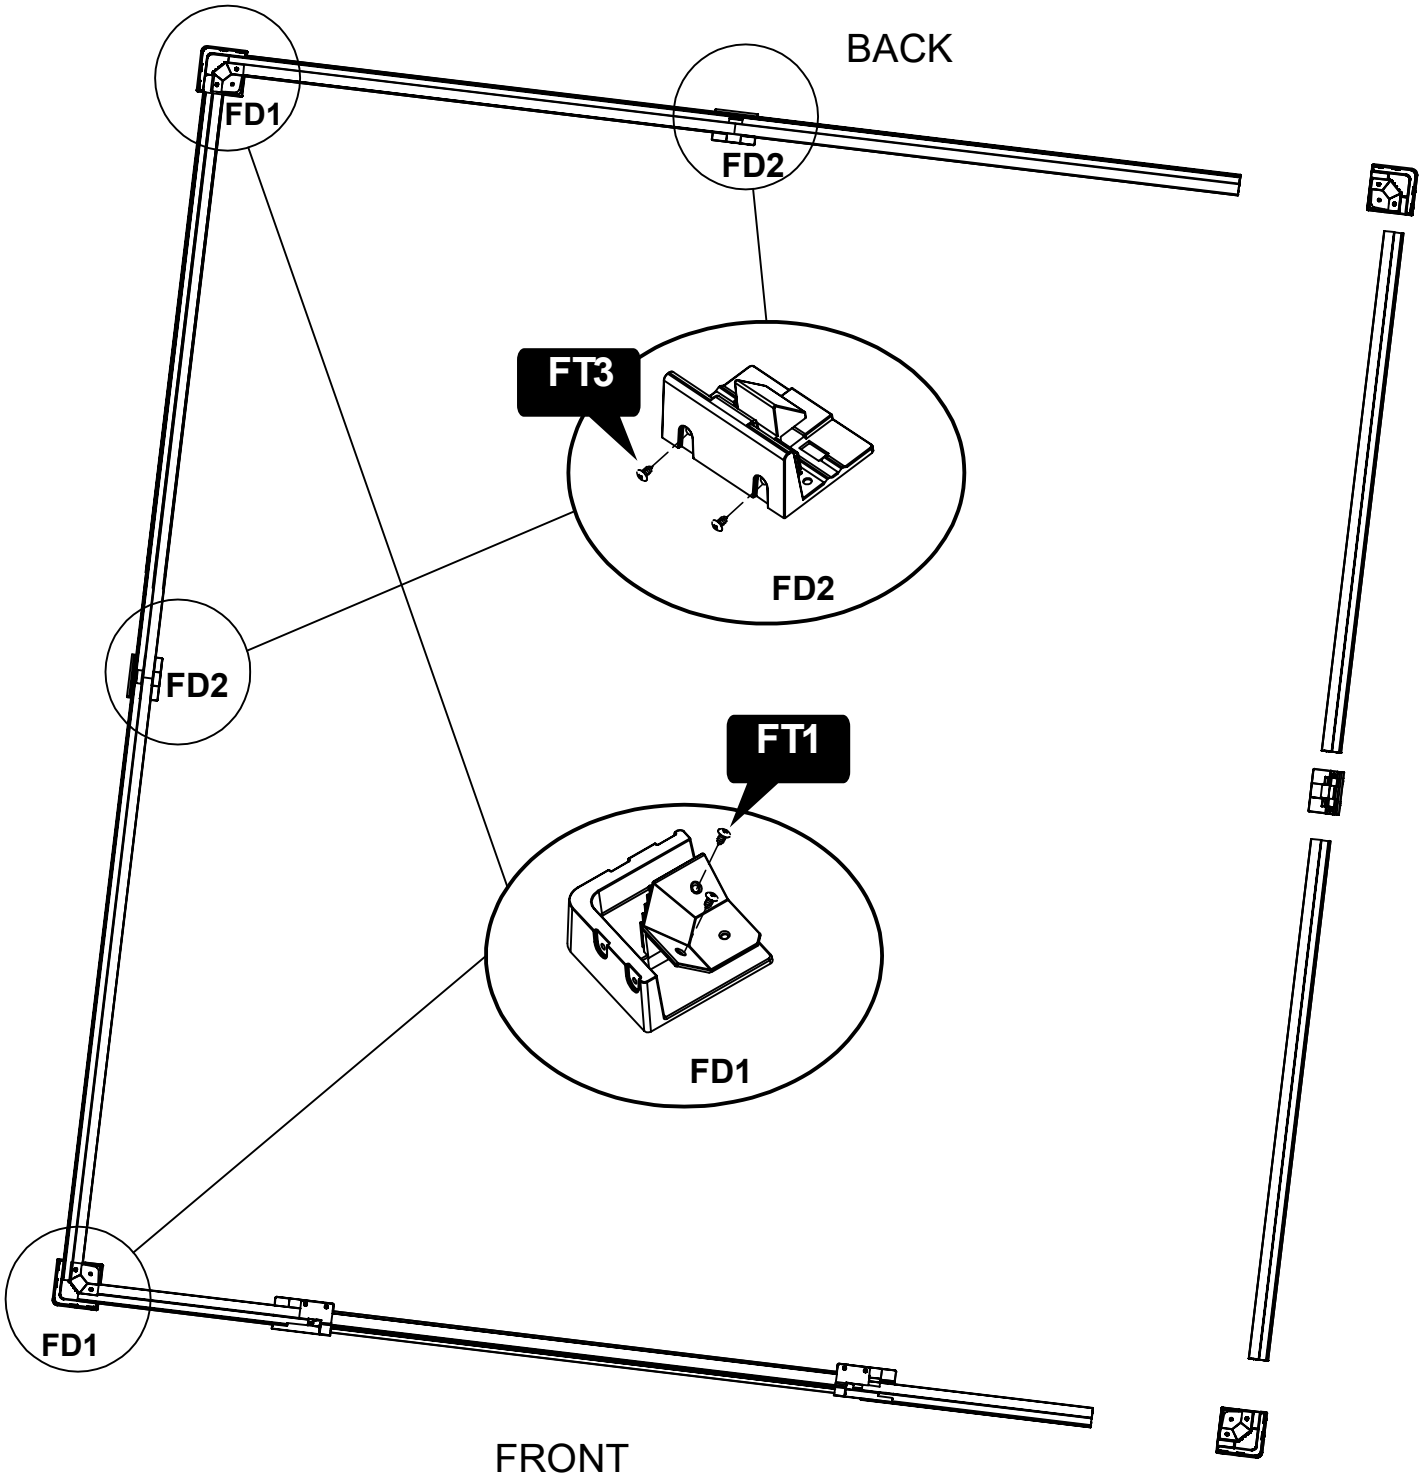

3

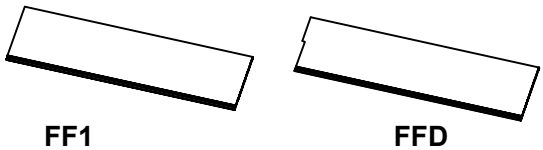


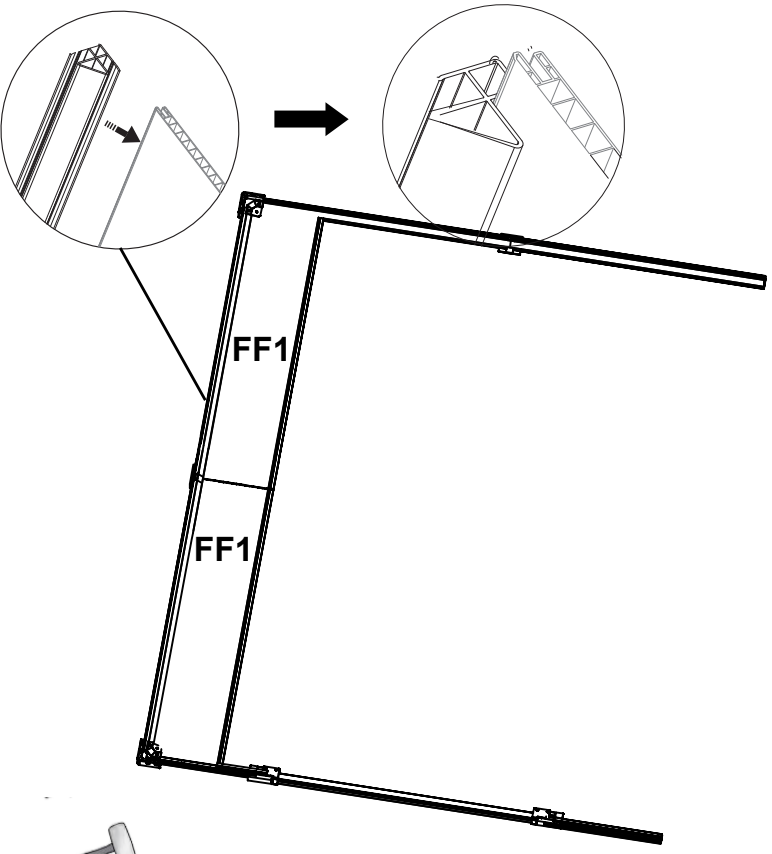


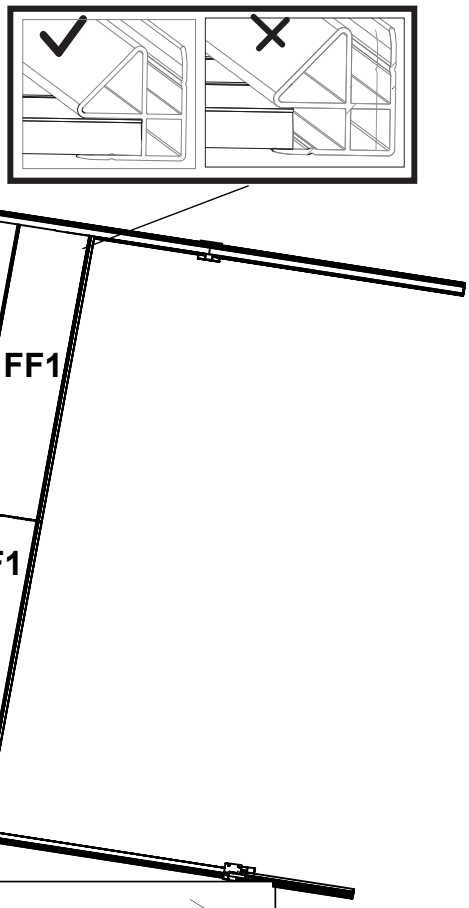





NOTE:Keep boards closely connected. Tap tight with a hammer if there are gaps.

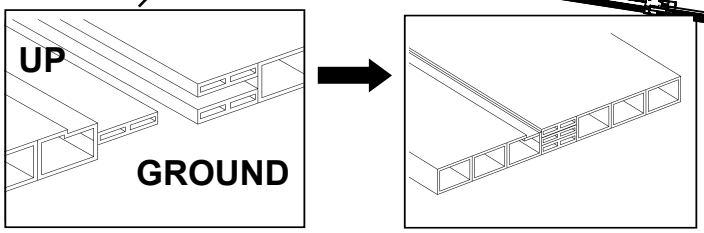


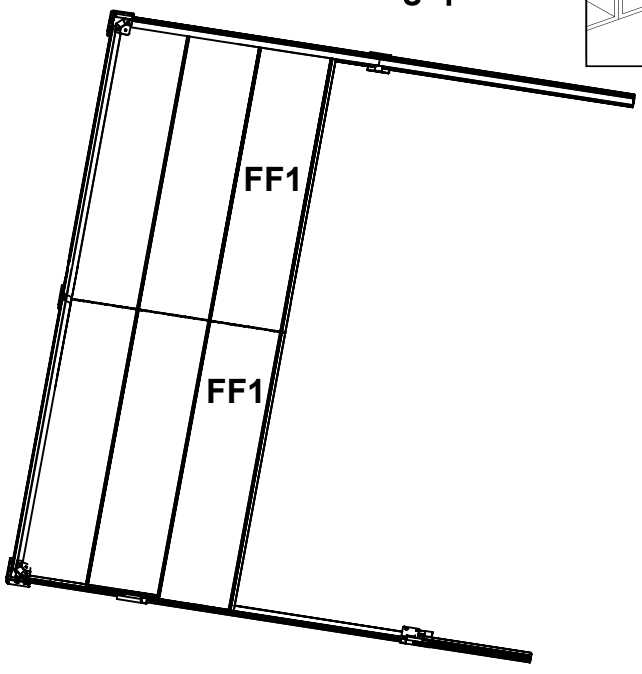

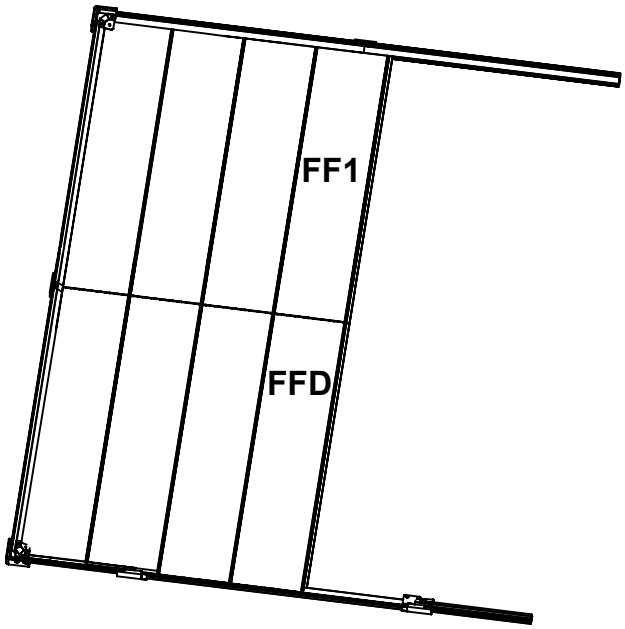


4

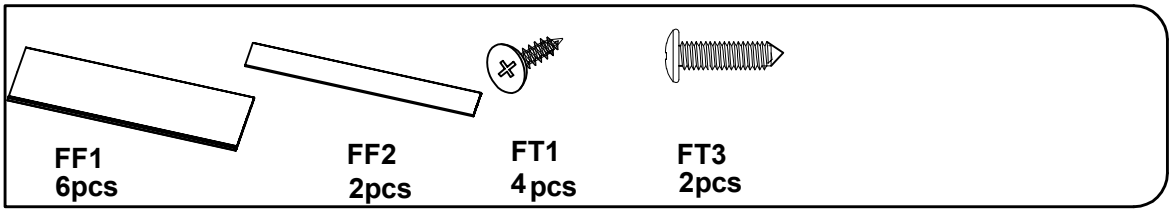
FF1
6pcs
FF2
2pcs
FT1
4pcs
FT3
2pcs

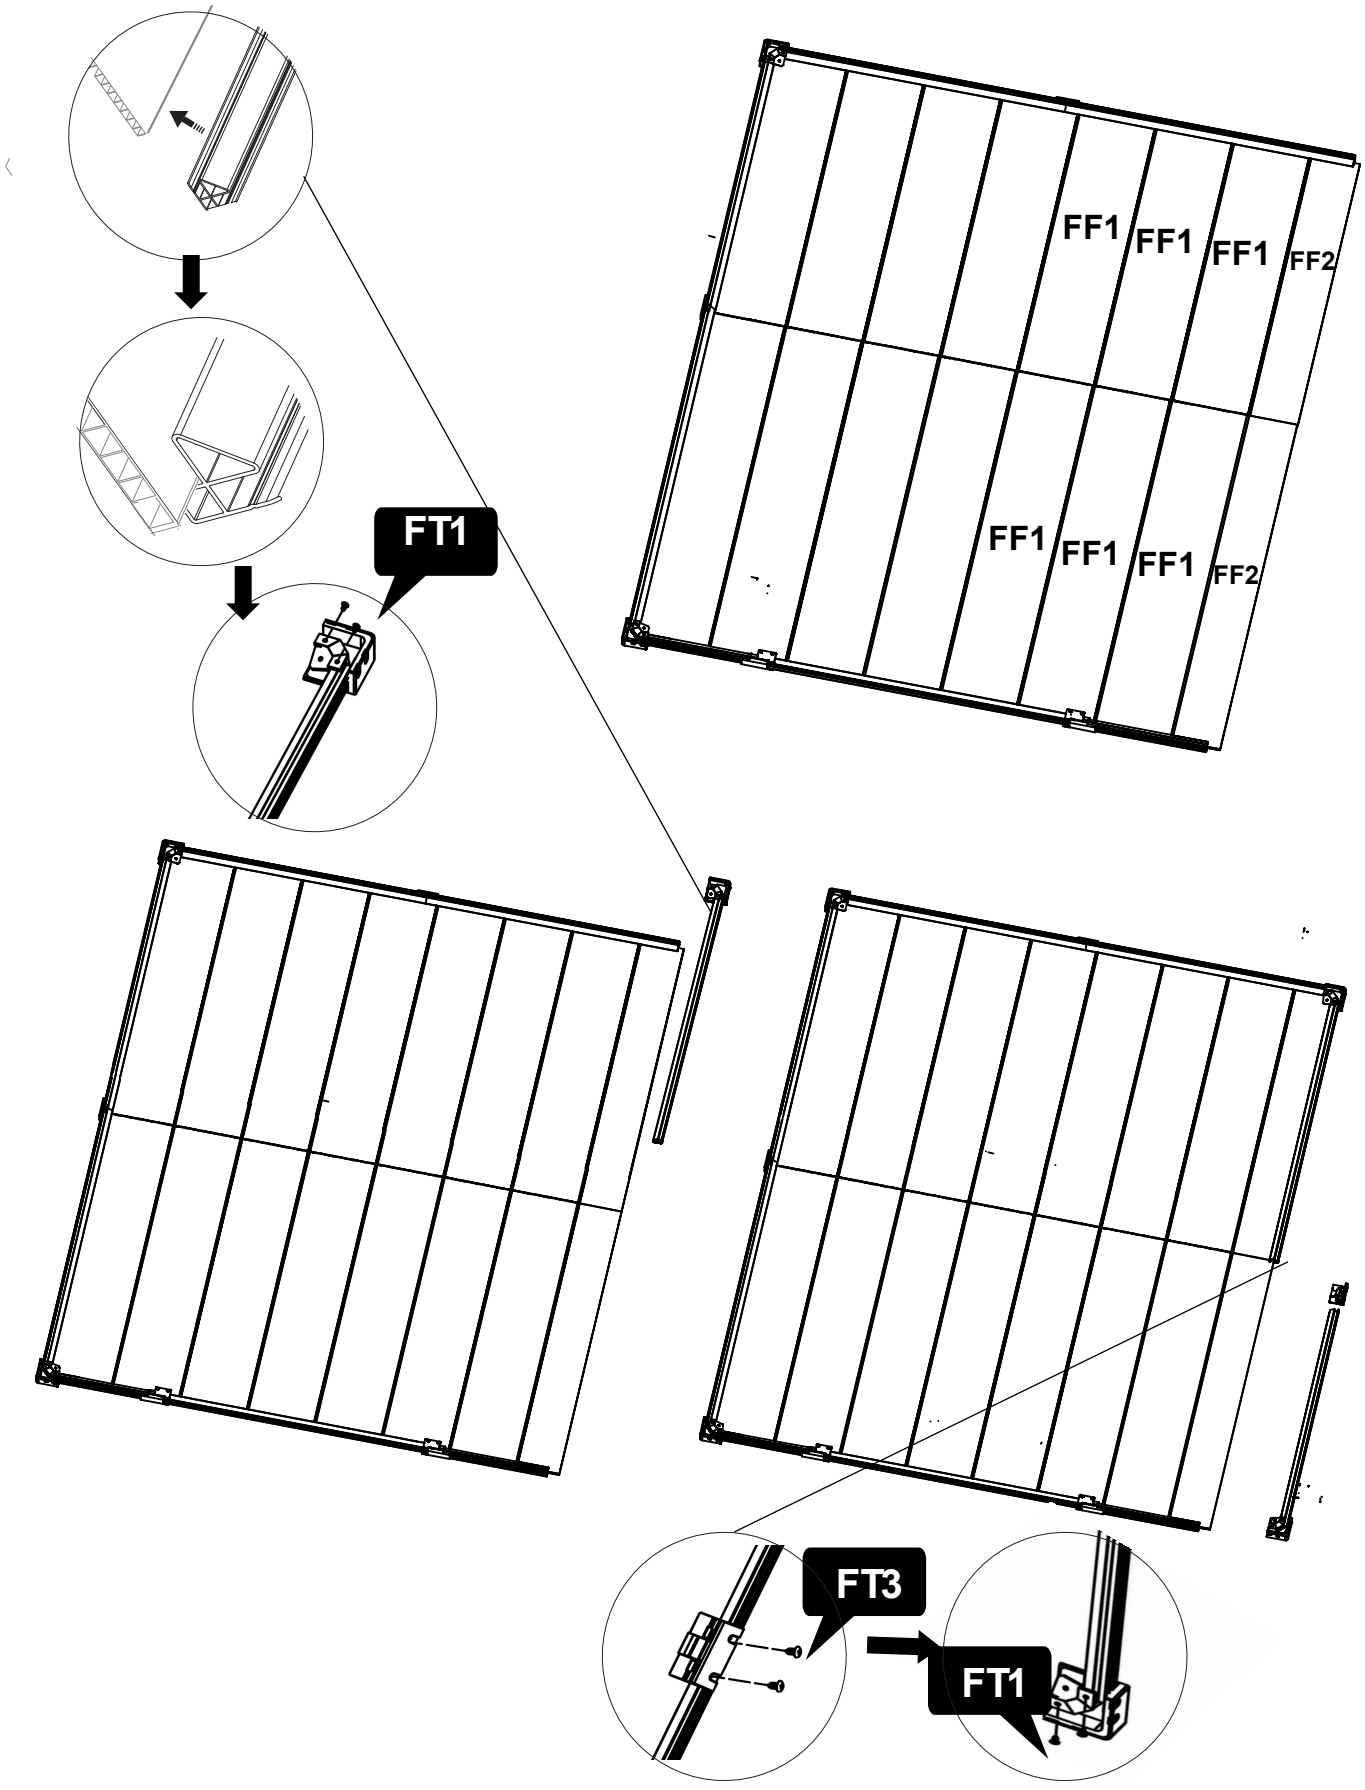
FT1
FF1
FF1
FF1
FF2
FF1
FF1
FF1
FF2
FT3
FT1

5




PSF
2pcs



FT1
14pcs



FT2
12pcs

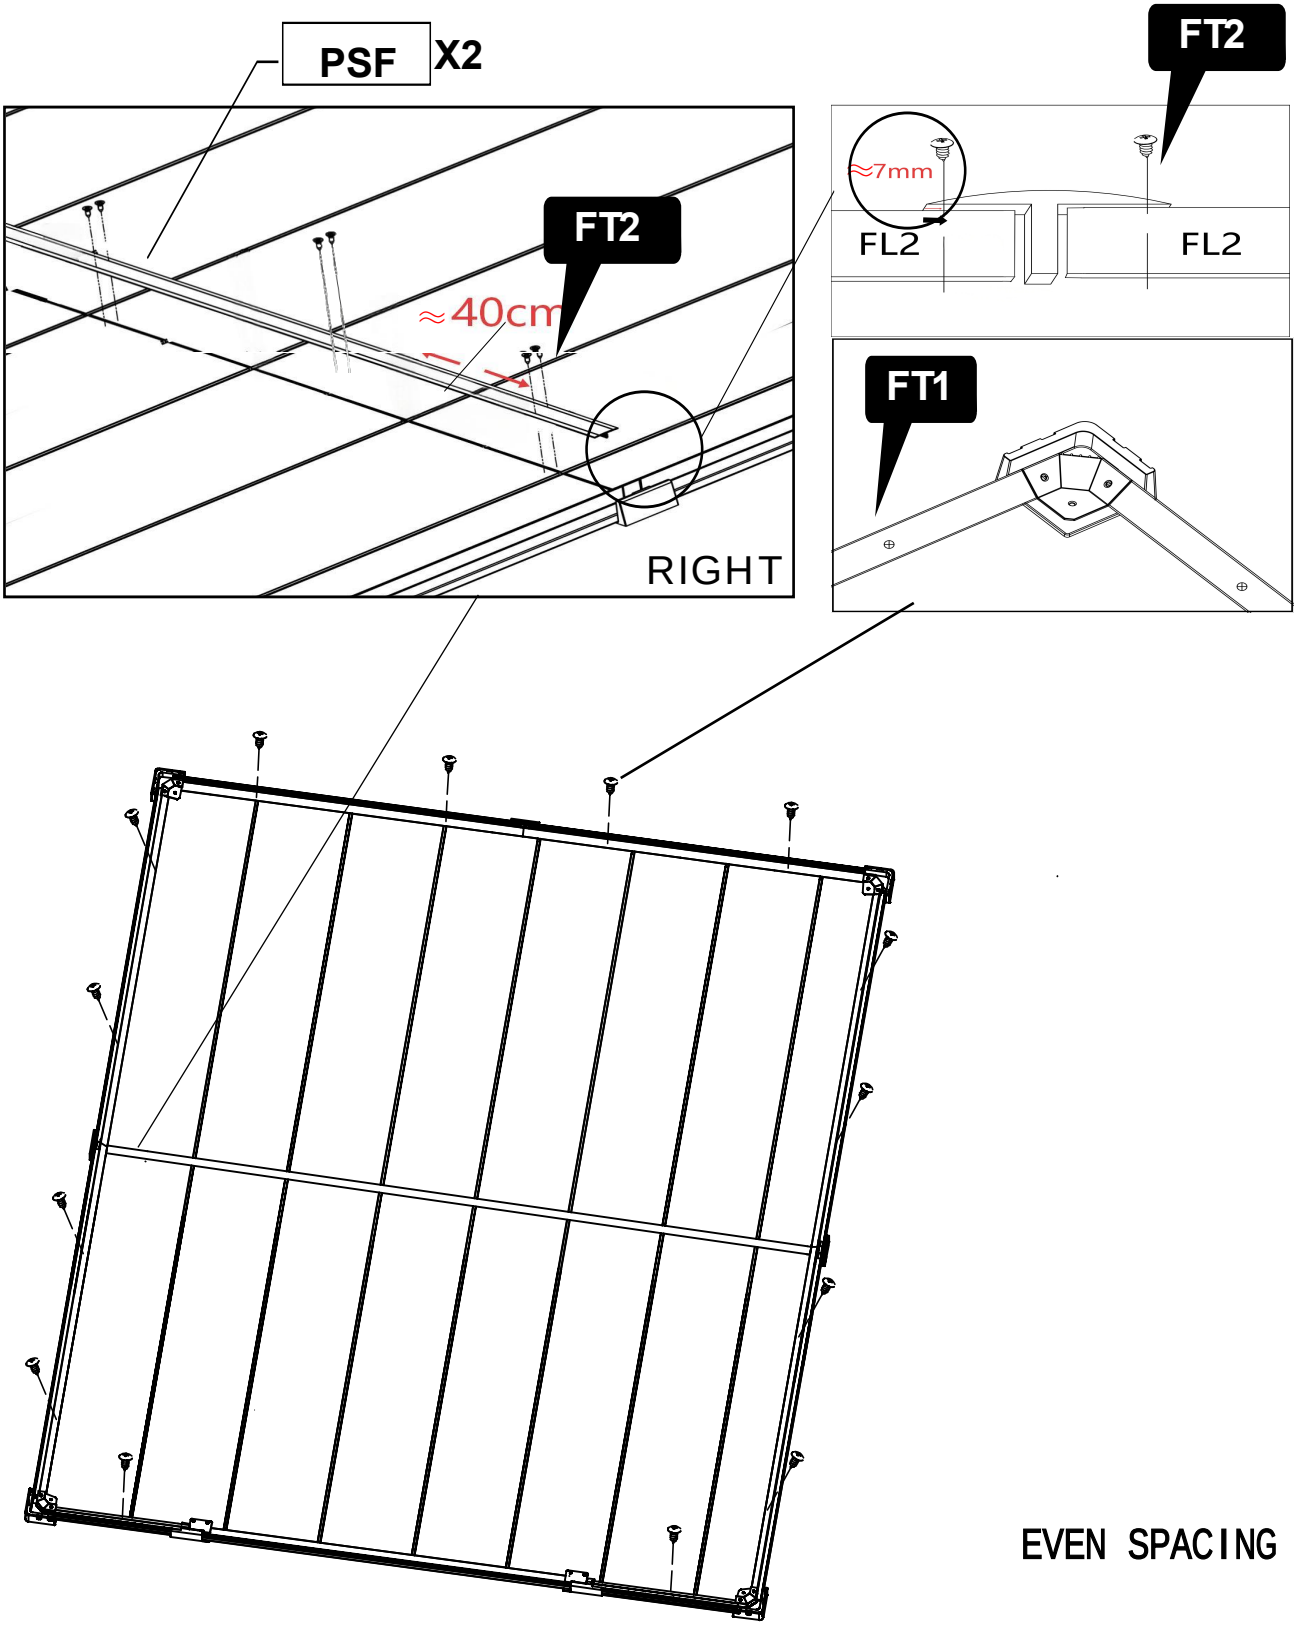


EVEN SPACING OF SCREWS


6



CY
1pc


FT2
18pcs



FT11
2pcs

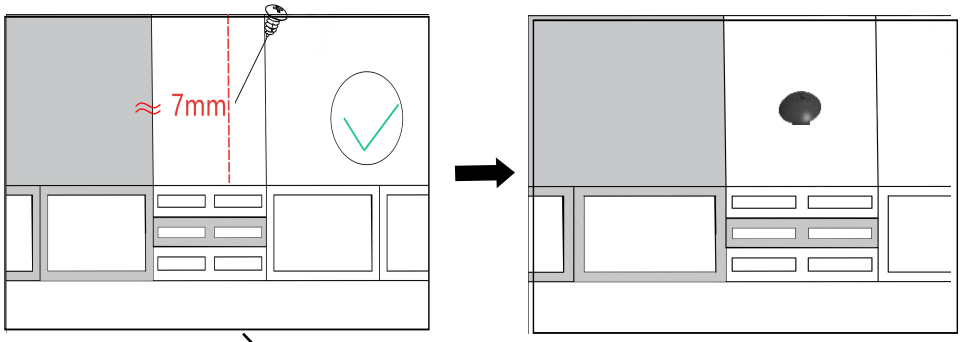

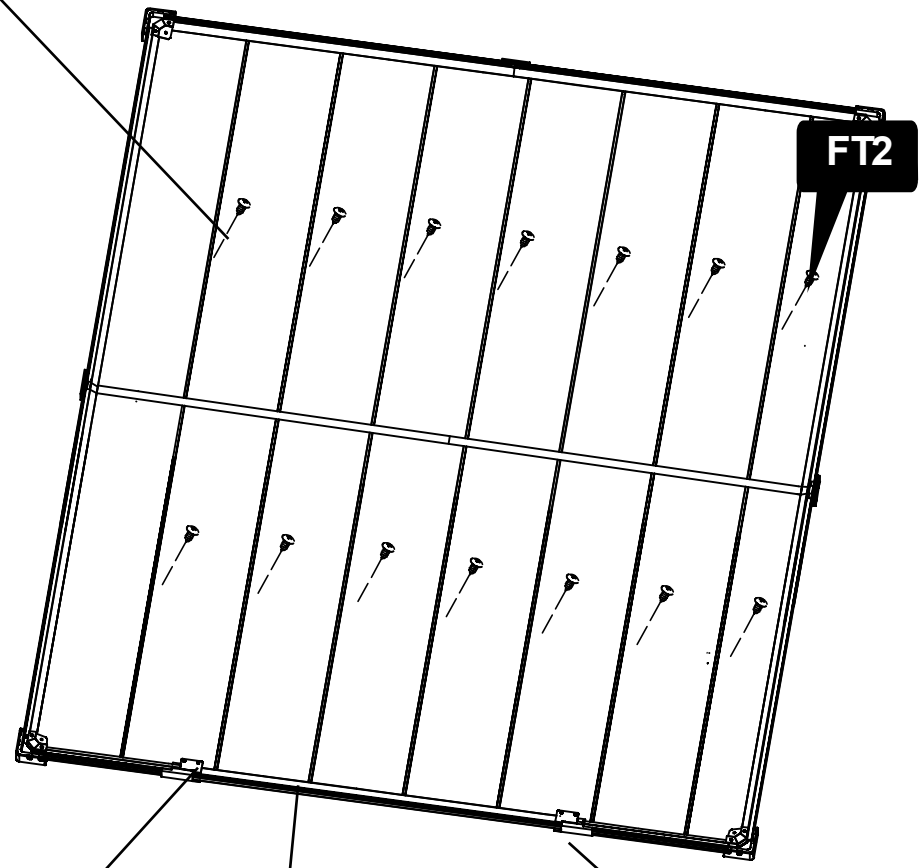


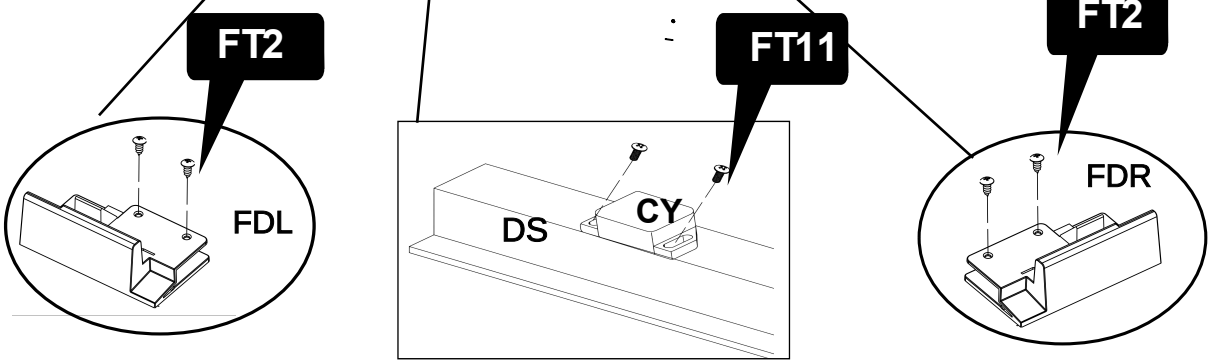


7




FDnV 2pcs | WL 1pc | WB 1pc

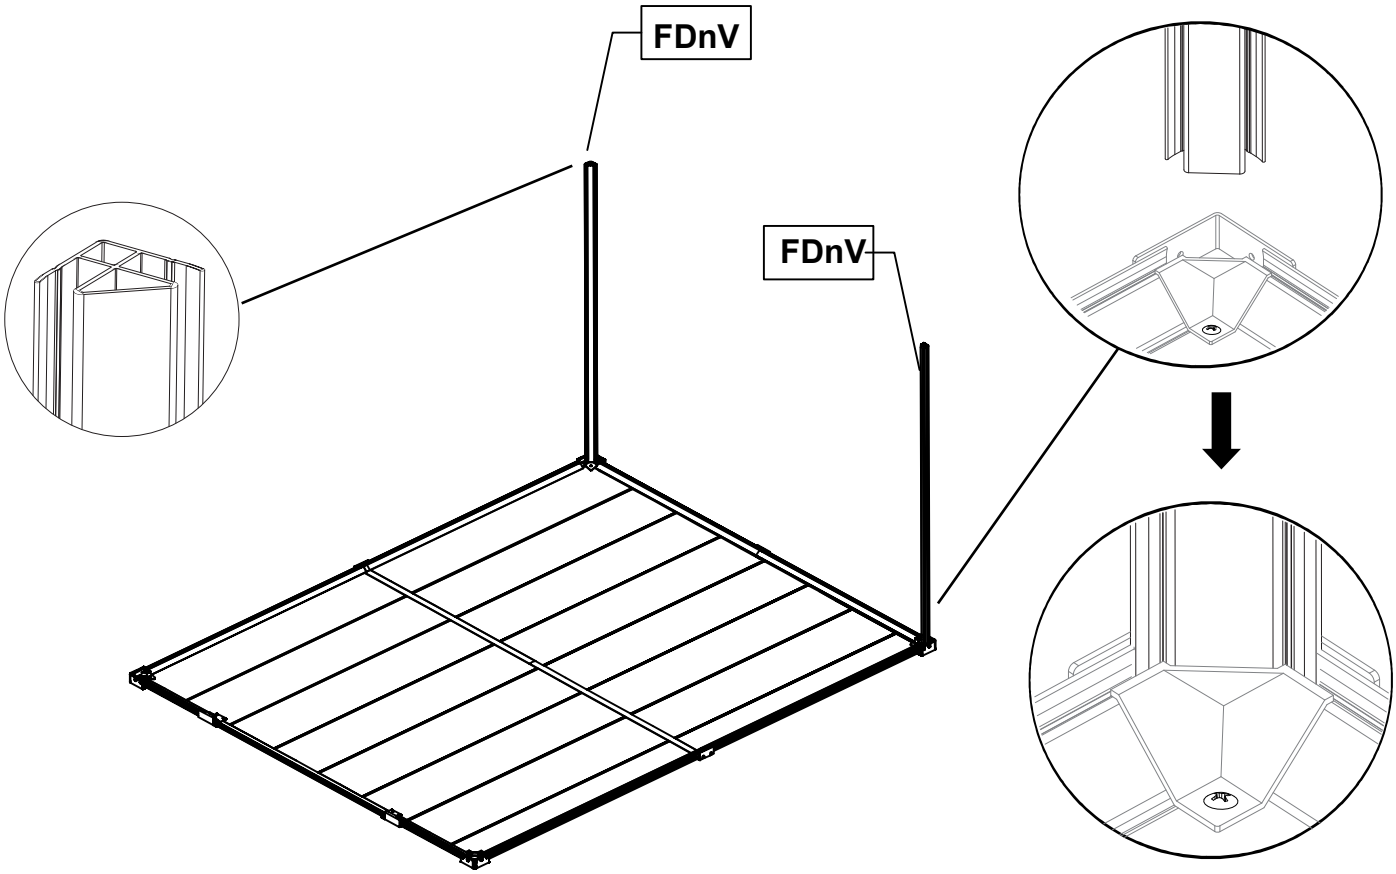


NOTE:Keep boards closely connected. Tap tight with a hammer if there are gaps.

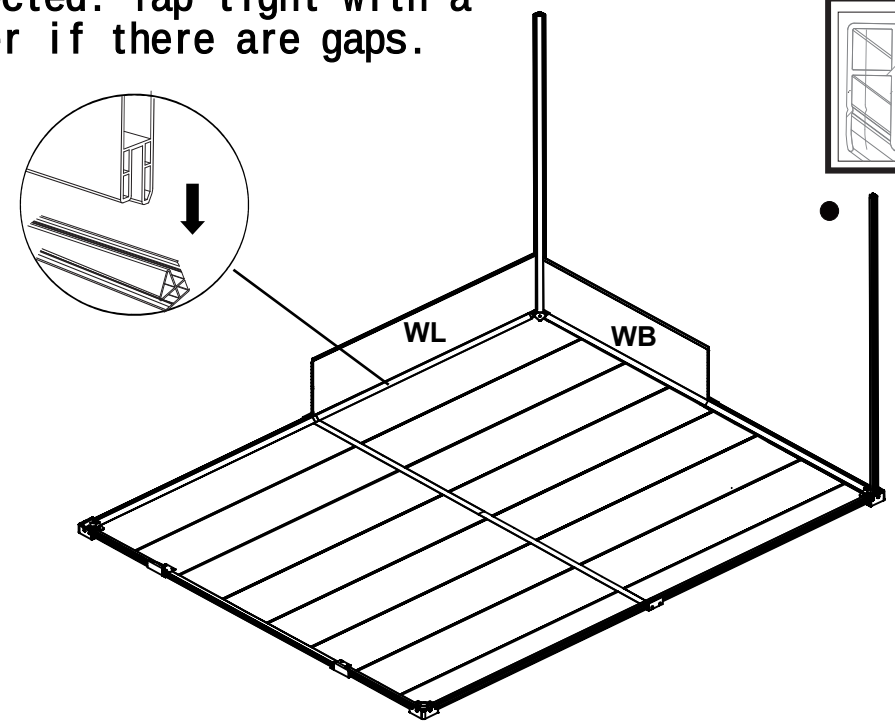


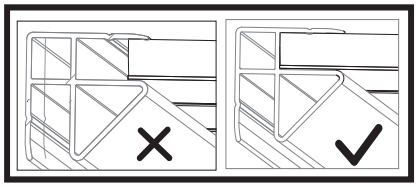


● the panel inside the profile


8

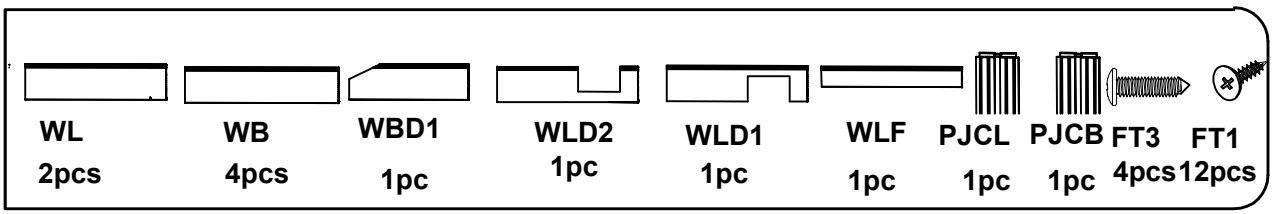

WL
2pcs
WB
4pcs
WBD1
1pc
WLD2
1pc
WLD1
1pc
WLF
1pc
PJCL
1pc
PJCB
1pc
FT3
4pcs
FT1
12pcs

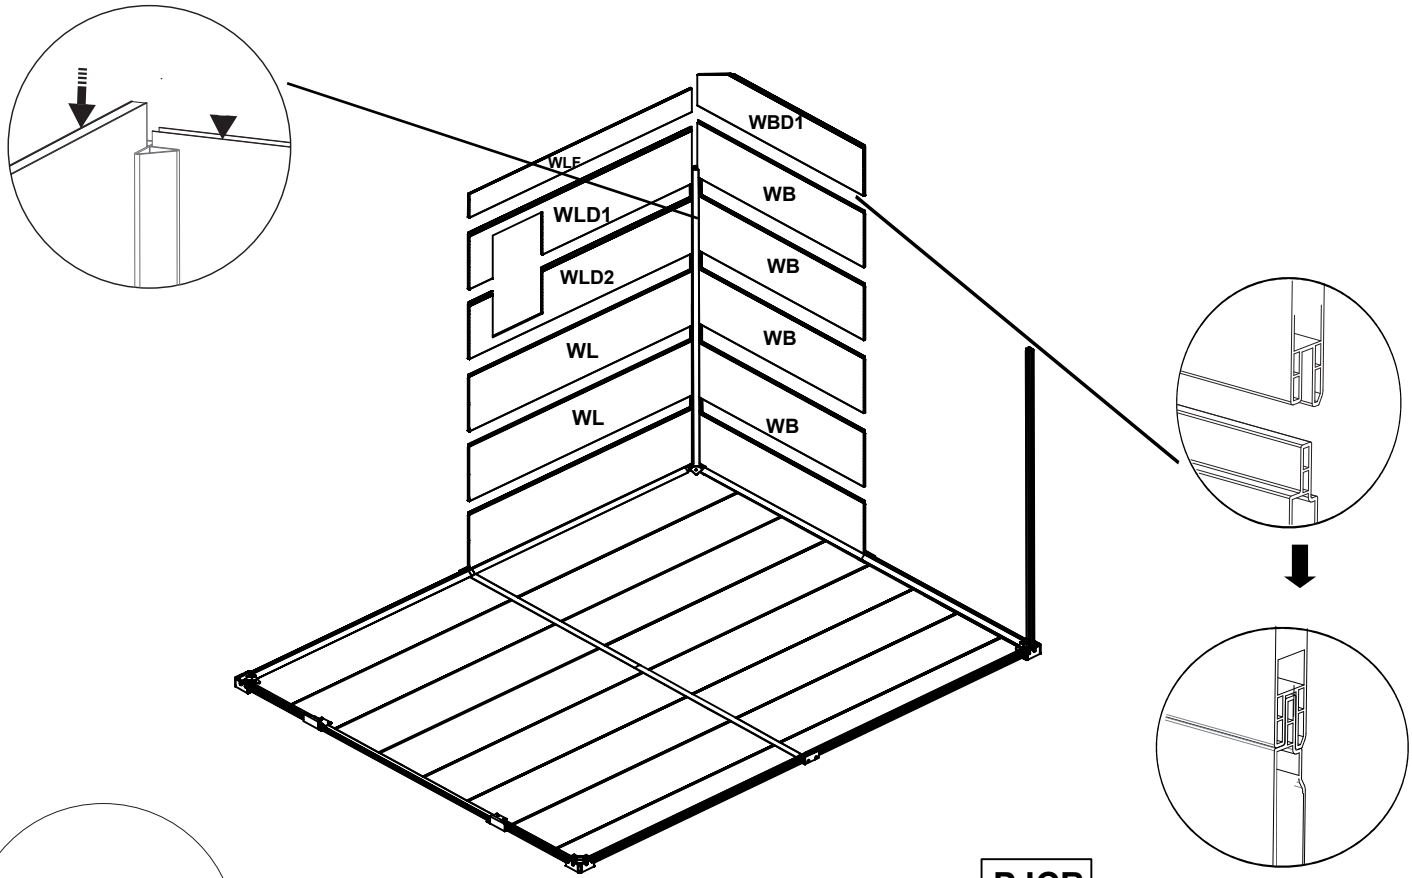

WBD1
WLF
WB
WLD1
WB
WLD2
WB
WL
WB
WL
WB

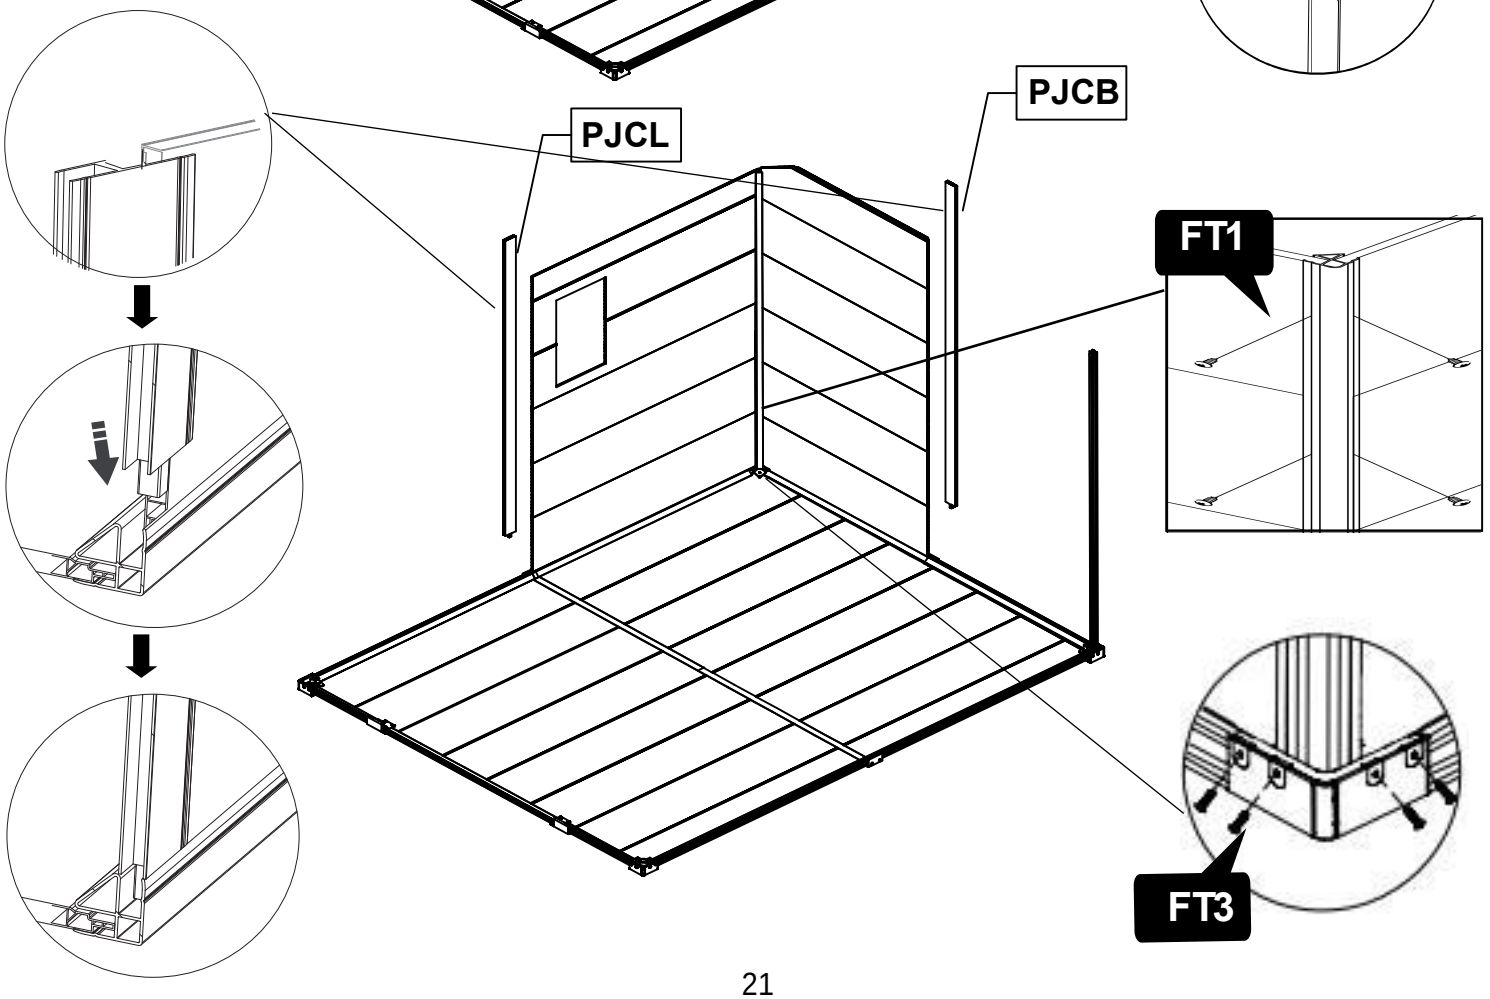

PJCL
PJCB
FT1
FT3


9

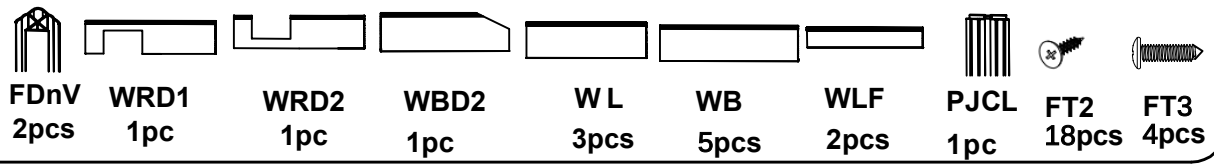
FDnV 2pcs
WRD1 1pc
WRD2 1pc
WBD2 1pc
W L 3pcs
WB 5pcs
WLF 2pcs
PJCL 1pc
FT2 18pcs
FT3 4pcs

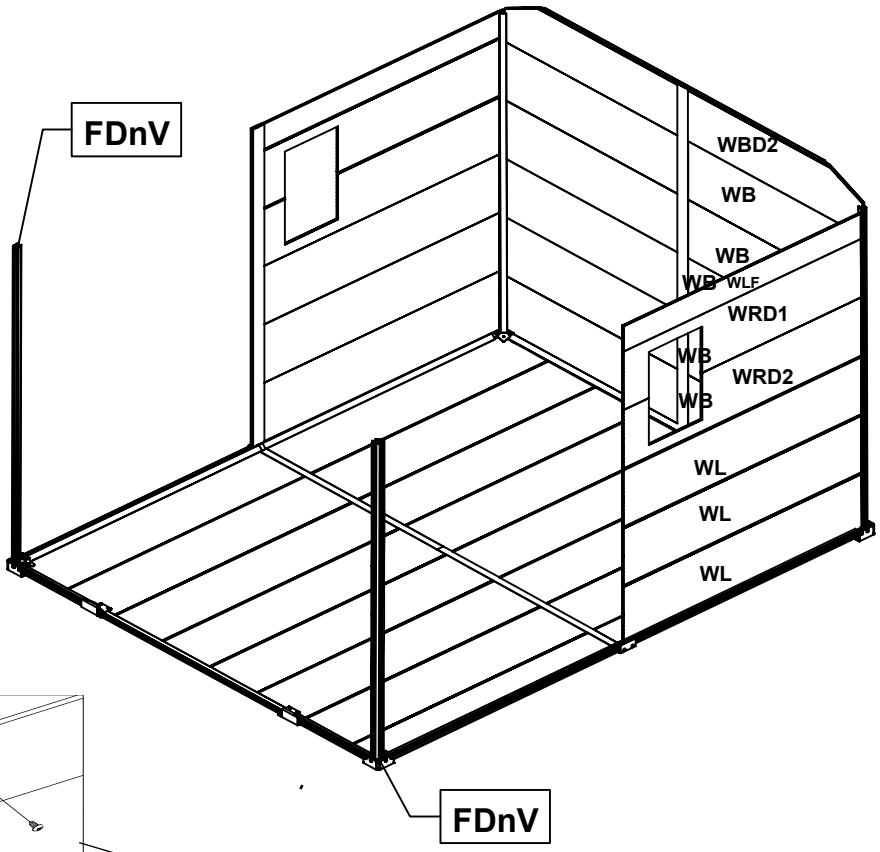

FDnV
WBD2
WB
WB
WB
WLF
WRD1
WB
WRD2
WB
WL
WL
WL
FDnV

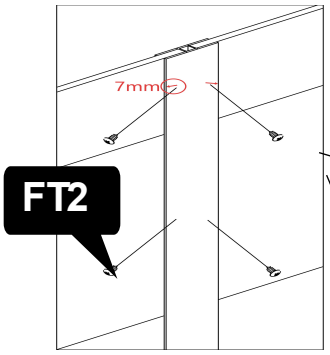

7mm
FT2

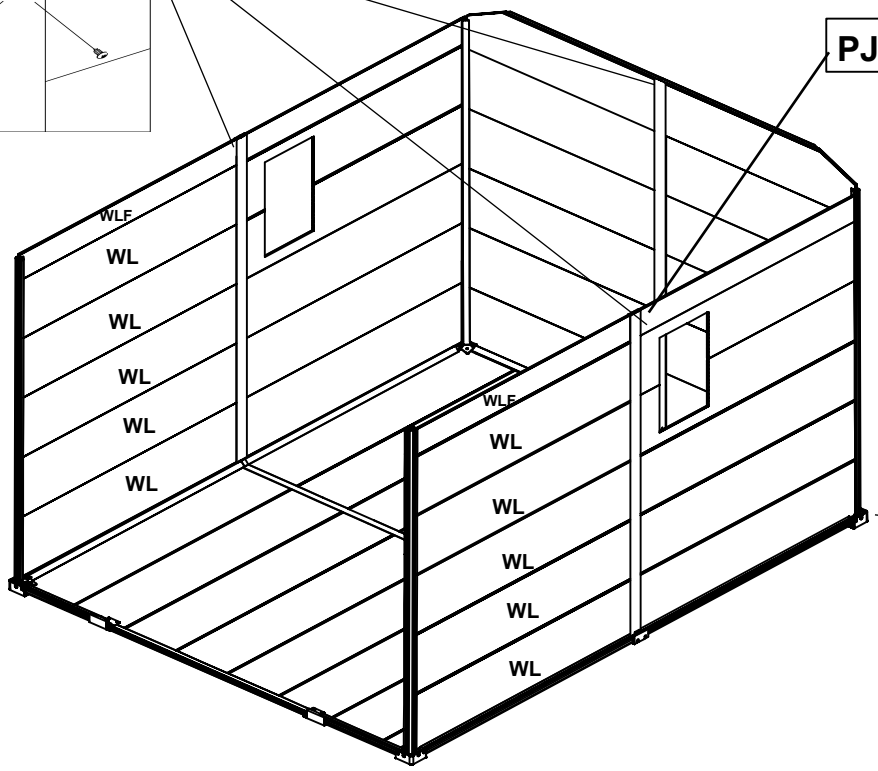
PJCL
WLF
WL
WL
WL
WL
WL
WLF
WL
WL
WL
WL
WL

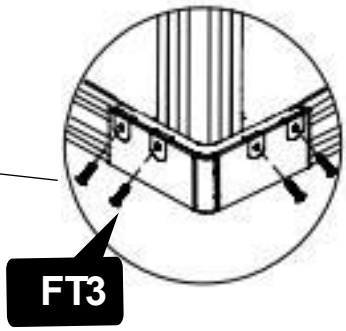
FT3

10

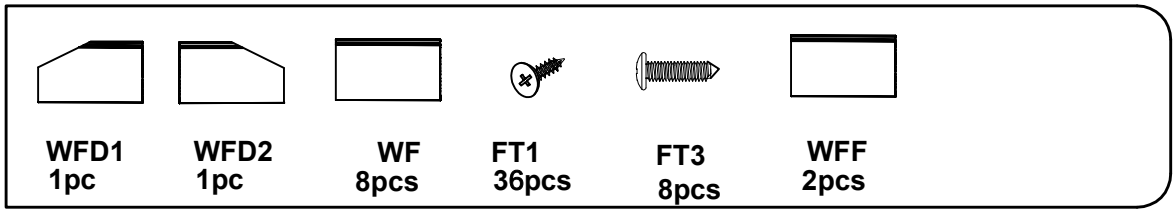
WFD1
1pc
WFD2
1pc
WF
8pcs
FT1
36pcs
FT3
8pcs
WFF
2pcs

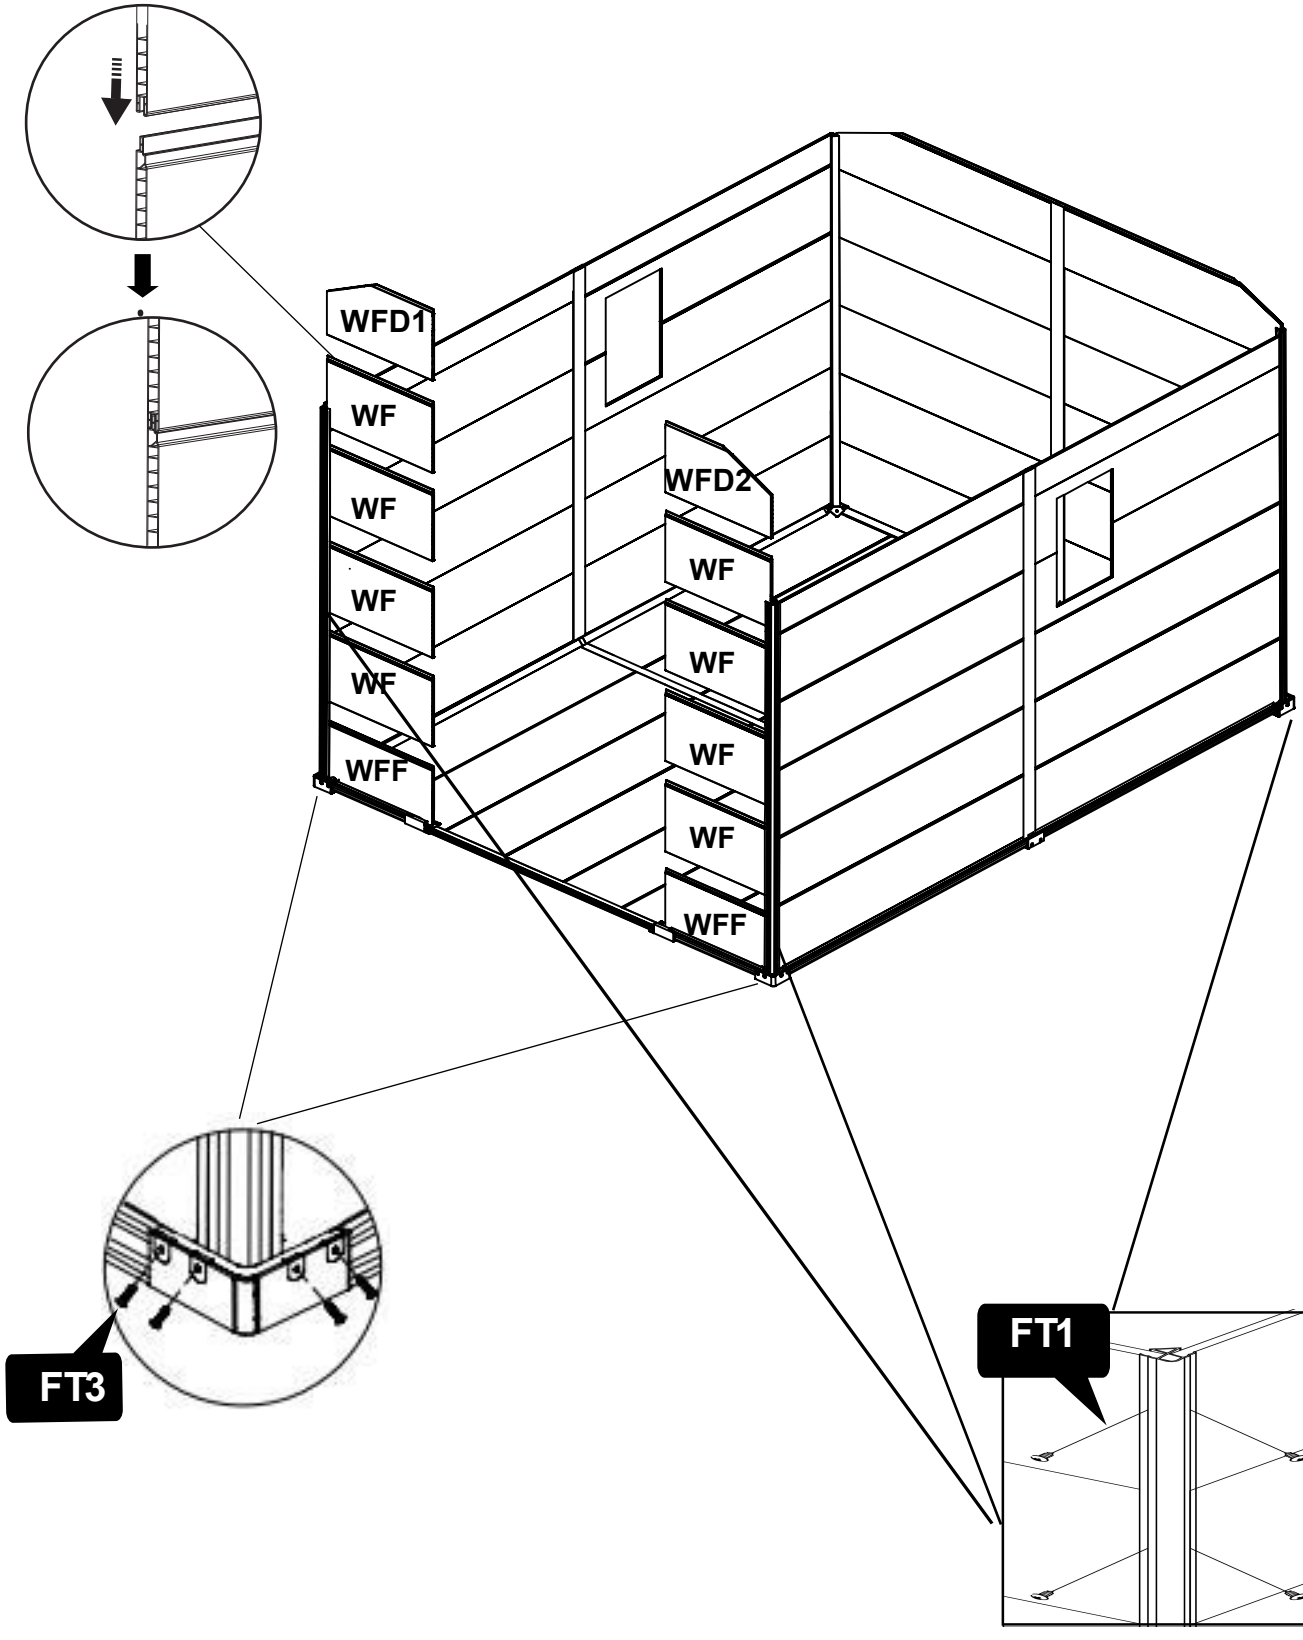
WFD1
WF
WF
WF
WF
WFF
WFD2
WF
WF
WF
WF
WFF
FT3
FT1

11



DAL
1pc



DAR
1pc


FT2
10pcs




Insert DAL and DAR fully to the bottom, aligned evenly.

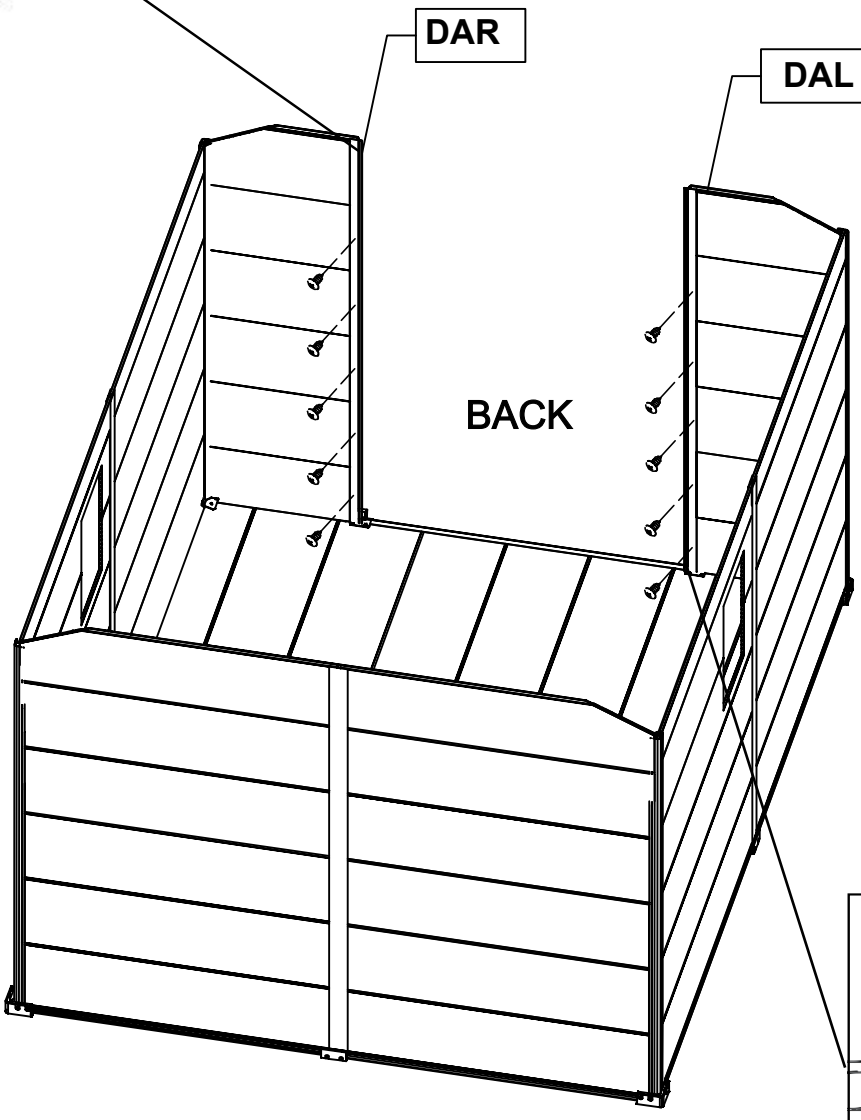

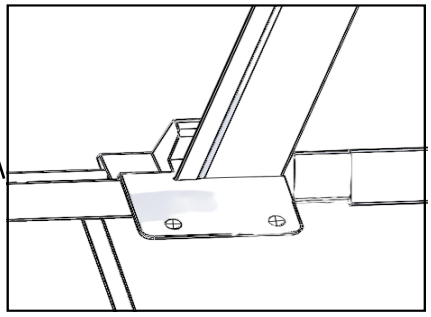


12


DW-OUT
2pcs



DW-IN
2pcs


WIR10.PC
2pcs


FT2
16pcs

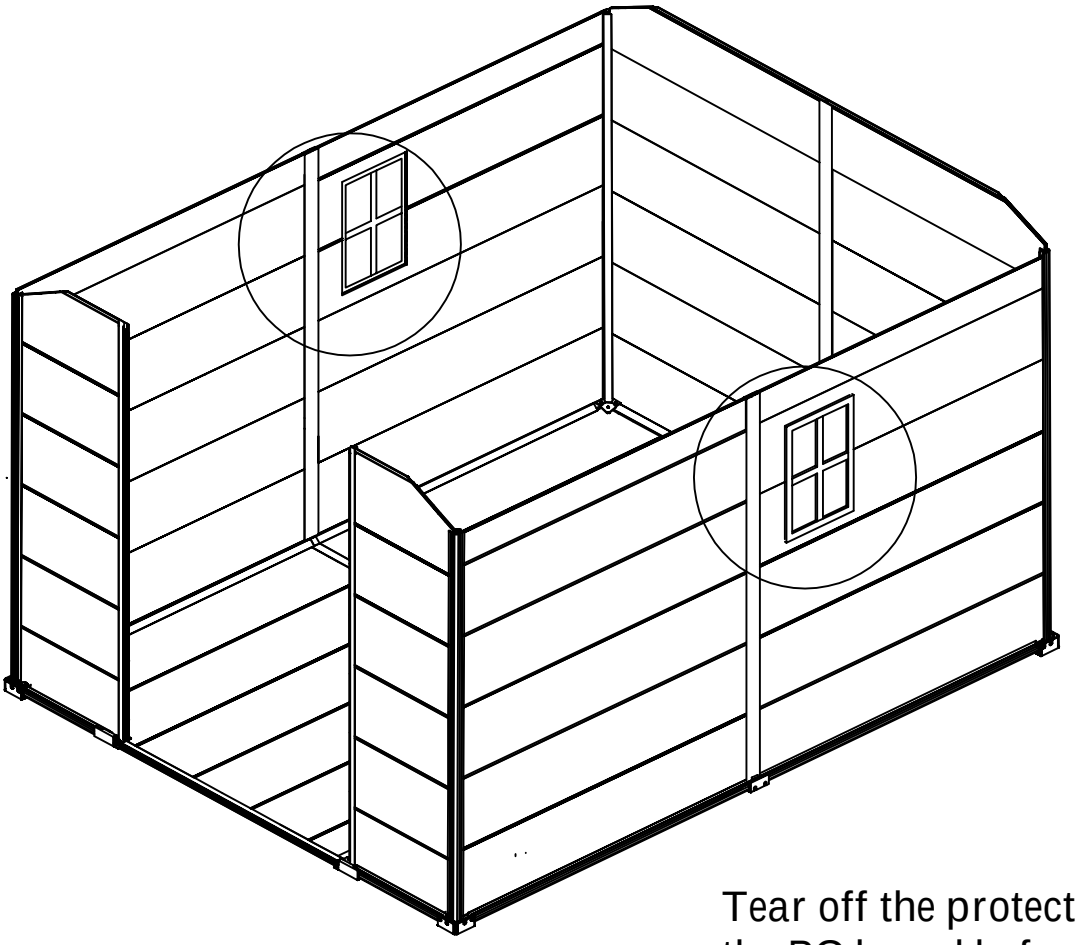

Tear off the protective film of the PC board before use.

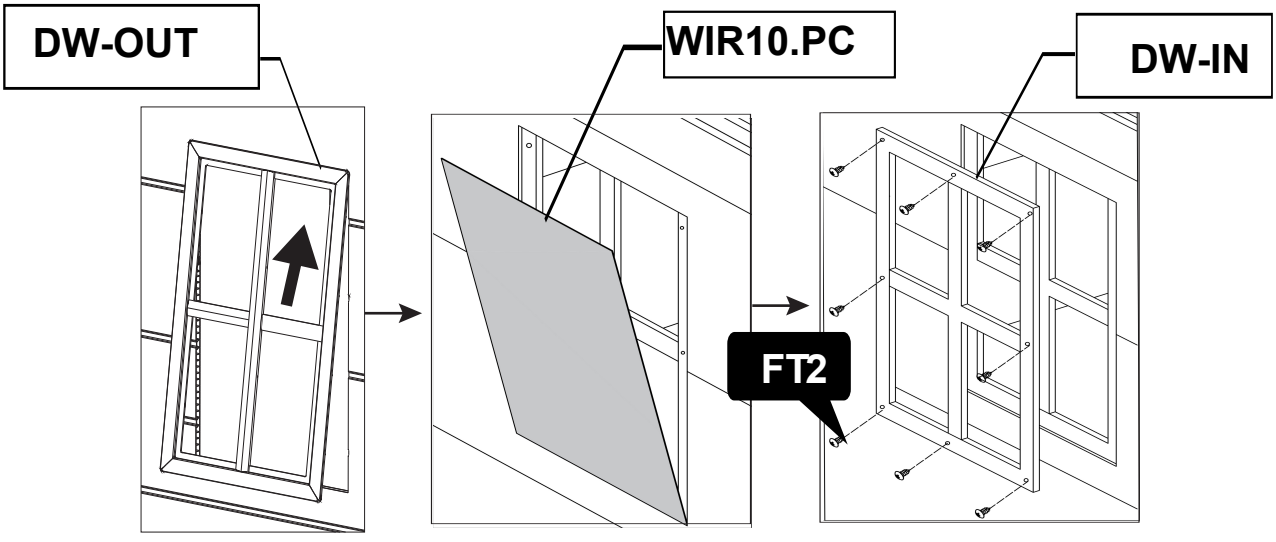


OUTSIDE **INSIDE** **INSIDE**


Two-person inside-outside coordination required.

13





FT3
14pcs

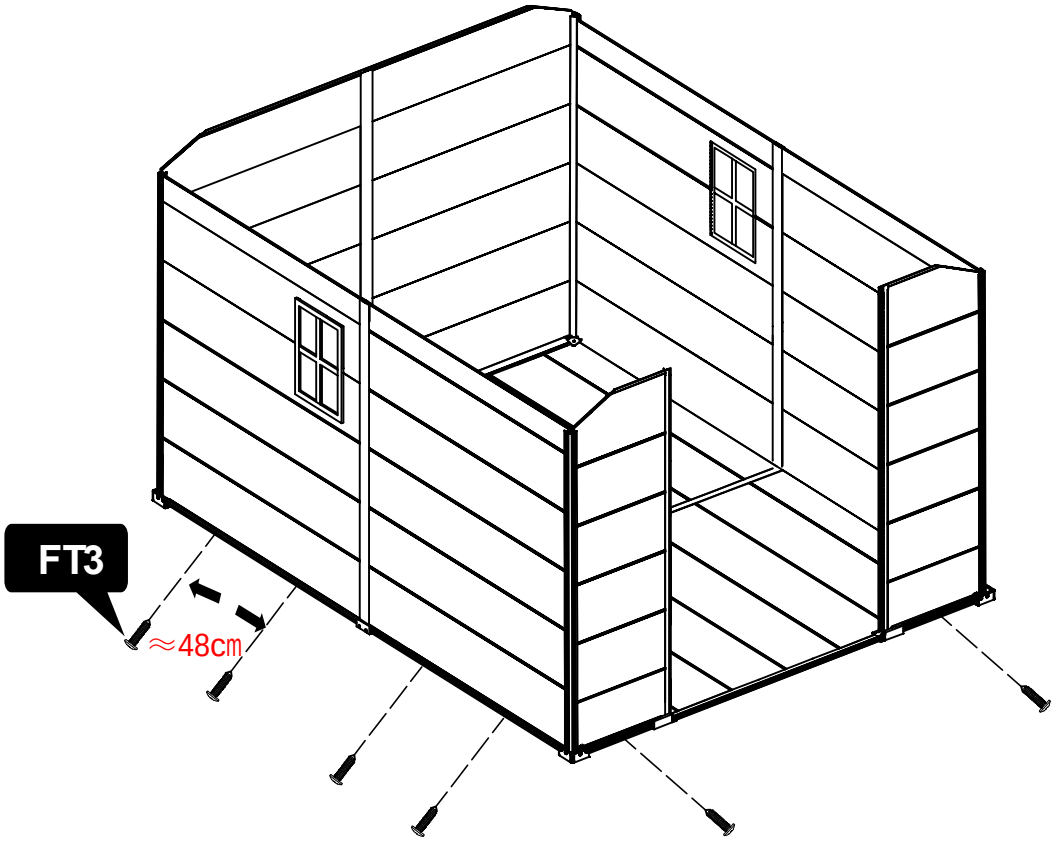

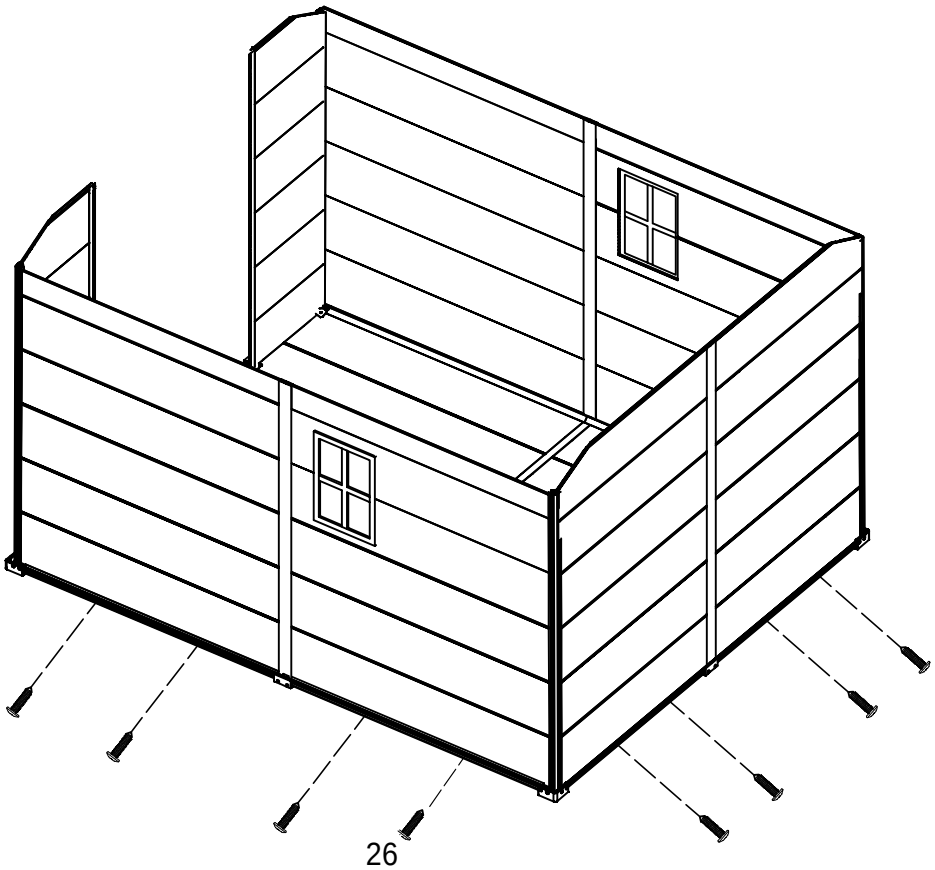


14

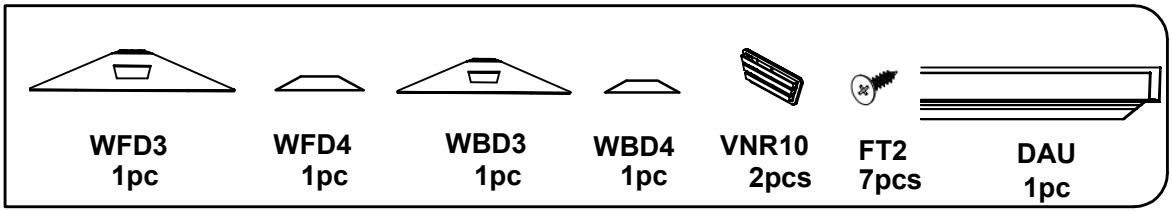
WFD3
1pc
WFD4
1pc
WBD3
1pc
WBD4
1pc
VNR10
2pcs
FT2
7pcs
DAU
1pc

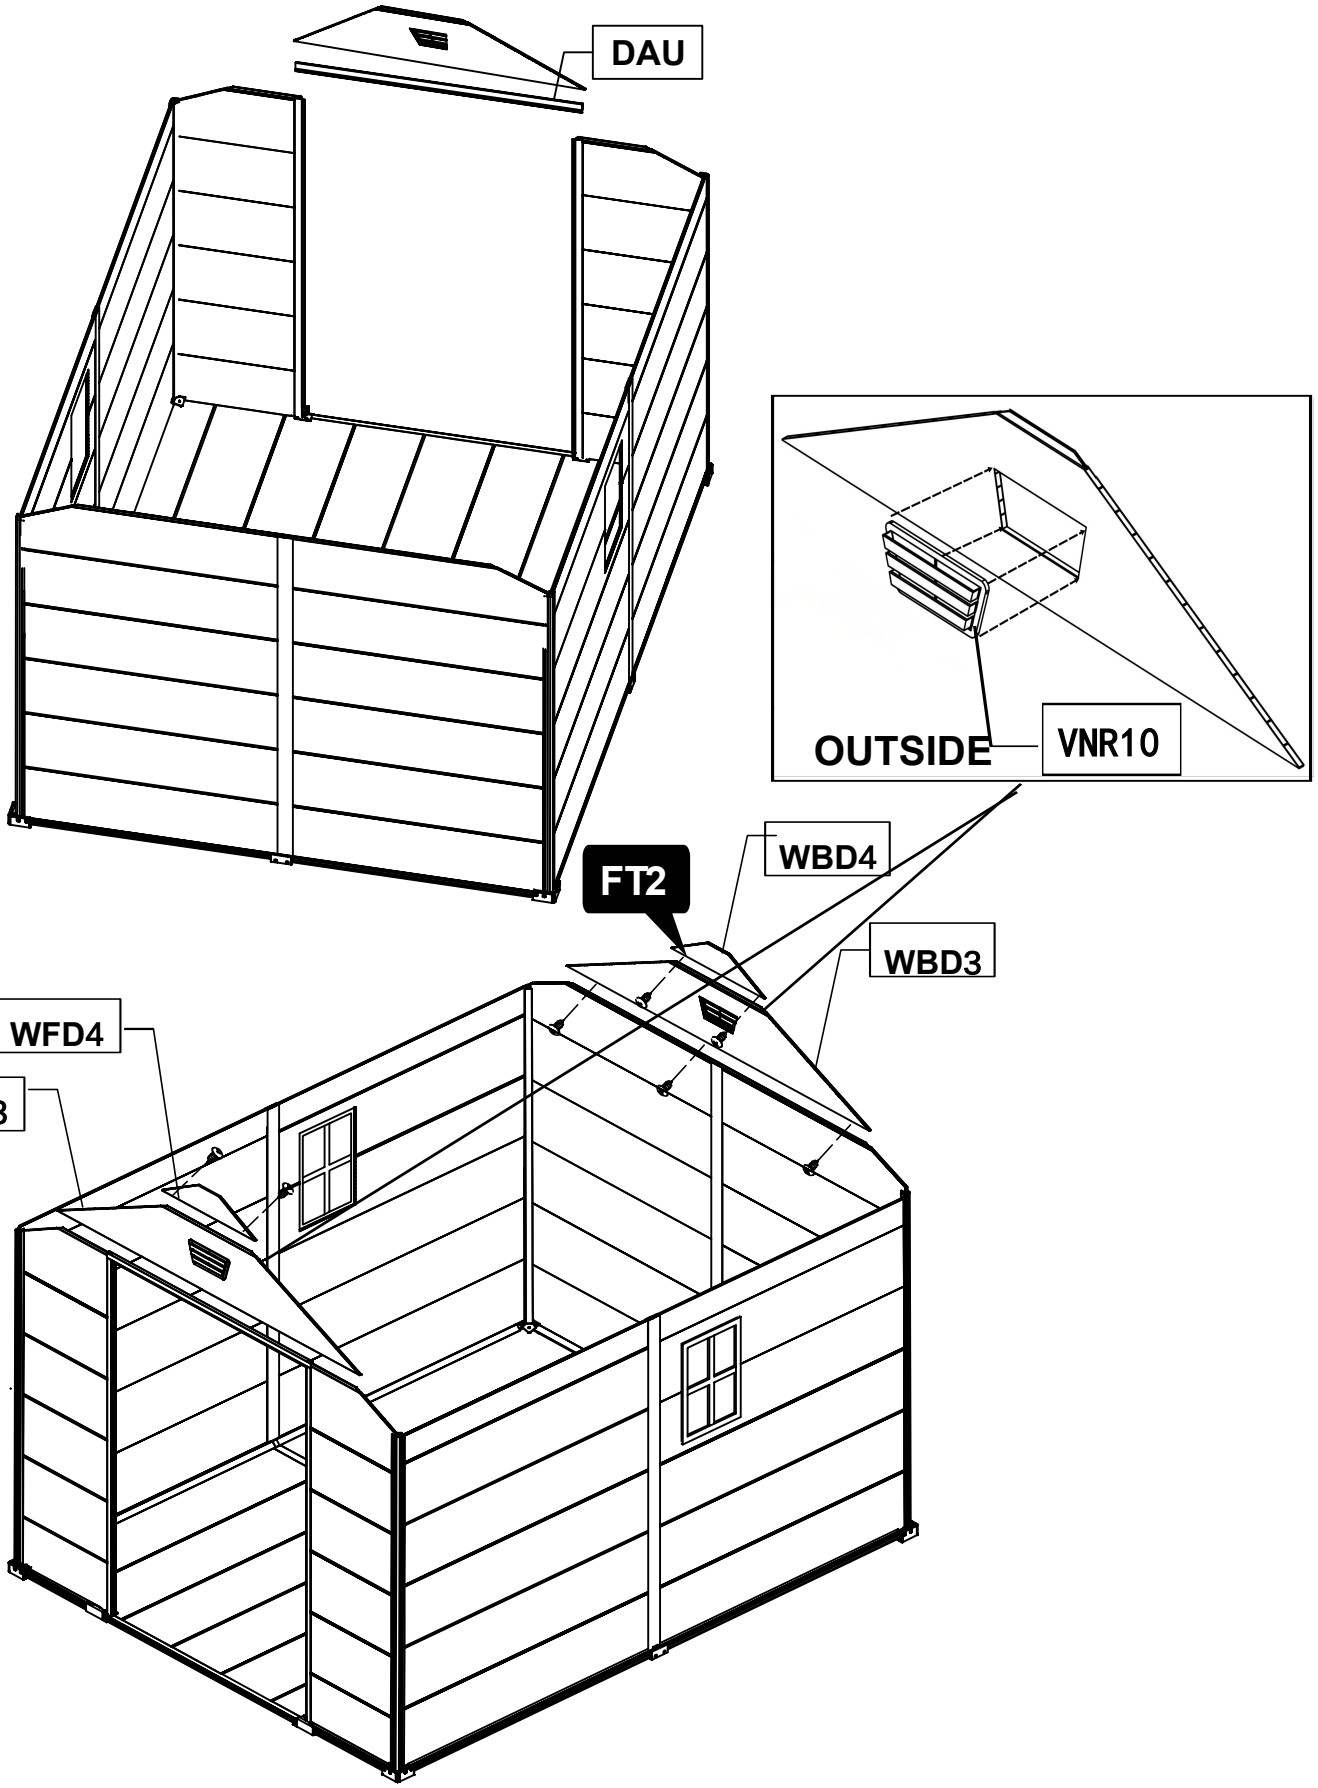
DAU
OUTSIDE
VNR10
FT2
WBD4
WBD3
WFD4
WFD3

15




HD1
2pcs





FT1
8pcs




FT2
1pc

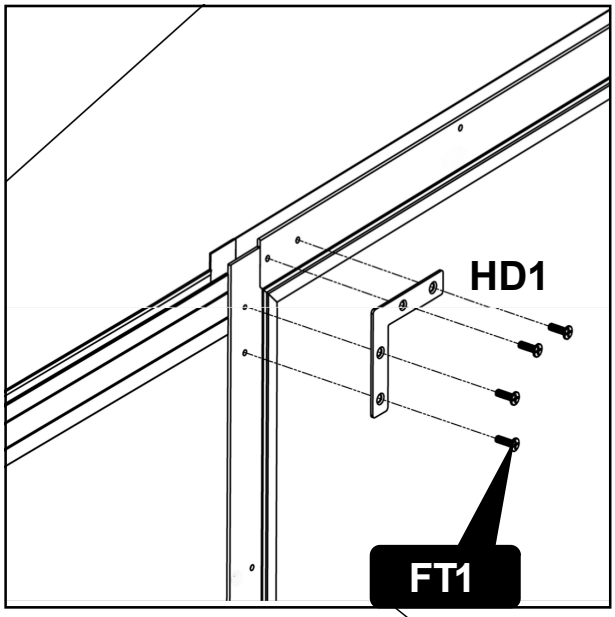

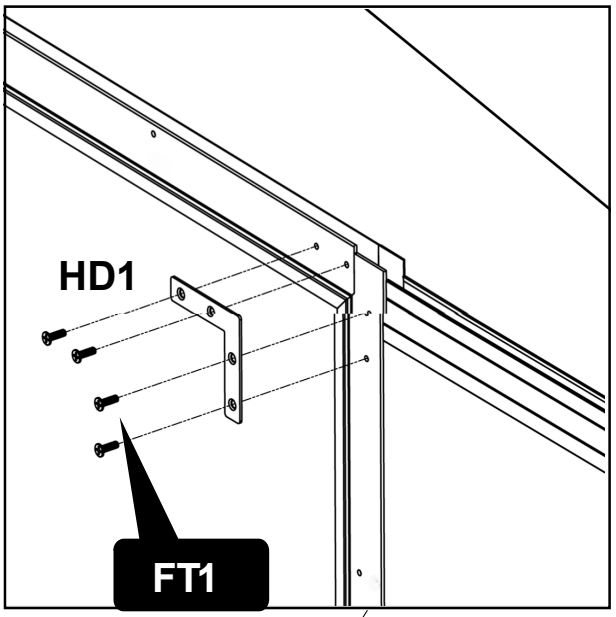

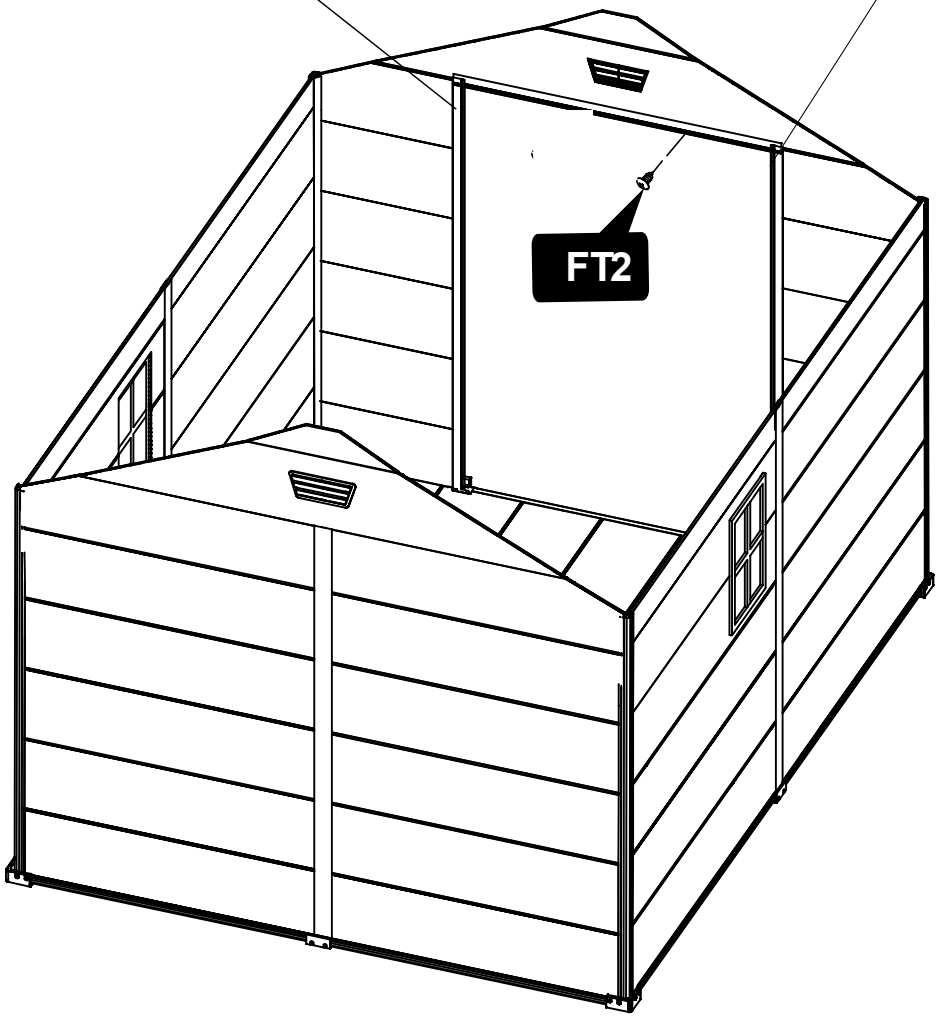



16

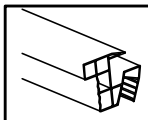
R10L
4pcs



RS
2pcs


FT1
12pcs

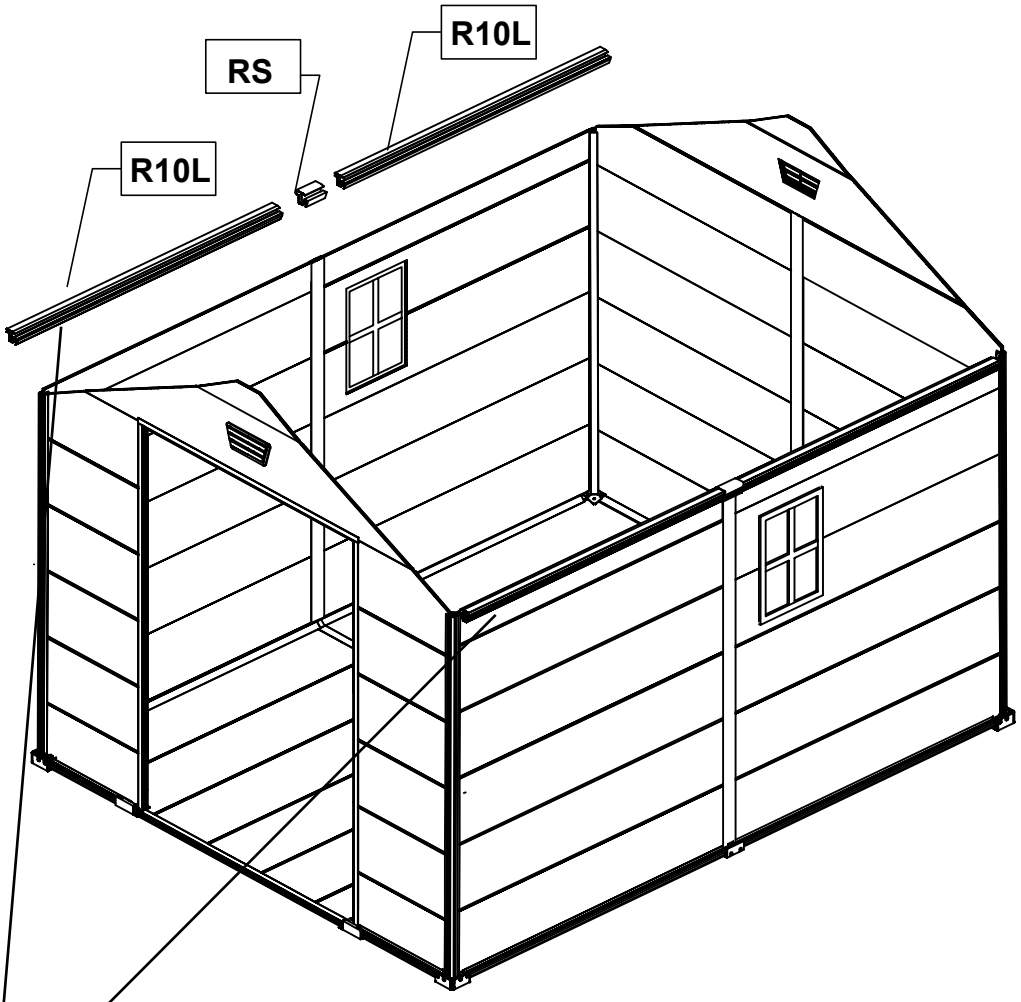


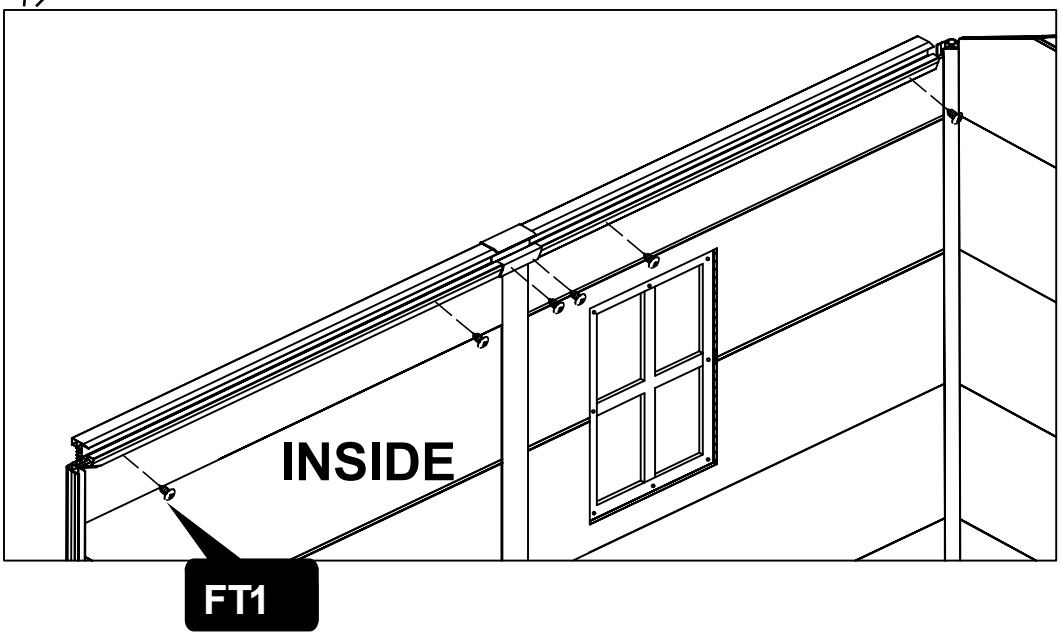


17

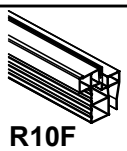



R10F
4pcs

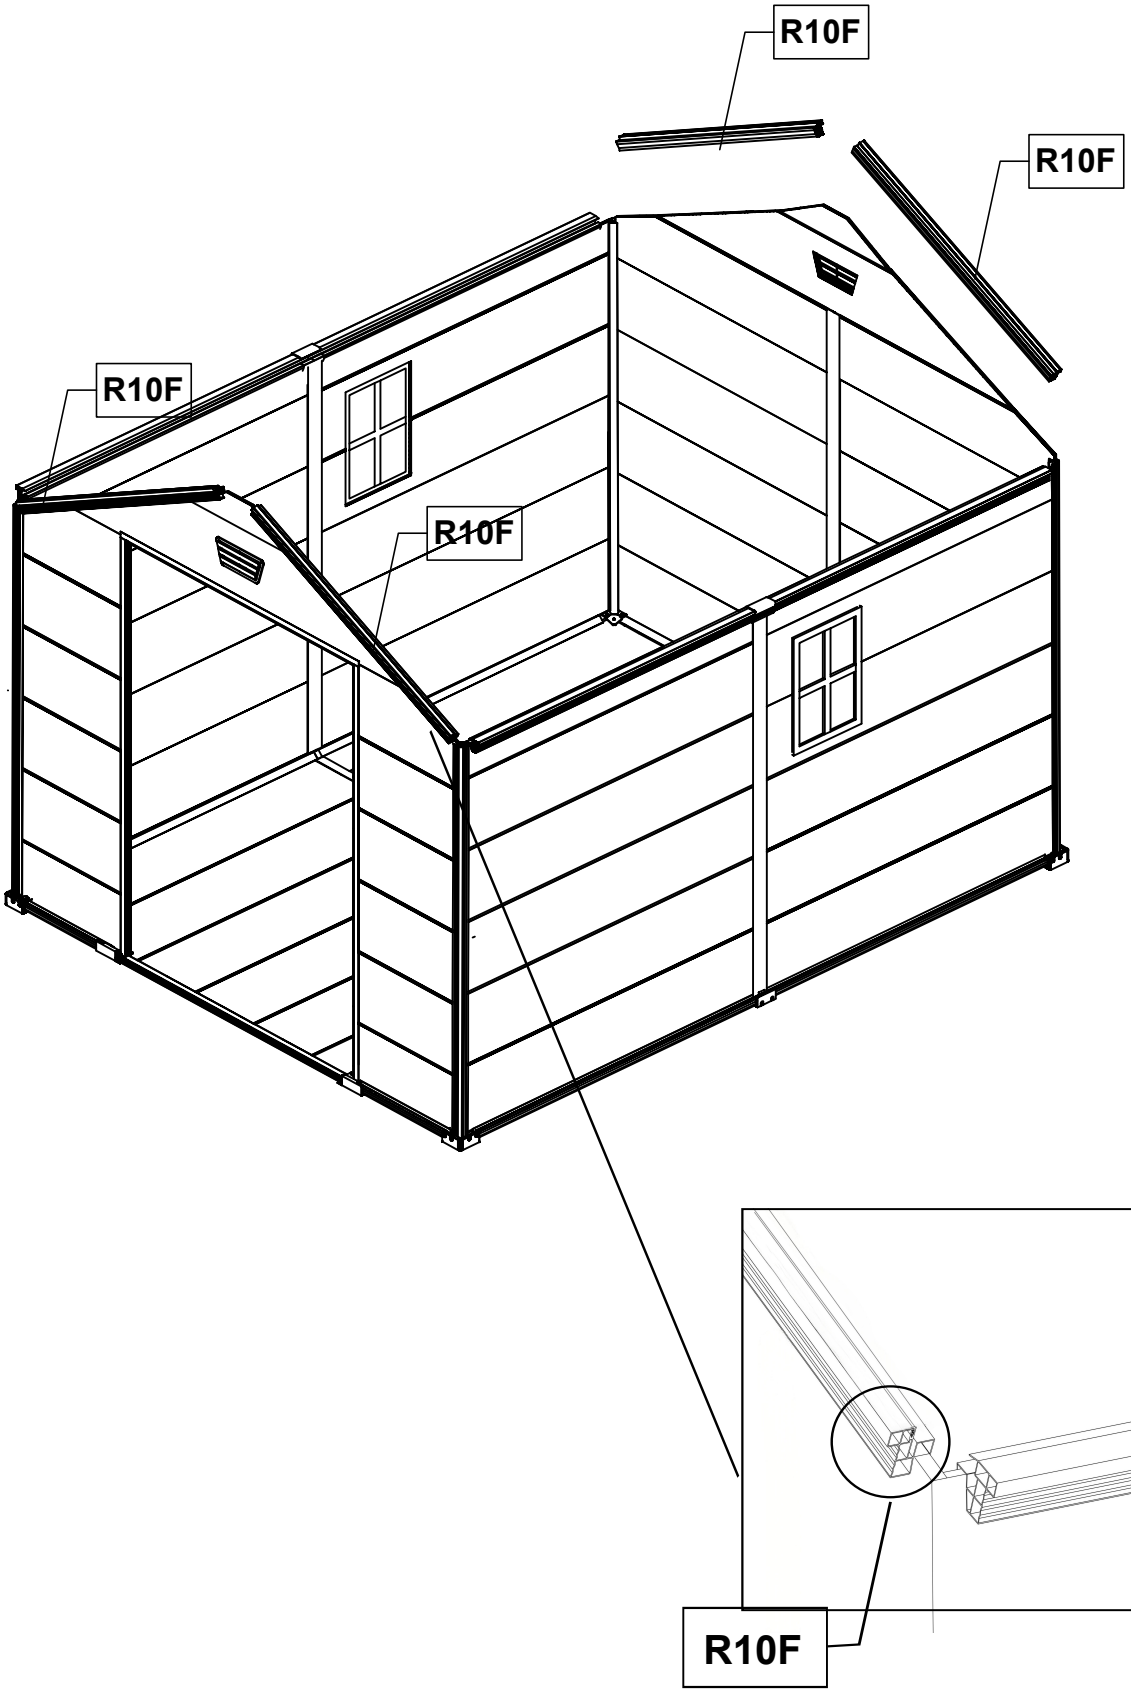


18

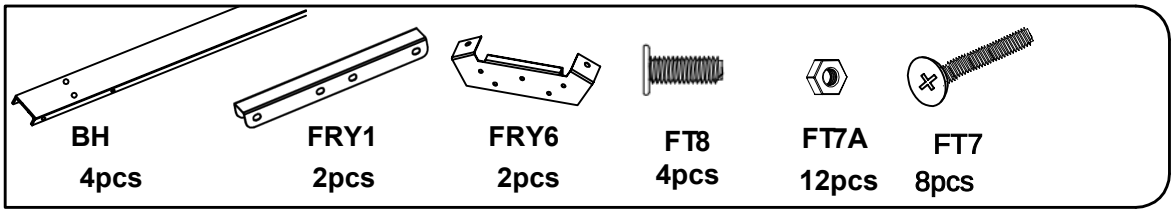
BH
4pcs
FRY1
2pcs
FRY6
2pcs
FT8
4pcs
FT7A
12pcs
FT7
8pcs

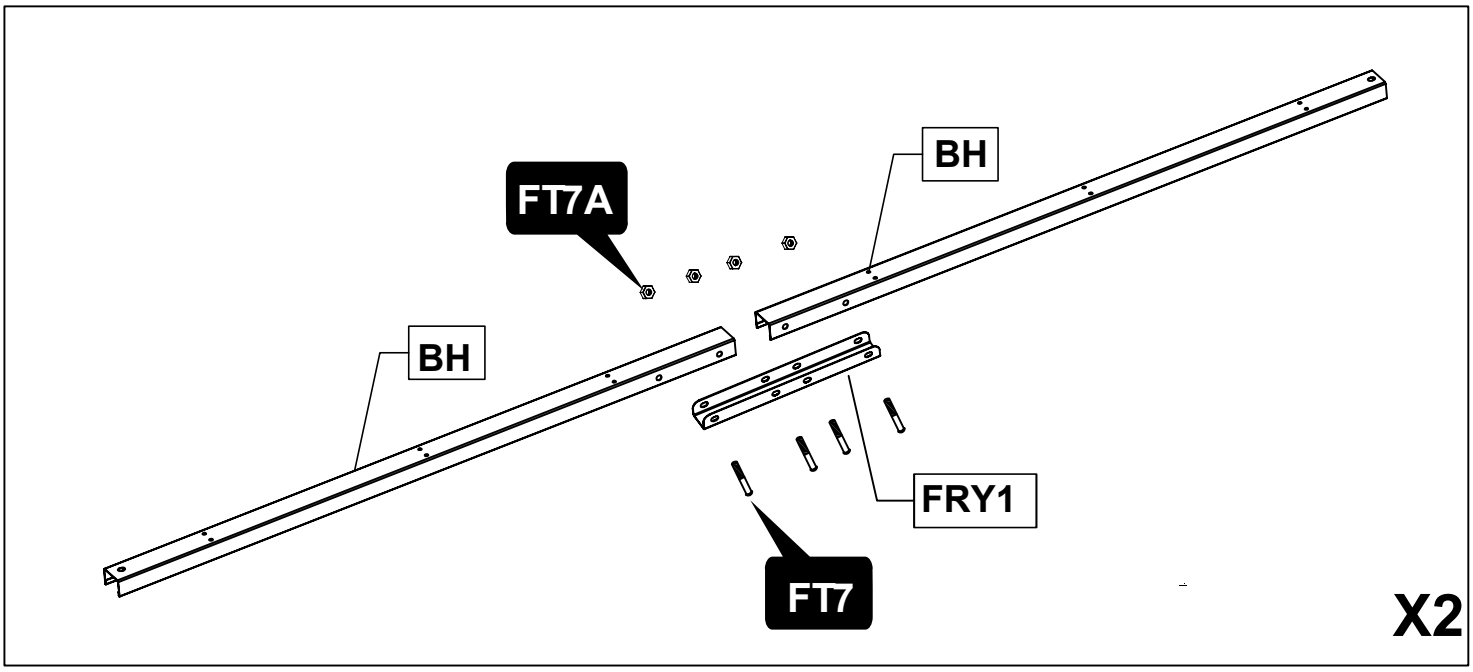

FT7A
BH
BH
FRY1
FT7
X2

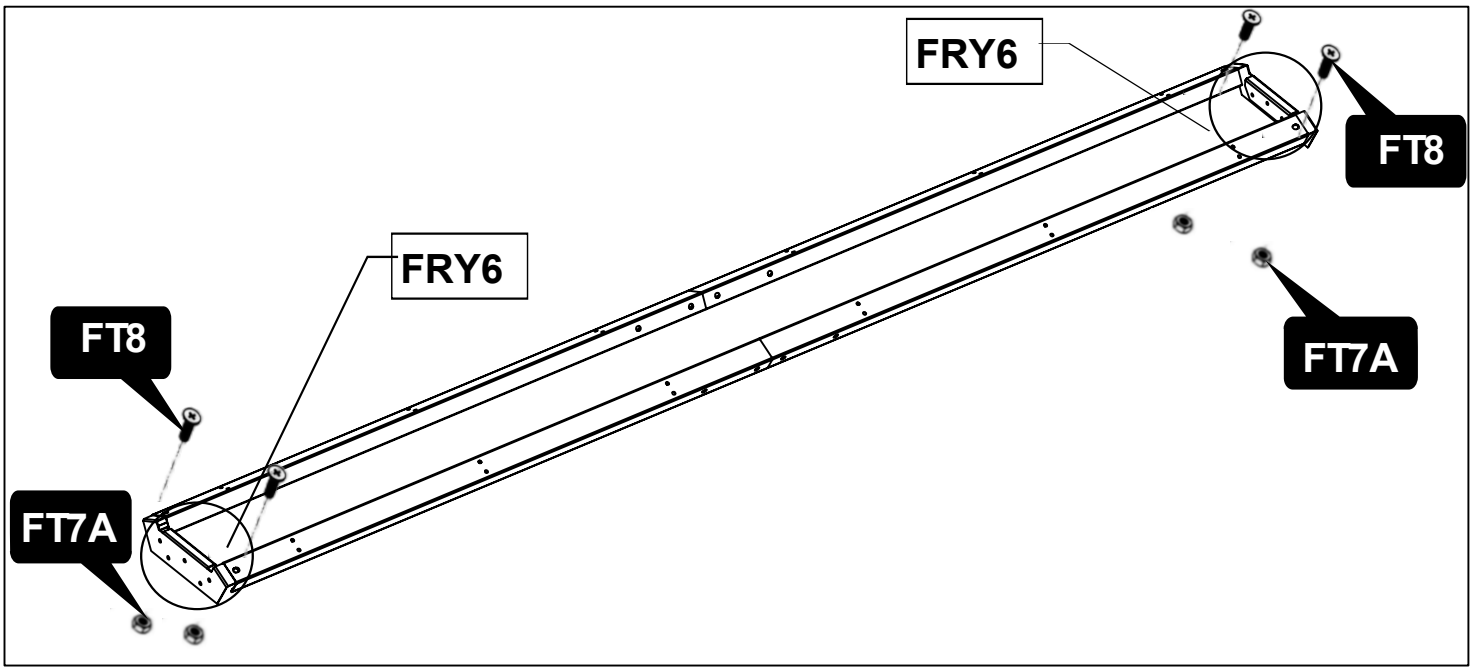
FRY6
FT8
FRY6
FT8
FT7A
FT7A


19



FT3 12pcs FT2 12pcs

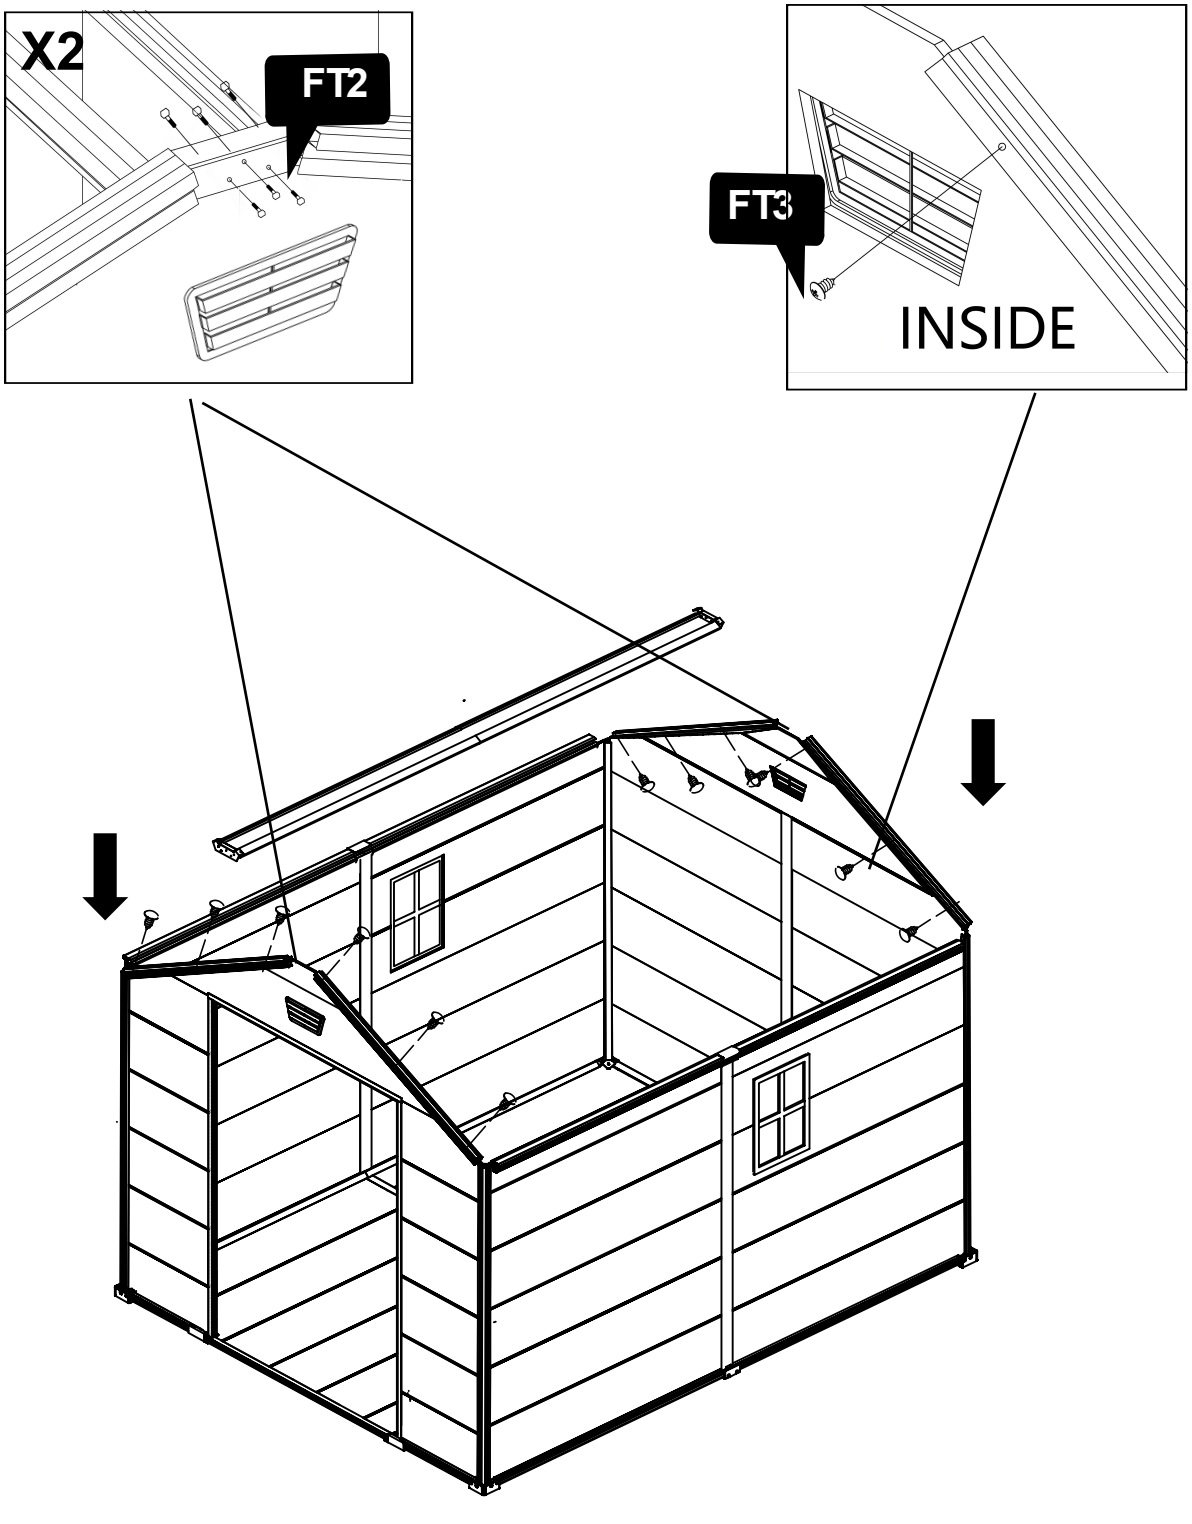

20



FT7A
16pcs


FT7
16pcs



BH5
2pcs



FRY2
4pcs


BV
4pcs

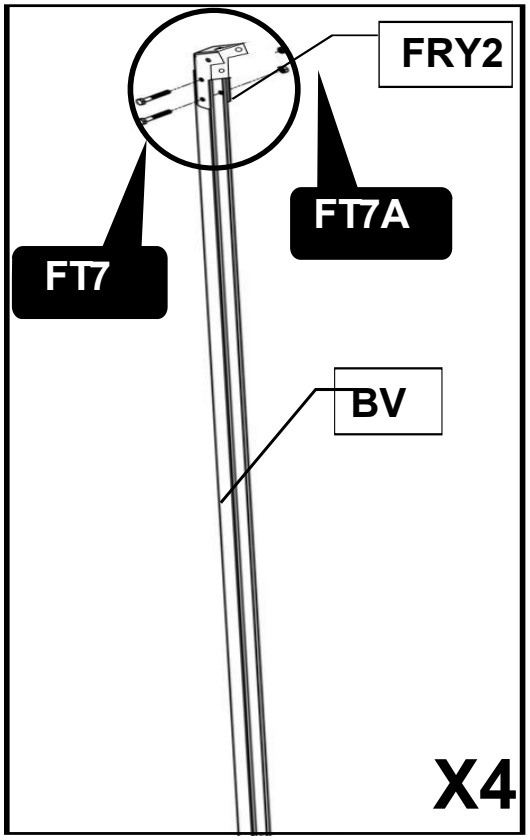


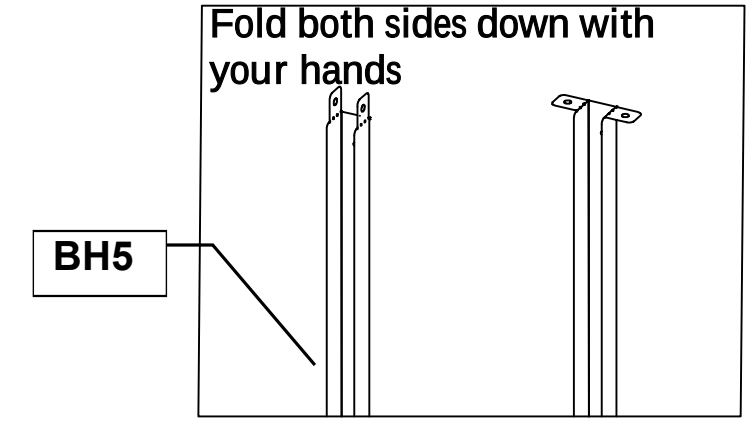

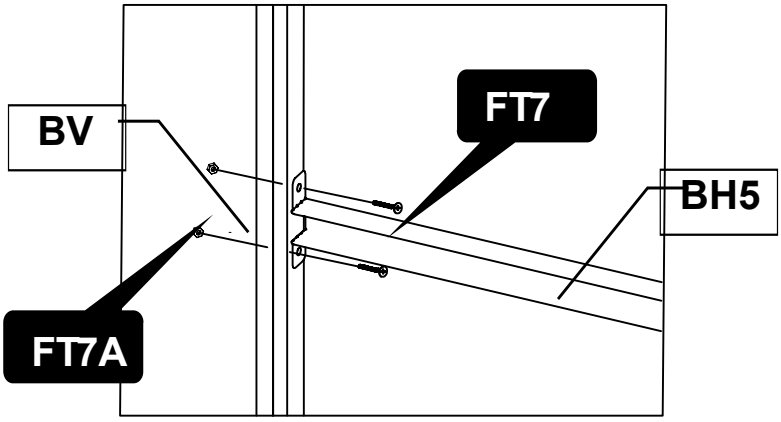

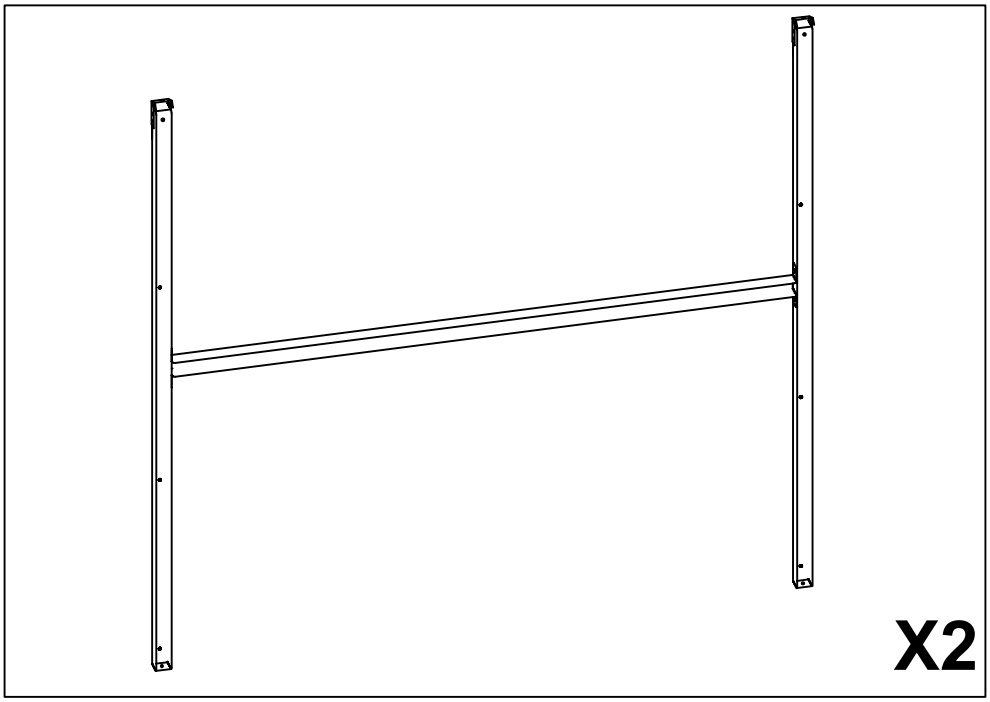


21

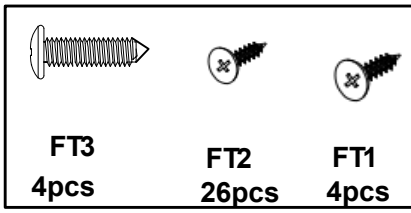

FT3
4pcs


FT2
26pcs


FT1
4pcs

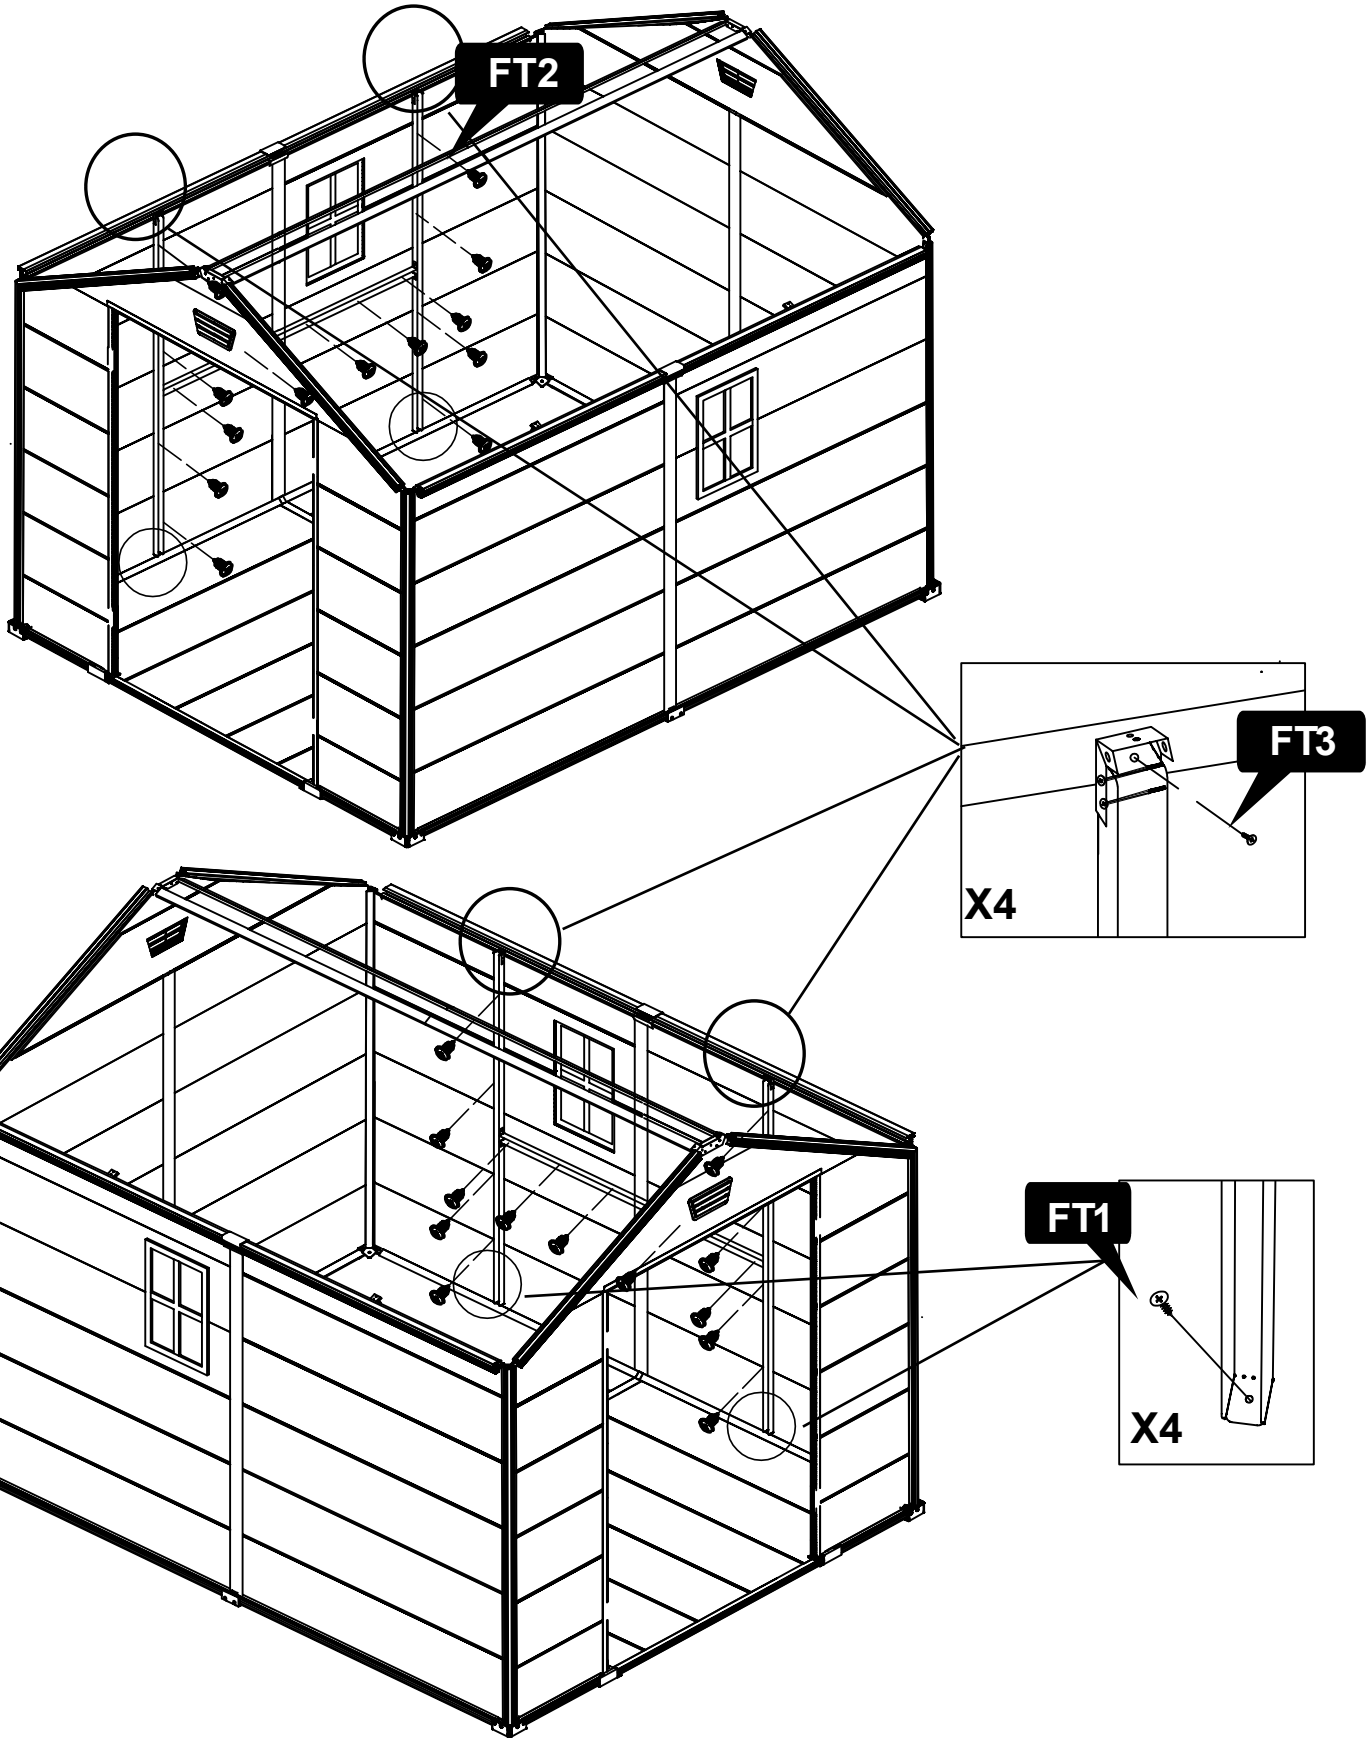


ASSEMBLY INSTRUCTIONS


22

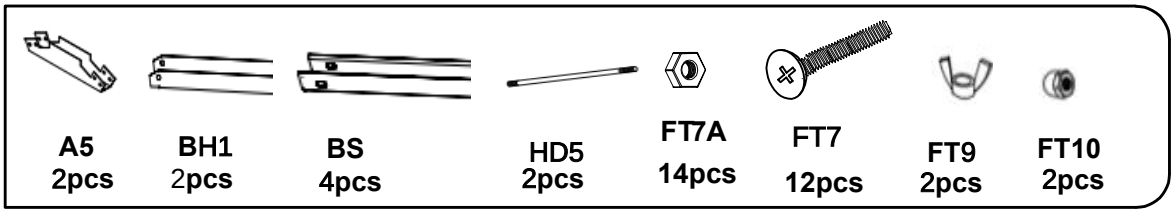

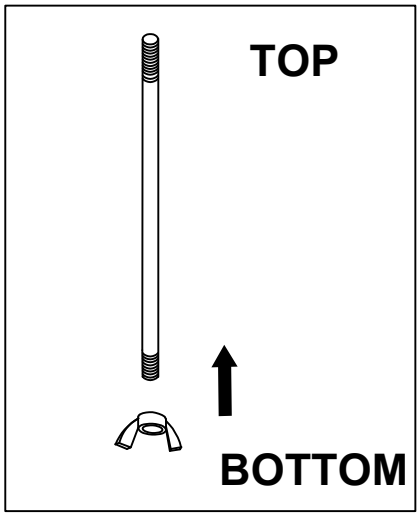

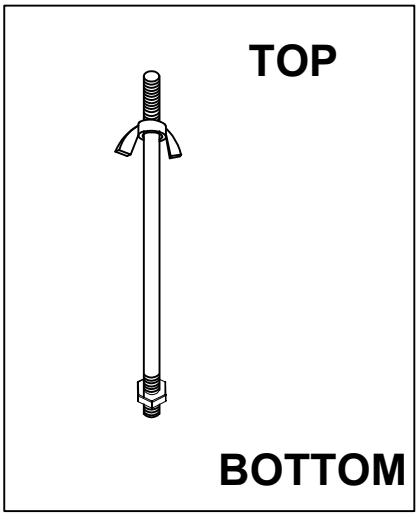


NOTE:Install by holding the nut stationary and turning the screw.

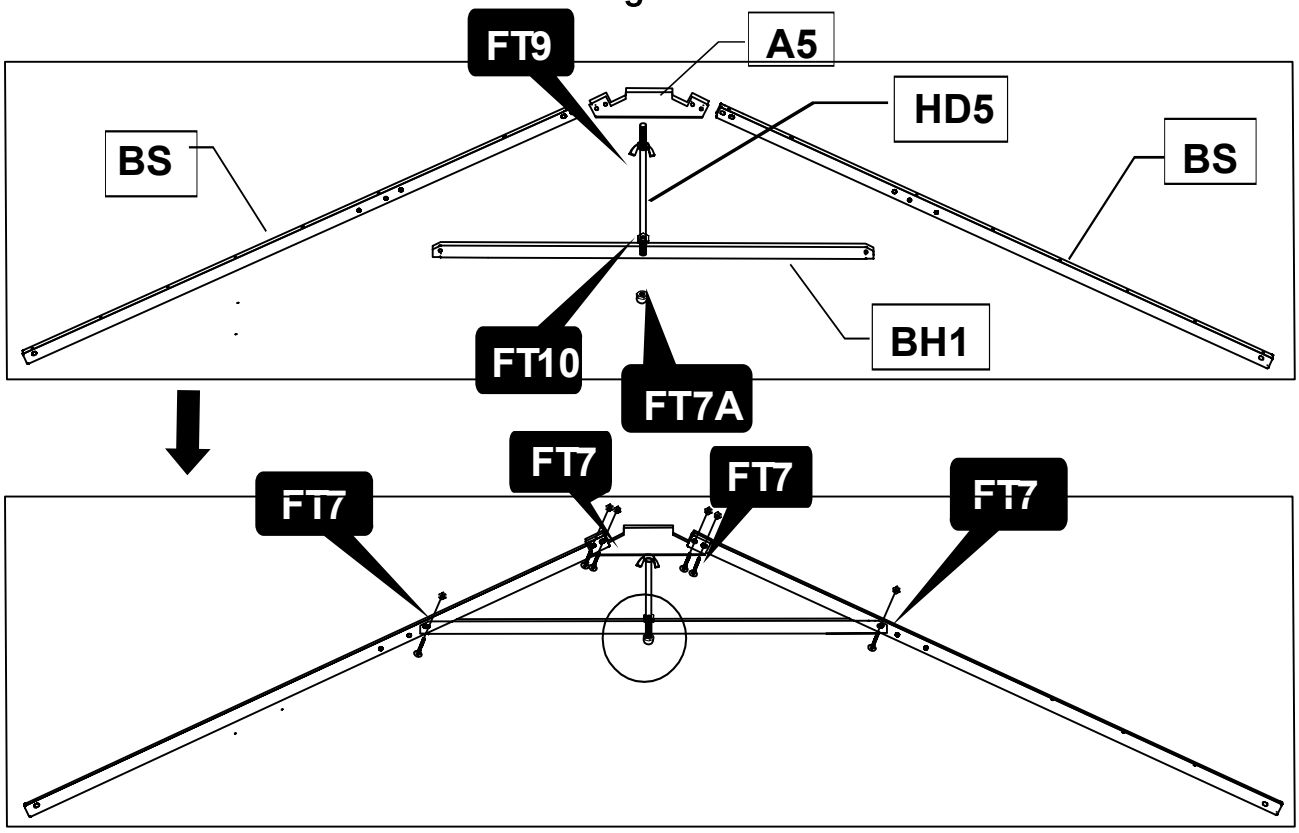



FT7A and FT10 to be tightened，After the top plate is installed, fully tighten FT9 and jack it upward for support.

23




FT7A	FT7	FT2
4pcs	4pcs	8pcs

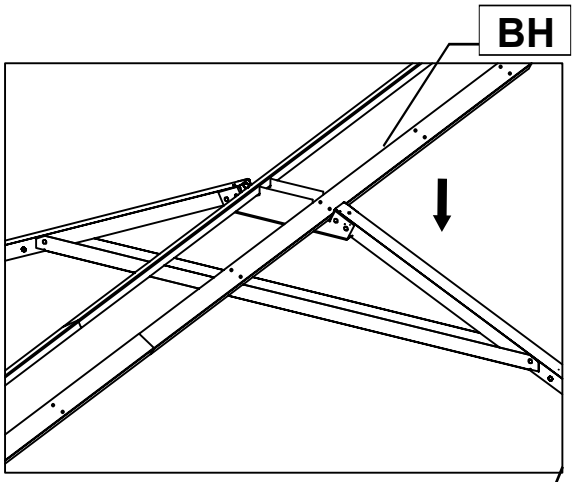

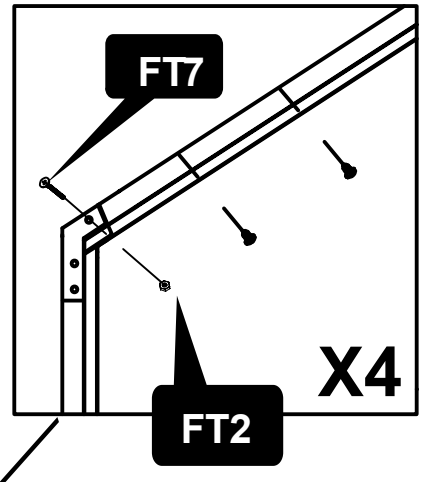


NOTE：BH needs to be set for a hard rejection at the upper bound of the A5 gap.

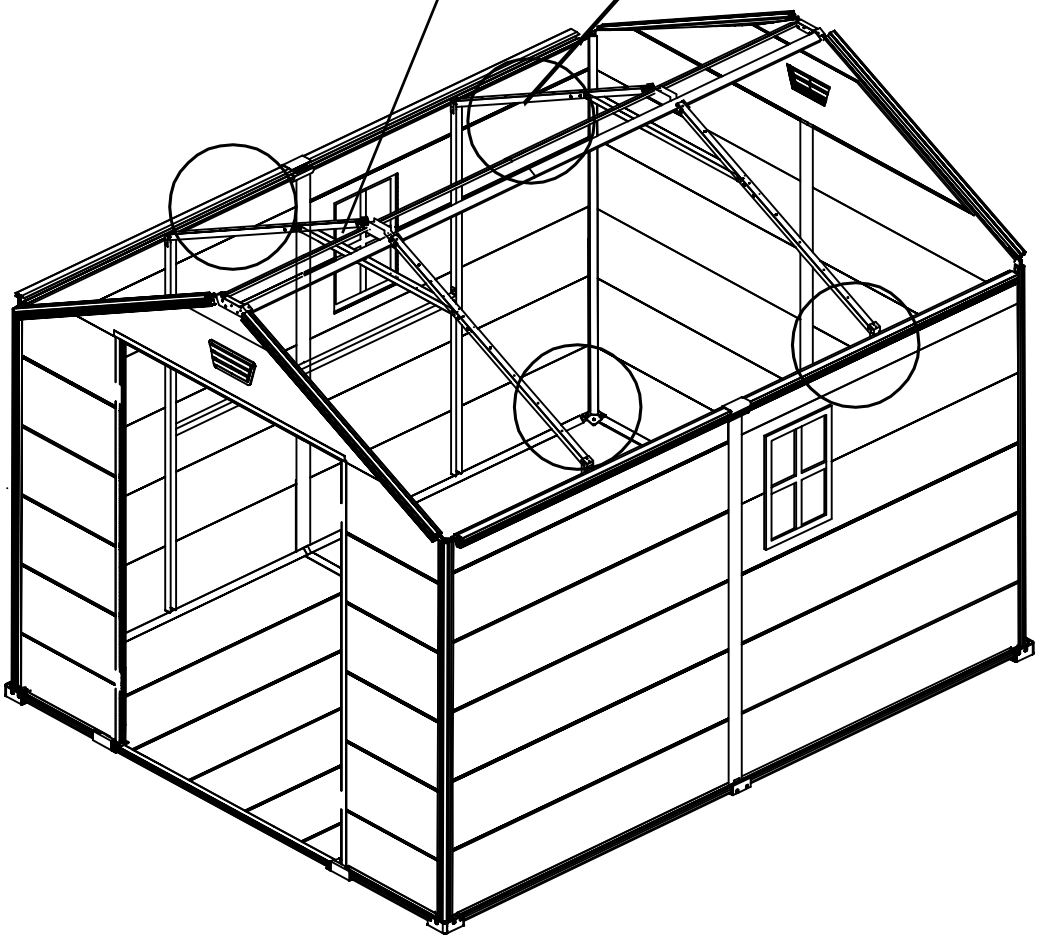


24




FT7A 8pcs | FT7 8pcs | BH5 2pcs | FT2 10pcs

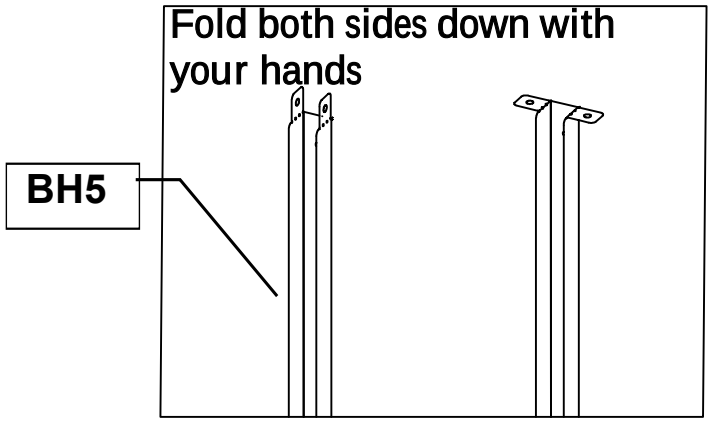

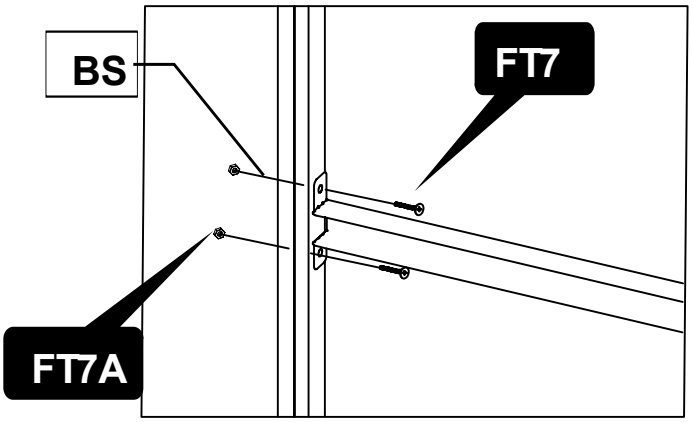

FT2 screws to be installed after top plate mounting

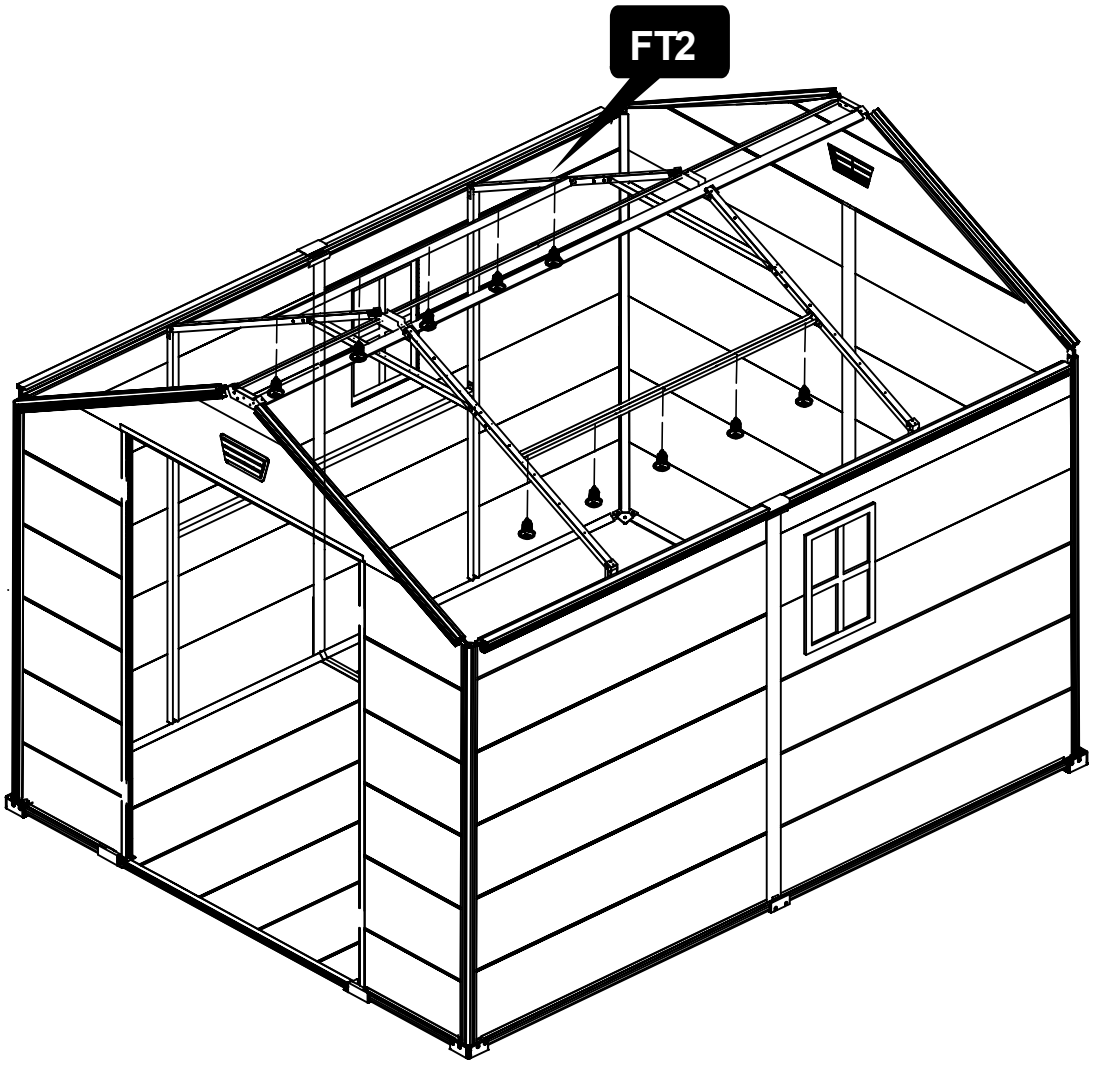

25





RF1
2pcs

FT1
2pcs


FT2
2pcs


FT3
4pcs

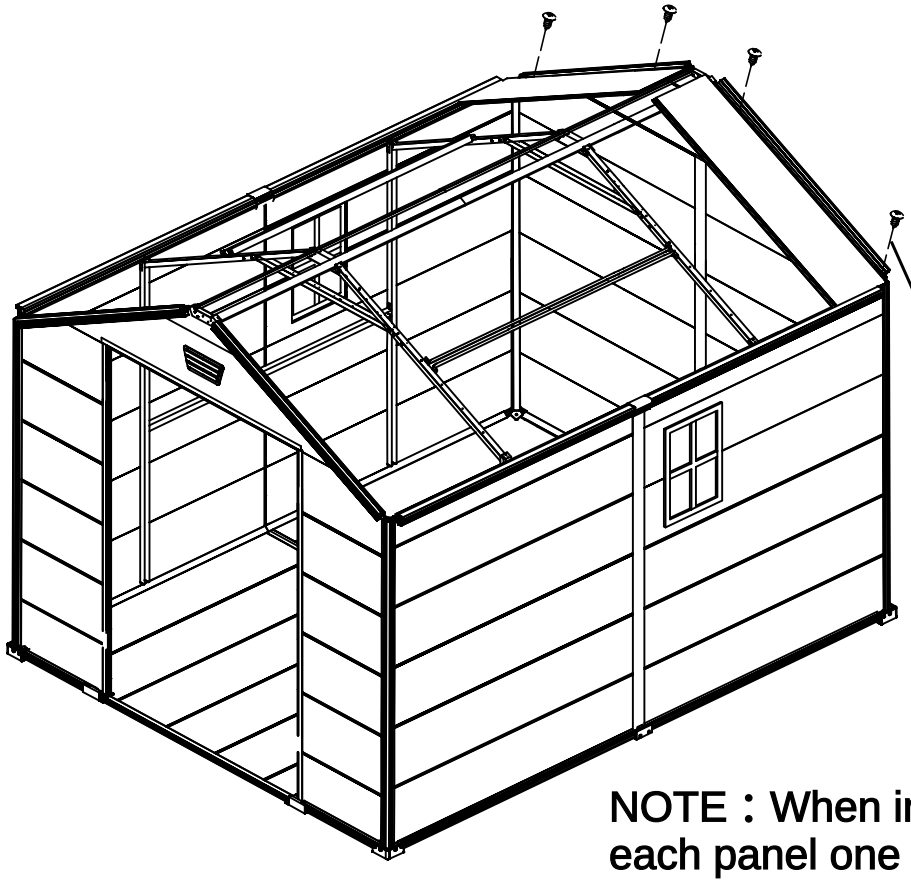


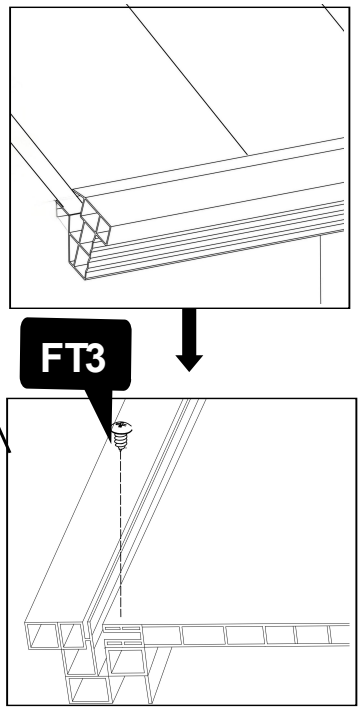


NOTE：When installing top panels, lock each panel one by one, and fasten both ends with screws.

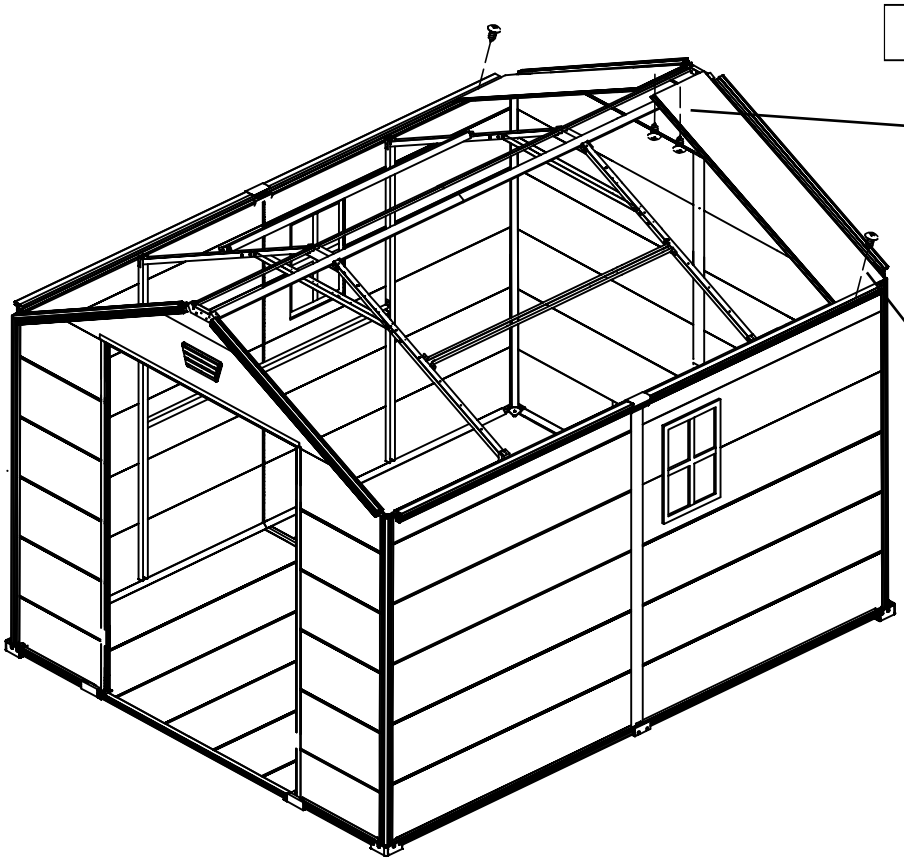

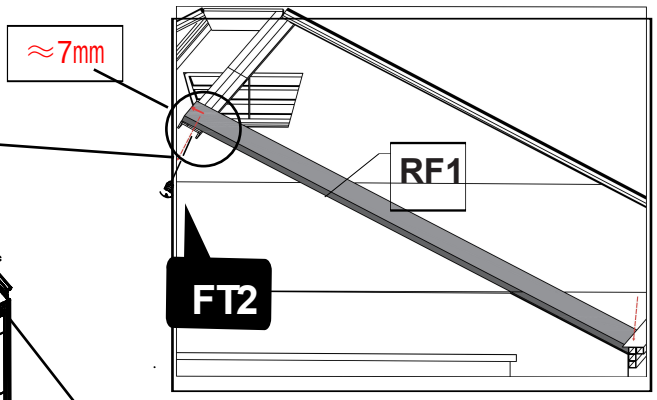

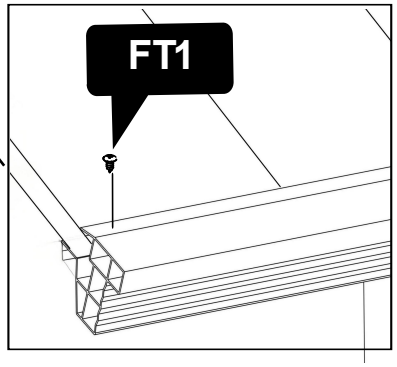



26



RF1
16pcs


FT1
16pcs



FT2
16pcs

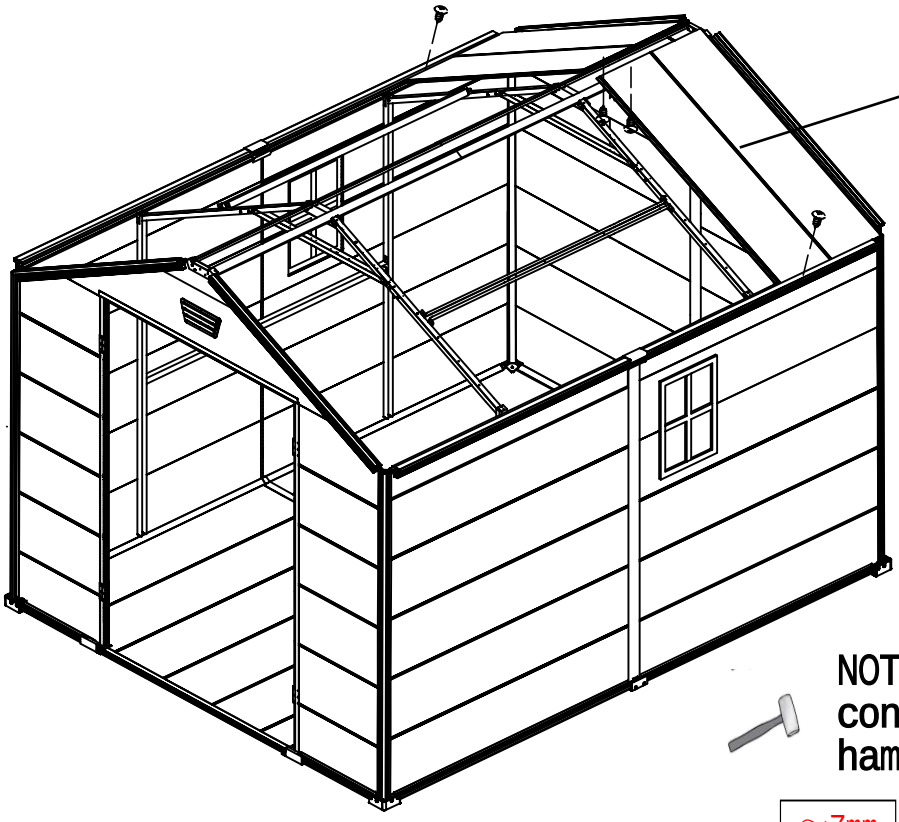


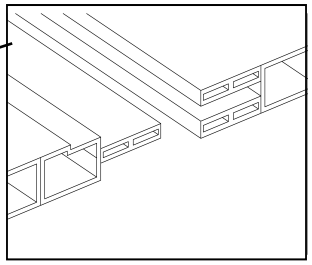


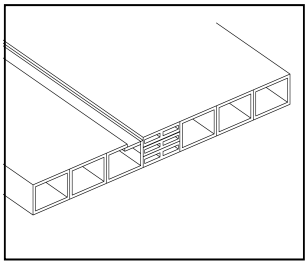

NOTE:Keep boards closely connected. Tap tight with a hammer if there are gaps.

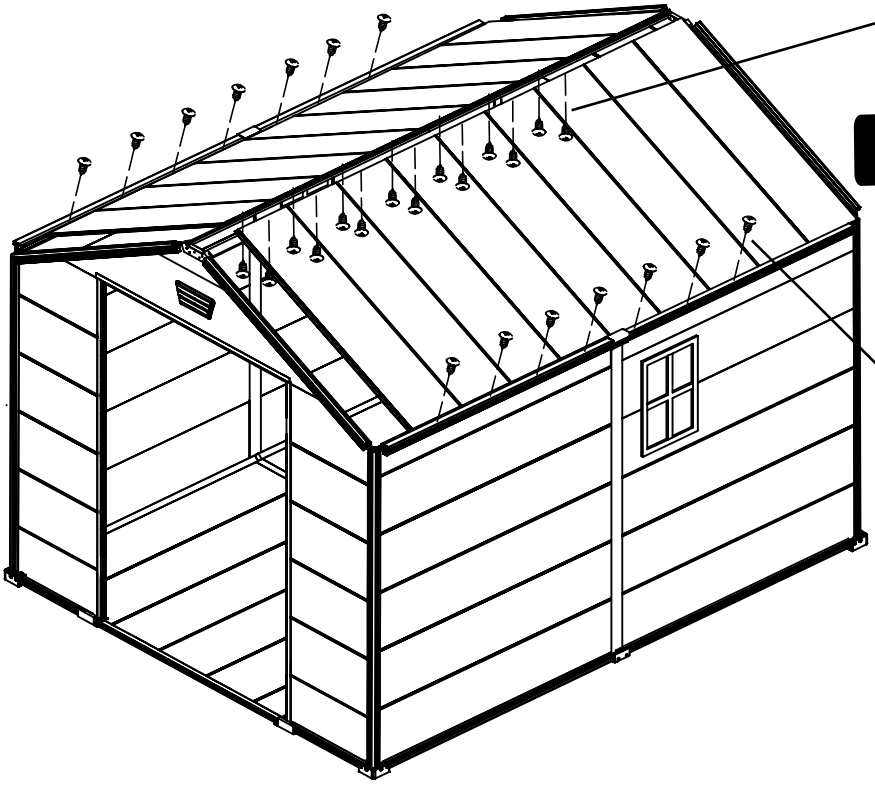

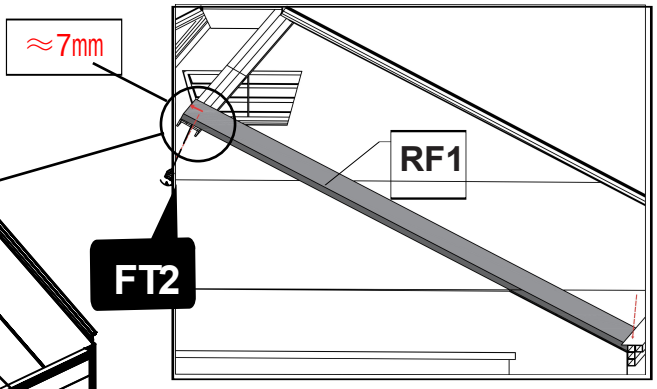

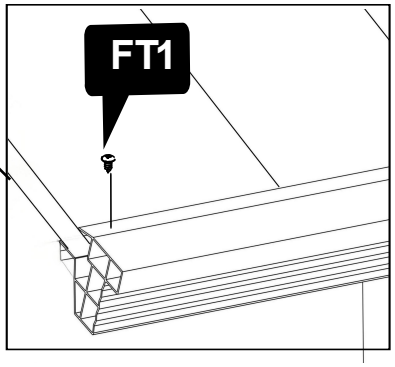

27





RF2
2pcs

FT1
2pcs


FT2
2pcs


FT3
4pcs

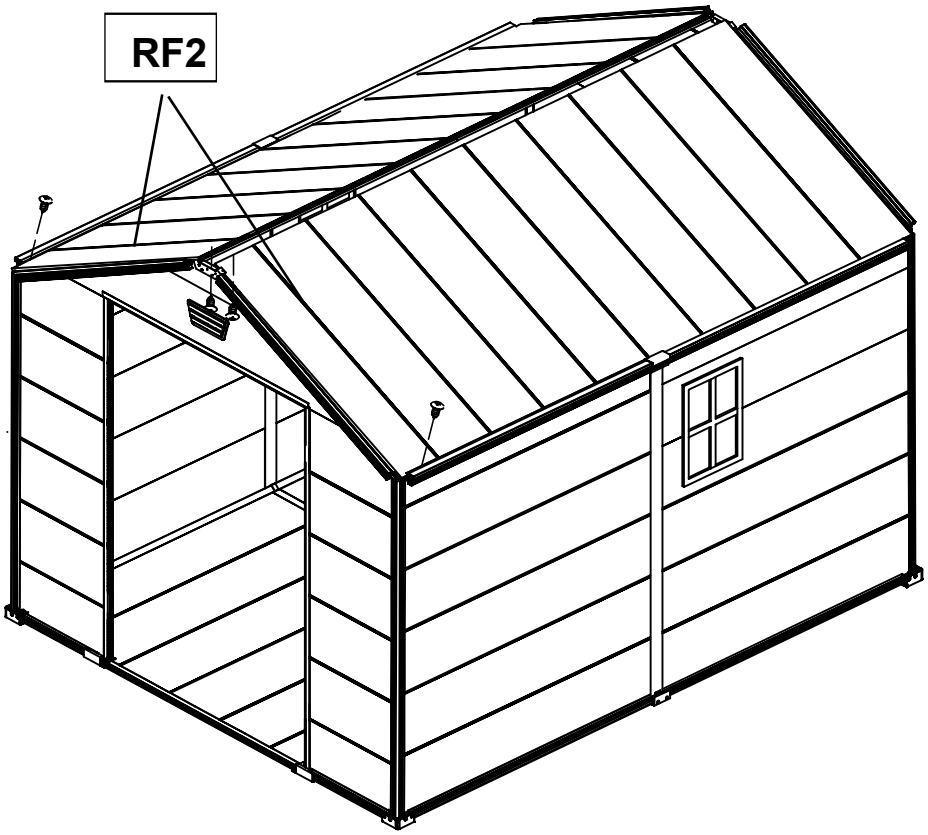


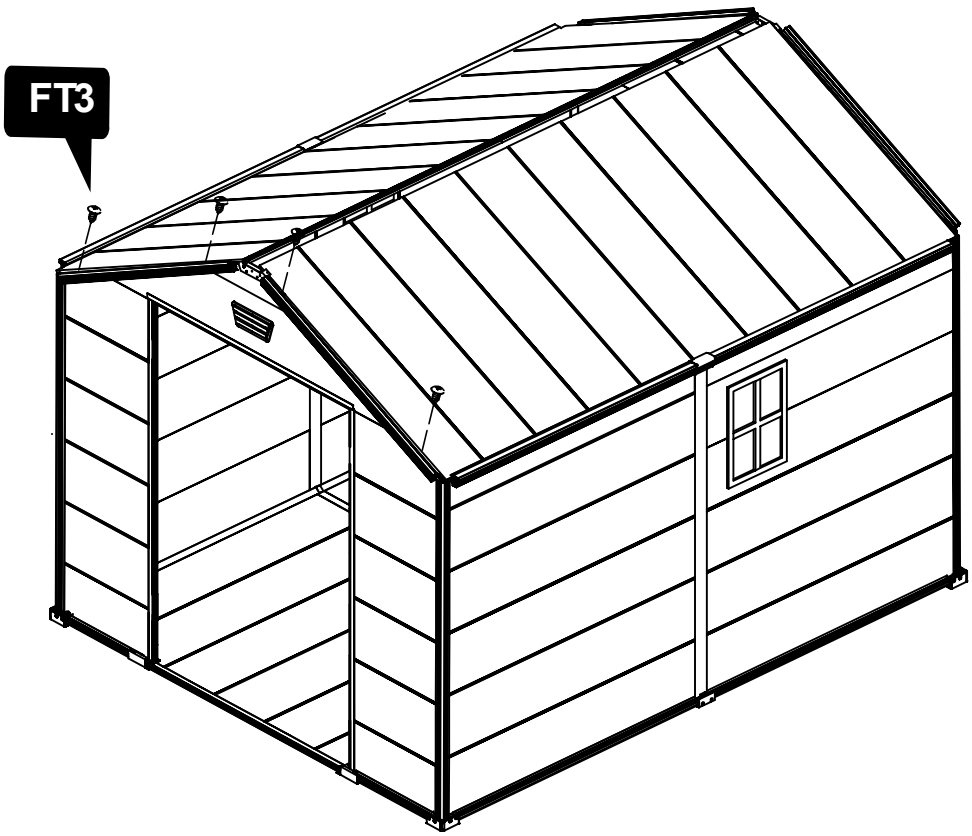

28

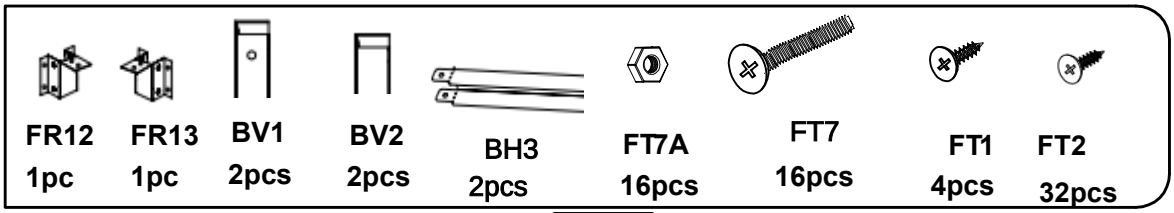
FR12
1pc
FR13
1pc
BV1
2pcs
BV2
2pcs
BH3
2pcs
FT7A
16pcs
FT7
16pcs
FT1
4pcs
FT2
32pcs

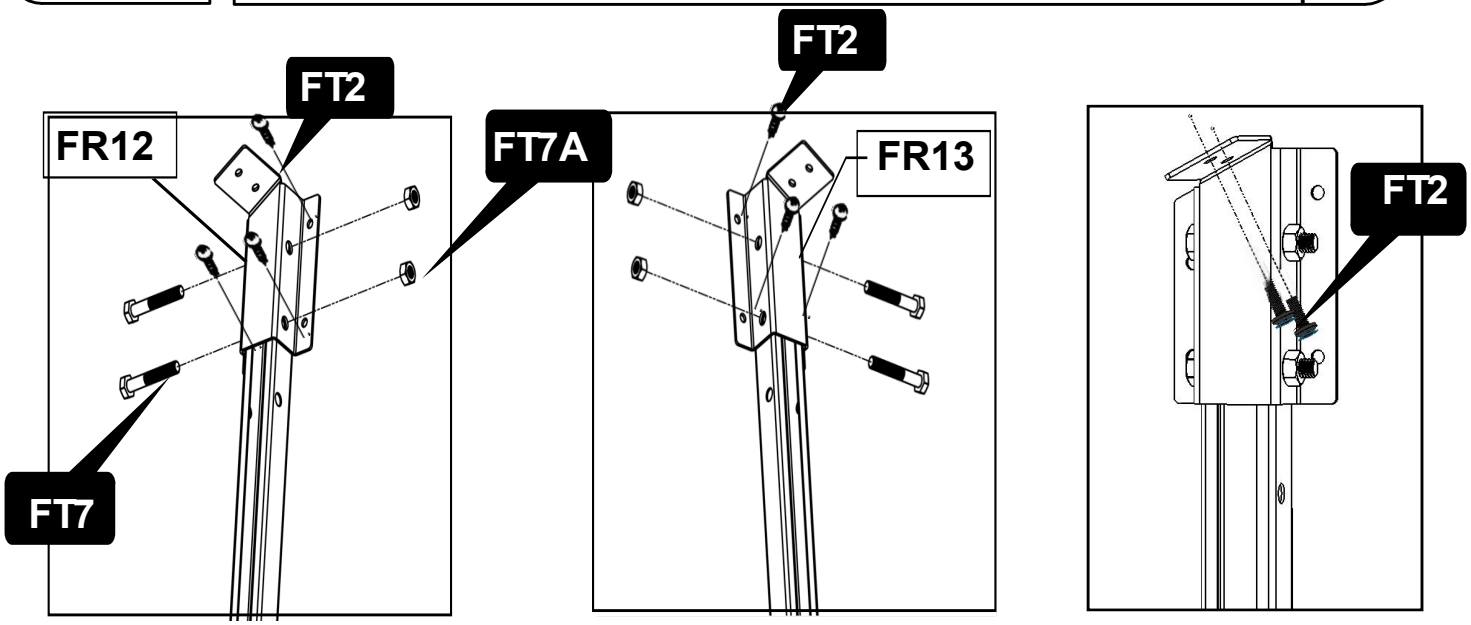

FT2
FR12
FT7A
FT7
FT2
FR13
FT2

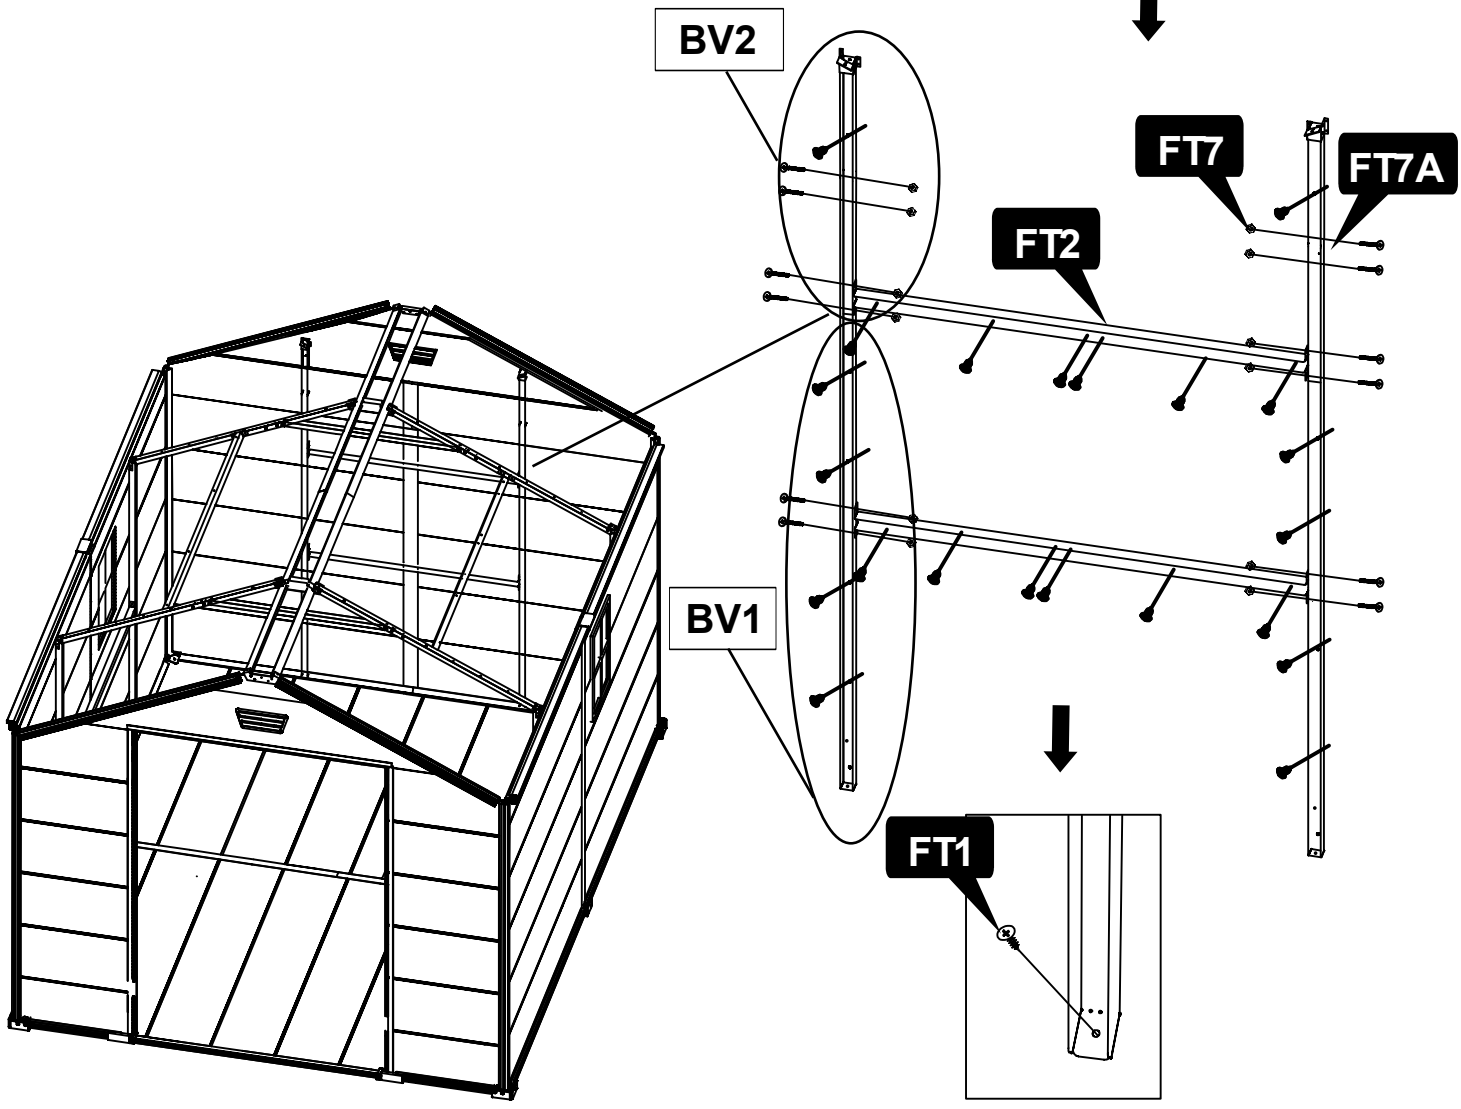

BV2
FT7
FT7A
FT2
BV1
FT1

ASSEMBLY INSTRUCTIONS

29

FR12	FR13	BV	BV3	FT7A	FT7	FT1	FT2
1pc	1pc	2pcs	2pcs	8pcs	8pcs	4pcs	22pcs

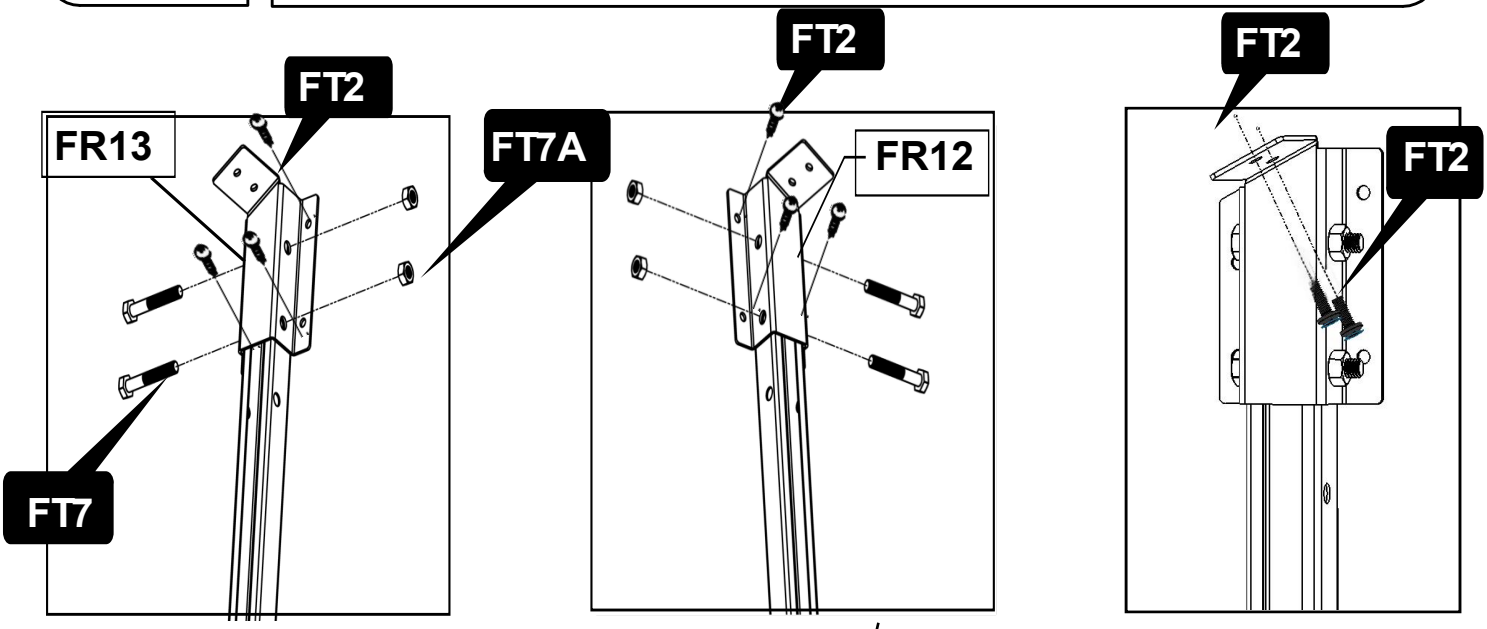


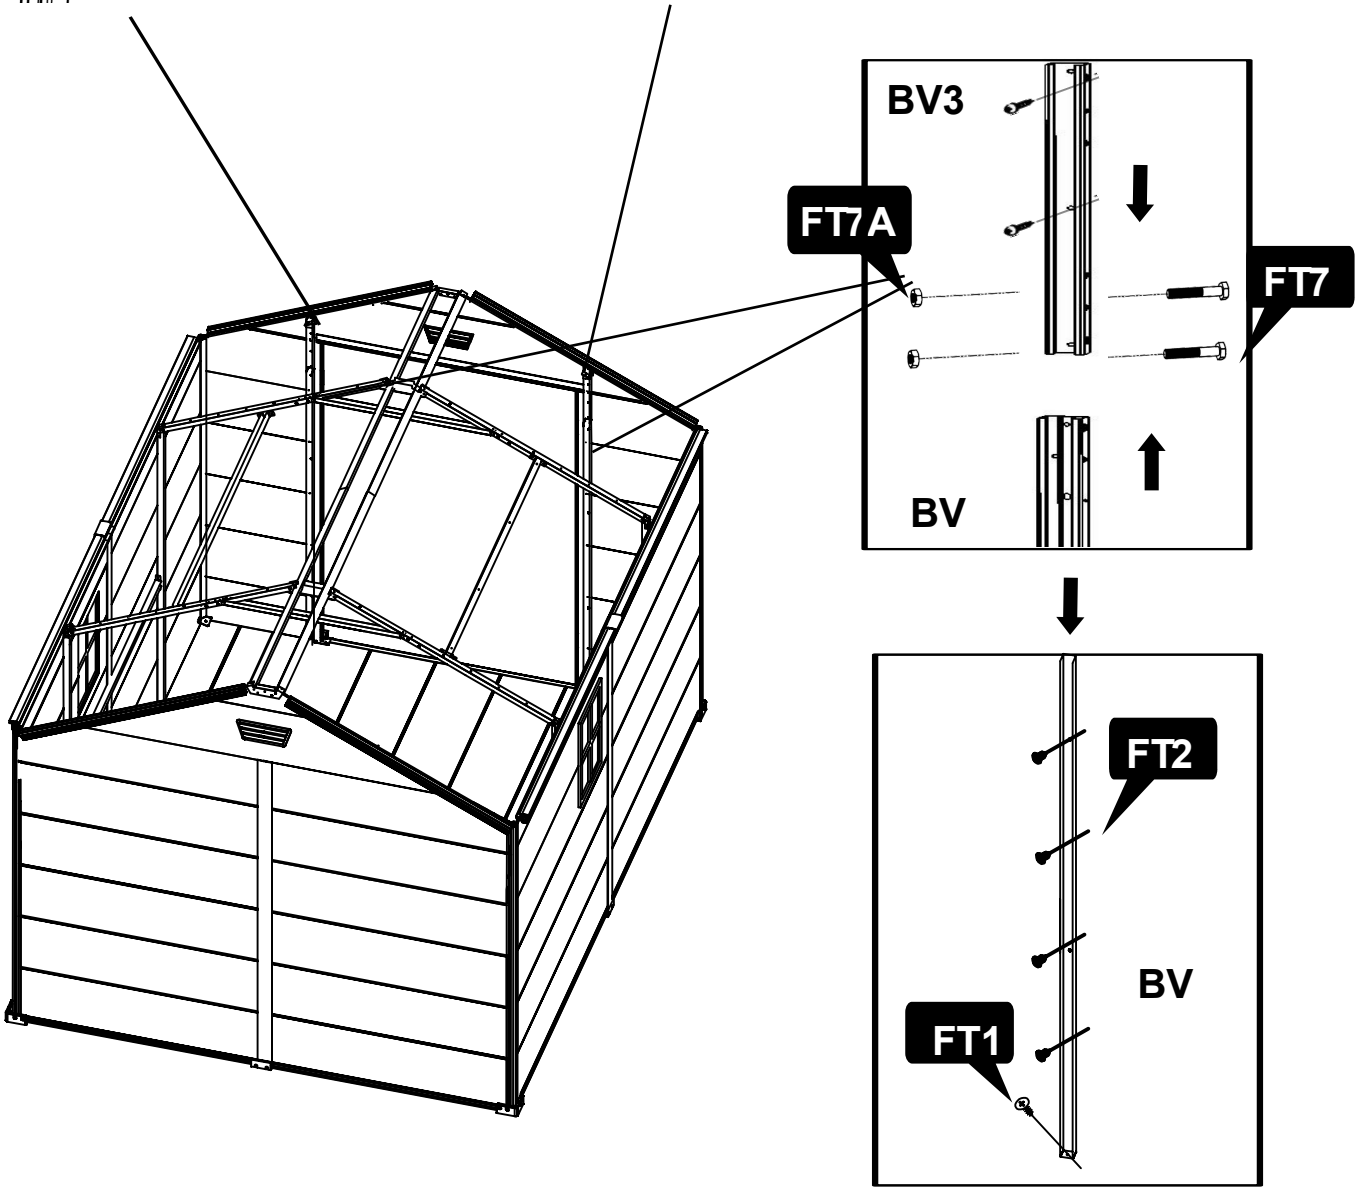


30



PSR
4pcs

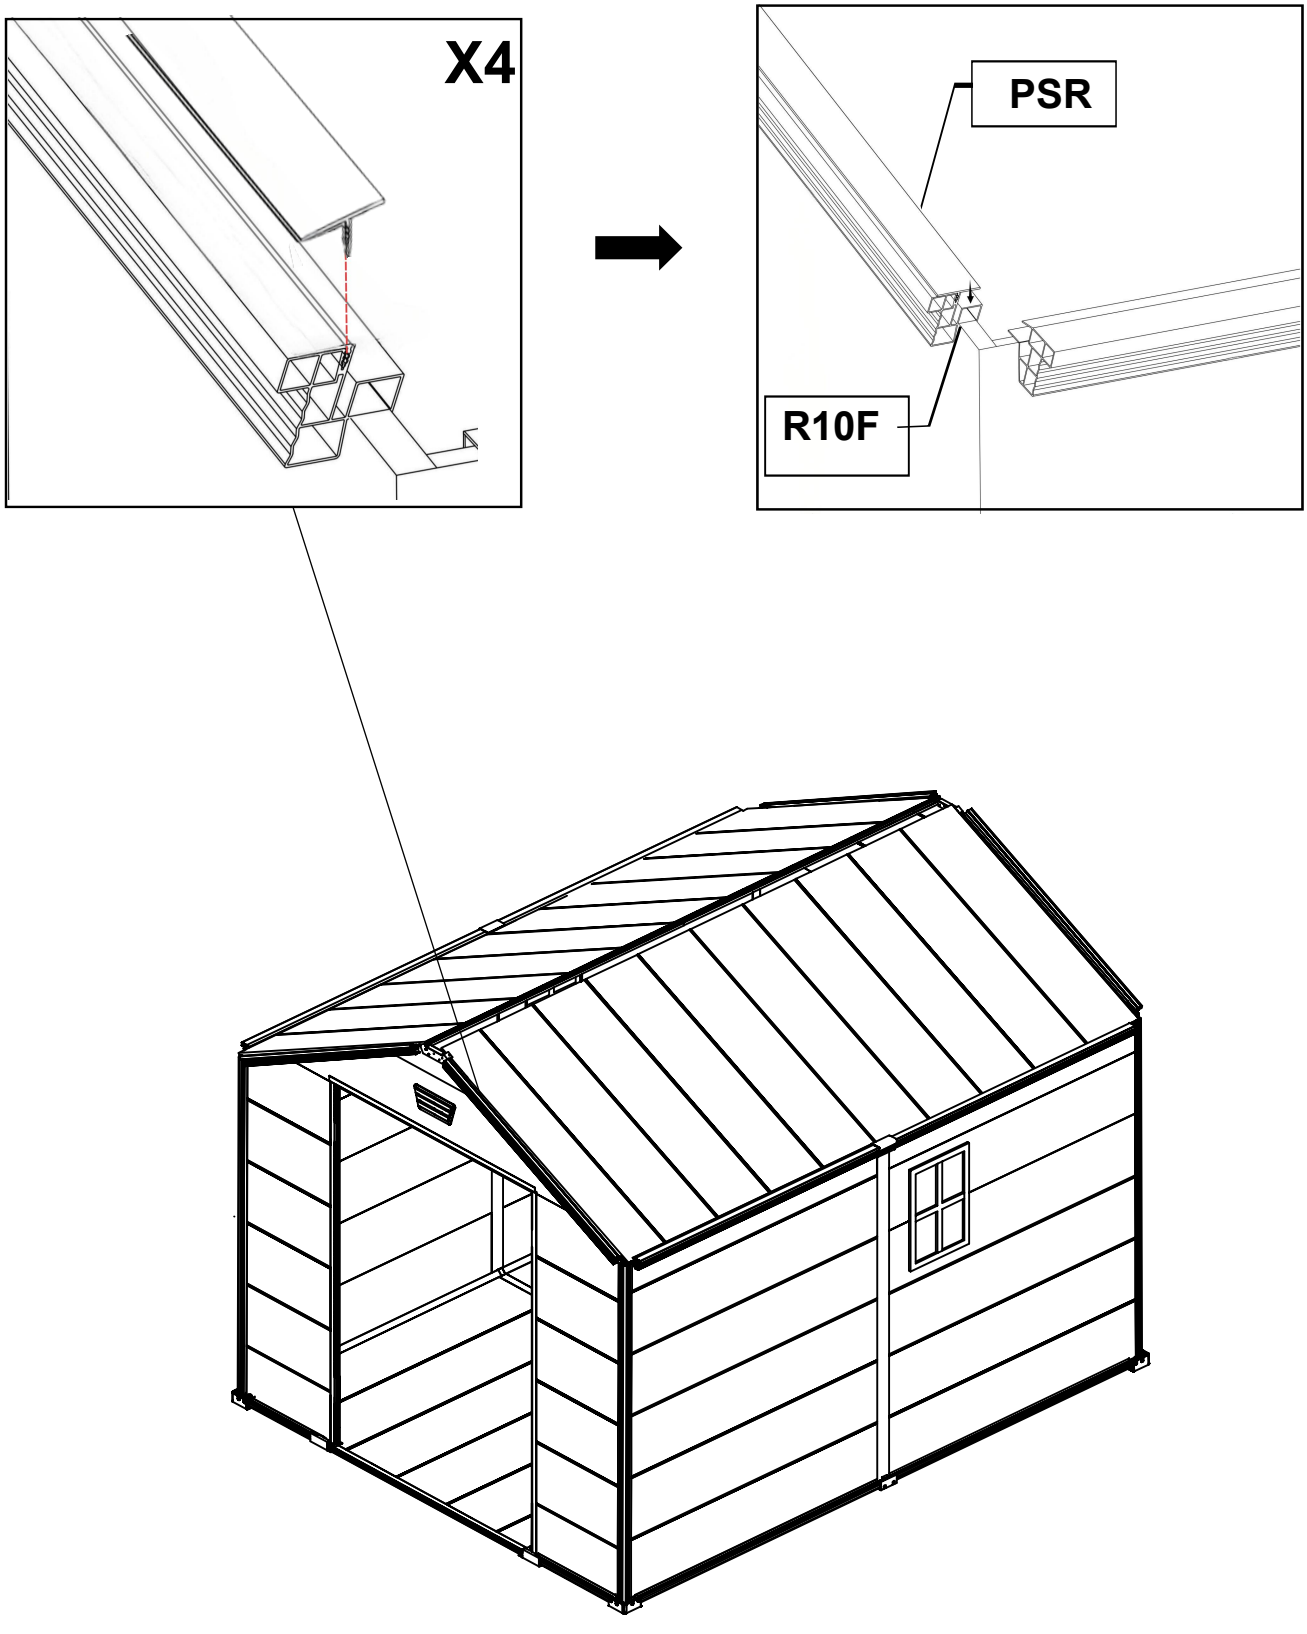



31

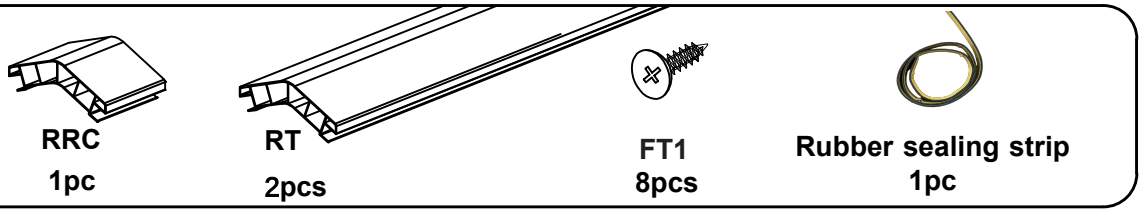


Rubber sealing strip (X1)

Rubber sealing strips shall be affixed to RRC as shown in the drawing.

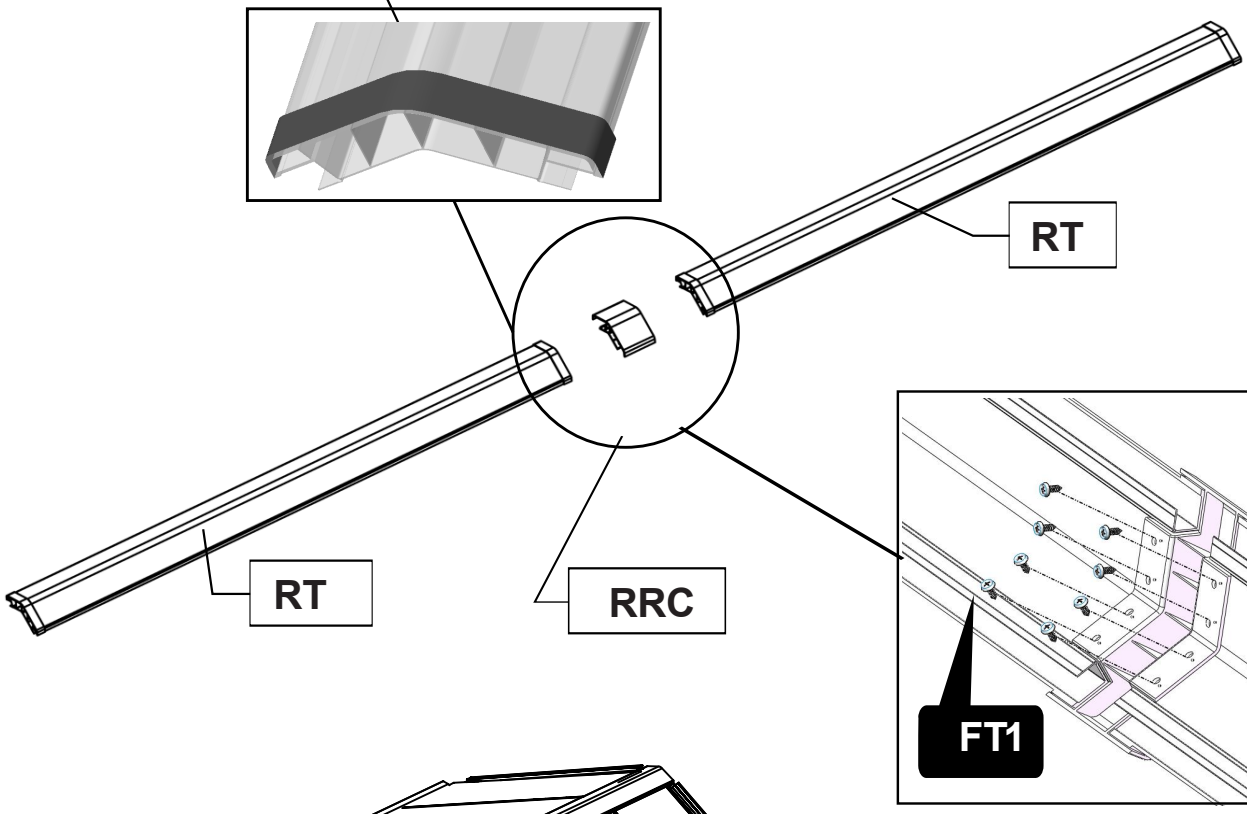

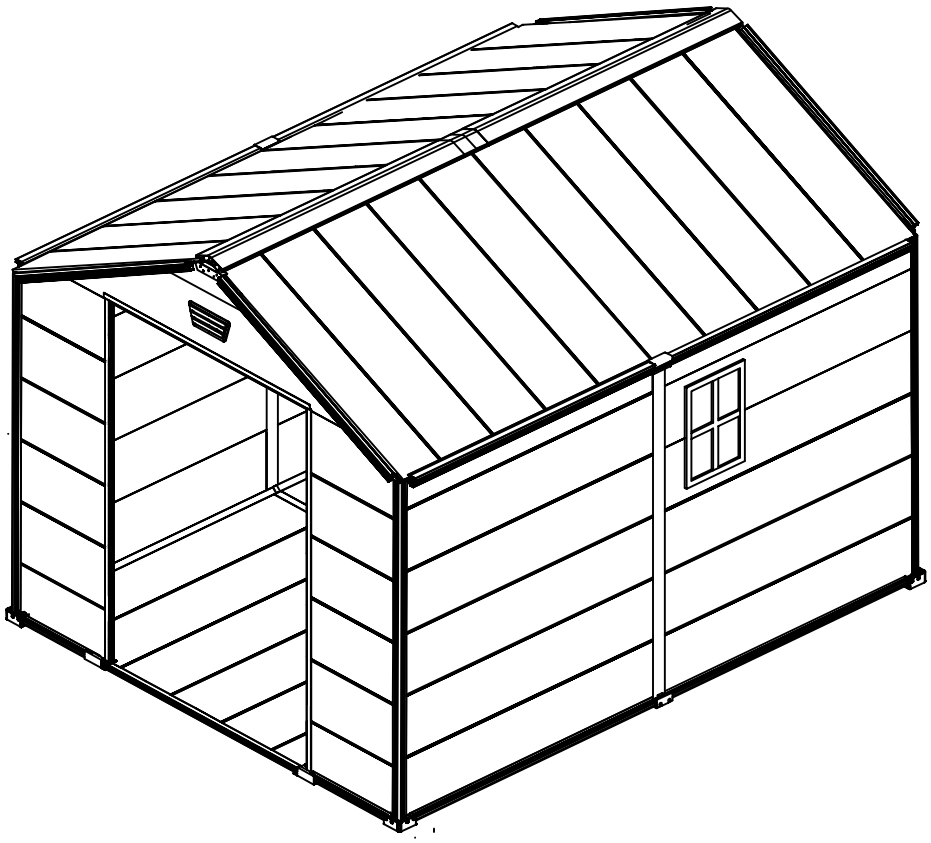

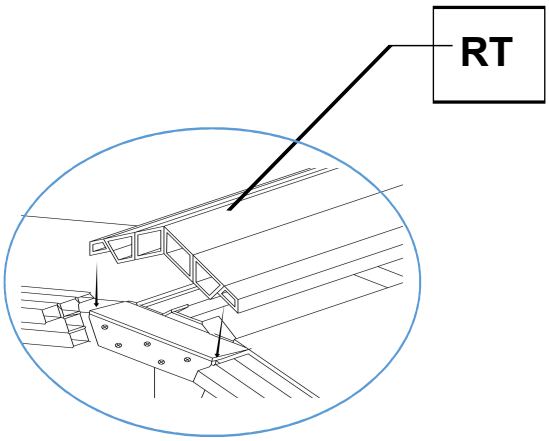


32




FT3

16pcs


FT3 marking location as shown in drawing.

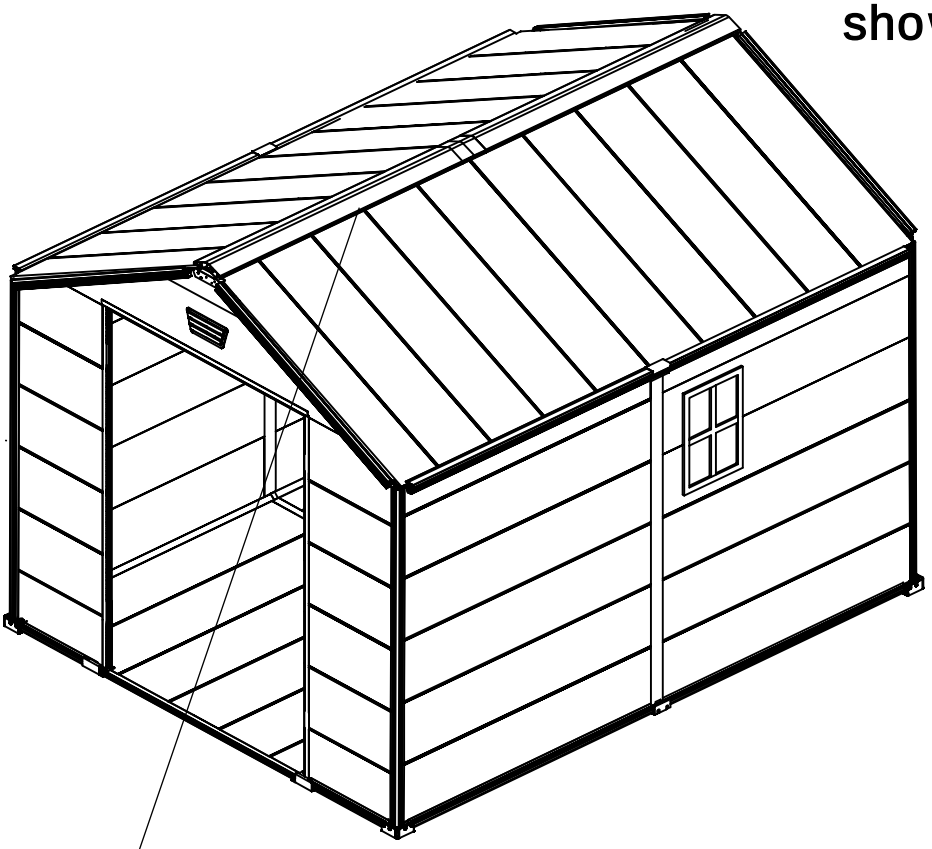

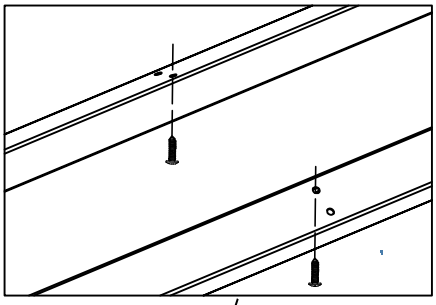


NOTE：Use drill to prop up before screwing for easier operation.
Fasten screws from front to back

Screw from inside of the shed Roof

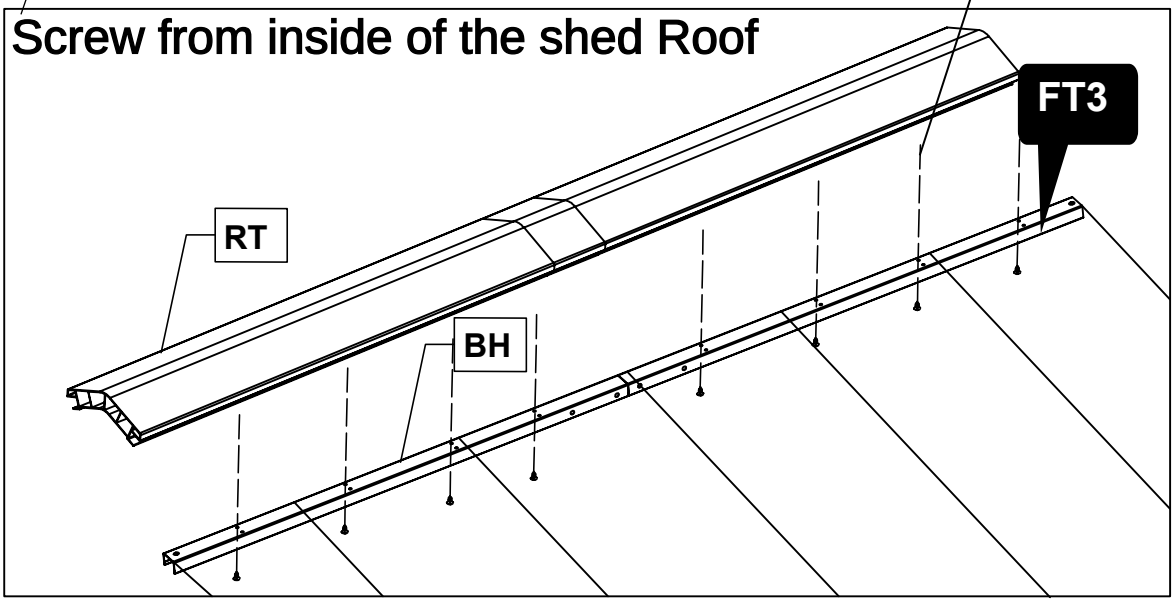

Align rt with the top plate


33





RRH
2pcs



FT1
8pcs

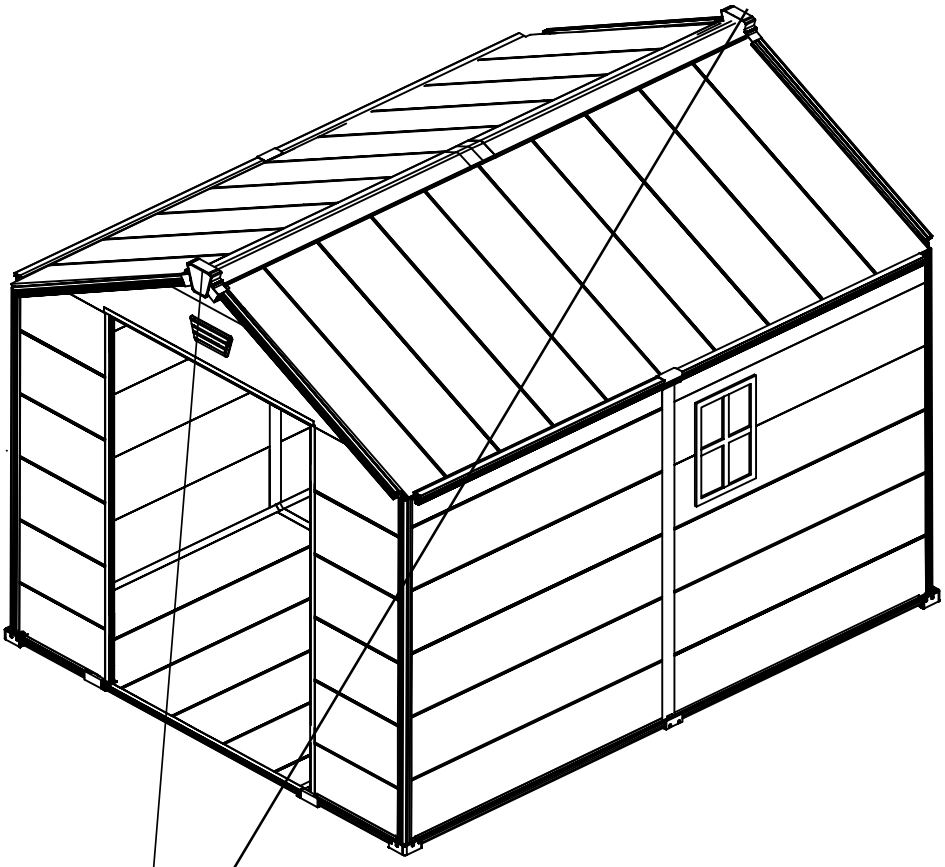

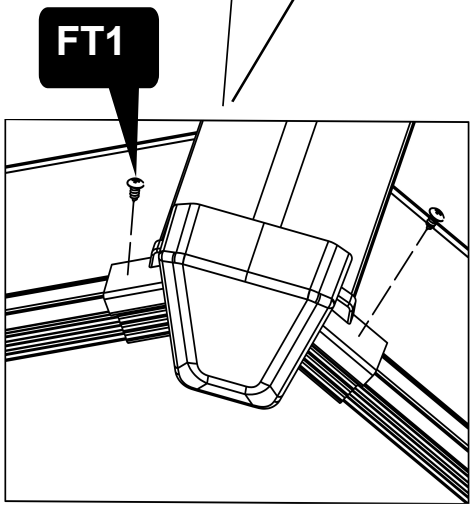

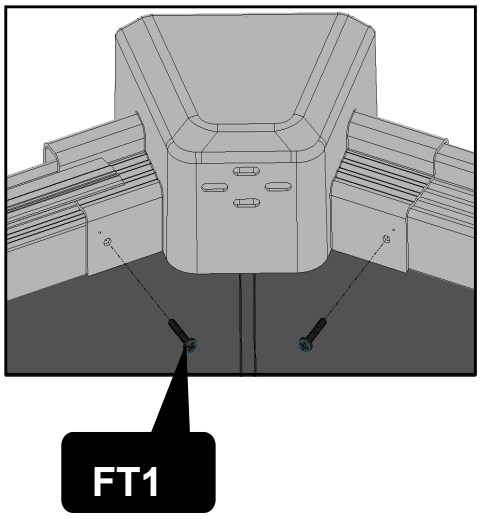


34



RRA
4pcs


FT1
8pcs



FT11
8pcs

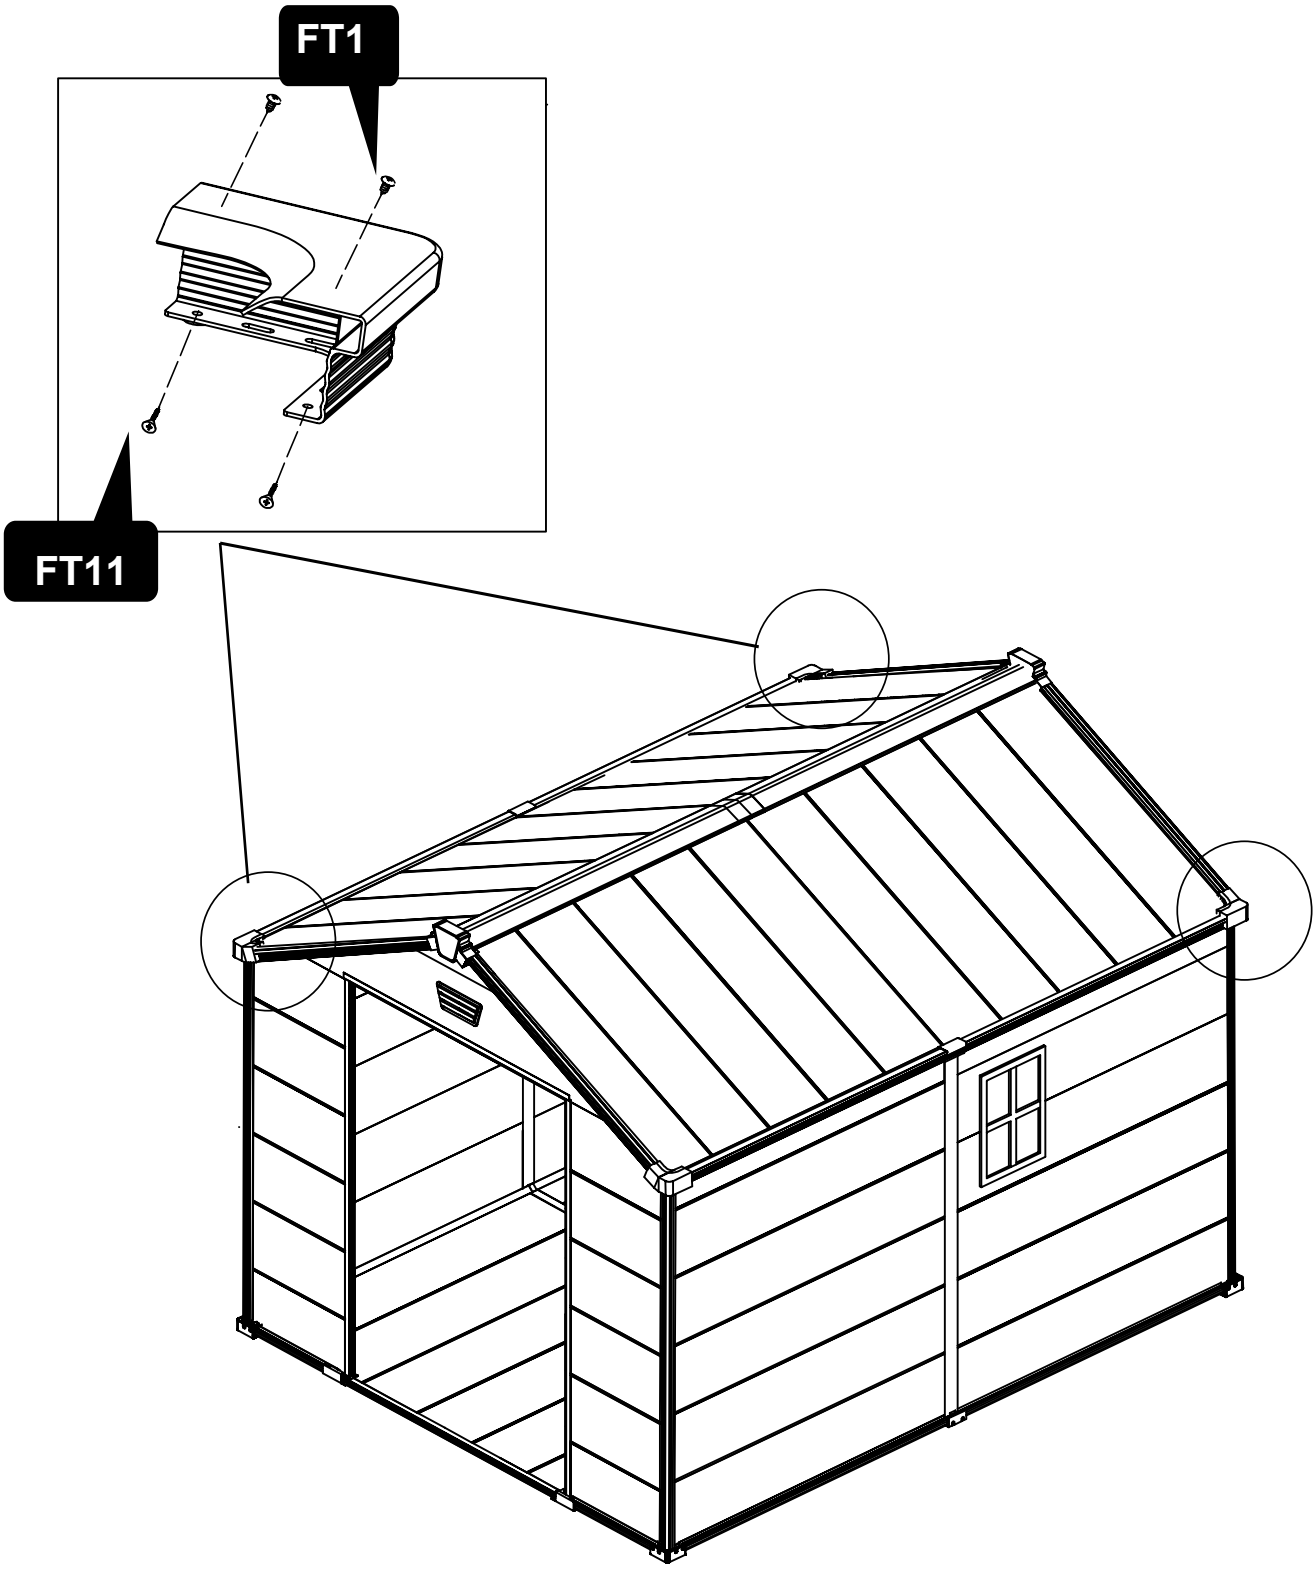


35

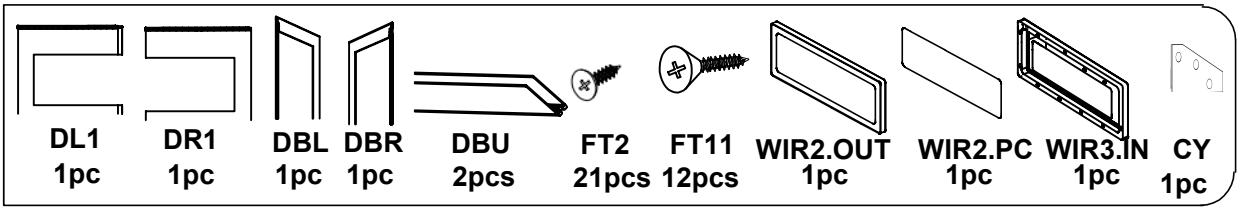
DL1
1pc
DR1
1pc
DBL
1pc
DBR
1pc
DBU
2pcs
FT2
21pcs
FT11
12pcs
WIR2.OUT
1pc
WIR2.PC
1pc
WIR3.IN
1pc
CY
1pc


LEFT DOOR

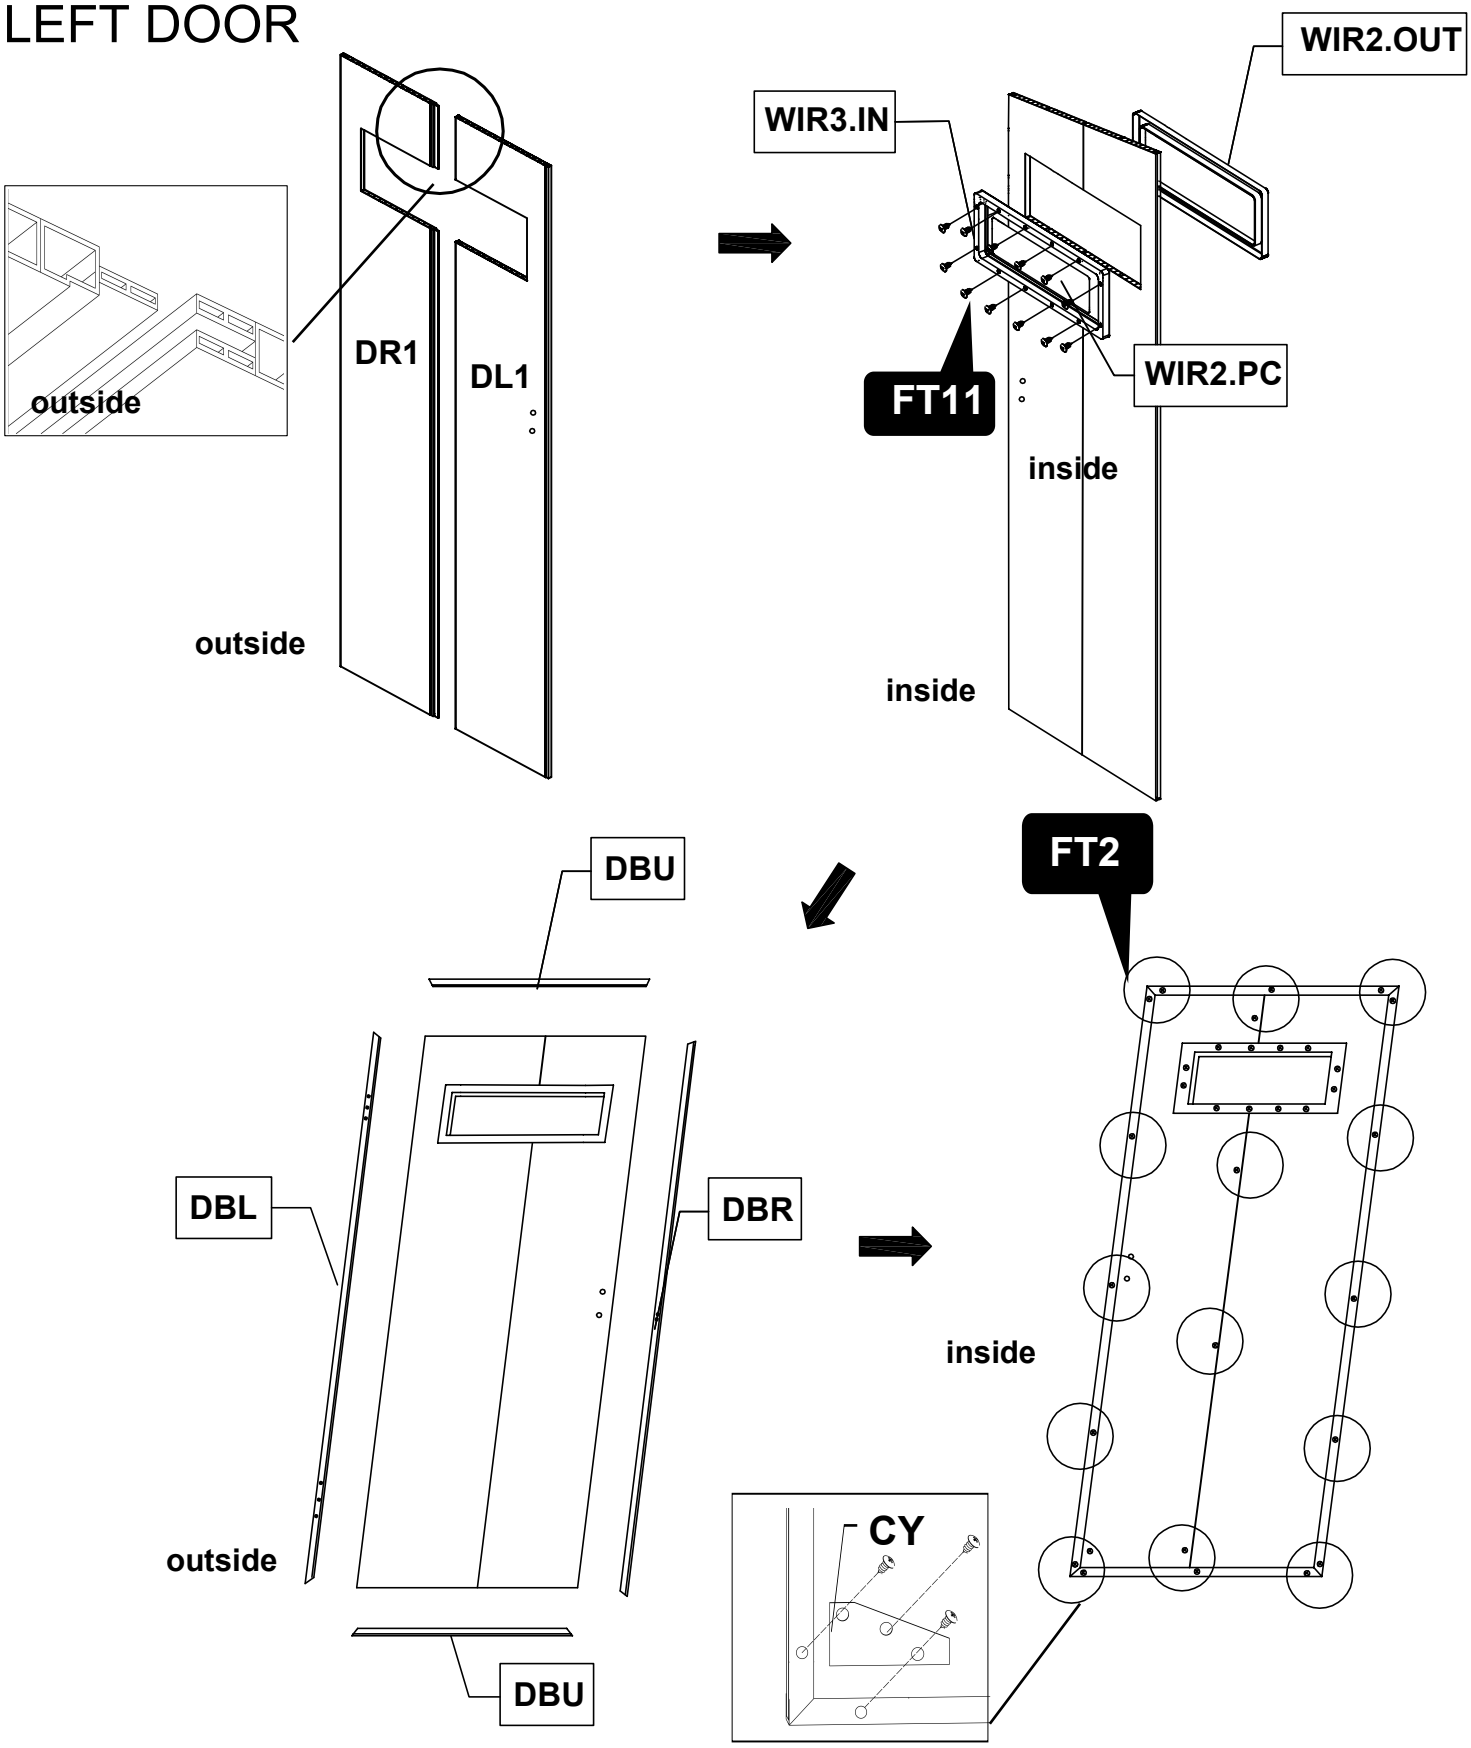

outside
DR1
DL1
outside
WIR2.OUT
WIR3.IN
FT11
WIR2.PC
inside
inside
DBU
FT2
DBL
DBR
outside
inside
CY
DBU

36

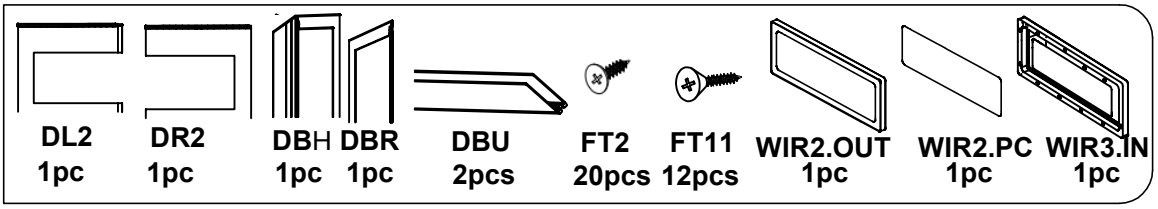



RIGHT DOOR

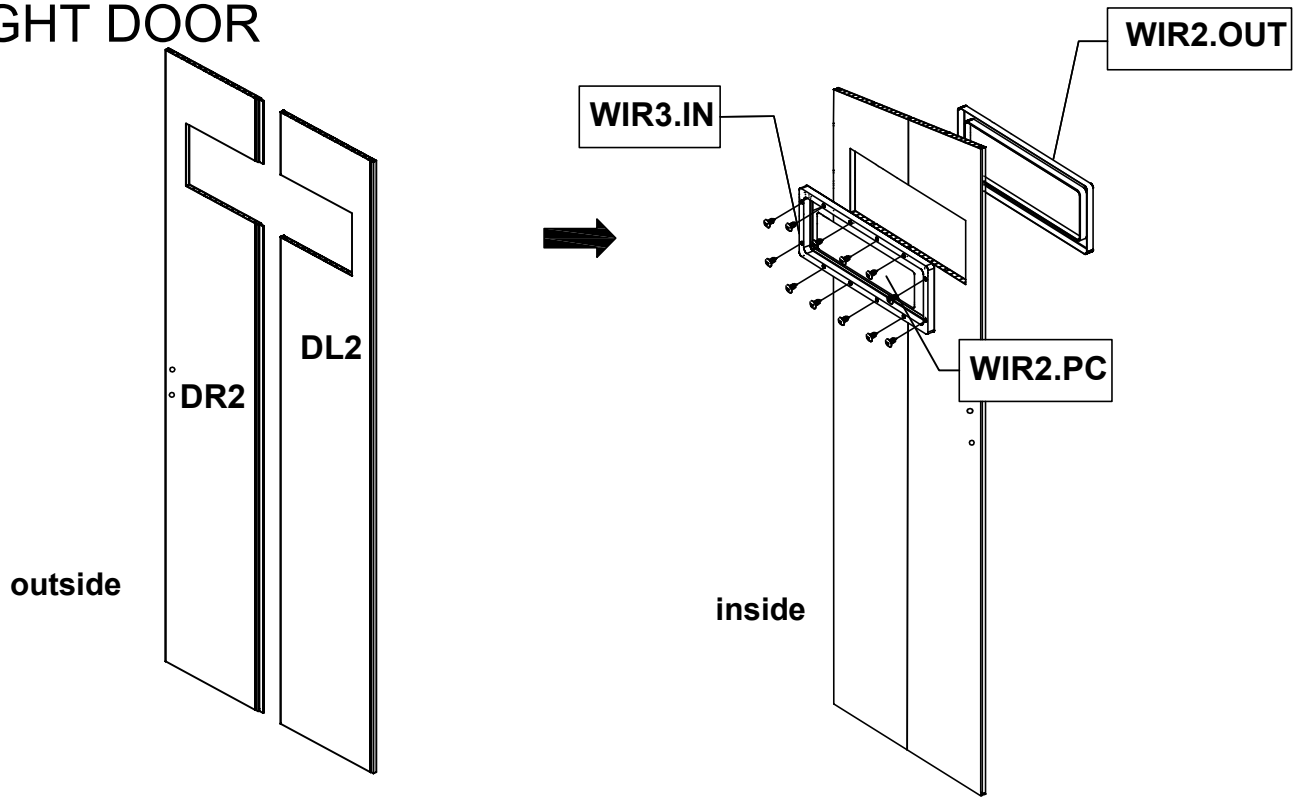

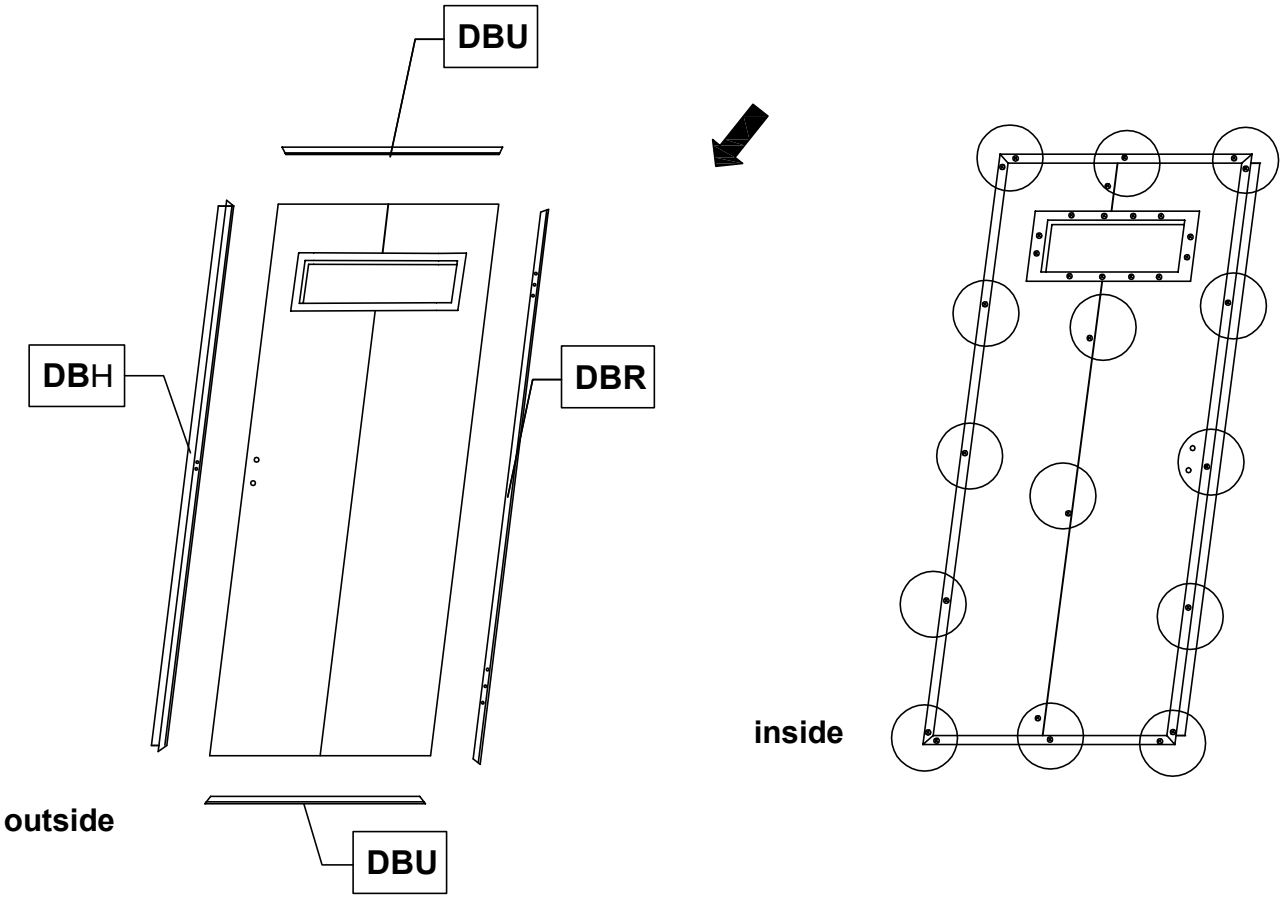



37

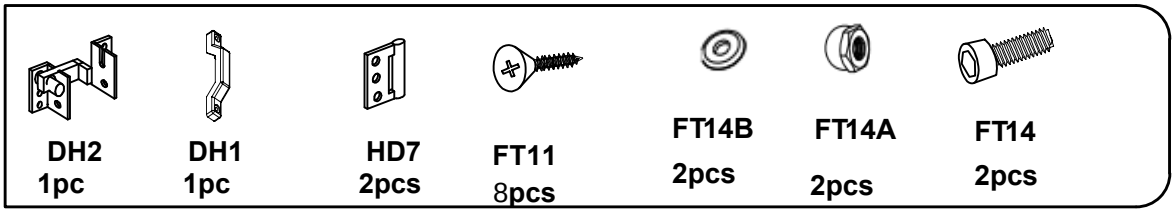
DH2
1pc
DH1
1pc
HD7
2pcs
FT11
8pcs
FT14B
2pcs
FT14A
2pcs
FT14
2pcs

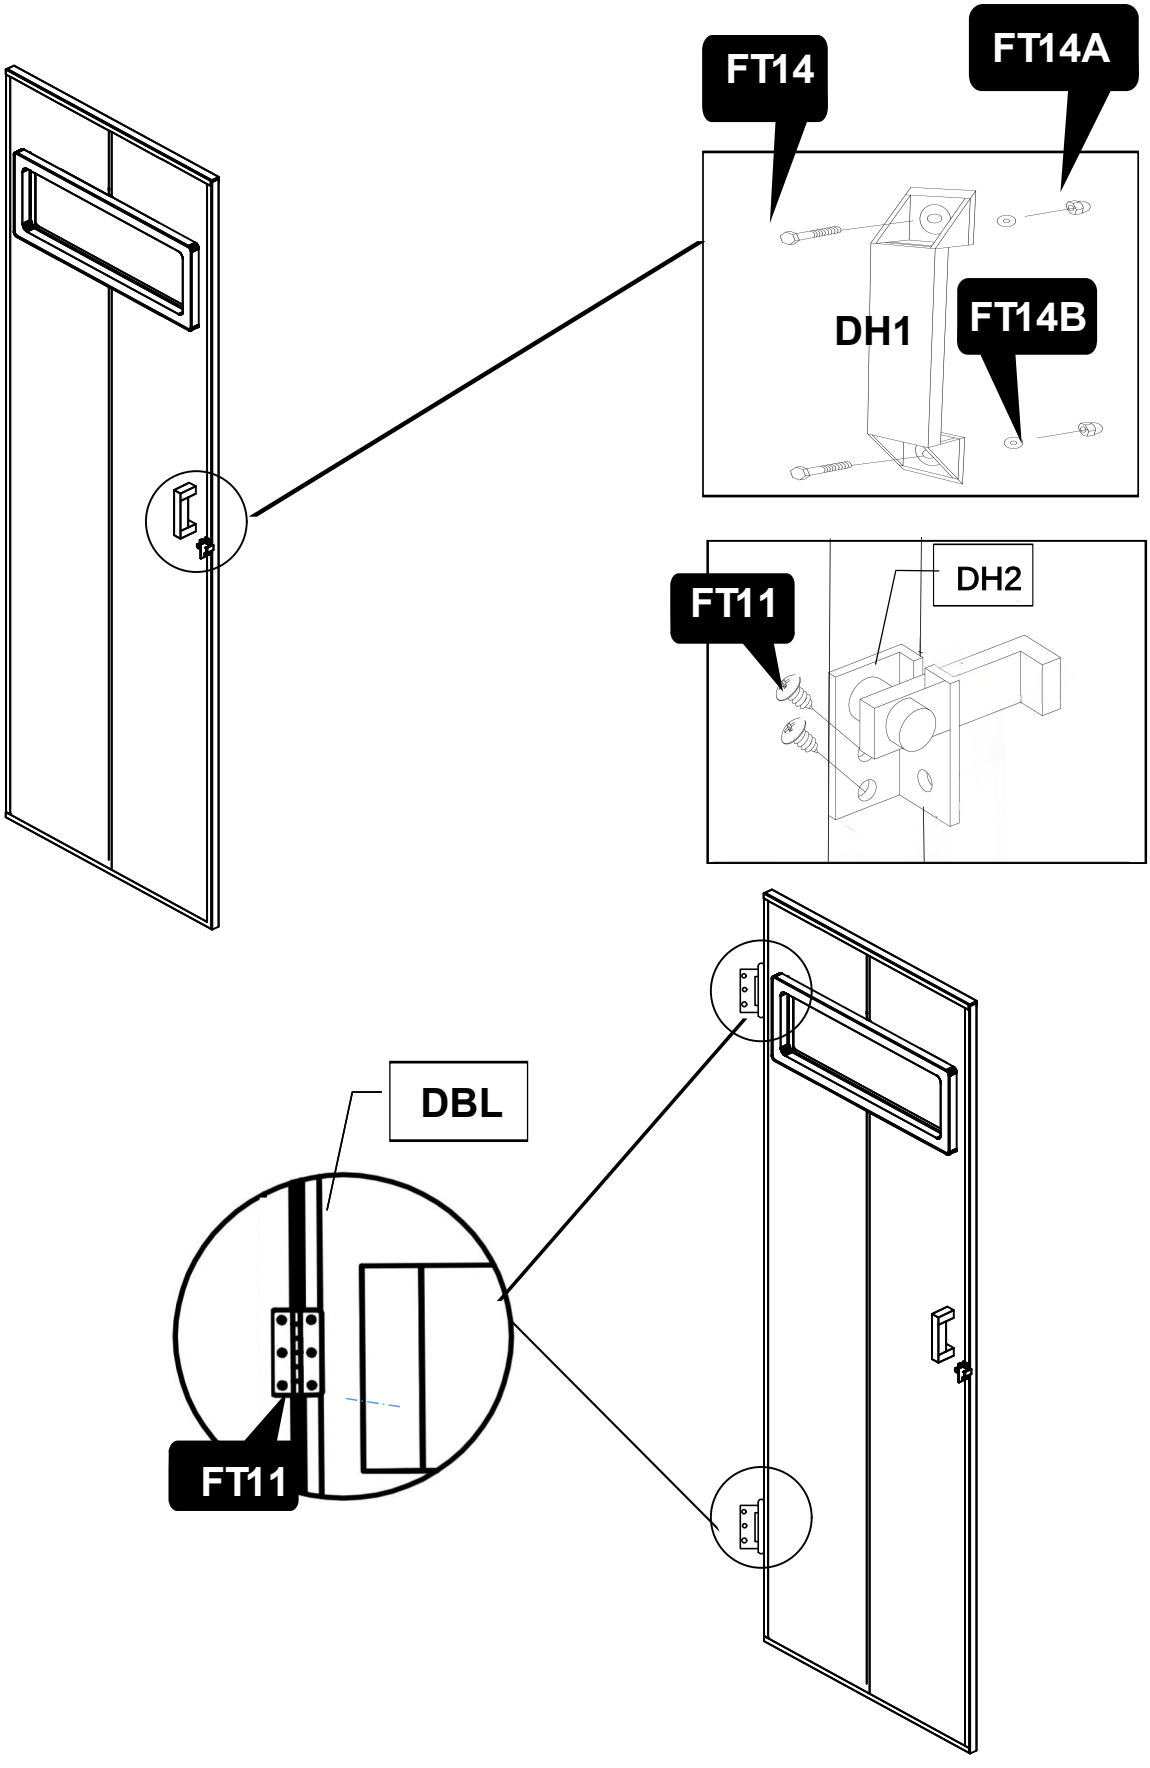
FT14
FT14A
DH1
FT14B
DH2
FT11
DBL
FT11

38

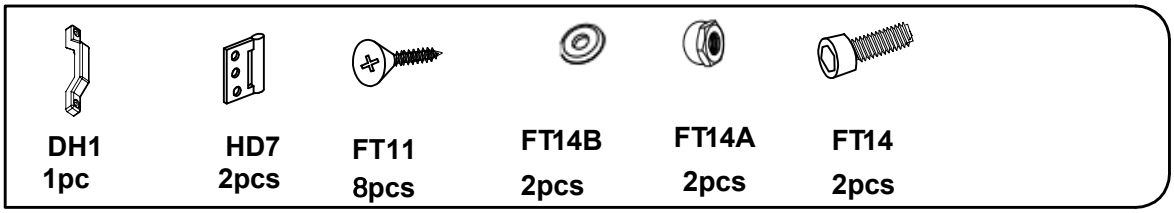

DH1
1pc
HD7
2pcs
FT11
8pcs
FT14B
2pcs
FT14A
2pcs
FT14
2pcs

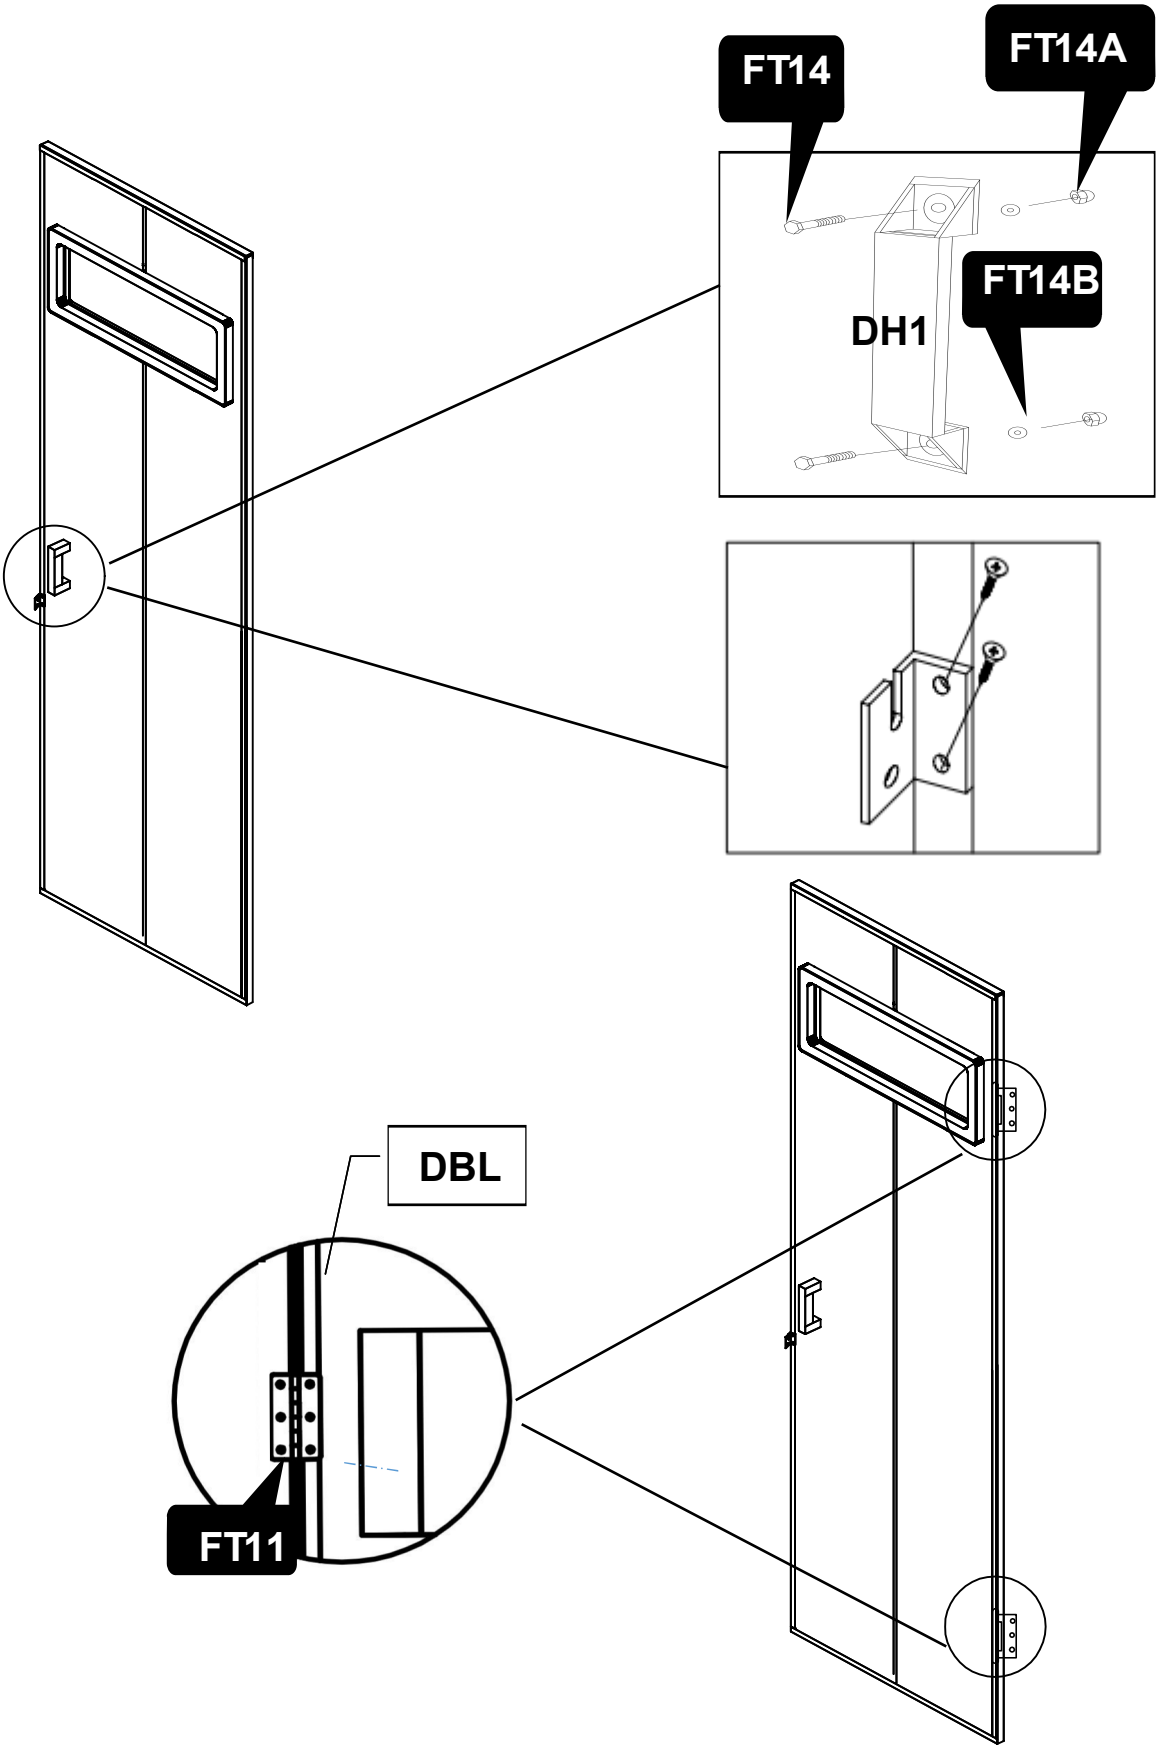

FT14
FT14A
FT14B
DH1
DBL
FT11

39



HD8
2pcs


FT1
4pcs

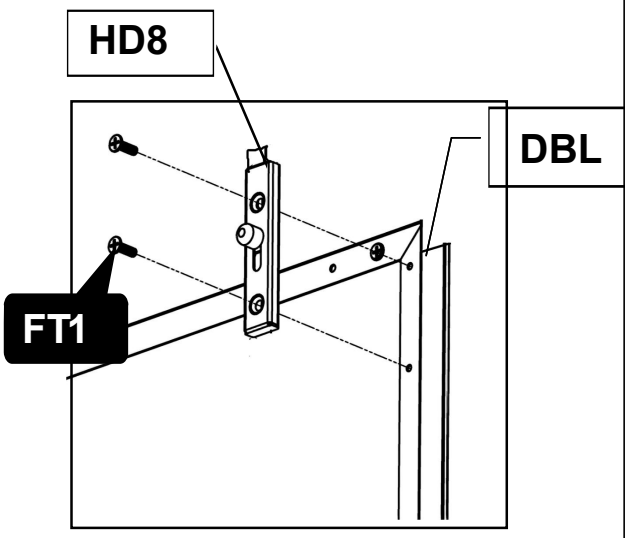

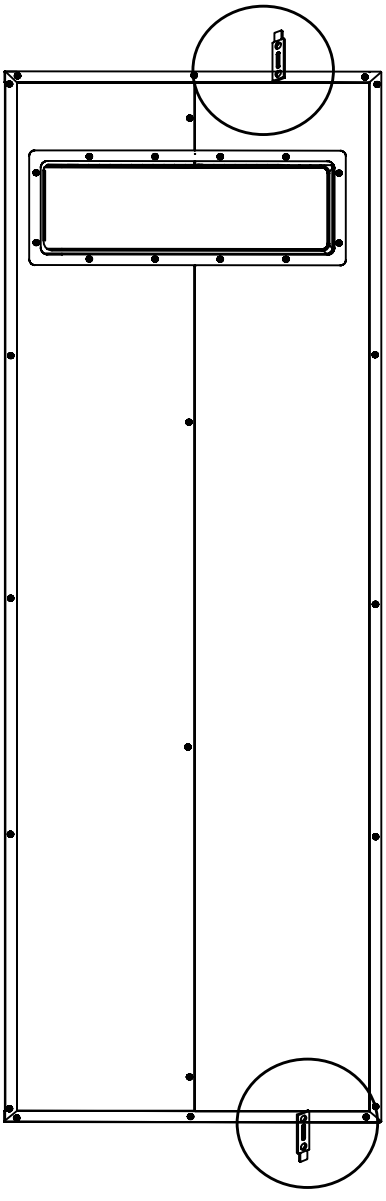

RIGHT DOOR

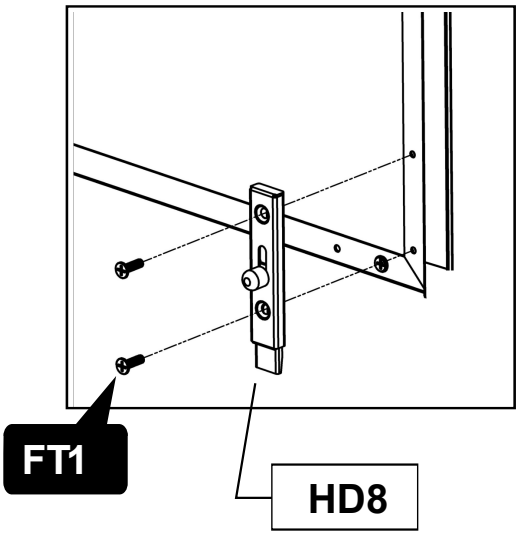


Install this part and tighten the screws gently and slowly.

40



FT11
12pcs





FT12
4pcs

OR



FT3
4pcs

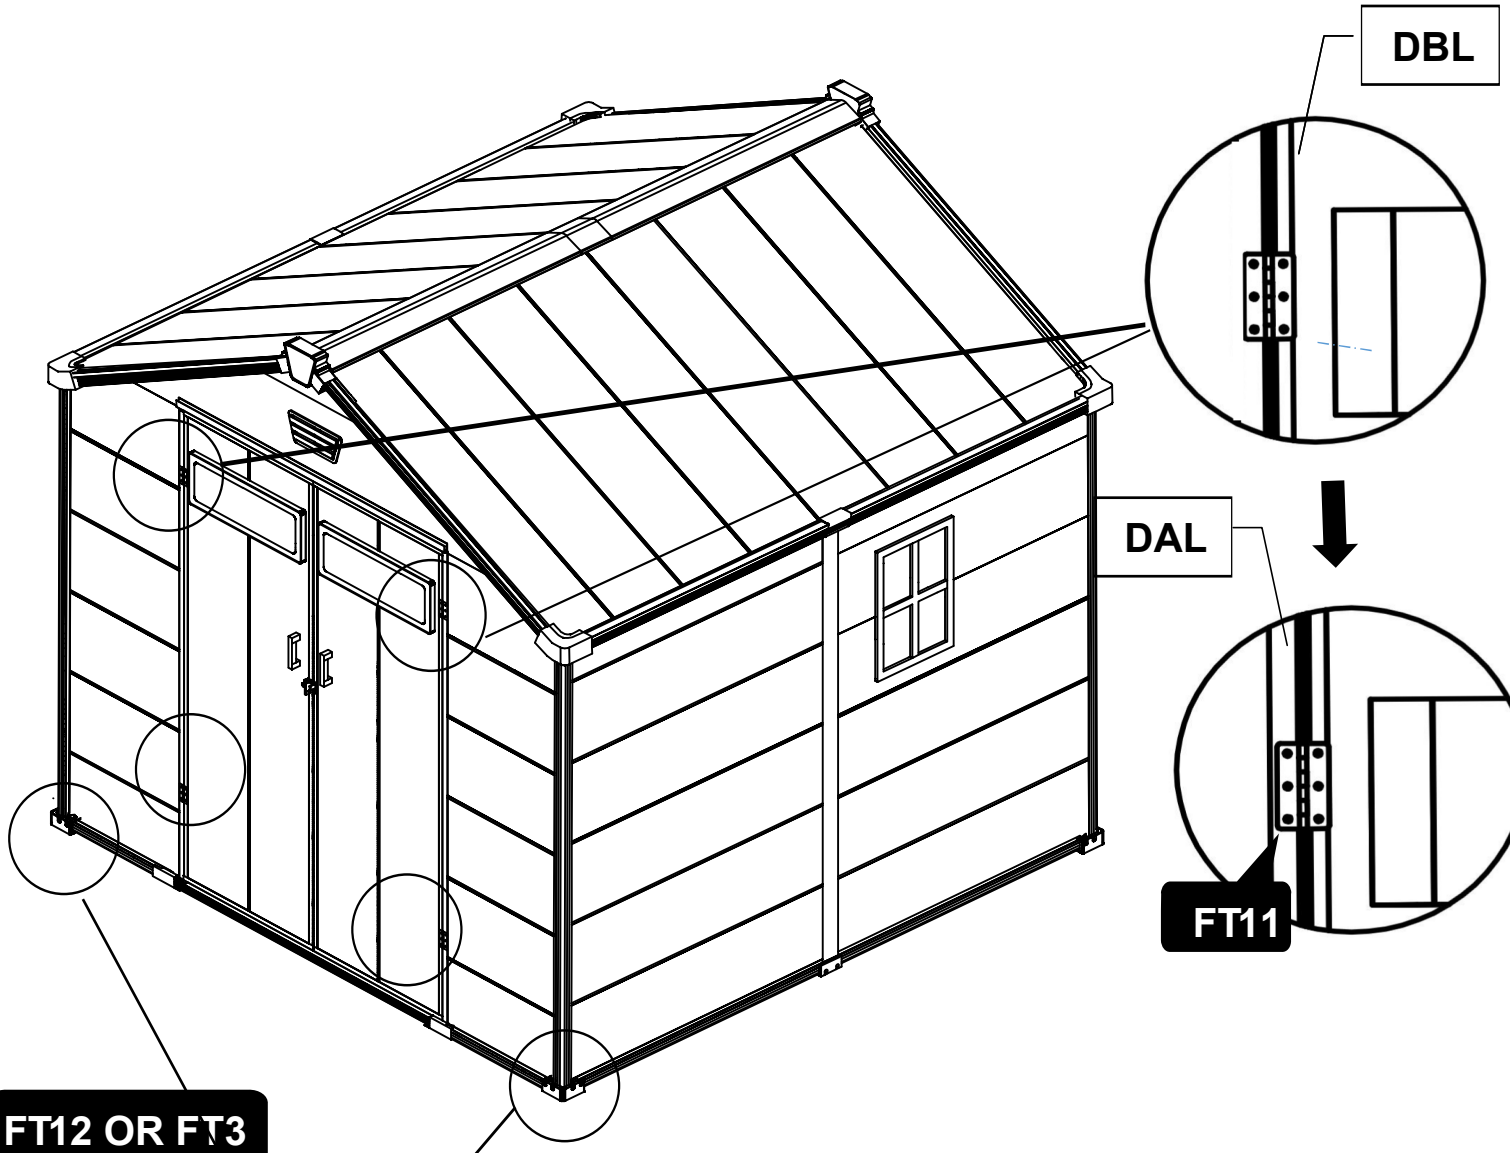

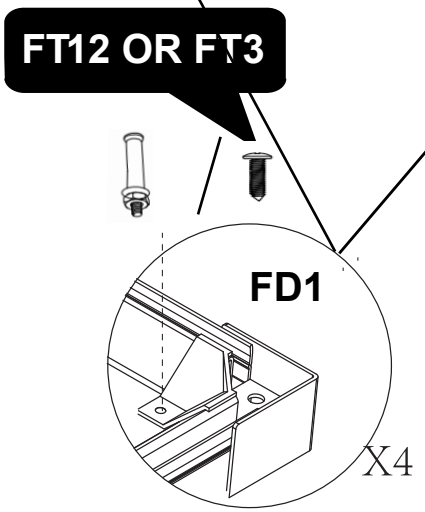

If you need to anchor the shed to a level solid surface (such as concrete or a wooden deck), please first remove the four FT2 screws installed during assembly (located at the four corners). Next, using your own impact drill, drill through the flooring at those same locations; then, secure the shed using FT12 screws for concrete surfaces or FT3 screws for wooden decking.

Thank you for purchasing and using our product; please feel free to contact us if you have any questions or feedback.