ASSEMBLY INSTRUCTIONS



(Box 1)
BOX OF HEADBOARD & FOOTBOARD


| No | ITEM | Qty |
|----|---------------------|-------|
| A | Headboard | 1 pc |
| В | Footboard | 1 pc |
| С | Headboard Leg (L/R) | 2 pcs |
| D | Bed Slats | 4 pcs |
| Е | Bed Slats Support | 8 pcs |

(Box 2)
BOX OF SIDE RAIL

| No | ITEM | Qty |
|----|-----------|-------|
| F | Side Rail | 2 pcs |


(Box 1)

| HARDWARE LIST | | | |
|---------------|------------------------------------|-------|--|
| No | ITEM | Qty | |
| 1 | Csk M4 x 32mm | 8 pcs | |
| 2 | JCBC M6 x 30mm | 6 pcs | |
| 3 | SPRING WASHER 1/4" Rbw | 6 pcs | |
| 4 | Flat Washer 1/4"ID x 13mmOD Blk | 6 pcs | |
| 5 | ALLEN KEY m4x65mm Blk | 1 pc | |
| 6 | ALLEN KEY m5x65mm Blk | 1 pc | |

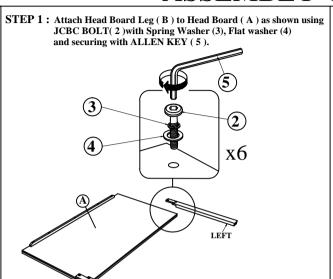

RIGHT

BACK VIEW

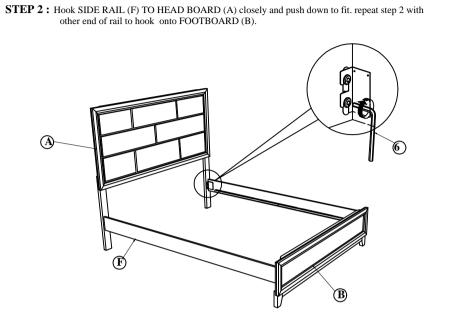

STEP 3: Tighten the 4 Corner with Allen Key (6). Fix the Bed Slat Support Leg (E), to Bed Slat (D) as shown. Install the bed slat (D) to side rail (F) and tighten with Csk Screw (1) as per diagram shown. (NOTE: THE SETUP MUST DONE AT THE DECIDED LOCATION FOR THE BED TO OBTAIN PERFECT STABILITY)

