


Installation & Assembly

① ②	② lock nut & teeth lock washer 3pcs ① short light arm 3pcs	⑩ ⑪	⑩ carabiner hook screw connection 1pcs ⑪ hanging tube 1pcs	⑮ ⑯	⑮ canopy 1pcs ⑯ cap nut 2pcs
③	② lock nut & teeth lockwasher 6pcs ③ long light arm 6pcs	⑫ ⑬	⑫ threaded rod 3pcs ⑬ hanging tube 3pcs	⑲	cylinder tube 9pcs X 1PCS
④ ⑤ ⑥ ⑦ ⑧ ⑨	④threaded rod ⑤small metal cover ⑥small metal box ⑦big metal box ⑧big metal cover ⑨end cap	⑭	splicing connector 4pcs X 3PCS X 3PCS		X 1PCS X 3PCS X 3PCS

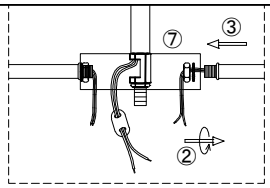


1.Pull the orange operating handle A to open the inlet hole,insert the wire B.
2.Press the operating handle A to finish wiring.(Note: one inlet hole can put 2 or 3 wires inside)

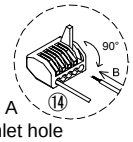


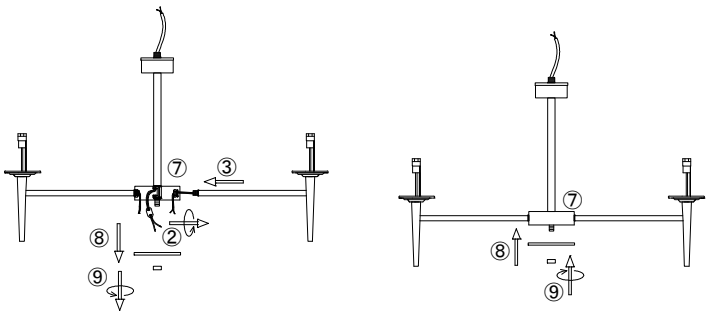


1.Loosen and remove out the end cap ⑨ and cover ⑧ from metal box ⑦, install the long light arm ③ to the metal box ⑦ with lock nut & teeth lock washer ②.(don't tighten the lock nut until all light arms are ready installed to the metal box ⑧, adjust the arms even and rotate to fasten the lock nuts at last)
2. Connect all the wires by parallel with connectors ⑭ (all live line-L use one connector, and neutral Line-N use another connector).
3.Close back the cover ⑧ to the box ⑦ with end cap ⑨.

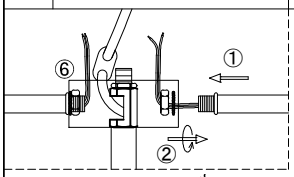


1.Pull the orange operating handle A to open the inlet hole,insert the wire B.
2.Press the operating handle A to finish wiring.(Note: one inlet hole can put 2 or 3 wires inside)

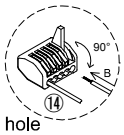

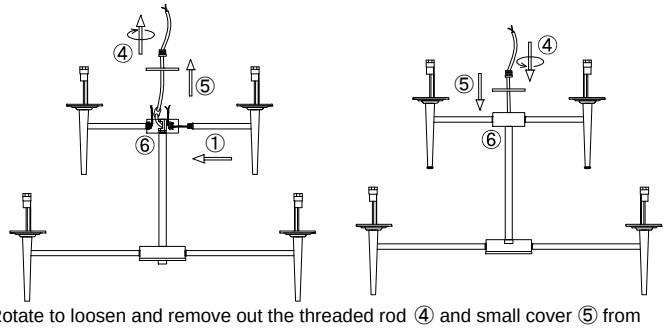


4.Rotate to loosen and remove out the threaded rod ④ and small cover ⑤ from metal box ⑥, install the short light arm ① to the metal box ⑥ with lock nut & teeth lock washer ②.(don't tighten the lock nut until all light arms are ready installed to the metal box ⑥, adjust the arms even and rotate to fasten the lock nuts at last)
5.Connect all the wires by parallel with connectors ⑭ (all live line-L use one connector, and neutral Line-N use another connector).
6. Close back the cover ⑤ to the box ⑥ with threaded rod ④.

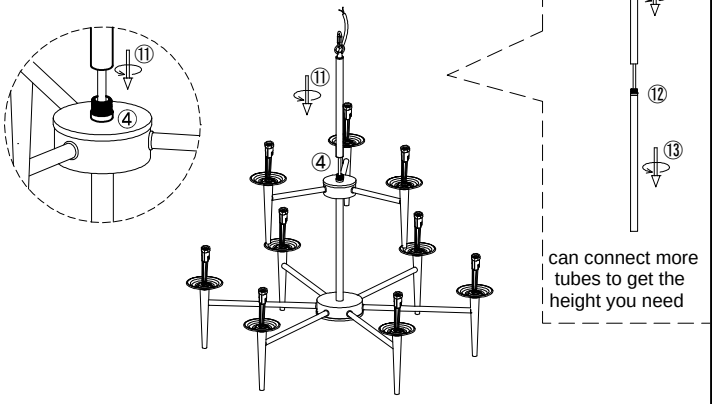


can connect more tubes to get the height you need

7.Rotate to install the tube ⑪ to the light fixture.(can connect more tubes to get the height you need)

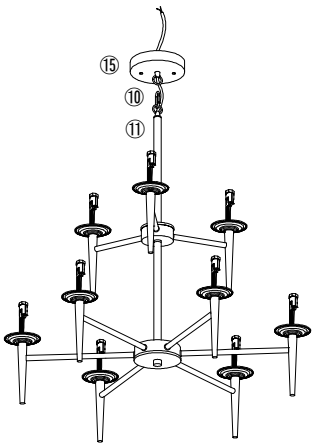

8.Hang the fixture to the canopy ⑮ with carabiner hook screw connection ⑩, let the wire go throught the ring ⑩ and canopy ⑮.

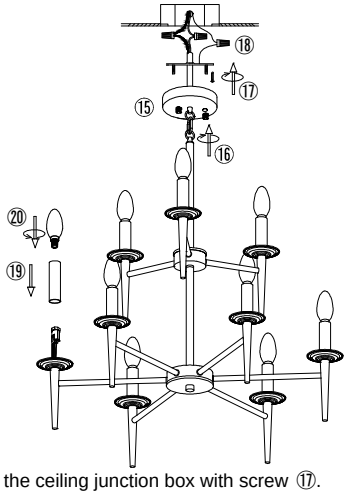

9. Install the bracket to the ceiling junction box with screw ⑰.
10.Connect the wire to your home line with cap connector ⑱.
11. Install the fixture to the bracket with cap nut ⑯.
12. Put the cylinder tube ⑲ to the bulb holder and install the bulb ⑳.(bulbs are not included in the package)

Please read carefully before installation!!!
Note : Please make sure that the electricity is powered off during installation !
Only a professional electrician should install this kind of product !