


Night Stand


IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damage occurring to the parts.


We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.

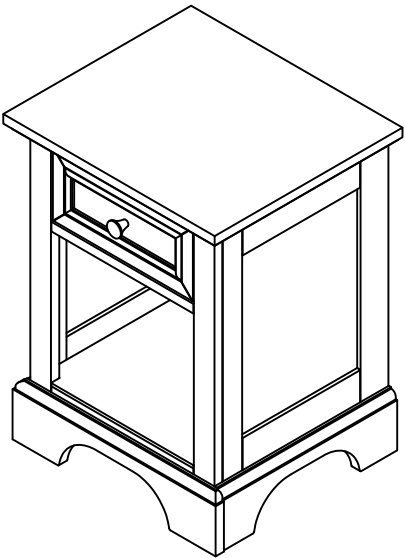

Part List

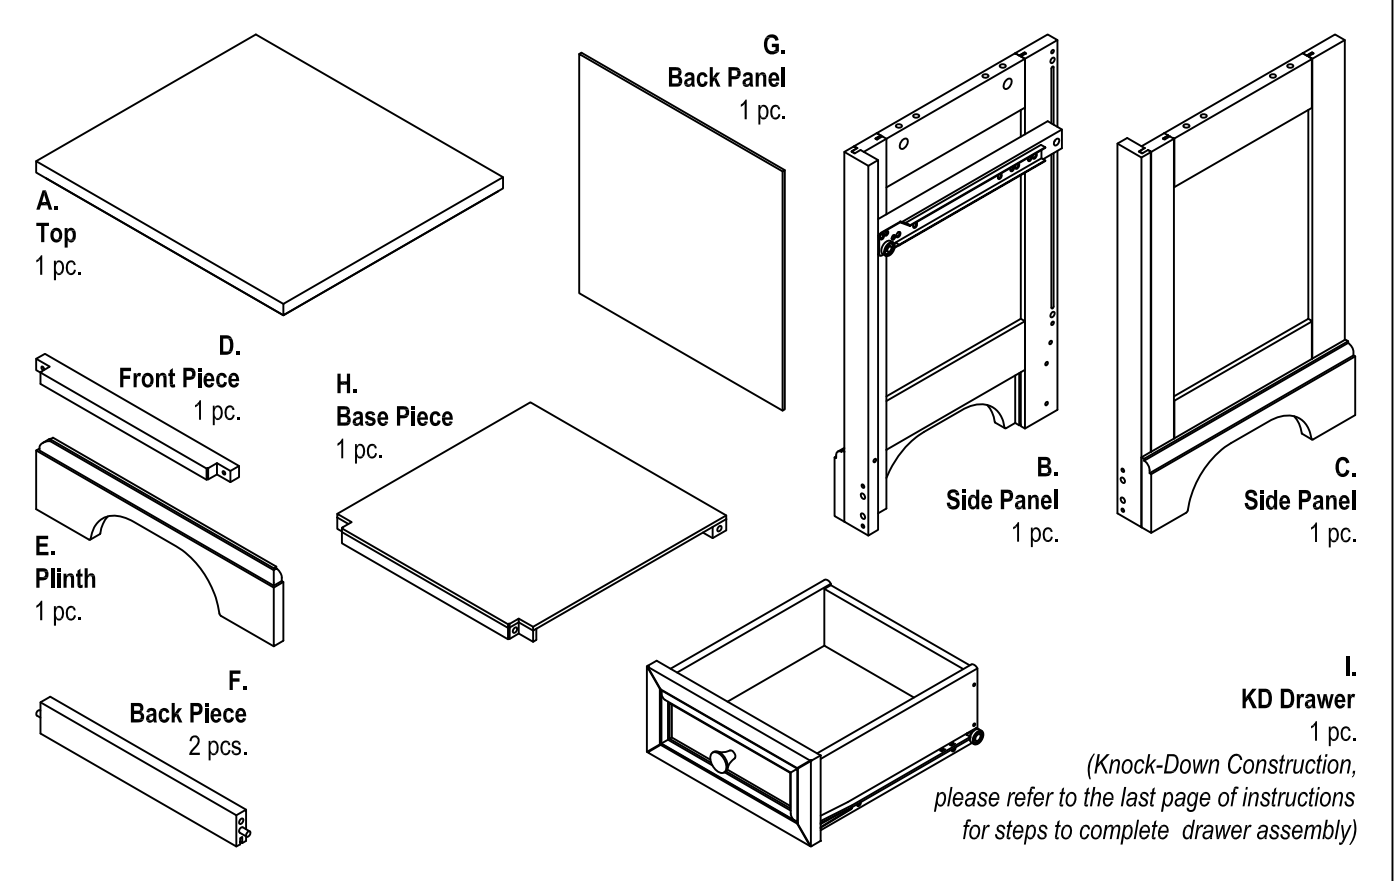

Hardware List

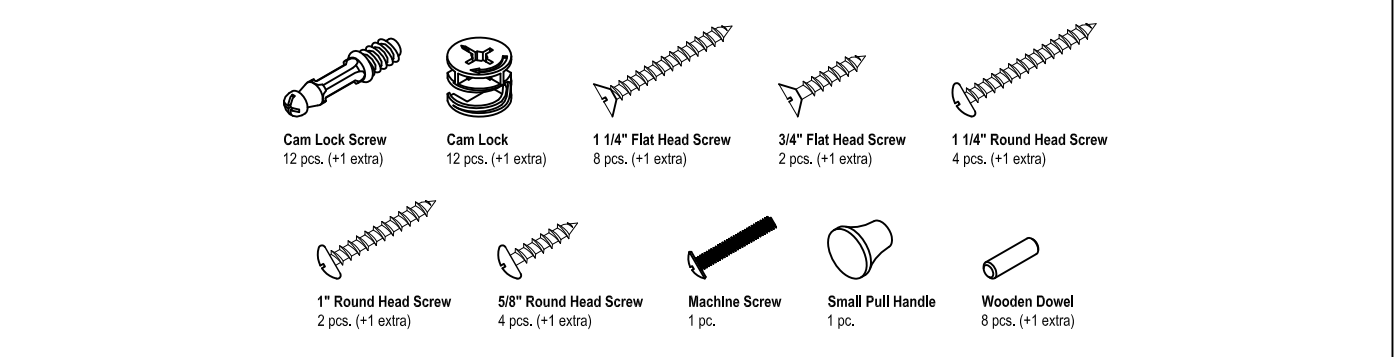

Tools Required For Assembly : Phillips screwdriver

Assembly Instructions 2/6

IMPORTANT
Do not tighten up all the screws until each part is properly assembled.

STEP 1

Insert Cam Lock Screws into the pre-drilled holes of Side Panel (B) and (C).




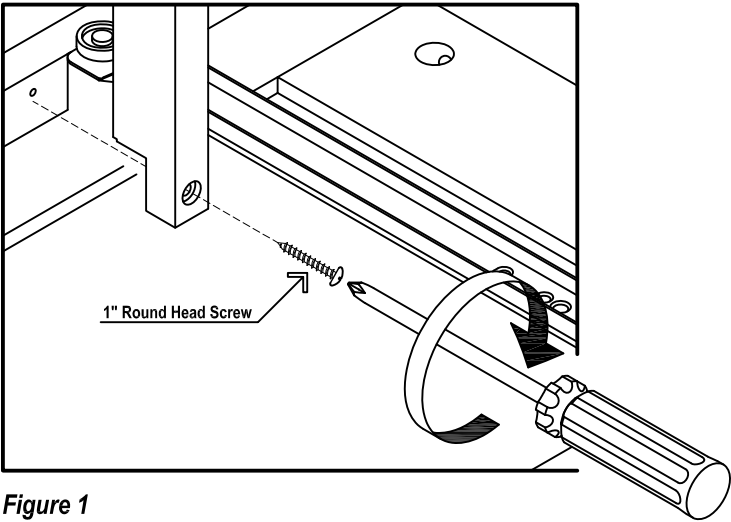


Figure 1

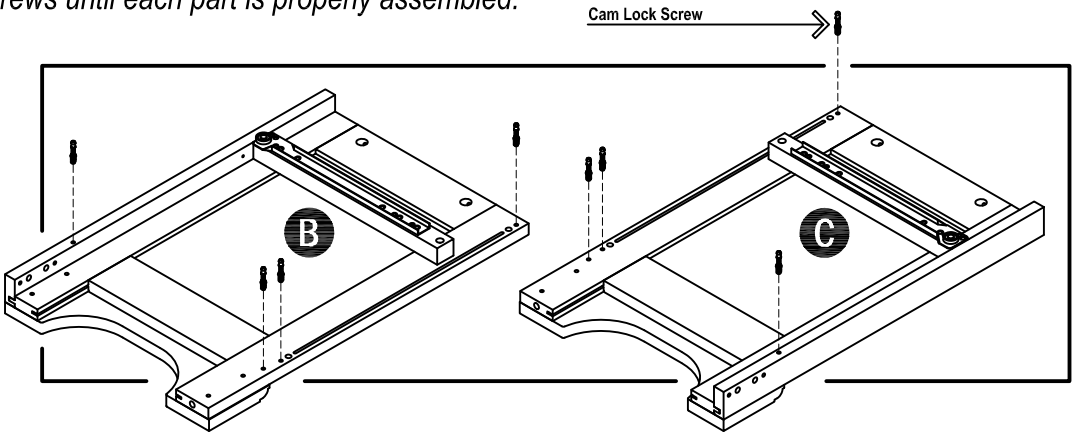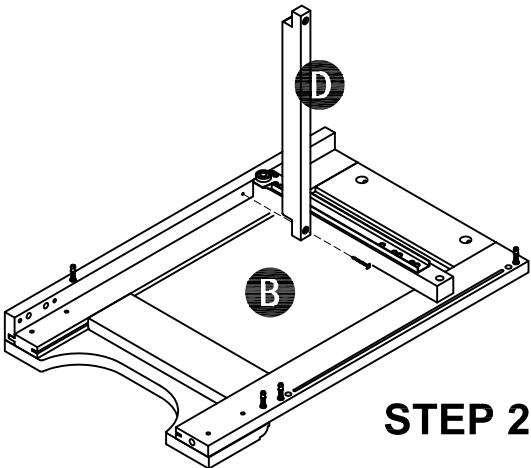

STEP 2

Attach Front Piece (D) to Side Panel (B) with 1 inch Round Head Screw. (See figure 1)

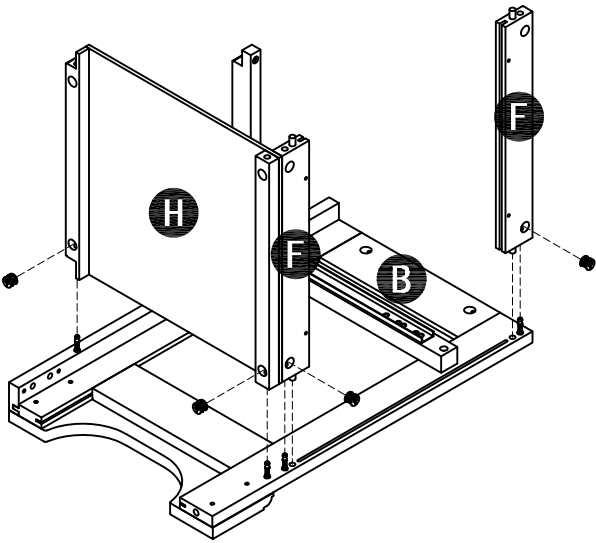

STEP 3

Attach Back Pieces (F) & Base Piece (H) to Side Panel (B) using Cam Locks. (See figure 2)

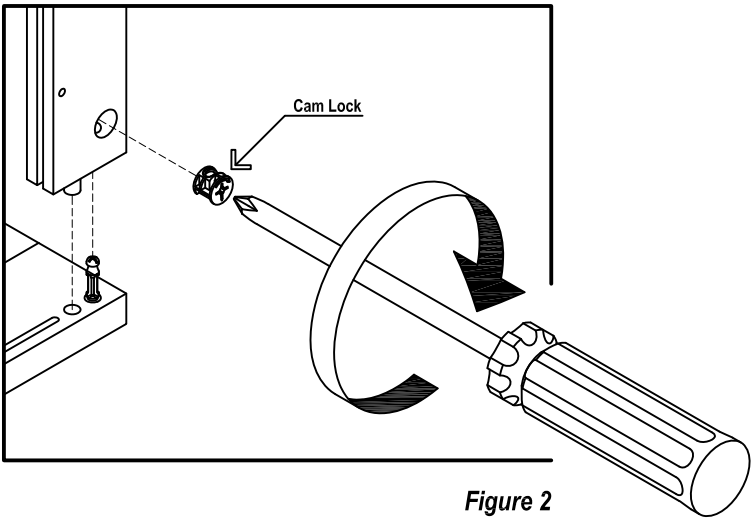


Figure 2

Assembly Instructions 3/6

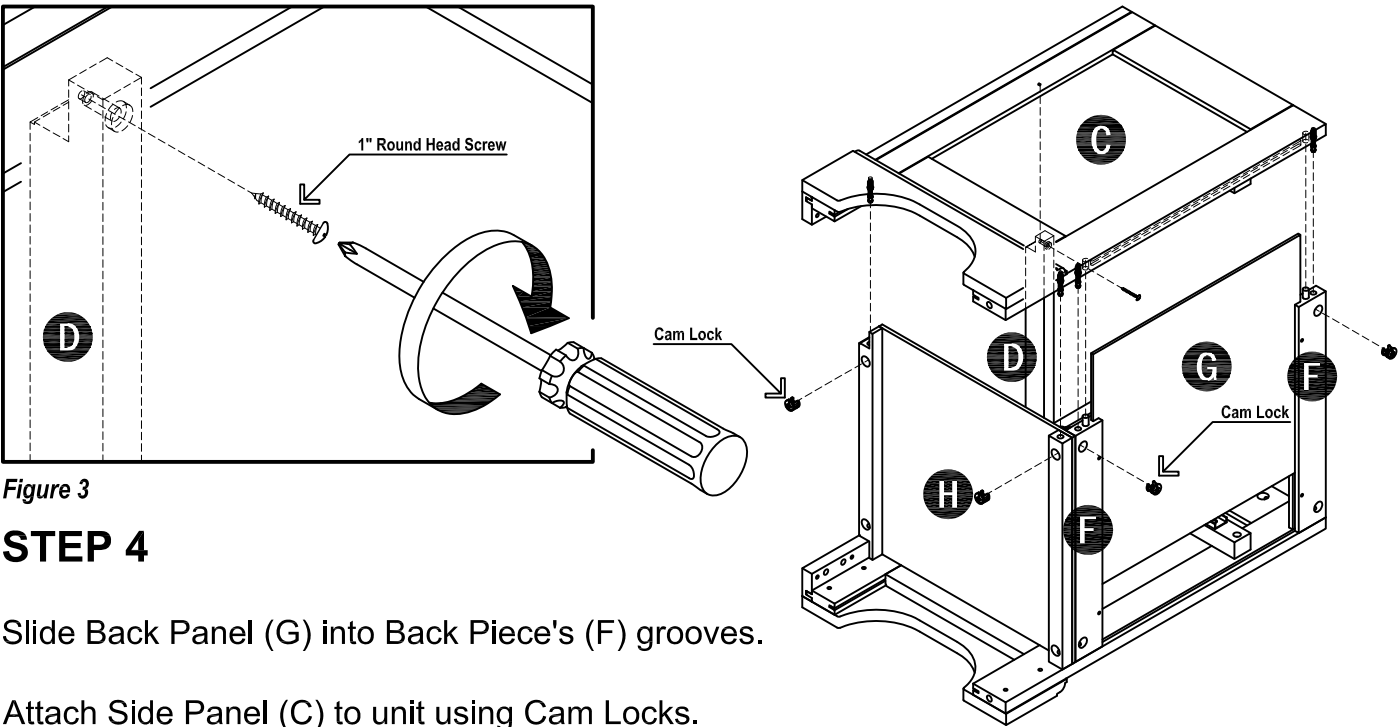



Figure 3

STEP 4

Slide Back Panel (G) into Back Piece's (F) grooves.

Attach Side Panel (C) to unit using Cam Locks.

Attach Front Piece (D) to Side Panel (C) with 1" Round Head Screw. (See figure 3)

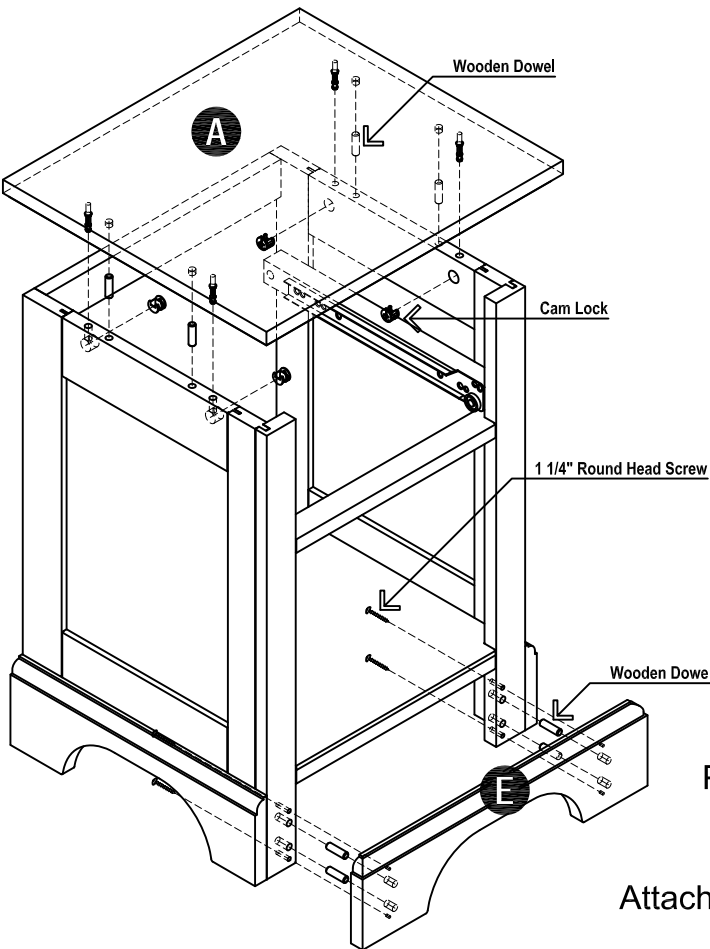

STEP 5

Insert Cam Lock Screws into the pre-drilled holes of Top (A).

STEP 6


Place Top (A) onto the unit using Cam Locks & Wooden Dowels.

Attach Plinth (E) to the unit using 1 1/4" Round Head Screws & Wooden Dowels.

Assembly Instructions 4/6

STEP 7

Attach 5/8" Round Head Screws to the back of unit through the holes of Back Piece (F).

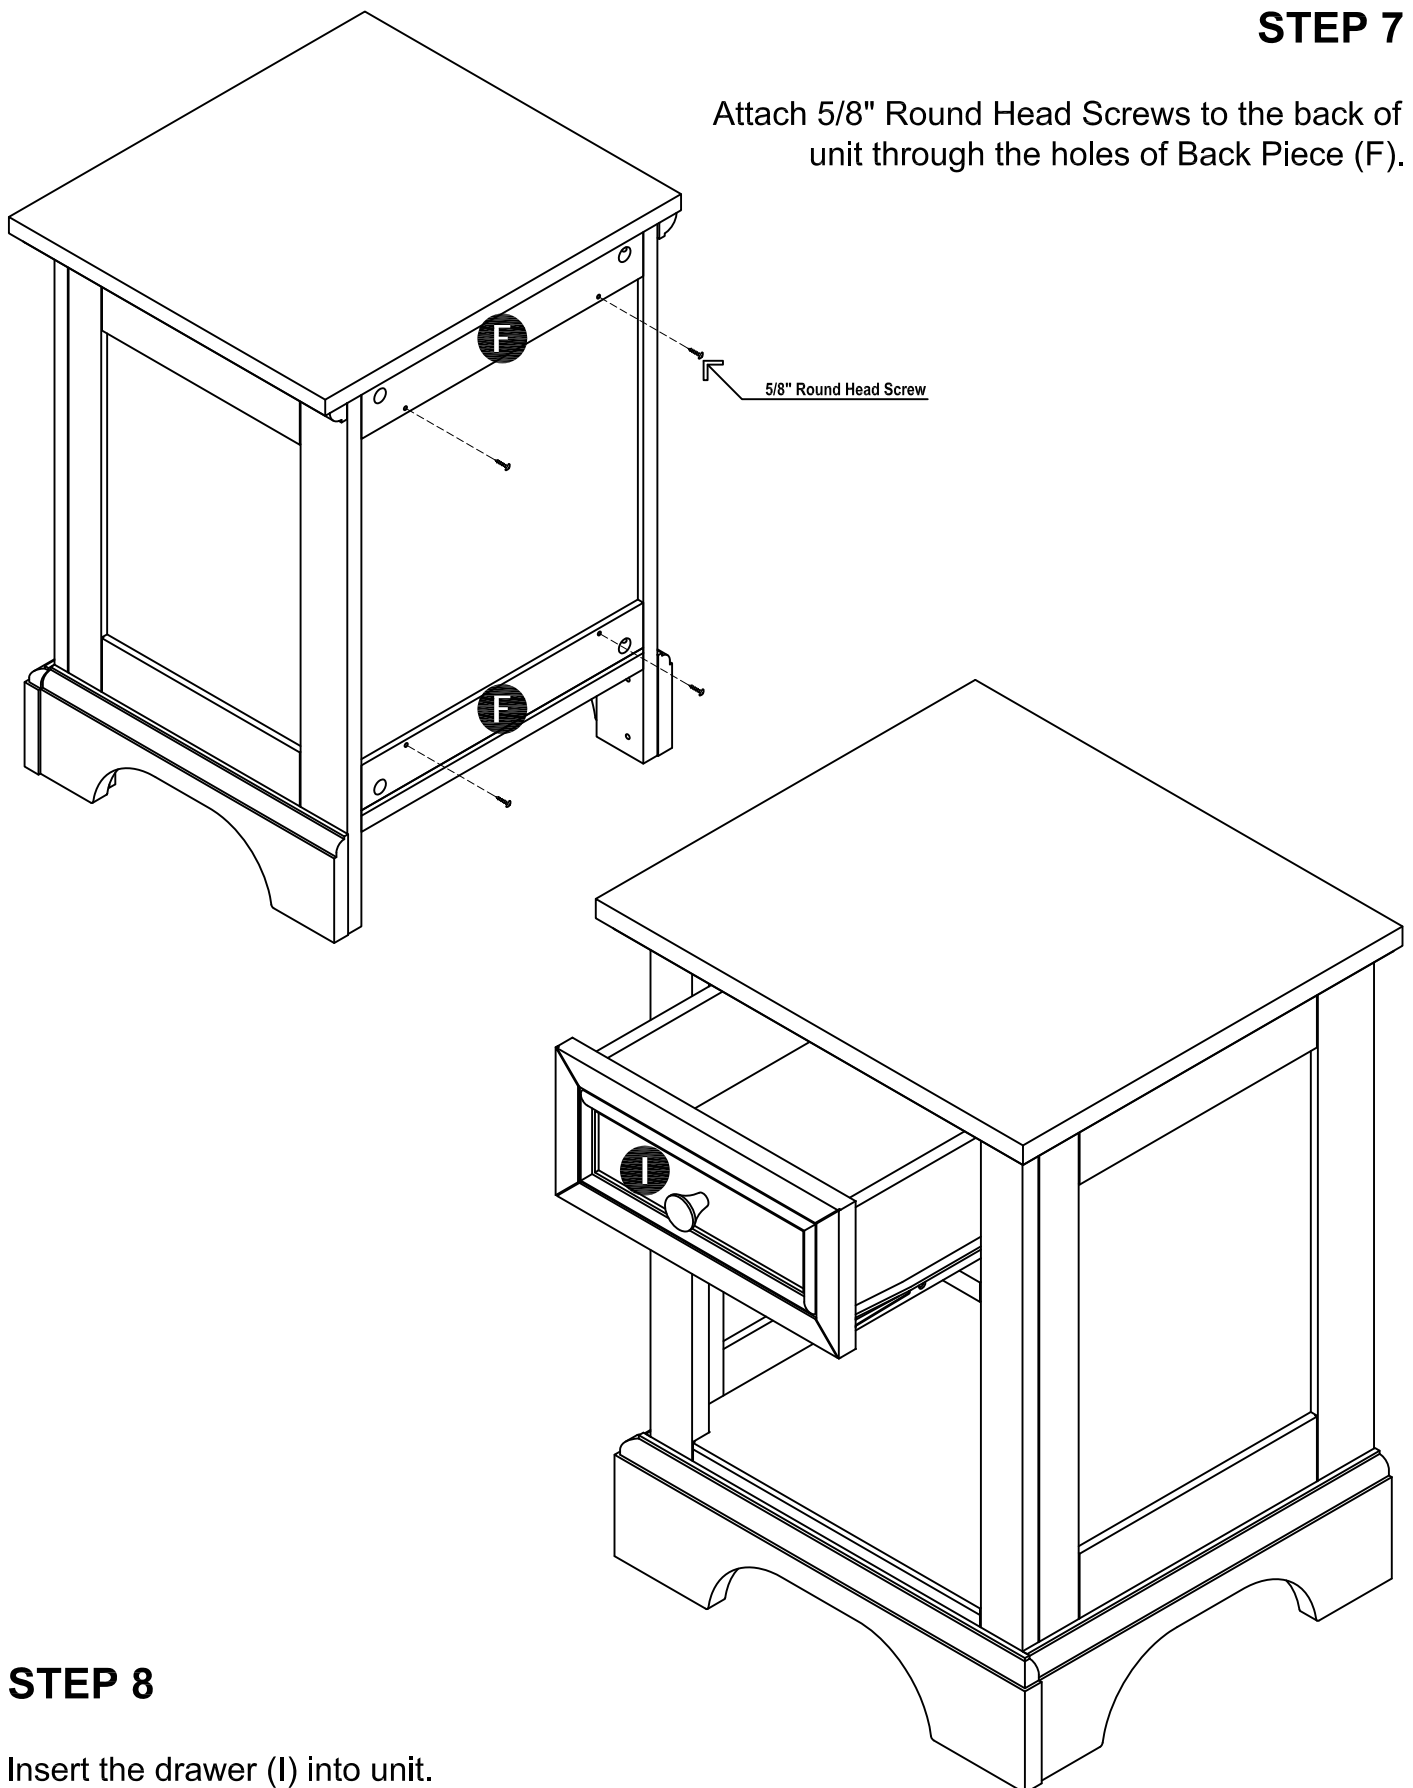

STEP 8



Insert the drawer (I) into unit.

Note: Follow the steps on the next page to use 3/4" Flat Head Screws to complete drawer assembly.

Assembly Instructions 5/6

STEP 9

Loosen slightly the two screws pre-installed on the back of the drawer fronts.

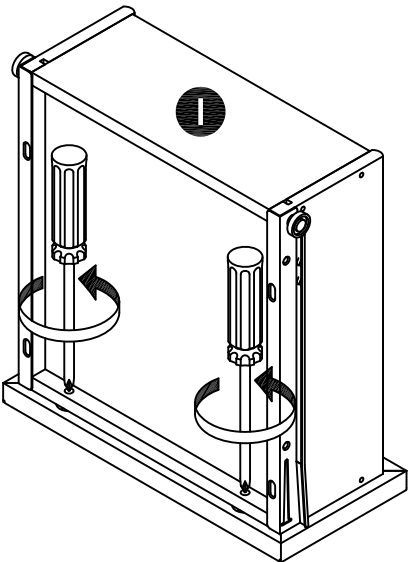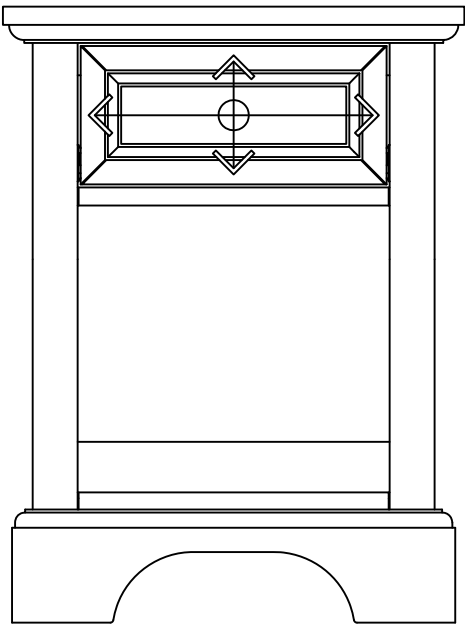


STEP 10

Insert the drawer into the main body, then adjust the drawer front panel left or right and up or down until the drawer gaps look proportional.


STEP 11

Pull the drawer open slowly and re-tighten the screws from Step 9. Make sure the front panel does not move and lock the drawer front panel into position with 3/4" Flat Head Screws.

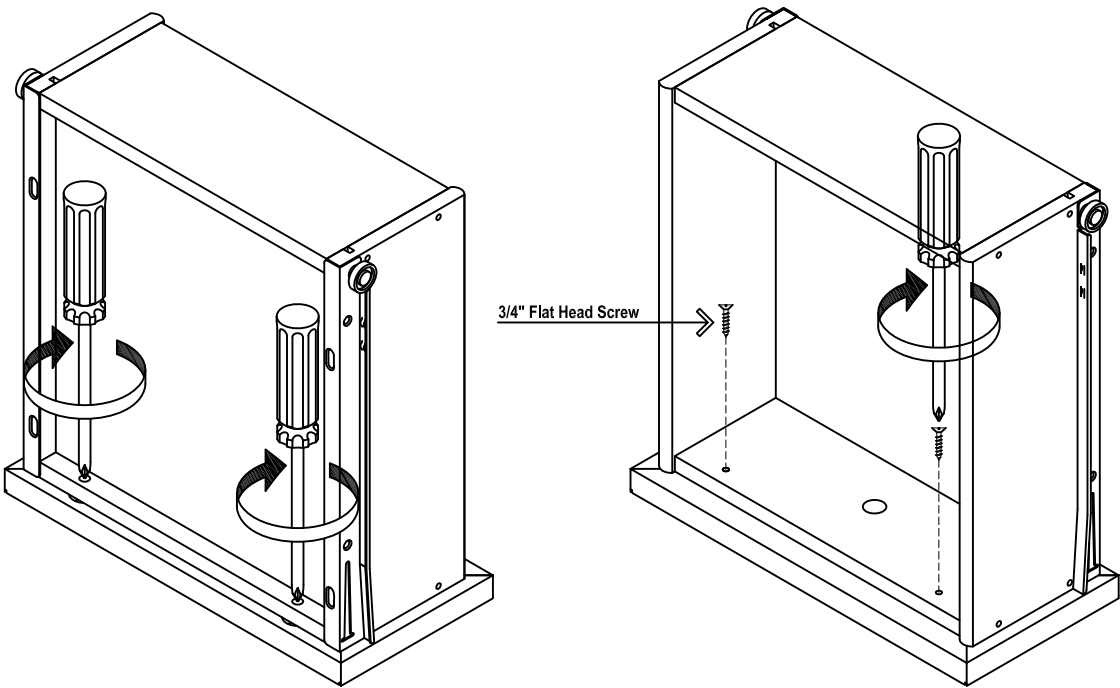

Note: These 3/4" Flat Head Screws on this page must be installed to complete the drawer assembly.



Drawer (I)

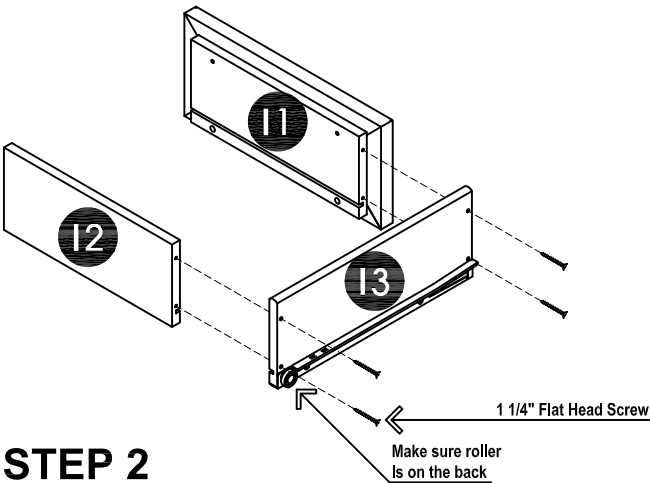

STEP 2


Insert Base Part (I5) into the groove.

Attach Side Part (I4) to Front Part (I1) and Back Part (I2) using a Phillips screwdriver and 1 1/4" Flat Head Screws.

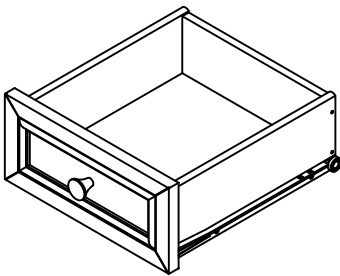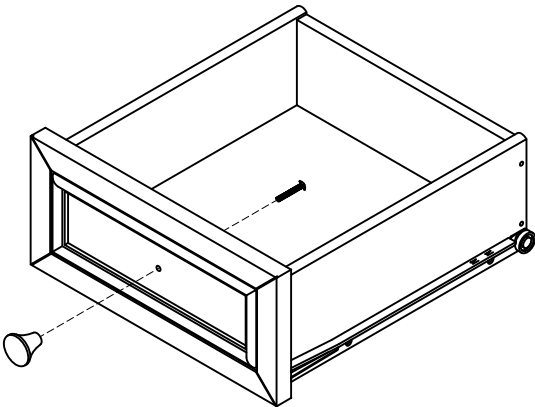

STEP 1

Attach Side Part (I3) to Front Part (I1) and Back Part (I2) using a Phillips screwdriver and 1 1/4" Flat Head Screws.

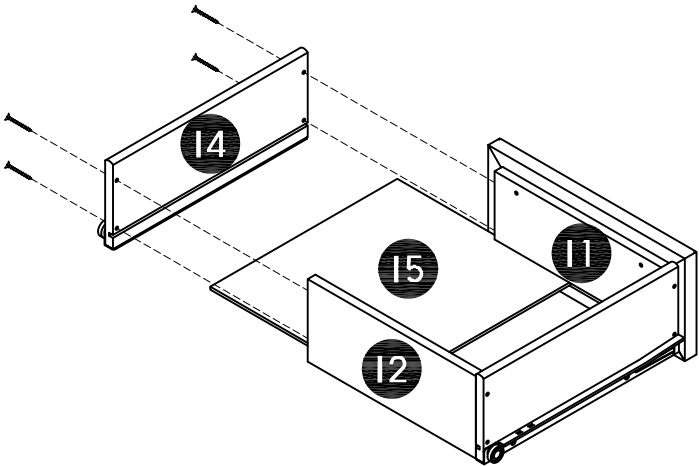

STEP 3

Attach Small Pull Handle with machine screw.

Note: Drawer assembly is not complete until 3/4" Flat Head Screws are used in a later step.

Part List				
I1. Front Part 1 pc.	I2. Back Part 1 pc.	I3. Side Part 1 pc.	I4. Side Part 1 pc.	I5. Base Part 1 pc.

VERY IMPORTANT !!

CARE INSTRUCTIONS

NEVER

USE GLASS CLEANERS ON FINISHED FURNITURE. AMMONIA WILL CHEMICALLY ATTACK THE LACQUER.

NEVER

ALLOW LIQUIDS OF ANY KIND TO REMAIN ON THE FURNITURE. ABSORPTION CAUSES WOOD TO WARP AND SPLIT AND FINISHES TO DELAMINATE.

DO NOT WRITE DIRECTLY ON SURFACE.



PREVENT MARKING

DO NOT PLACE IN DIRECT SUNLIGHT.



PREVENT FADING

DO NOT USE COMMERCIAL WAXES AND POLISHES.



PREVENT YELLOWING

DO NOT PLACE HOT OBJECTS ON SURFACE.



PREVENT FINISH DAMAGE

DO NOT USE RUBBER BASED PLACE MATS.



PREVENT DISCOLORING

TO CLEAN

USE A SOFT CLOTH MOISTENED IN LEMON OIL POLISH OR LUKEWARM SOAP AND WATER, THEN BUFF WITH A DRY CLEAN CLOTH.

