















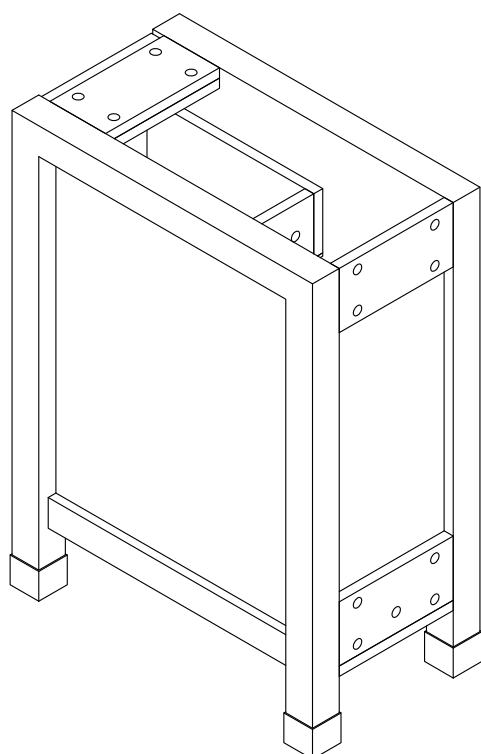
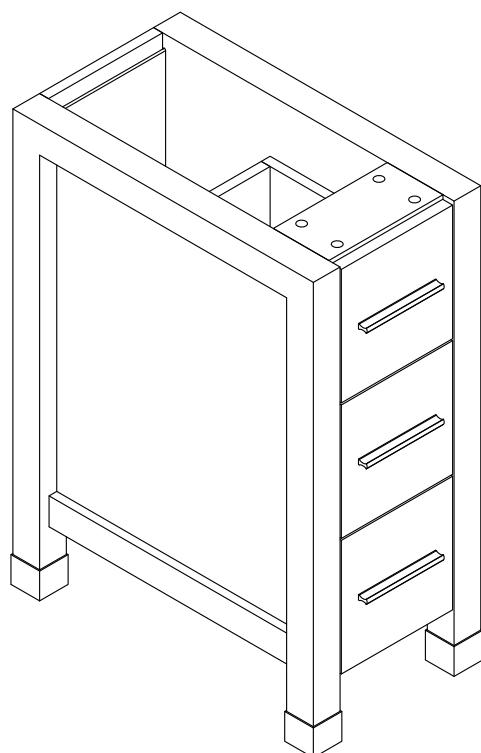
# Installation Instructions

## Parts List


<b>A</b>  X1	<b>B</b>  X1	<b>C</b>  X1
<b>E</b>  X1	<b>F</b>  X2	<b>D</b>  X1
		<b>G</b>  X1
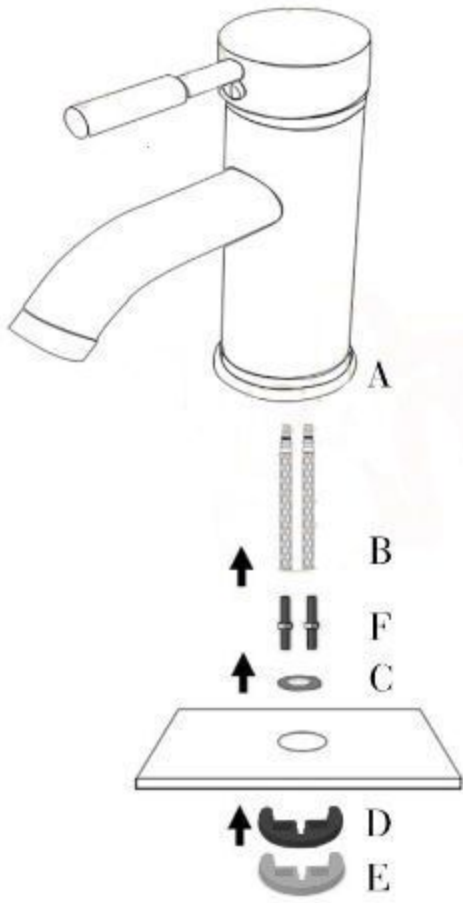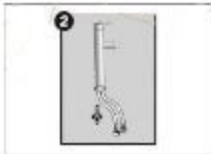
## Installation Steps

Step	Process	Effect chart
1. Drill a 1.34~1.46 inches hole in console table.		
2. Connecting hot and cold water pipes with the faucet.		
3. Put the pipes down through console table.		
4. Assemble the gasket bottom up.		
5. Screw the faucet tight.		



H1x36




H2x39



H3x24



H4x39





H5x6



H6x3



H7x6

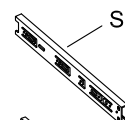

H8x6


Ø4x20mm




H9x18




H10x39

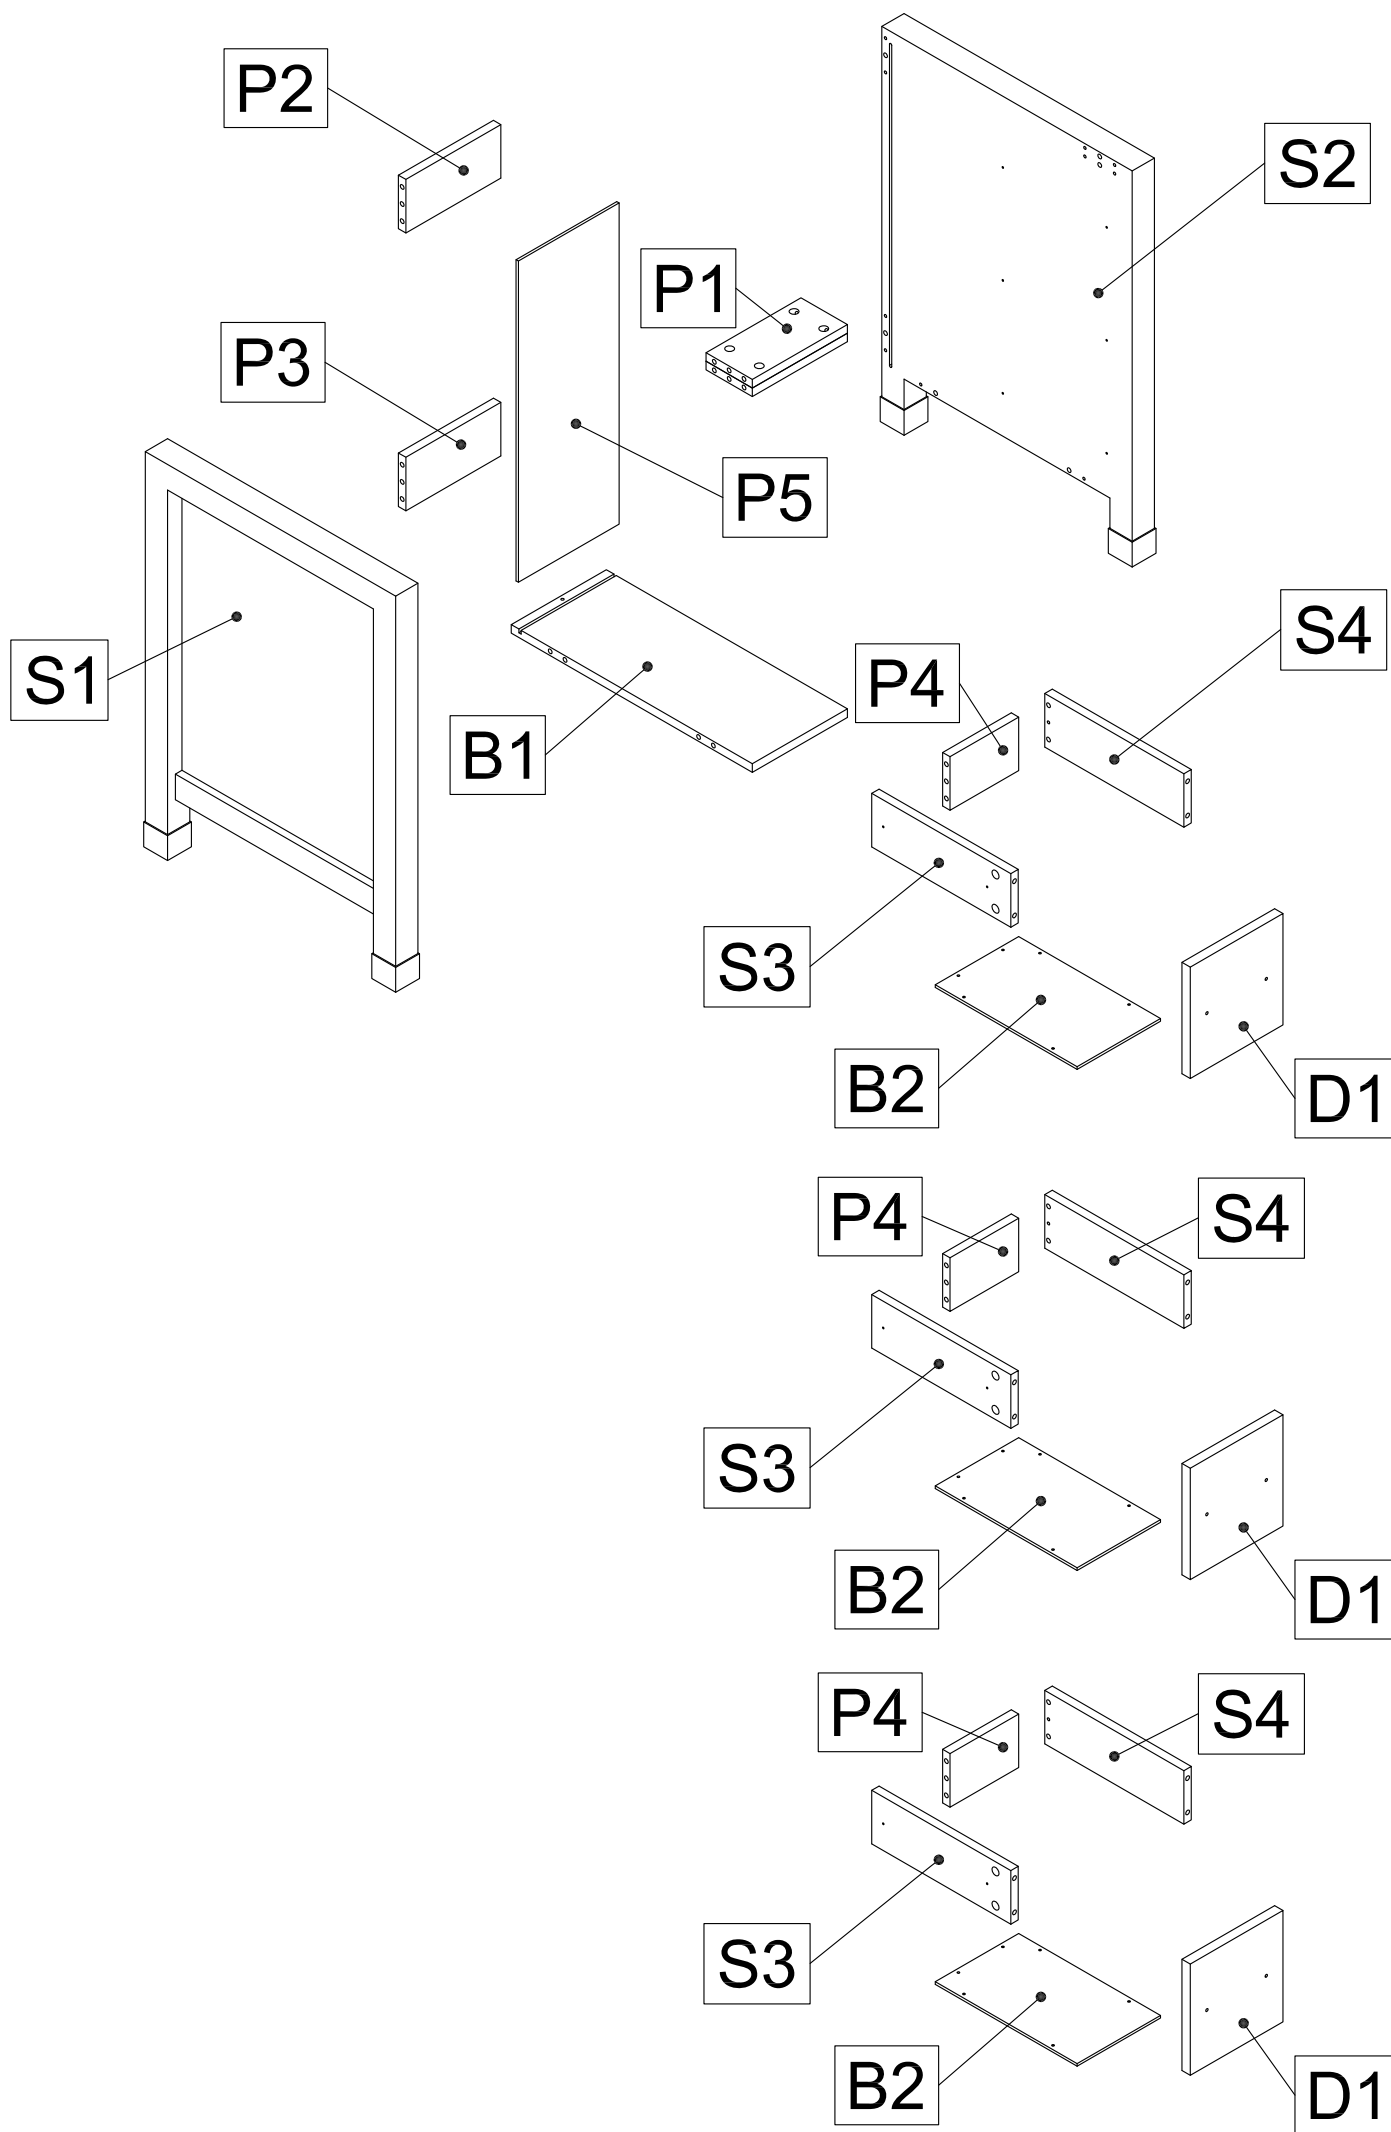


1

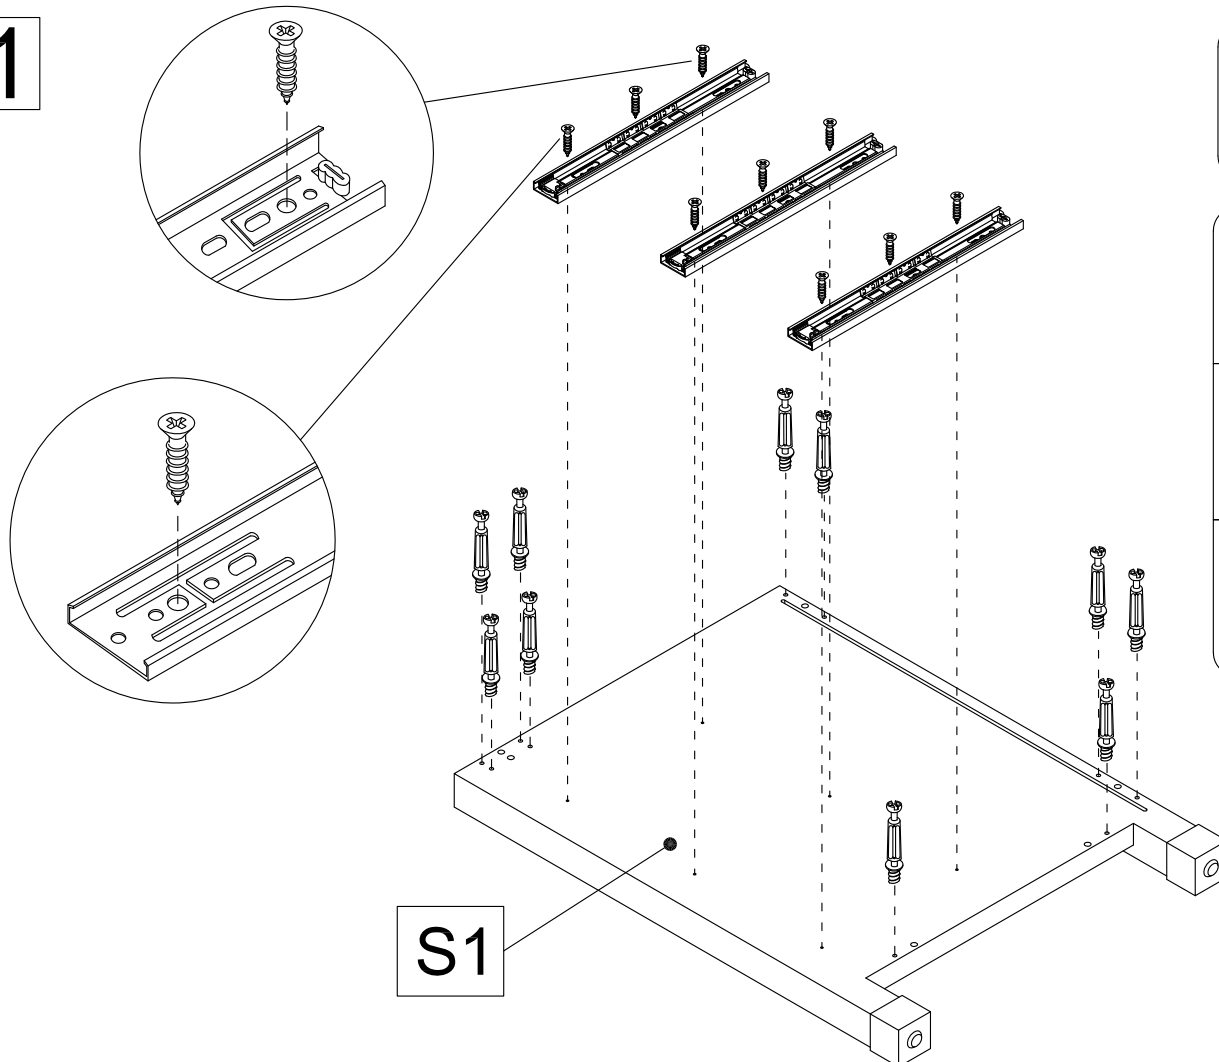


2

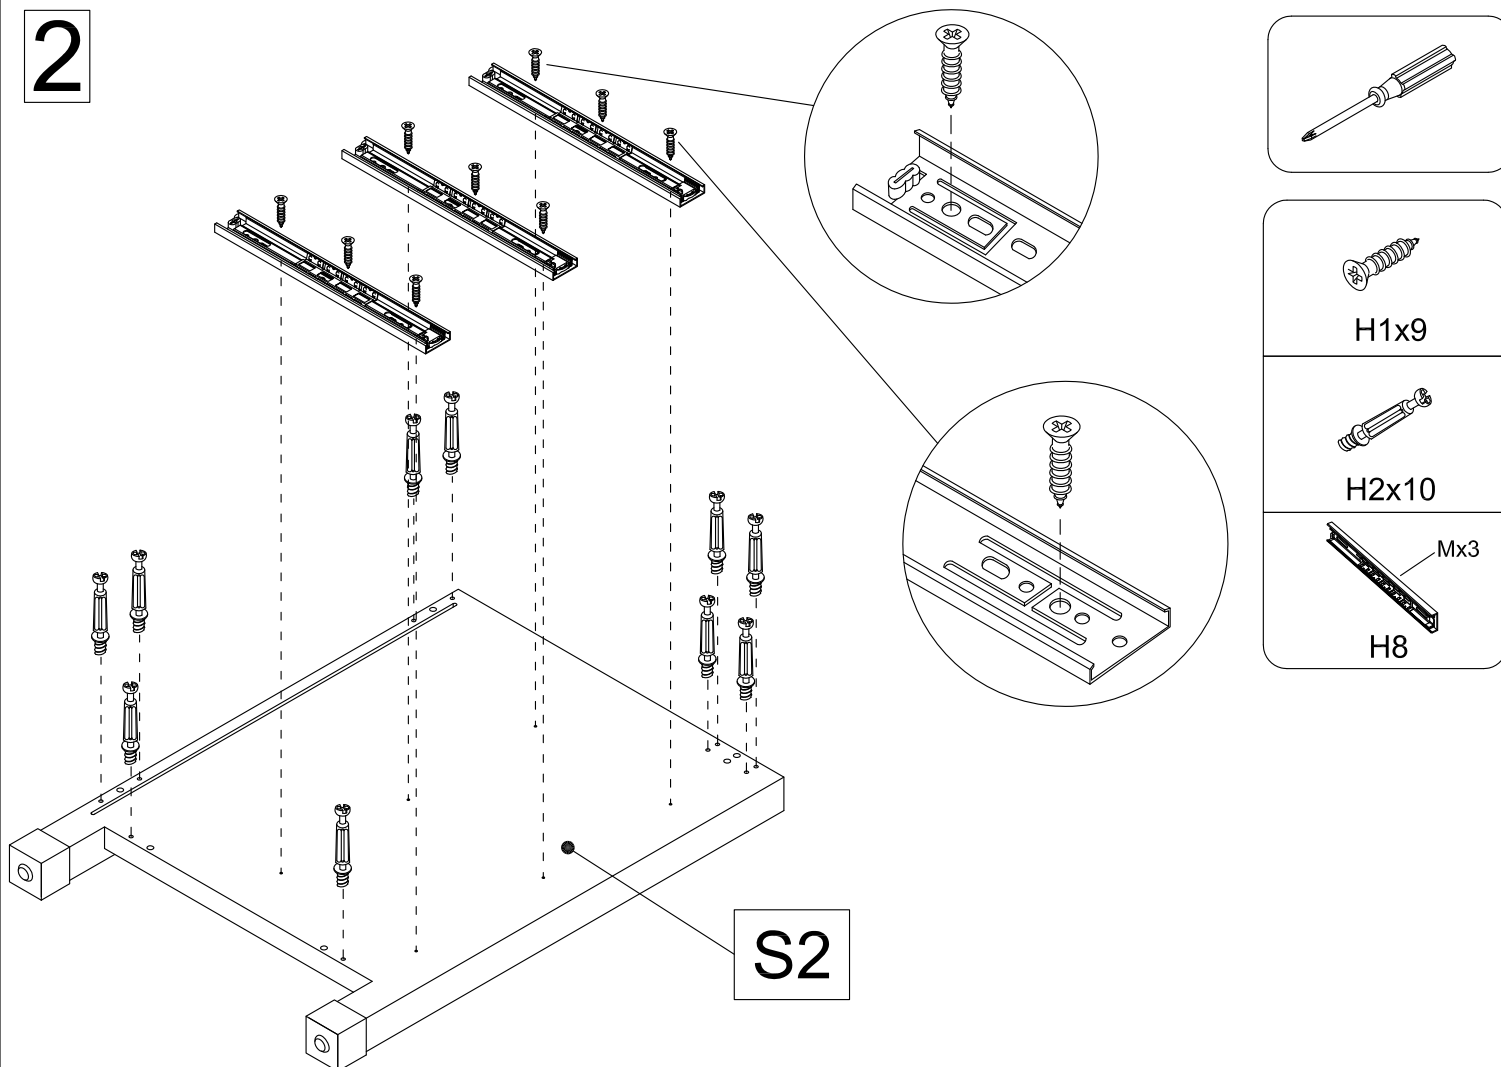


3

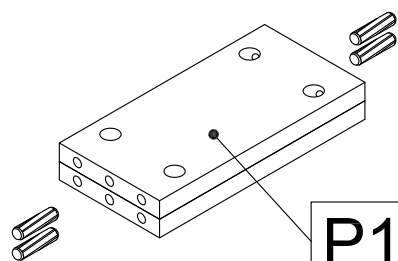


P1

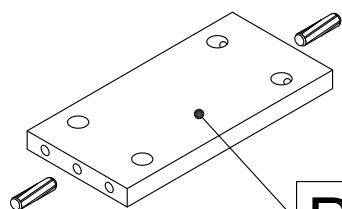

P2

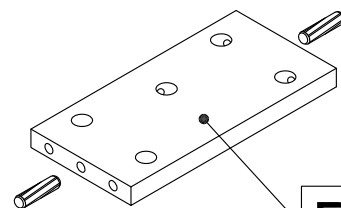


P3




H3x8


4

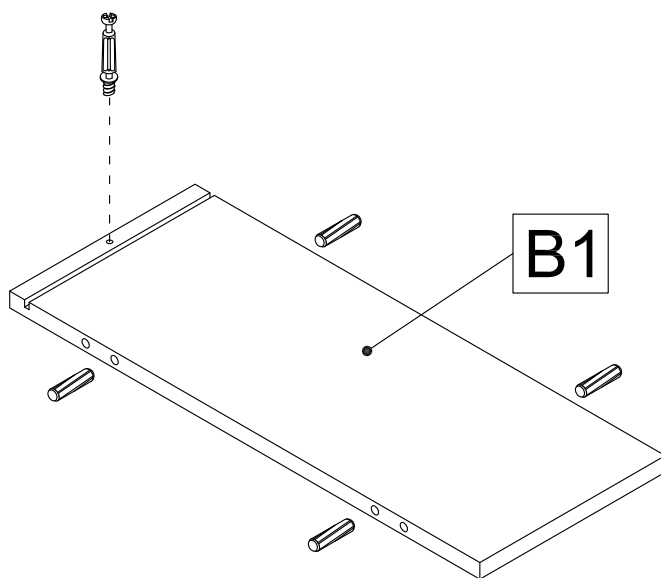

B1




H2x1




H3x4

5

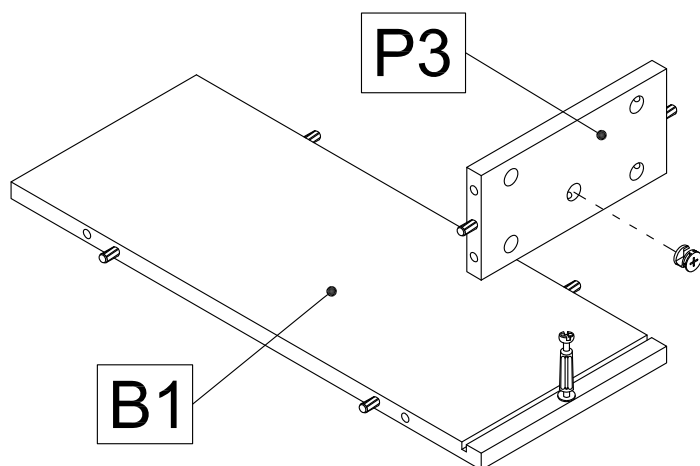



P3

B1





H4x1

6

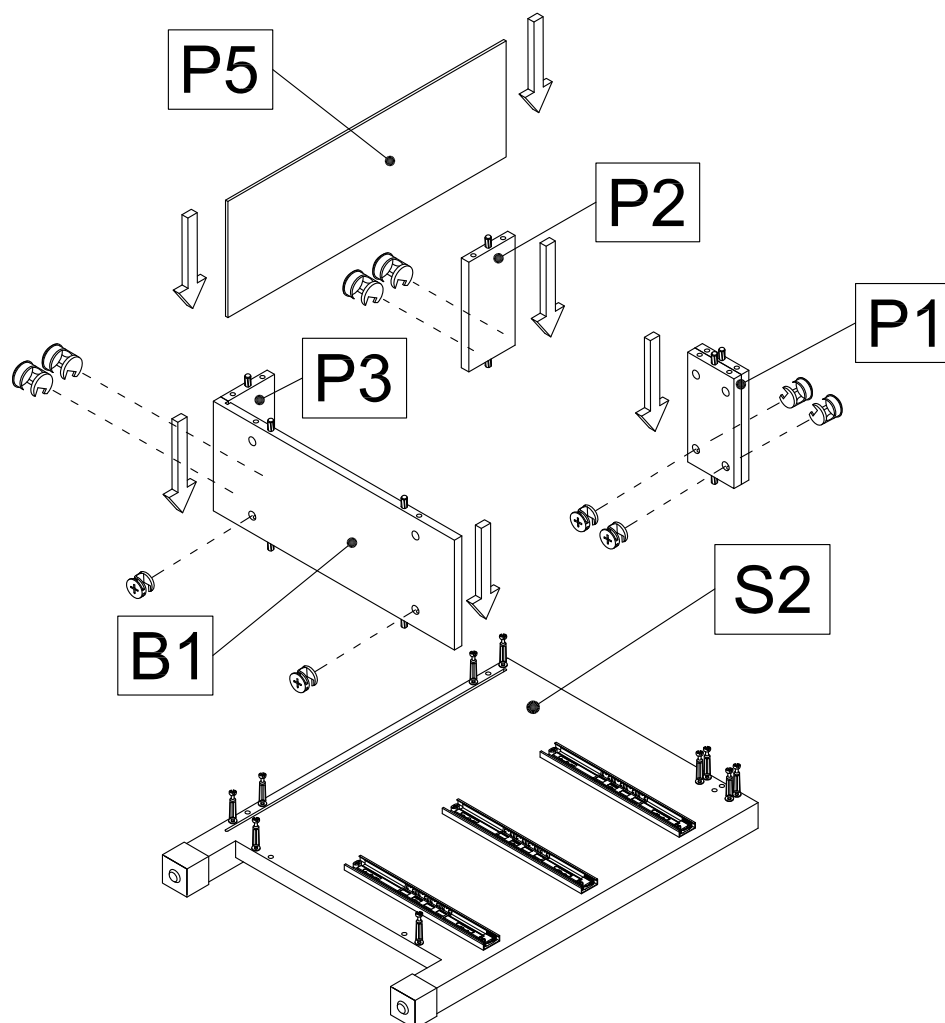

H4x10


7

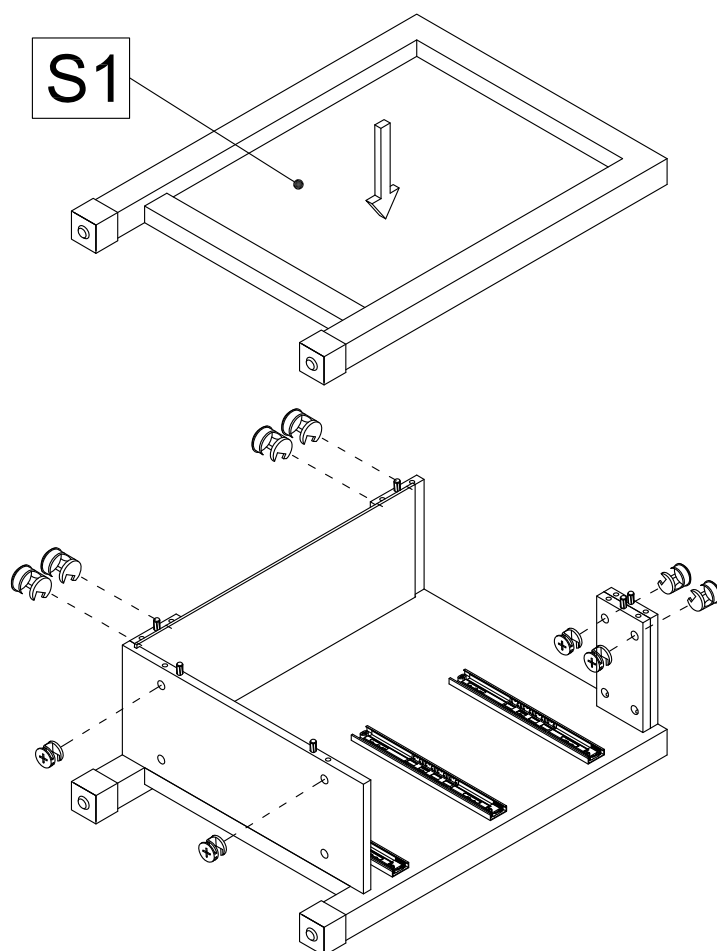

H4x10


8

P4x3

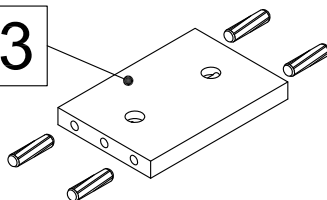


H3x12


9

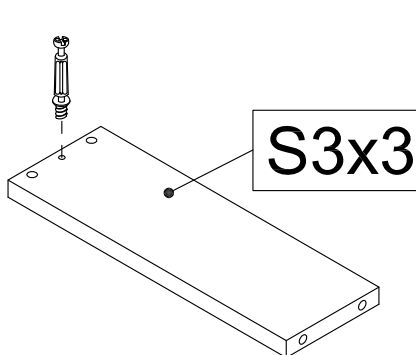

S3x3

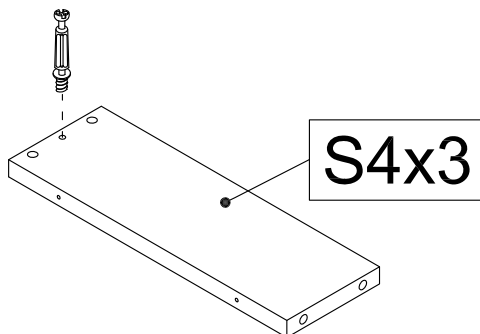


S4x3





H2x6


10

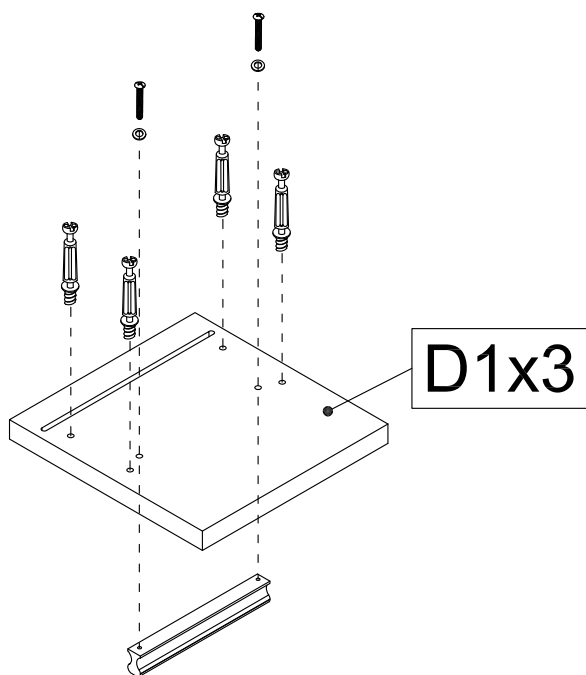

D1x3



H2x12



H5x6




H6x3



H7x6


11

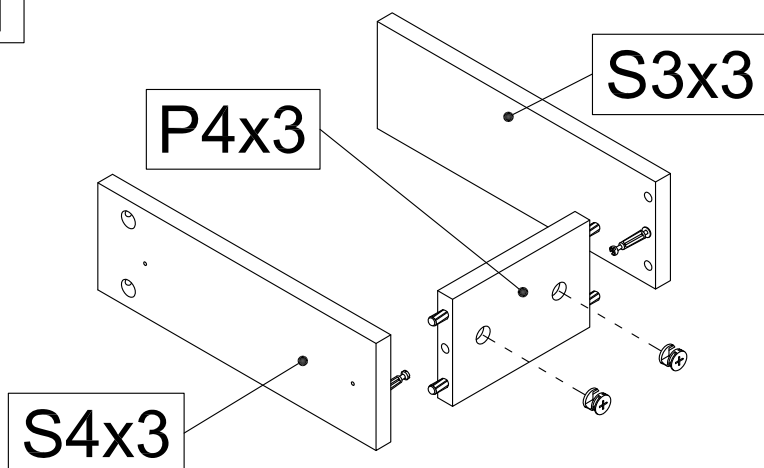

P4x3


S3x3

S4x3




H4x6

12

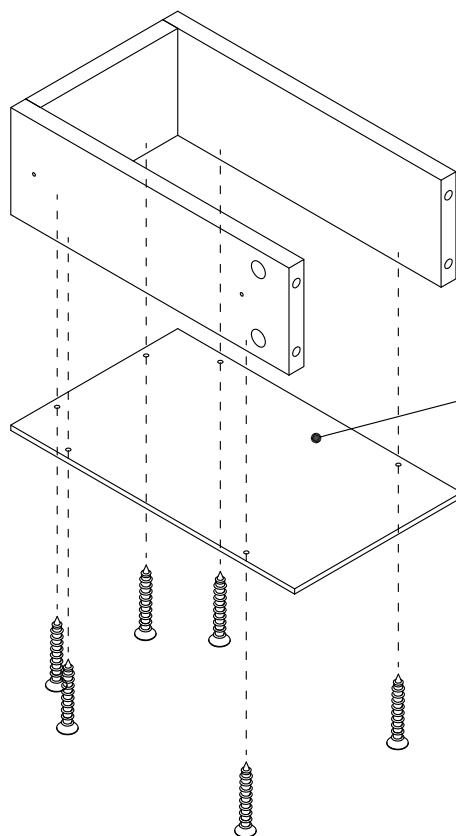

B2x3




Ø4x20mm




H9x18

13

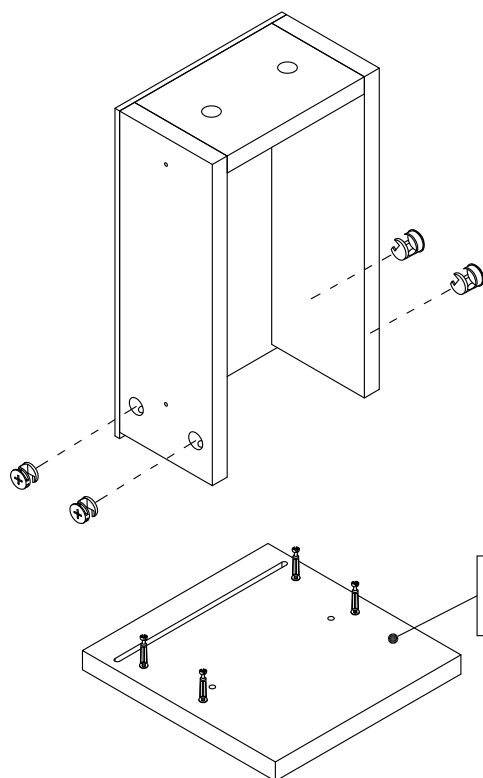



D1x3



H4x12





14

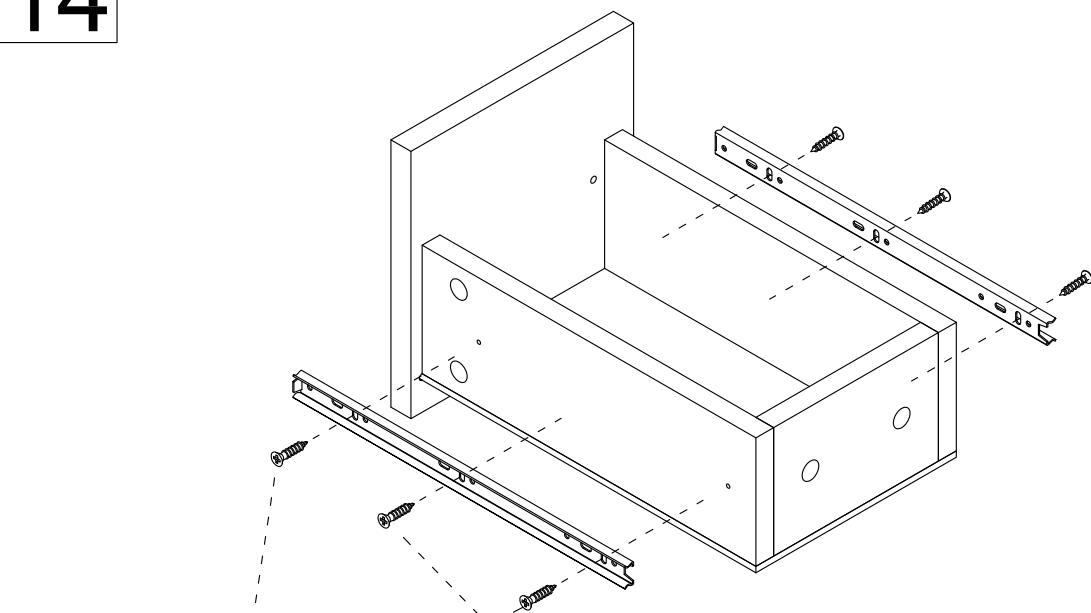



H1x18

Sx6

H8

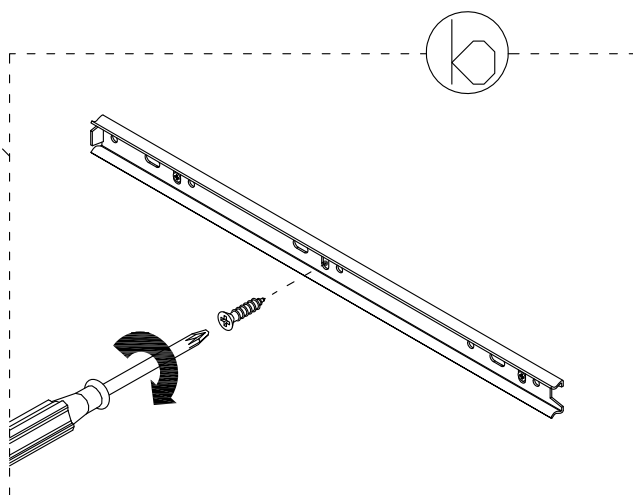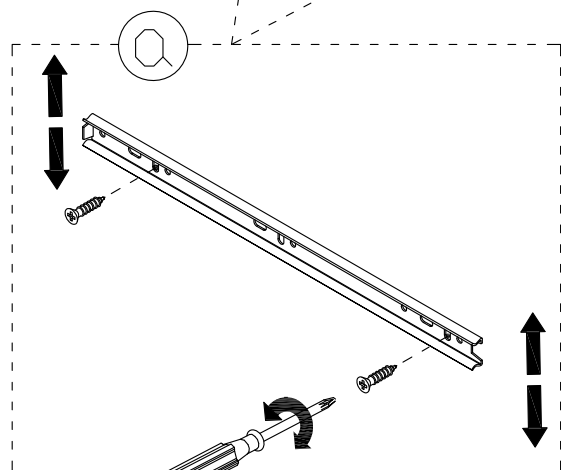


15

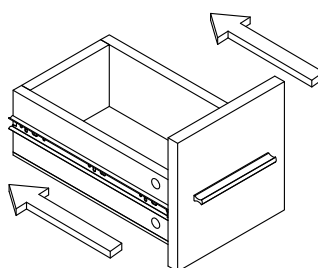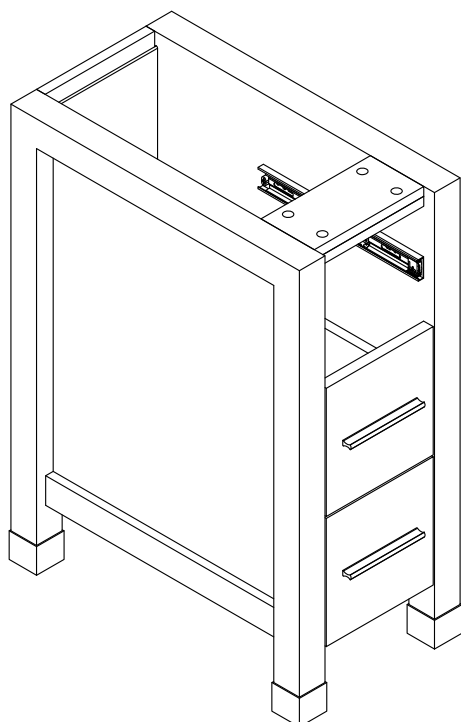



16



H10x26

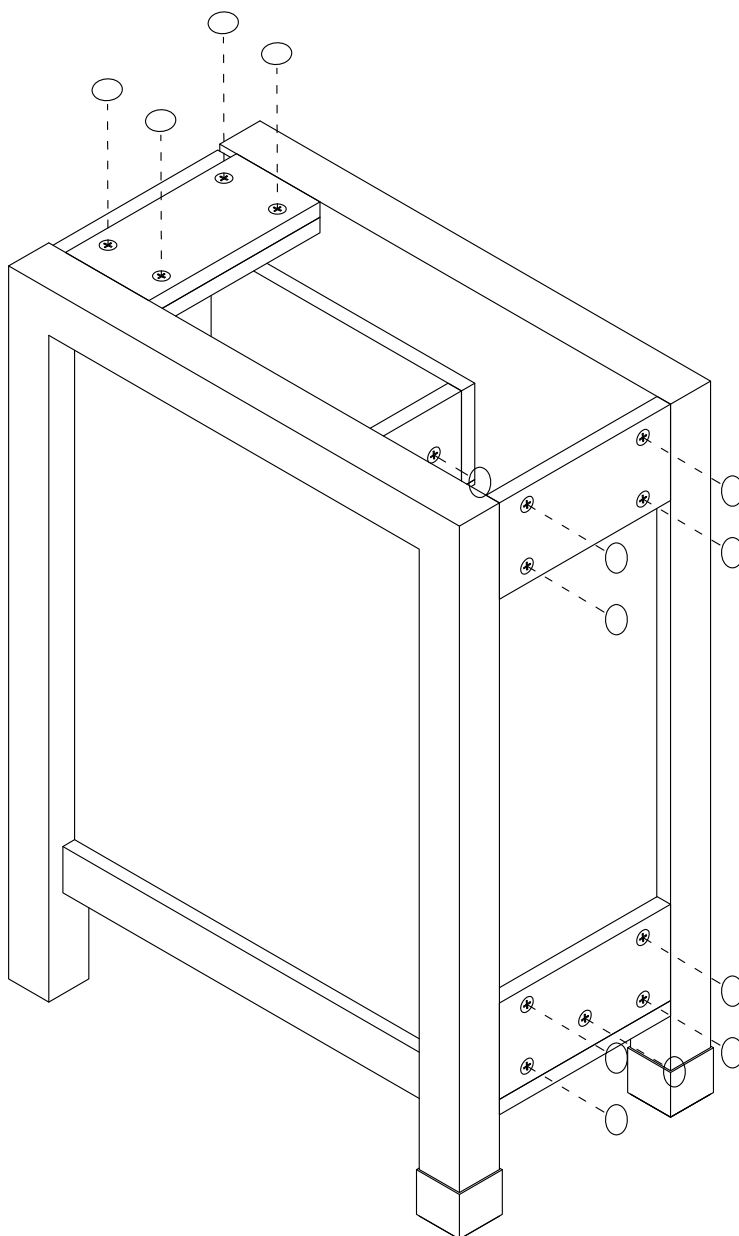


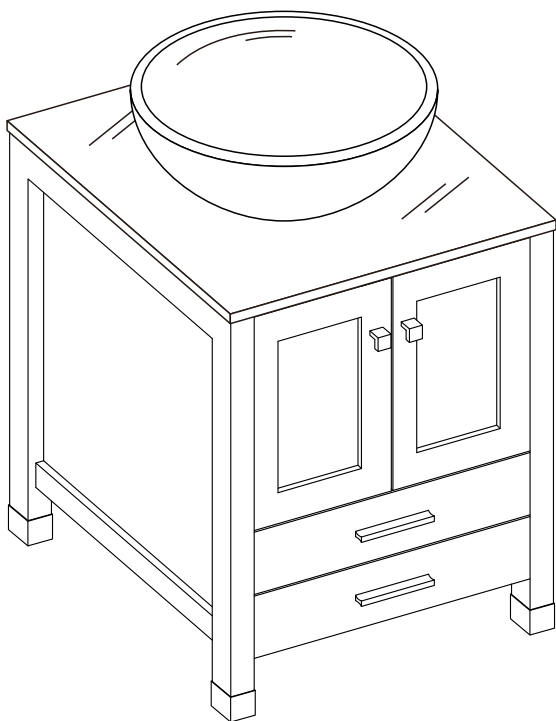


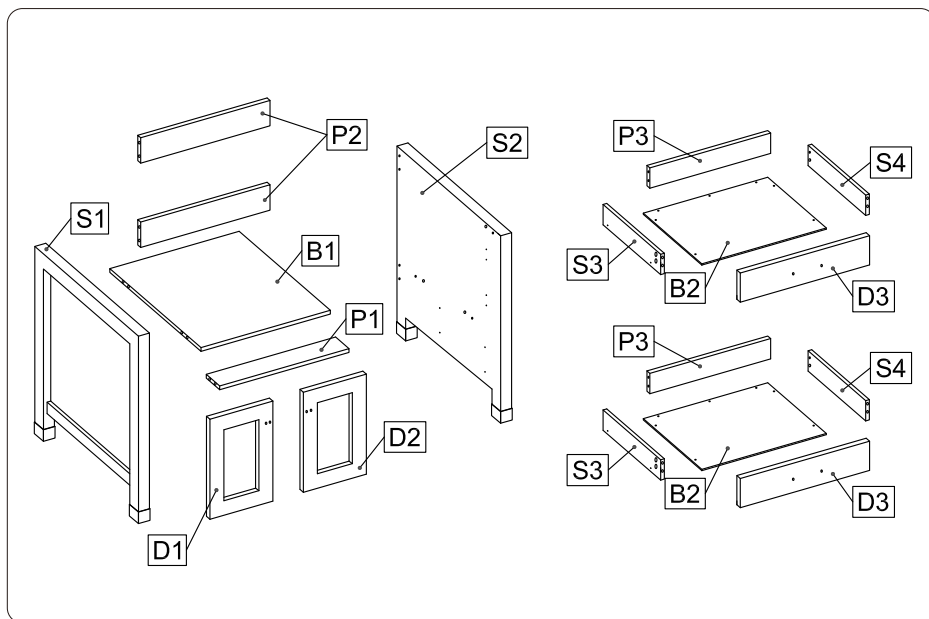


No.	Description	QTY
S1	Left Side Board	1
S2	Right Side Board	1
S3	Left Side Board For Drawer	2
S4	Right Side Board For Drawer	2
P1	Connect Board 1	1
P2	Connect Board 2	2
P3	Connect Board For Drawer	2
B1	Bottom Board 1	1
B2	Bottom Board For Drawer	2
D1	Door 1	1
D2	Door 2	1
D3	Door For Drawer	2

No.	Drawing	Description	QTY
H1		Cover	26
H2		Two-in-one Connector	26
H3		Wood Plug	10
H4		Screws St4x14	48
H5		Handle1	2
H6		Overlay-partition Hinges	4
H7		Screws M4x22	8
H8		back-up plate	8
H9		Handle2	2
H10		Slider	4
H11		Screws St4x20	14


# Step1

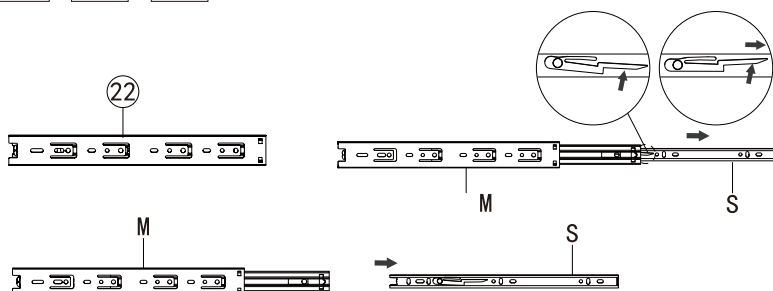





Keep pressing here, then pull out to devide the slide.

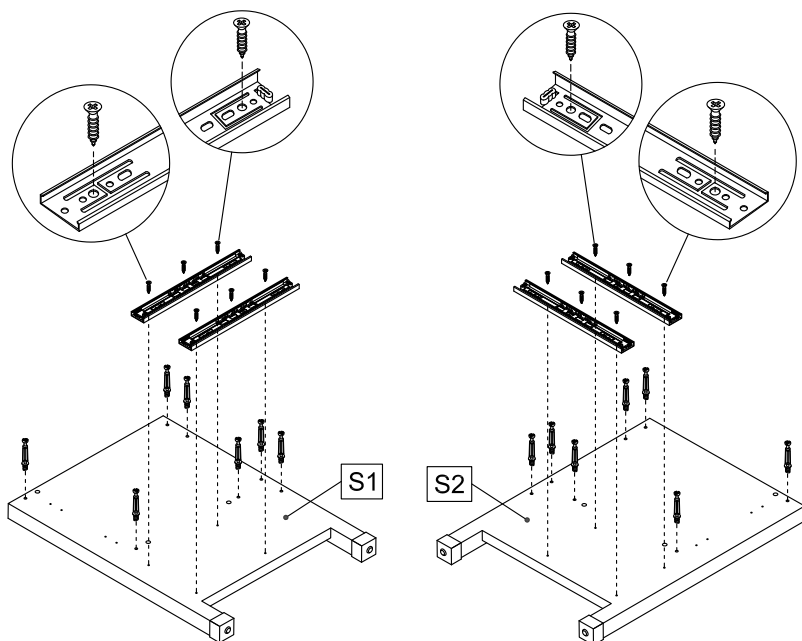

## Step2

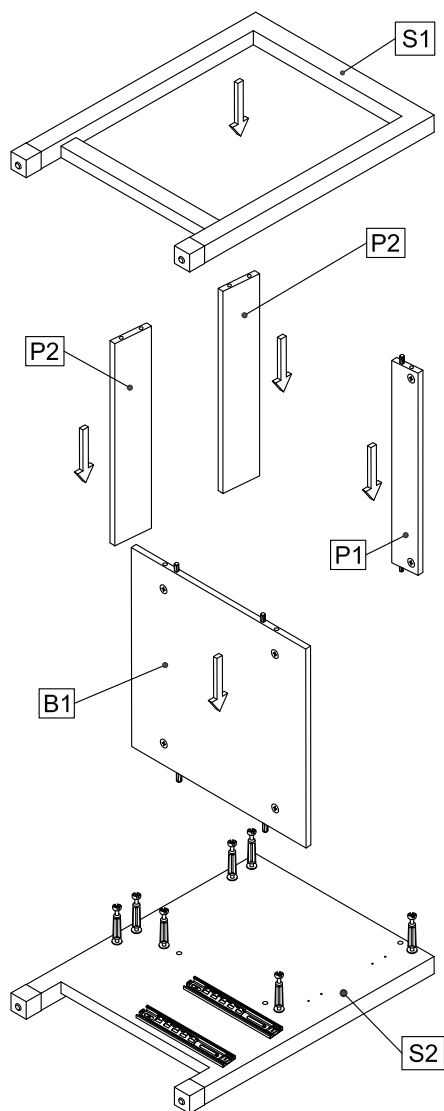


## Step3

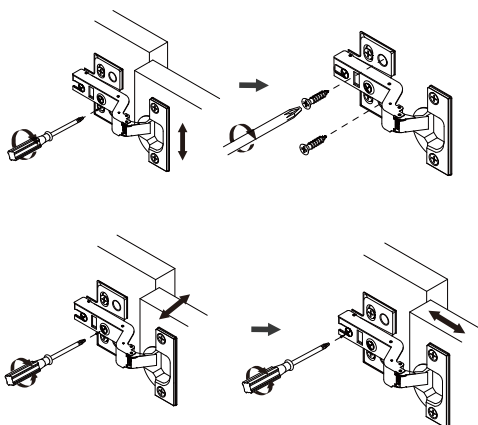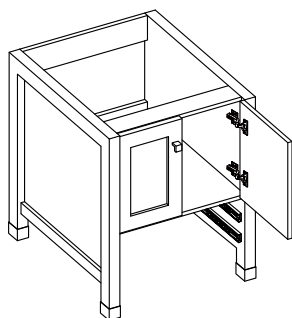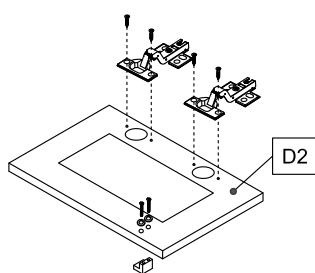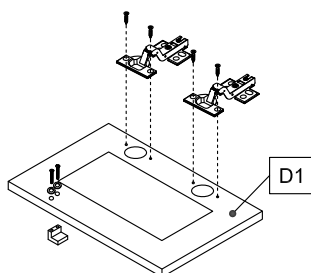


**Adjust the screws as shown on the sketch map to ensure all the door gaps are in the same level.**

# Step4

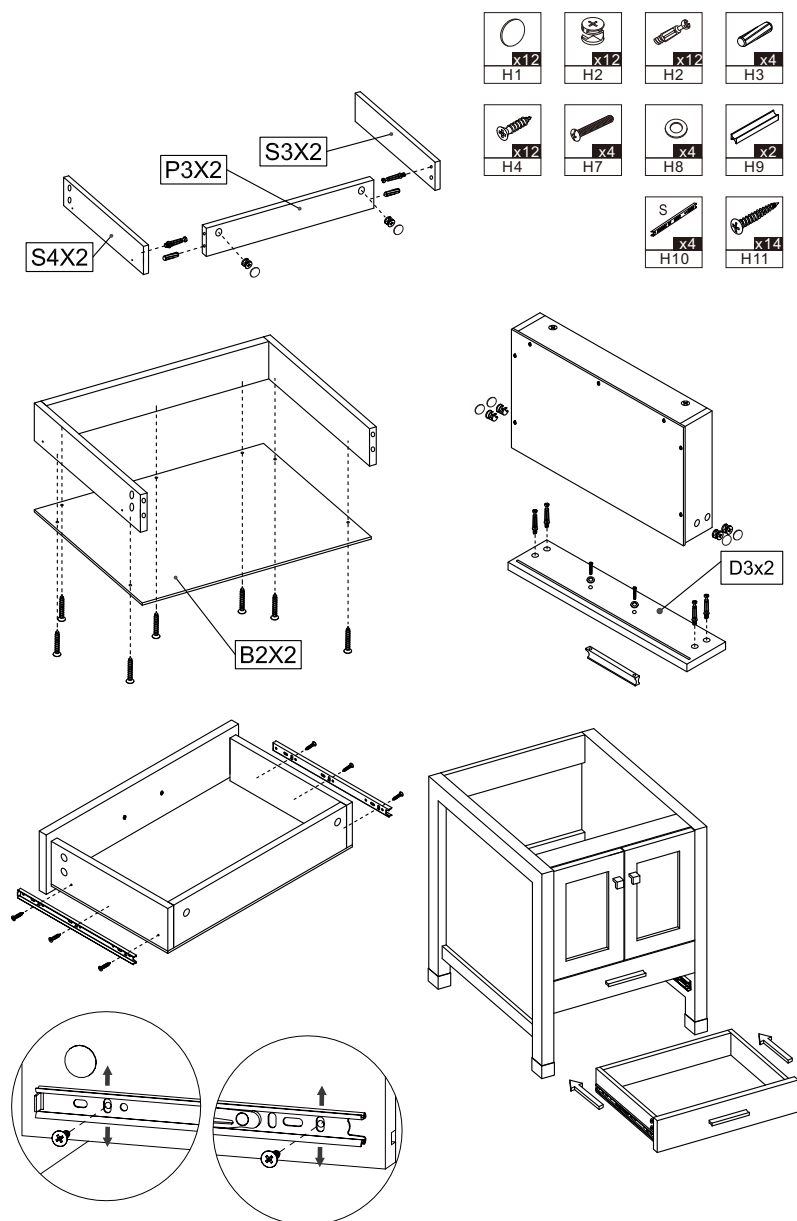



## Step5

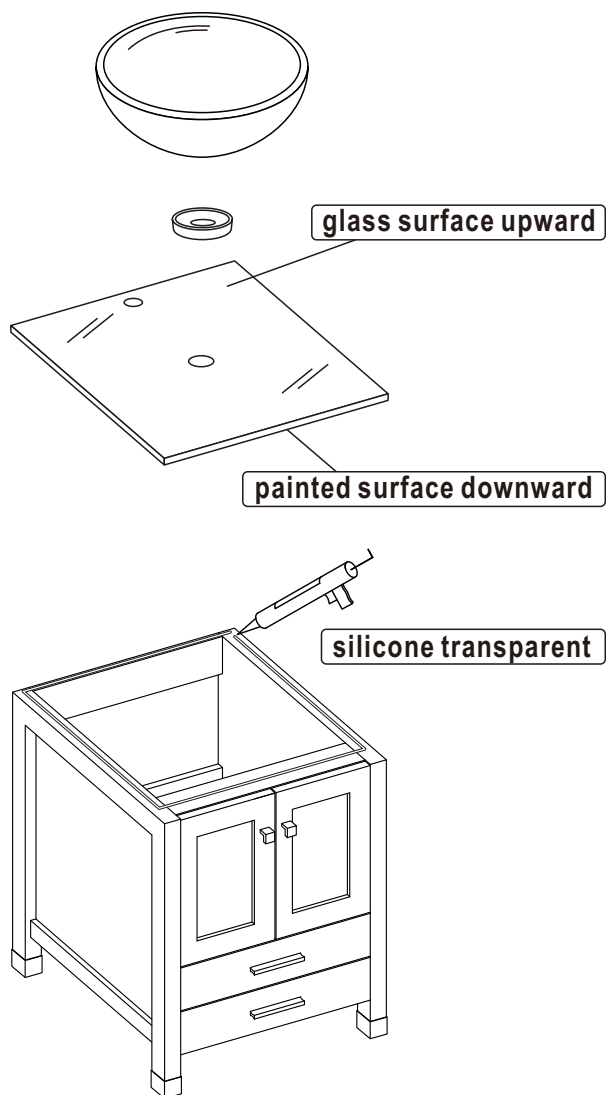

**Set aside for 24 hours.**