


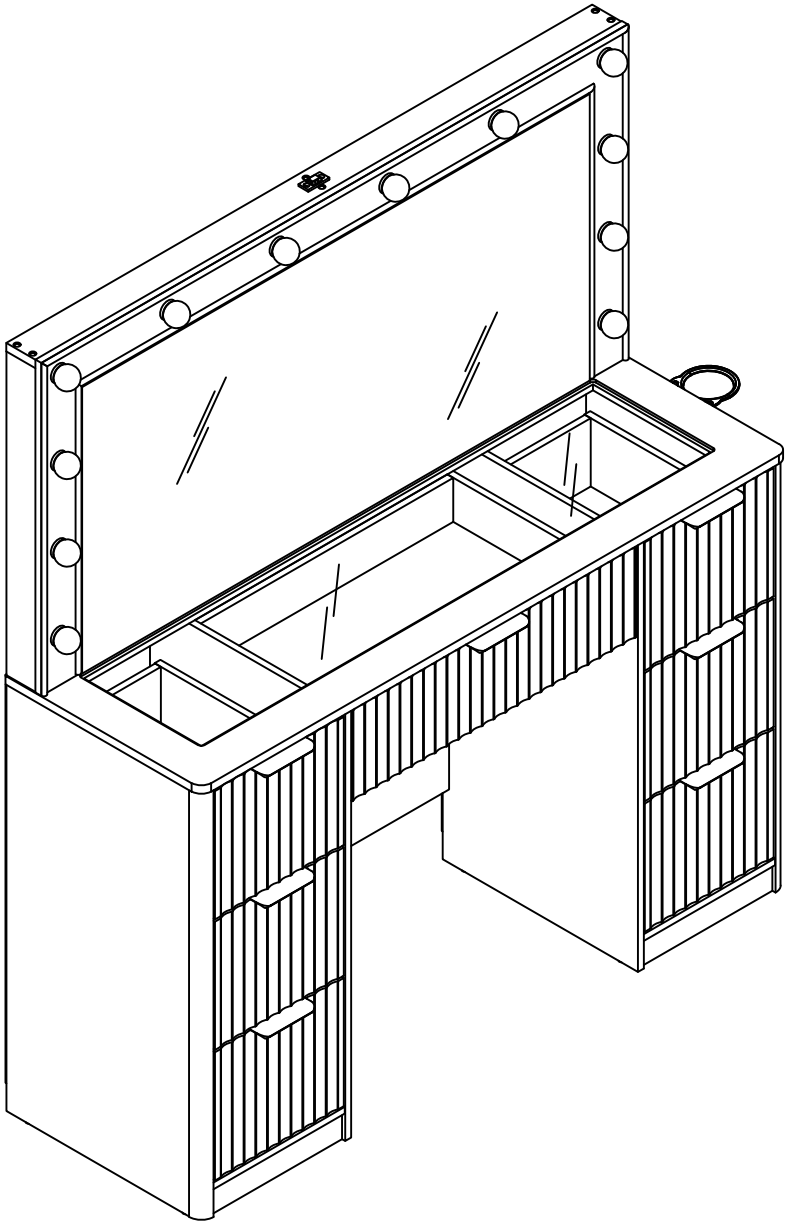


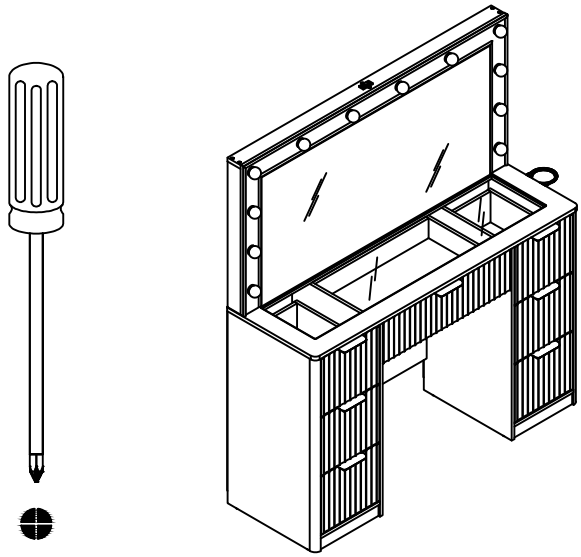

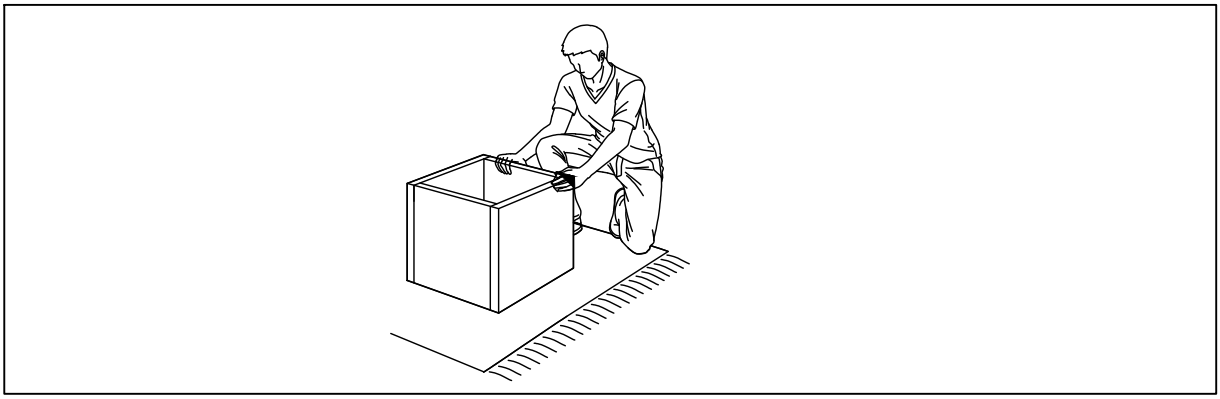


Assembly the furniture on empty carton, carpet, or rug to prevent scratches or damage.

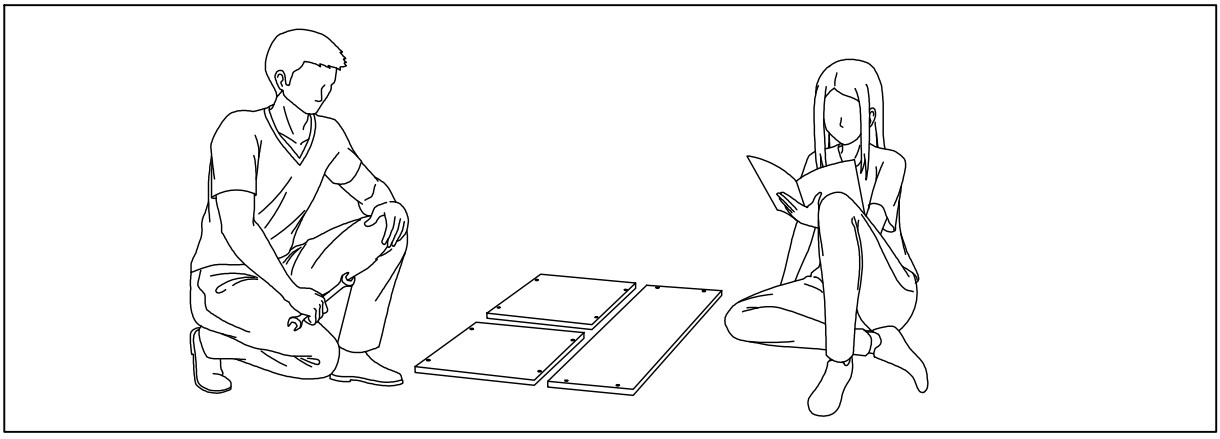


This furniture requires 2 people to assembly.
Make sure no parts are missing or damaged before assembly.


BOARD IDENTIFICATION

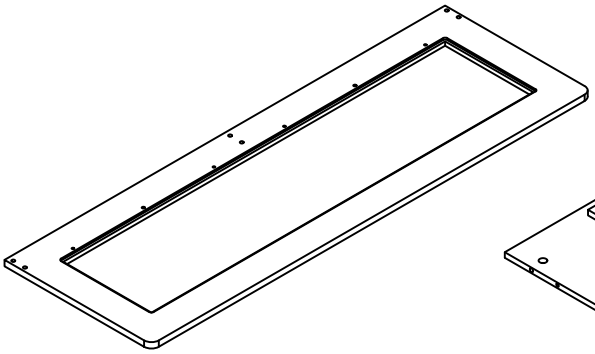


① (120X40X1.5cm) X1

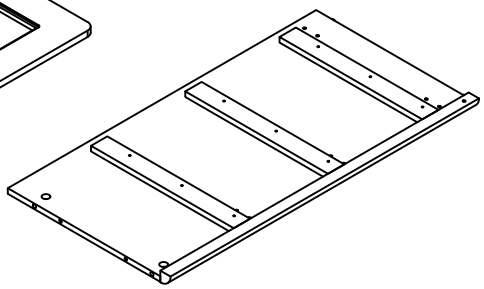


② (75.6X39.9X2.5cm) X1

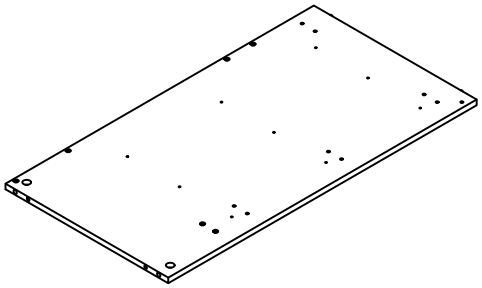


③ (75.6X39.9X1.2cm) X1

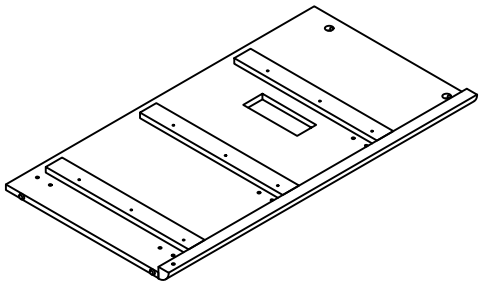


④ (75.6X39.9X2.5cm) X1

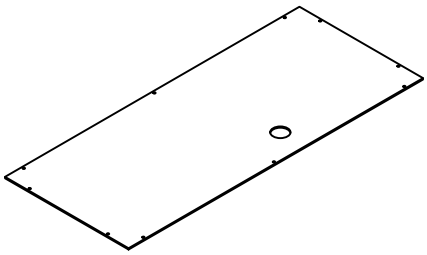


⑤ (72.2X303X0.3cm) X2




⑥ (28.1X6X1.2cm) X4




⑦ (28.1X9.2X1.2cm) X1




⑧ (26.9X4.8X1.2cm) X2




⑨ (28.1X8X1.2cm) X2



⑩ (28.1X9.2X1.2cm) X1

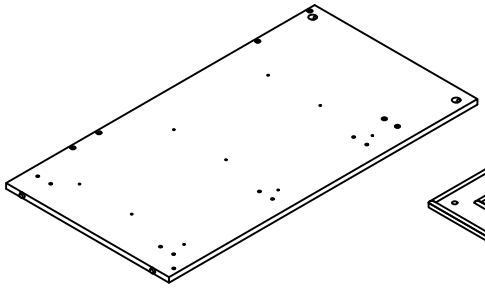


⑪ (75.6X39.9X1.2cm) X1

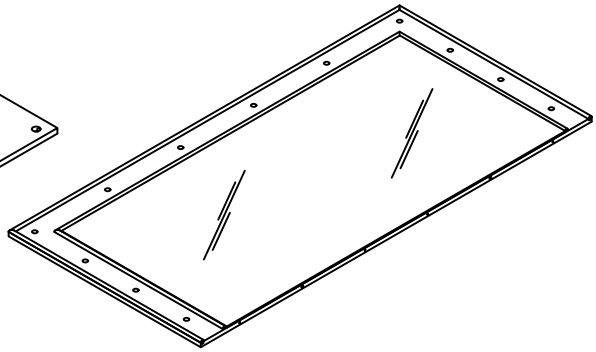


⑫ (58.9X119.8X1.7cm) X1


BOARD IDENTIFICATION

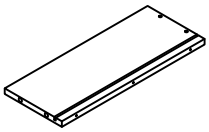


⑬ (35X14X1.2cm) X6

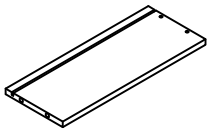


⑭ (35X14X1.2cm) X6

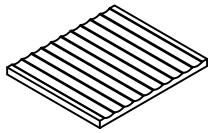


⑮ (22.7X26.3X1.5cm) X6




⑯ (22X14X1.2cm) X6

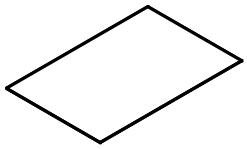


⑰ (23X34.7X0.3cm) X6

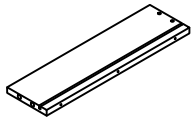


⑱ (35X9.7X1.2cm) X1

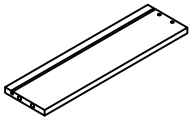


⑲ (35X9.7X1.2cm) X1

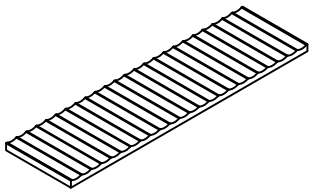


⑳ (15.9X58X1.5cm) X1

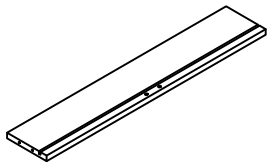


㉑ (53.7X9.7X1.2cm) X1

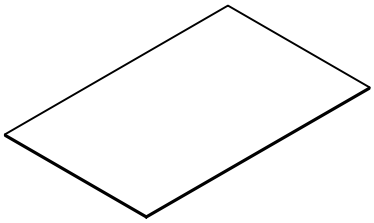

㉒ (54.7X34.7X0.3cm) X1




㉓ (33.7X6X1.2cm) X1

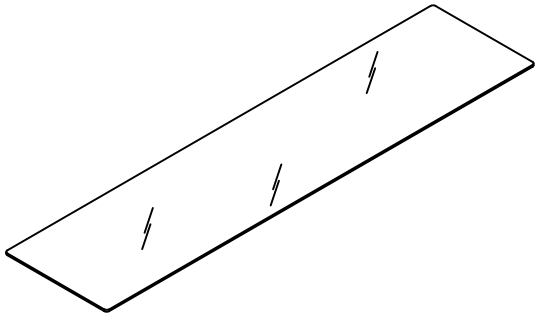


㉔ (105X25X0.4cm) X1


BOARD IDENTIFICATION

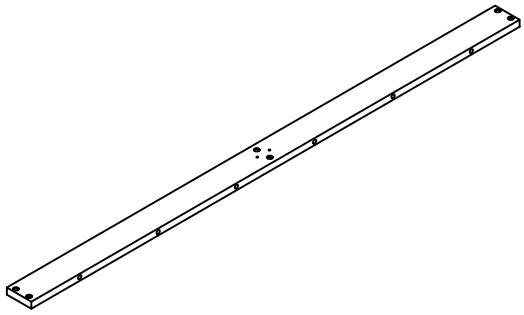


㉕ (119.7X6X1.5cm) X1

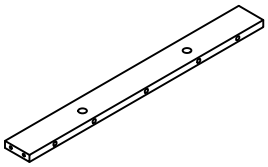


㉖ (57.3X6X1.5cm) X3

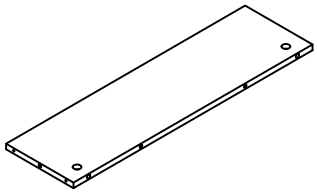

㉗ (58.6X16.5X1.2cm) X1

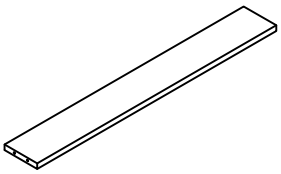


㉘ (58.6X8X1.2cm) X1

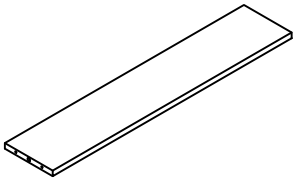


㉙ (58.6X11.7X1.2cm) X1

BOARD IDENTIFICATION

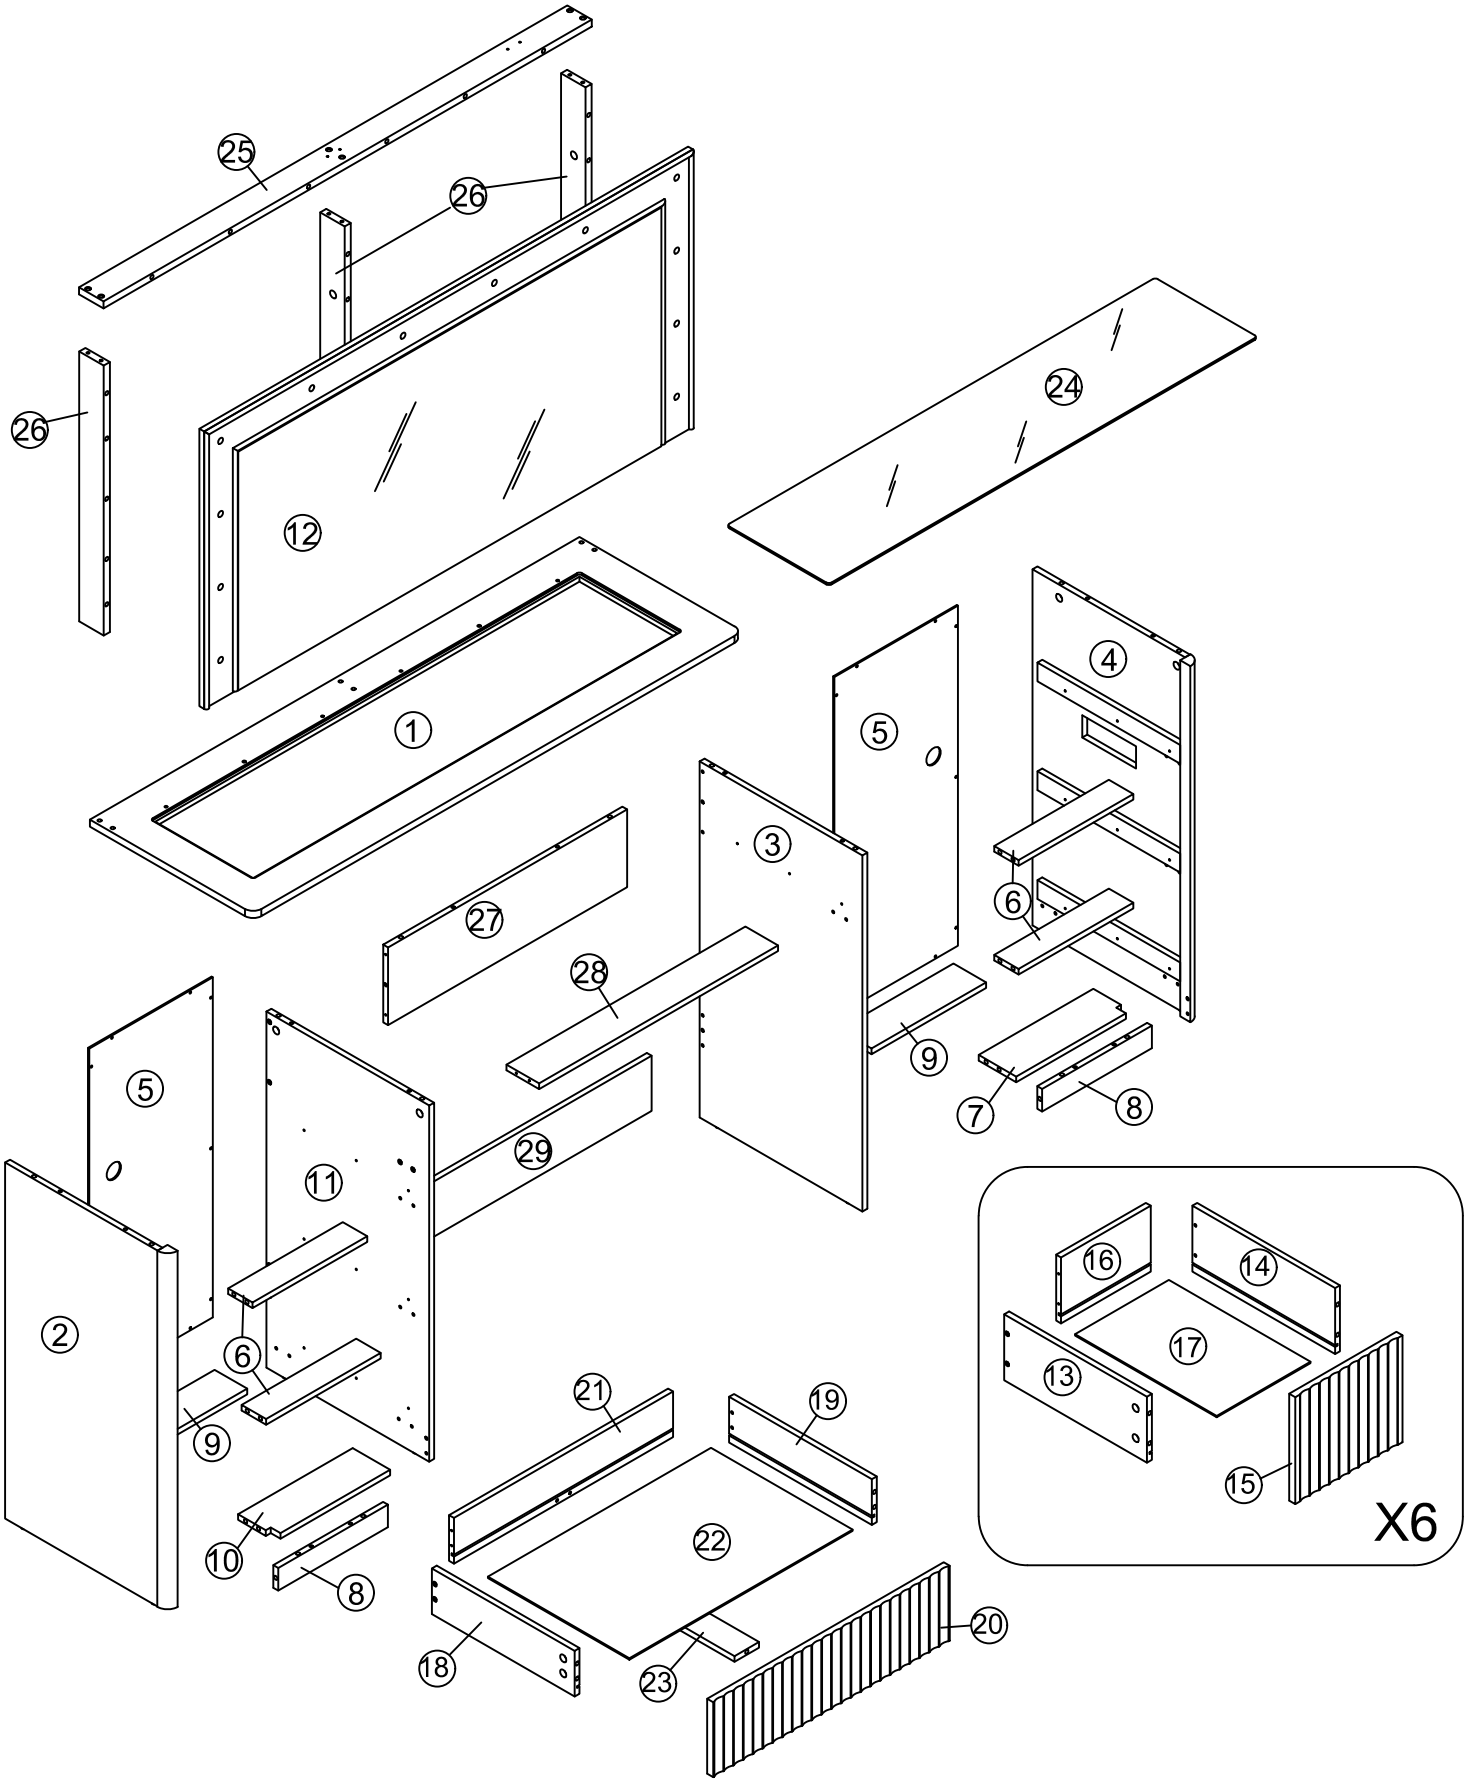


HARDWARE PART LIST


Ⓐ	X89+3
	
ϕ15*9.5	


Ⓑ	X89+3
	
ϕ6.5*35	


Ⓒ	X11+1
	
ϕ8*30	

Ⓓ	X20+2
	
ϕ6*30	

Ⓔ	X98+3
	
ϕ3.5*12	


Ⓕ	X2+1
	
ϕ3*12	

Ⓖ	X46+2
	
ϕ4*35	

Ⓗ	X20+2
	
ϕ3*14	


Ⓘ	X2+1
	
ϕ4*12	


Ⓙ	X12+1
	
ϕ6.3*50	


Ⓚ	X7
	
120*38*17	

Ⓛ	X14+1
	
ϕ21	


Ⓜ	X1
	
109*99*38.5	

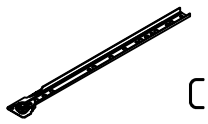Ⓝ	X7
 CL	
L=350	

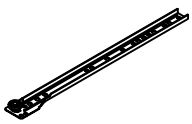
Ⓝ	X7
 CR	
L=350	

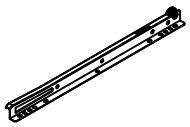
Ⓝ	X7
 DL	
L=350	

HARDWARE PART LIST

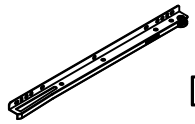Ⓝ	X7
 DR	
L=350	

Ⓞ	X1
	
145*55*45	

Ⓟ	X1
	
70*30*5	

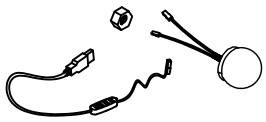
Ⓠ	X12
	
ø50mm	

Ⓡ	X1set
	


Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it.


1

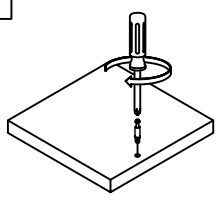

2

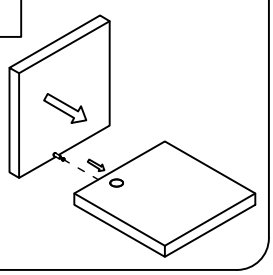


3

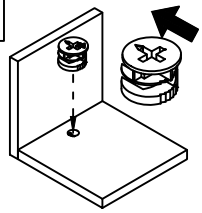



The opening must point toward the edge of the board


4

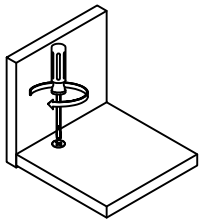



STEP 1

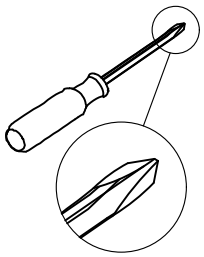


Ⓔ	X18
	
ø3.5*12	

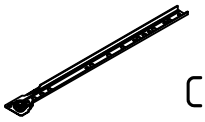
Ⓝ	X3
 CL	
L=350	

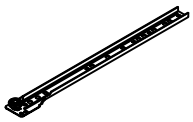
Ⓝ	X3
 CR	
L=350	

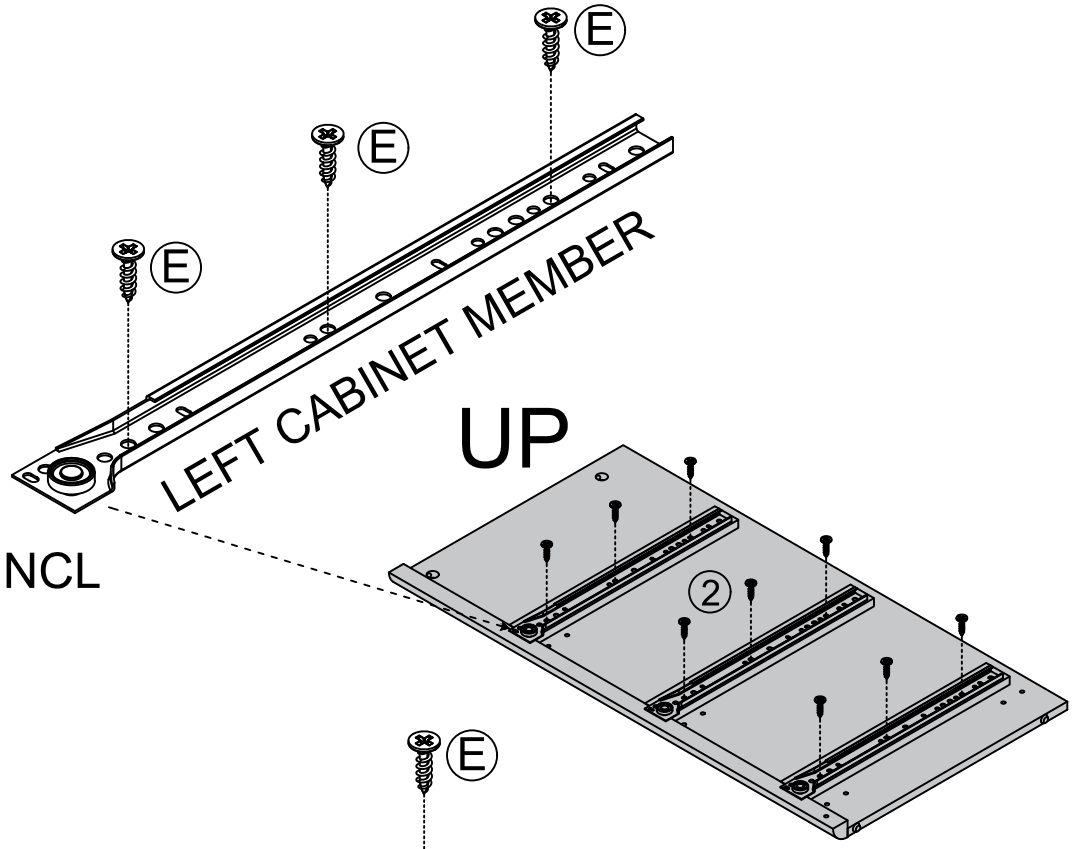


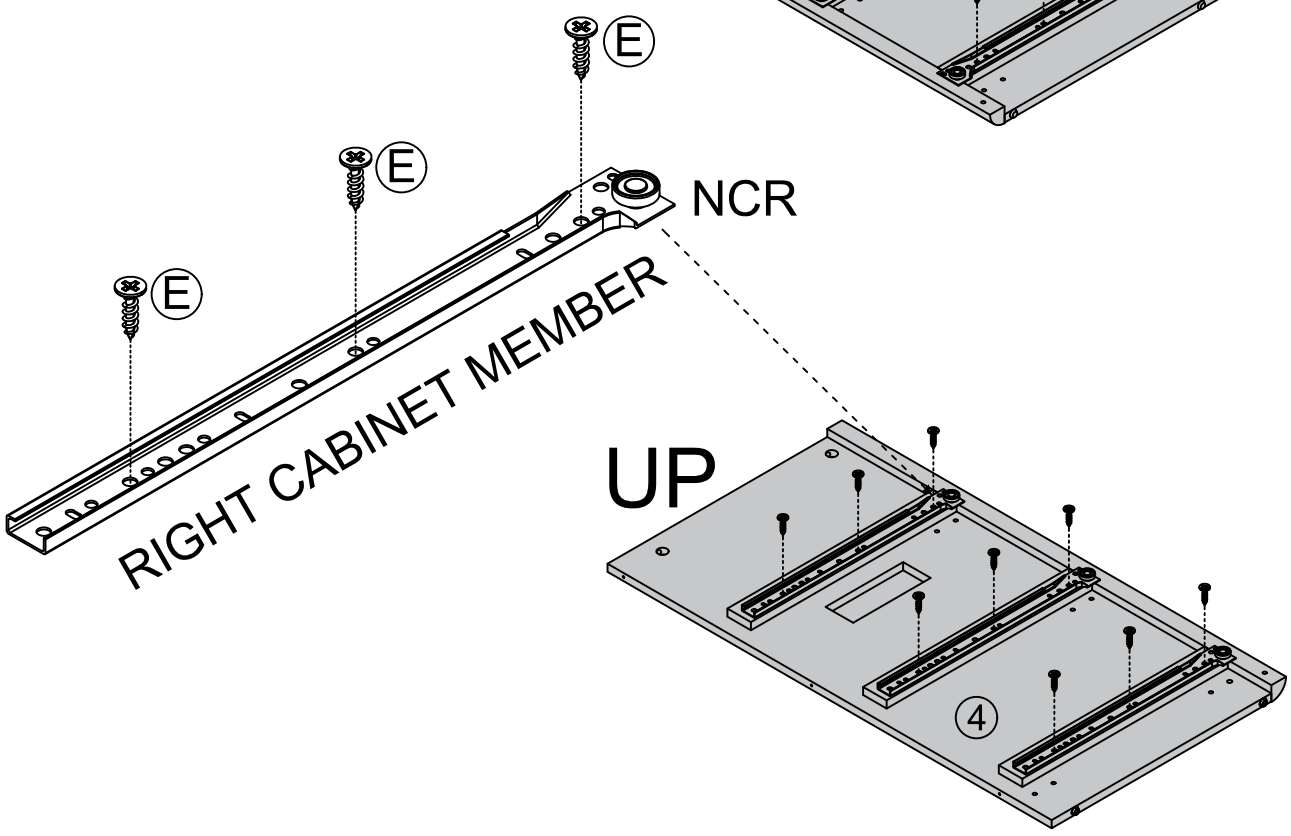



STEP 2

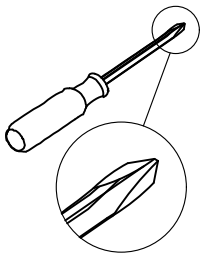


Ⓔ	X12
	
ϕ3.5*12	

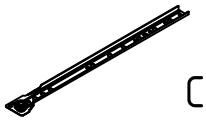
Ⓝ	X1
 CL	
L=350	

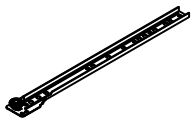
Ⓝ	X3
 CR	
L=350	

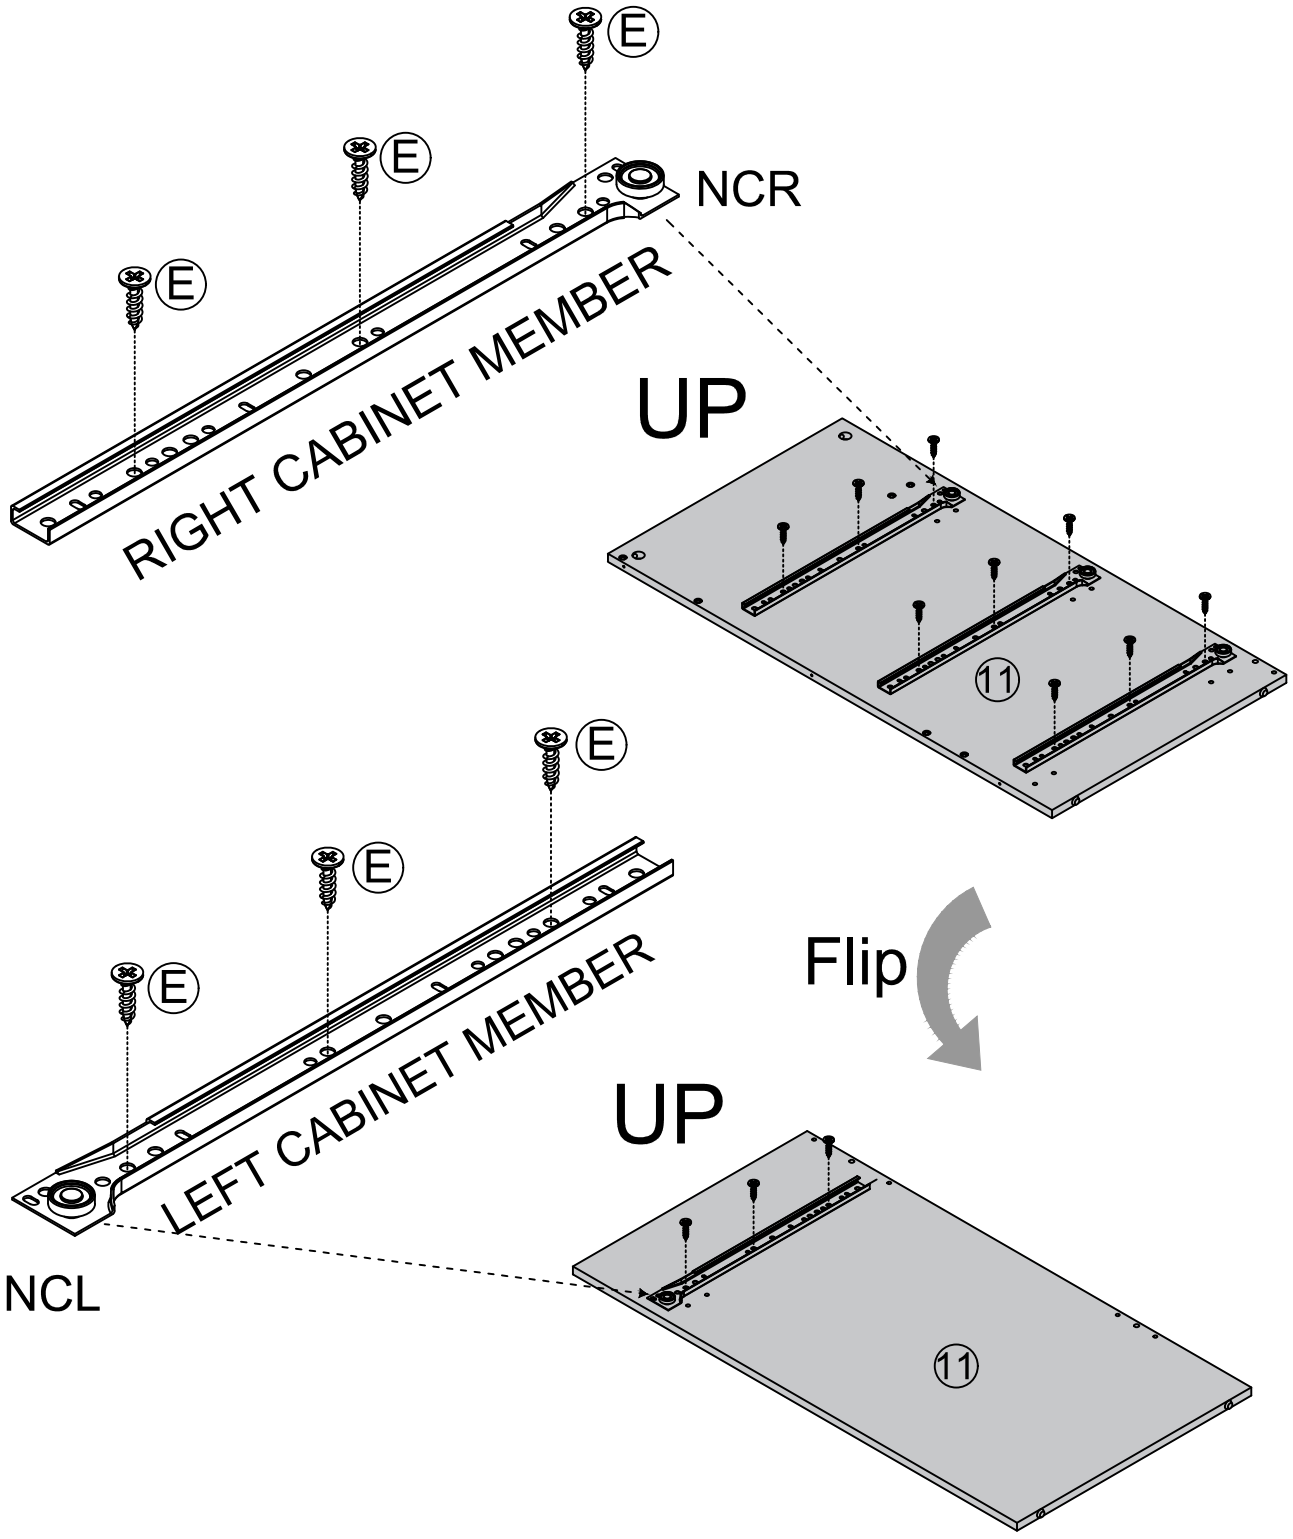



STEP 3

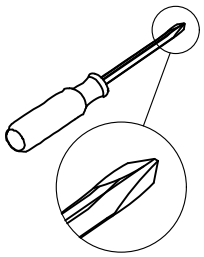


Ⓔ	X12
	
ϕ3.5*12	

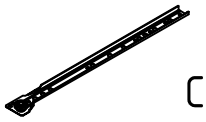
Ⓝ	X3
 CL	
L=350	

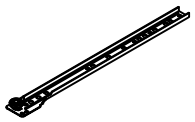
Ⓝ	X1
 CR	
L=350	

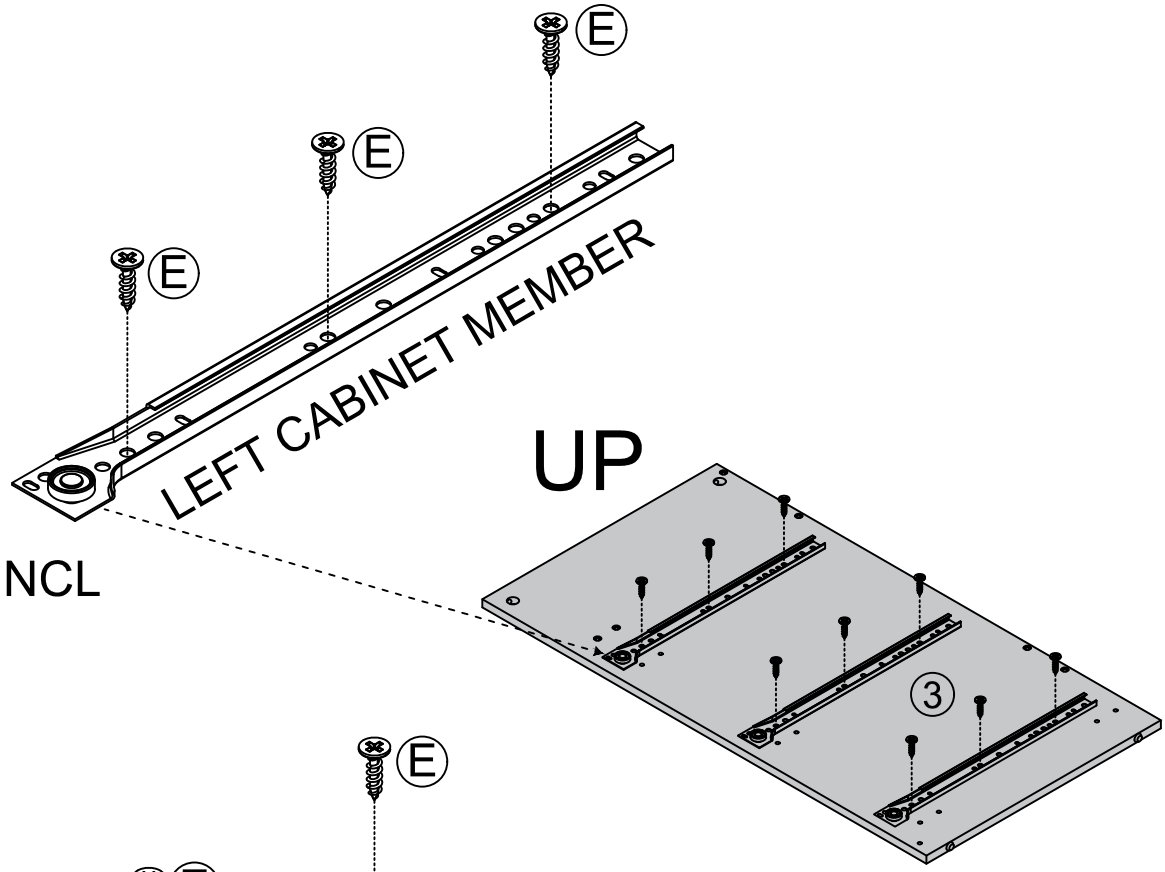


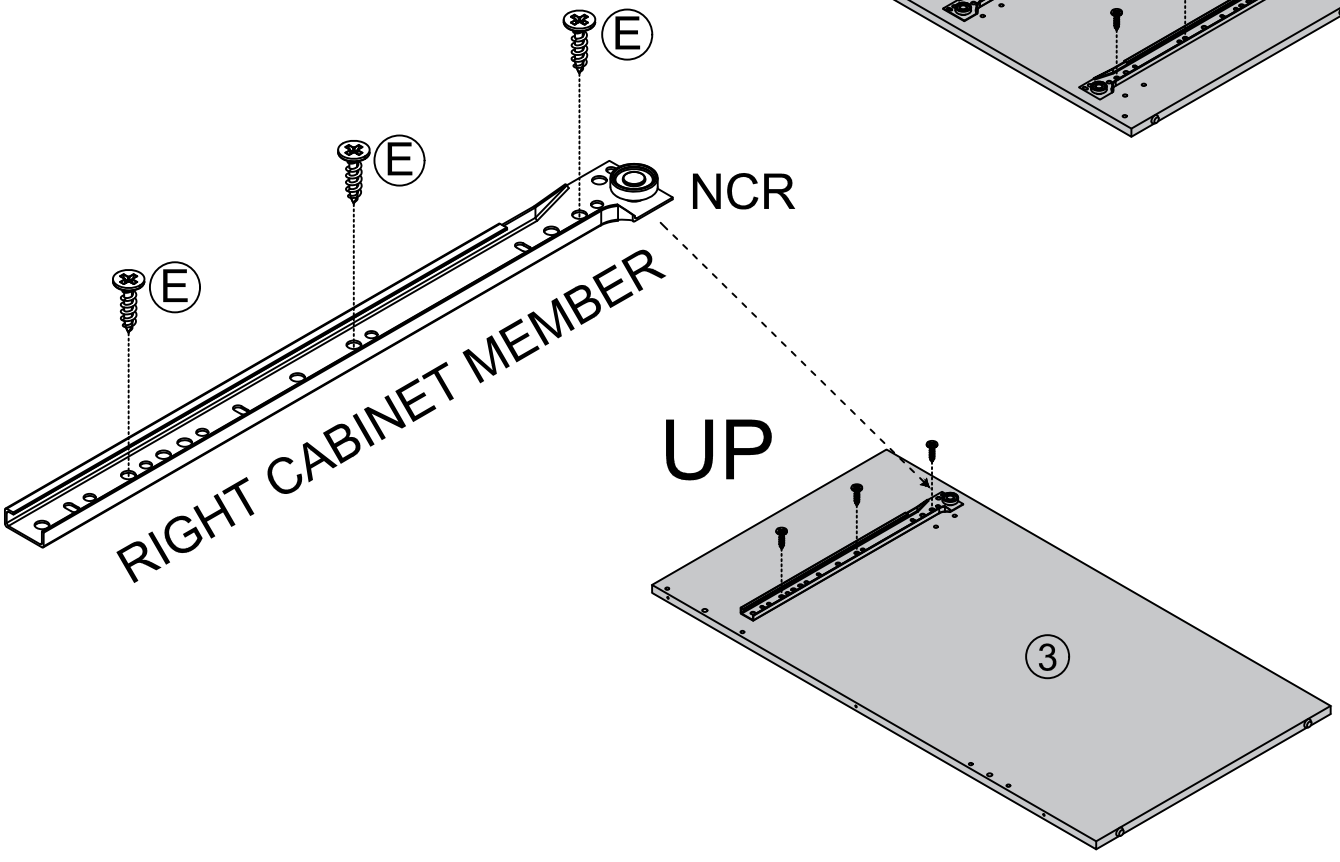


STEP 4

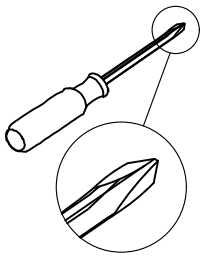



Ⓑ	X18
	
ϕ6.5*35	

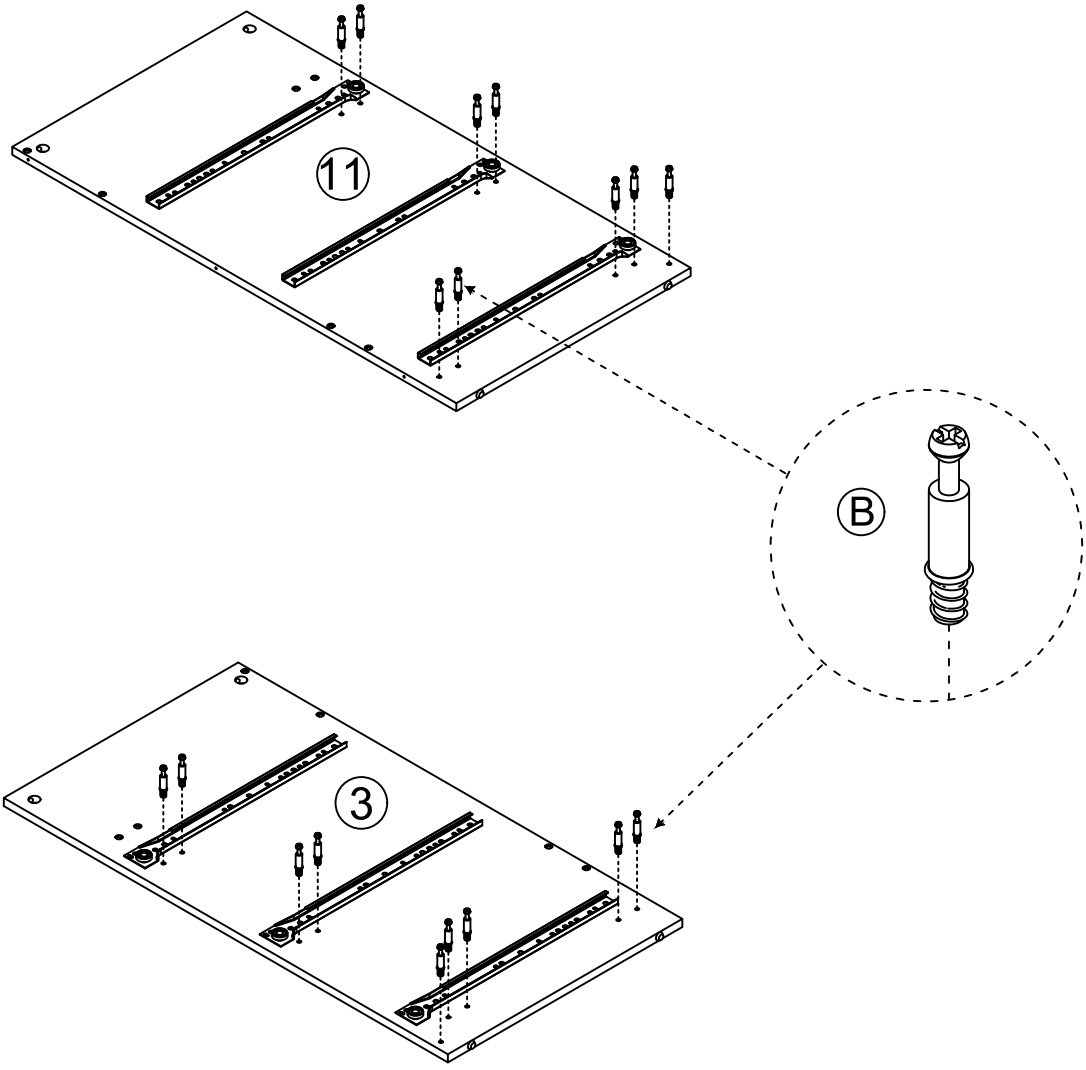


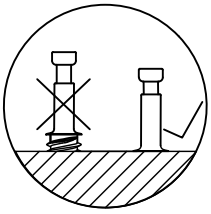


STEP 5

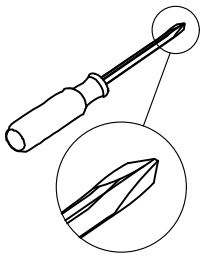


Ⓓ	X4
	
ϕ6*30	


Ⓖ	X12
	
ϕ4*35	

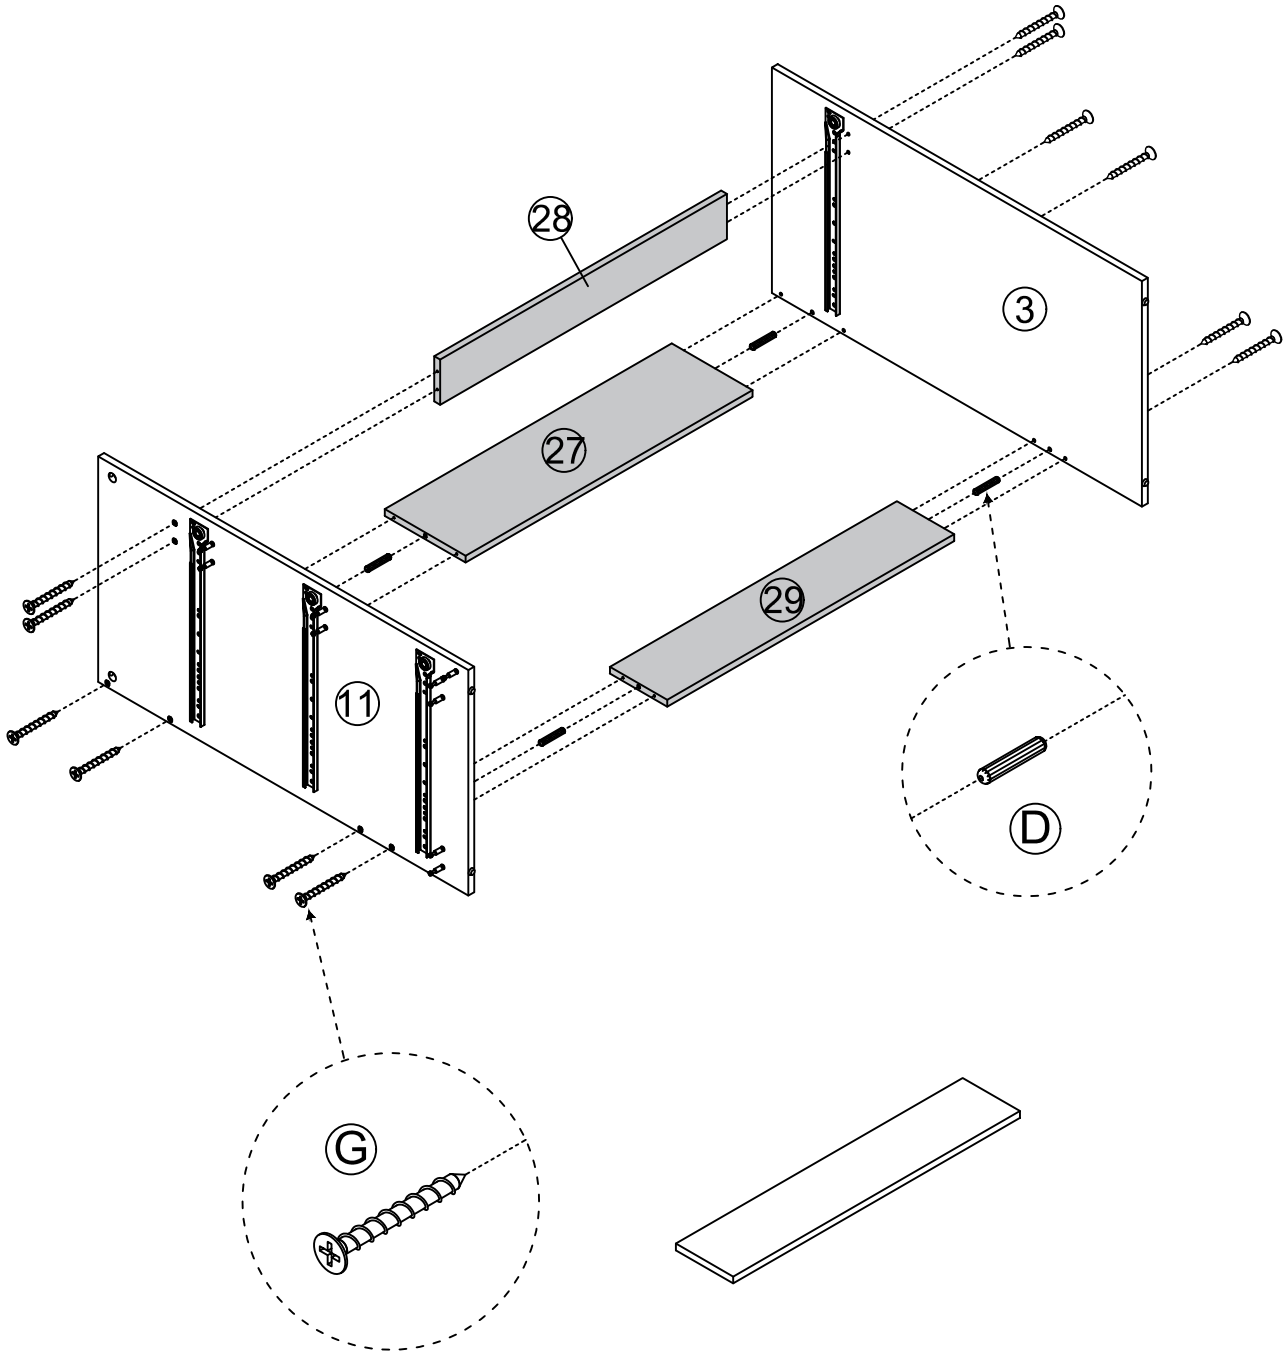


STEP 6

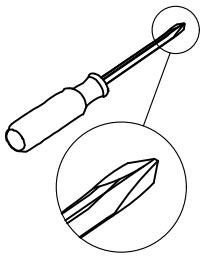


A	X4
	
ϕ15*9.5	


B	X4
	
ϕ6.5*35	

D	X4
	
ϕ6*30	

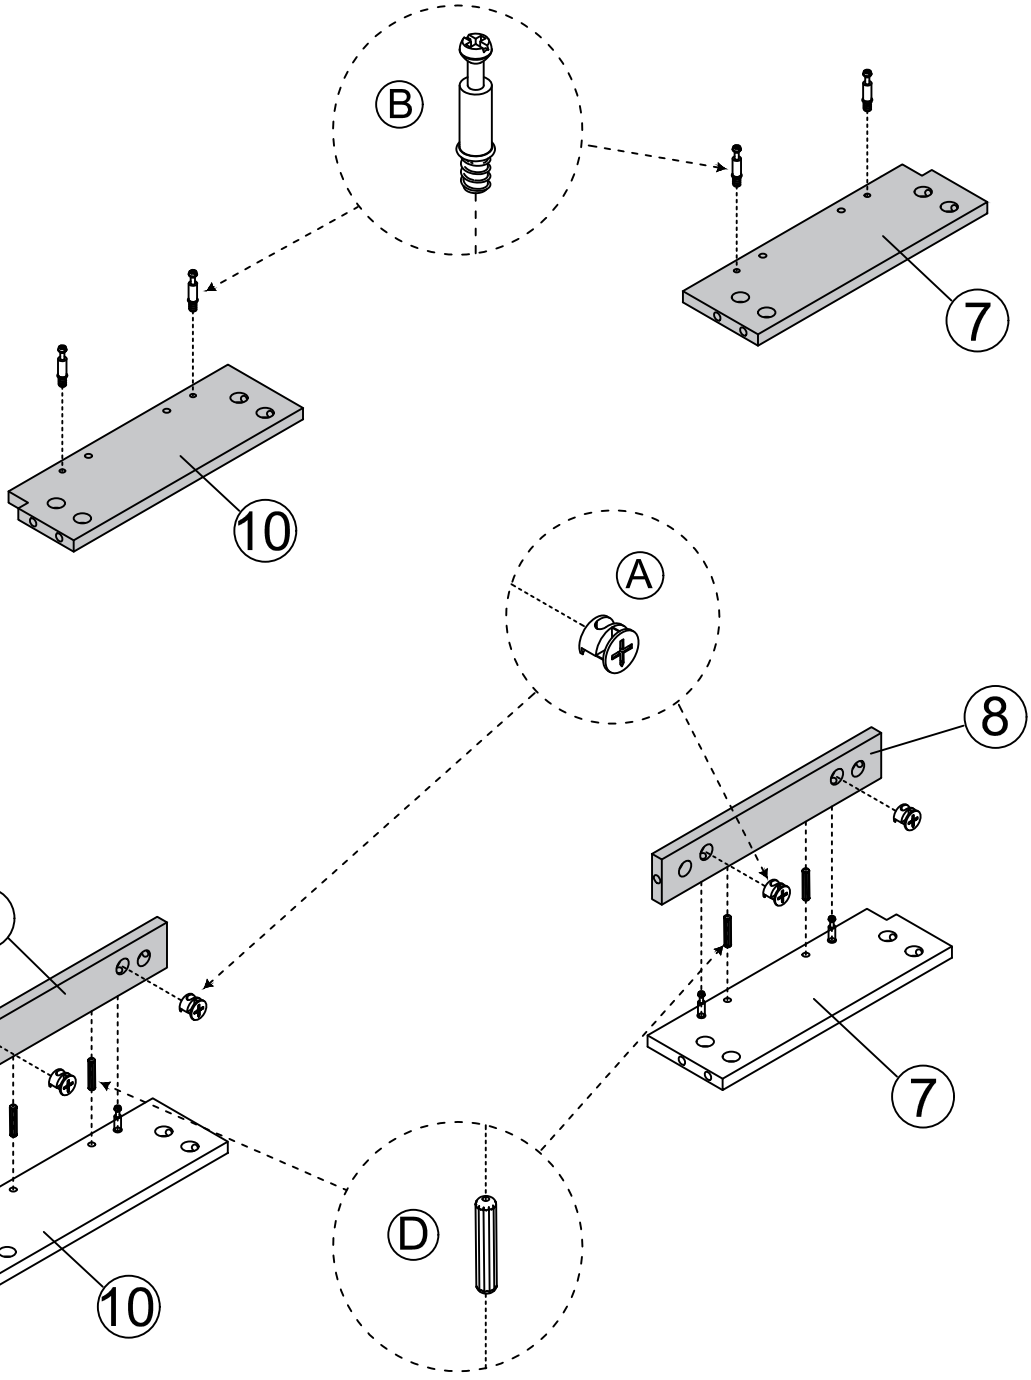


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

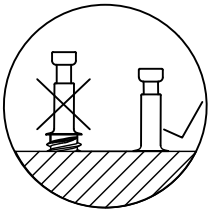

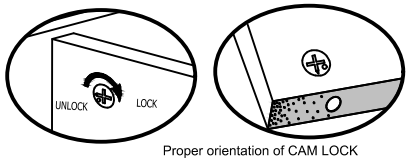



Proper orientation of CAM LOCK

STEP 7

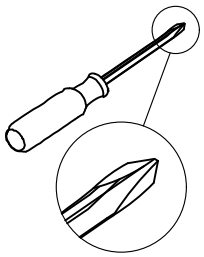



A	X9
	
ϕ15*9.5	

B	X9
	
ϕ6.5*35	

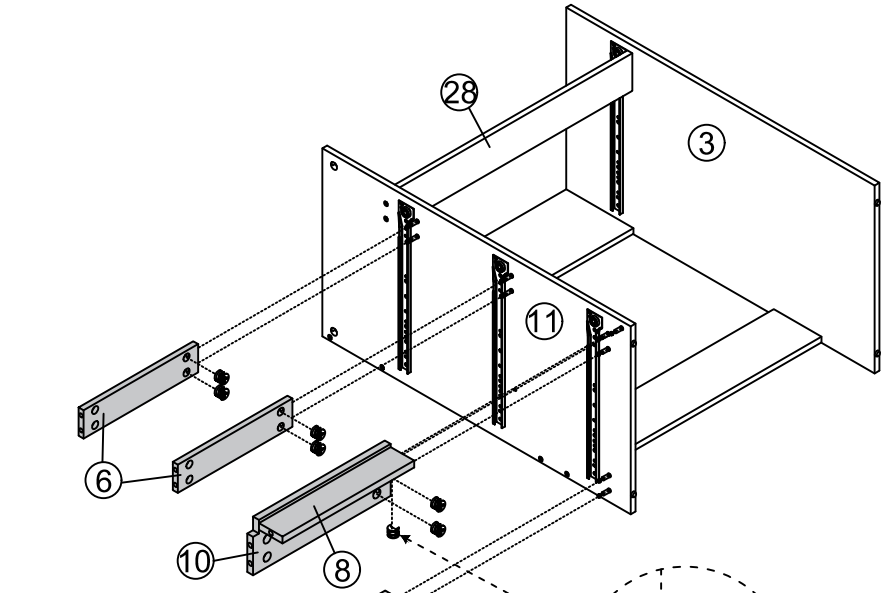



Pay attention to the installation direction of the 9 board.

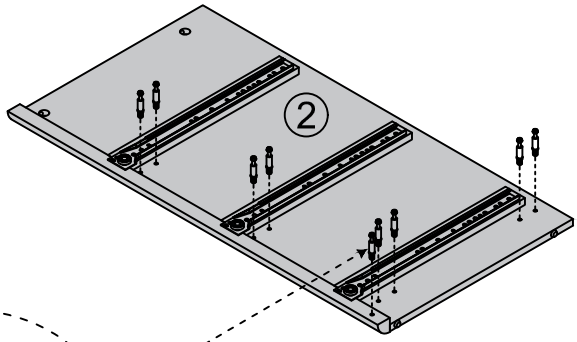

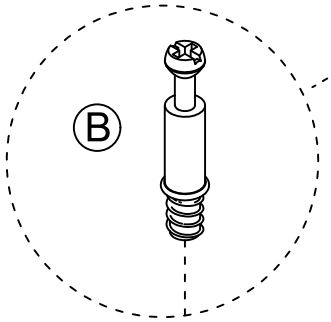


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

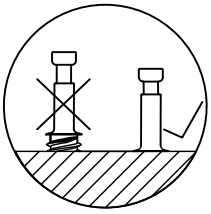

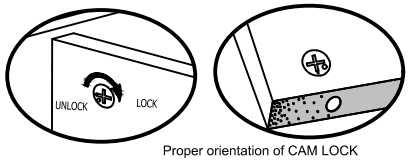


Proper orientation of CAM LOCK


STEP 8

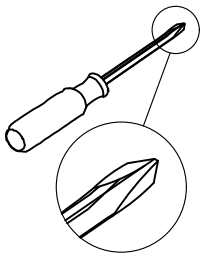

A	X9
	
ϕ15*9.5	

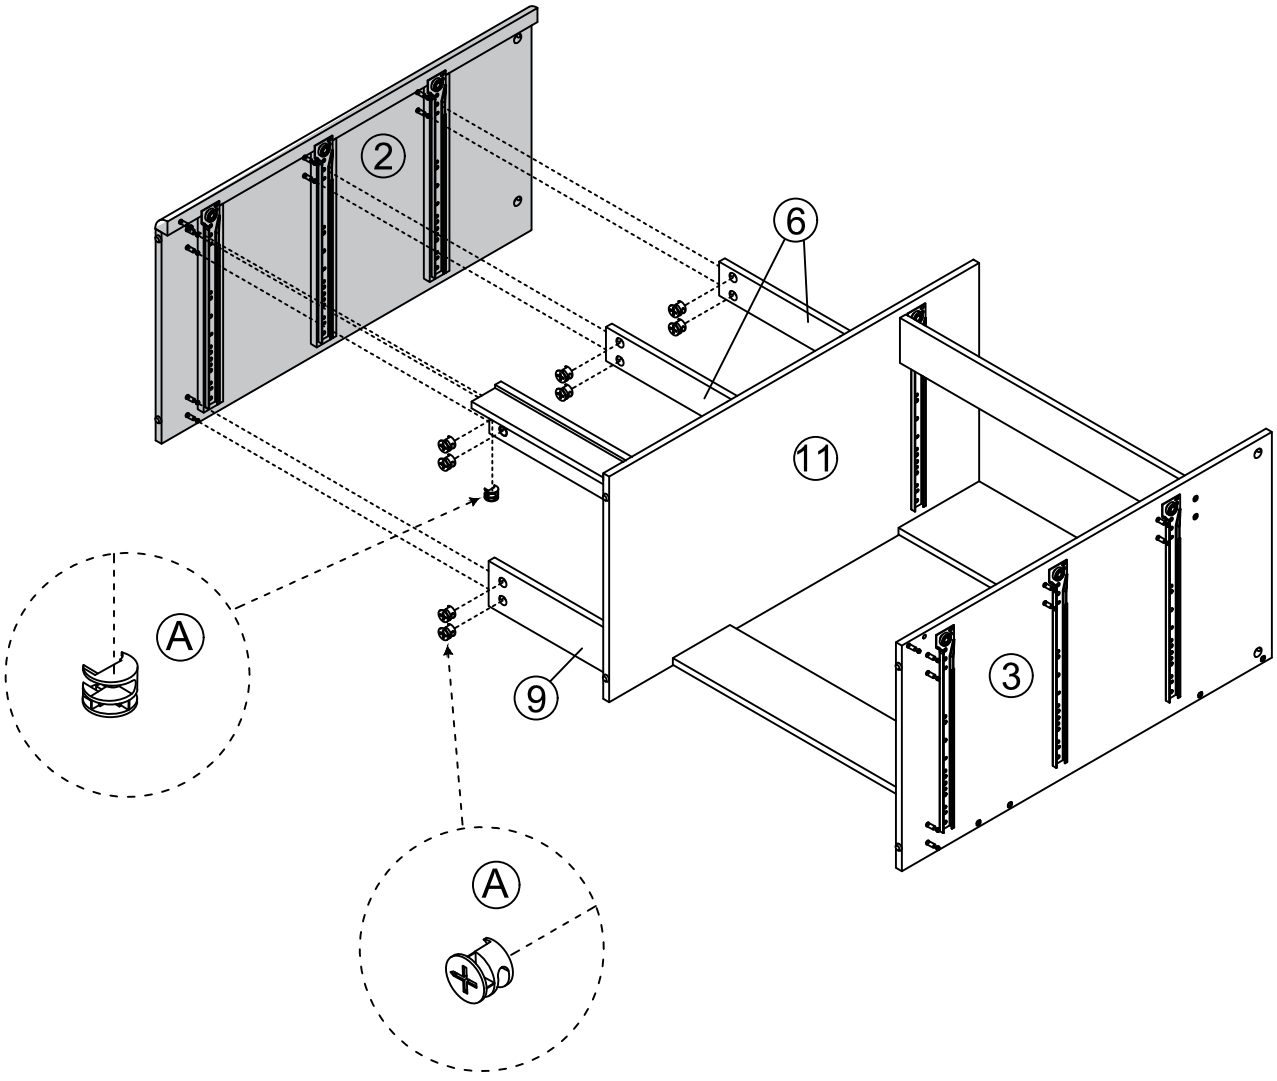


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

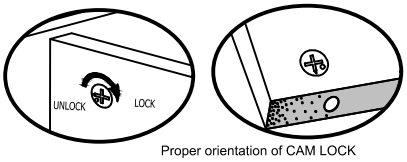



Proper orientation of CAM LOCK


STEP 9

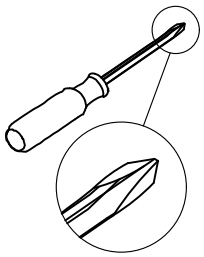

A	X9
	
ϕ15*9.5	


B	X9
	
ϕ6.5*35	

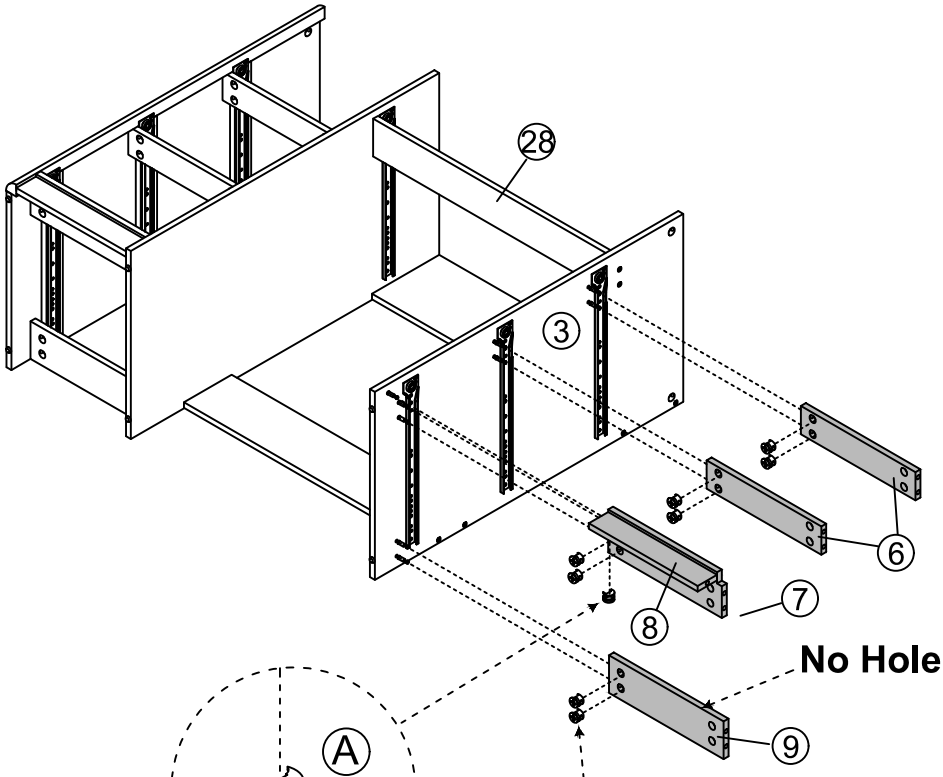


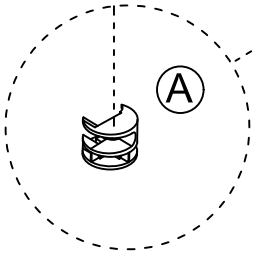





Pay attention to the installation direction of the 9 board.

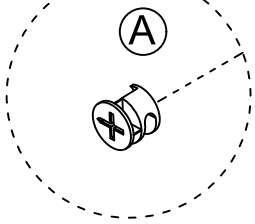


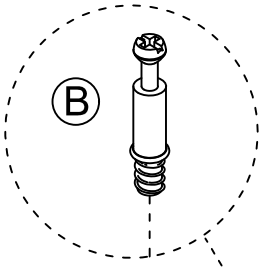

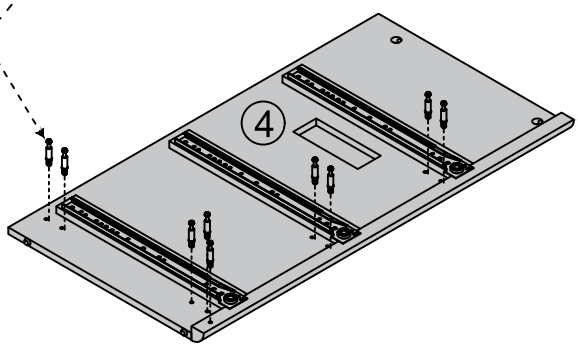

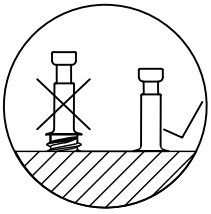


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

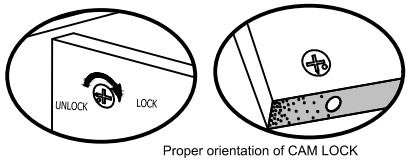


Proper orientation of CAM LOCK


STEP 10

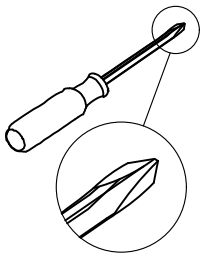

Ⓐ	X9
	
ϕ15*9.5	

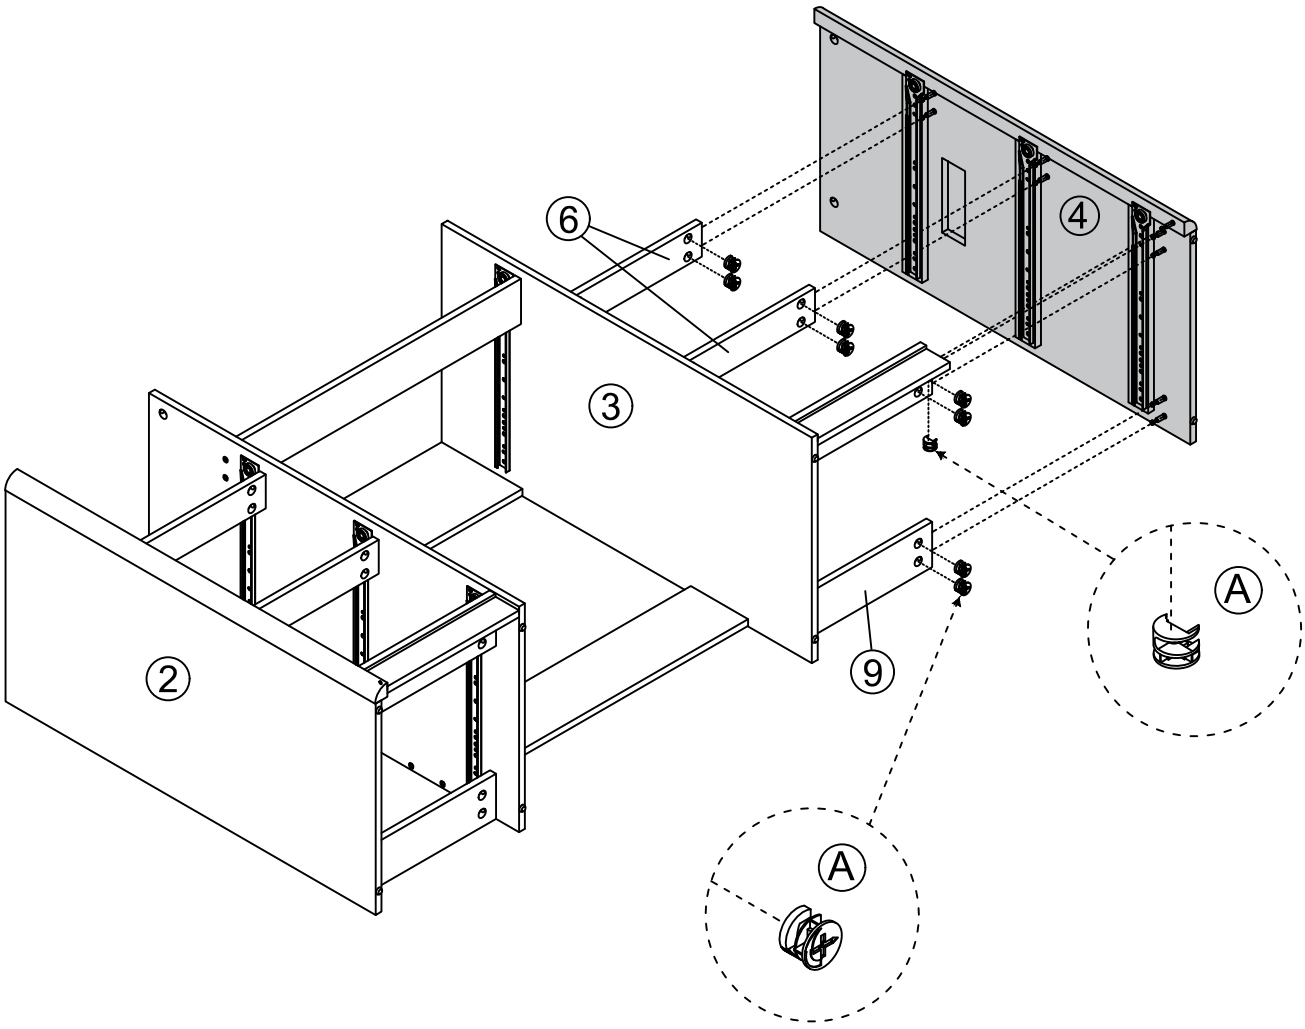


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

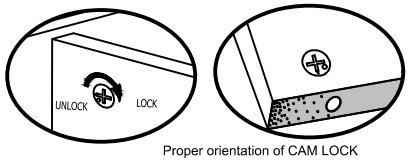


Proper orientation of CAM LOCK


STEP 11

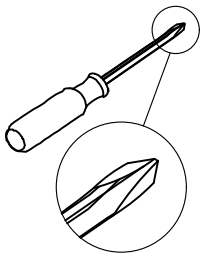



Ⓐ	X6
	
ϕ15*9.5	

Ⓑ	X10
	
ϕ6.5*35	


Ⓒ	X9
	
ϕ8*30	

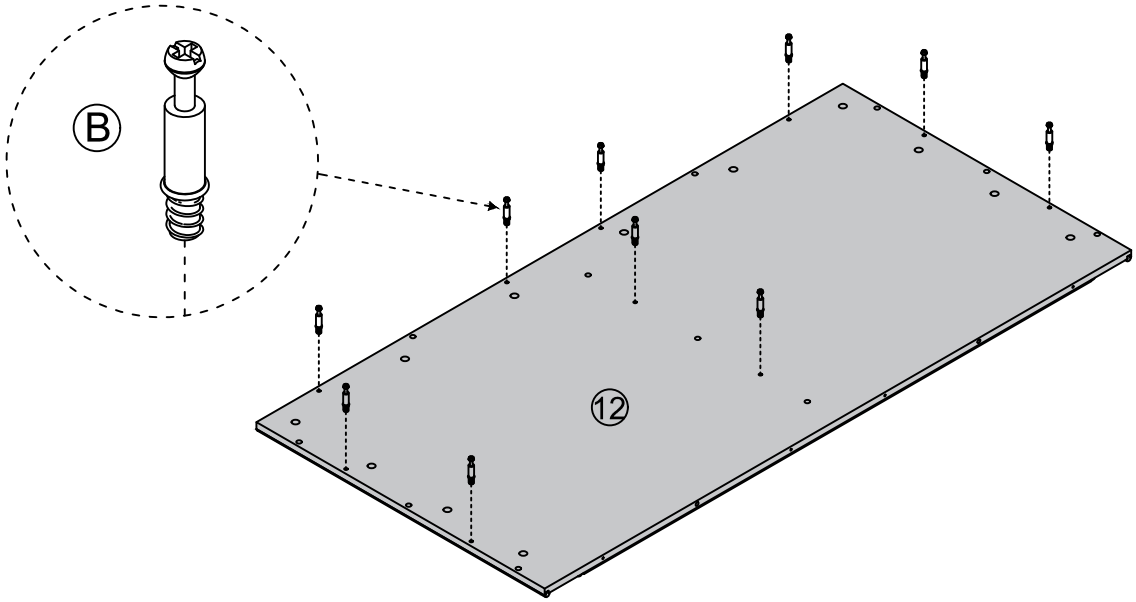

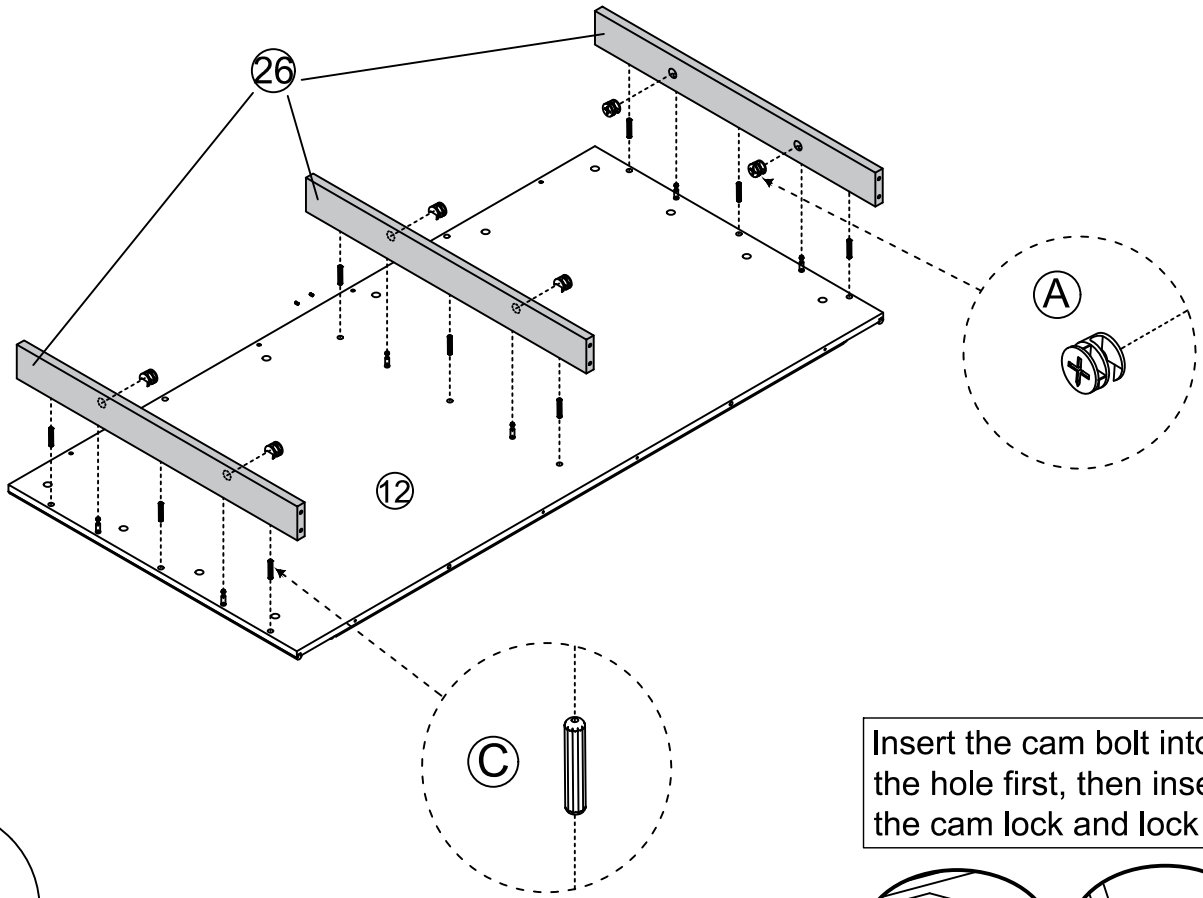

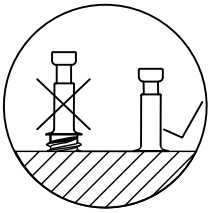


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

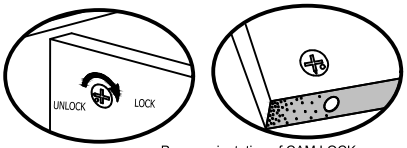


Proper orientation of CAM LOCK

STEP 12

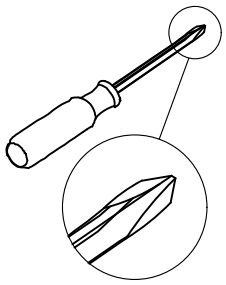


Ⓐ	X4
	
ϕ15*9.5	

Ⓒ	X2
	
ϕ8*30	

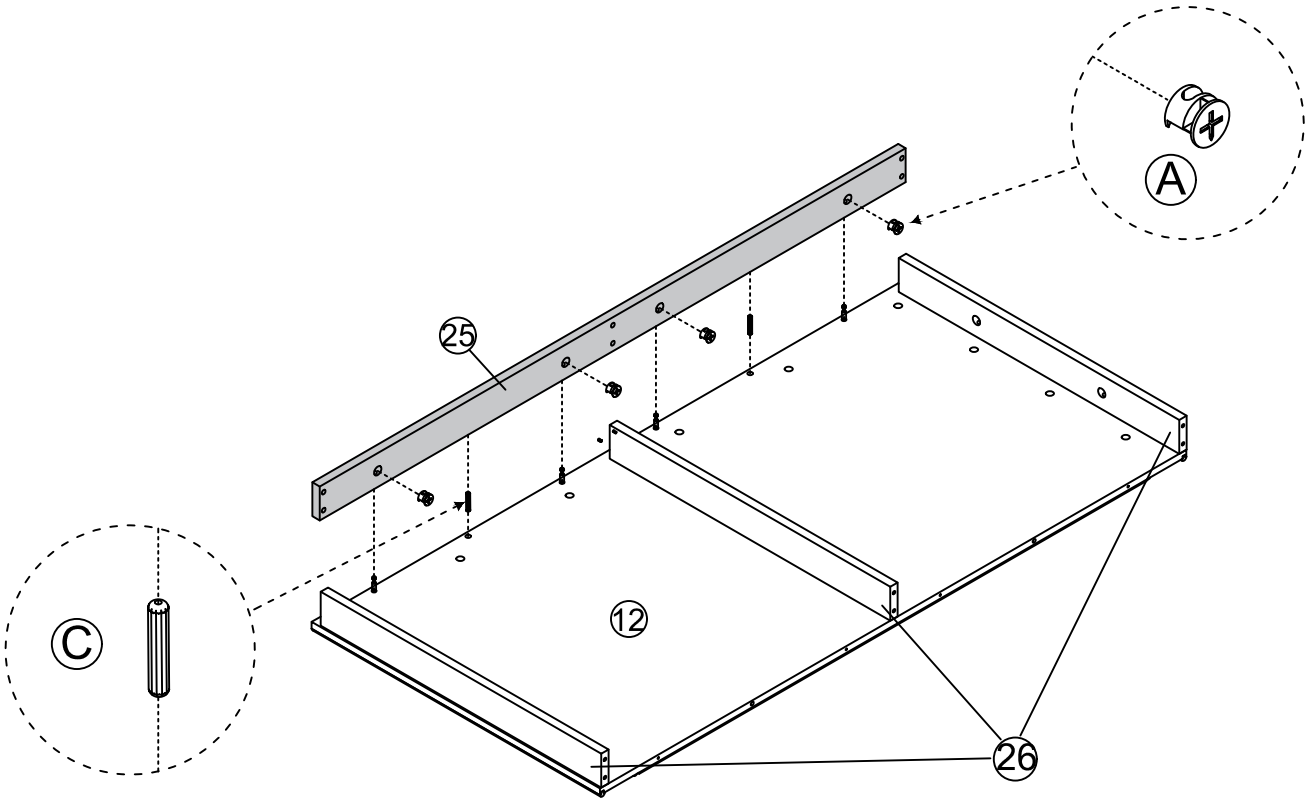



Insert the cam bolt into the hole first, then insert the cam lock and lock it.

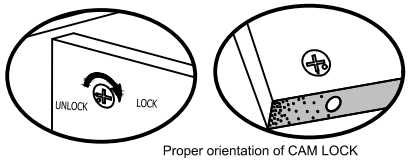



Proper orientation of CAM LOCK


STEP 13

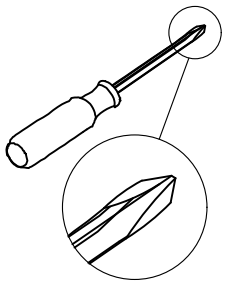


B	X10	J	X6	L	X6
					
ϕ6.5*35		ϕ6.3*50		ϕ21	

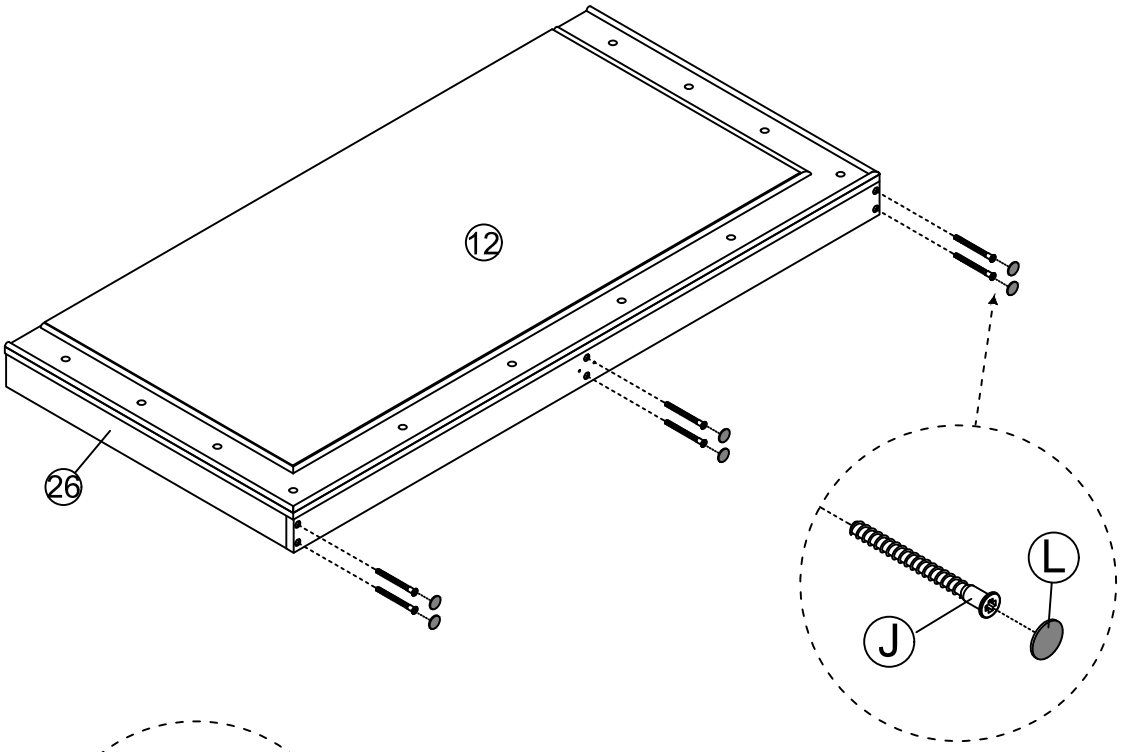


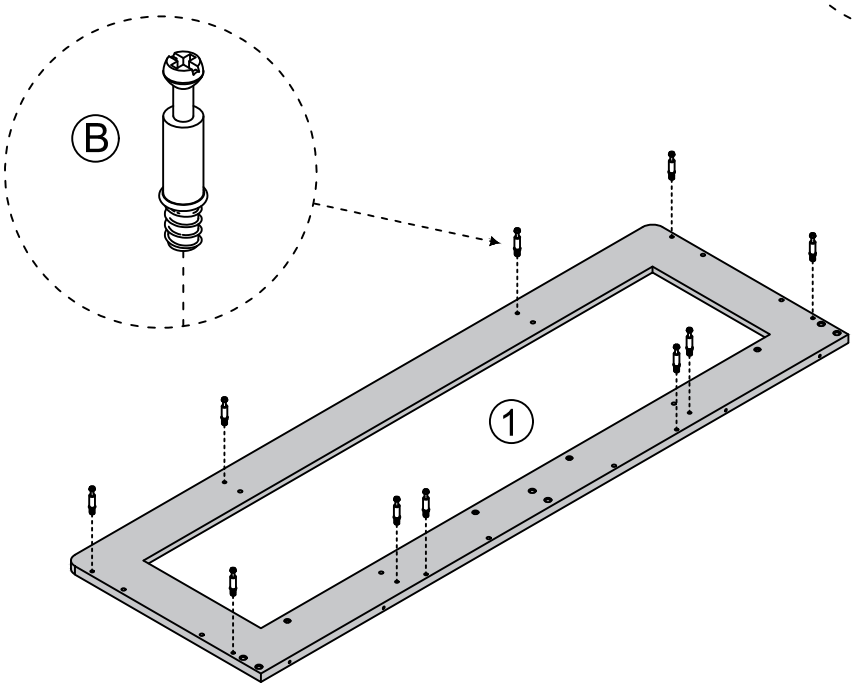


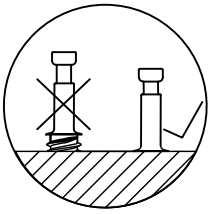

STEP 14

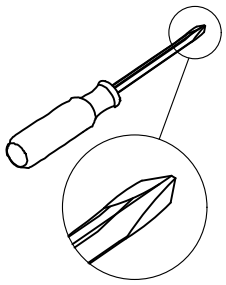


G	X4	J	X6	D	X2
					
ϕ4*35		ϕ6.3*50		ϕ6*30	

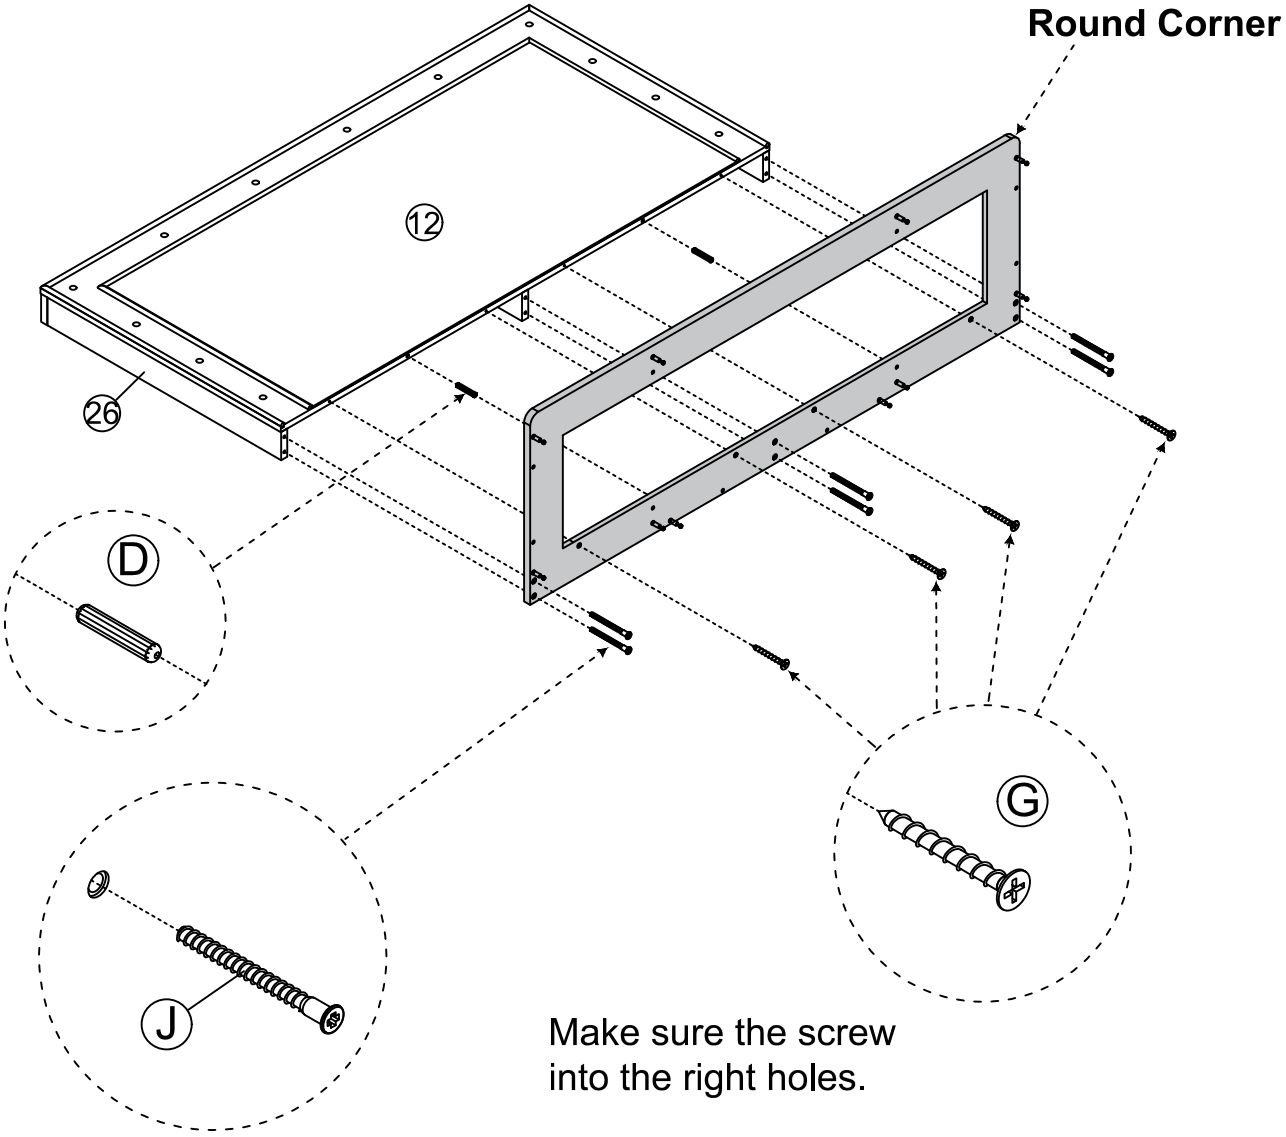


Make sure the screw into the right holes.


STEP 15

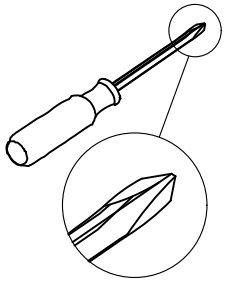

Ⓓ	X10
	
ϕ6*30	

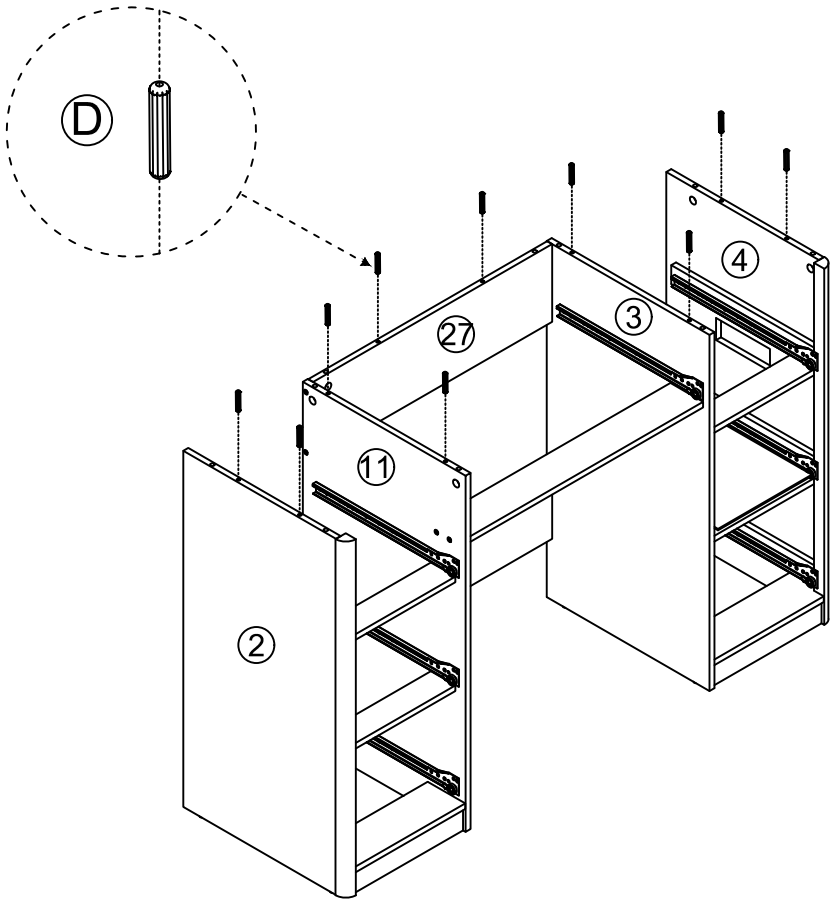


STEP 16

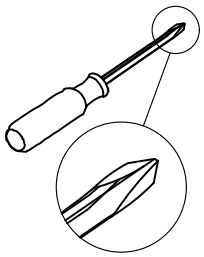


Ⓐ	X8
	
ϕ15*9.5	

Ⓛ	X8
	
ϕ21	

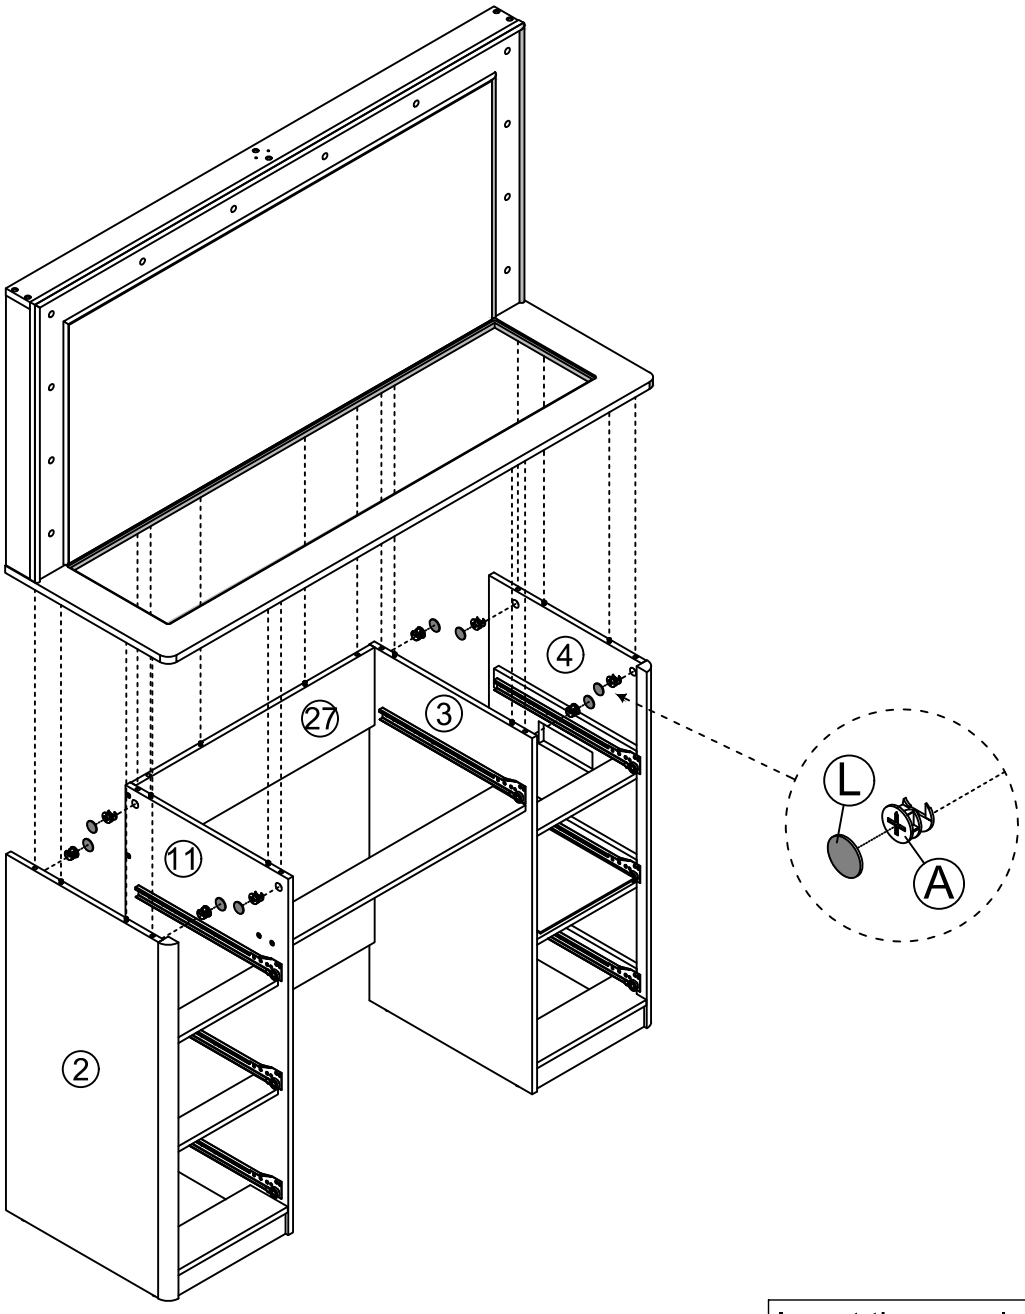


For this step,you need one helper.

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

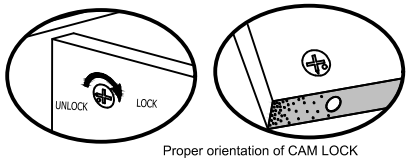

Proper orientation of CAM LOCK


STEP 17

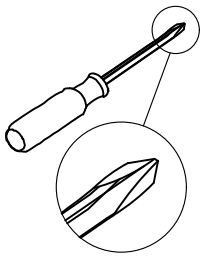


Ⓐ	X2
	
ϕ15*9.5	

Ⓗ	X20
	
ϕ3*14	


Ⓡ	X1set
	

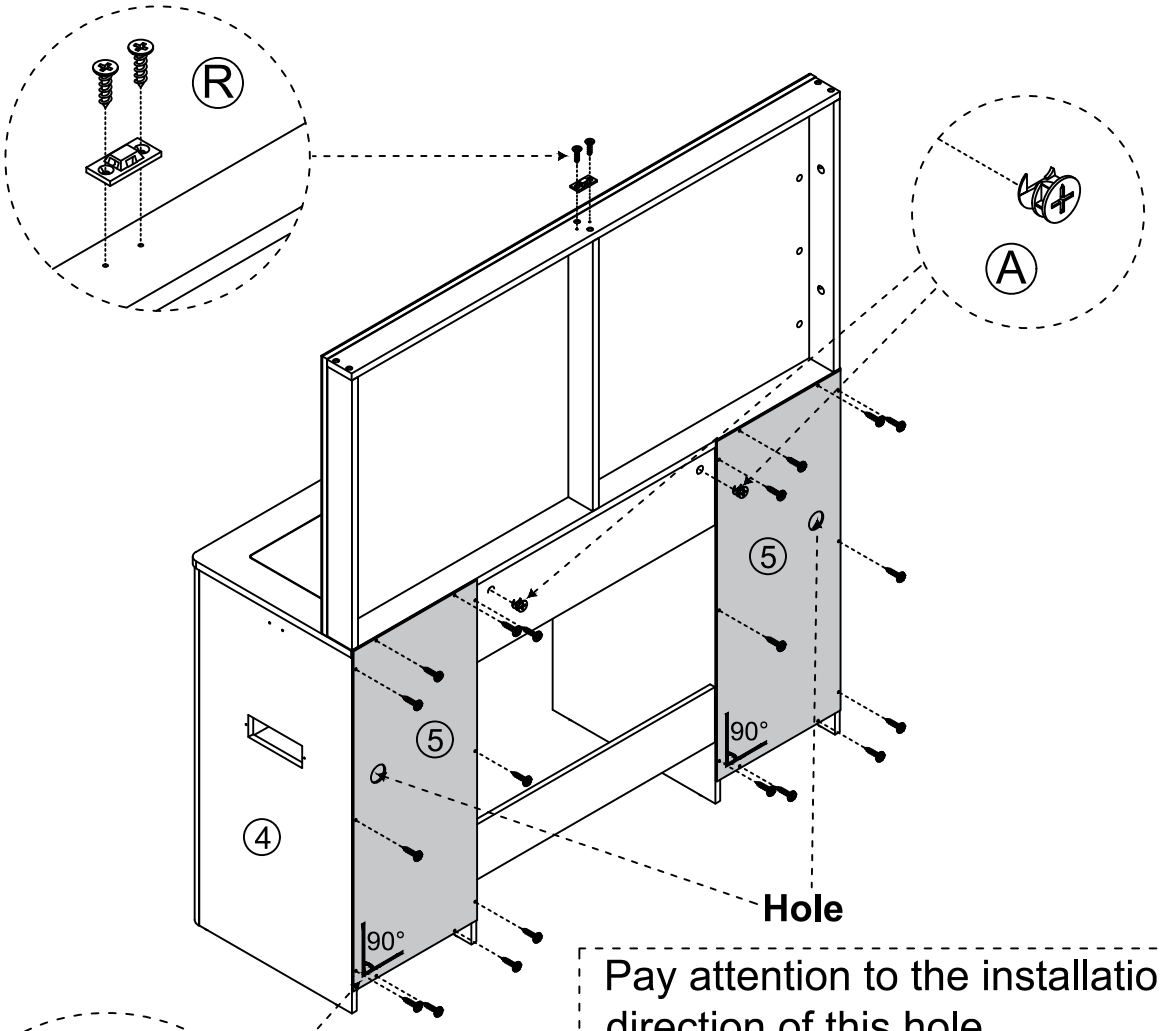

Pay attention to the installation direction of this hole.

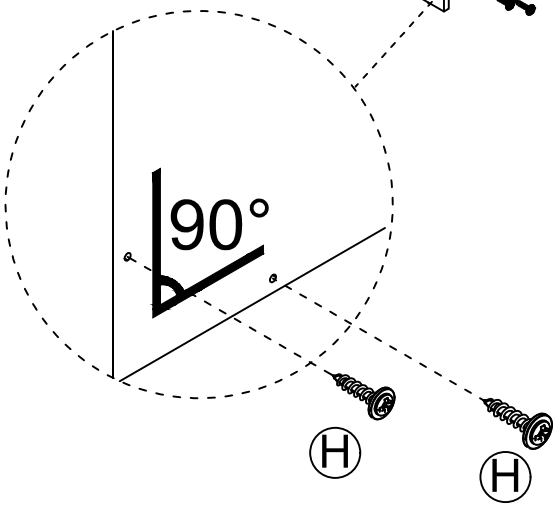


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

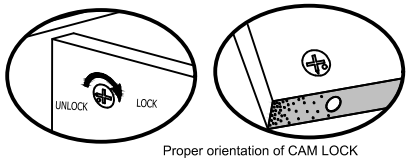


Proper orientation of CAM LOCK


STEP 18



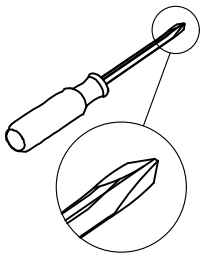



Ⓕ	X2	Ⓘ	X2	Ⓞ	X1	Ⓜ	X1
							
ϕ3*12		ϕ4*12		145*55*45		109*99*38.5	

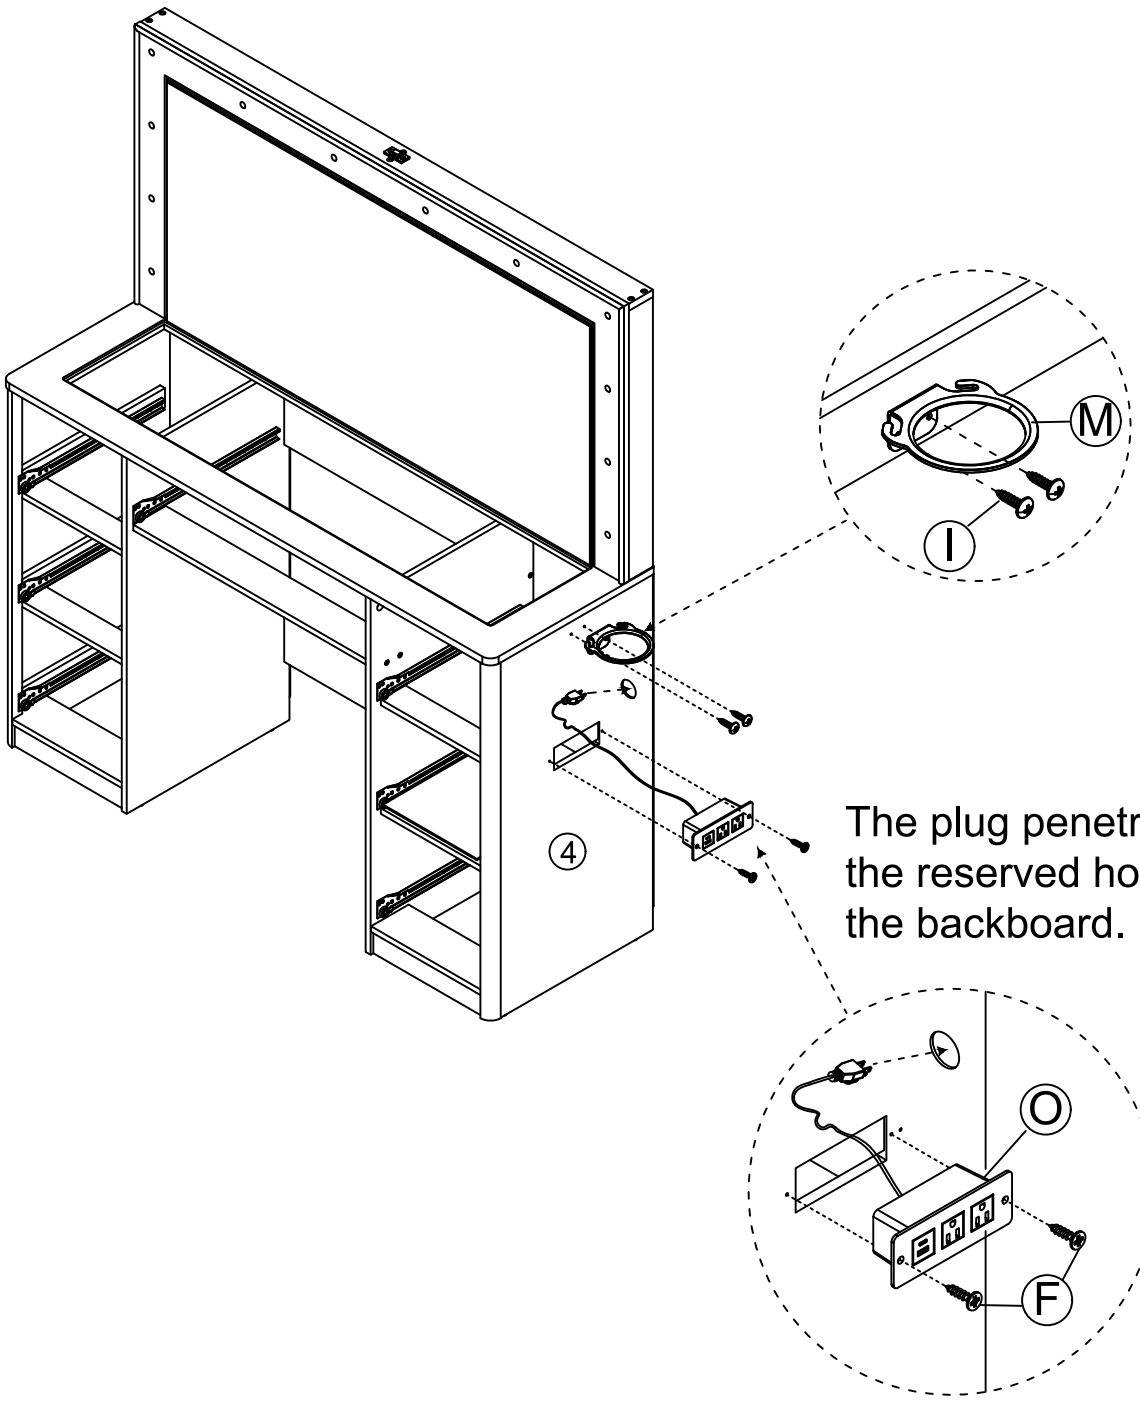


STEP 19

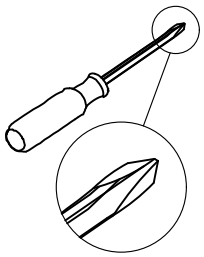


Ⓐ	X24	Ⓑ	X24	Ⓔ	X12	Ⓖ	X24
							
ϕ15*9.5		ϕ6.5*35		ϕ3.5*12		ϕ4*35	

Ⓚ	X6
	
120*38*17	

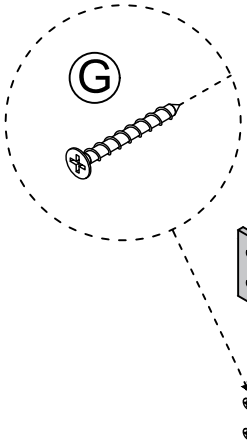



Step 1

Step 2

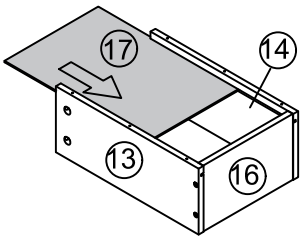


Step 3

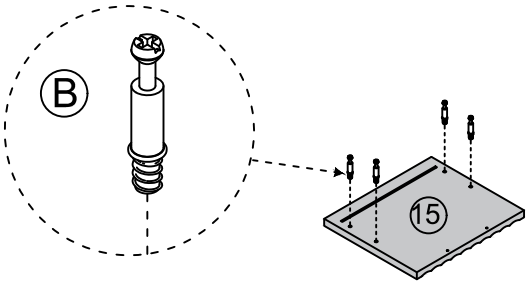


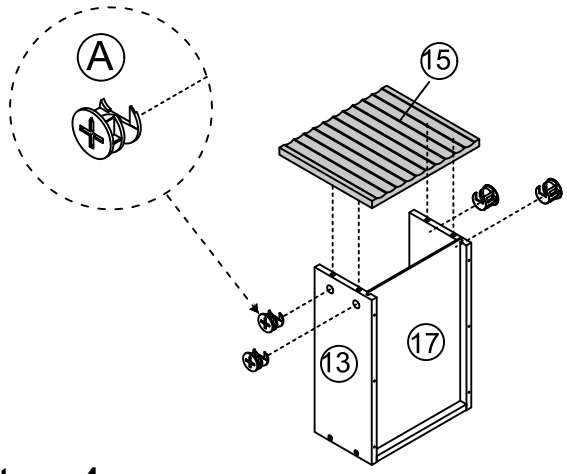

Step 4


Step 5

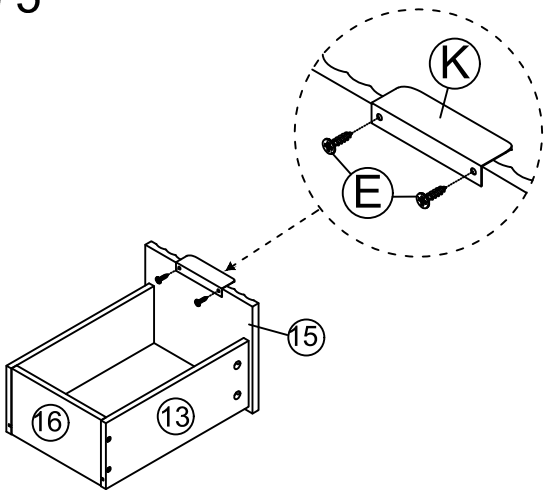

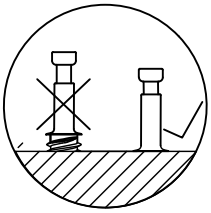


X6


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

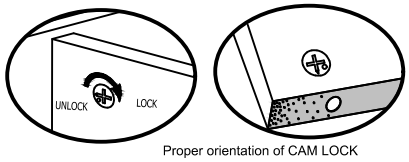



Proper orientation of CAM LOCK


STEP 20

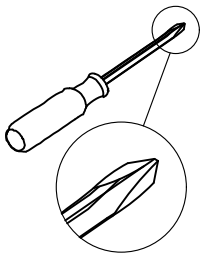

Ⓔ	X36
	
ϕ3.5*12	

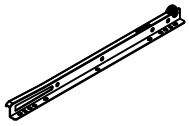
Ⓝ	X6
 DL	
L=350	



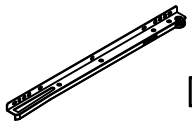
Ⓝ	X6
 DR	
L=350	

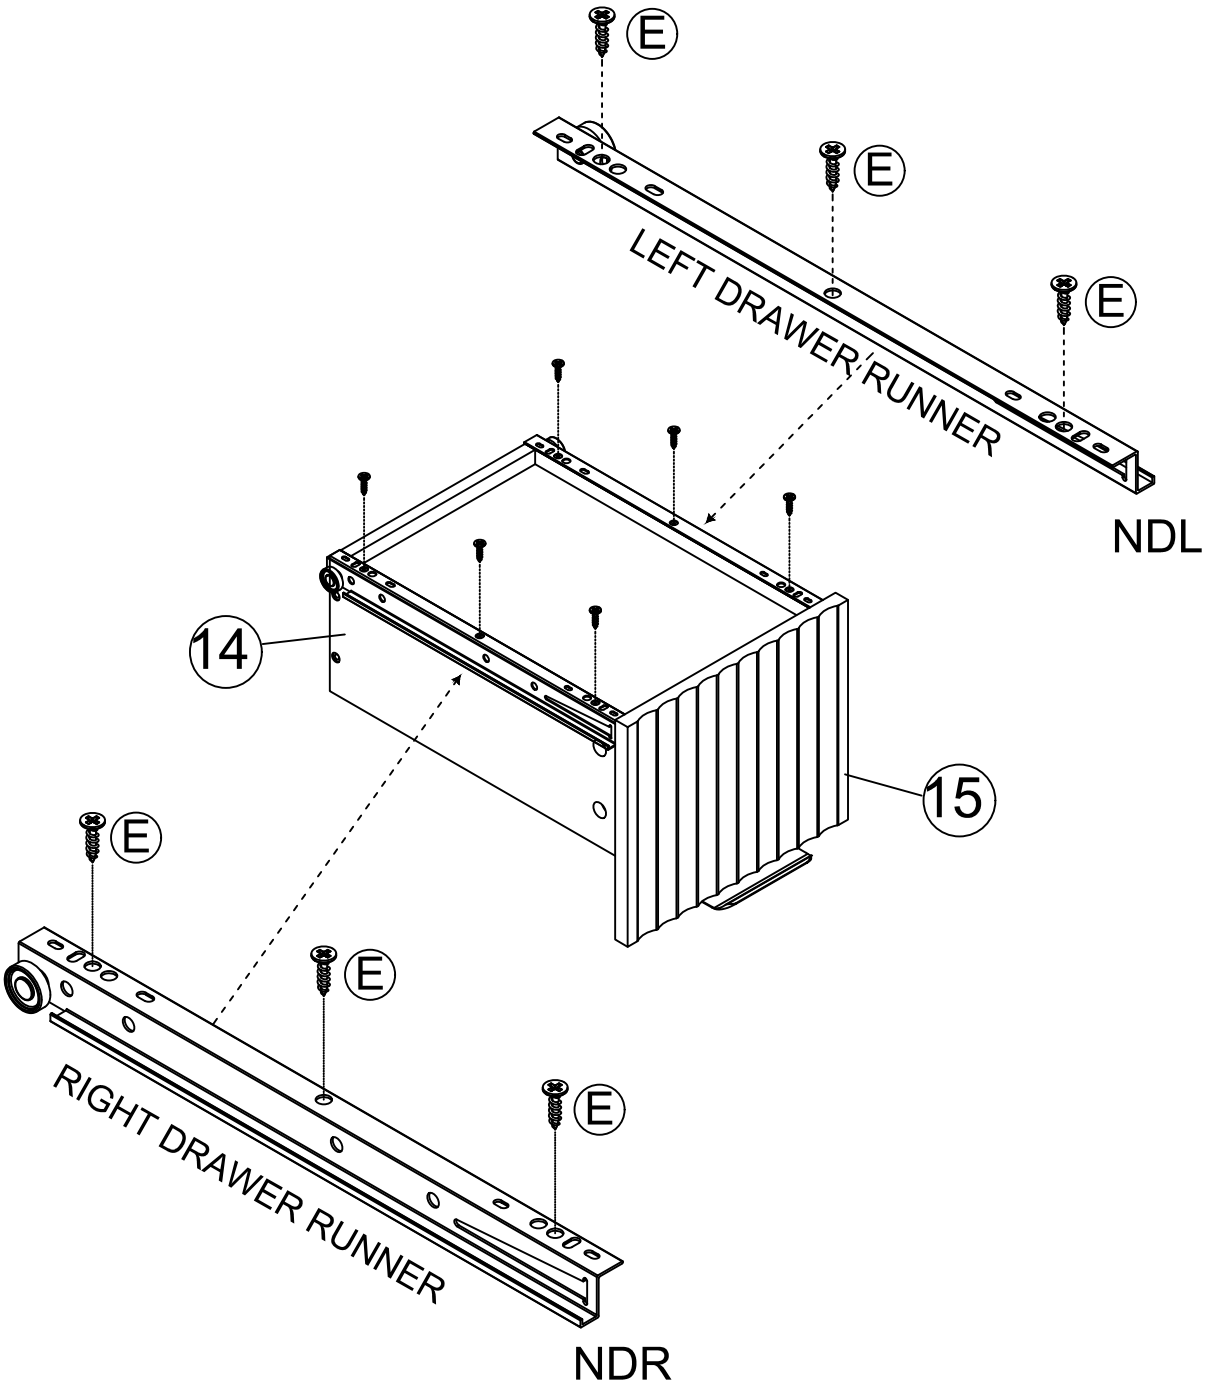



X6


STEP 21

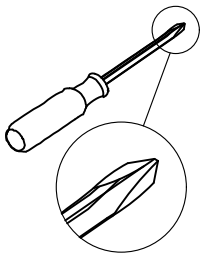

A	X5	B	X5	E	X2	G	X6
							
ϕ15*9.5		ϕ6.5*35		ϕ3.5*12		ϕ4*35	


K	X1
	
120*38*17	

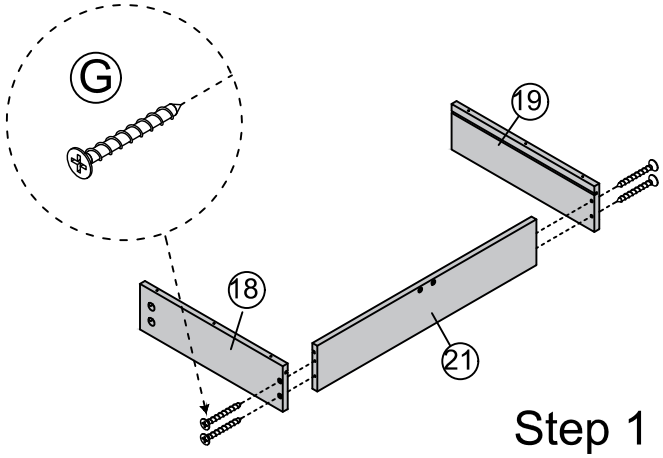


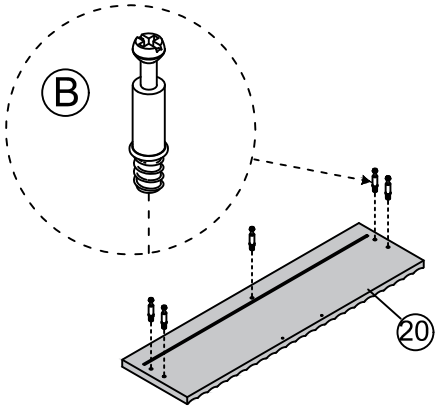



Step 1


Step 2

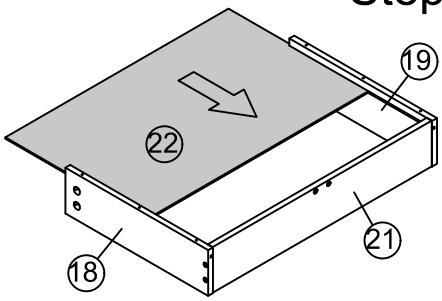


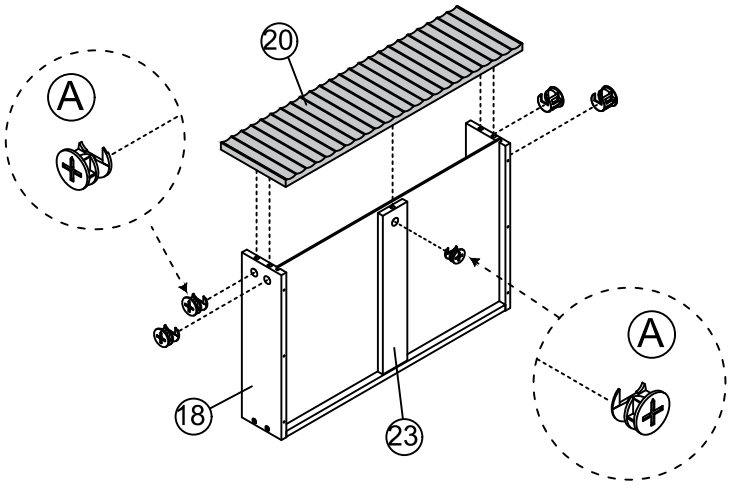

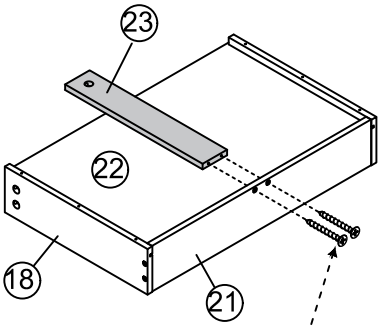


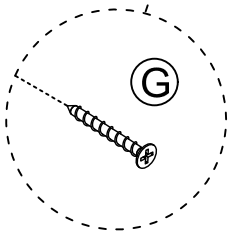

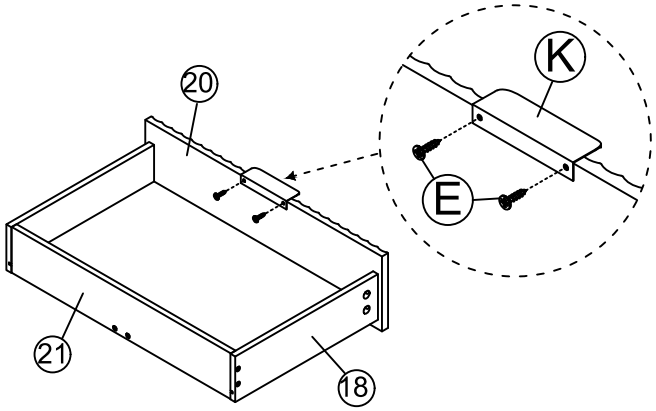

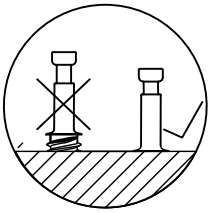



Insert the cam bolt into the hole first, then insert the cam lock and lock it.

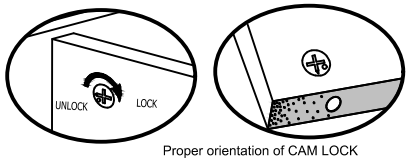



Proper orientation of CAM LOCK


STEP 22

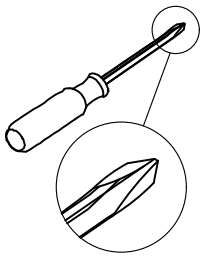


Ⓔ	X6
	
ø3.5*12	

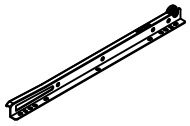
Ⓝ	X1
 DL	
L=350	

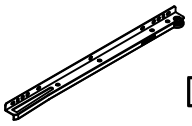Ⓝ	X1
 DR	
L=350	

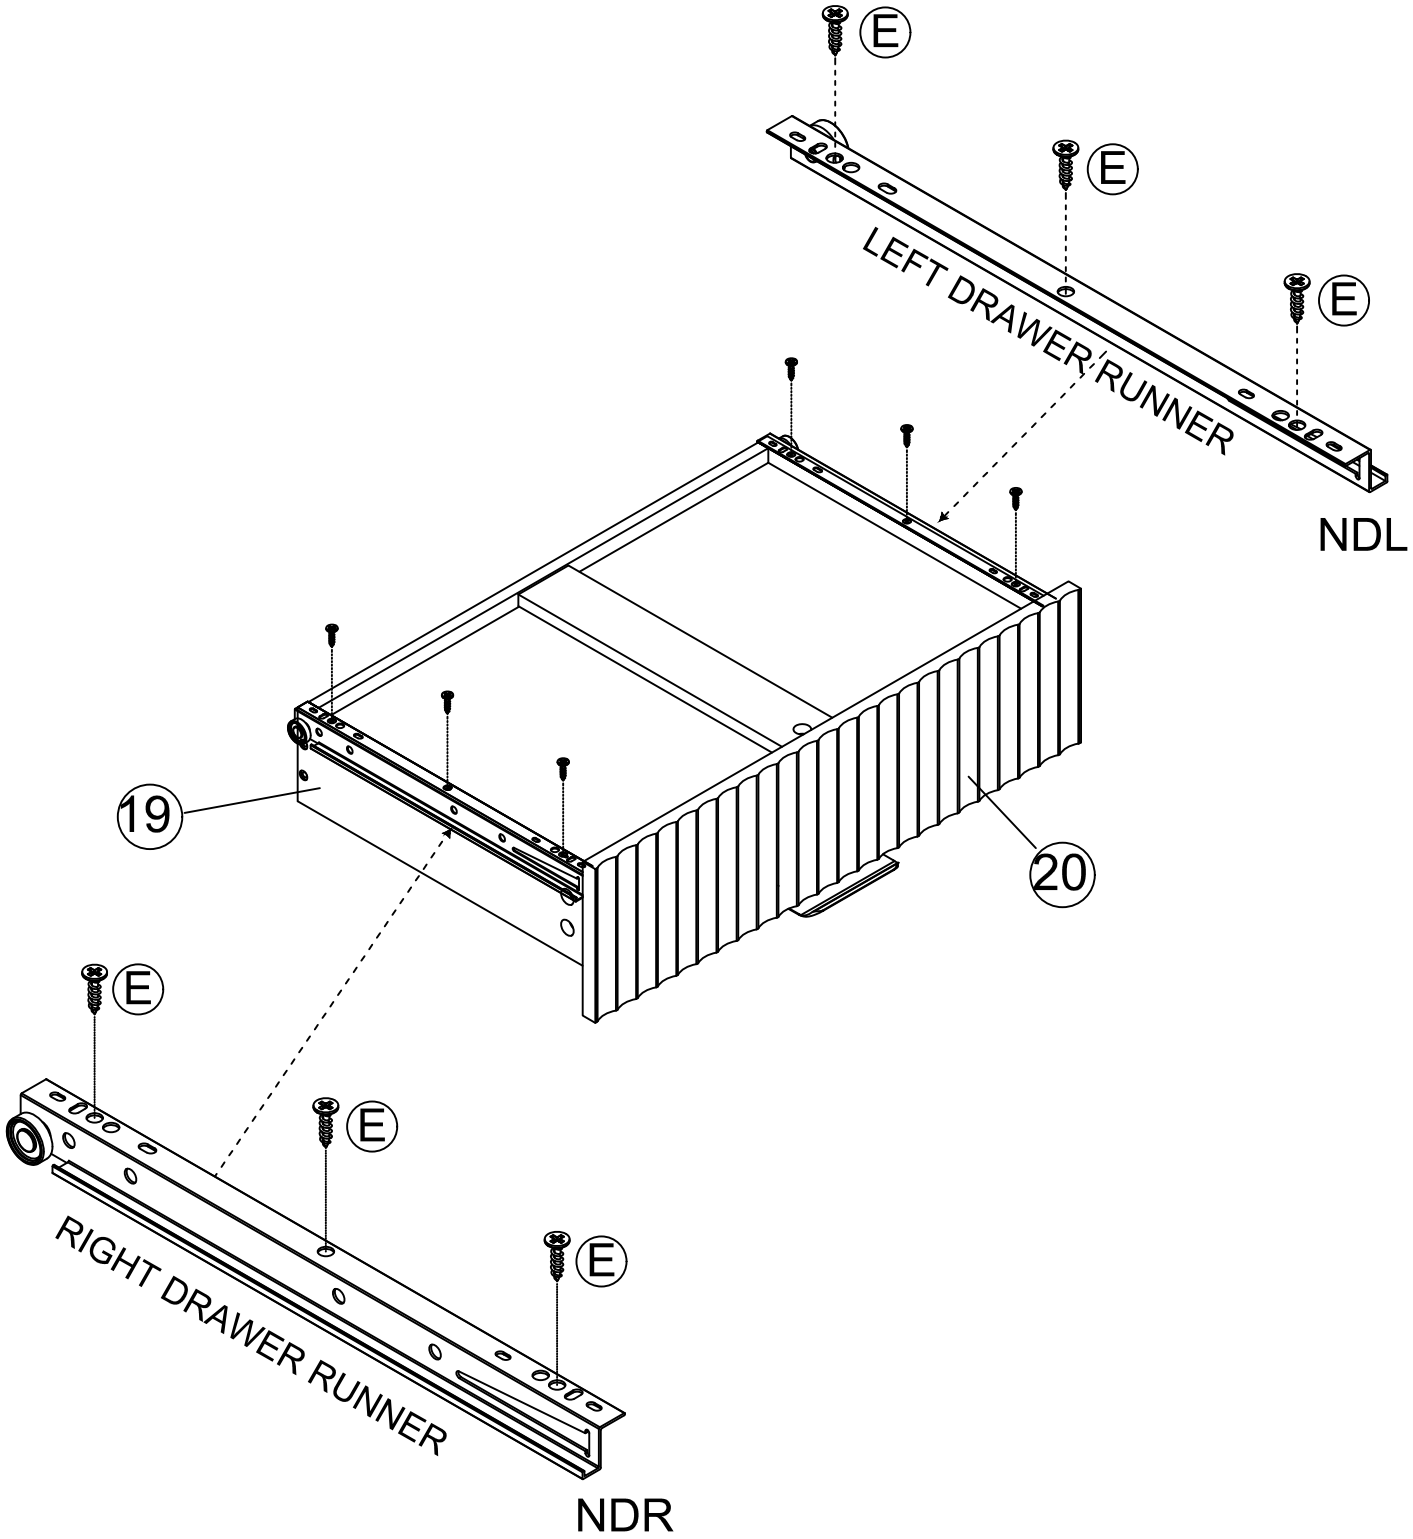



STEP 23

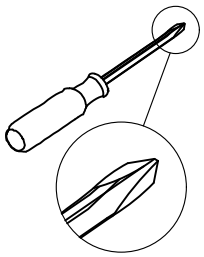

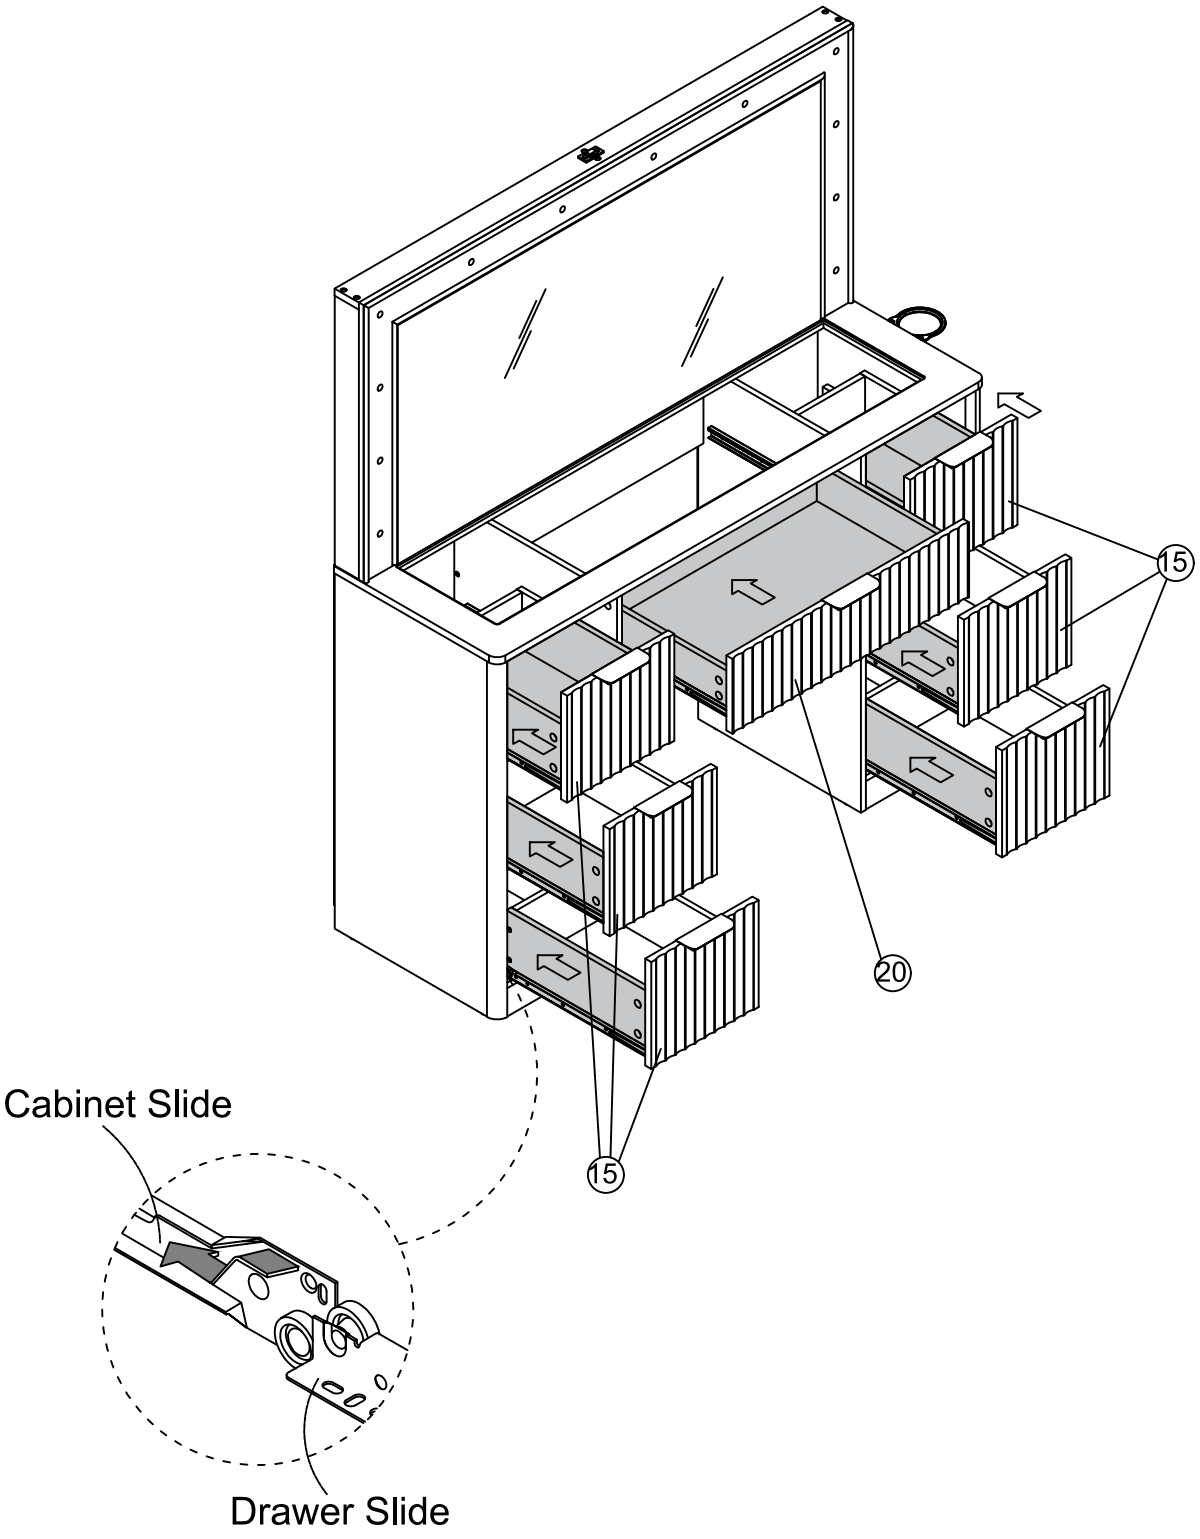


STEP 24

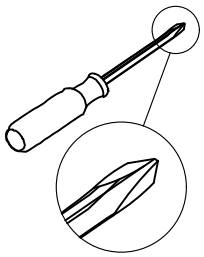


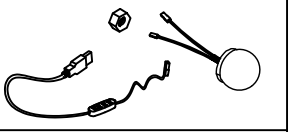Q	X12
	
ϕ50mm	

Pass the bulb wire through the pre punched plate.

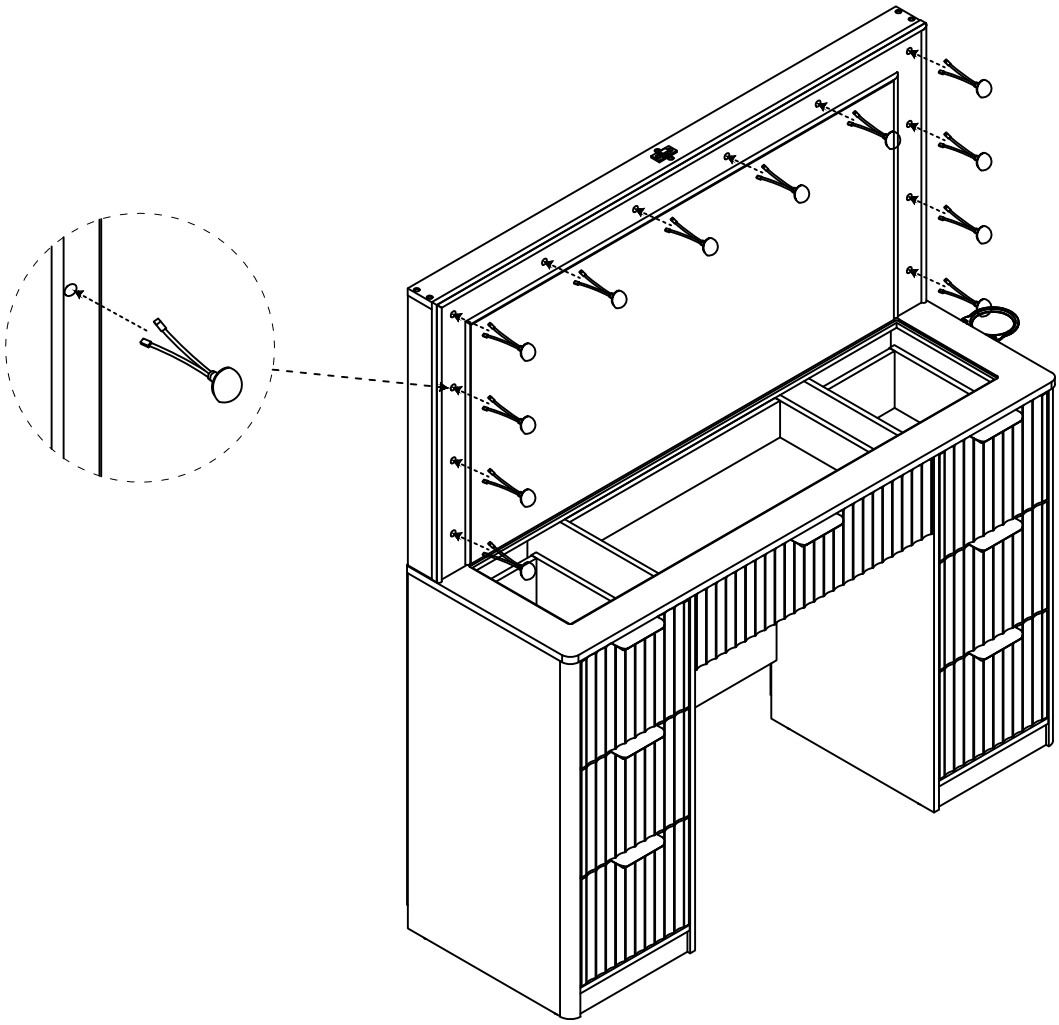


STEP 25

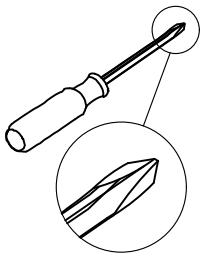



Pass the bulb wire through the pre punched plate,Fix It,and then connect the adjacent bulbs successively through the wire head slot on the opposite side（corresponding to the line of the same color）.


same color correspond

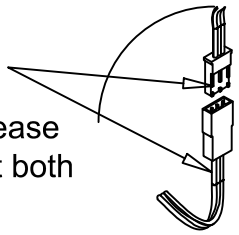

When connecting the interface,please note that the colors of the wires at both ends correspond one by one.

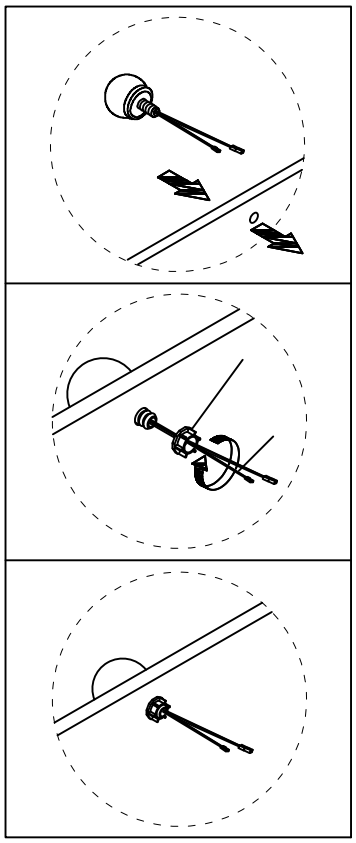


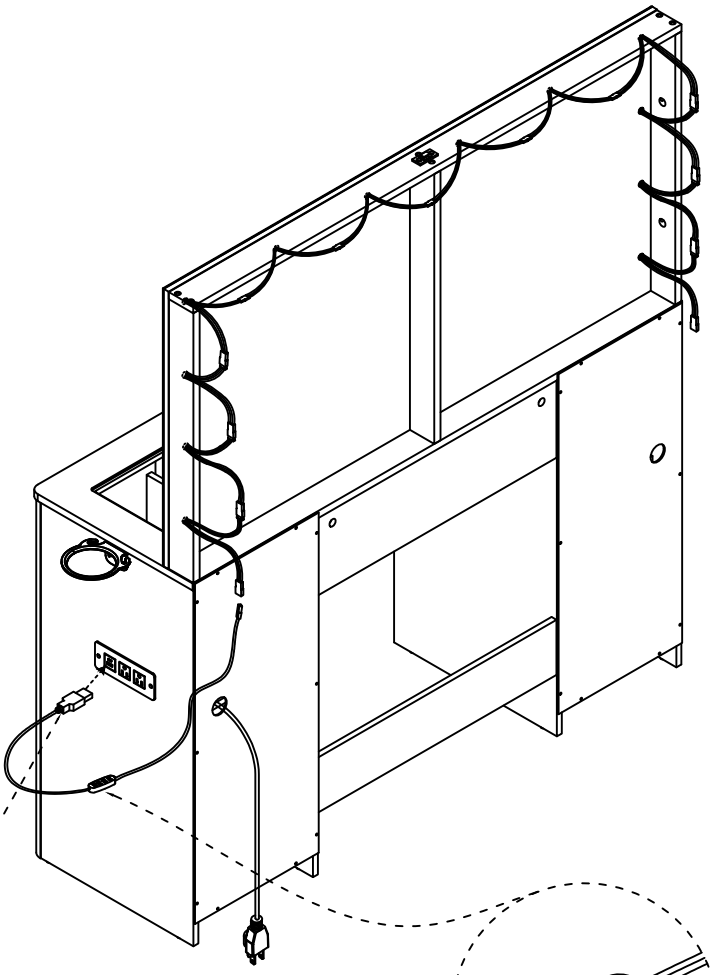

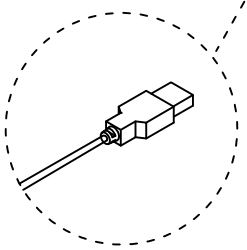


USB

The USB plug is plugged into the socket of the Q Board.

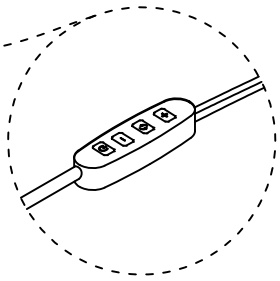


Switch regulator


STEP 26

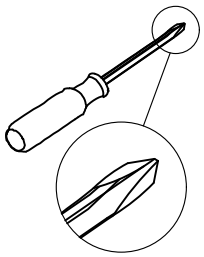

Put the Glass "㉔" in the slot reserved for the panel;
"㉔" must be sloped into the interior of and then flat.

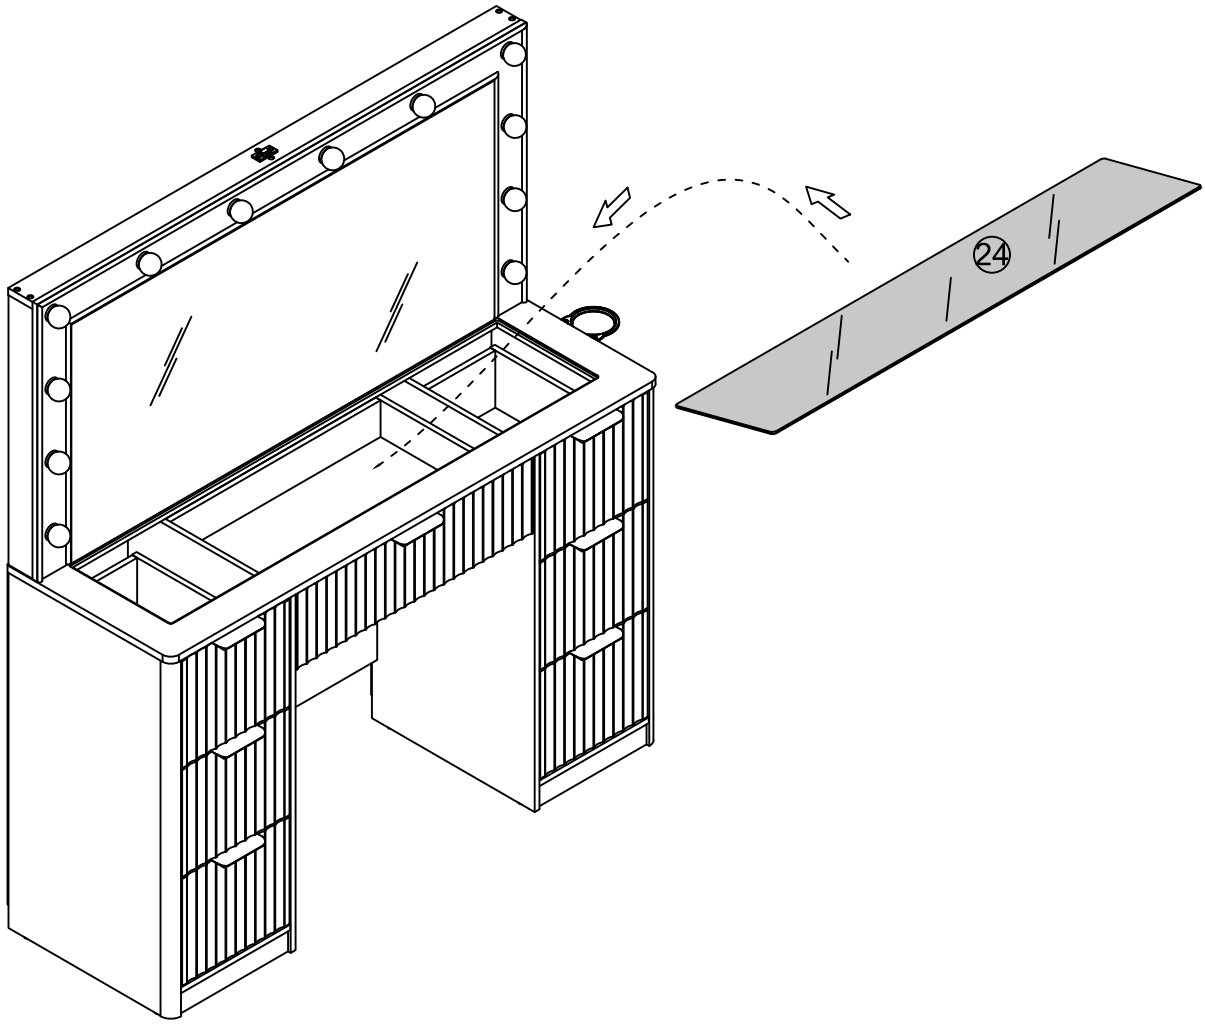

STEP 27

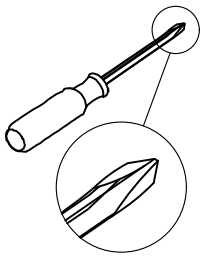

®	X1set
	

⚠WARNING




Childrern have died from furuiture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand , climb or hang on drawers , doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.




This is a permanent label.
Do not remove !


Install the tipping restraint hard ware

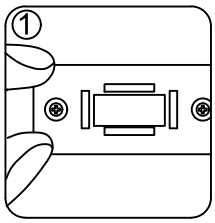


1.make mark on the wall

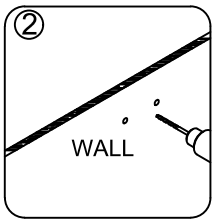


2.drill two Ø6 holes on the wall

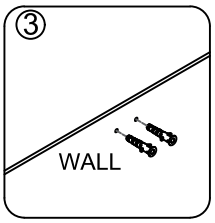

3.put two anchors in the holes

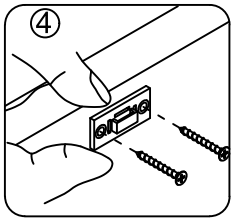

4.fix the device on the wall by the long screws

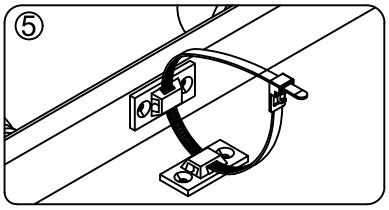

5.Push the cabinet close to the wall so that the two bases are close to each other, and then nylon tie to tighten it.

