
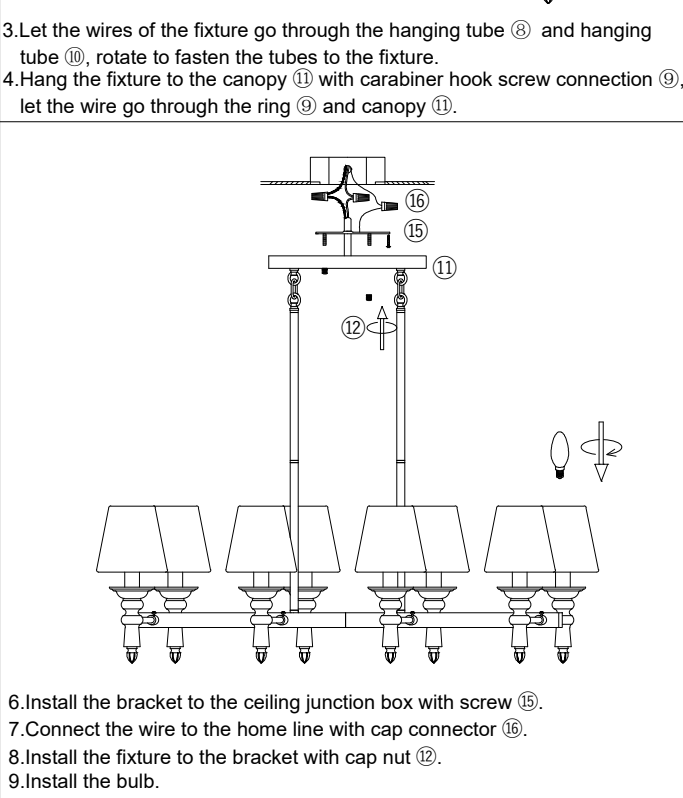
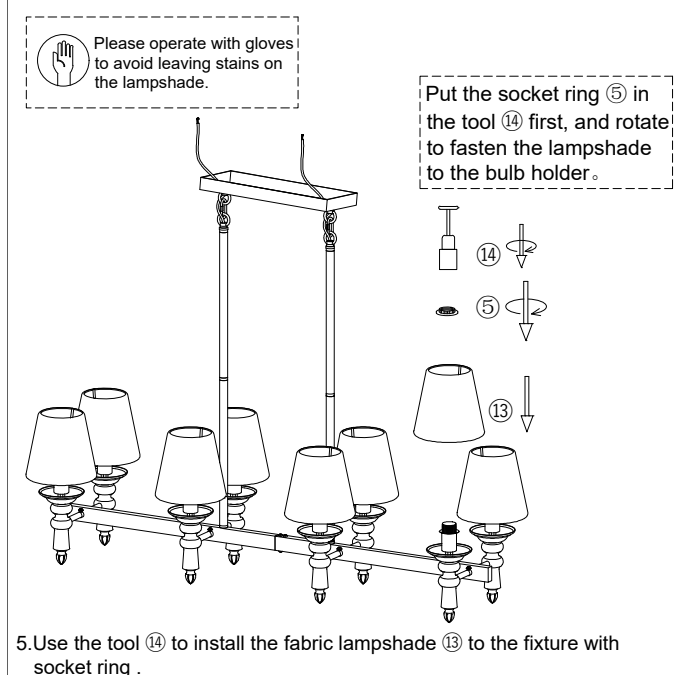
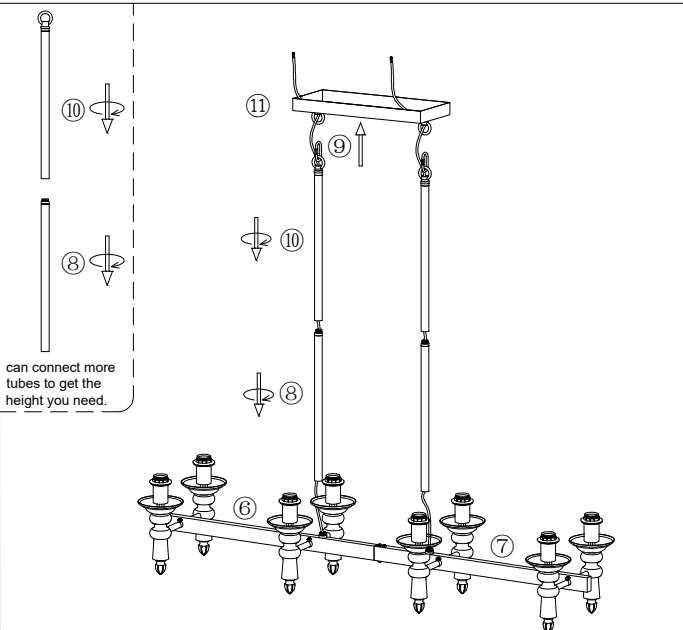


1. Put the light arm ① into the nut of male fixture ⑥ and female fixture ⑦, fasten it with screw ③.

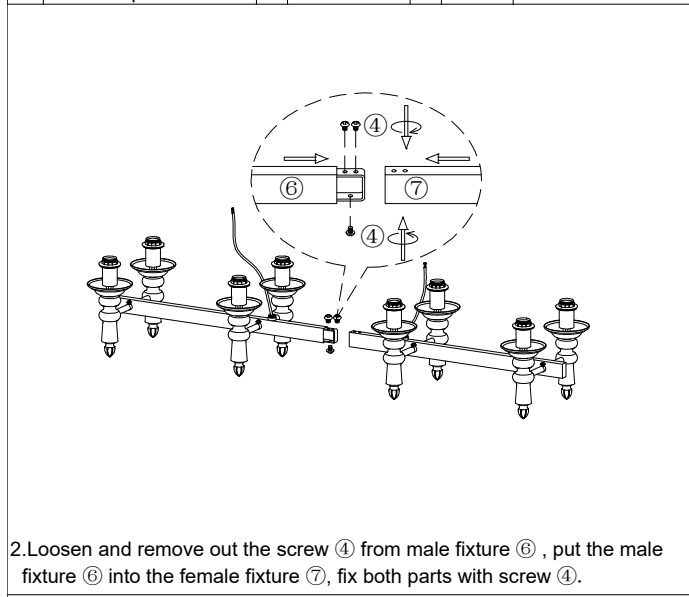

Please read carefully before installation!!!
Note: Please make sure that the electricity is powered off during installation !
Only a professional electrician should install this kind of product !