


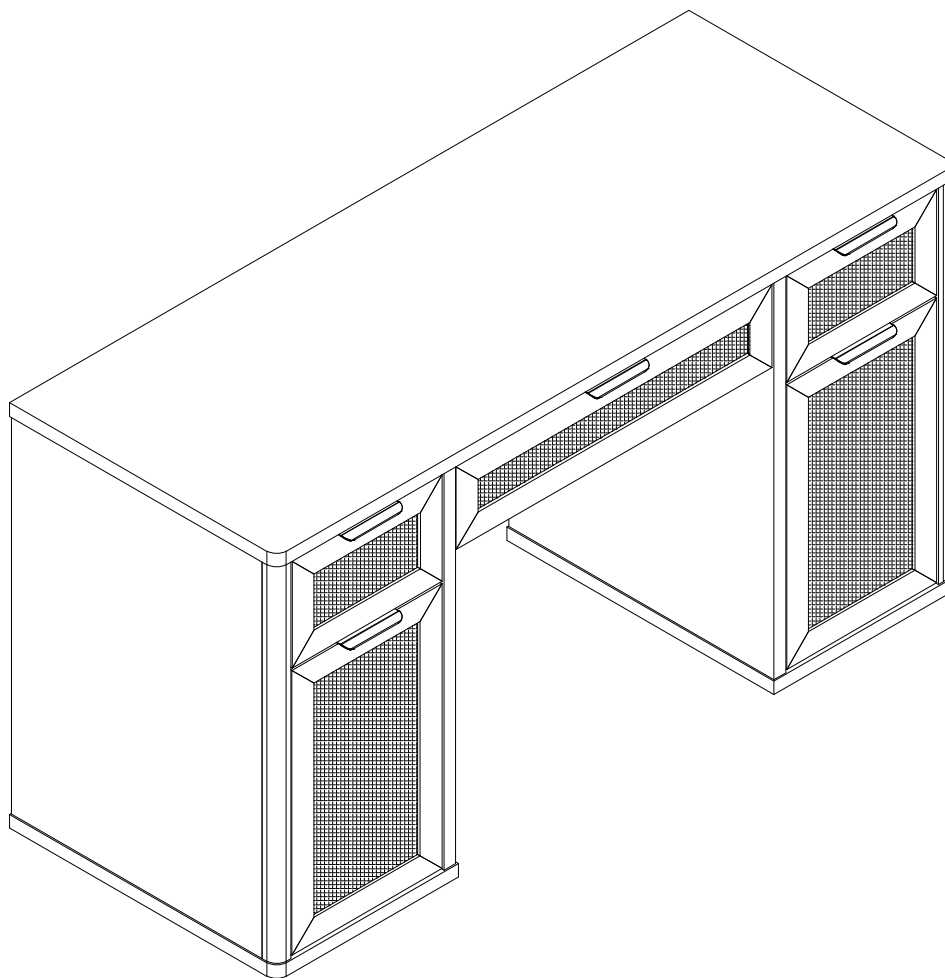

ATTENTION

If there is any missing, please kindly send us messages to let us know the part number of missing part regarding to the first page of instructions.

Please also provide your full address, recipient name and contact phone number so that we can send replacement to you as soon as possible.

Children have died from furniture tipover. To reduce the risk of furniture tipover. ALWAYS install tipover restraint provided.



BEFORE STARTING

Before Using Product


- Read each step carefully before starting. It is very important that each step is performed in the correct order. If these steps are not followed in sequence, assembly difficulties will occur.
- Make sure all parts are included.
- Work in a spacious area and near where the unit will be used, preferably on a carpet, or use a piece of the cardboard packaging to protect your floor and product.
- For a smooth assembly process, we suggest you keep a lite tightness for all the screws during assembly. After the whole product is assembled, firmly tighten all the screws.



WARNING


- Do not allow children to climb on unit.
- Avoid sharp objects or corrosive chemicals to prevent damage to the product.
- During assembly, keep parts and packaging materials away from children and pets as there could be potential injury and choking hazards.
- Please make sure that all objects are removed before moving the assembled unit.
- The unit must be team lifted, not dragged or pushed. Failure to do so could cause instability, product collapse, and/or serious injury.
- Be careful when using power tools to assemble your furniture. Power tools may strip or damage the parts.

QUICKFIT

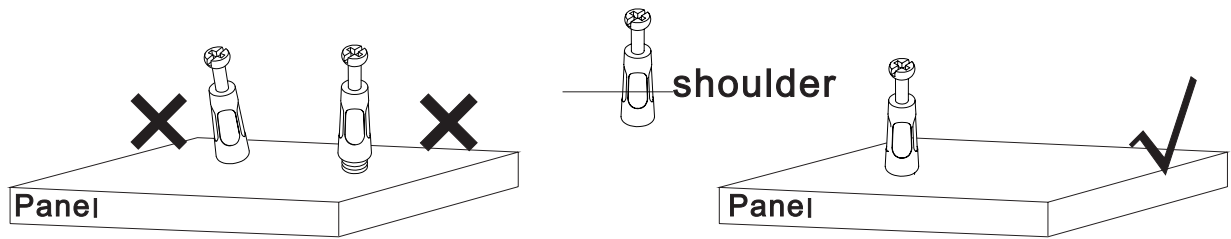


Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.


CAM LOCK

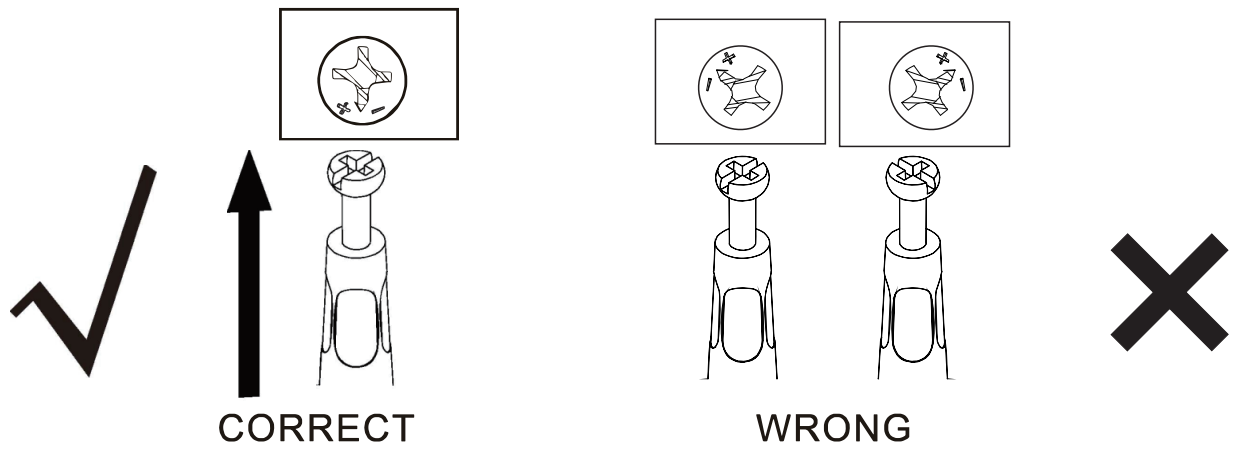

When fitting cam lock, ensure starting position is correct before you insert cam lock to quickfit.

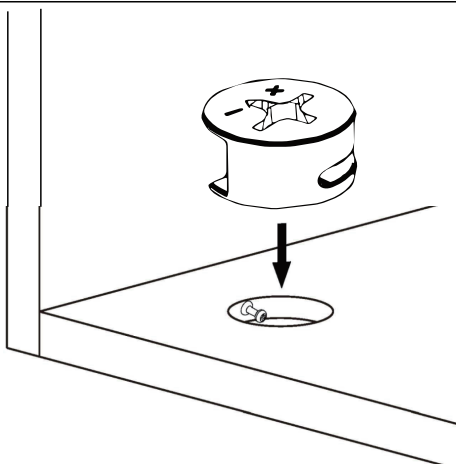


Quickfit head should be in the center of the cam lock. When the two panels are joined. Cam lock should be inserted before quickfit.
















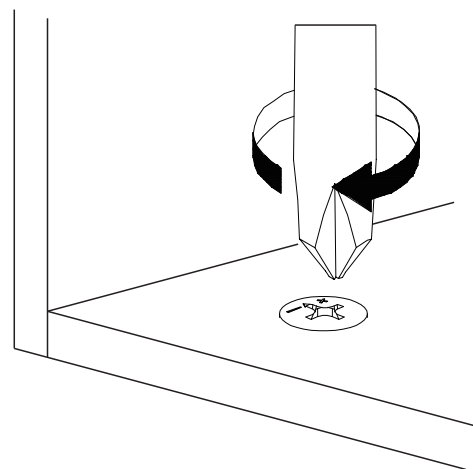


Turn cam lock clockwise to tighten.









PART LIST

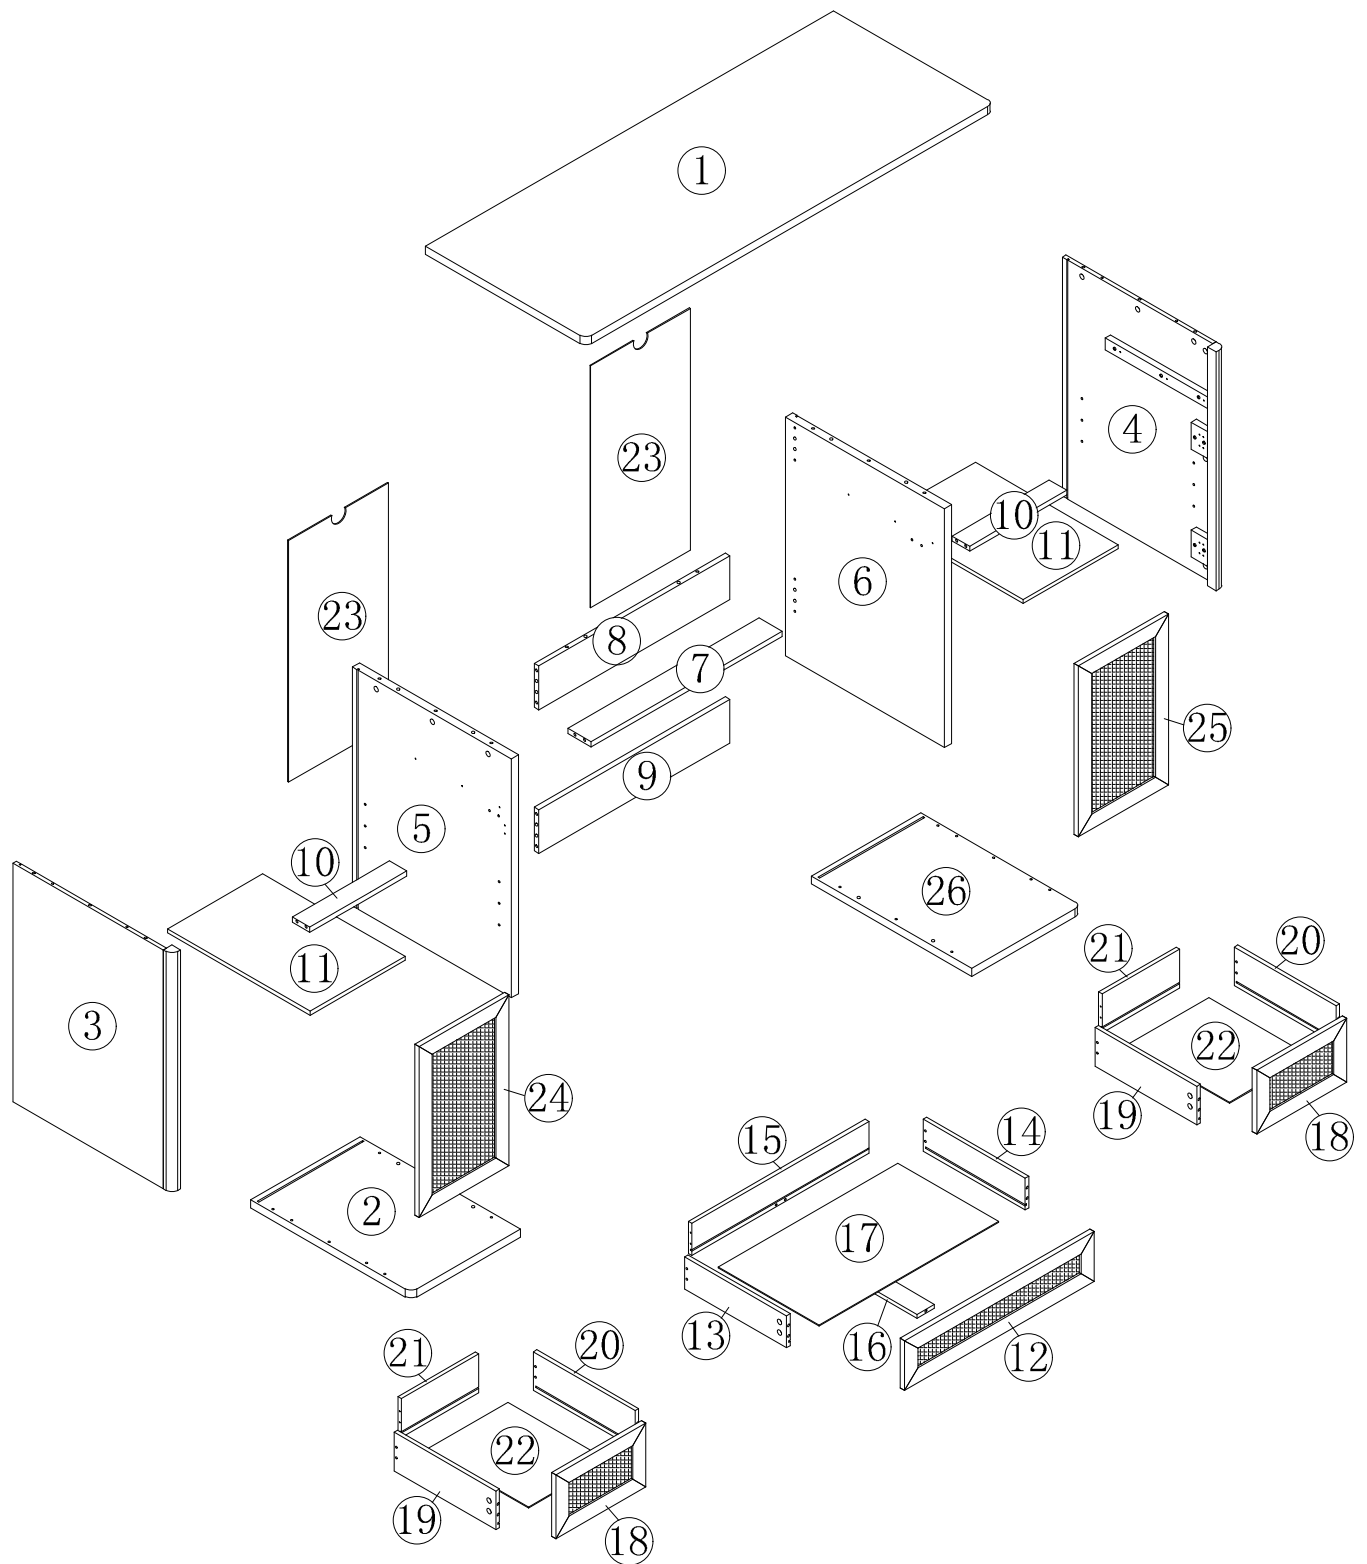












PART LIST

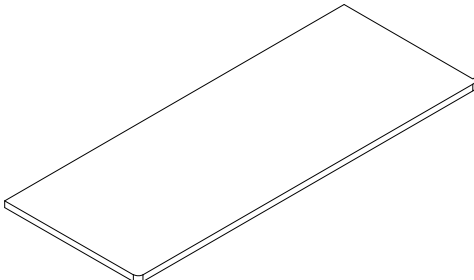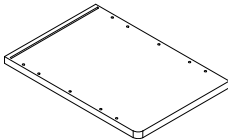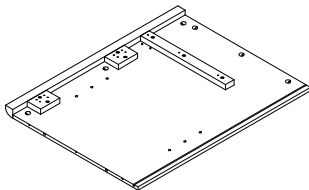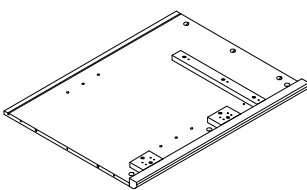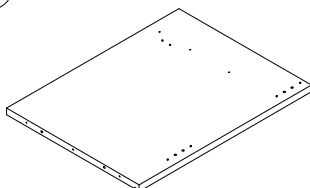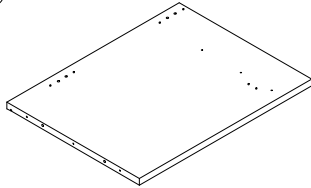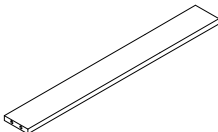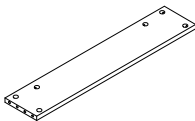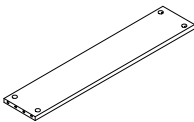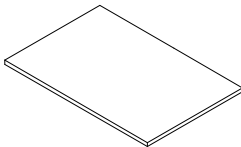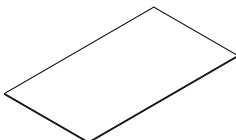①  1PC	②  1PC	
③  1PC	④  1PC	⑤  1PC
⑥  1PC	⑦  1PC	⑧  1PC
⑨  1PC	⑩  2PCS	⑪  2PCS
⑫  1PC	⑬  1PC	⑭  1PC
⑮  1PC	⑯  1PC	⑰  1PC

PART LIST

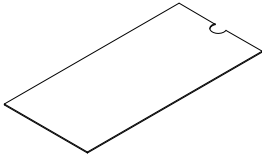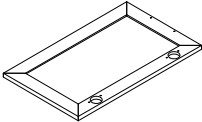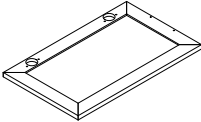
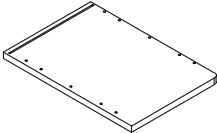
18  2PCS	19  2PCS	20  2PCS
21  2PCS	22  2PCS	23  2PCS
24  1PC	25  1PC	26  1PC

HARDWARE LIST

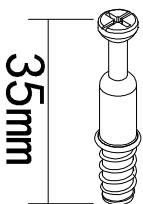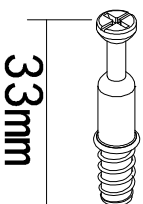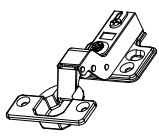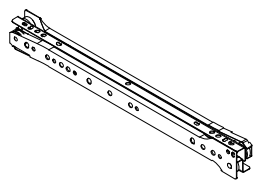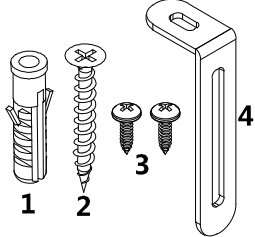
A  35mm ø6X35 (30+2)PCS	B  ø15X9.5 (47+3)PCS	C  33mm ø6X32 (17+1)PCS
D  ø8X30 (18+1)PCS	E  ø5X40 (26+2)PCS	F  5PCS
G  4PCS	H  (8+1)PCS	I  ø3X15 (12+1)PCS
J  3SET	K  ø3X12 (46+3)PCS	L  1 2 3 4 2SET
M  ø3.5X14 (24+2)PCS	N  2PCS	O  (8+1)PCS
P  ø6X30 (8+1)PCS	Q  (8+1)PCS	 1PC
 2PCS		




J X 3SET

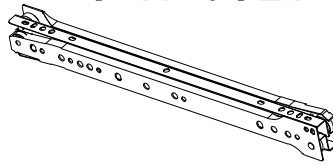


CL



CR




DL




DR



L =




1




2



3

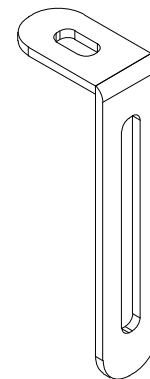


4

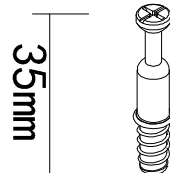

35mm

A

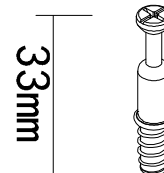

33mm

C



8mm


D



6mm


P

STEP 1

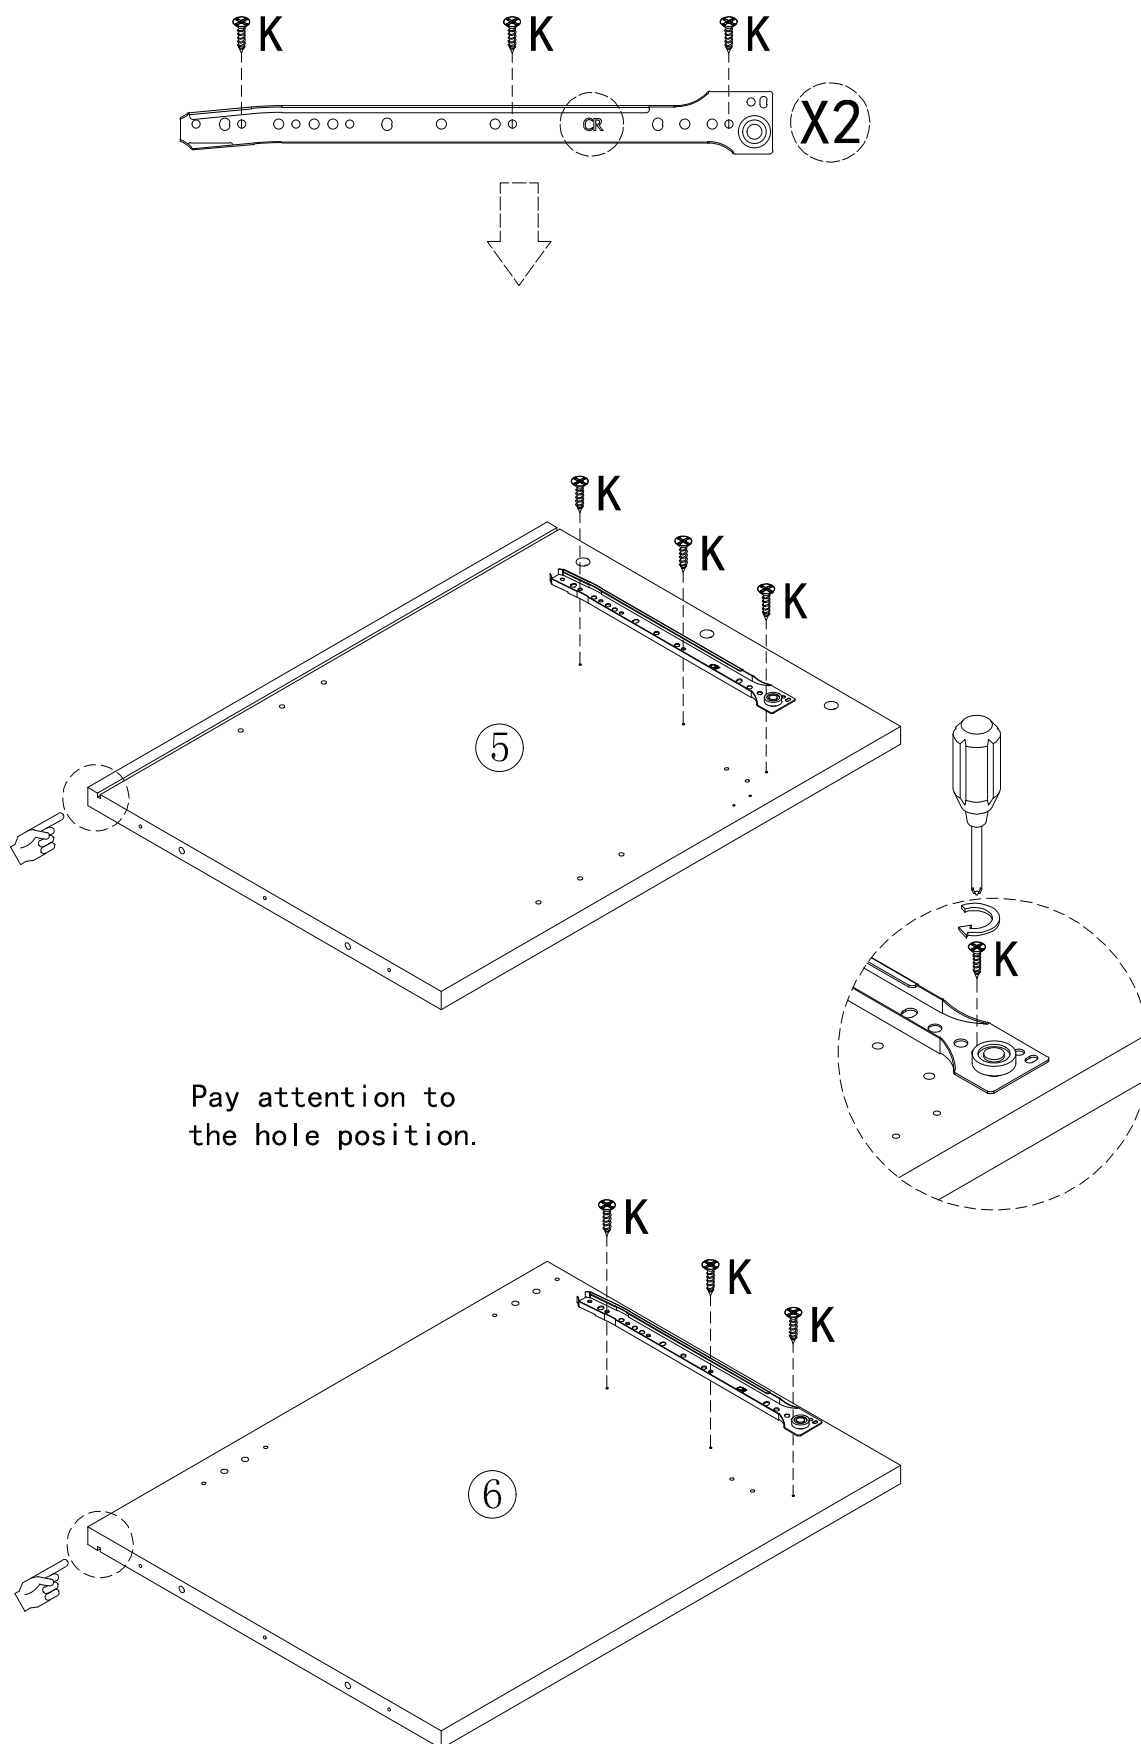


K X 6PCS

STEP 2


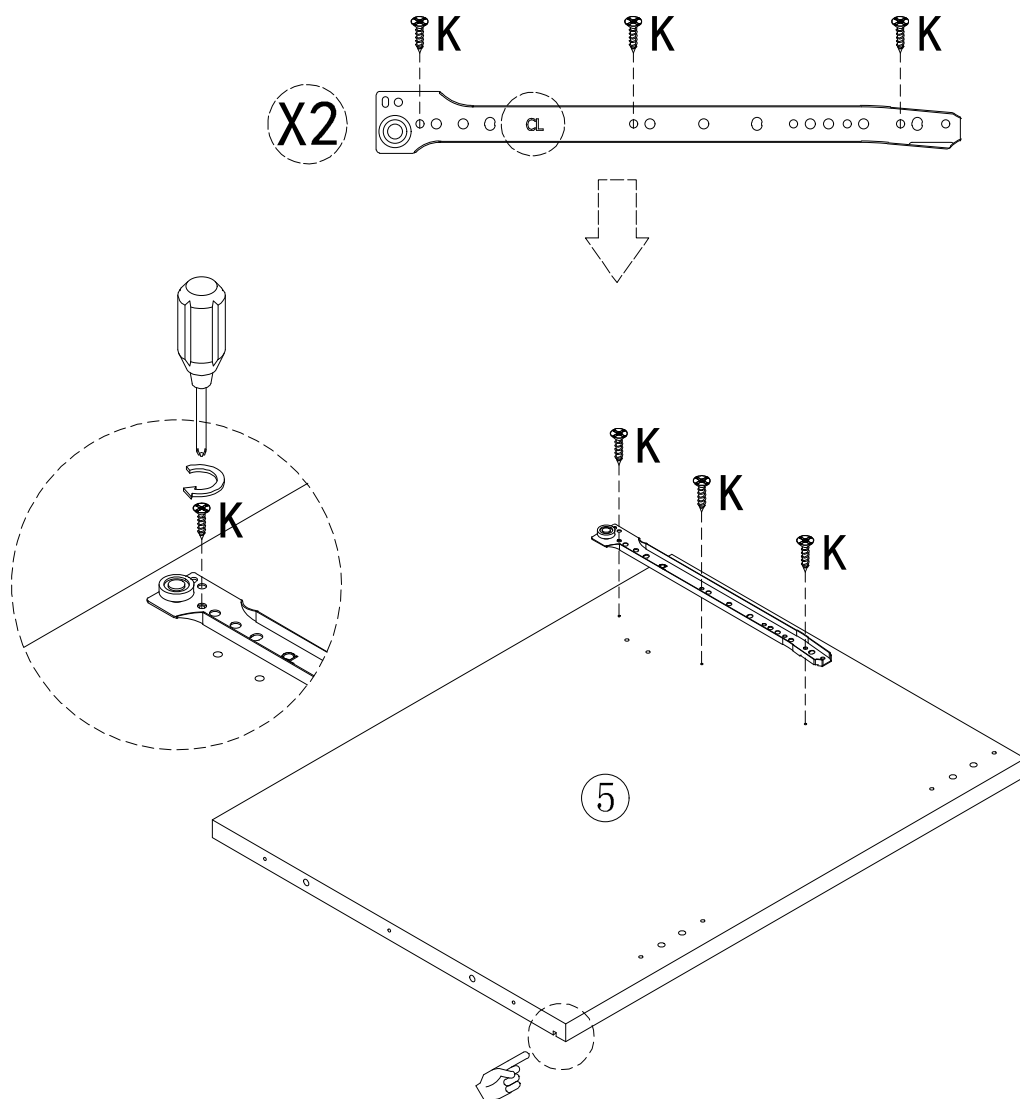


Pay attention to
the hole position.

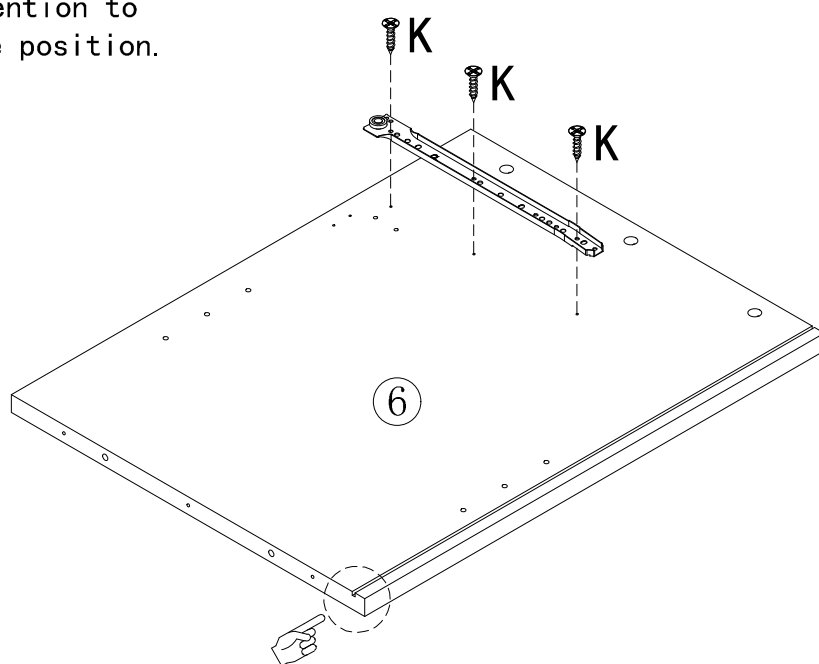


K X 6PCS

STEP 3

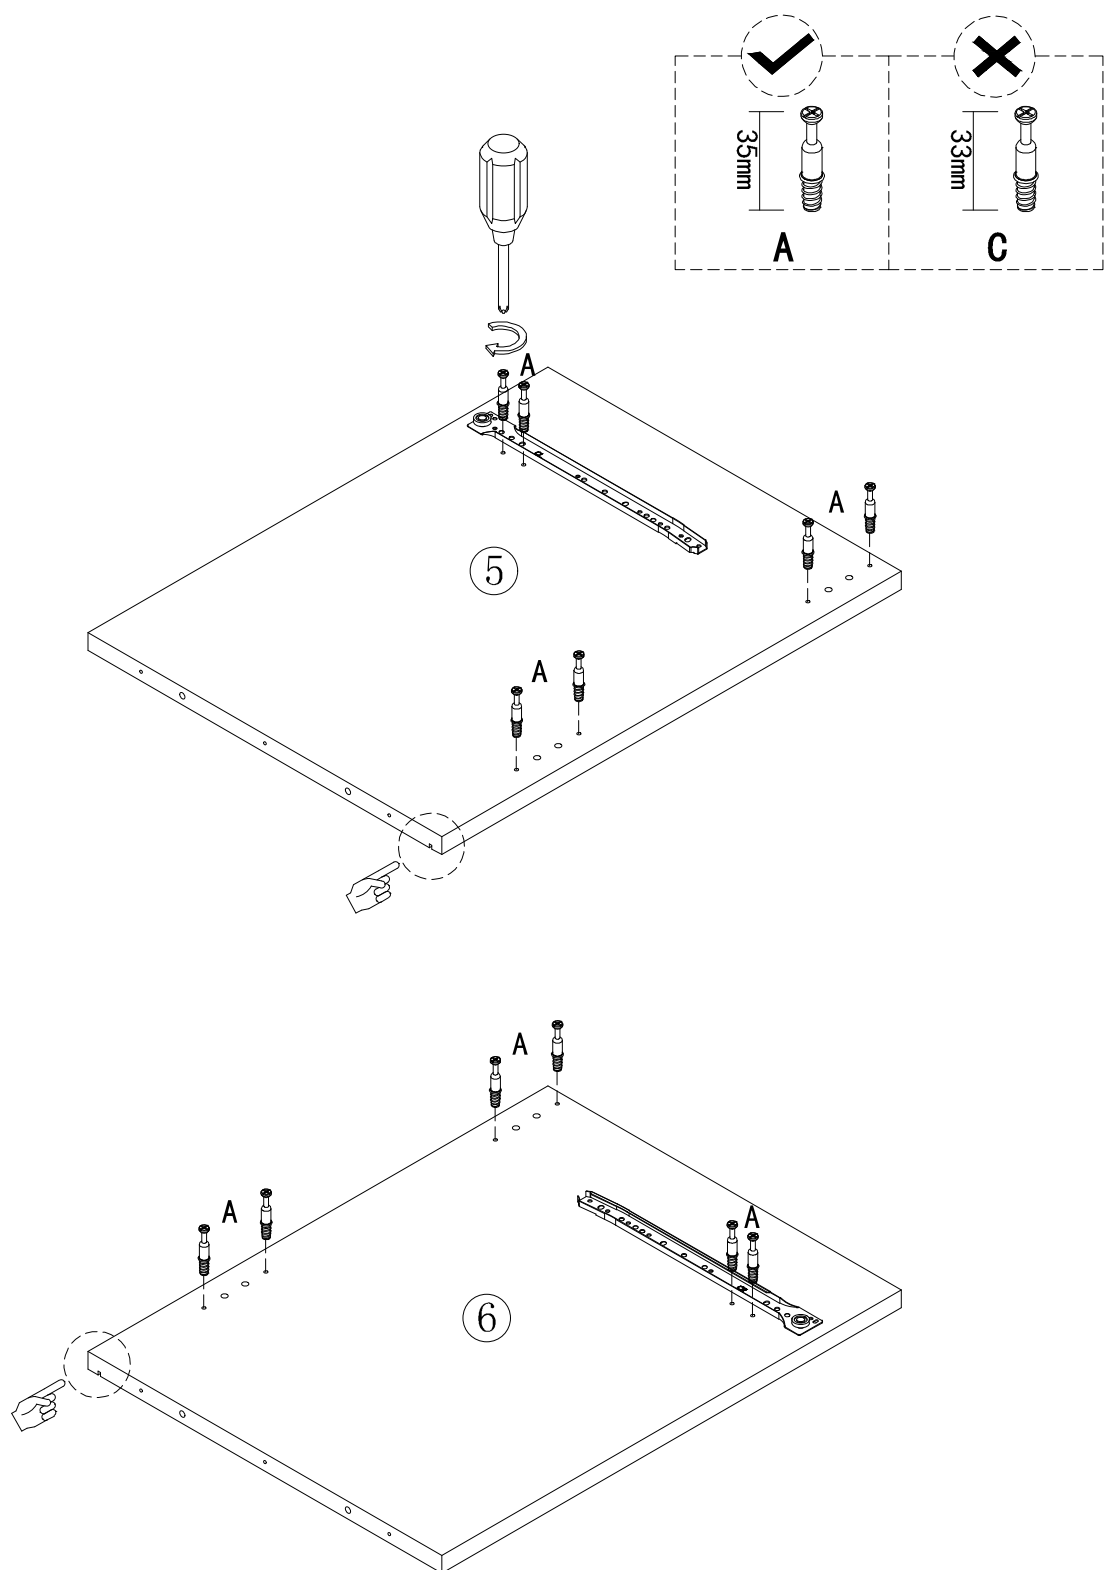


A X 12PCS

STEP 4

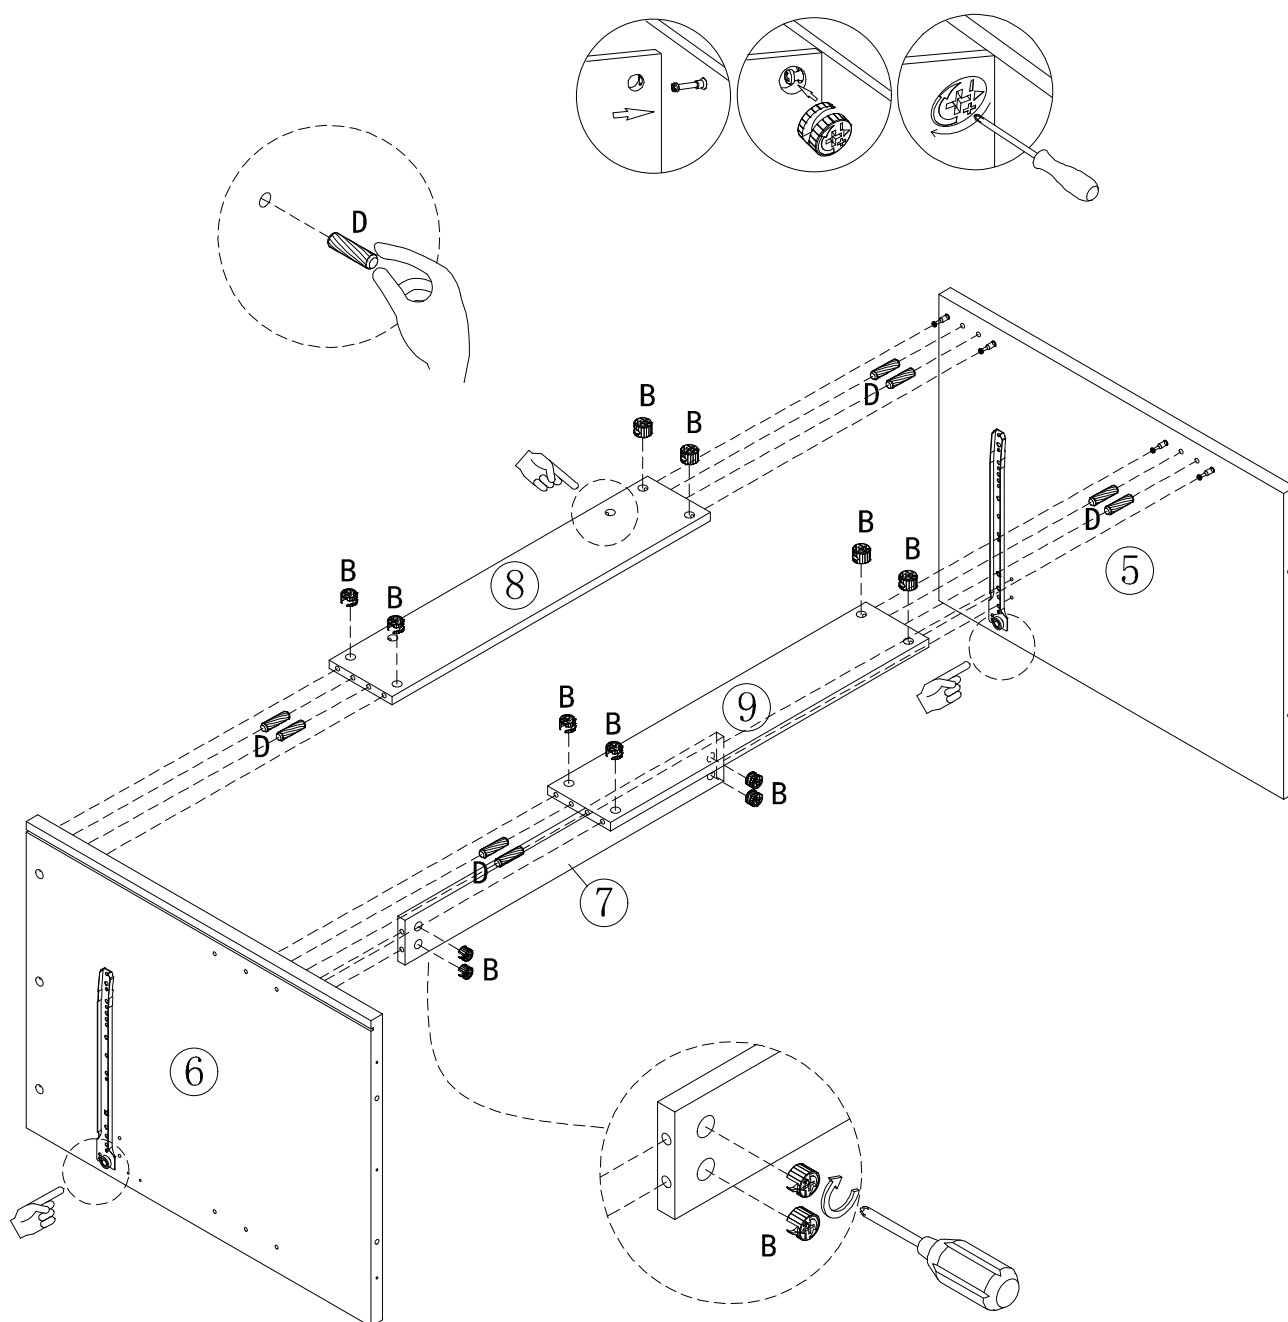


	B X 12PCS
	D X 8PCS




STEP 5

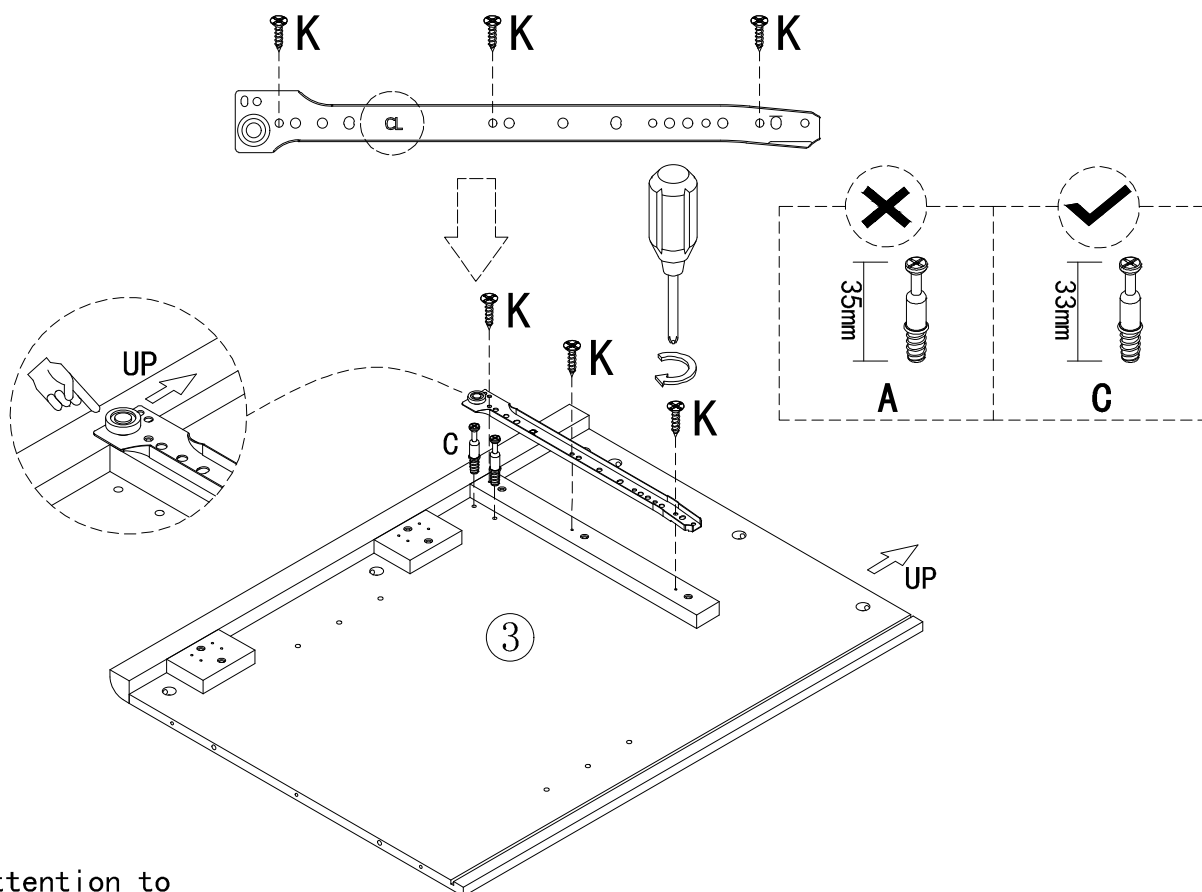

Pay attention to
the hole position.

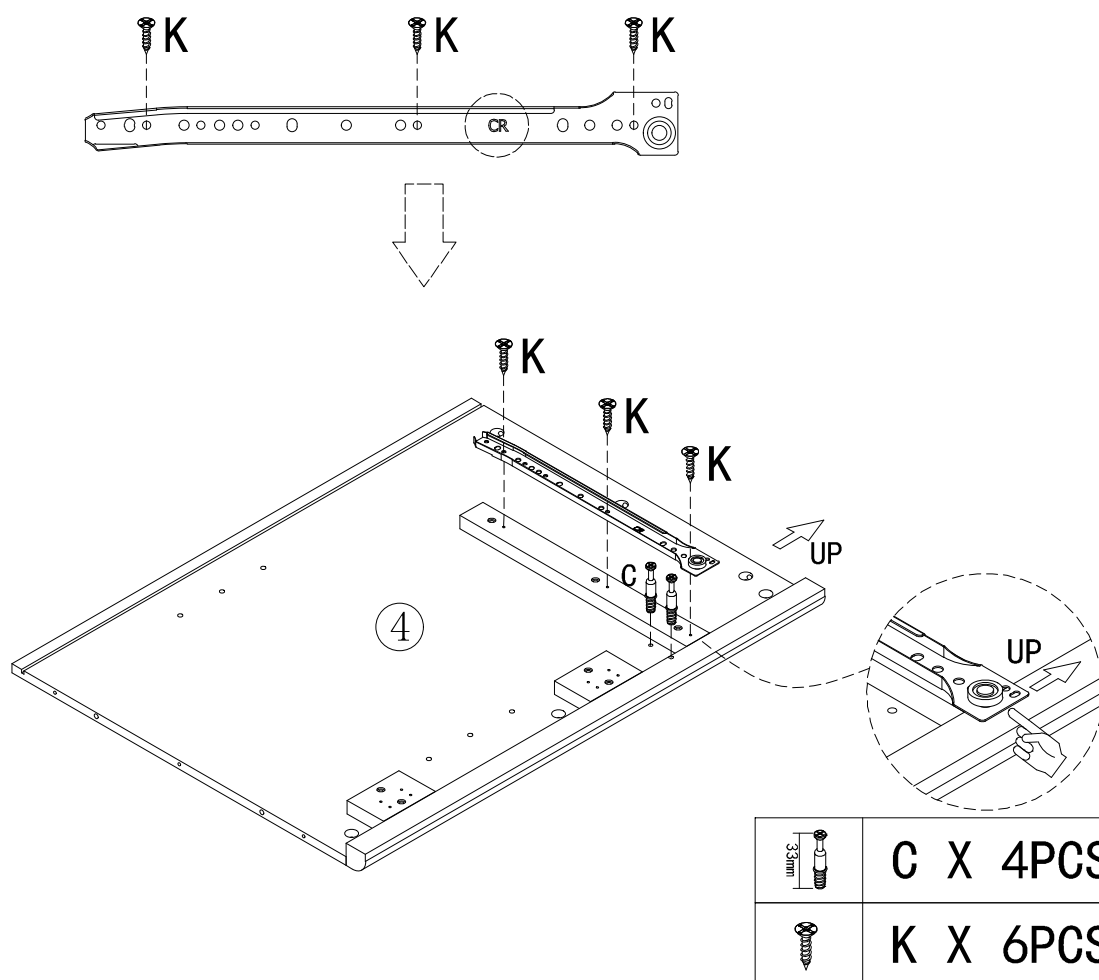


STEP 6

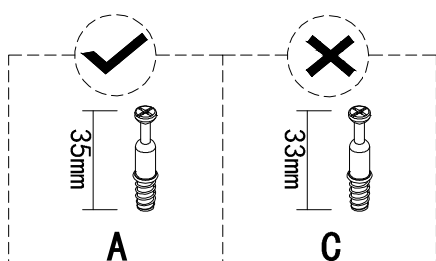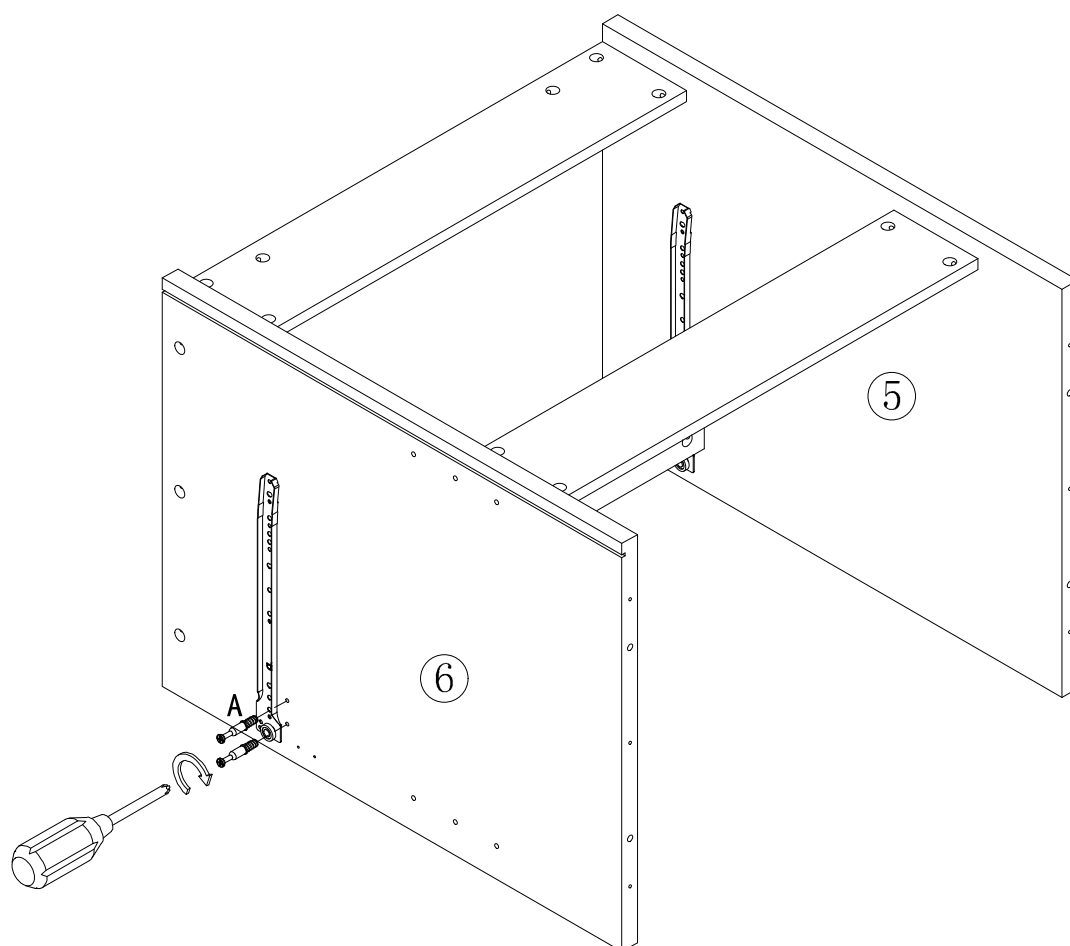




A X 2PCS

STEP 7

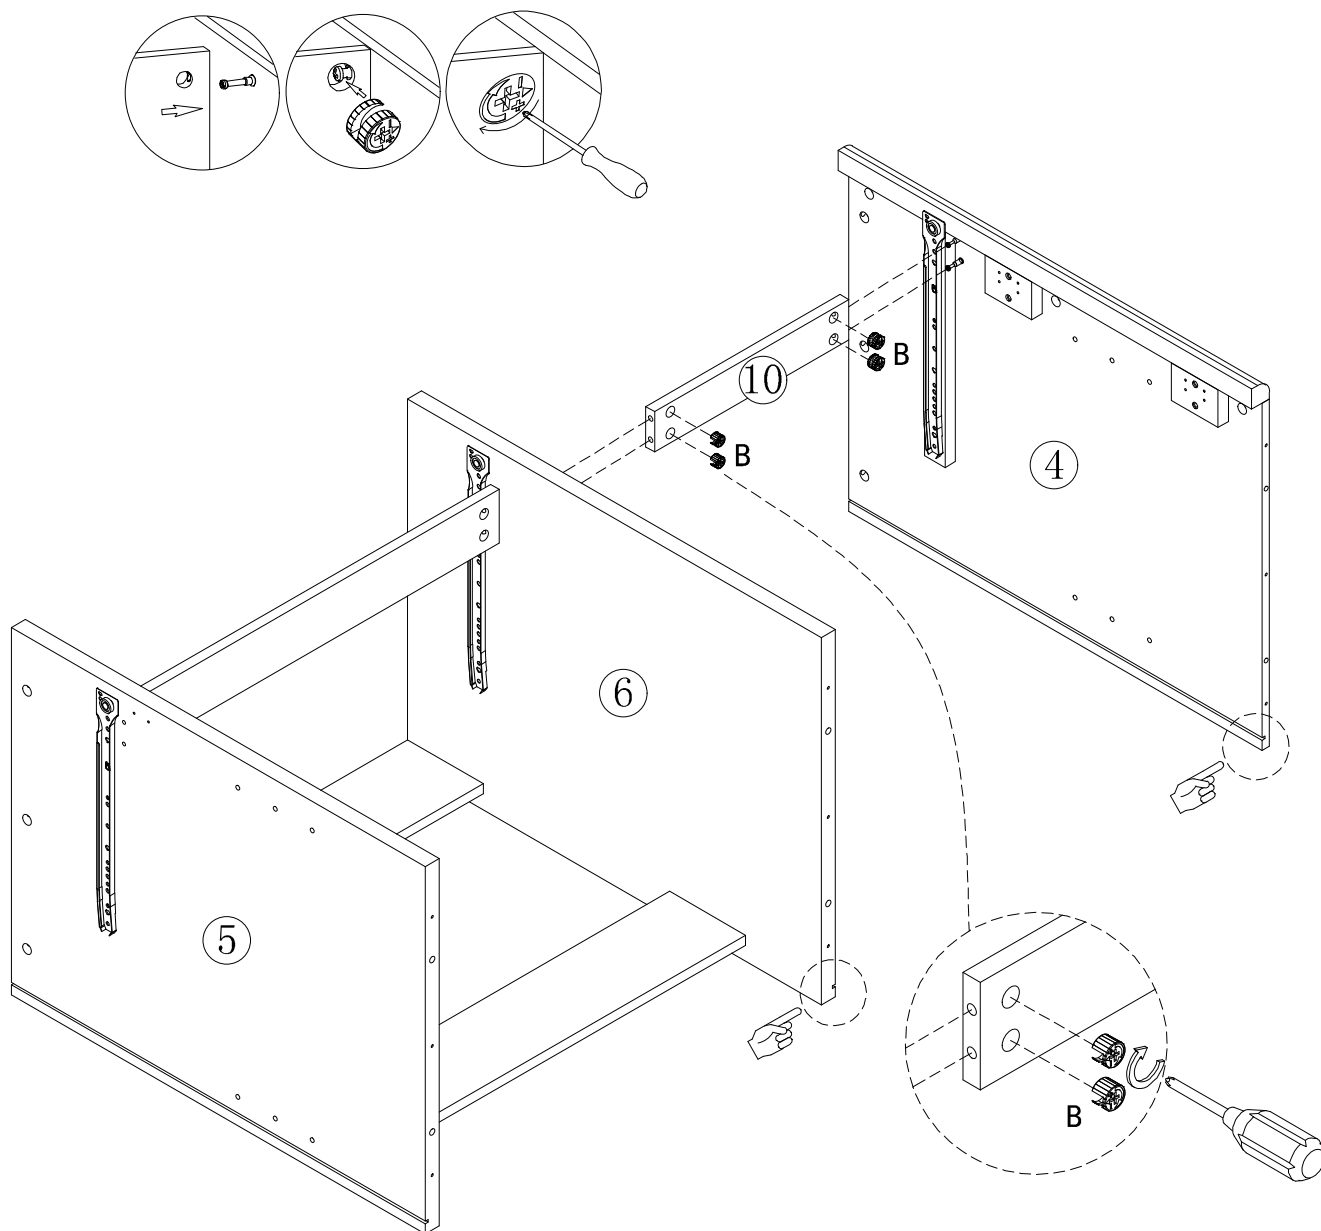


B X 4PCS

STEP 8

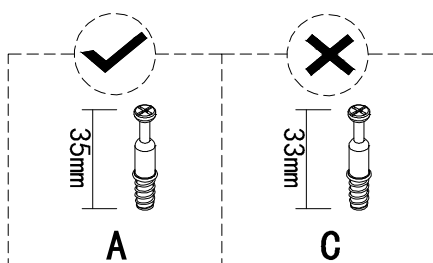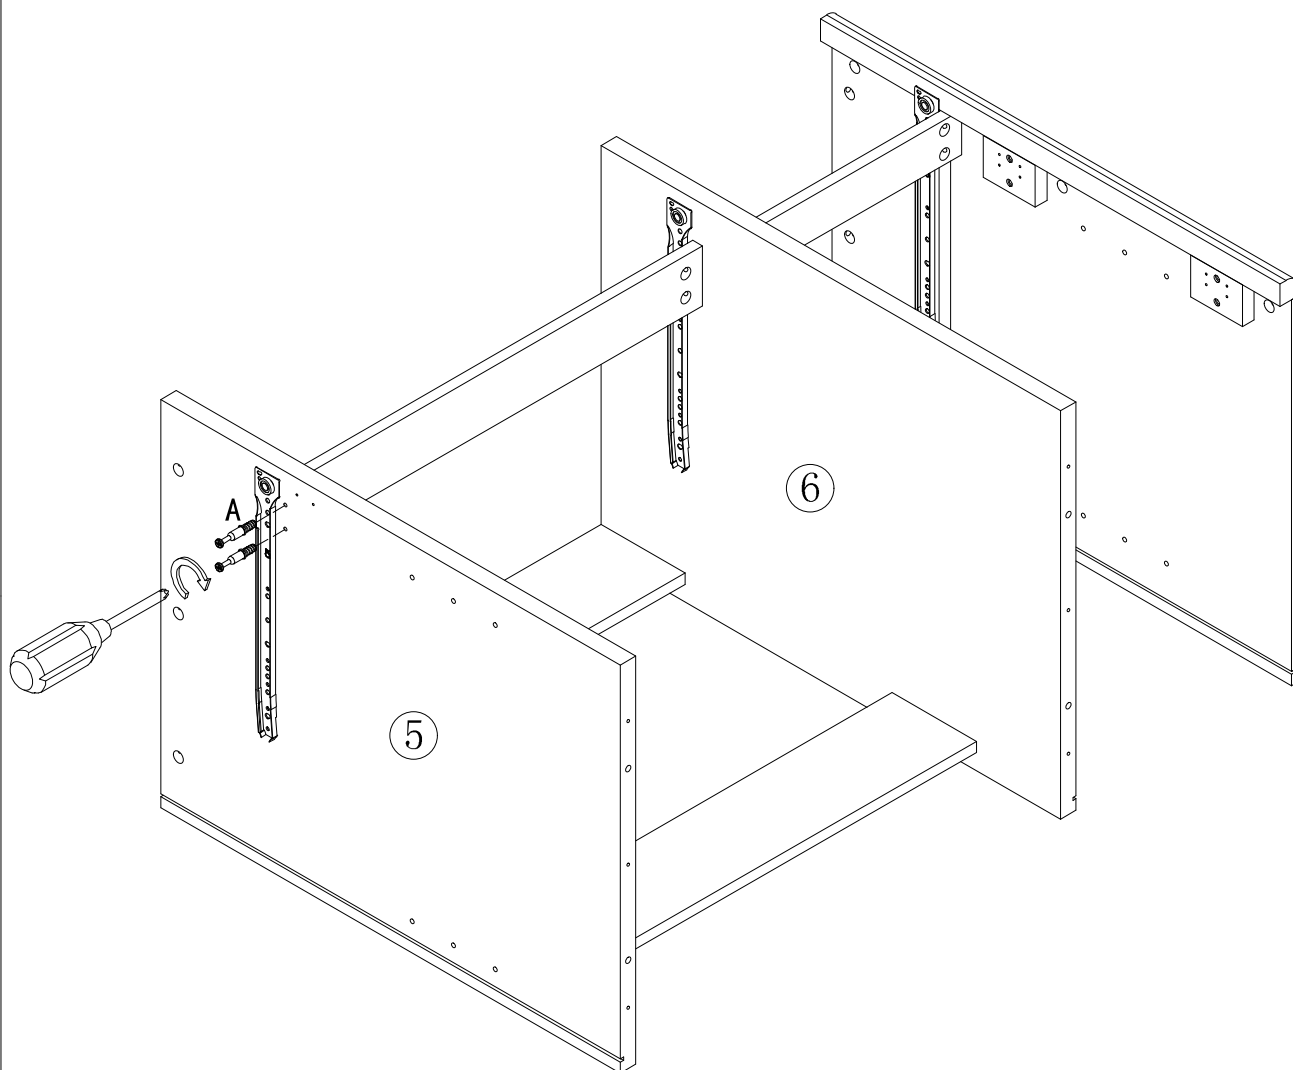


A X 2PCS

STEP 9

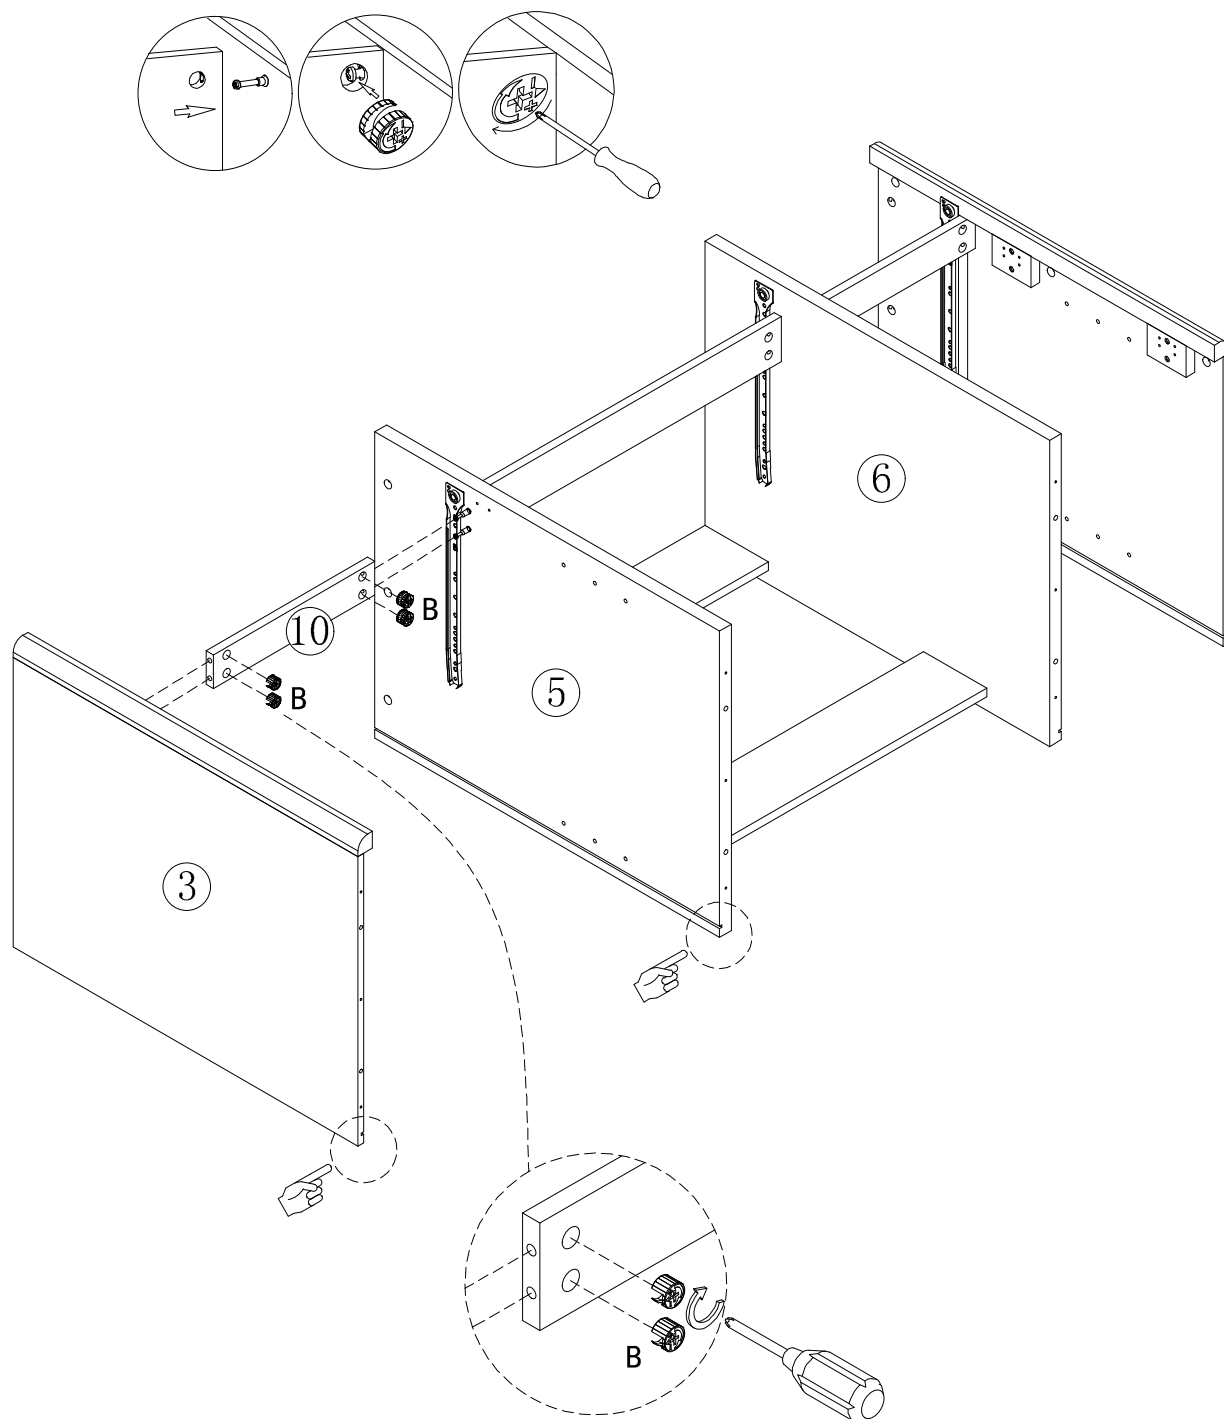


B X 4PCS

STEP 10

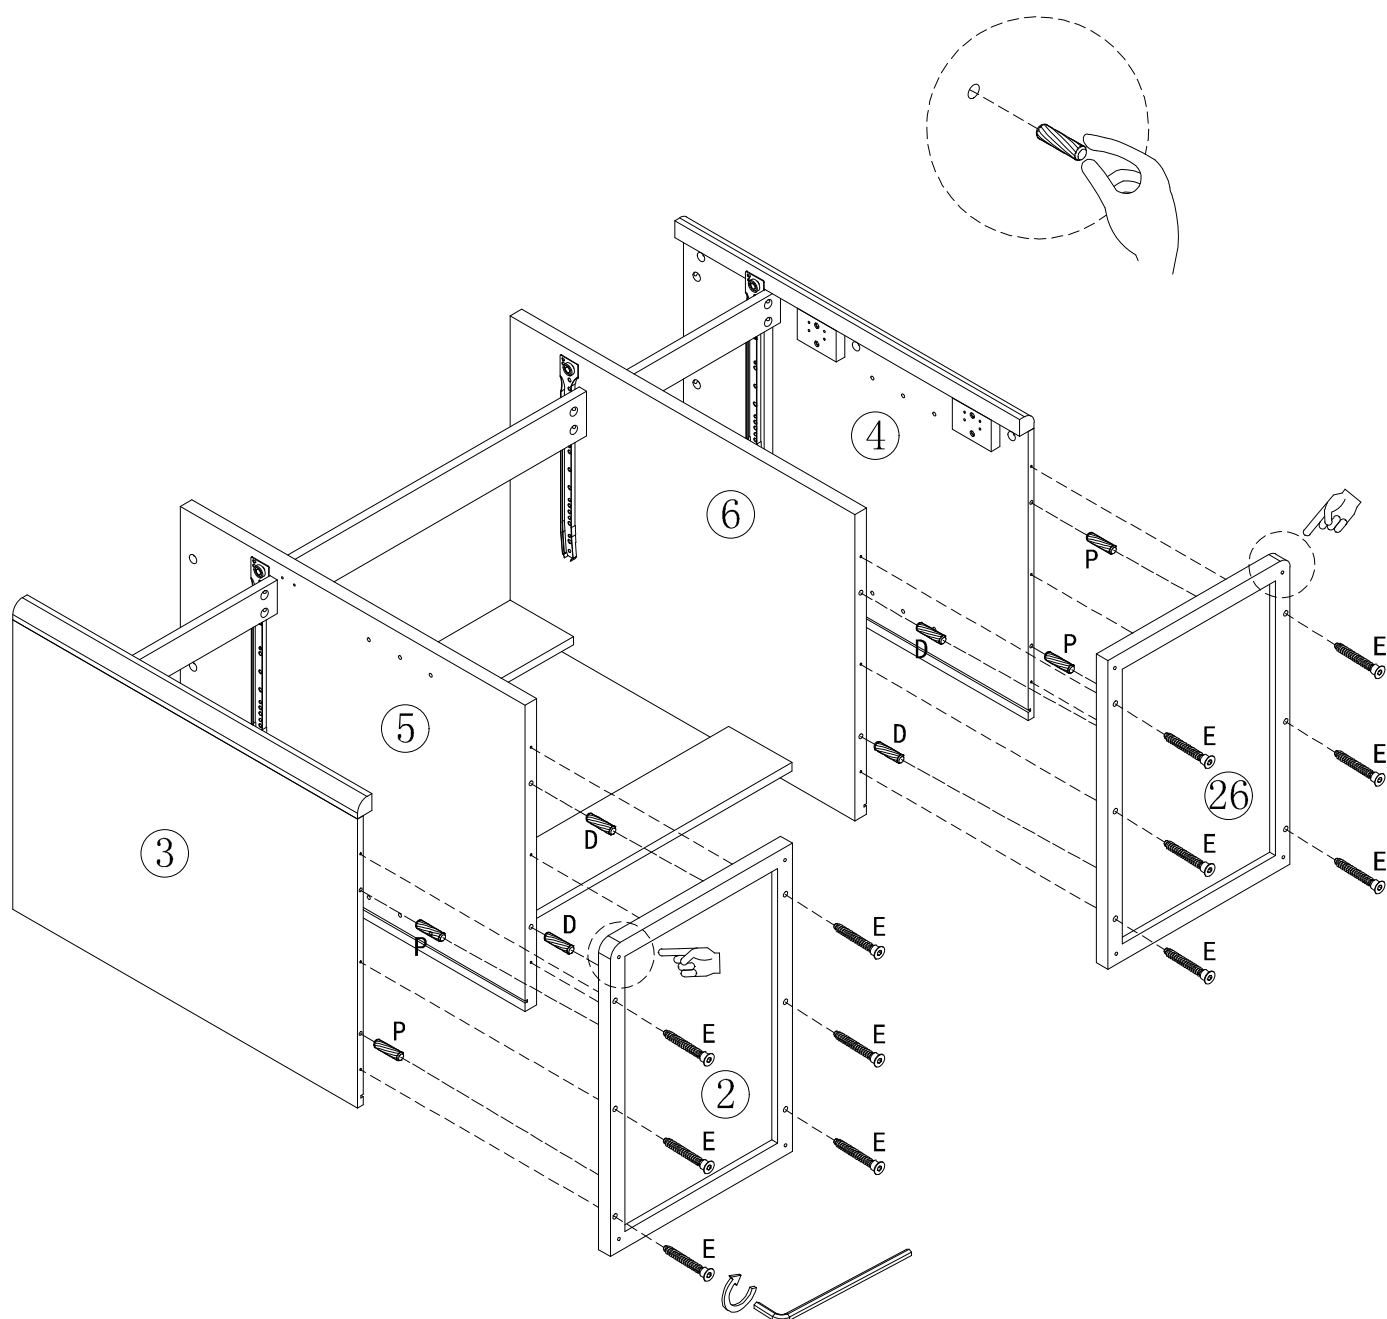


	D X 4PCS
	E X 12PCS
	P X 4PCS

STEP 11

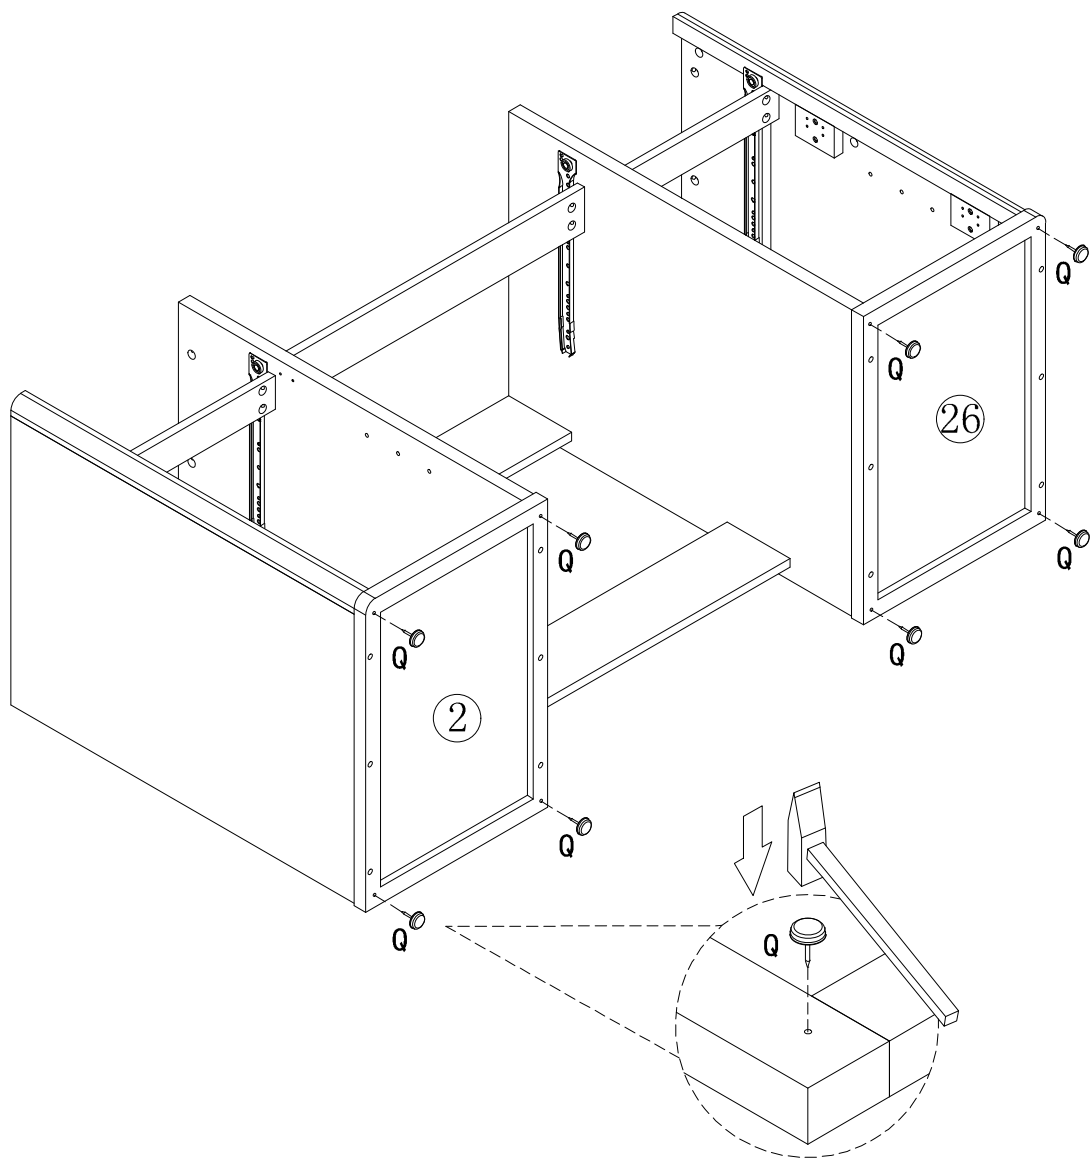





Q X 8PCS

STEP 12

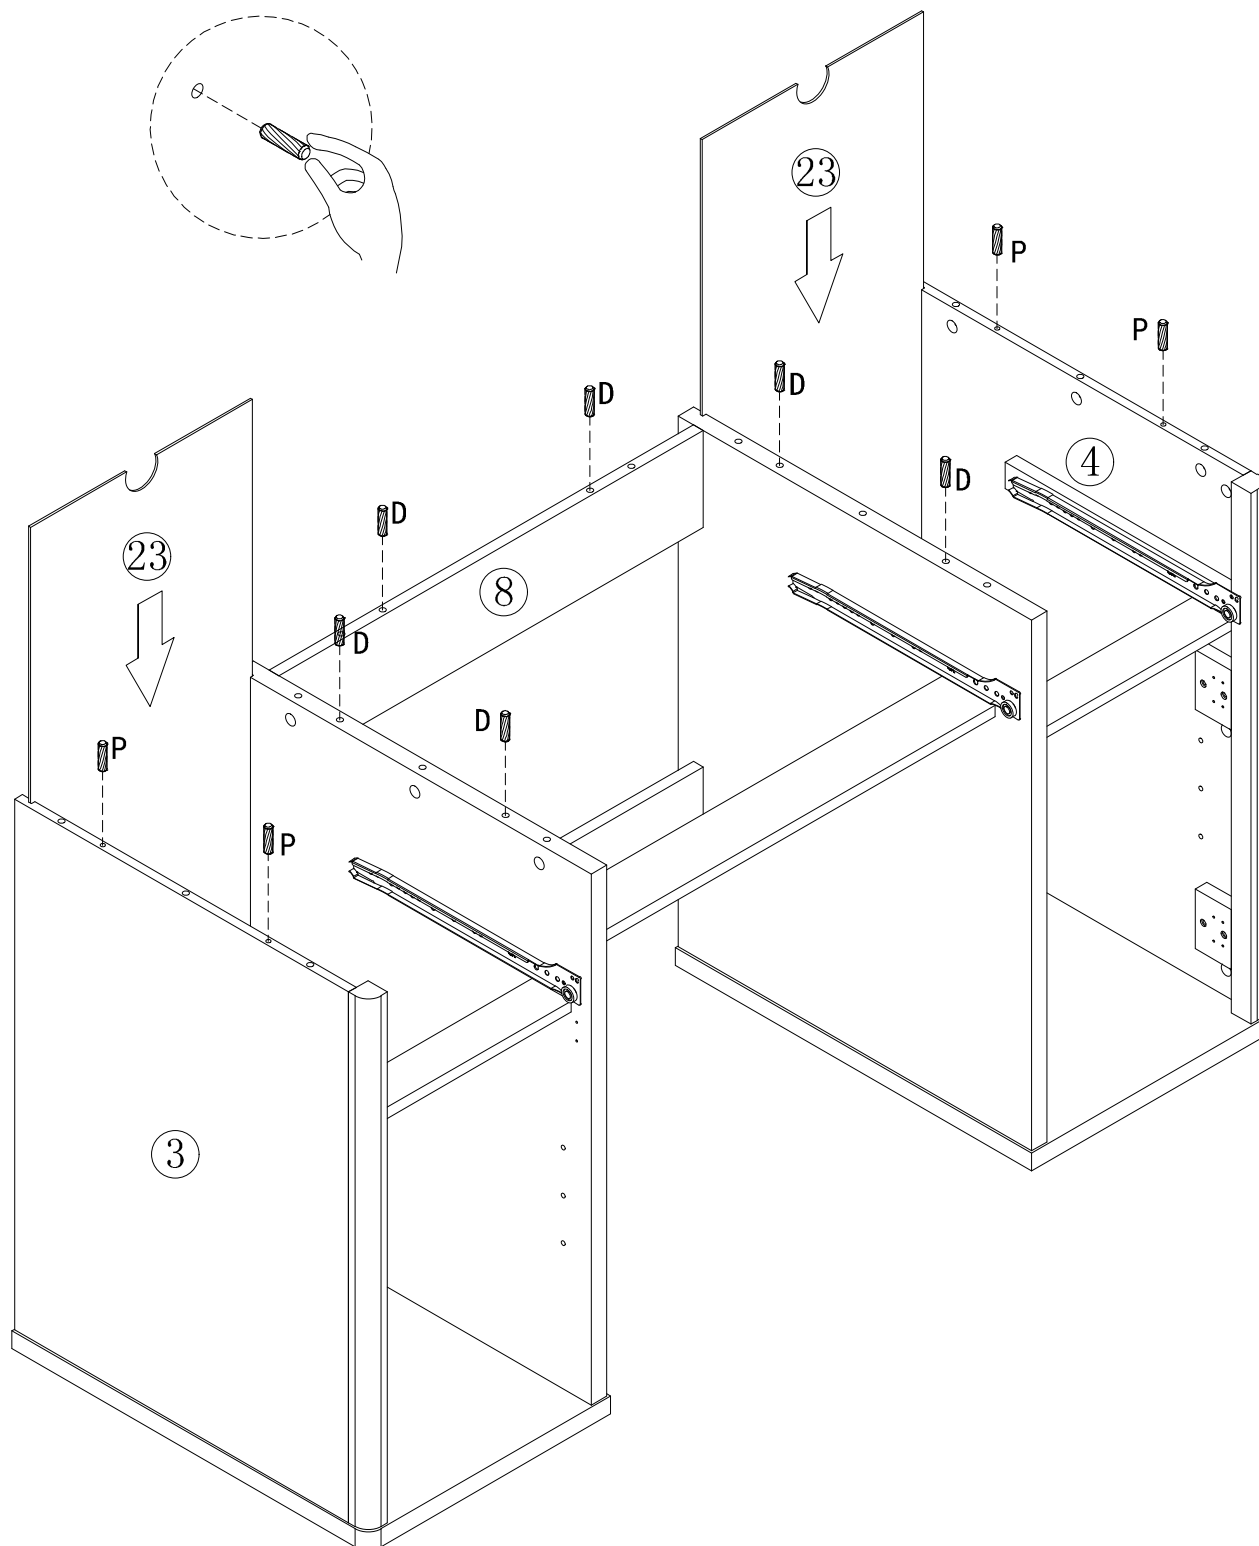


	D X 6PCS
	P X 4PCS

STEP 13

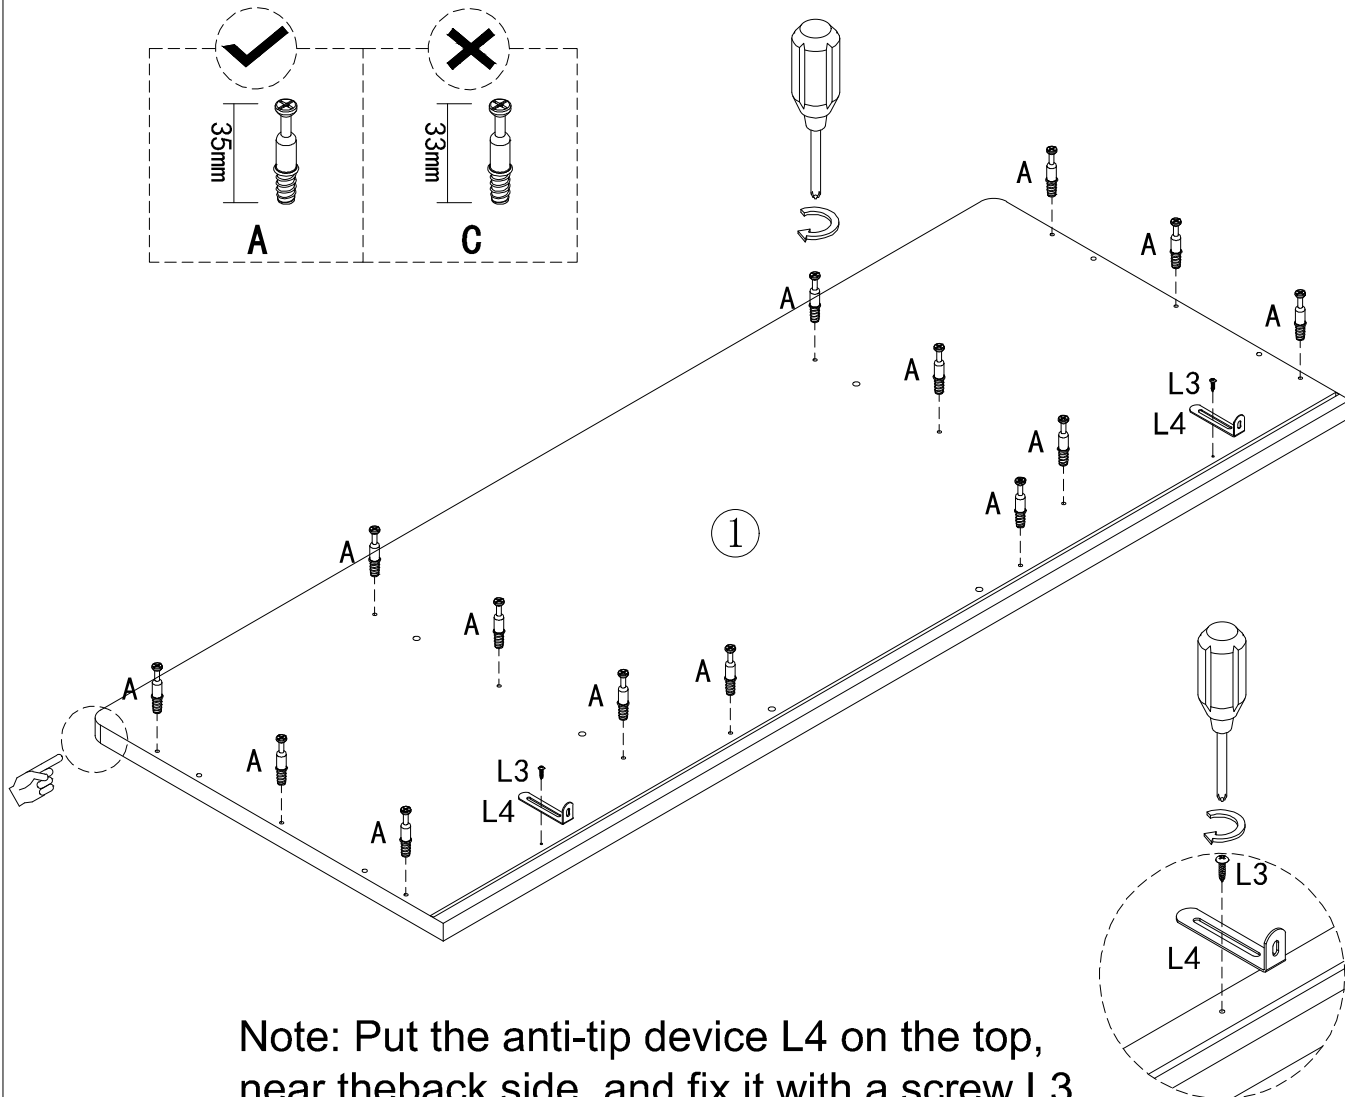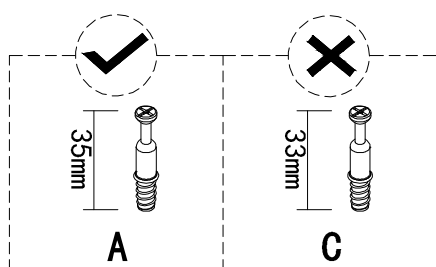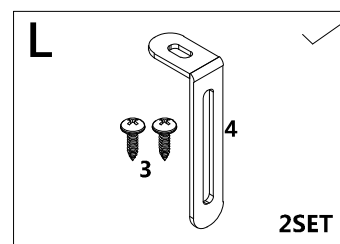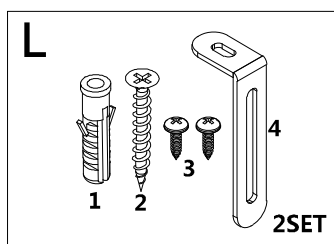


Note: Put the anti-tip device L4 on the top, near the back side, and fix it with a screw L3.

A X 14PCS

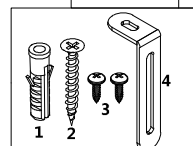

L X 2SET


STEP 14

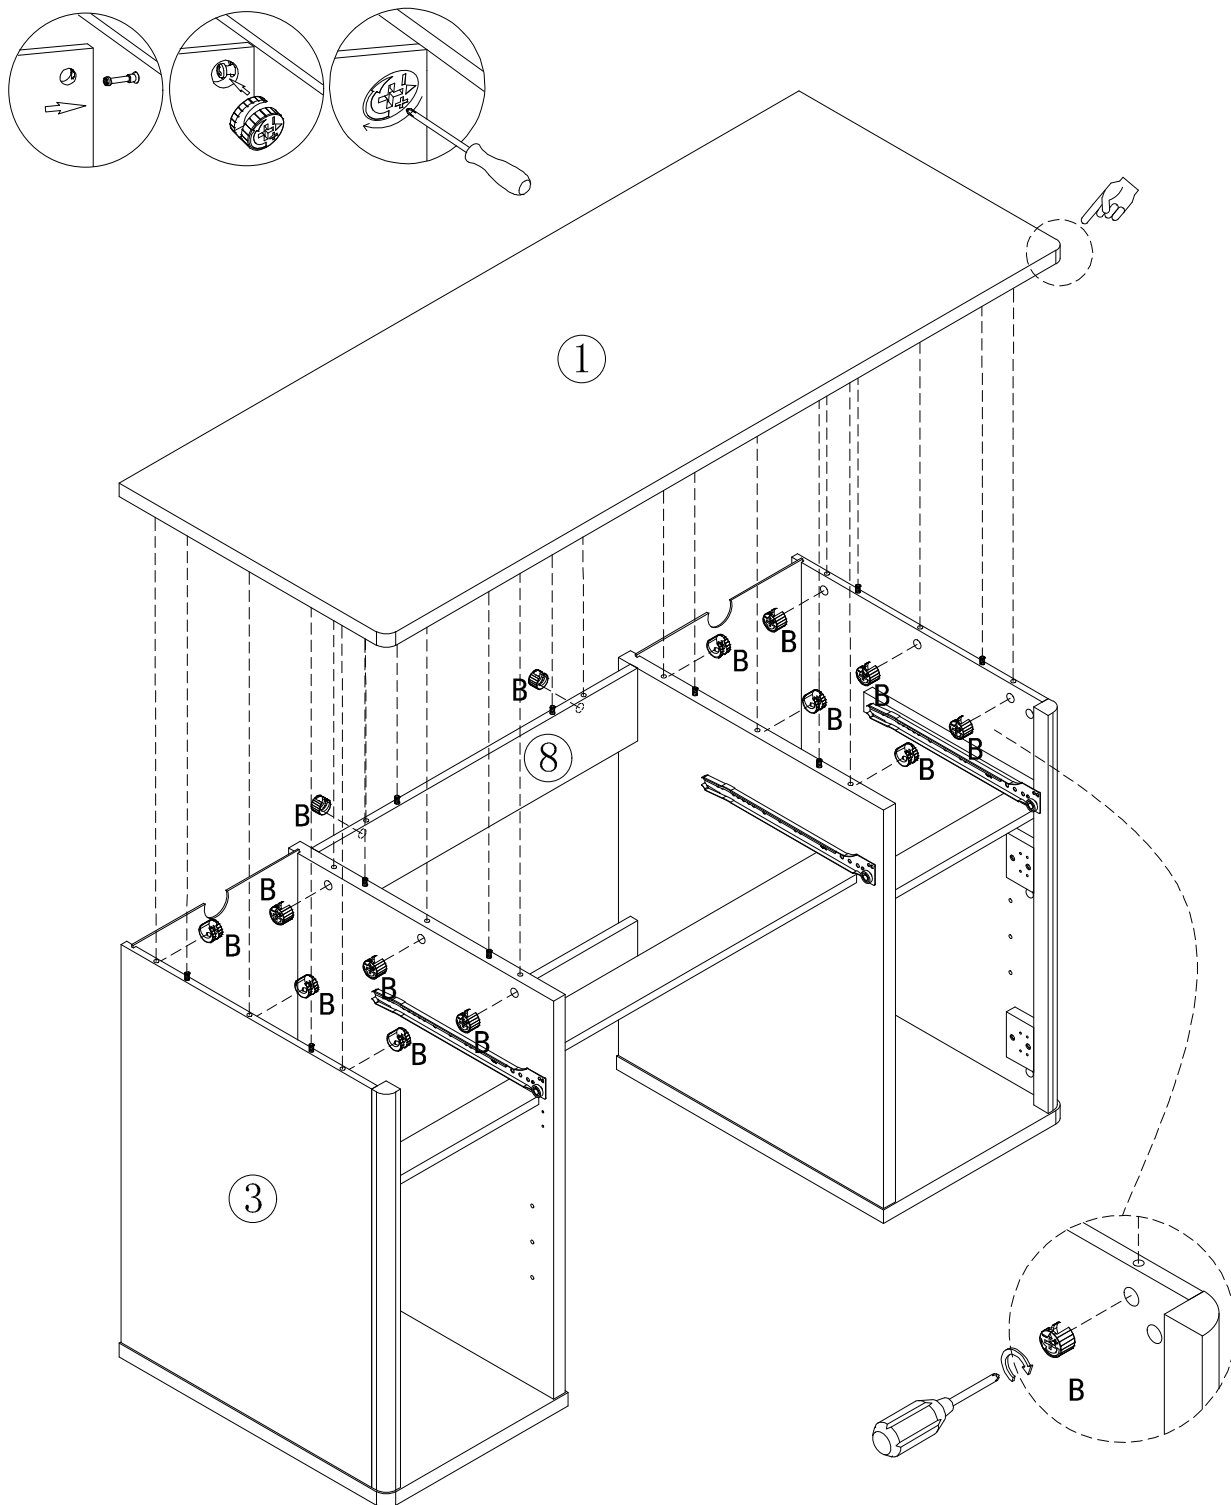

B X 14PCS


STEP 15

NOTE: To prevent the cabinet from wobbling please be sure to install the back panel fasteners.

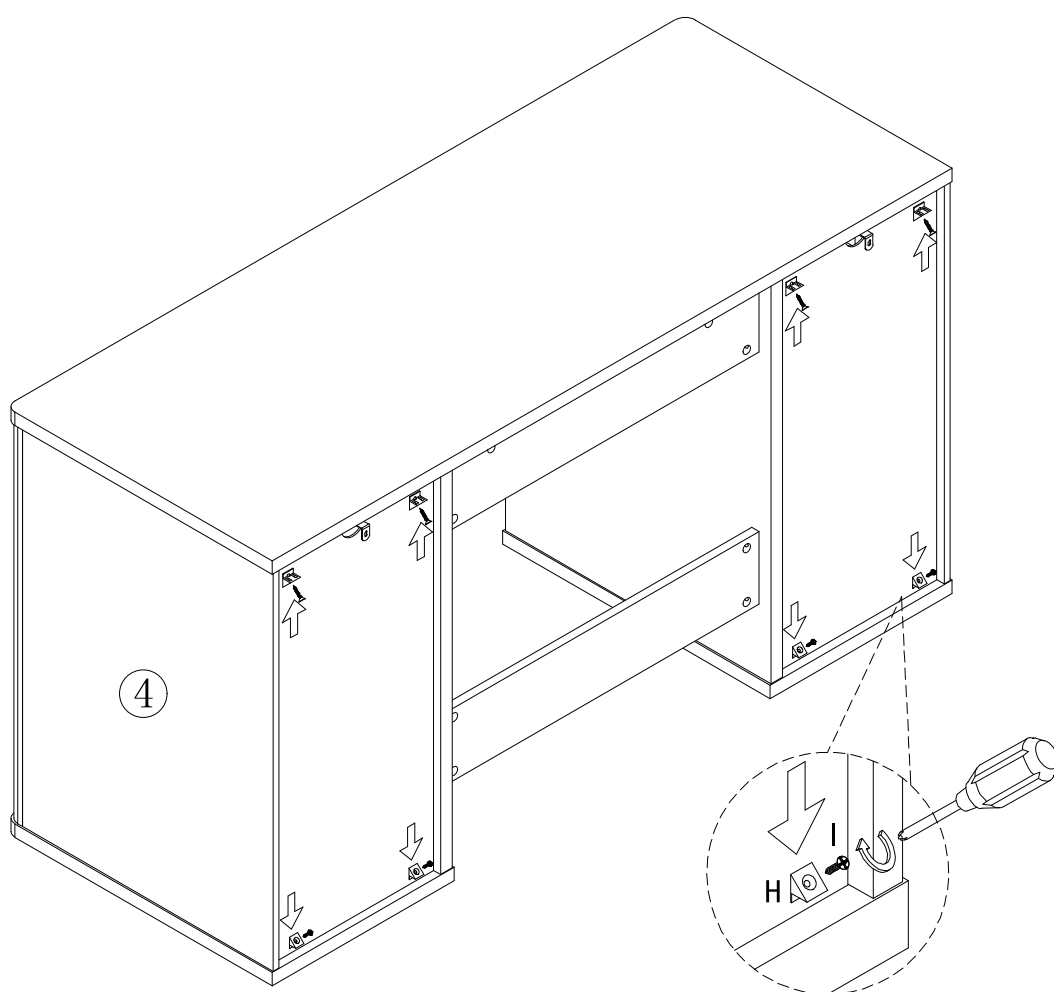

	H X 8PCS
	I X 8PCS




STEP 16

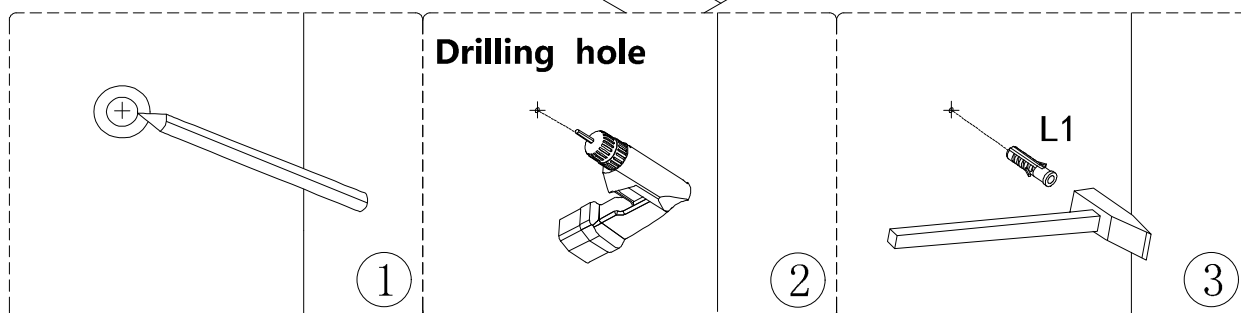


Drill a hole in the wall, then hammer the L1 into the wall with a hammer

Note: Follow step Link L4 and L1 with a L2 using a screwdriver, and assembly it tightly.

WALL



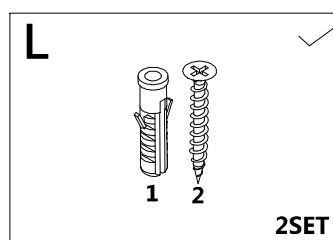
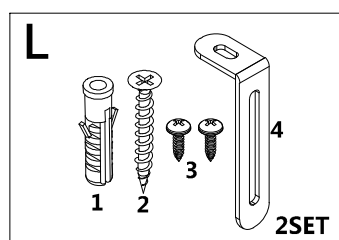
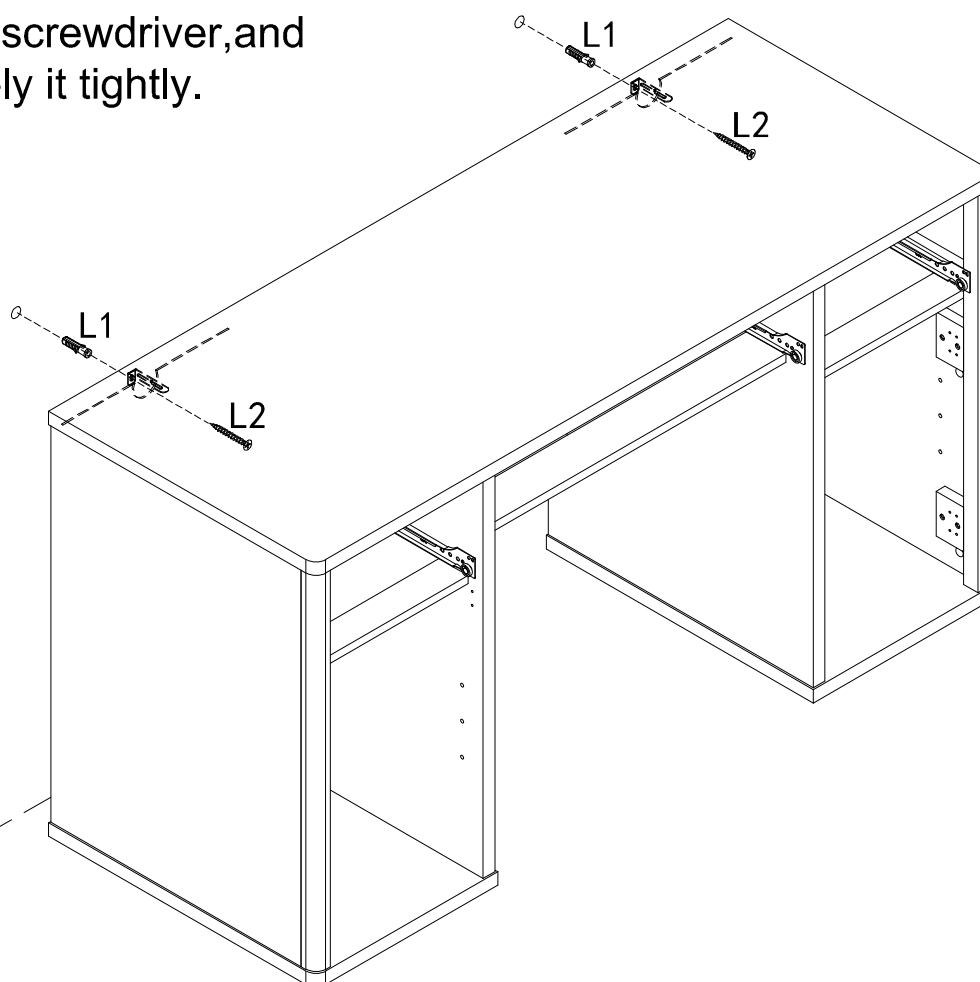


STEP 17

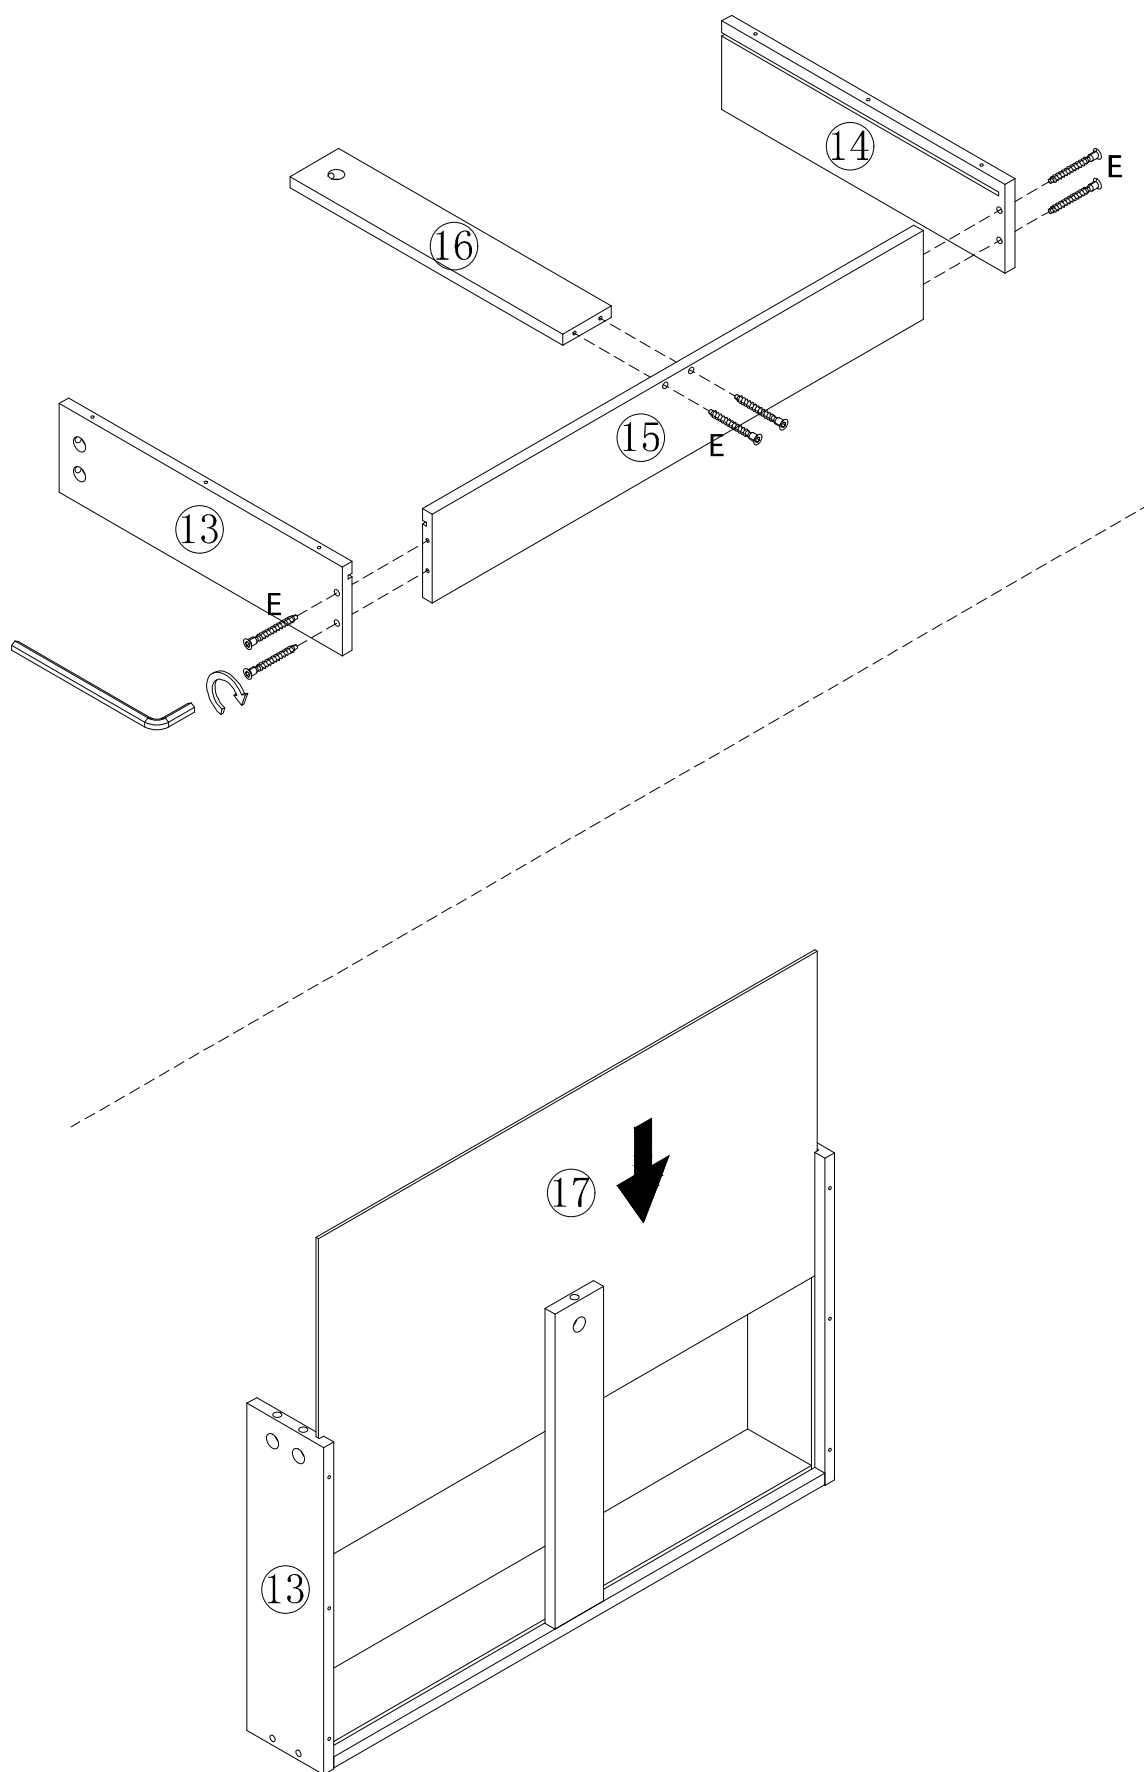



E X 6PCS

STEP 18

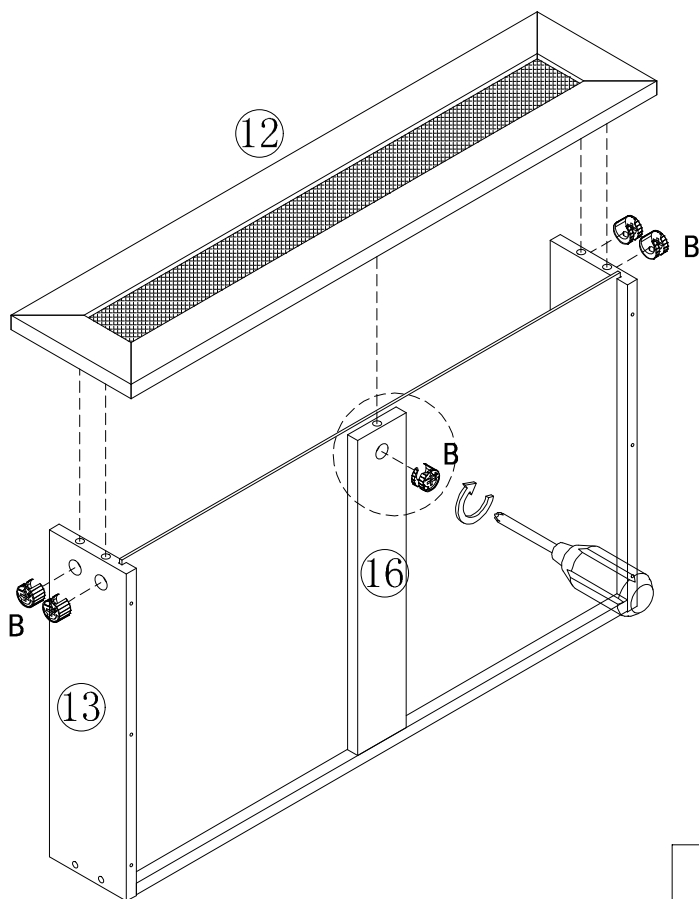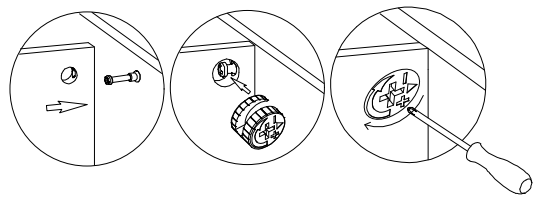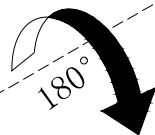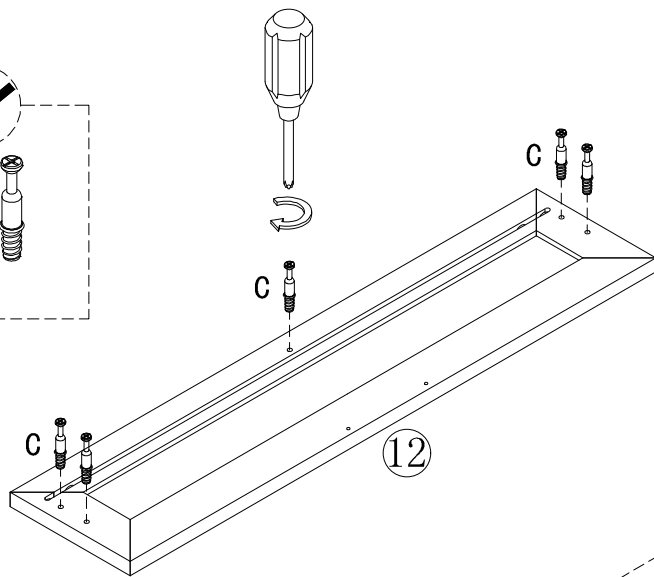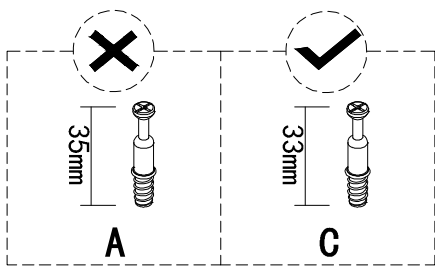


	C X 5PCS
	B X 5PCS

STEP 19

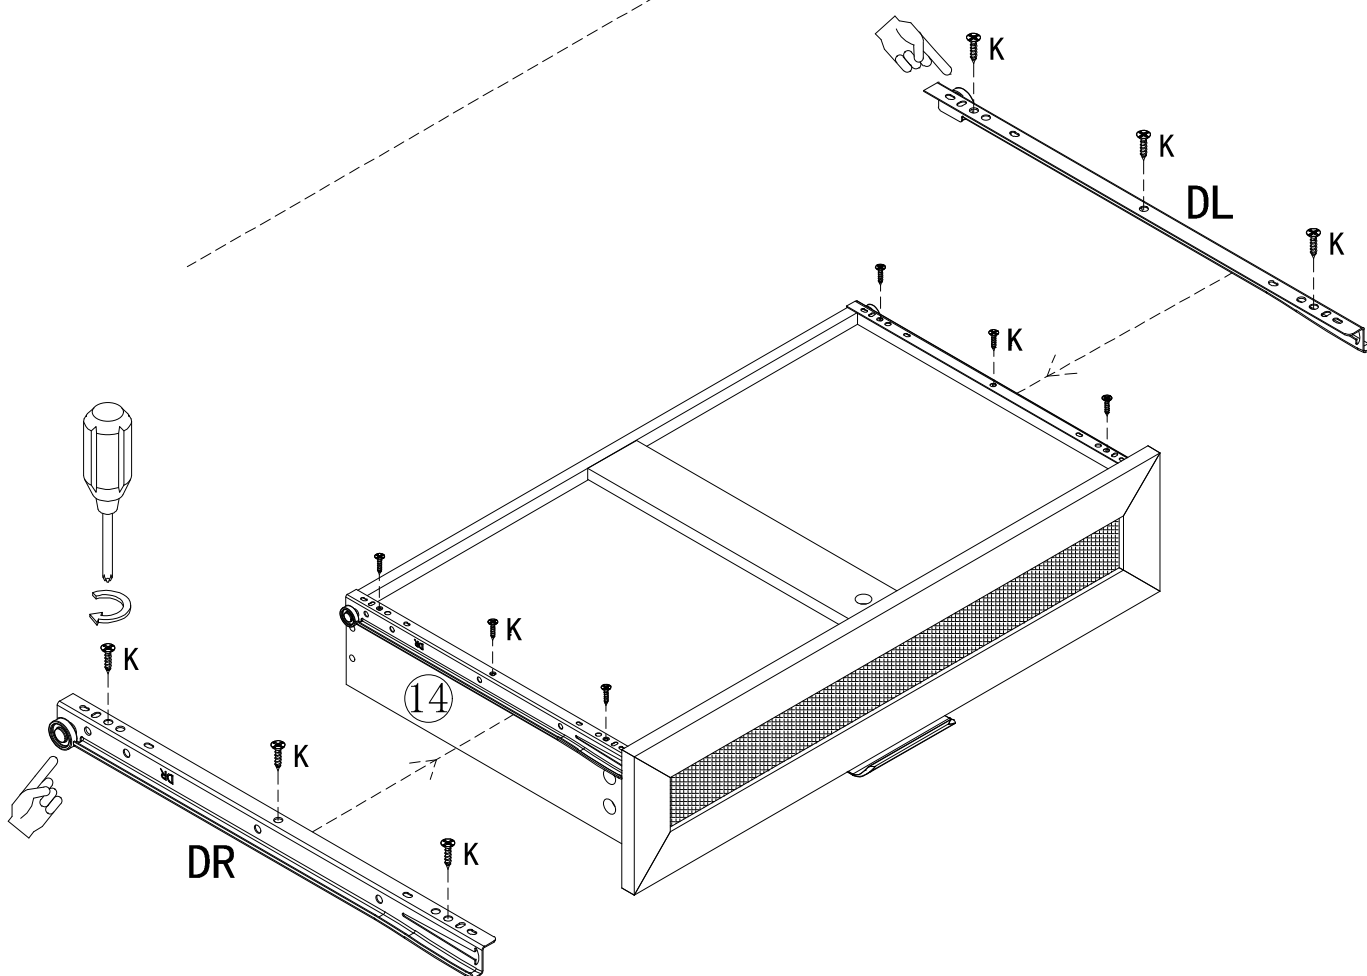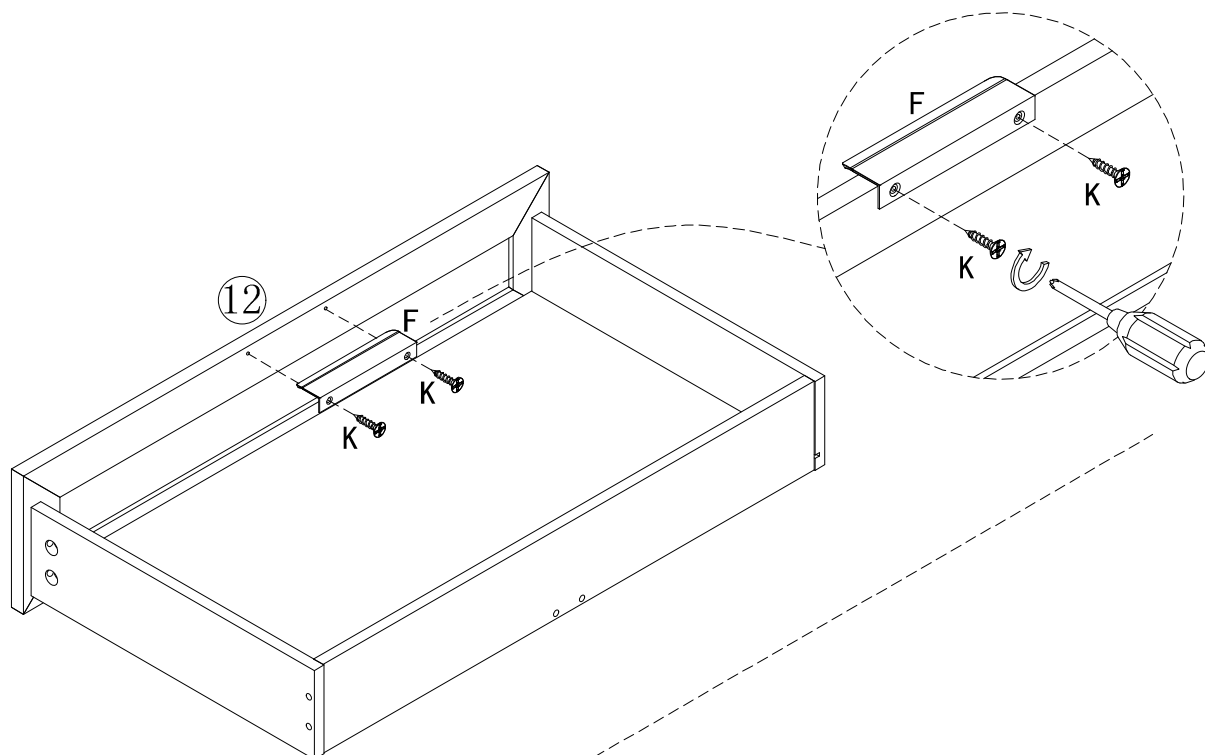


	F X 1PC
	K X 8PCS


STEP 20

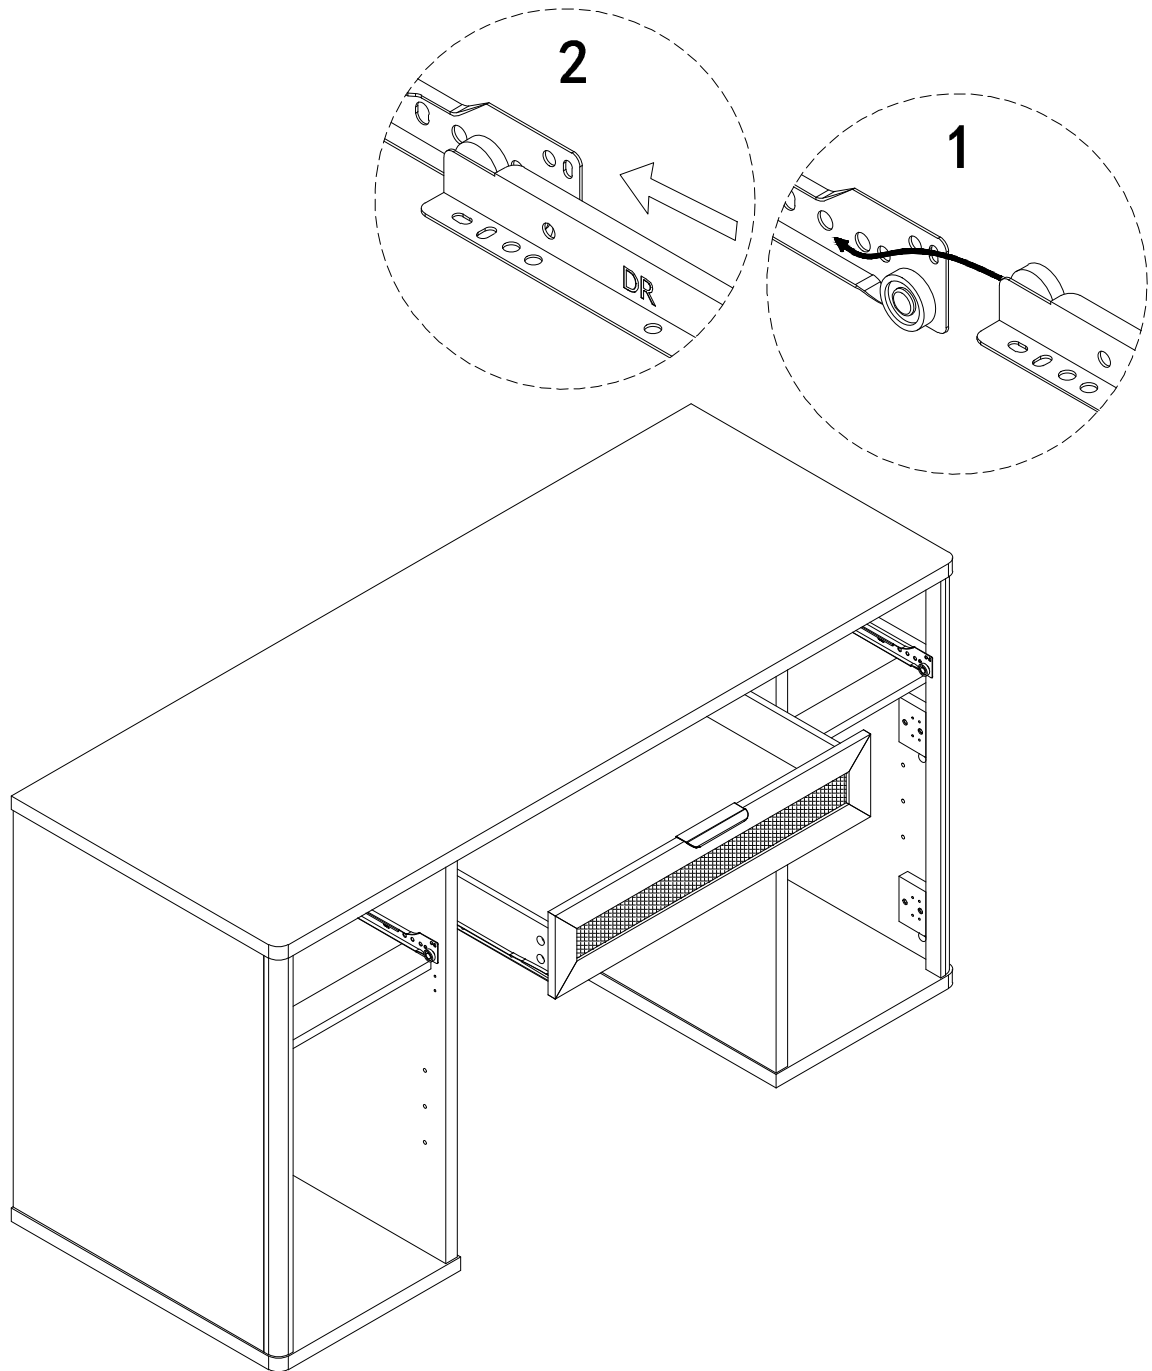

STEP 21

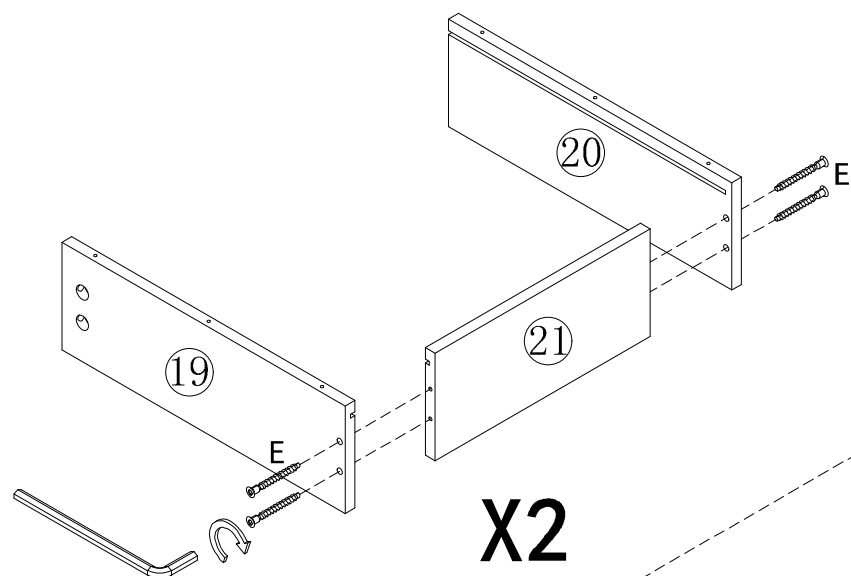

X2


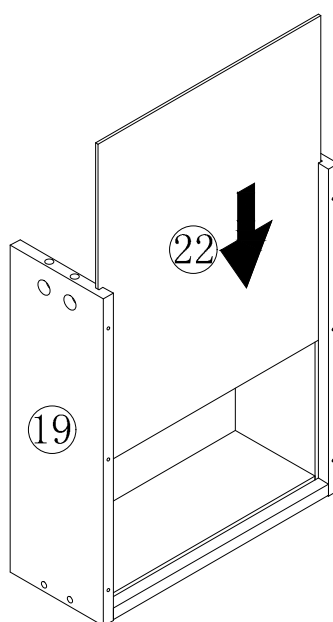


X2






E X 8PCS

STEP 22

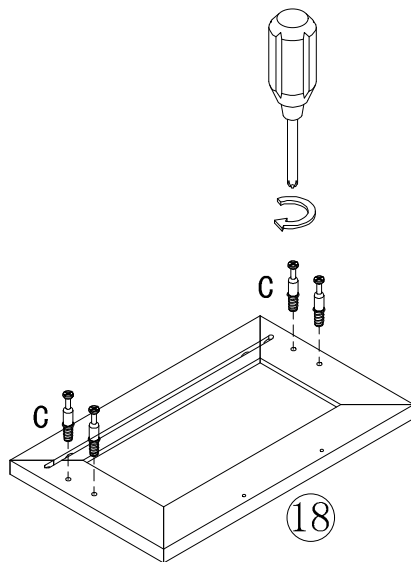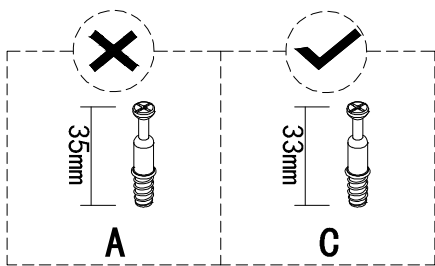


X2

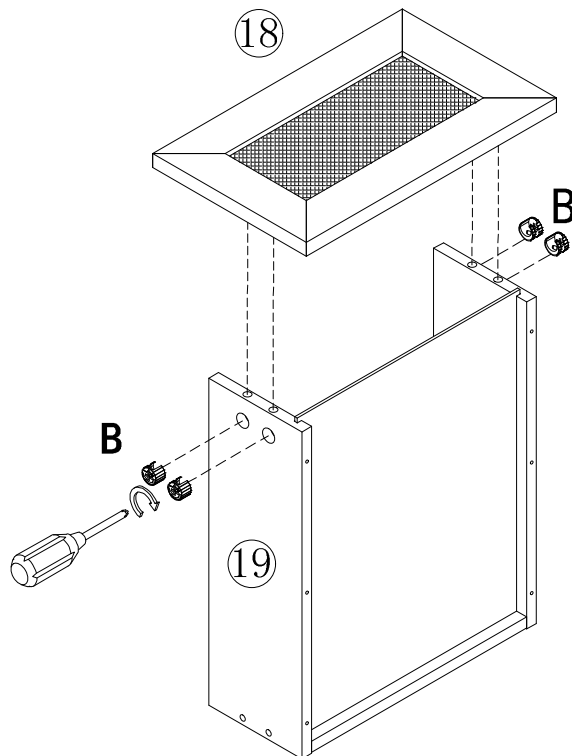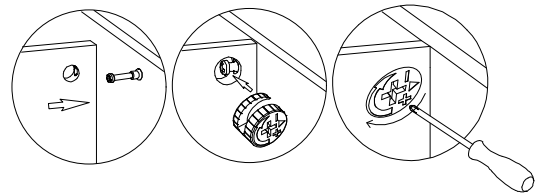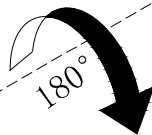


X2

	C X 8PCS
	B X 8PCS

STEP 23

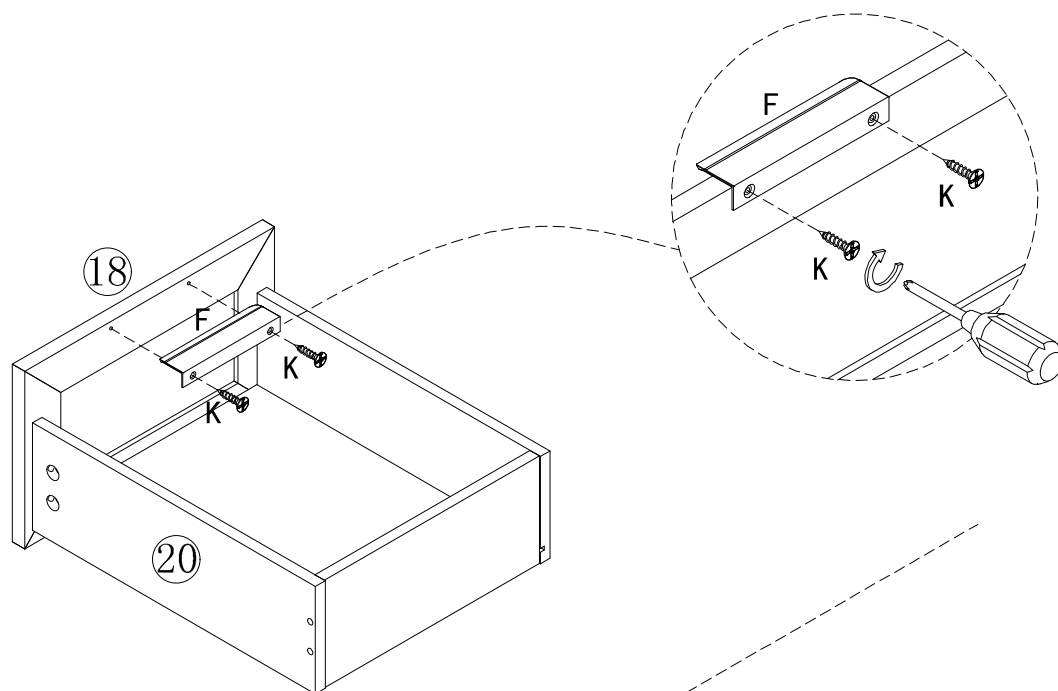


X2

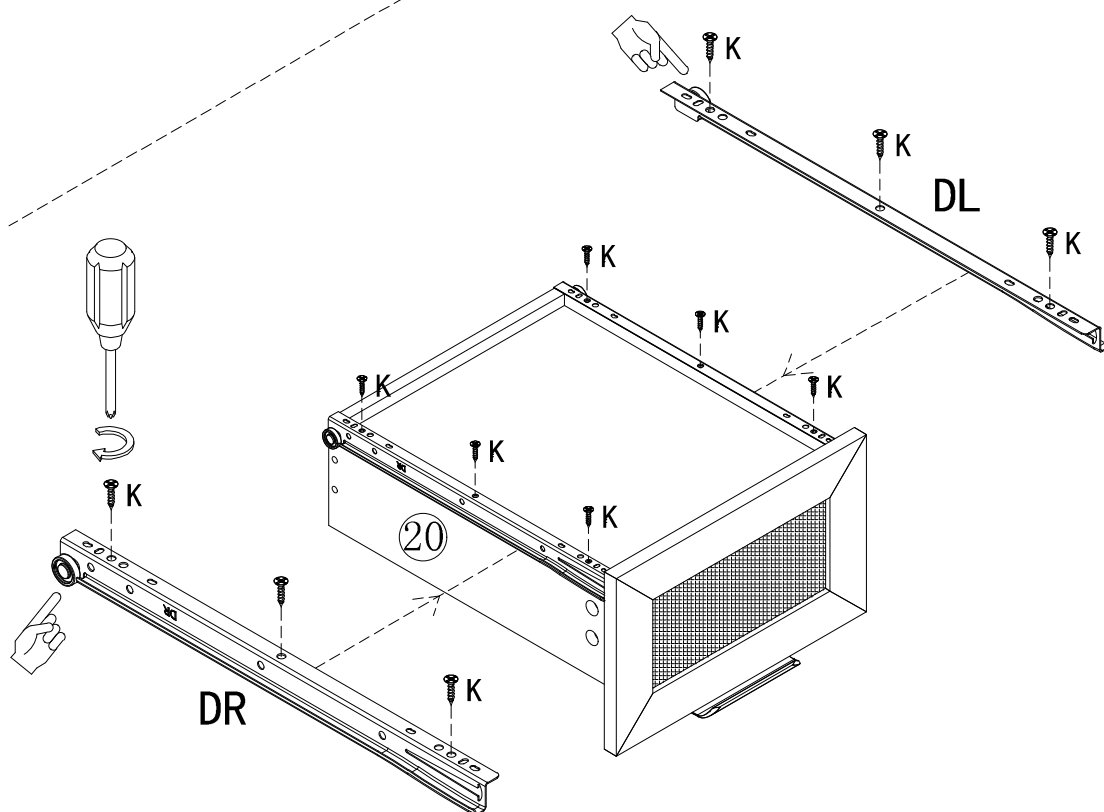



X2

	K X16PCS
	F X2PCS

STEP 24

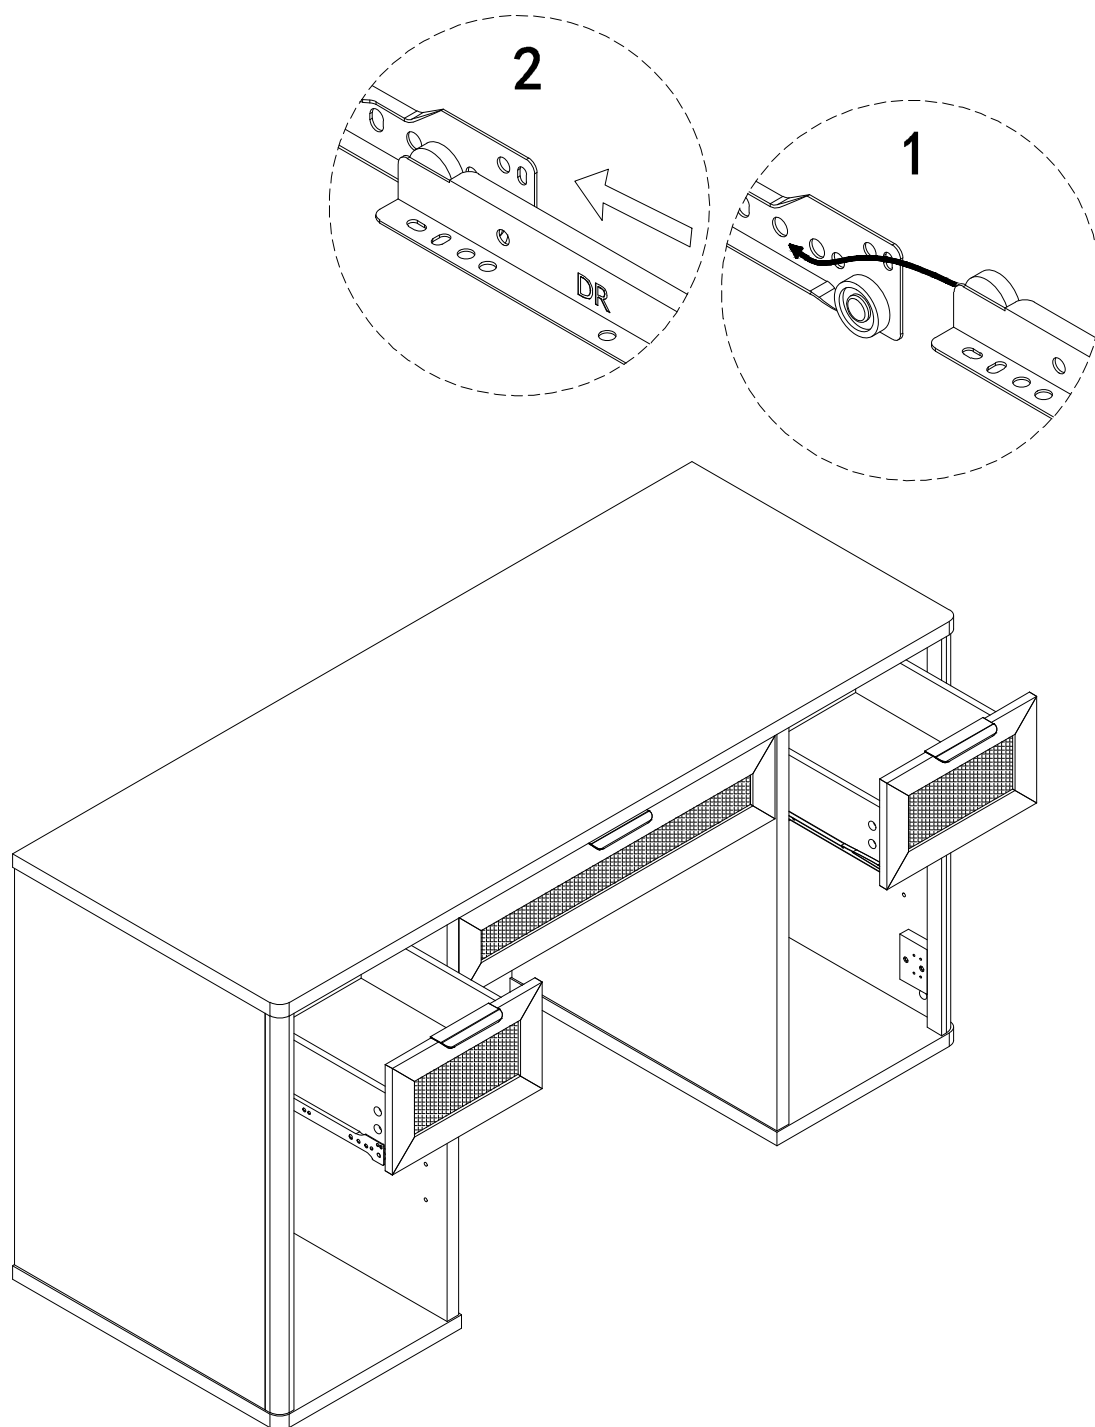


STEP 25

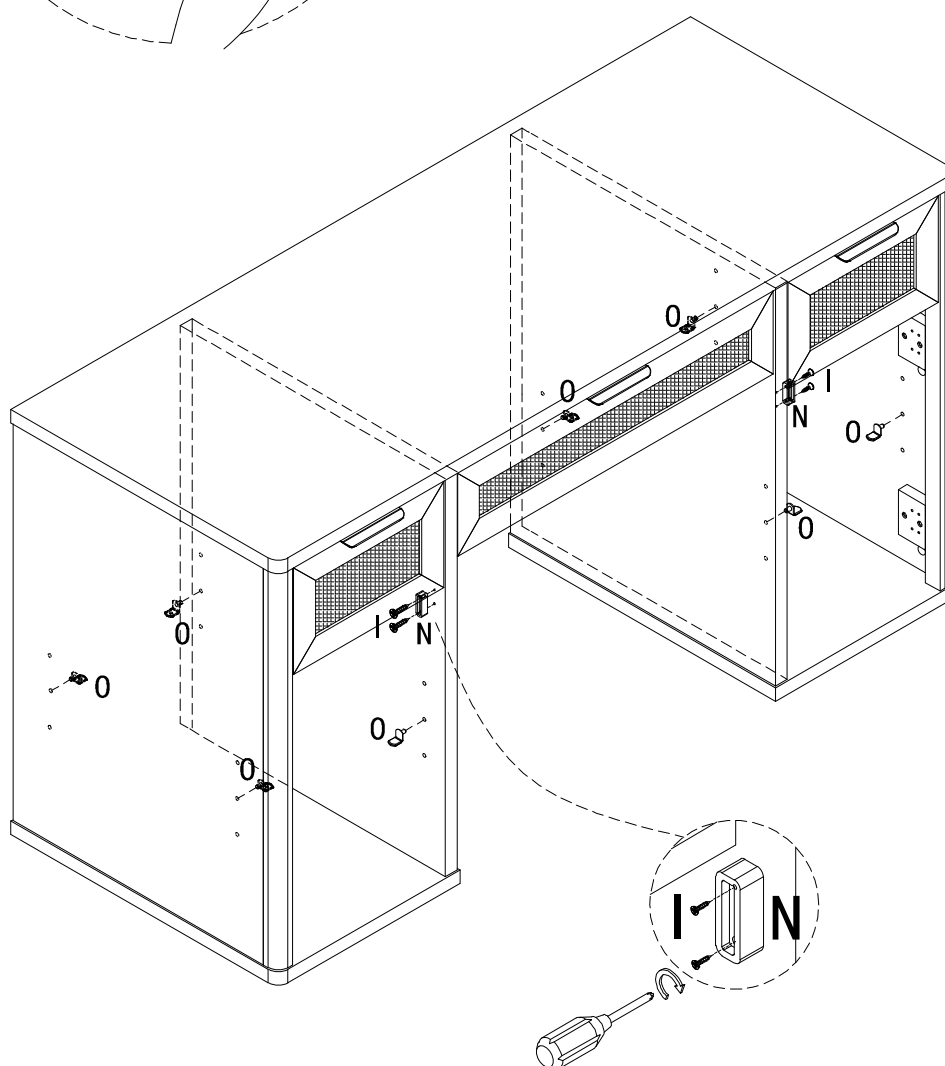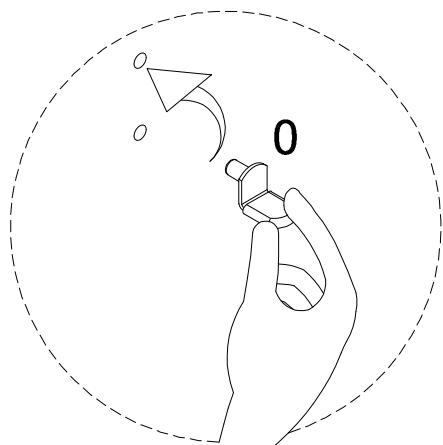


	I X4PCS
	N X2PCS
	0 X8PCS

STEP 26

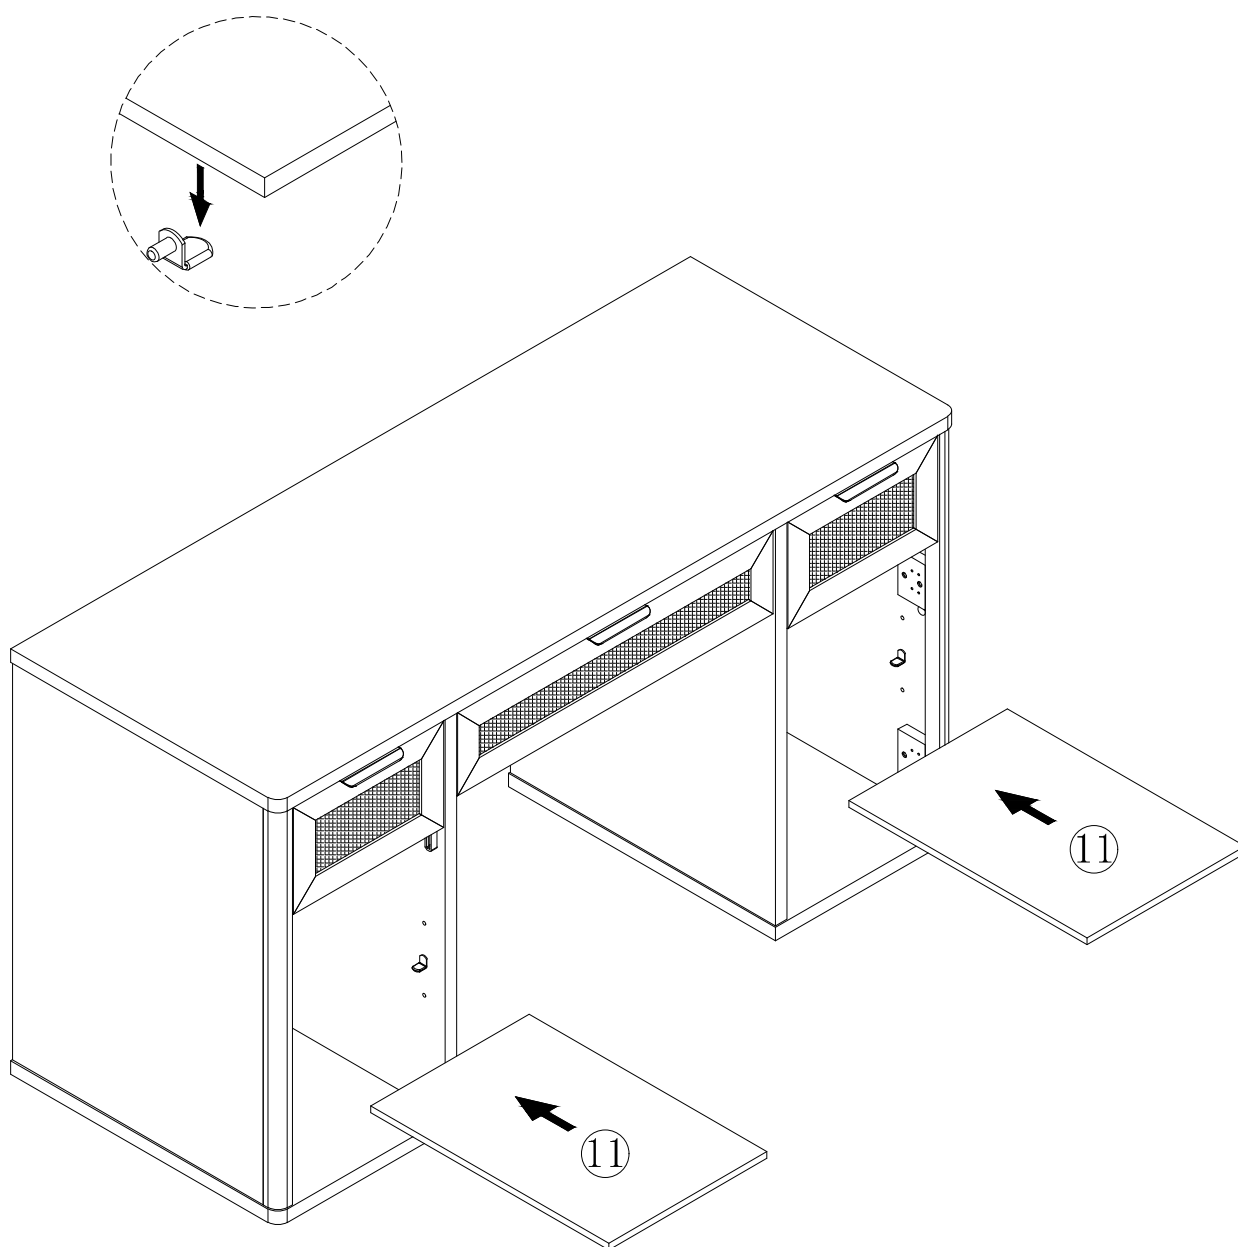




STEP 27

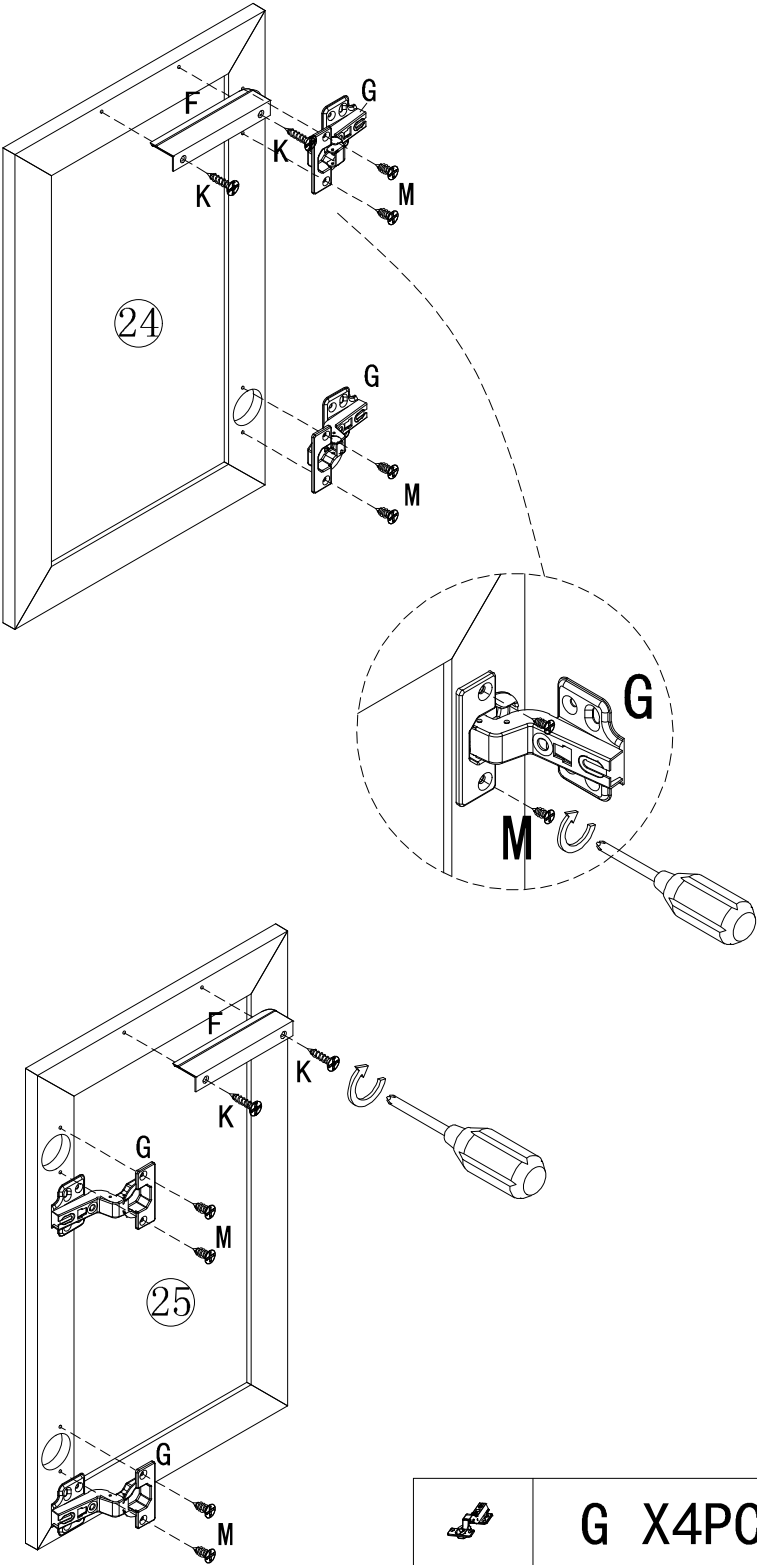

	G X4PCS
	M X8PCS
	K X4PCS
	F X2PCS

STEP 28



YOU WILL USE HINGE ADJUSTMENT INSTRUCTION ON THIS PAGE FOR THE NEXT STEP.

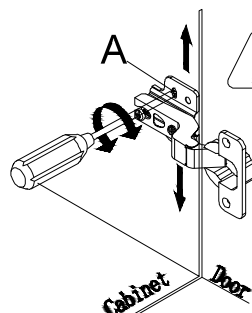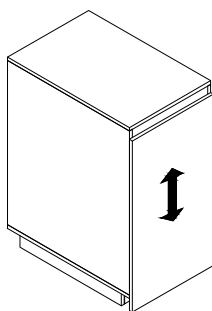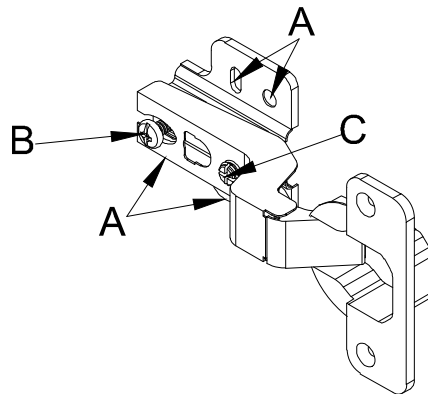

If you find a large gap above or below the door.

To adjust the vertical height.






Loosen the four screws "A" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by a few mm. Then tighten back up.

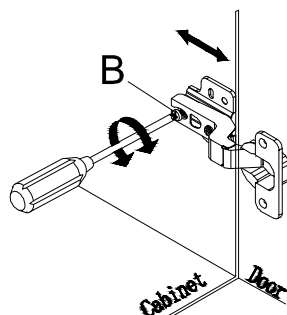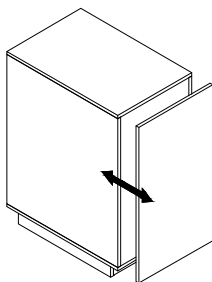

If you find the door is too protruding or too inside.

To adjust depth.

Loosen screw "B" on both hinges and move the door to suit. If the door doesn't move, turn screw "C" on both hinges 1-2 turns and try again. Finally, tighten both screw "B" and reset both screw "C".

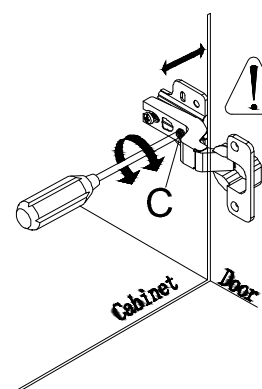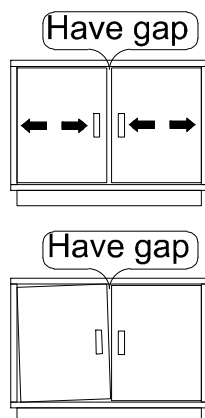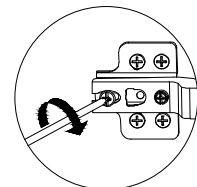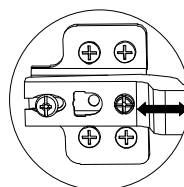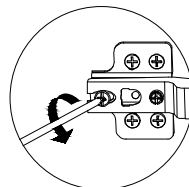


If you find a large gap between or beside the doors. Don't worry, it's not the problem with product.

To adjust side ways.

Turn screw "C" clockwise or counterclockwise on both hinges until the door is in the desired position.

STEP 29

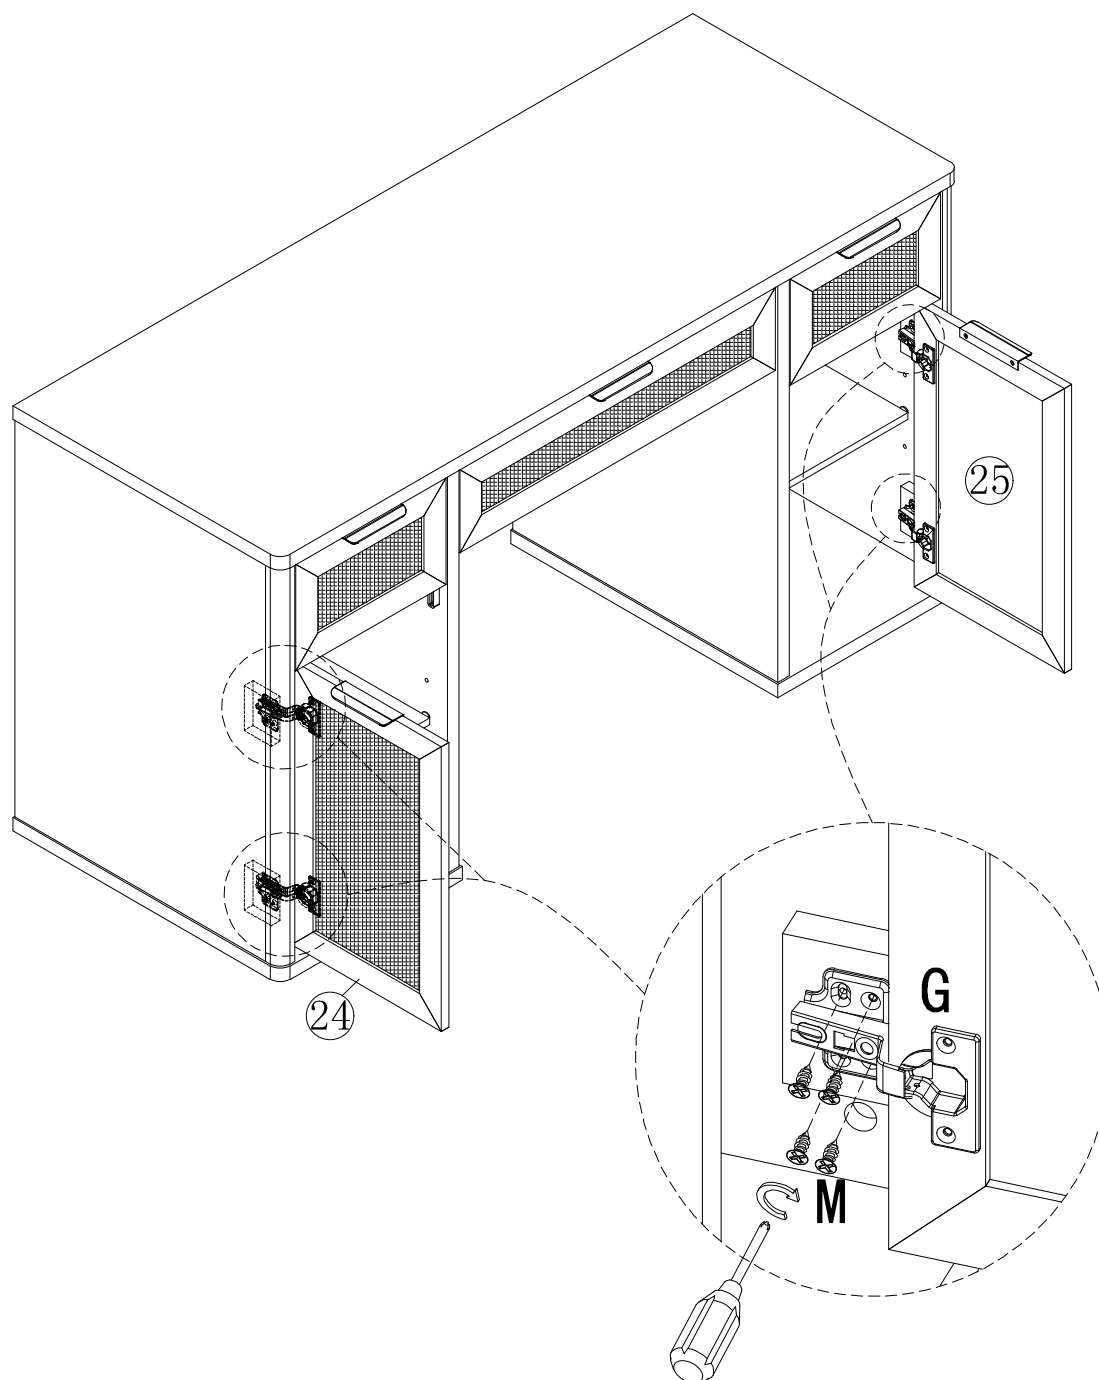

M X16PCS