

WRITING DESK

ASSEMBLY INSTRUCTIONS




ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



Warning !


1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishment.

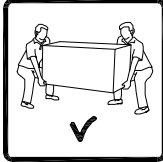

ASSEMBLY TIME 40 MINUTES


PARTS IDENTIFICATION:

(A) SIDE PANEL




2 PCS

(B) LEFT DIVIDER PANEL




1 PC

(C) RIGHT DIVIDER PANEL




1 PC

(D) BOTTOM PANEL

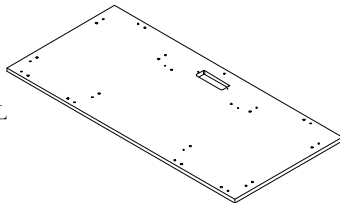


1 PC

(E) FRONT CROSS BRACE

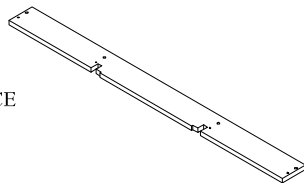


1 PC

(F) BACK CROSS BRACE

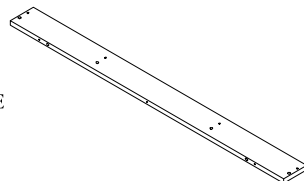


1 PC

(G) MIDDLE CROSS BRACE




1 PC

(H) LARGE TOP PANEL

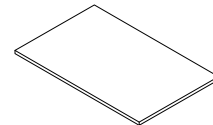


2 PCS

(I) SMALL TOP PANEL




1 PC

(J) TOP PANEL



















1 PC

(K) LEG




4 PCS


Z		HARDWARE IDENTIFICATION					
NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 40g		1 PC	9	SCREW FOR RAIL ($\phi 3.5 \times 14.5$ mm SR)		12 PCS
2	WOODEN DOWEL $\phi 8 \times 30$ mm		26 PCS	10	POWER OUTLET		1 PC
3	CAM BOLT ($\phi 7 \times 35.5$ mm SR)		10 PCS	11	SCREW FOR POWER OUTLET ($\phi 3.3 \times 14.5$ mm BLK)		2 PCS
4	CAM LOCK ($\phi 15 \times 12$ mm SR)		10 PCS	12	HINGE		6 PCS
5	SCREW ($\phi 4.5 \times 42$ mm SR)		17 PCS	13	SCREW FOR HINGE ($\phi 3 \times 12$ mm BLK)		24 PCS
6	RAIL (L=350mm SR)		1 SET	14	SCREW ($\phi 5 \times 19$ mm BLK)		16 PCS
7	METAL BRACKET (L=350mm SR)		2 PCS	15	TRANSPARENT RUBBER $\phi 12$ mm x 6 HOLE		1 PC
8	BOLT (M4x6mm SR)		6 PCS	16	STICKER $\phi 20$ mm		2 PCS

Z6,Z7,Z8,Z9,Z10,Z12 not included in blister packaging.


INCORRECT CORRECT

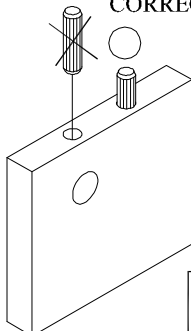


Apply glue on all wooden dowels to ensure integrity of the structure.

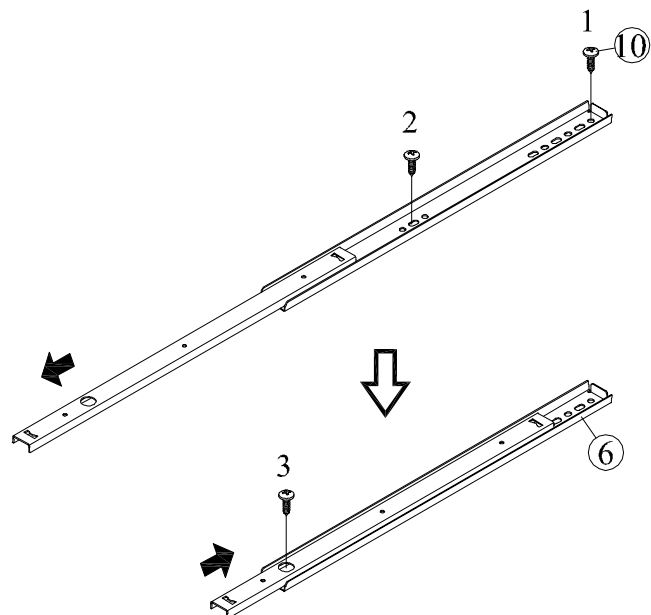





STEP 1 :

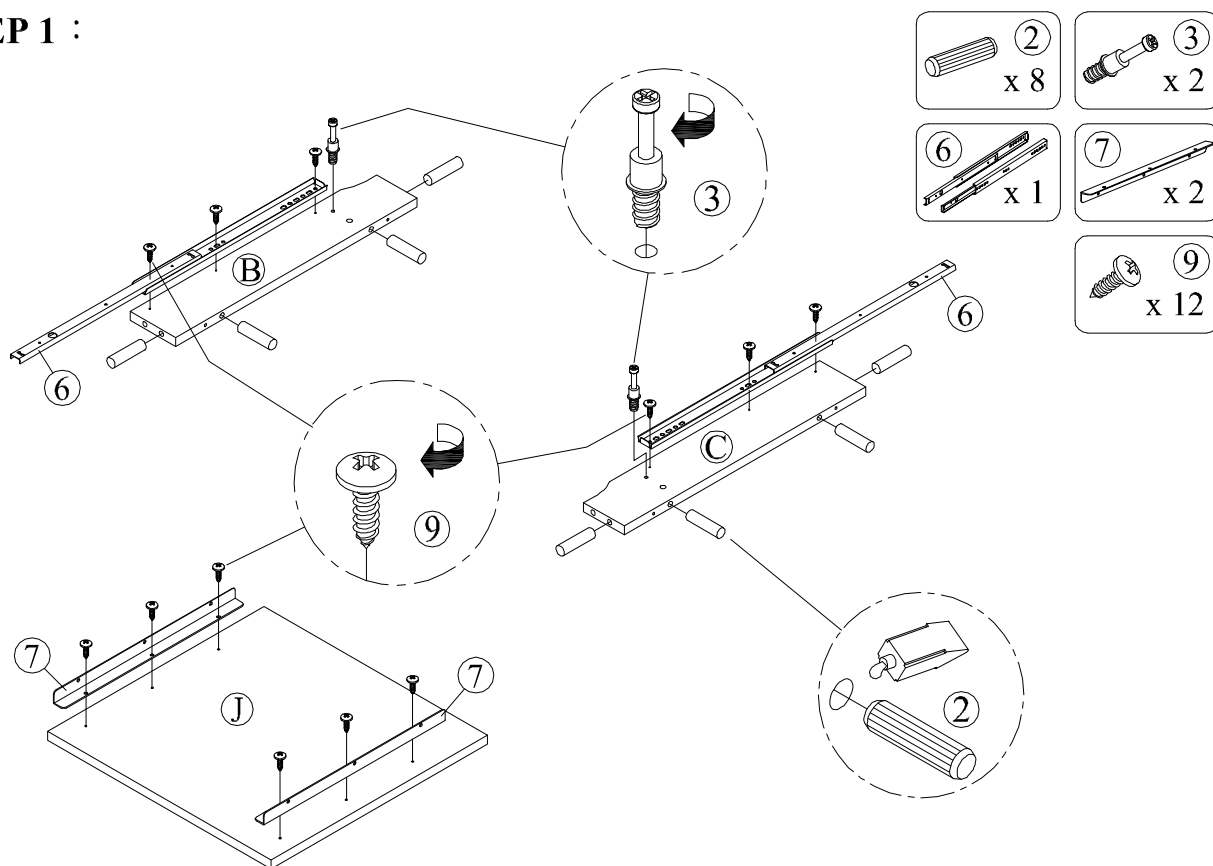


STEP 2 :

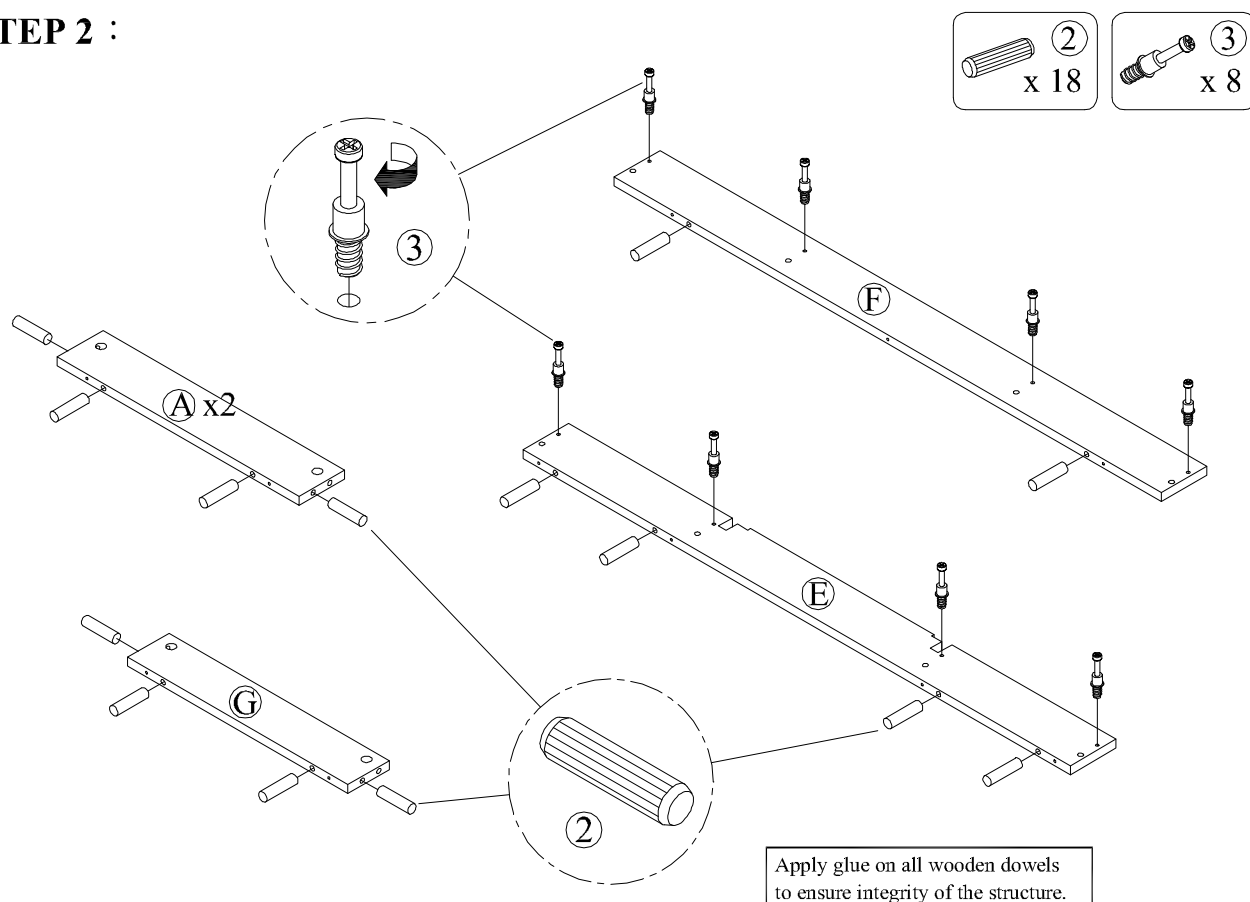




STEP 3 :

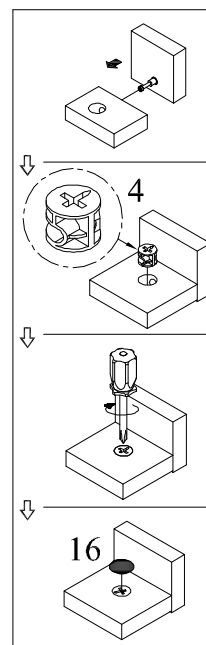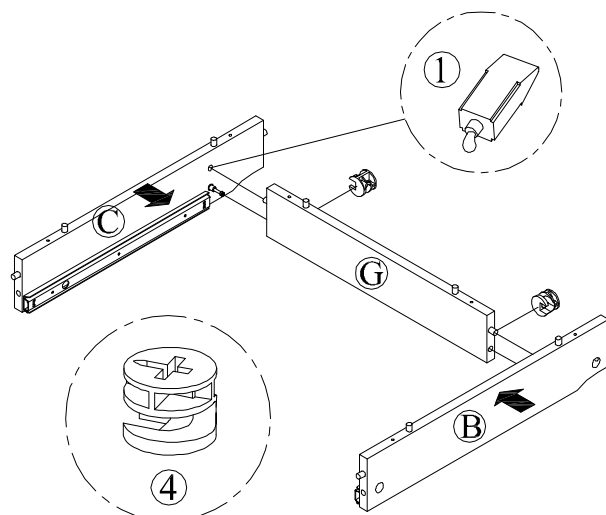



STEP 4 :

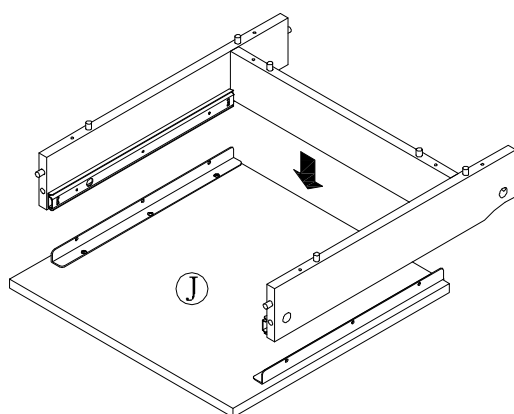



STEP 5 :

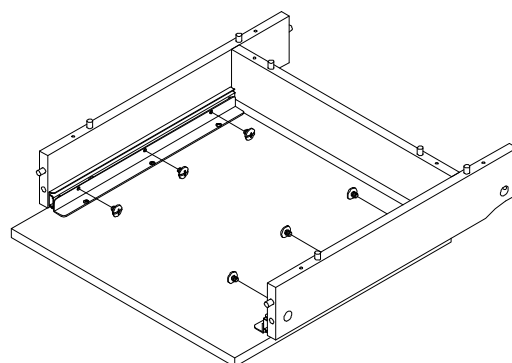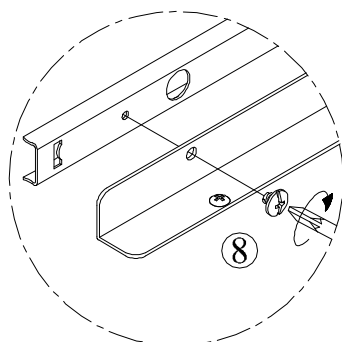



STEP 6 :

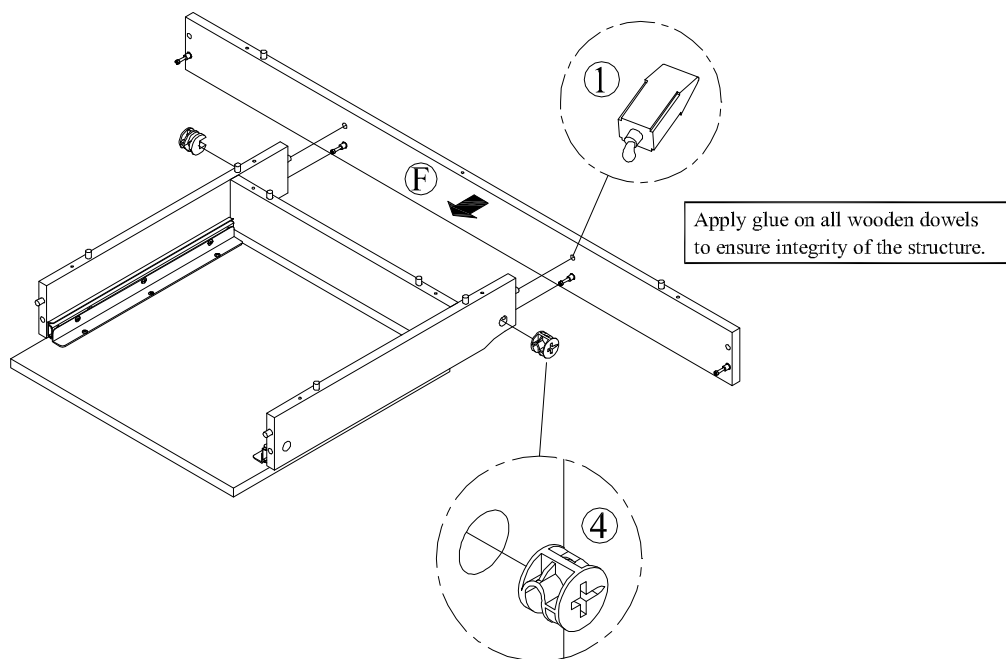



STEP 7 :

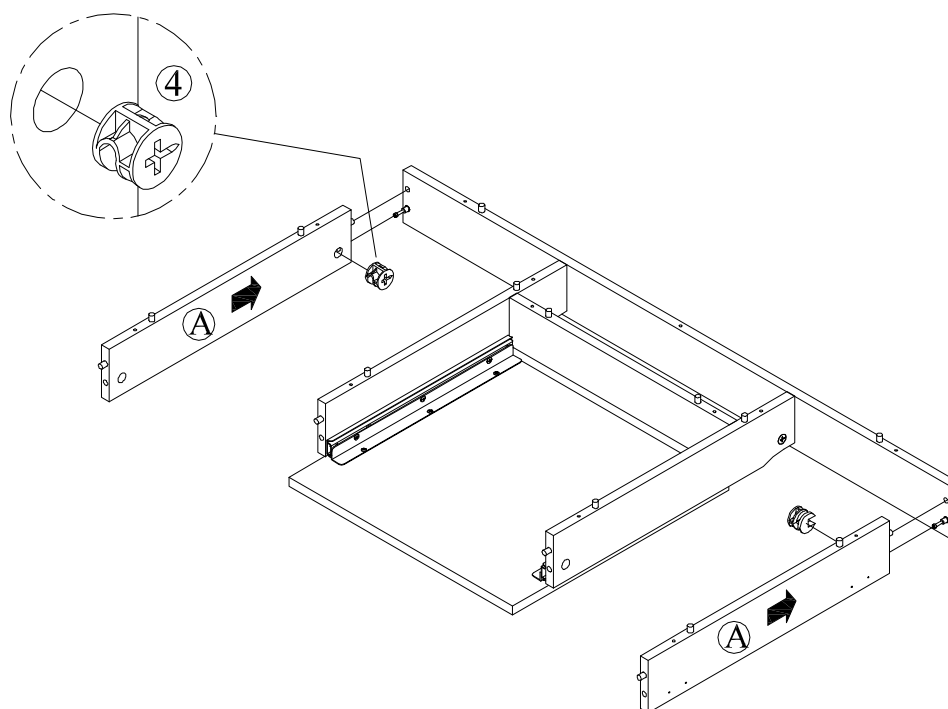



STEP 8 :

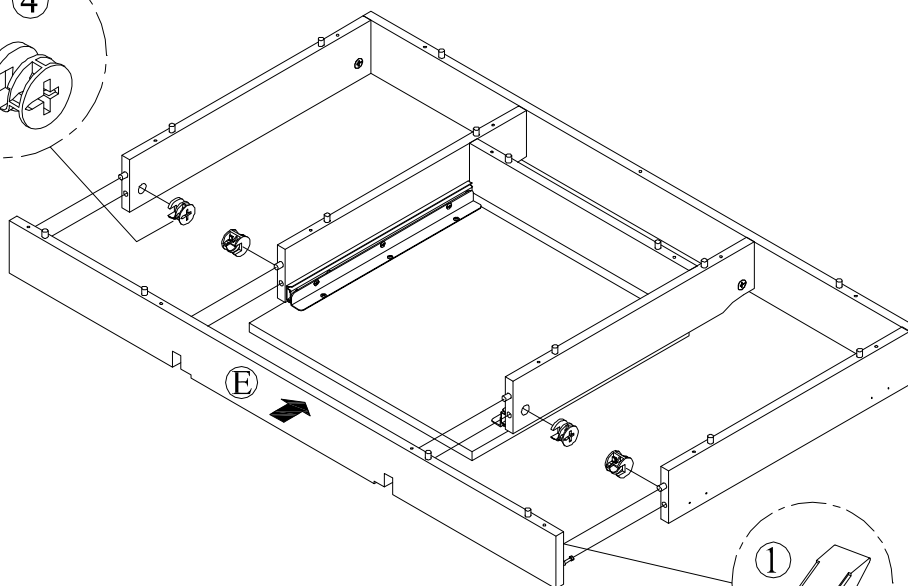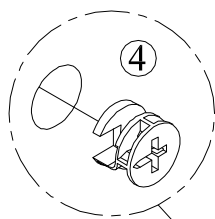



Apply glue on all wooden dowels to ensure integrity of the structure.








STEP 9 :

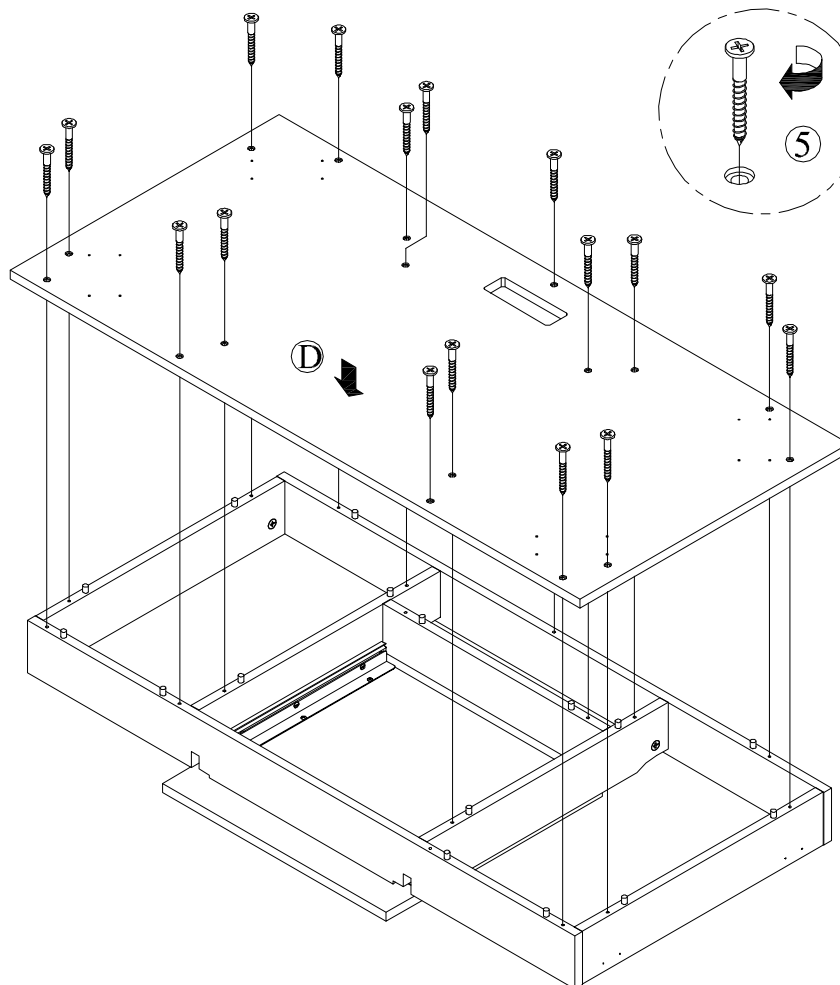


STEP 10 :

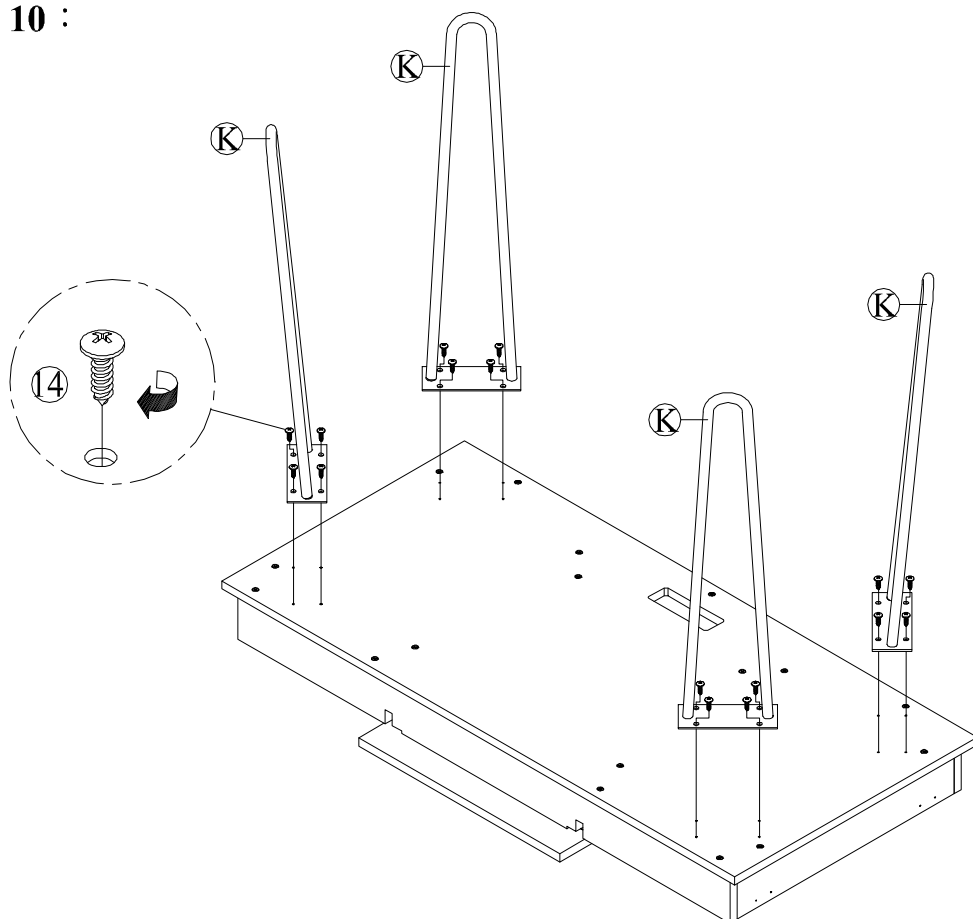



STEP 11 :

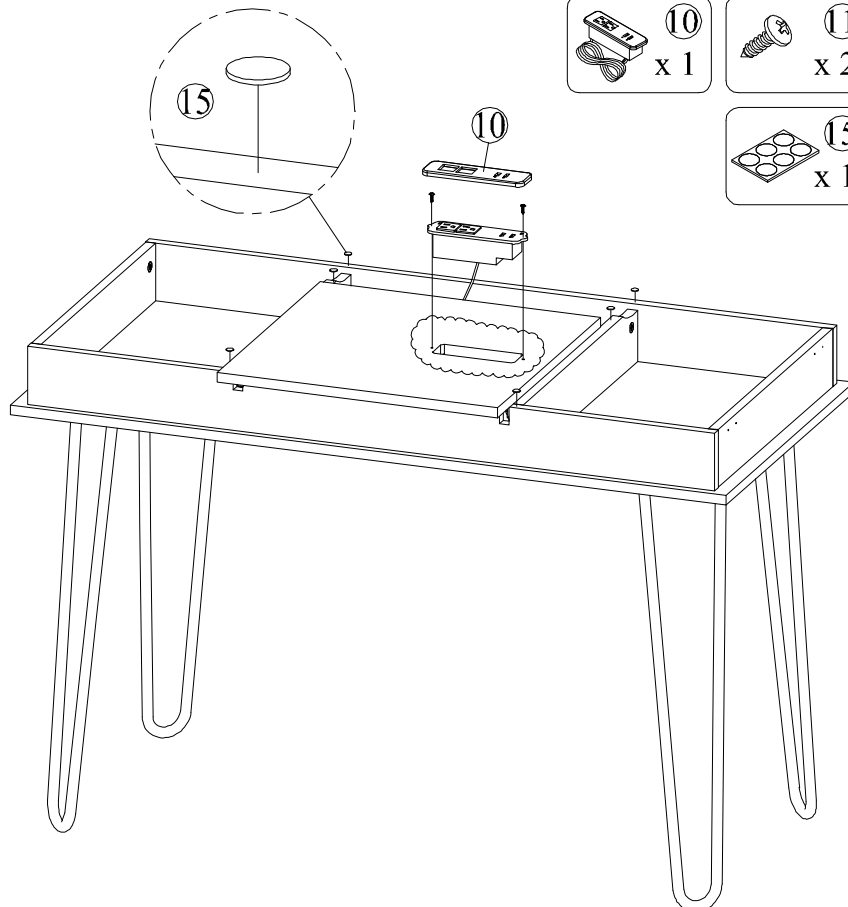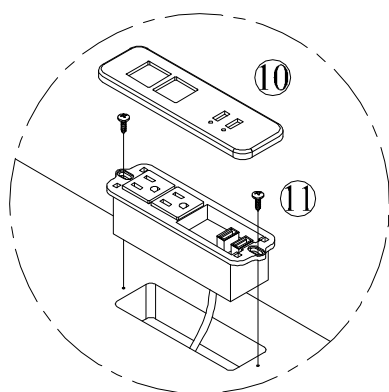



STEP 12 :

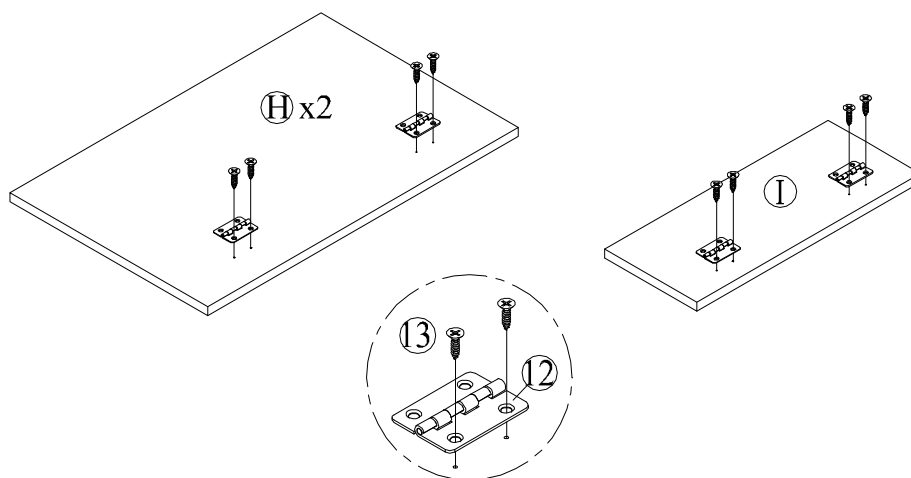

STEP 13 :

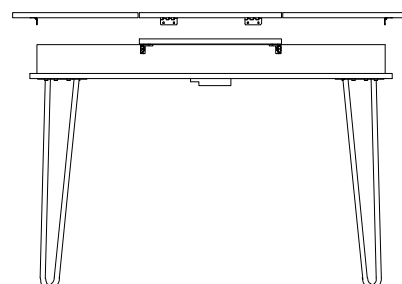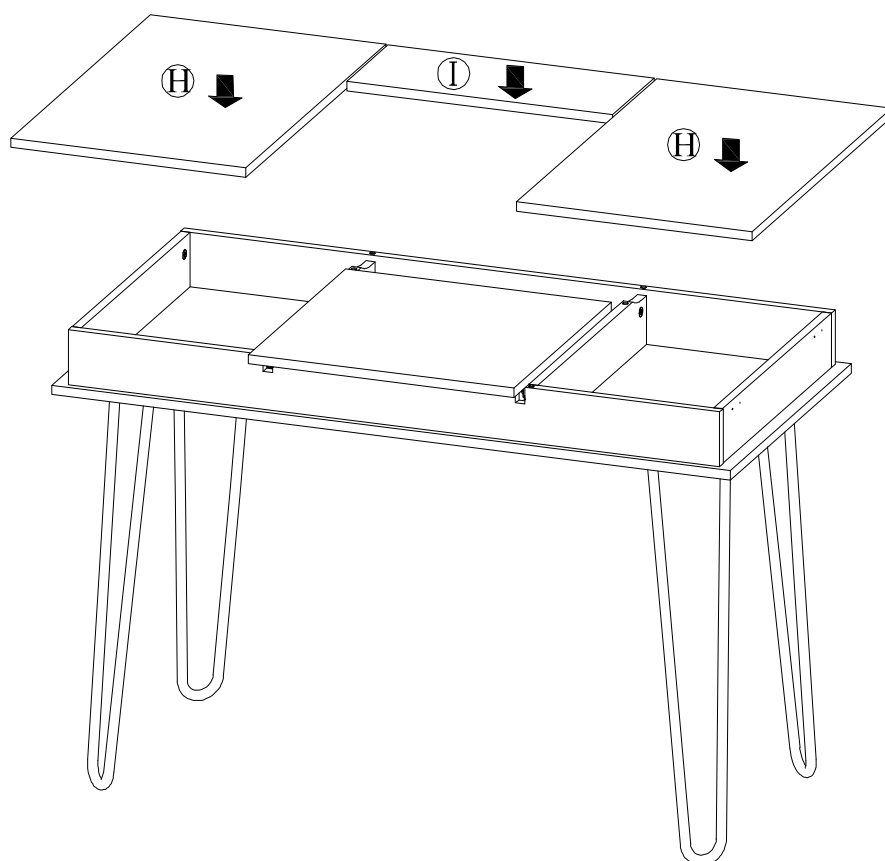

STEP 14 :

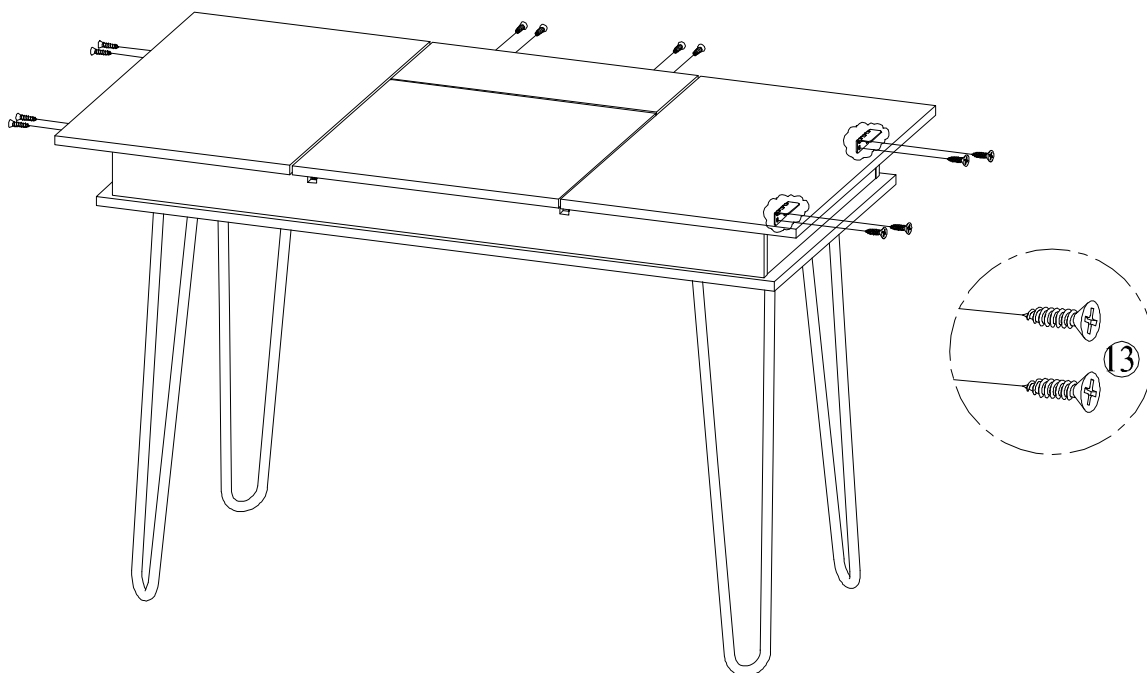

STEP 15 :
COMPLETE

