

DGRT-V1

FTLFKT-2015

FTLFKT-2016

FTLFKT-2017


"IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY"

Notice:


1. Follow the installation instructions. Please confirm all accessories are preset before installation.
2. Do not fully tighten the screws during initial assembly. Fully tighten screws only once all pieces which are correctly assembled.
3. Please unbox the item from the side with an open-label and put carpet on the floor to avoid scratching it.



Recommended installers: 2








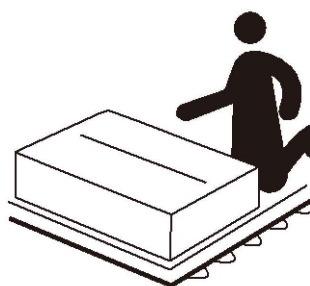



Put a carpet on the floor before unboxing

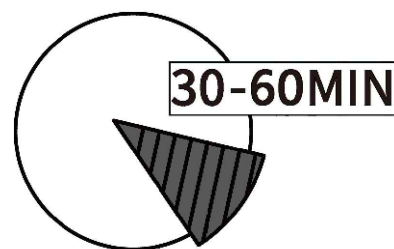











Estimate installation time:
30-60 minutes








Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
A	 ø15*10mm	× 30	B	 M6*34mm	× 30
C	 M5*38mm	× 12	D	 3.5*12mm	× 32
E	 6*30mm	× 34	F	 3.5*14mm	× 11

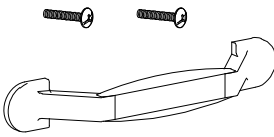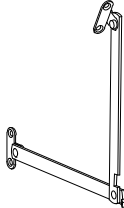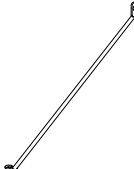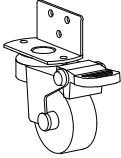Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
G	 ø1/4"*20mm	×2	H	 M4	×1
I		×1	J		×2
K		×2	L		×1
M		×2	N		×2
O		×2	P		×2

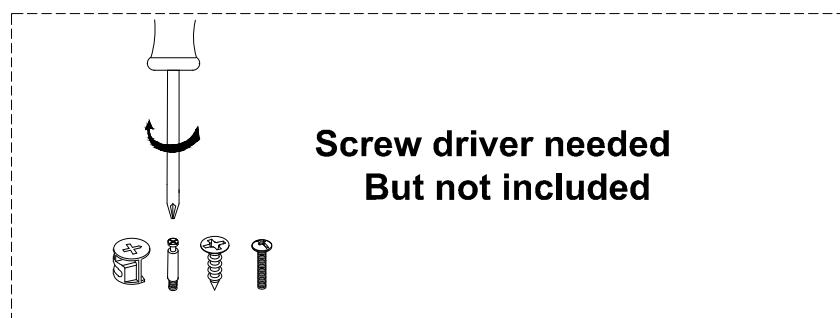


The hardware quantities listed above are required for proper assembly.
Some extra hardware may also have been included in the actual hardware bag.

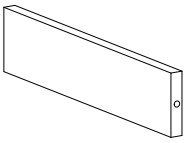
Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
1		×1	2		×1
3		×1	4		×1
5		×2	6		×2
7		×1	8		×1
9		×1	10		×1
11		×1	12		×1

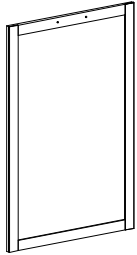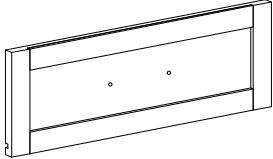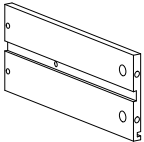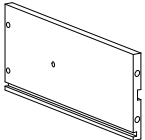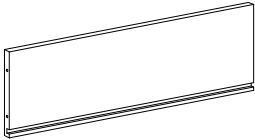Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
13		×1	14		×1
15		×1	16		×1
17		×1	18		×1
19		×1	20		×1
21		×1	22		×1

Explosion Diagram

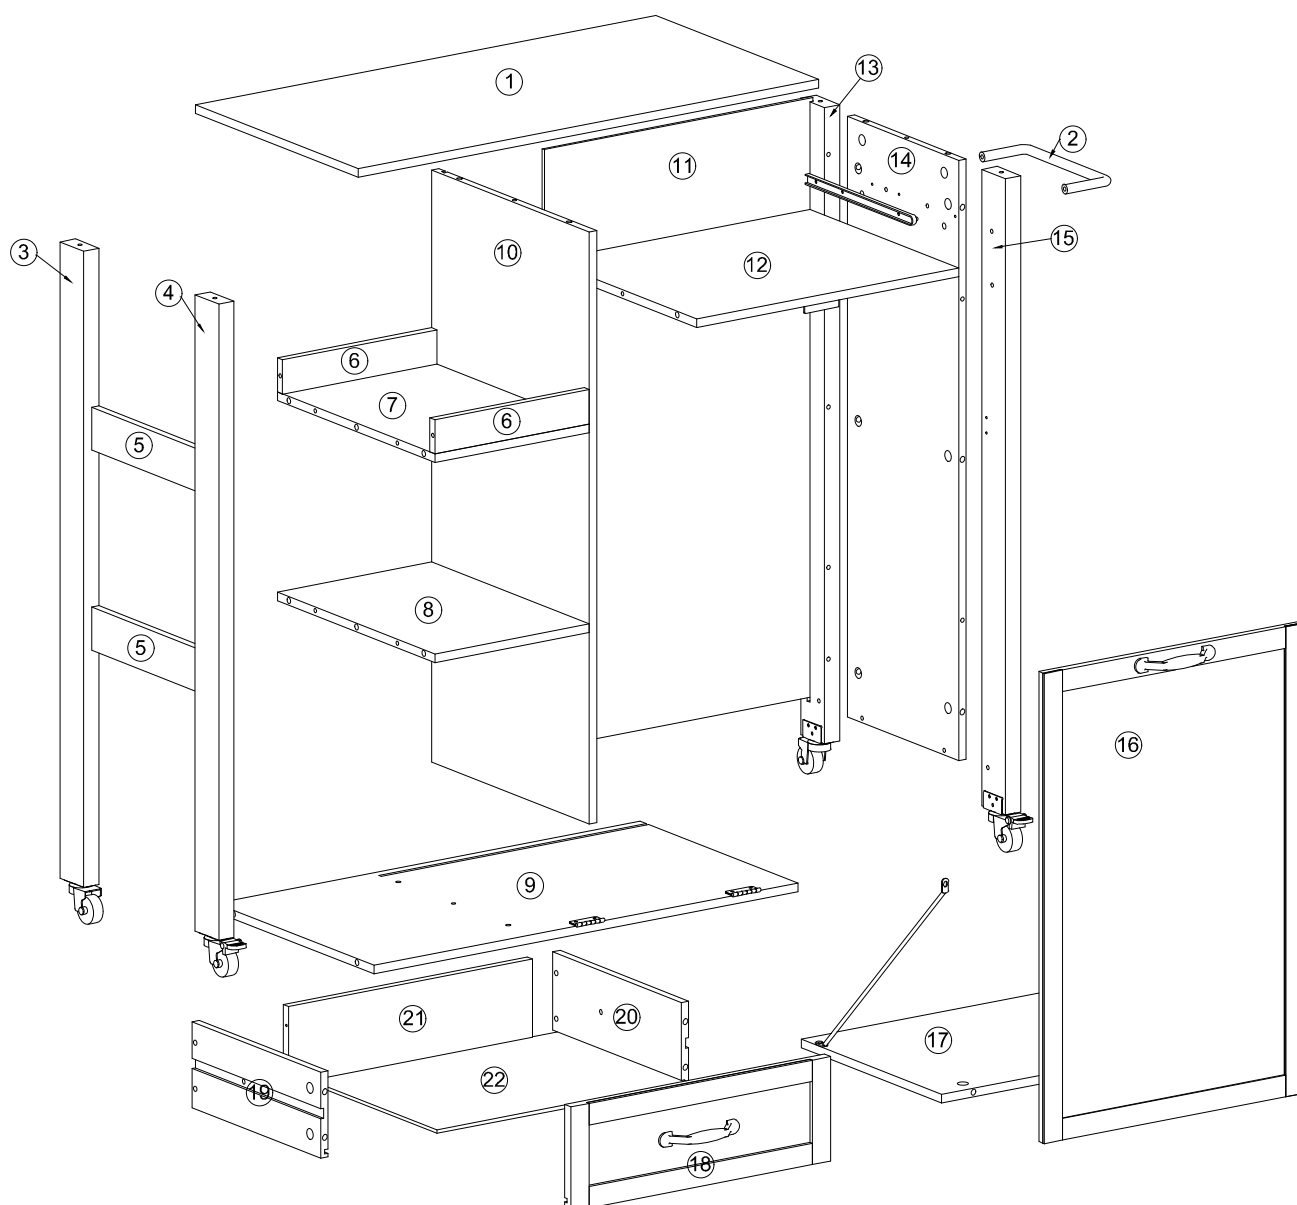


1




B 2 pcs



C 2 pcs




D 5 pcs




E 4 pcs



H




I 1 pc




N 1 pc



6 2 pcs



7 1 pc




10 1 pc





12 1 pc

SCREW DRIVER NOT INCLUDED




← FRONT

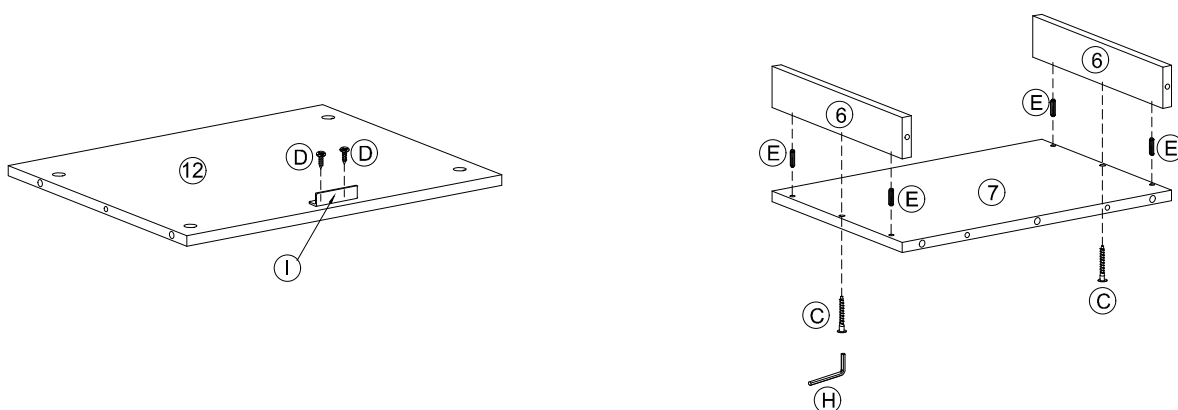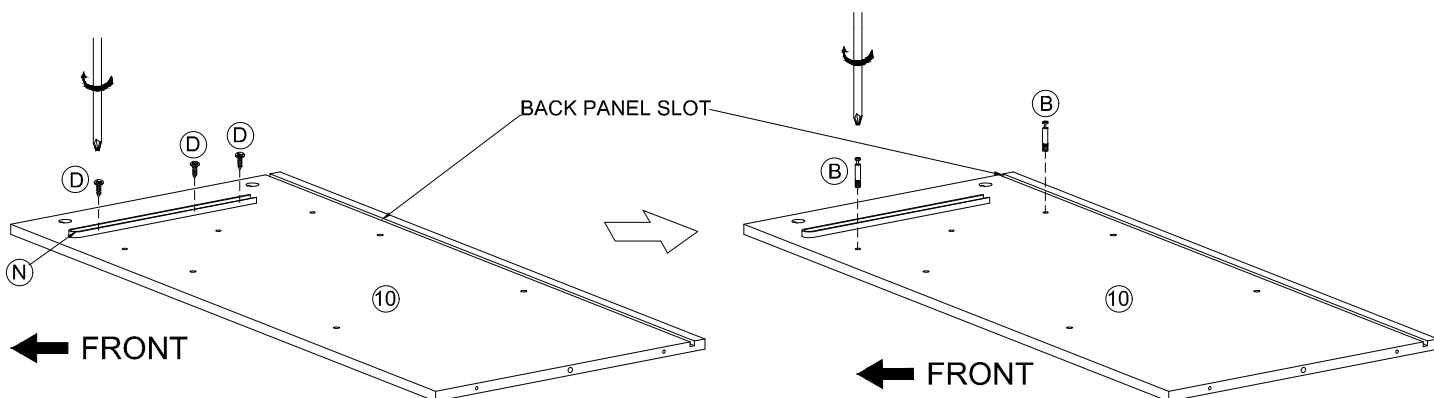


2



A 2 pcs




C 4 pcs



E 5 pcs




H




8 1 pc

Cam Lock Placement Supplement

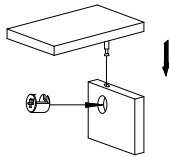


When inserting the Cam lock, make sure that the open End of the cam Lock faces the Cam Screw Entry.

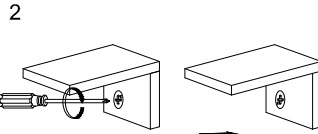


To tighten, turn the Cam Lock CLOCKWISE until the arrow or "△" signs point AWAY from the connected Panel.

***NOTE: DO NOT USE AN AUTOMATIC SCREWDRIVER TO TIGHTEN CAM LOCKS, DO NOT OVER-TIGHTEN.**

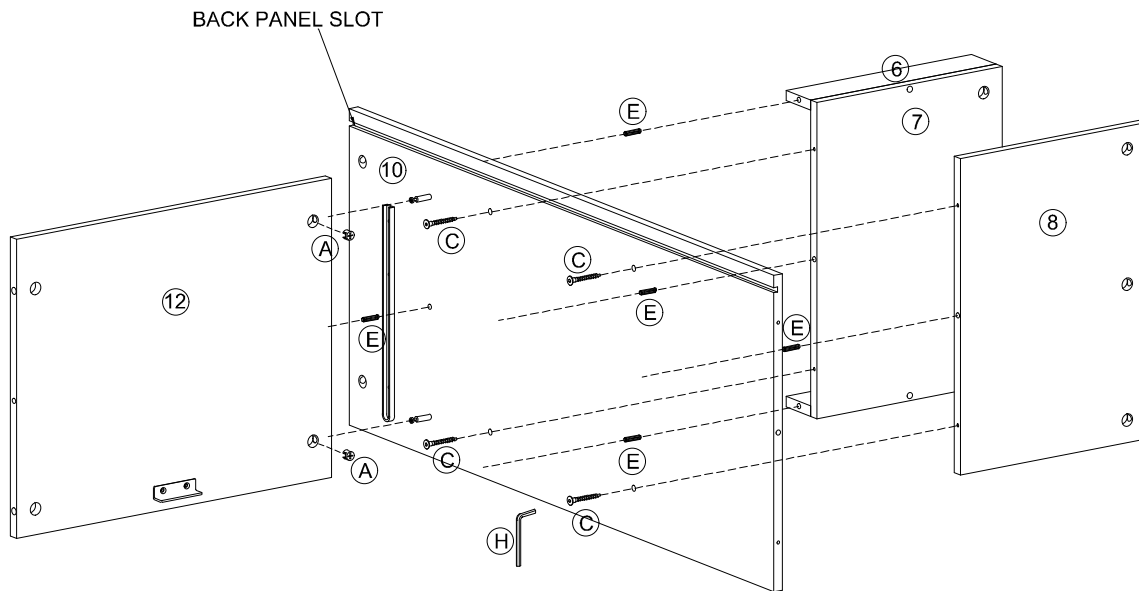


3



C 2 pcs




D 4 pcs



E 1 pc





H




K 2 pcs



9 1 pc

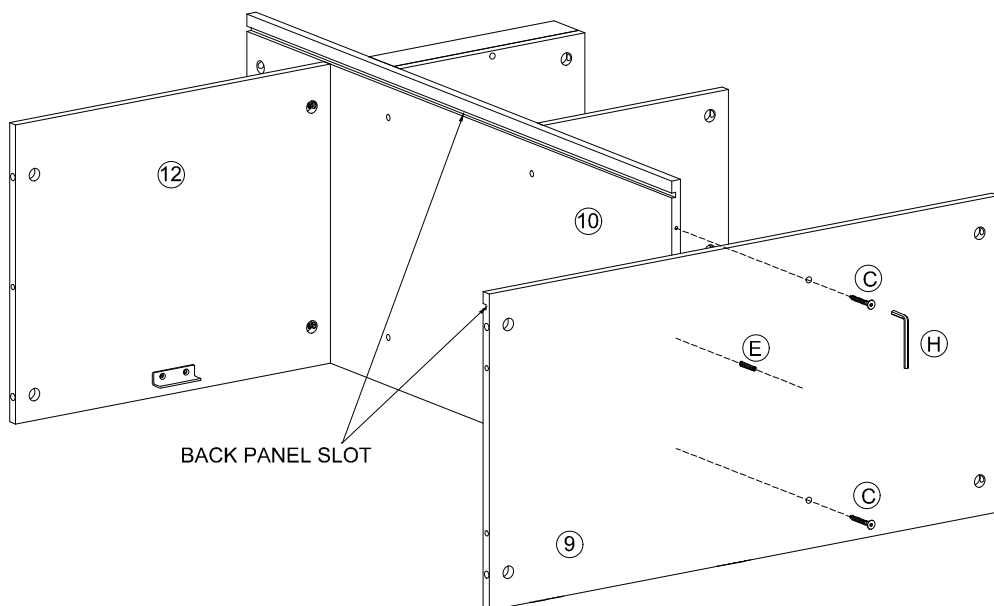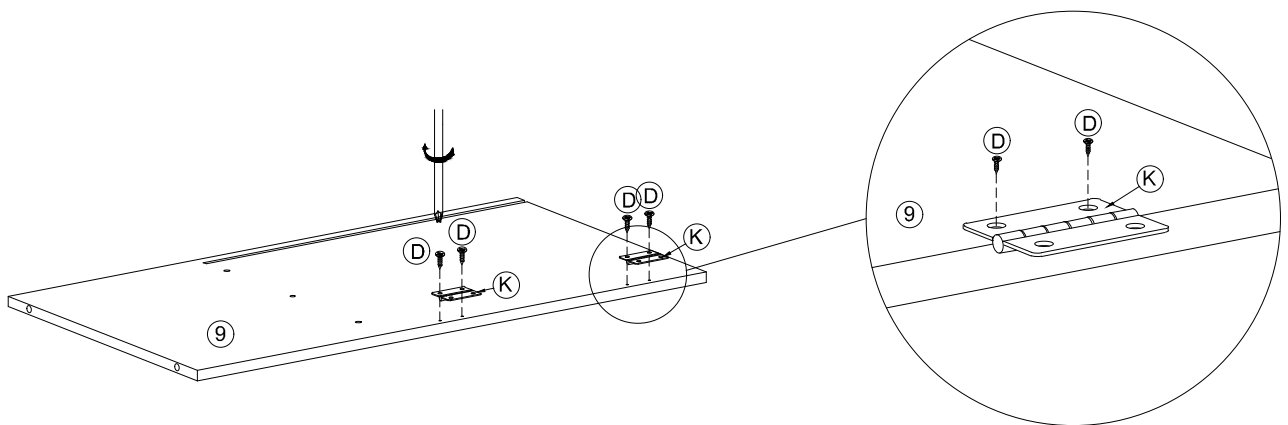

4



B 9 pcs



D 8 pcs



O 1 pc




P 1 pc







13 1 pc



15 1 pc

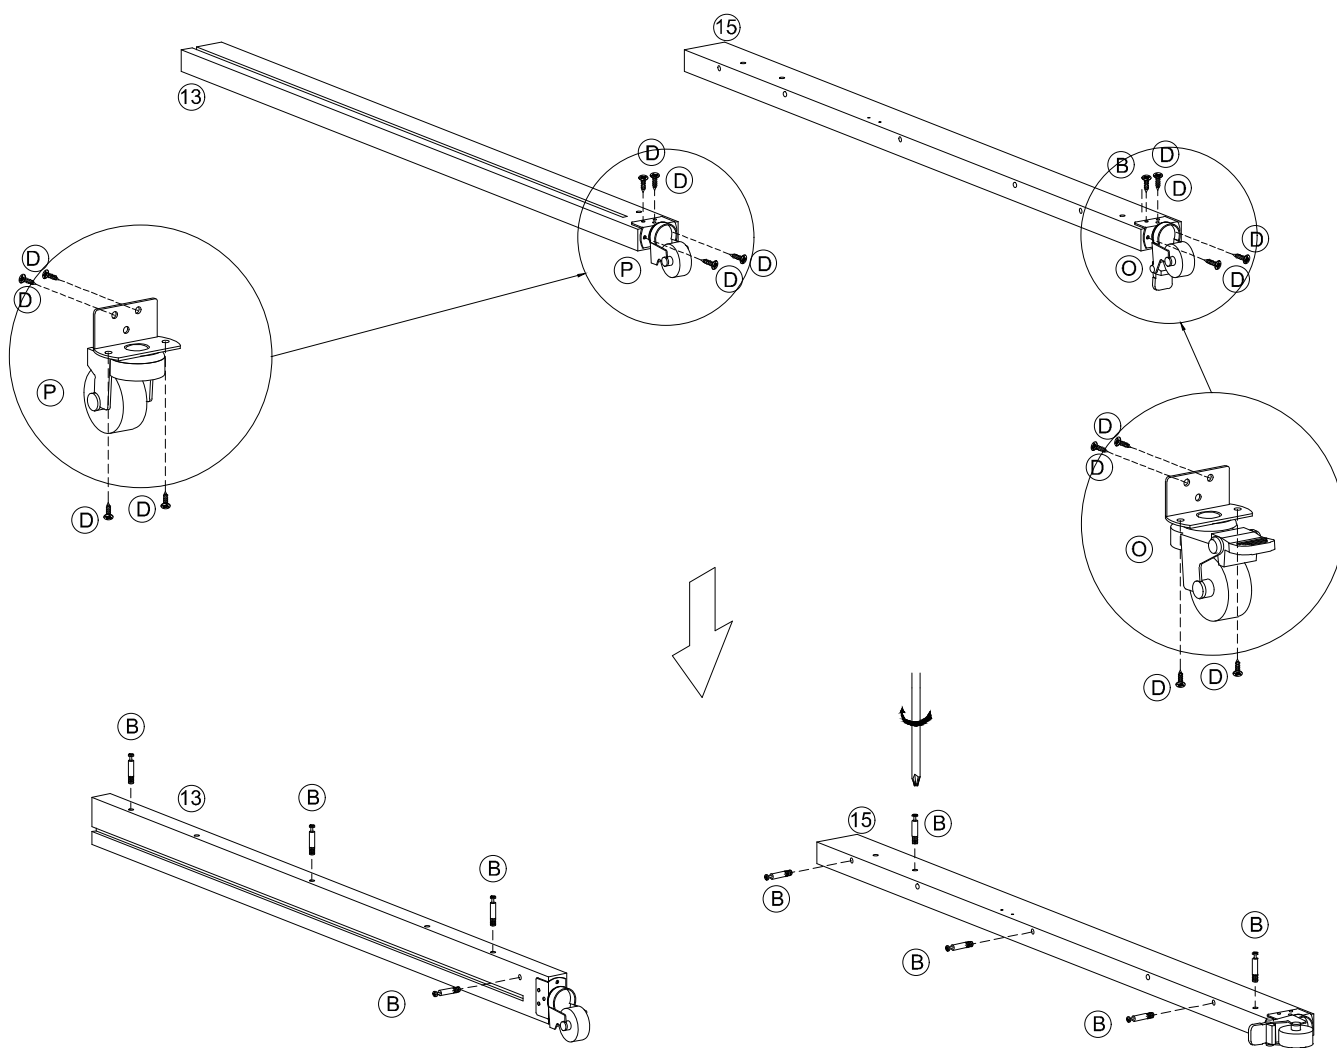


5

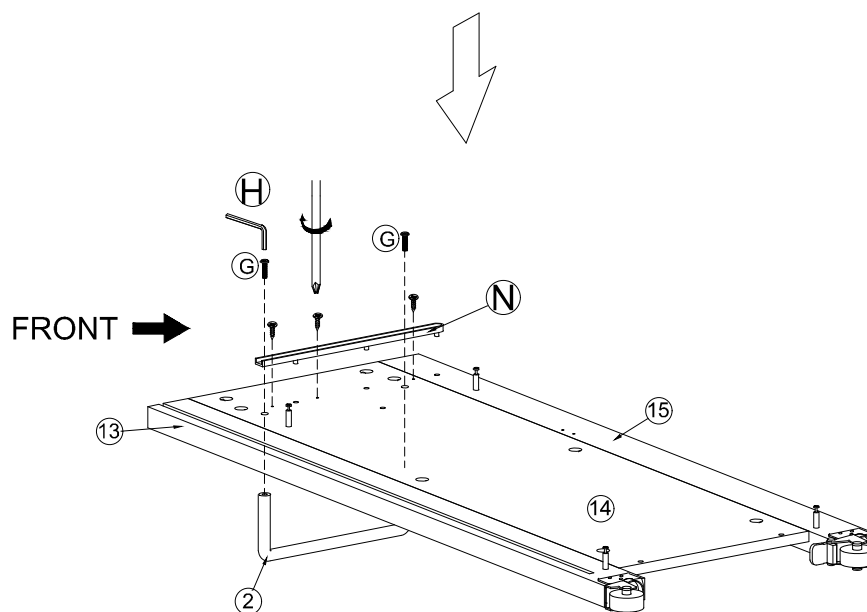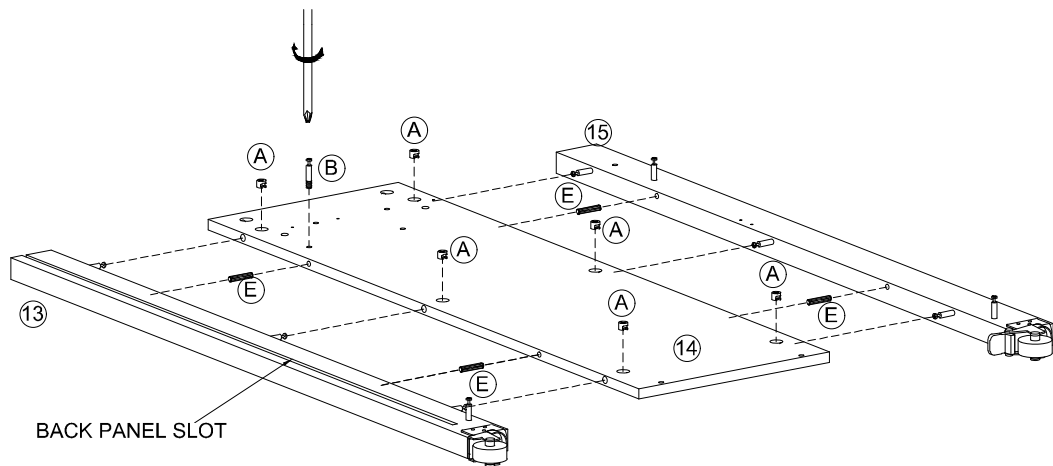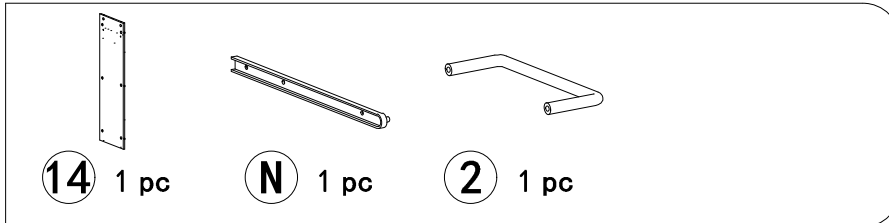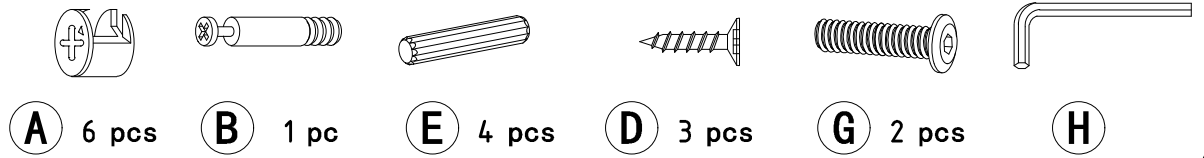


6



A 4 pcs




E 3 pcs

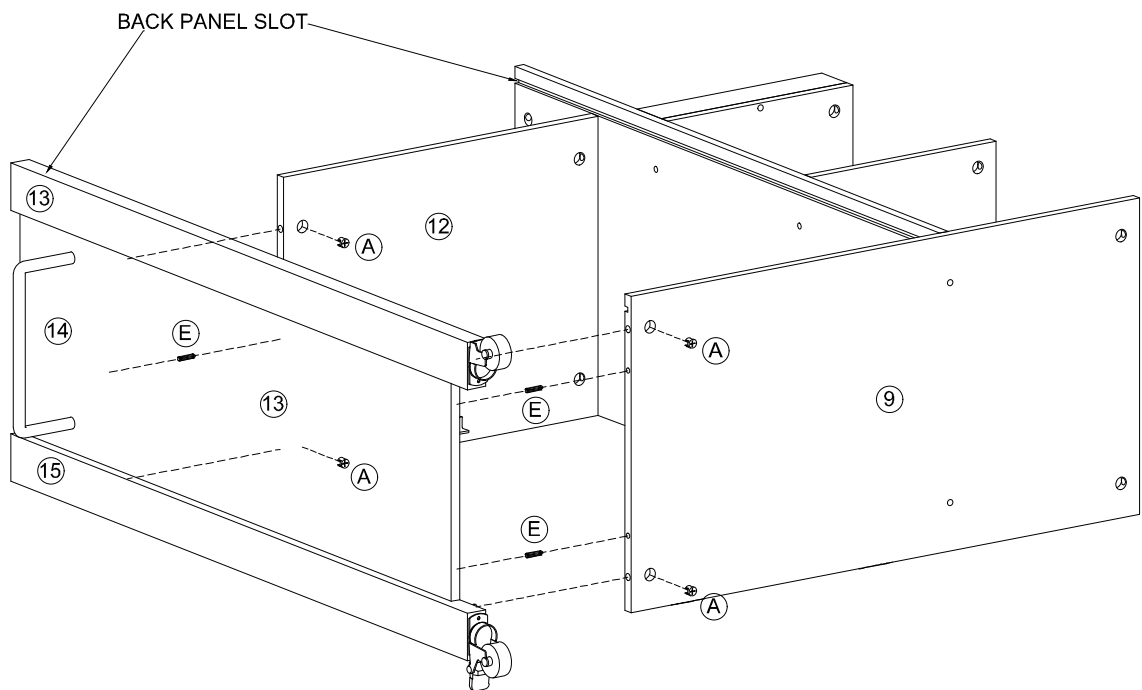


7



B 8 pcs



D 8 pcs



O 1 pc




P 1 pc




3 1 pc



4 1 pc




5 2 pcs

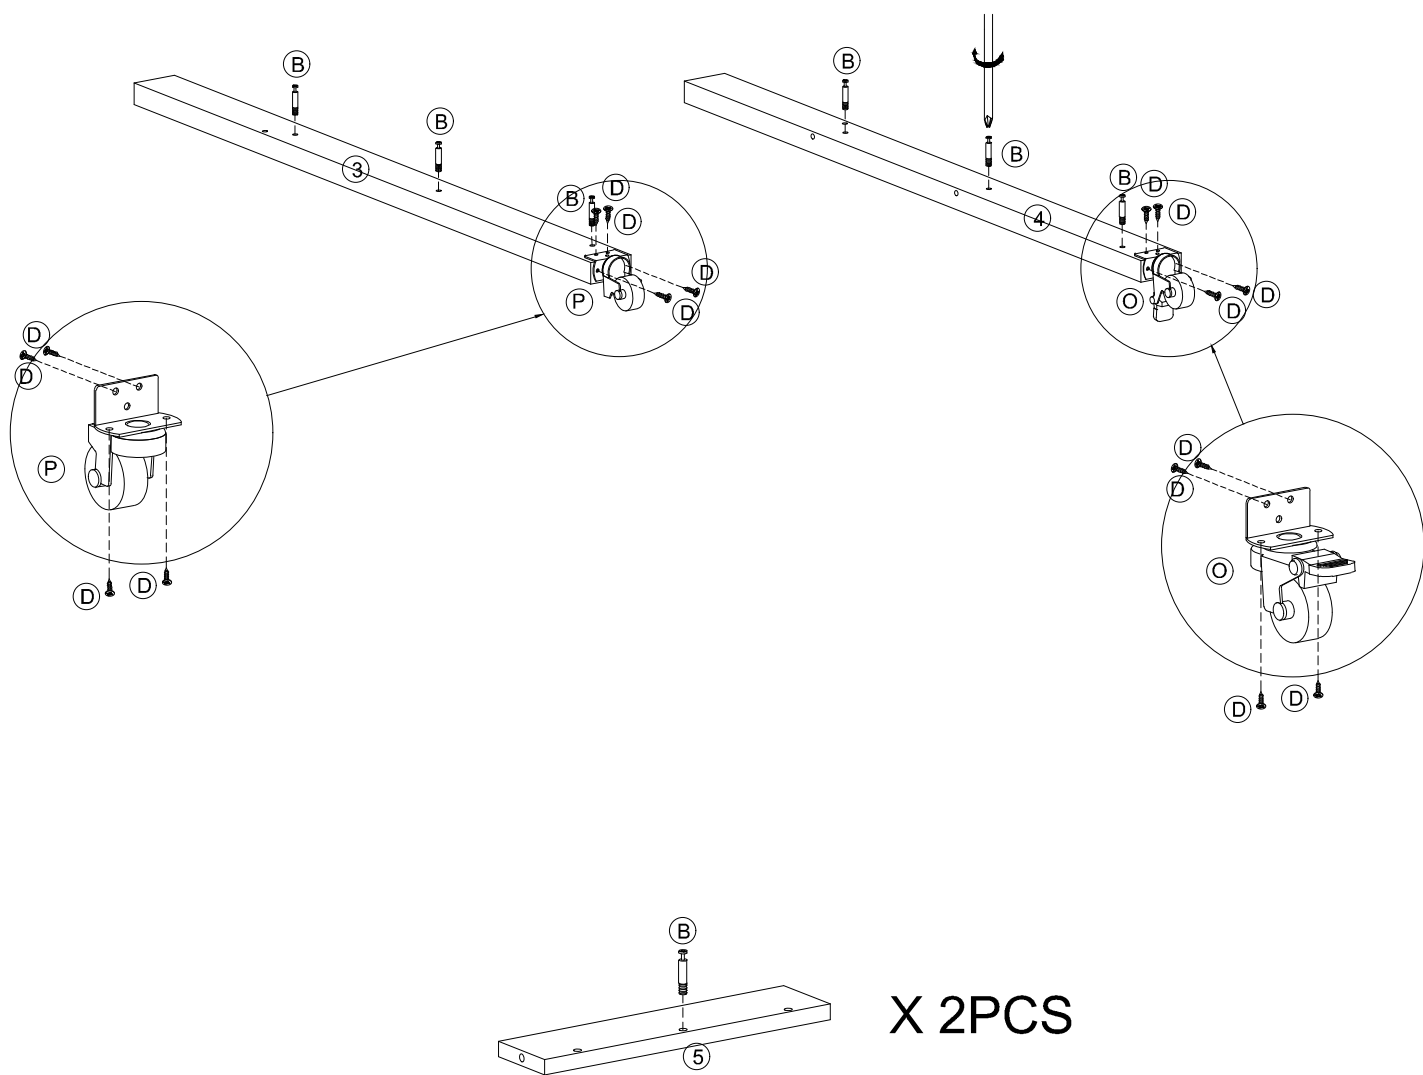



8






A 8 pcs



E 10 pcs

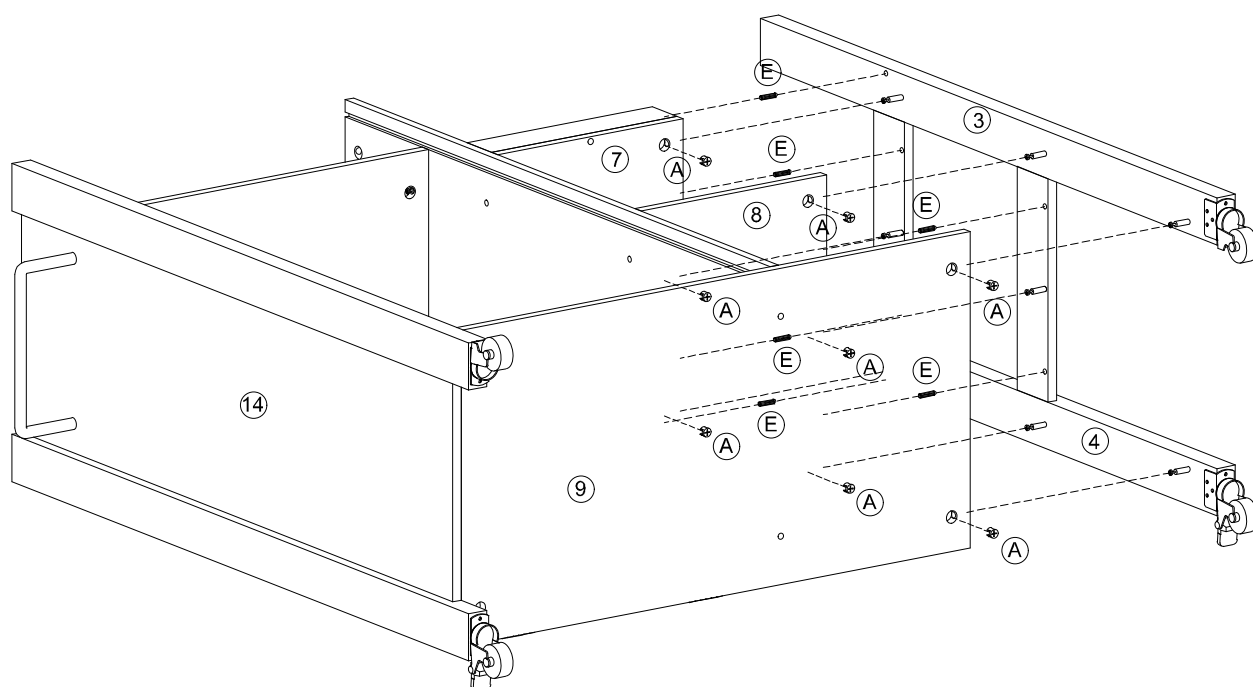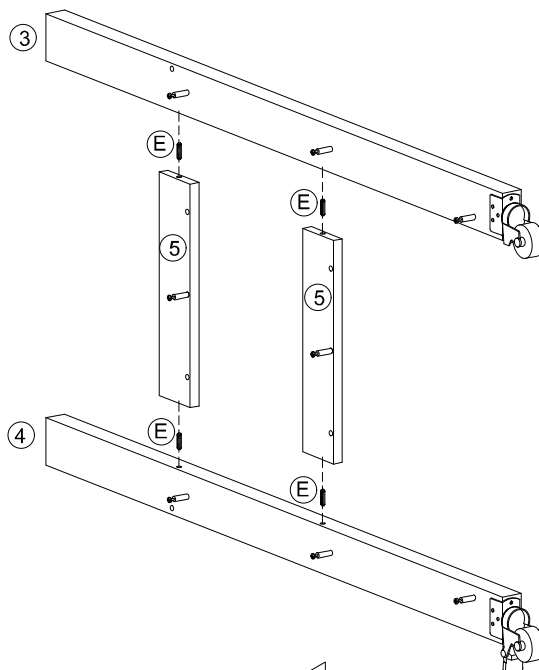

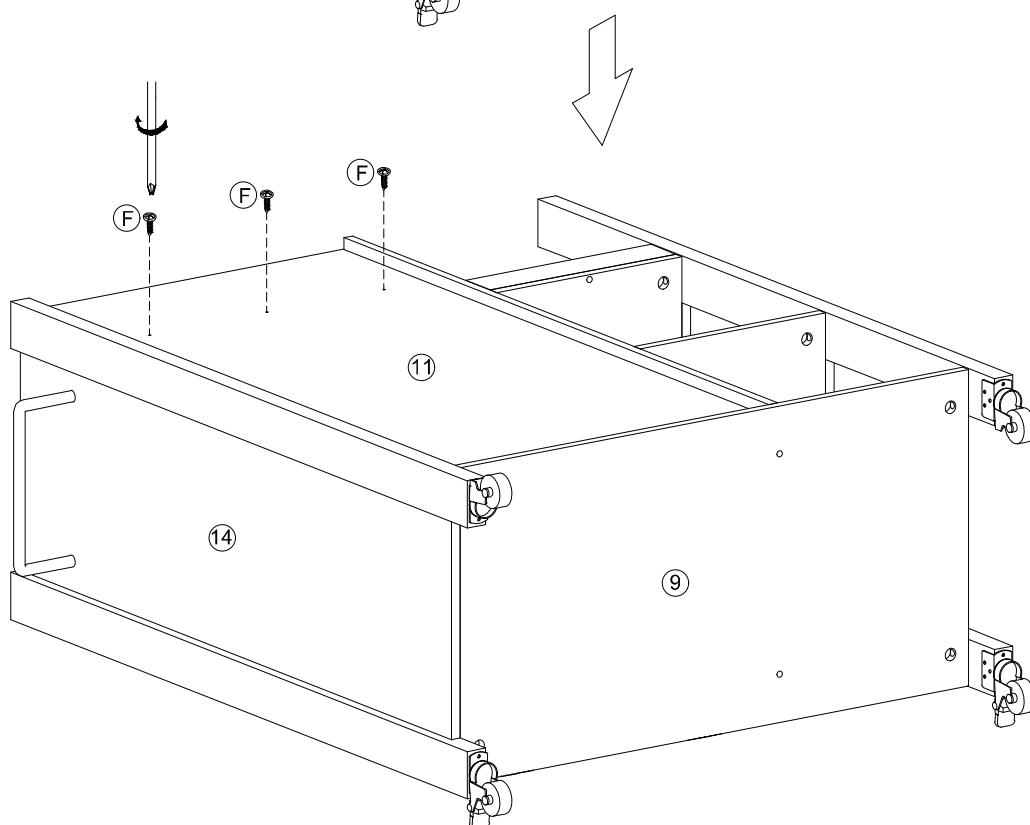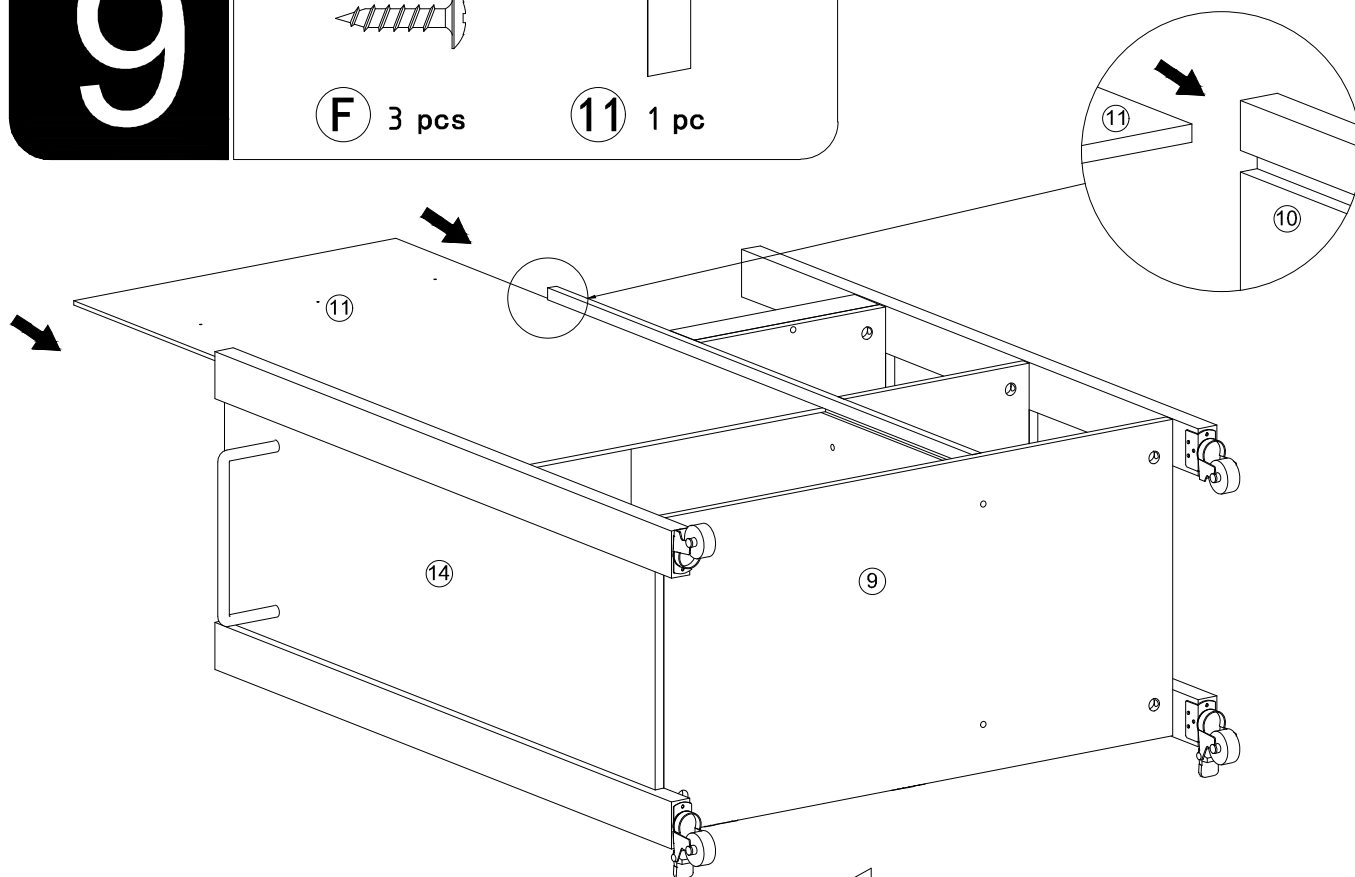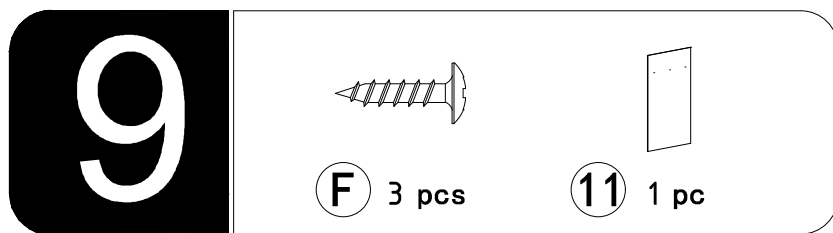


10



A 4 pcs





B 4 pcs



E 6 pcs




1 1 pc

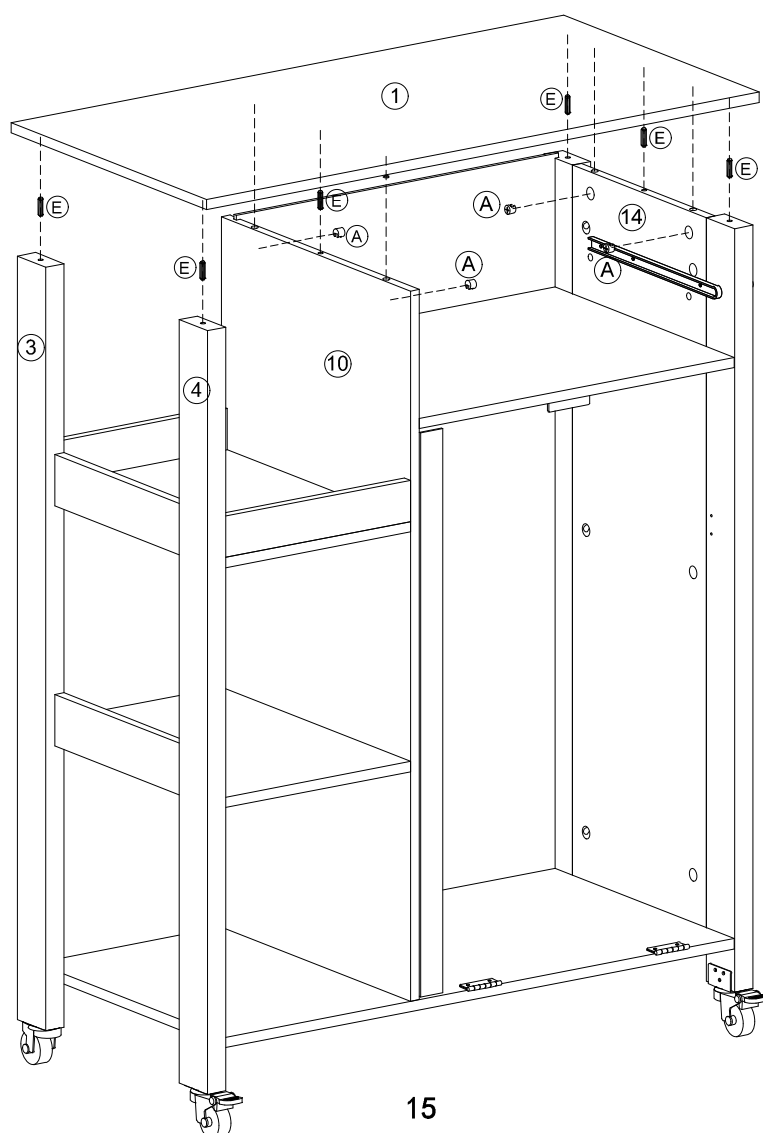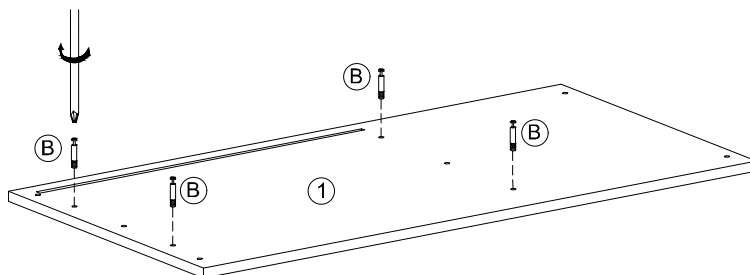


ASSEMBLY INSTRUCTIONS


11




B 2 pcs





D 4 pcs



J 1 pc




16 1 pc

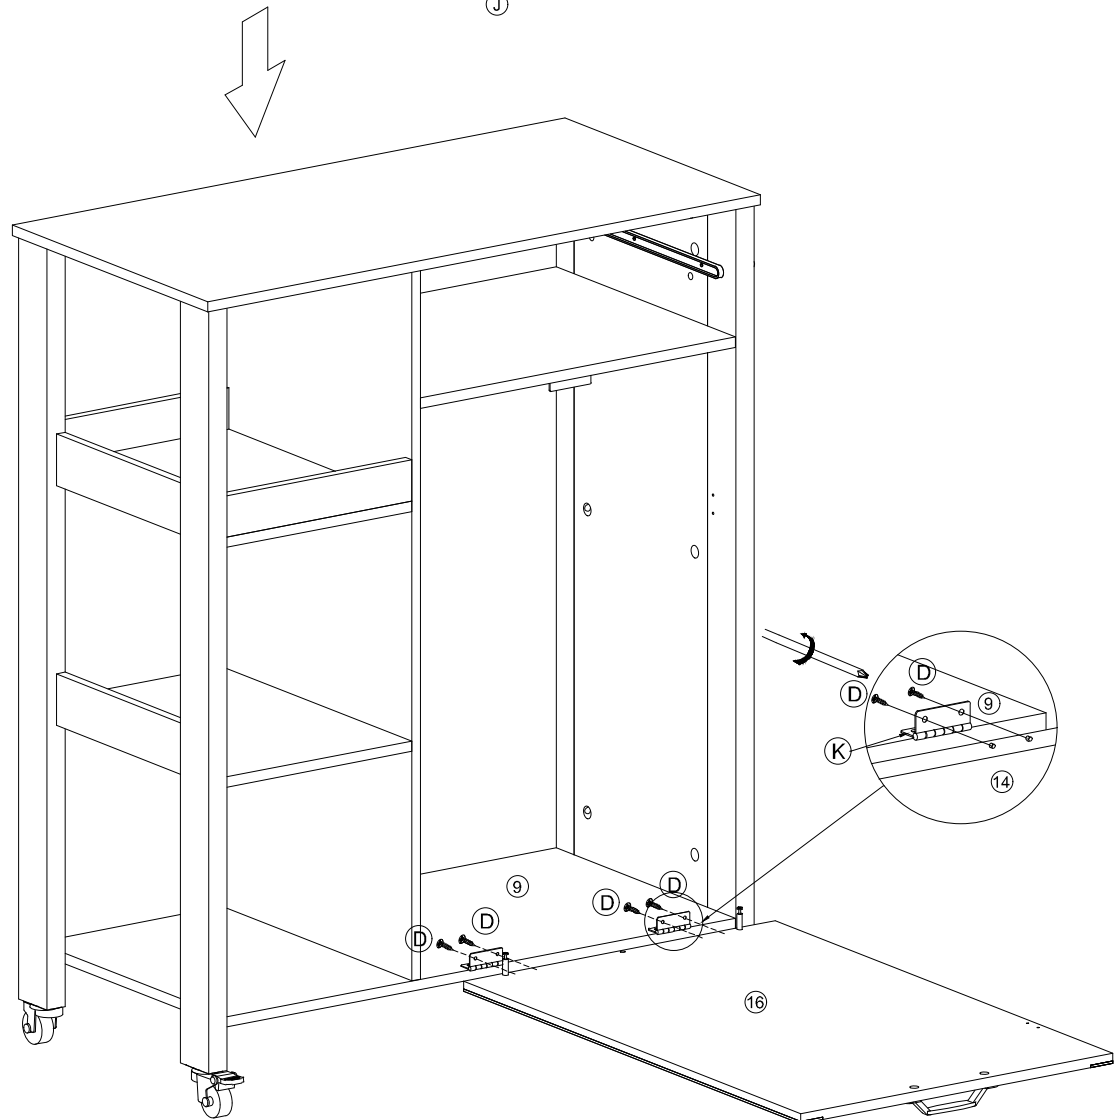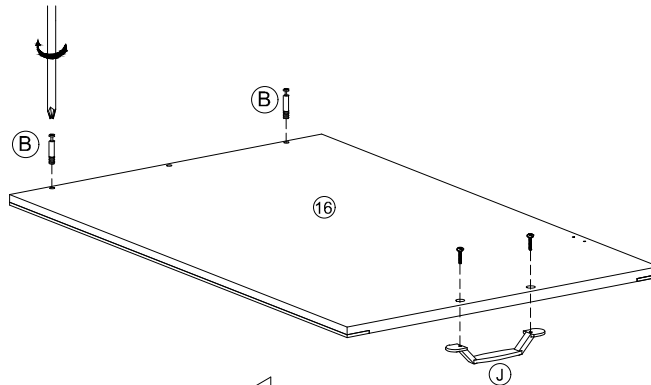


12




A 2 pcs




E 1 pc




17 1 pc

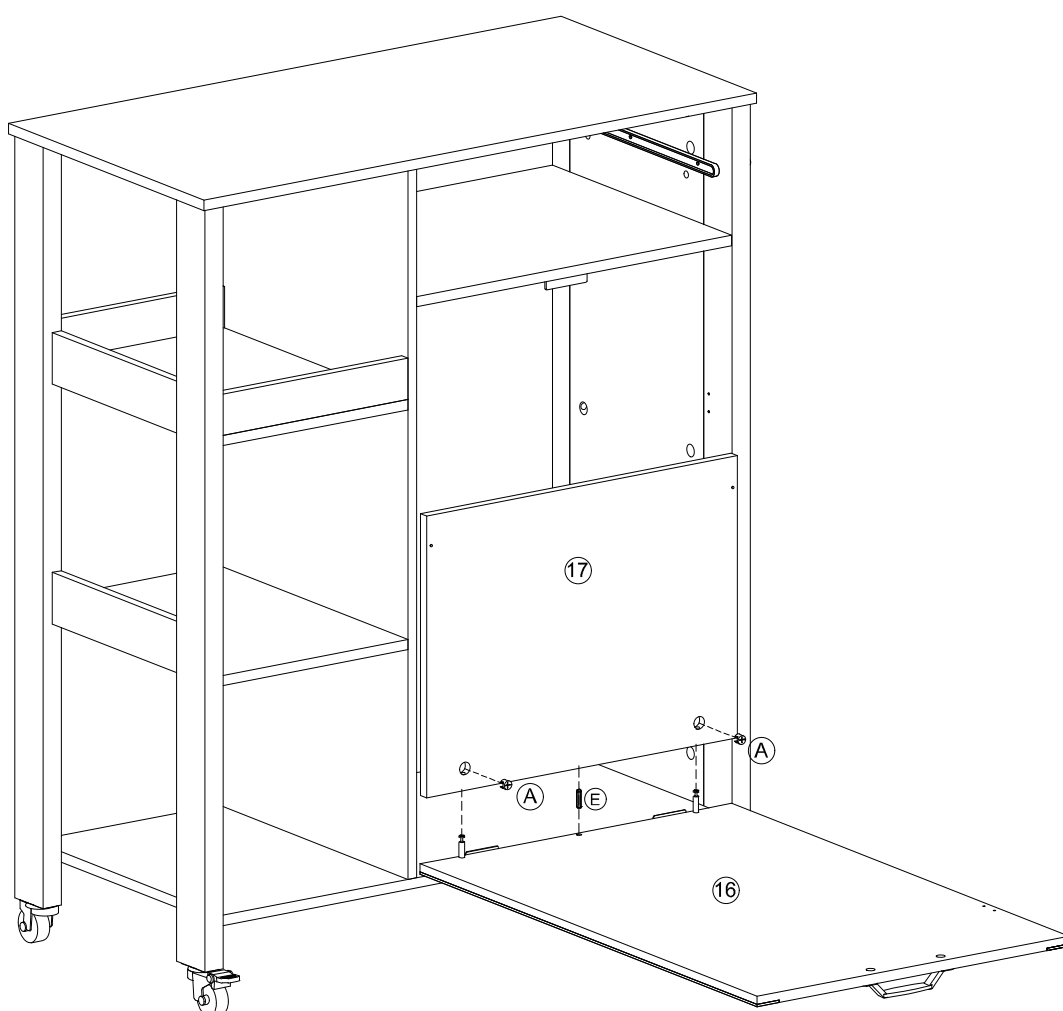

13




F 6 pcs



L 1 pc




M 2 pcs

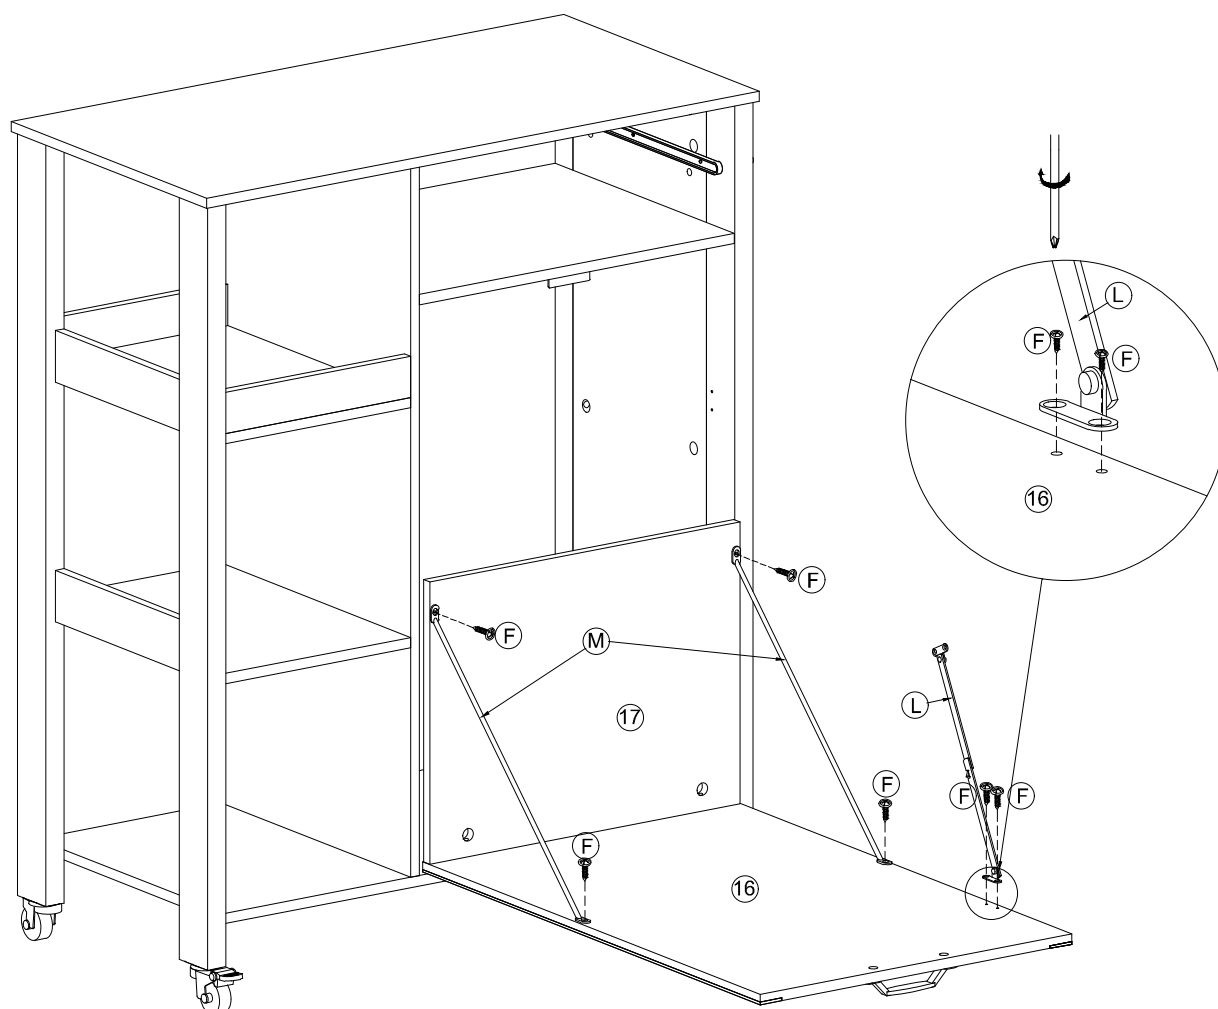

14


F 2 pcs

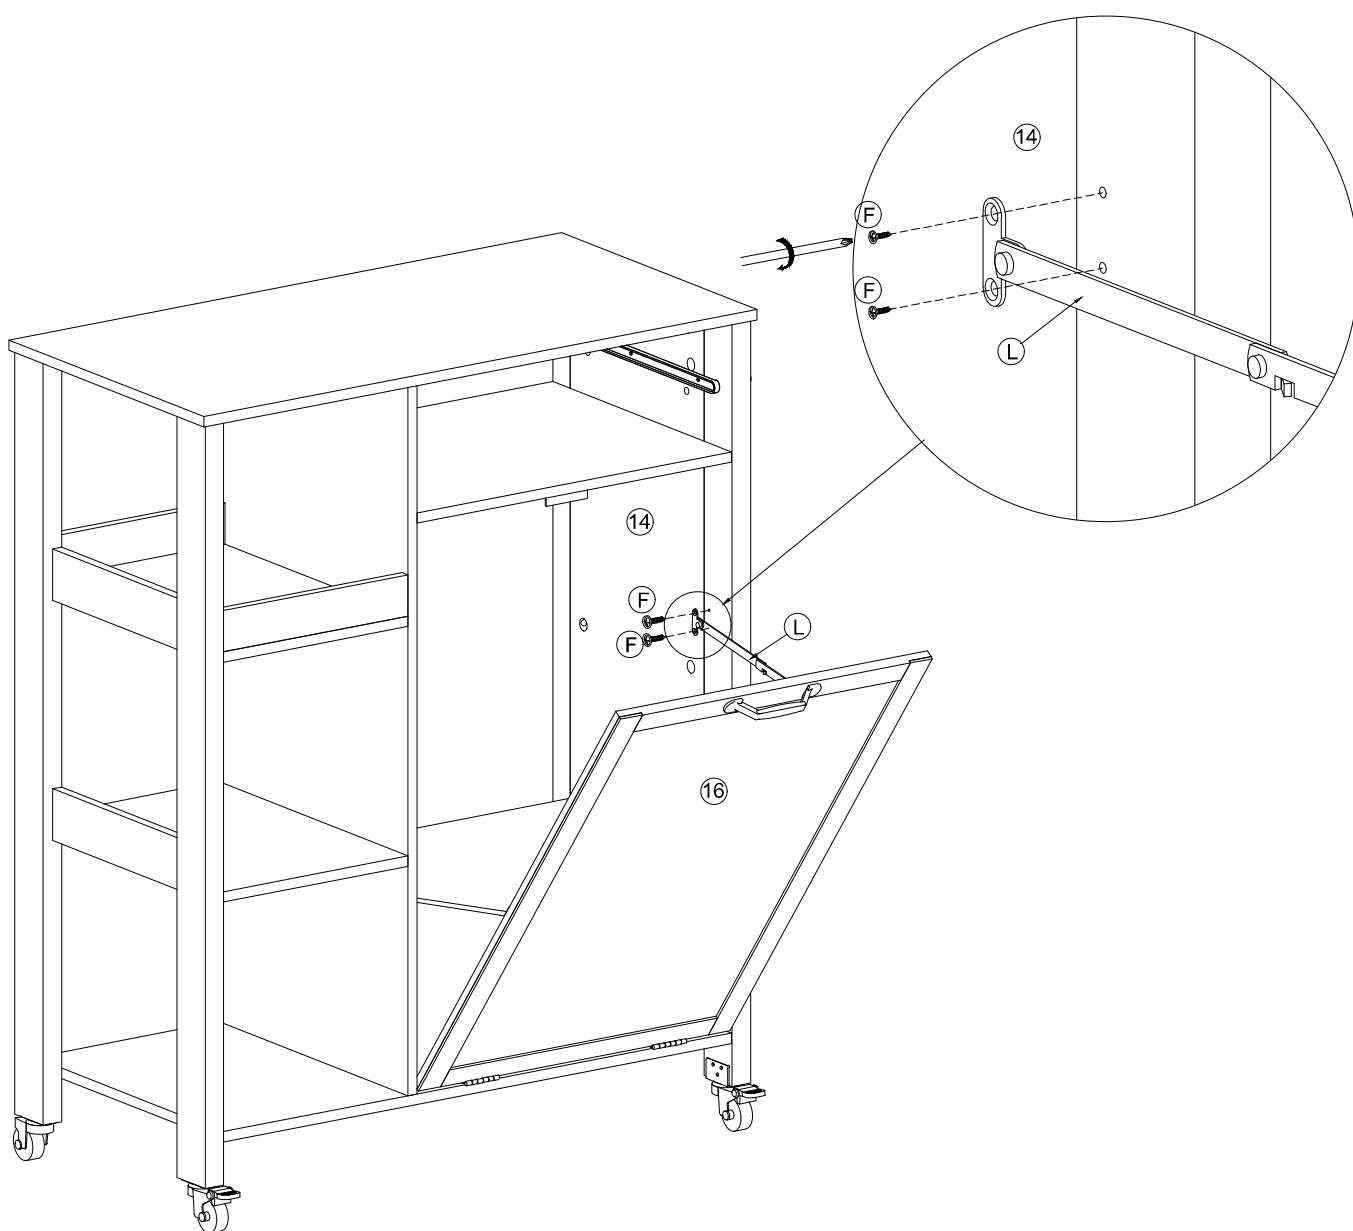

15



A 4 pcs




B 4 pcs




C 4 pcs




H



J 1 pc



18 1 pc




19 1 pc










20 1 pc



21 1 pc




22 1 pc

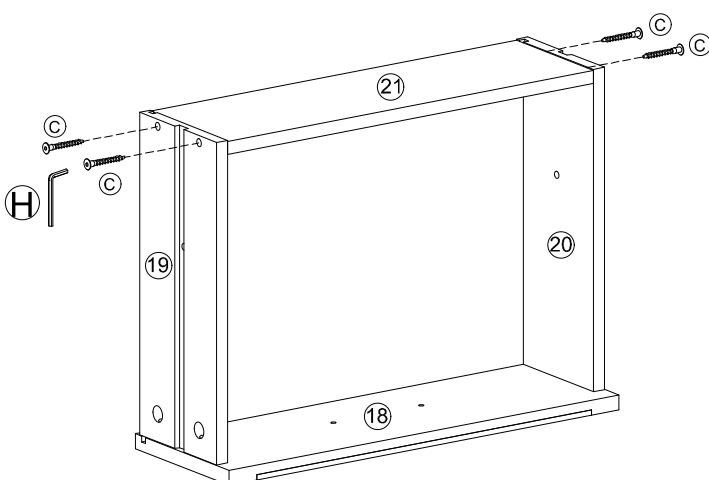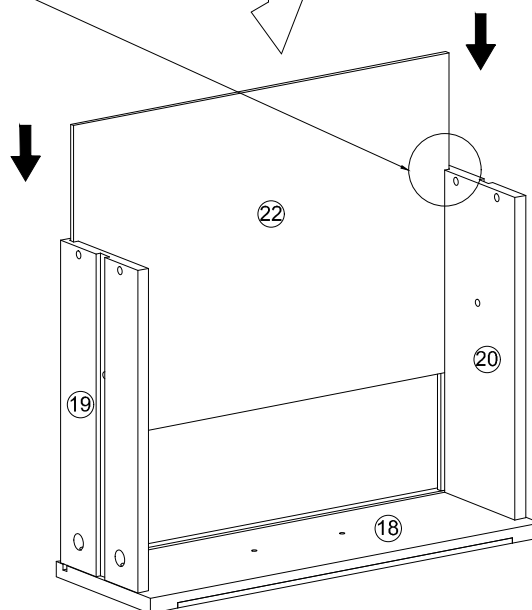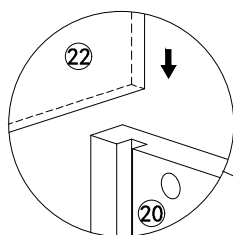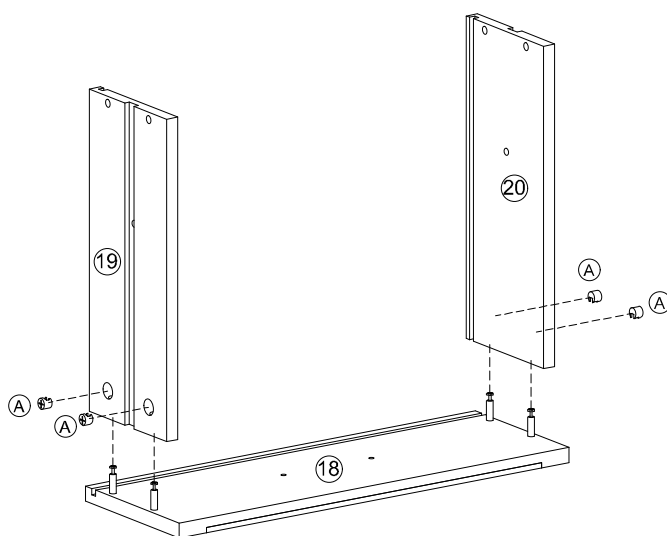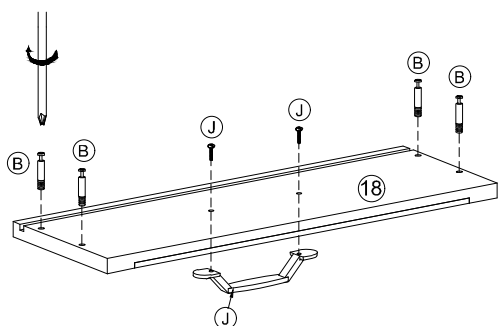

16


N 2 pcs

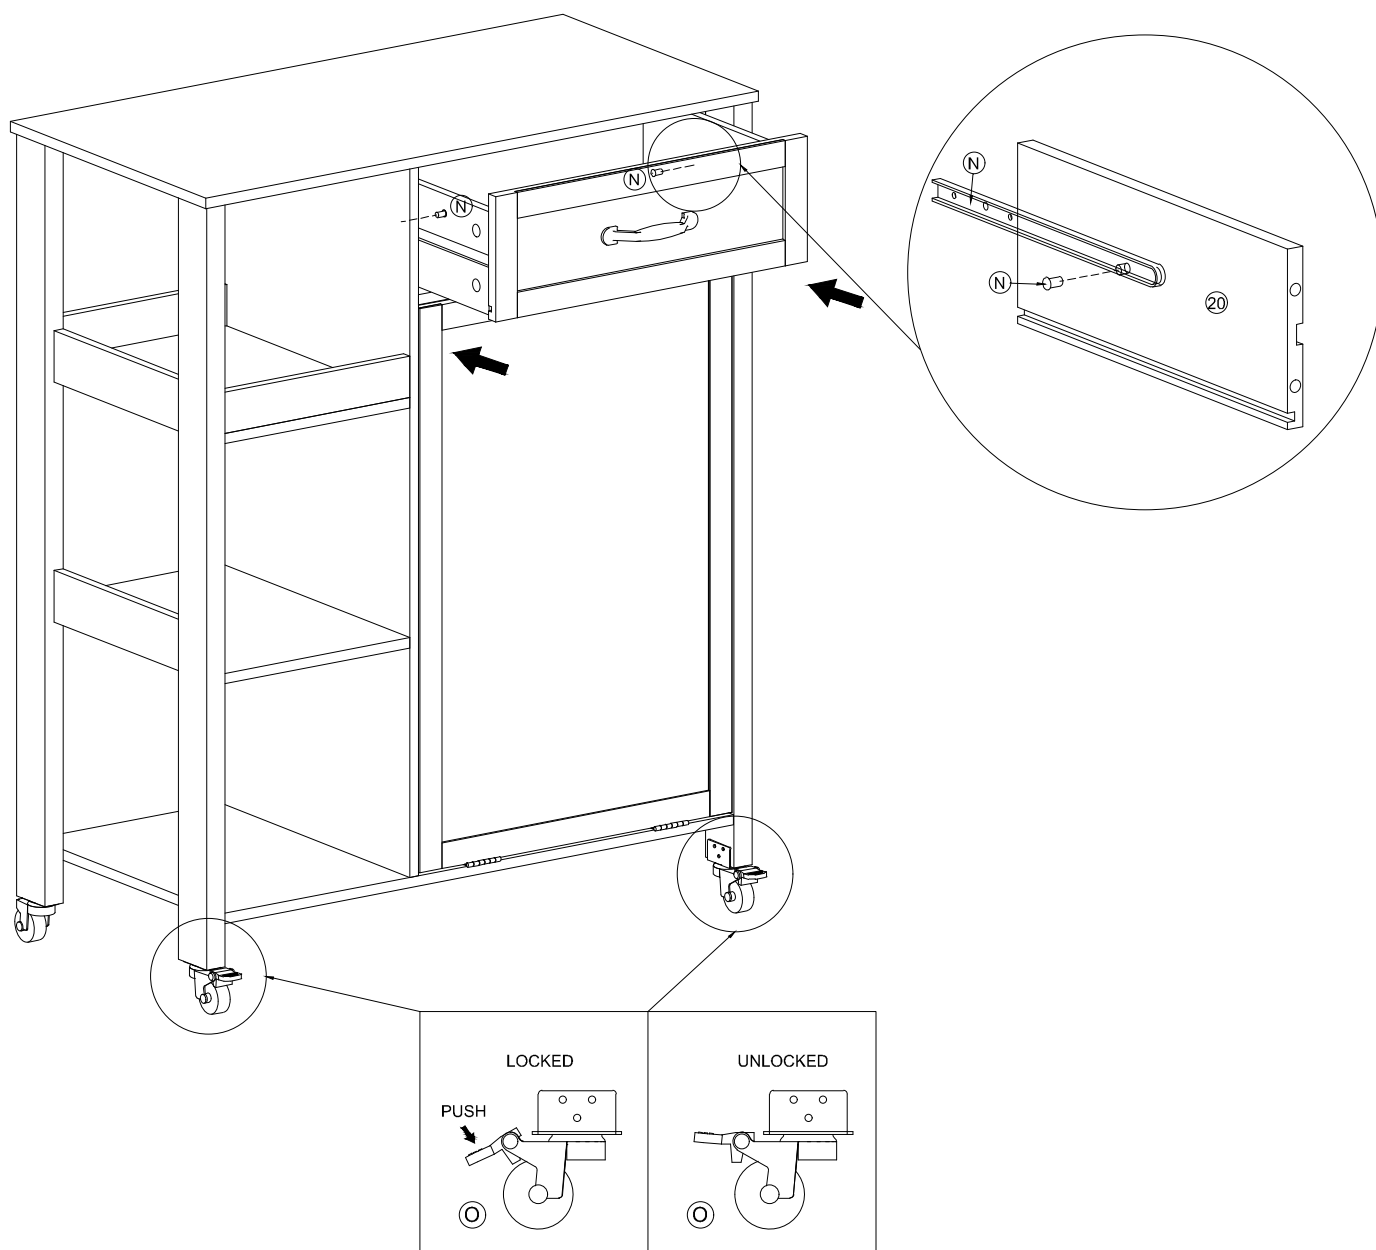

Installation Completed