


# WOODEN TRUNDLE BED

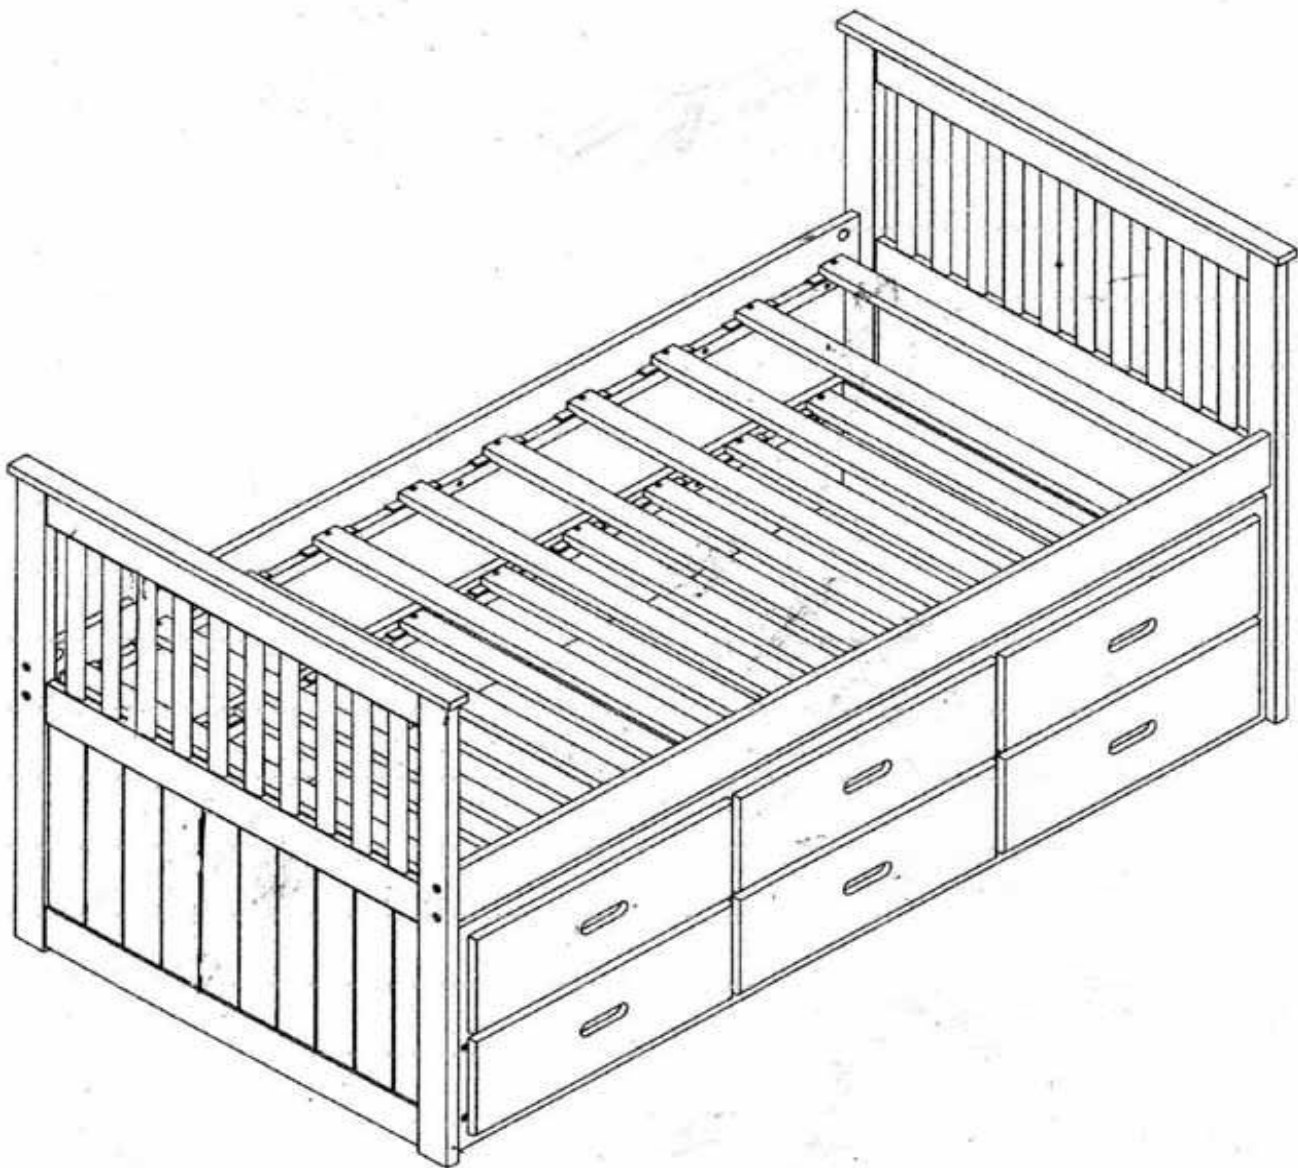













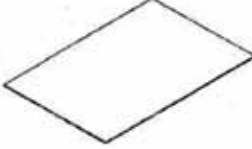



# Assembly Instructions

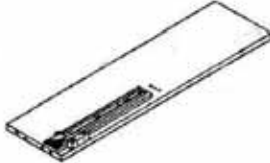

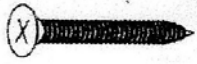
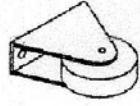

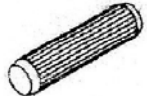
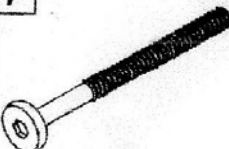
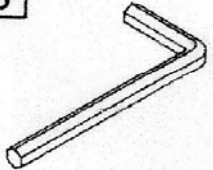
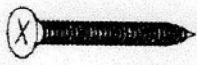
Thank you for purchasing this product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify, and count all parts and metal hardware. Compare with parts list to be sure all parts are present. If any part(s) are missing or damaged, please contact your local furniture dealer. For efficient and speedy service, please indicate the model number and code letter of part(s) needed.

\*\*\* Note: Do not fully tighten screws until fully assembled\*\*\*
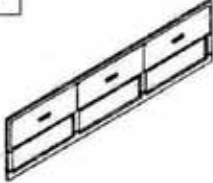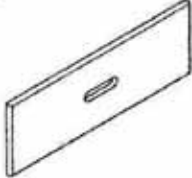
## Parts list & Illustration

<b>A</b> 	<b>B</b> 	<b>C</b> 	<b>D</b> 
Side panel 2pcs	Front side rail 1pc	Back side rail 1pc	Slats 20pcs
<b>E</b> 	<b>F</b> 	<b>G</b> 	<b>H</b> 
Trundle left side panel 1pc	Trundle right side panel 1pc	Trundle back panel 1pc	Long wooden bar 1pc
<b>I</b> 	<b>J</b> 	<b>K</b> 	<b>L</b> 
Short wooden bars 2pcs	Trundle front panel 1pc	Drawer front panel 3pcs	Drawer left side panel 3pcs
<b>M</b> 	<b>N</b> 	<b>O</b> 	<b>P</b> 
Drawer right side panel 3pcs	Drawer back panel 3pcs	Drawer bottom panel 3 pcs	Short wooden bars 2pcs

# Hardware & Illustration
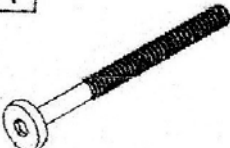
<p>1</p>  <p><math>\phi 1/4 \times 70 \text{ mm}</math></p>	<p>2</p>  <p><math>\phi 1/4" \times 15 \text{ mm}</math></p>	<p>3</p>  <p><math>\phi 8 \times 30 \text{ mm}</math></p>	<p>4</p> 	<p>5</p>  <p><math>\phi 8 \times 20 \text{ mm}</math></p>
<p>Hex-Head bolts 8 pcs</p>	<p>Horizontal-Hole bolts 8 pcs</p>	<p>Wood screws 40 pcs</p>	<p>Caster 5 pcs</p>	<p>Wood screws 10 pcs</p>
<p>6</p>  <p><math>\phi 8 \times 30 \text{ mm}</math></p>	<p>7</p>  <p><math>\phi 1/4 \times 50 \text{ mm}</math></p>	<p>8</p>  <p><math>\phi 1/4"</math></p>	<p>9</p>  <p><math>\phi 8 \times 25 \text{ mm}</math></p>	
<p>Wood plugs 28 pcs</p>	<p>Hex-Head bolts 18 pcs</p>	<p>Allen key 1 pc</p>	<p>Wood screws 24 pcs</p>	




## STEP 1

Insert nut (2) into front side rail (B) and back side rail (C).

Attached the front side rail (B) and back side rail (C) to side panel (A,) with bolts (1).


Tighten bolts (1) with allen key (8)

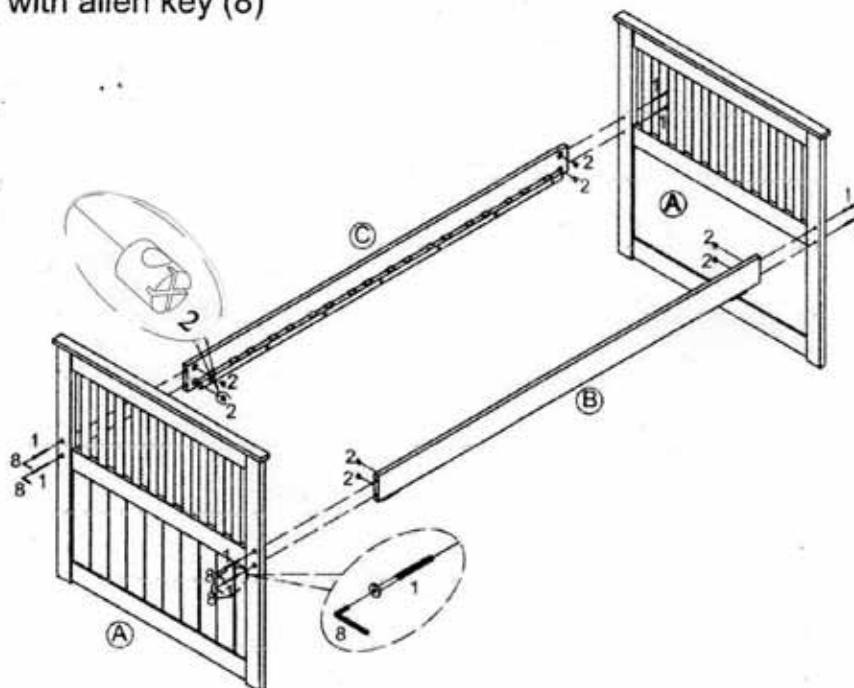

## STEP 2

Attached slats (D) front side rail (B) and back side rail (C) with wood screws (3).


Tighten screws (3) with phillips head screw driver (not included).

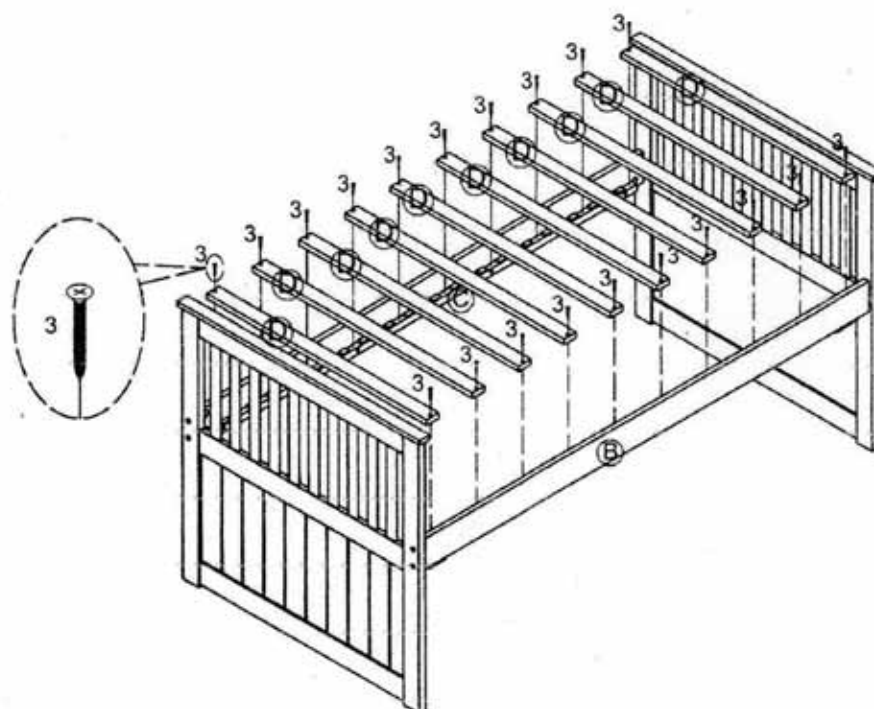

## STEP 3

Attached caster (4) to the trundle left side panel (E) and trundle right side panel (F) with wood screws (5).


Tighten screws (5) with phillips head screw driver (not included).

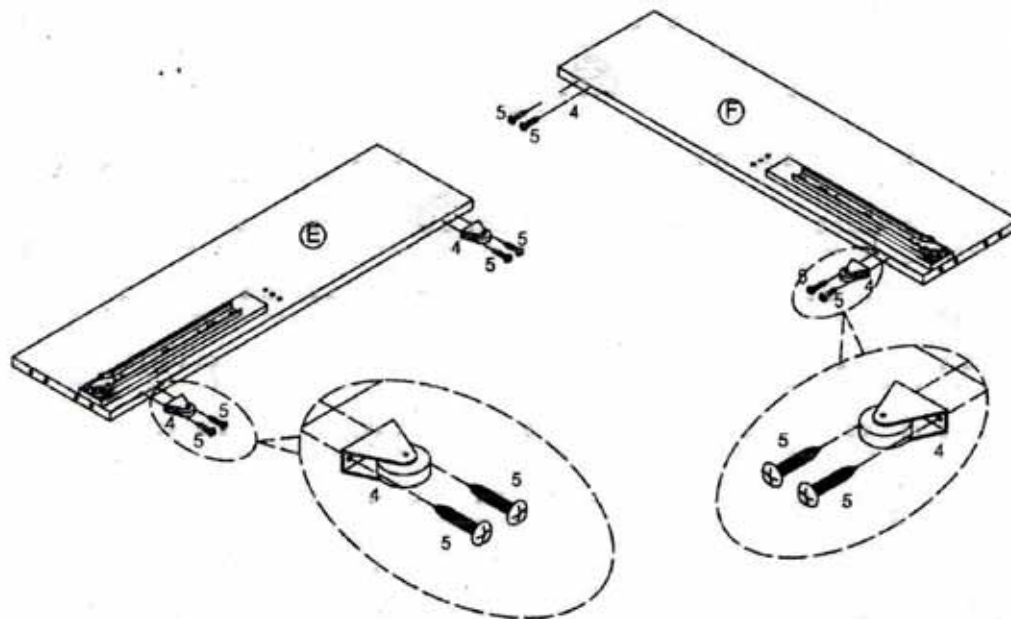

## STEP 4

Attached caster (4) to the trundle back panel (G) with wood screws (5).

Tighten screws (5) with phillips head screw driver (not included).

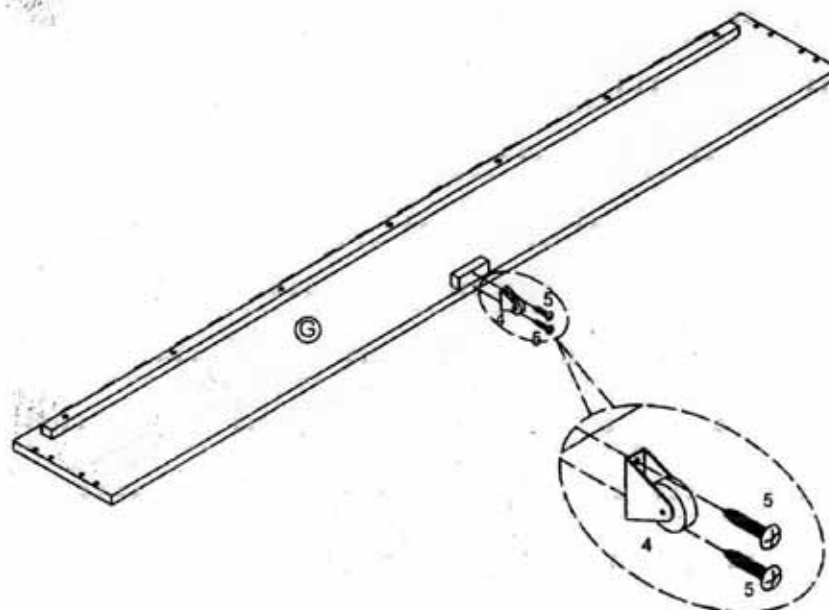


## STEP 5

Insert wood plugs (6) into short wooden bars(I,P).

Attached short wooden bars(I,P) to long wooden bar (H) with bolts (7)

Tighten bolts (7) with allen key (8)

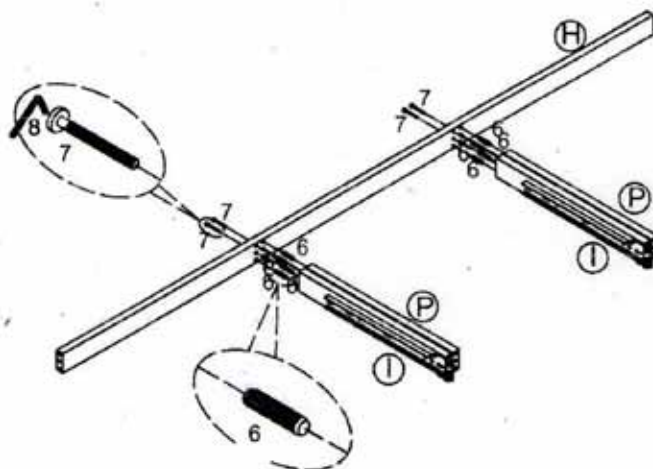


## STEP 6

Insert wood plugs (6) into long wooden bar (H).

Attached trundle left side panel (E) and trundle right side panel (F) to long wooden bar (H) with bolts (7)

Tighten bolts (7) with allen key (8)

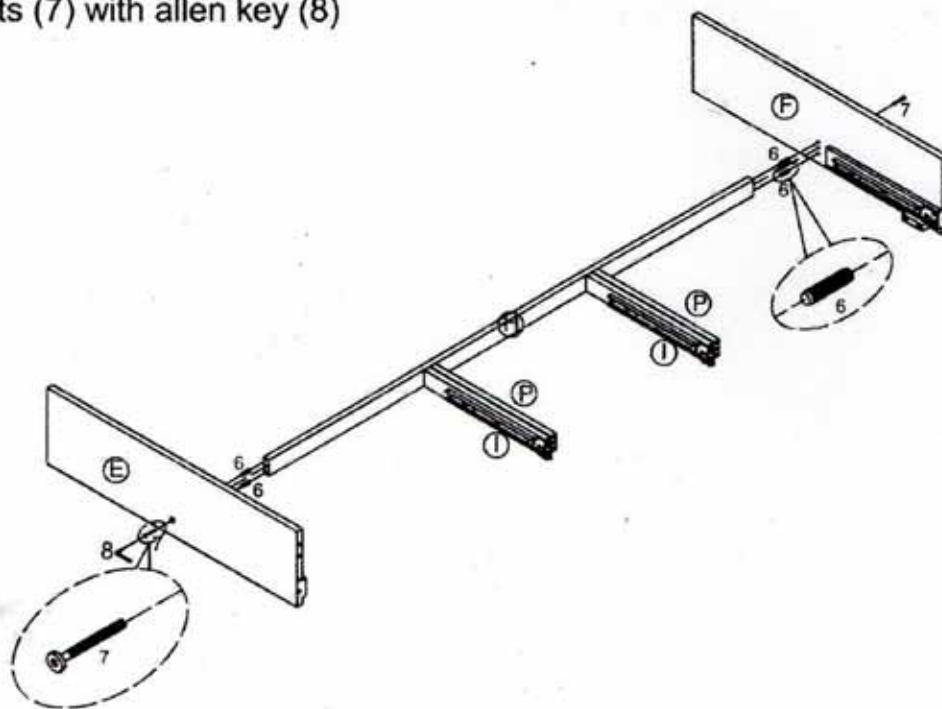




## STEP 7

Insert wood plugs (6) into trundle back panel (G) to trundle left side panel (E).

Attached trundle back panel (G) to trundle left side panel (E) and trundle right side panel (F) with bolts (7)

Tighten bolts (7) with allen key (8)

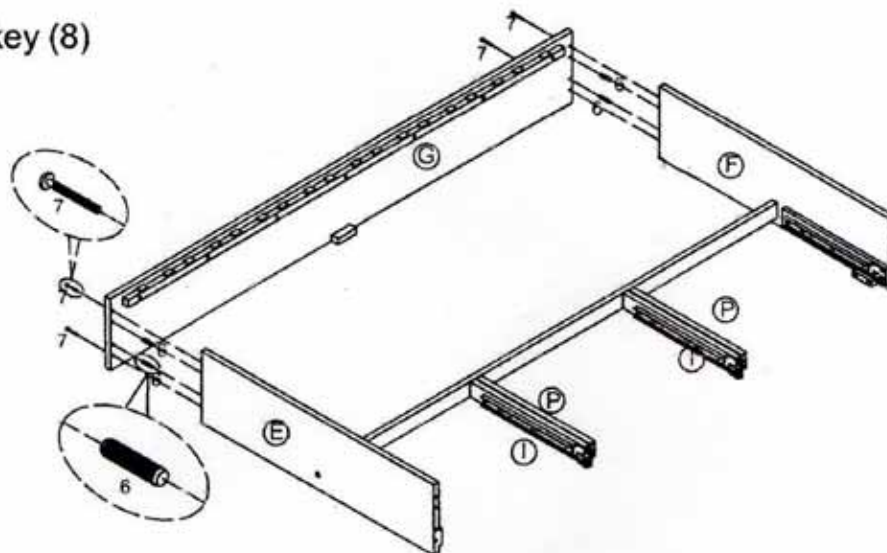


## STEP 8

Insert wood plugs (6) into trundle back panel (G) to trundle left side panel (E) and short wooden bars (I, P).


Attached trundle front panel (J) to trundle left side panel (E) and trundle right side panel (F) and short wooden bars (I, P) with bolts (7)

Tighten bolts (7) with allen key (8)

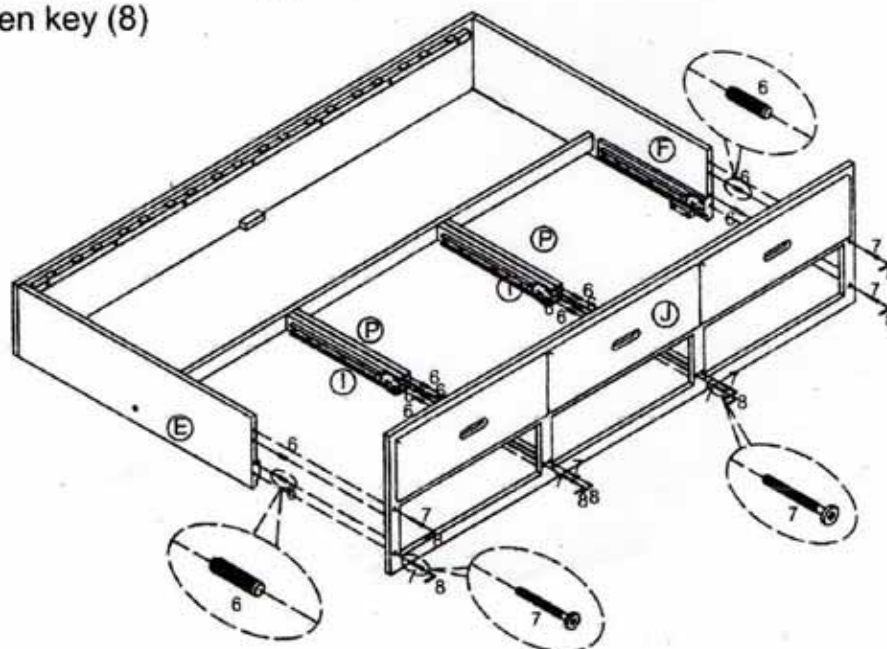

## STEP 9


Attached the drawer bottom (O) to the drawer front (K) Slide drawer bottom (O) into the grooves of the drawer front (K).

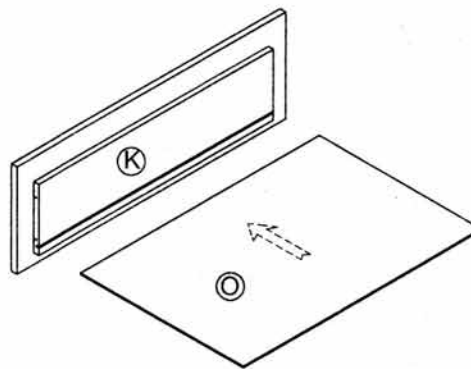

## STEP 10


Attached drawer left side pane (L) and right side panel (M) into bottom panel (O) with flat head screws (9).

Make sure drawer bottom (O) is properly inserted into the groove of drawer left side pane (L) and right side panel (M)

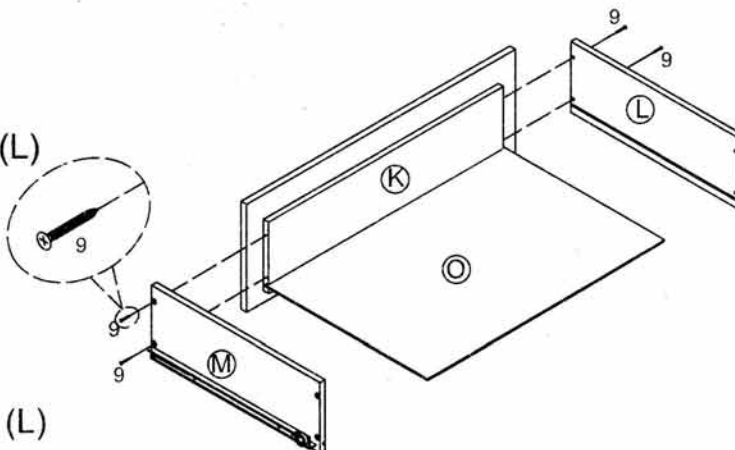

## STEP 11

Attached drawer back (N) to drawer left side panel (L) and right side panel (M) with flat head screws (1). Make sure drawer bottom (C) is properly inserted into the groove of drawer back (N).

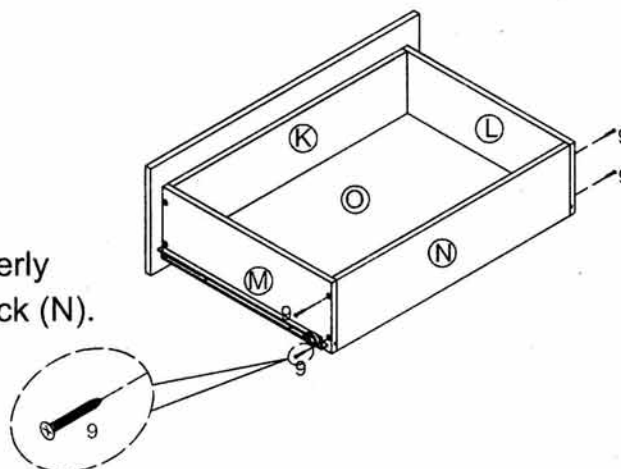




## STEP 12


Attached slats (D) to trundle back panel (G) and trundle front panel (J) with wood screws (3).

Tighten screws (3) with phillips head screw driver (not included).

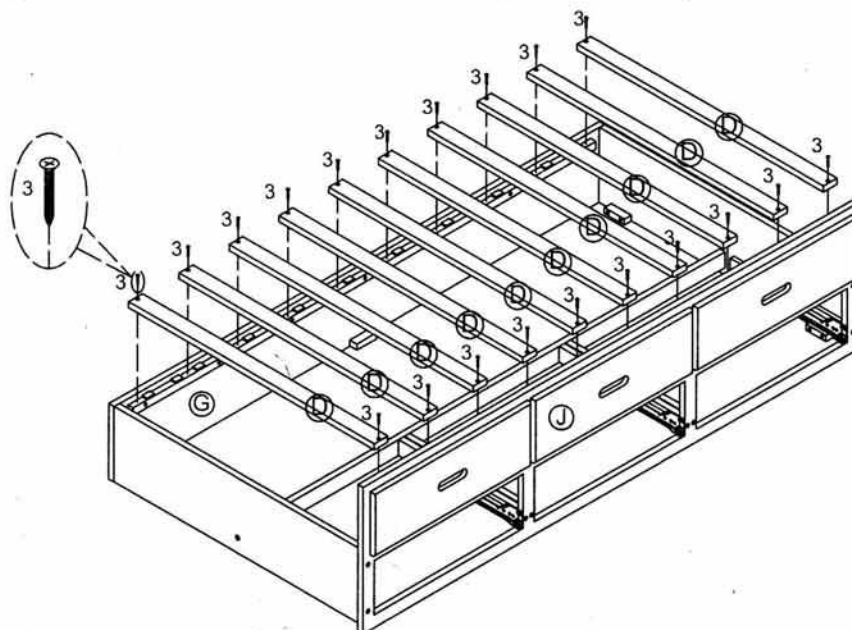

## STEP 13

Insert drawer into trundle bed.

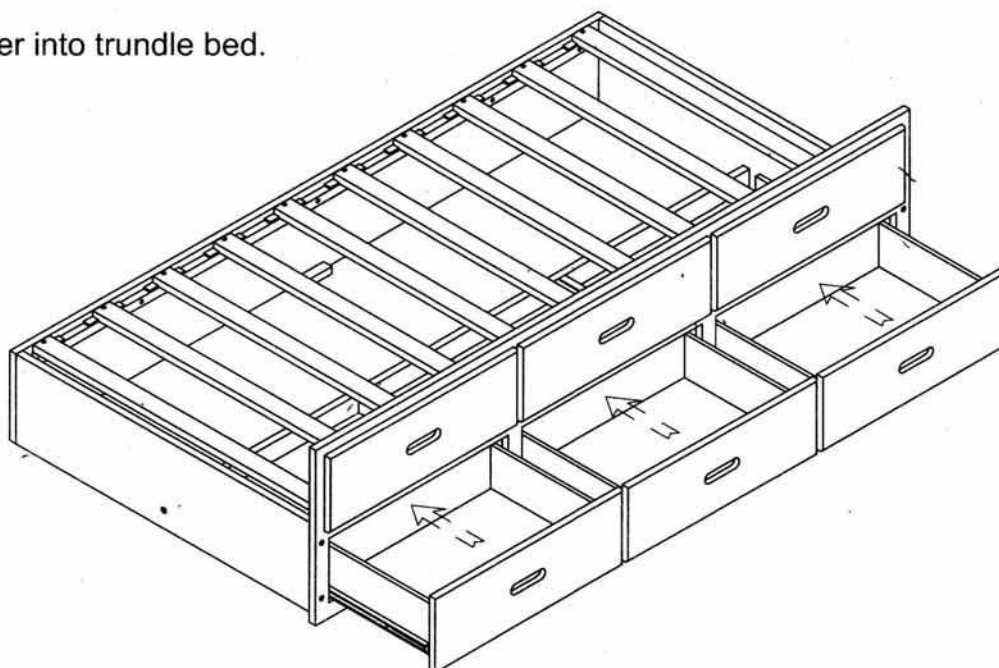

## STEP 14

Insert trundle bed into top bed.

