


IMPORTANT INSTRUCTIONS AND OPERATING MANUAL

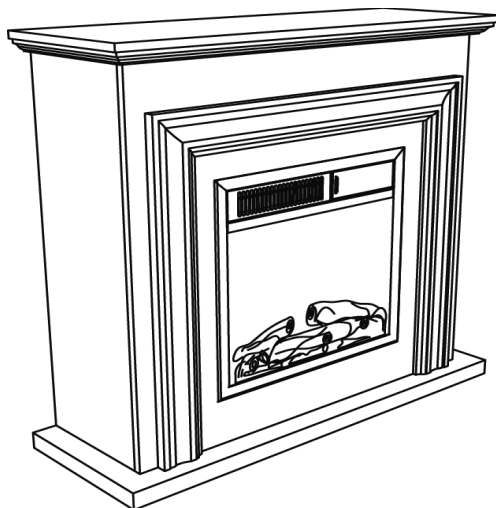

ELECTRIC FIREPLACE

THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.



WARNING

- Unit can tip over causing severe injury or death.
- Anchor unit to study on wall (if instructed to).
- Do Not allow children to climb on unit.
- Put heavy items on lower shelves or drawers.



CERTIFIED UNDER CANADIAN AND
AMERICAN NATIONAL STANDARDS: ETL



Contact Us !

DO NOT RETURN THIS PRODUCT!

Contact our friendly customer service team first for help.

DATED PROOF OF PURCHASE REQUIRED FOR WARRANTY SERVICE.

[Helpful Hints]

PEOPLE NEEDED FOR ASSEMBLY: 1-2

ESTIMATED ASSEMBLY TIME: 1 HOUR

-Open your item in the area you plan to keep it to avoid excessive heavy lifting.



-Identify, sort and count the parts before attempting assembly.



-Make sure to always face the point on the top of the Cam Lock towards the outer edge.



-Use all the nails provided for the back panel and spread them out equally.



-Back panel must be used to make sure your unit is sturdy.




-Do NOT use harsh chemical or abrasive cleaner on this item.


-Never push, pull, or drag your furniture.




PACKING LIST

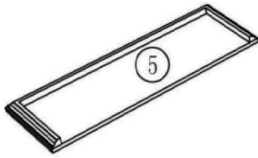


TOP

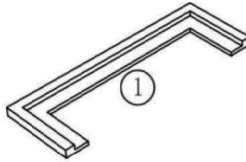


BOTTOM

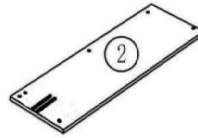


SIDE PANEL

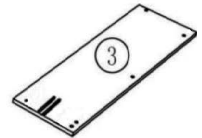


SIDE PANEL

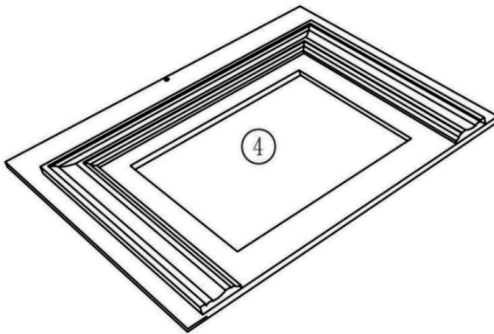


FRONT

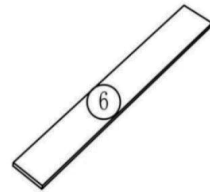


RAIL

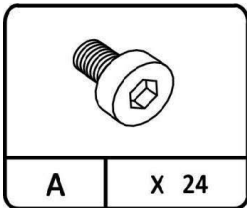


M6X12 SCREW

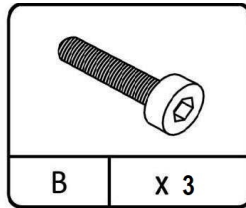


M6X28 SCREW

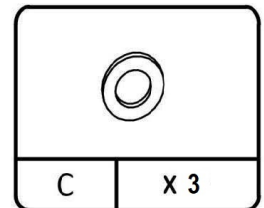


WASHER

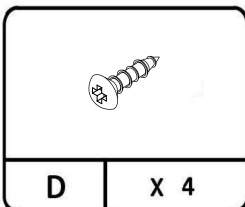

Ø4 x 12.7 SCREW

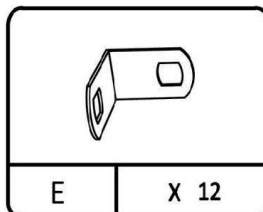


L SHAPE BRACKET

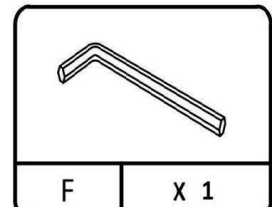


ALLEN KEY

DIMENSIONS


FRONT

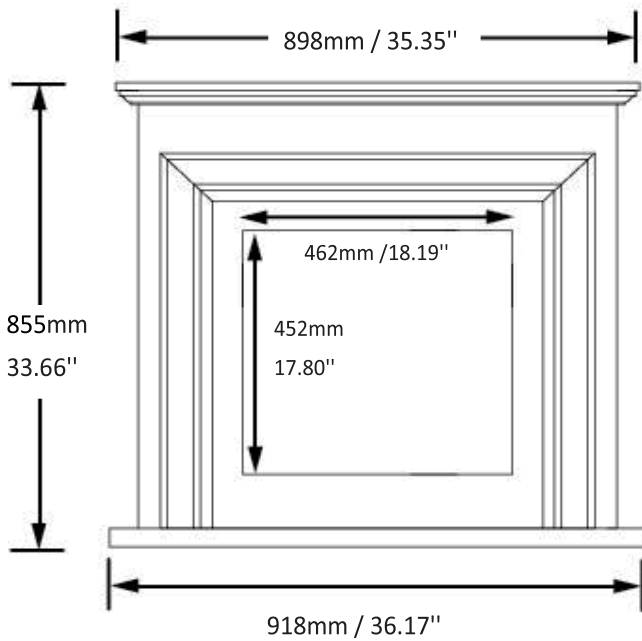

SIDE

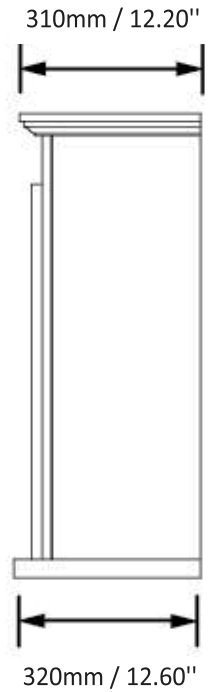


TOP

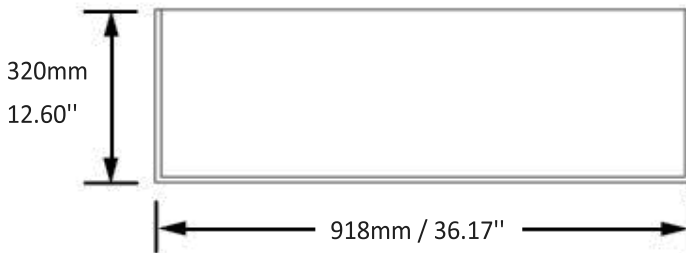




ASSEMBLY

Before installing this fireplace, please read the following steps carefully.

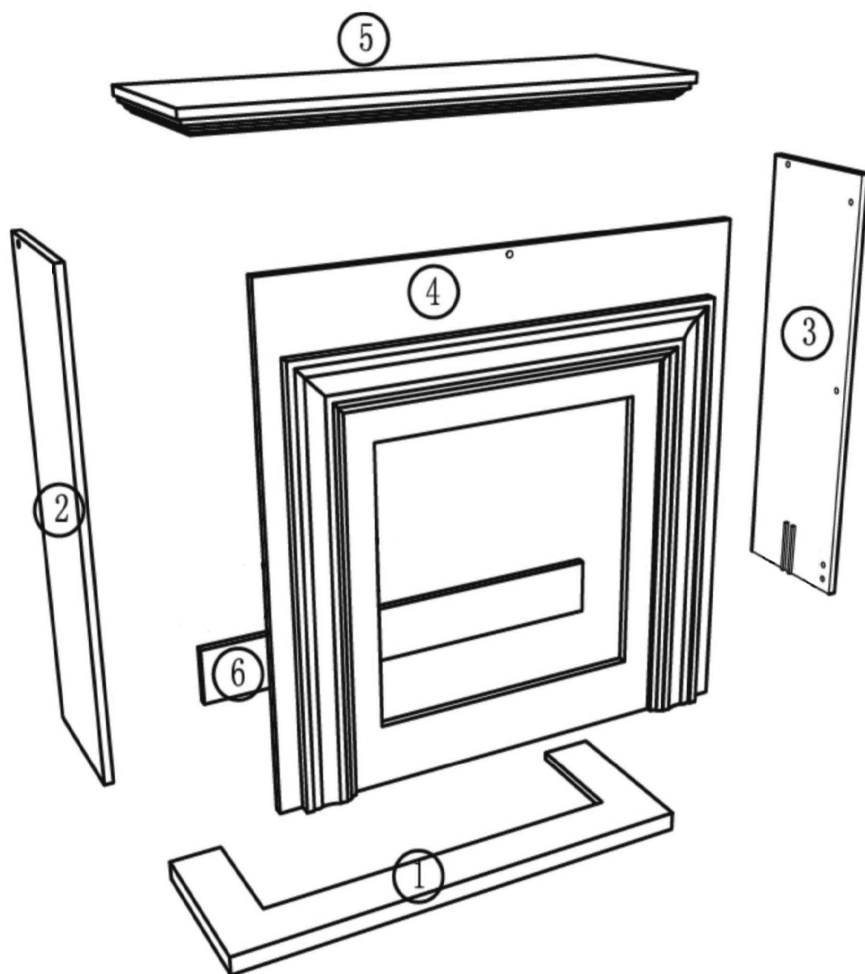




STEP 1:

Install two side panels onto the front panel.

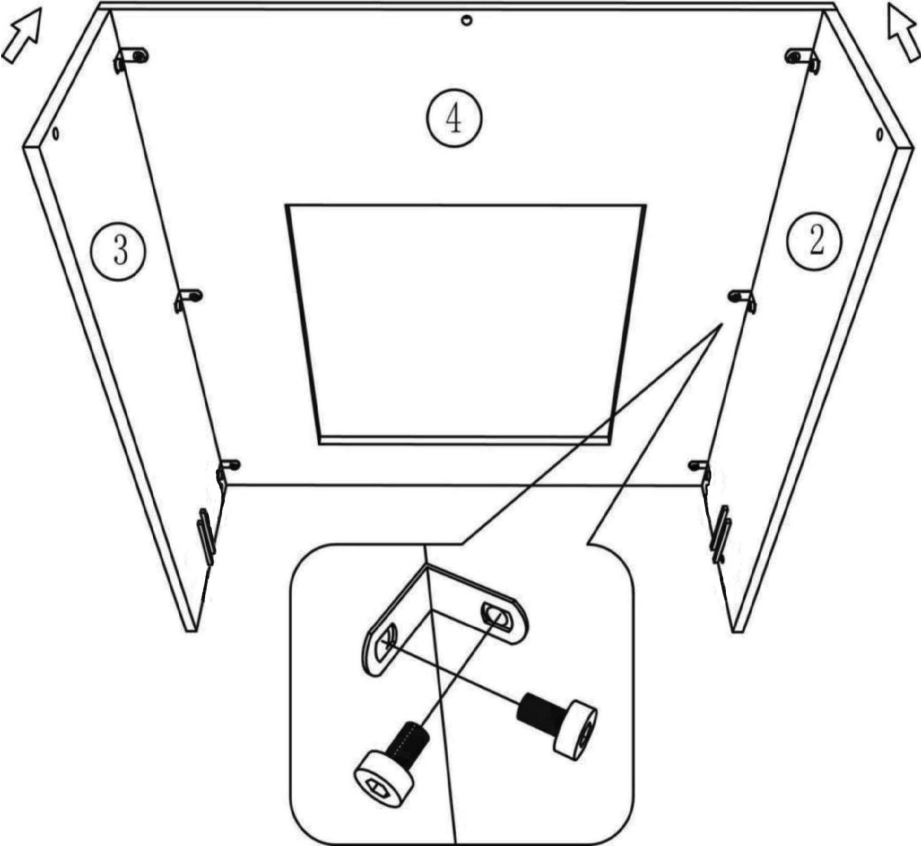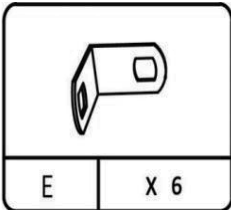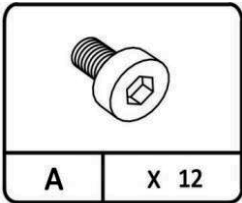


STEP 2:

Install the side panels and front panel onto the bottom seat.

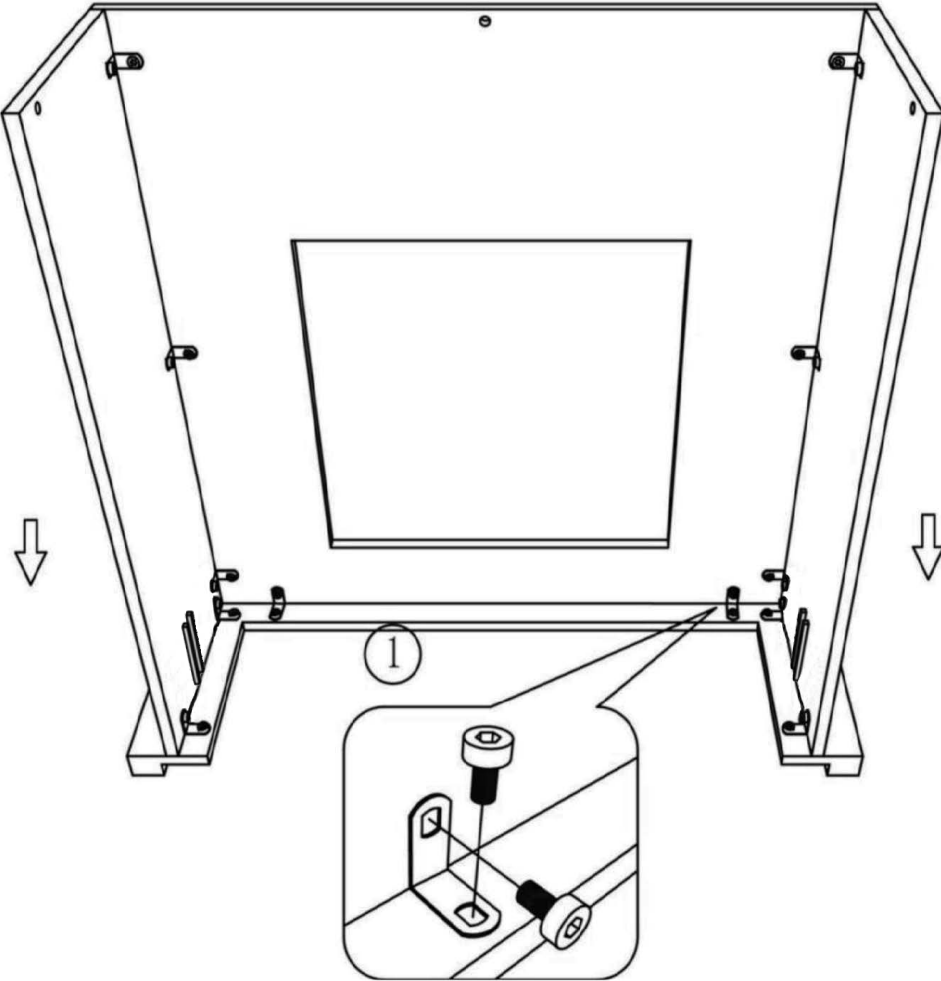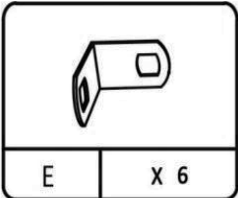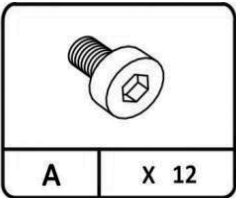


STEP 3:

Install the top panel.

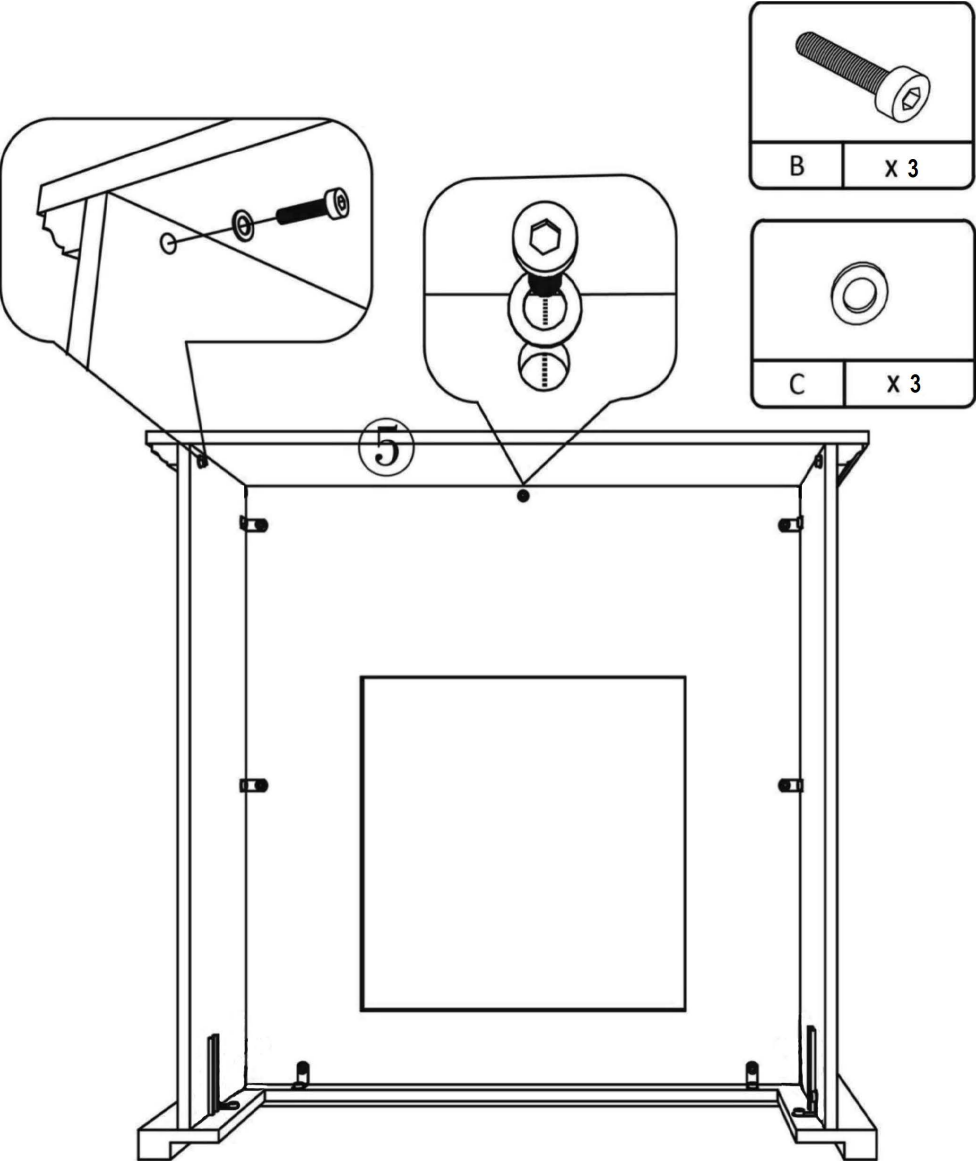

STEP 4:

Install two supporting panels into the slot.

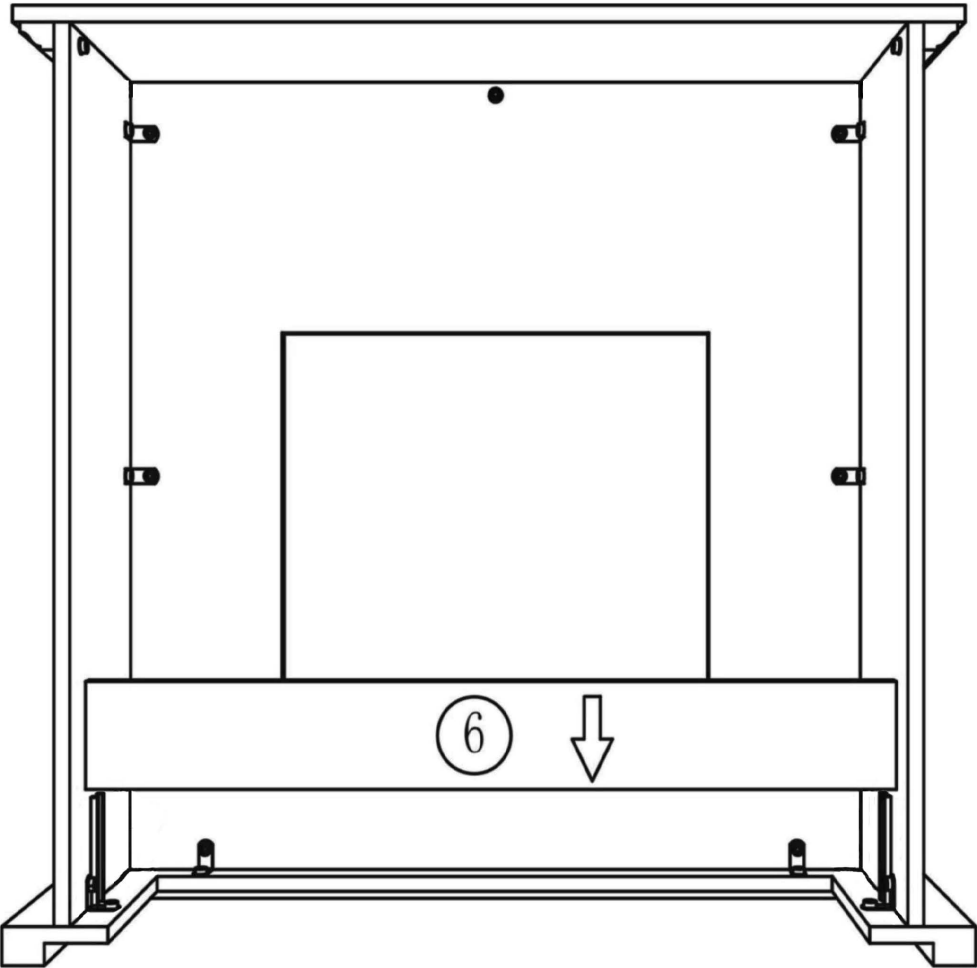

STEP 5:

Finally install your own fireplace.

