


WALL SCONCE

ASSEMBLY INSTRUCTIONS


REMOVE ALL PARTS FROM PACKAGE, BE CAREFUL NOT
TO DAMAGE ANY COMPONENTS.

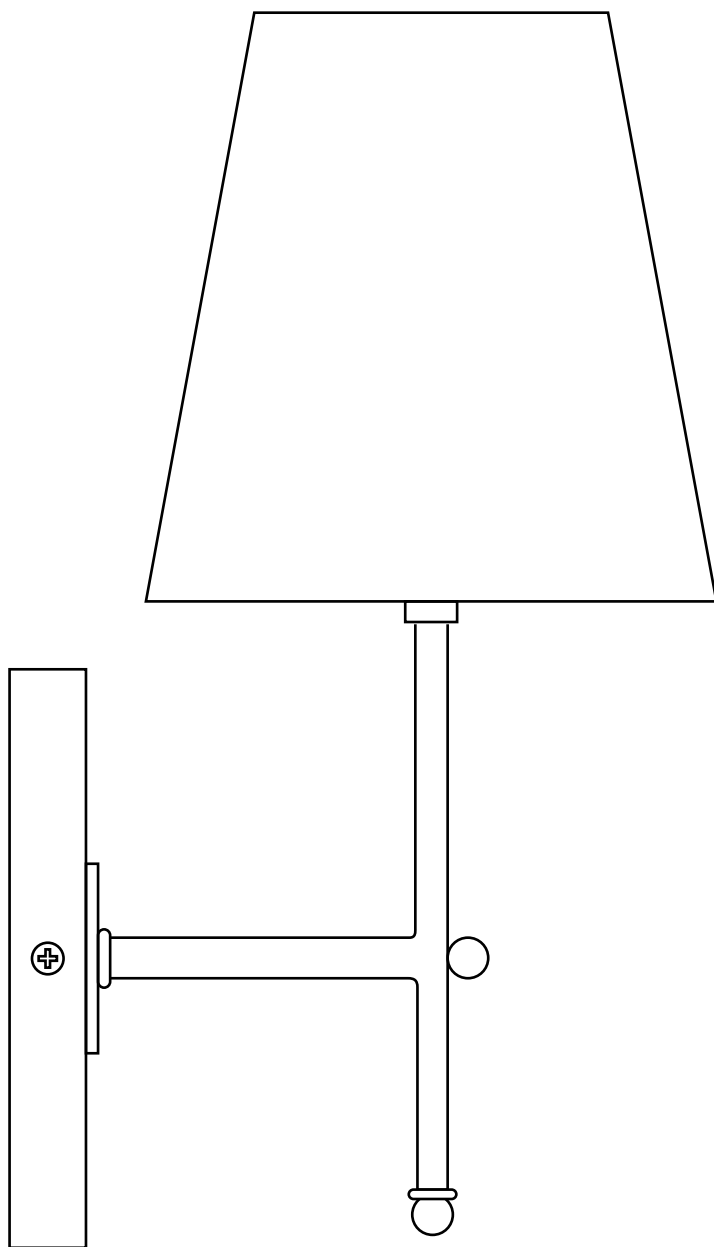

PROFESSIONAL INSTALLATION RECOMMENDED

WALL SCNCE

REMOVE ALL PARTS FROM PACKAGE, BE CAREFUL NOT TO DAMAGE ANY COMPONENTS.

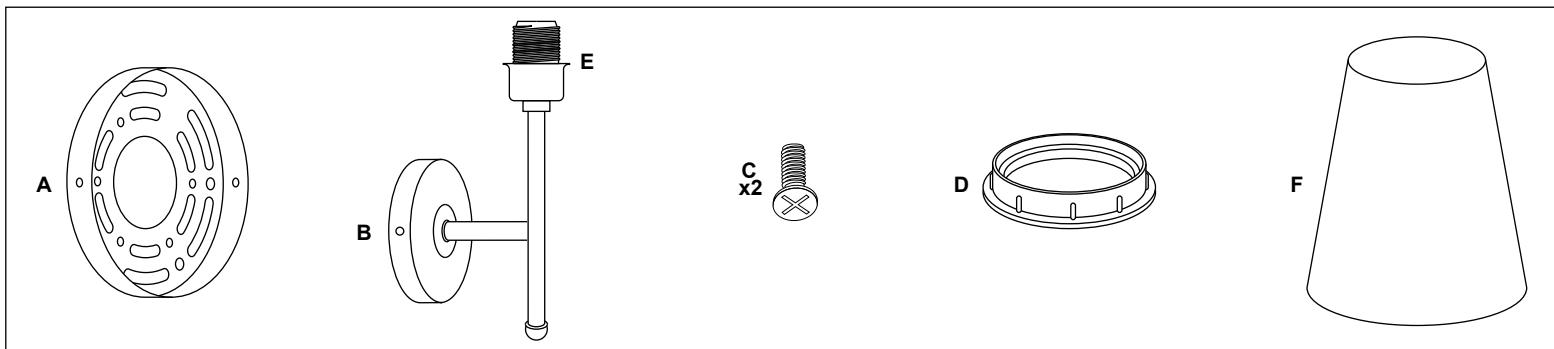

1. Measure area and determine desired hanging height.


2. Detach mounting plate [A] from backplate [B] by removing backplate screws [C].

3. Mounting plate [A] will attach to junction box.

4. Install light to wall. We recommend installation by a qualified electrical professional. Reattach backplate [B] to mounting plate [A] using backplate screws [C].

5. Remove socket ring [D] from socket [E].

6. Slide fabric shade [F] onto socket [E] and tighten with socket ring [D]. Install bulb 60W max (not included).

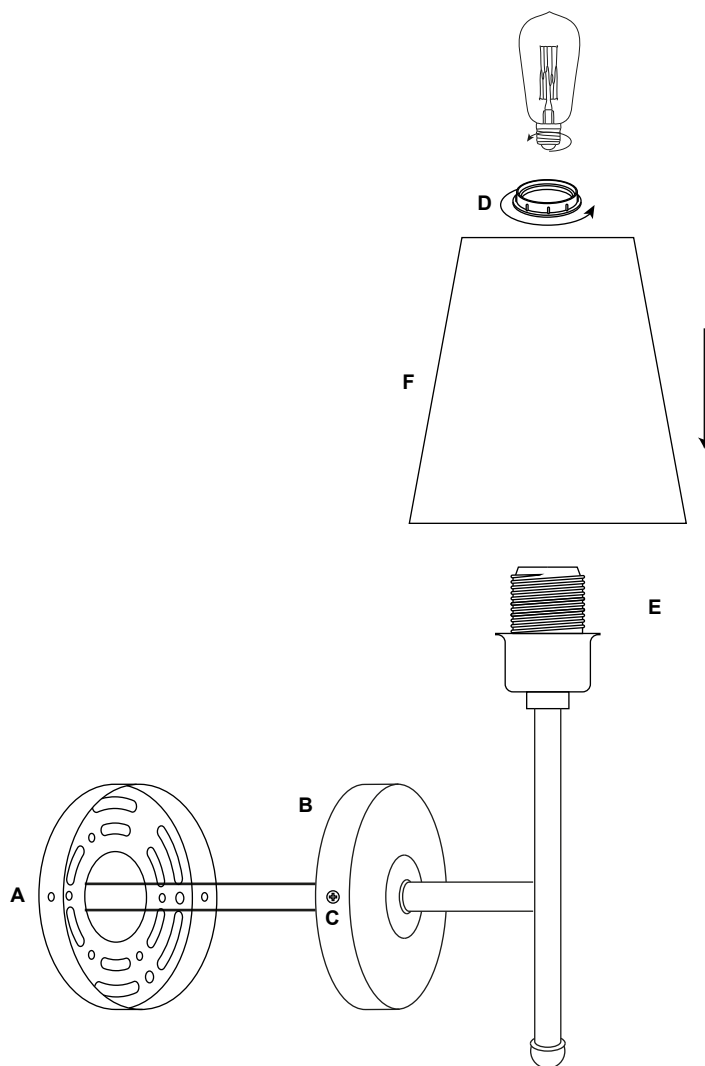

Note: Turn off switch before replacing the bulb. Make sure the bulb has sufficient time to cool down.
Do not subject the lamp to any shock while lit as shattering of glass shade may result.