

Polybird



SIDE CHAIR P-10-C

TOOLS




Hex Key

HARDWARE

AA 
x8 1/4" x 1 1/2" Wafer Bolt


BB 
x4 1/4" x 1" Wafer Bolt

PARTS

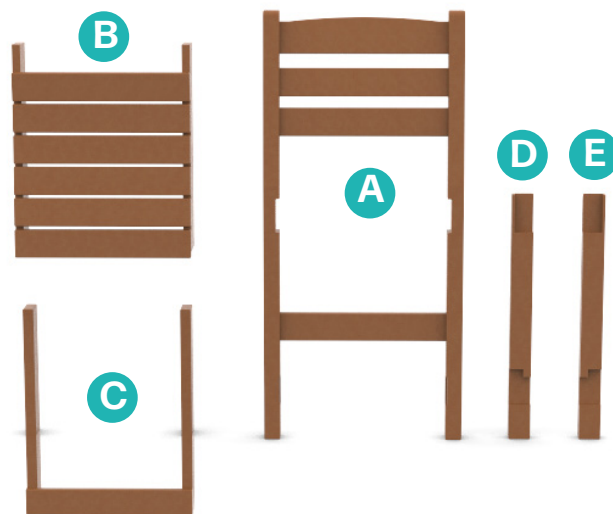


Note before starting: wait until the whole piece is assembled to tighten the bolts completely.

1

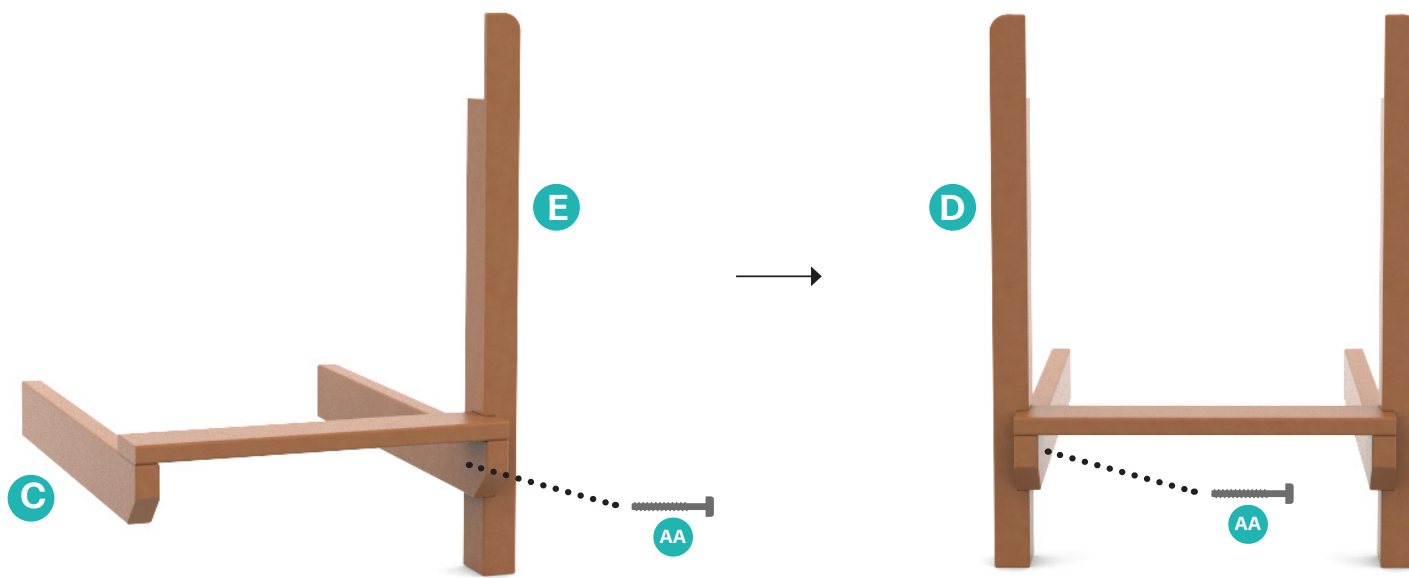


Attach legs D & E to base C using two 1/4" x 1 1/2" wafer bolts, one in each front corner.

2

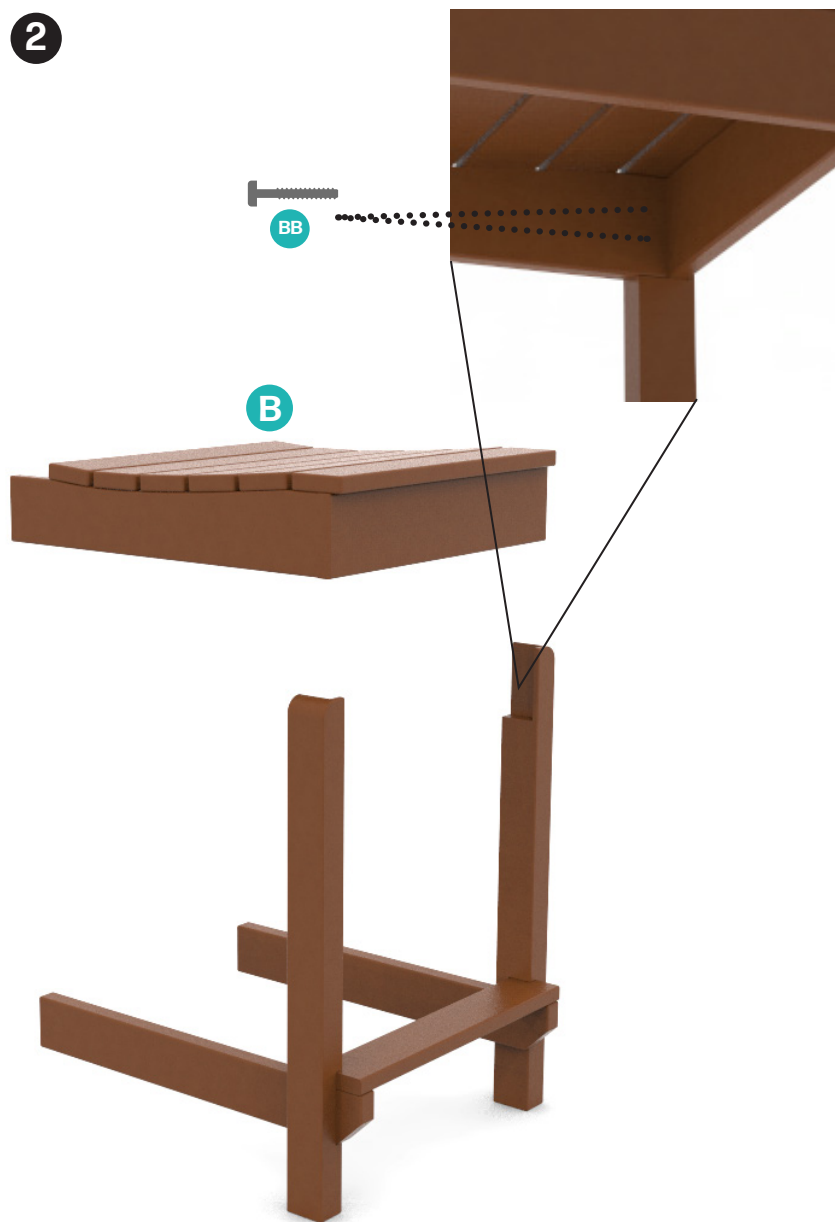

Place seat B on chair assembly from step 1. Using four $\frac{1}{4}$ " x 1" wafer bolts, two on each leg, attach underneath seat as shown.

3

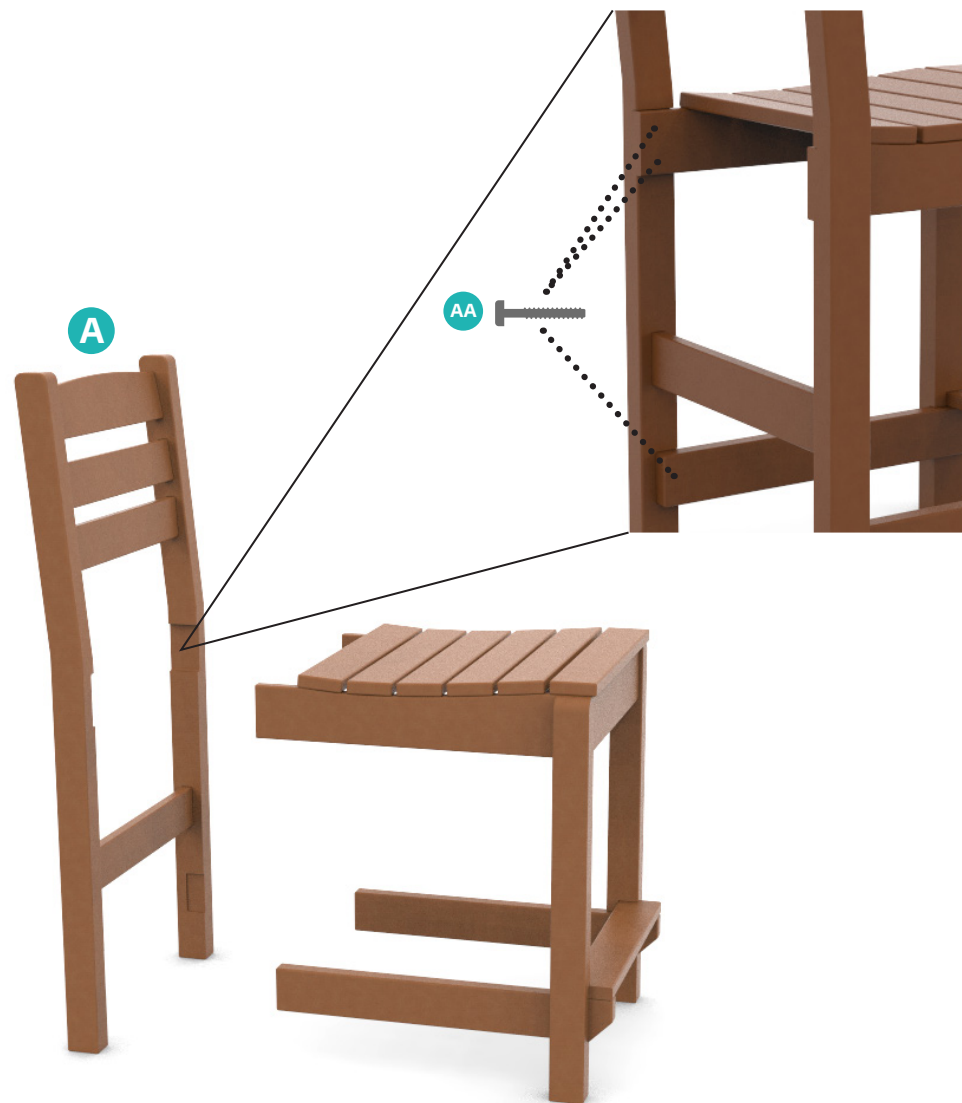

Fit seat assembly into chair back A, matching chair base and seat in grooves in A. Using six total $\frac{1}{4}$ " x $1\frac{1}{2}$ " wafer bolts, insert two into each side of the seat and one into each side of chair base, as shown.

We hope you enjoy your new piece of furniture for years to come!