
HK-XST30-YN01

ANCTOR

Installation Instruction

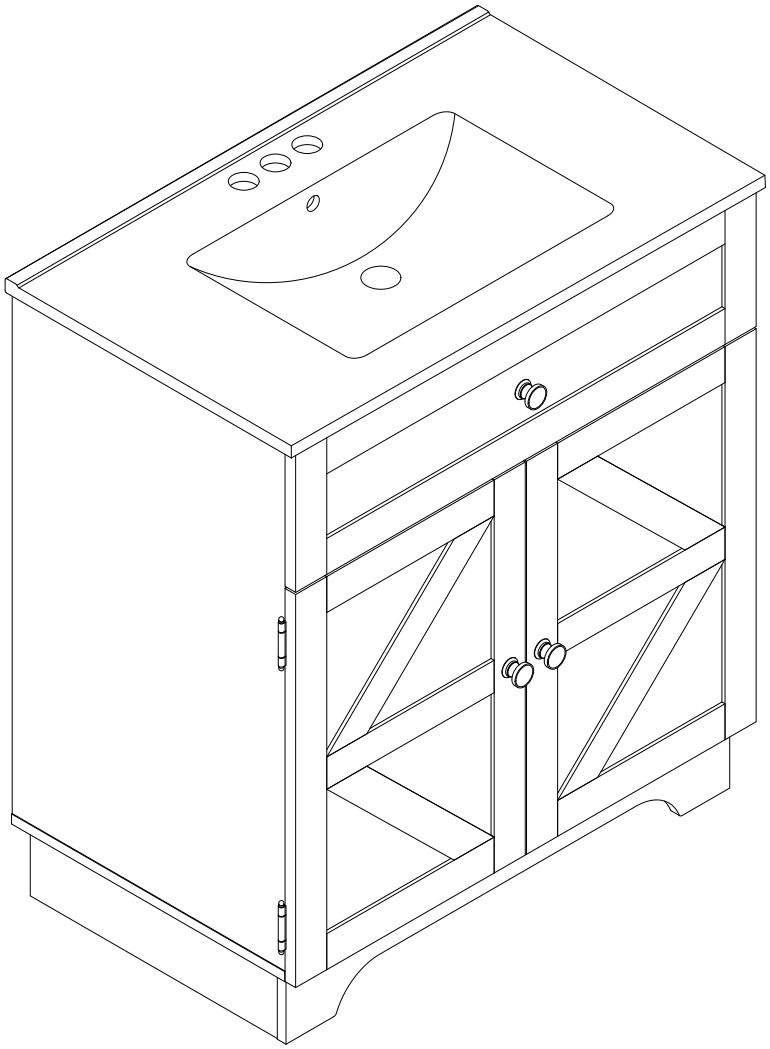

Bathroom Vanity with Sink

PUZZEL YOUR HOUSE


Please don't tighten the screws completely and go back later for a final tightening of all the screws after pieces are aligned with each other.

CATALOG:


Part List.....4.
AccessoriesList.....5.
Assemble.....**6-24.**

Foreword:


Thank you for choosing our product! We hope you have a good shopping experience!
We aim to provide a 100% satisfaction product and customer service.

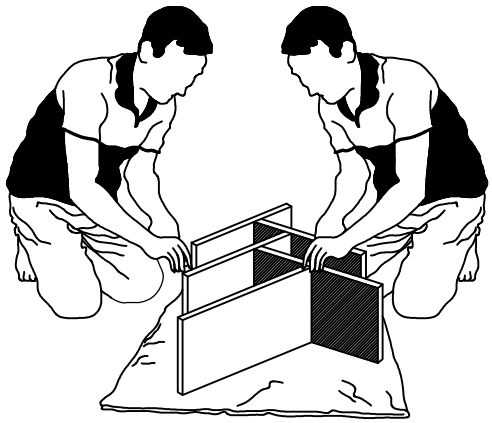


Requires 2 people to assemble the product more easily

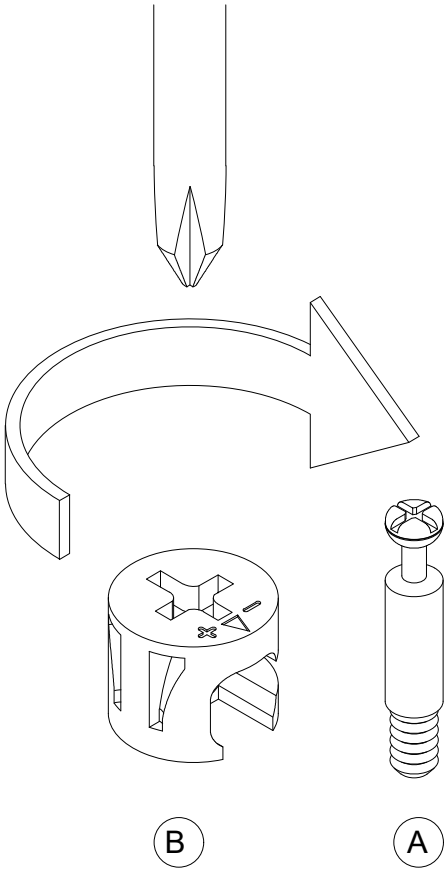


Only slight turn of cams required.
Do **NOT** overturn.

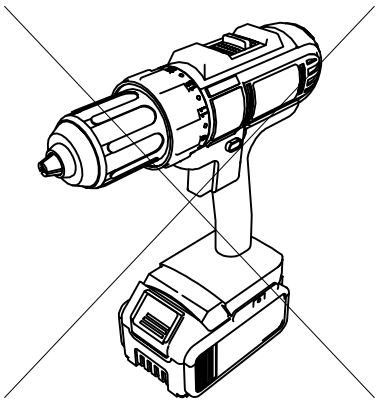

*Power Tool **NOT** Recommended for **A-B** hardware assembly
























TOOL REQUIRED
Phillips Screwdriver

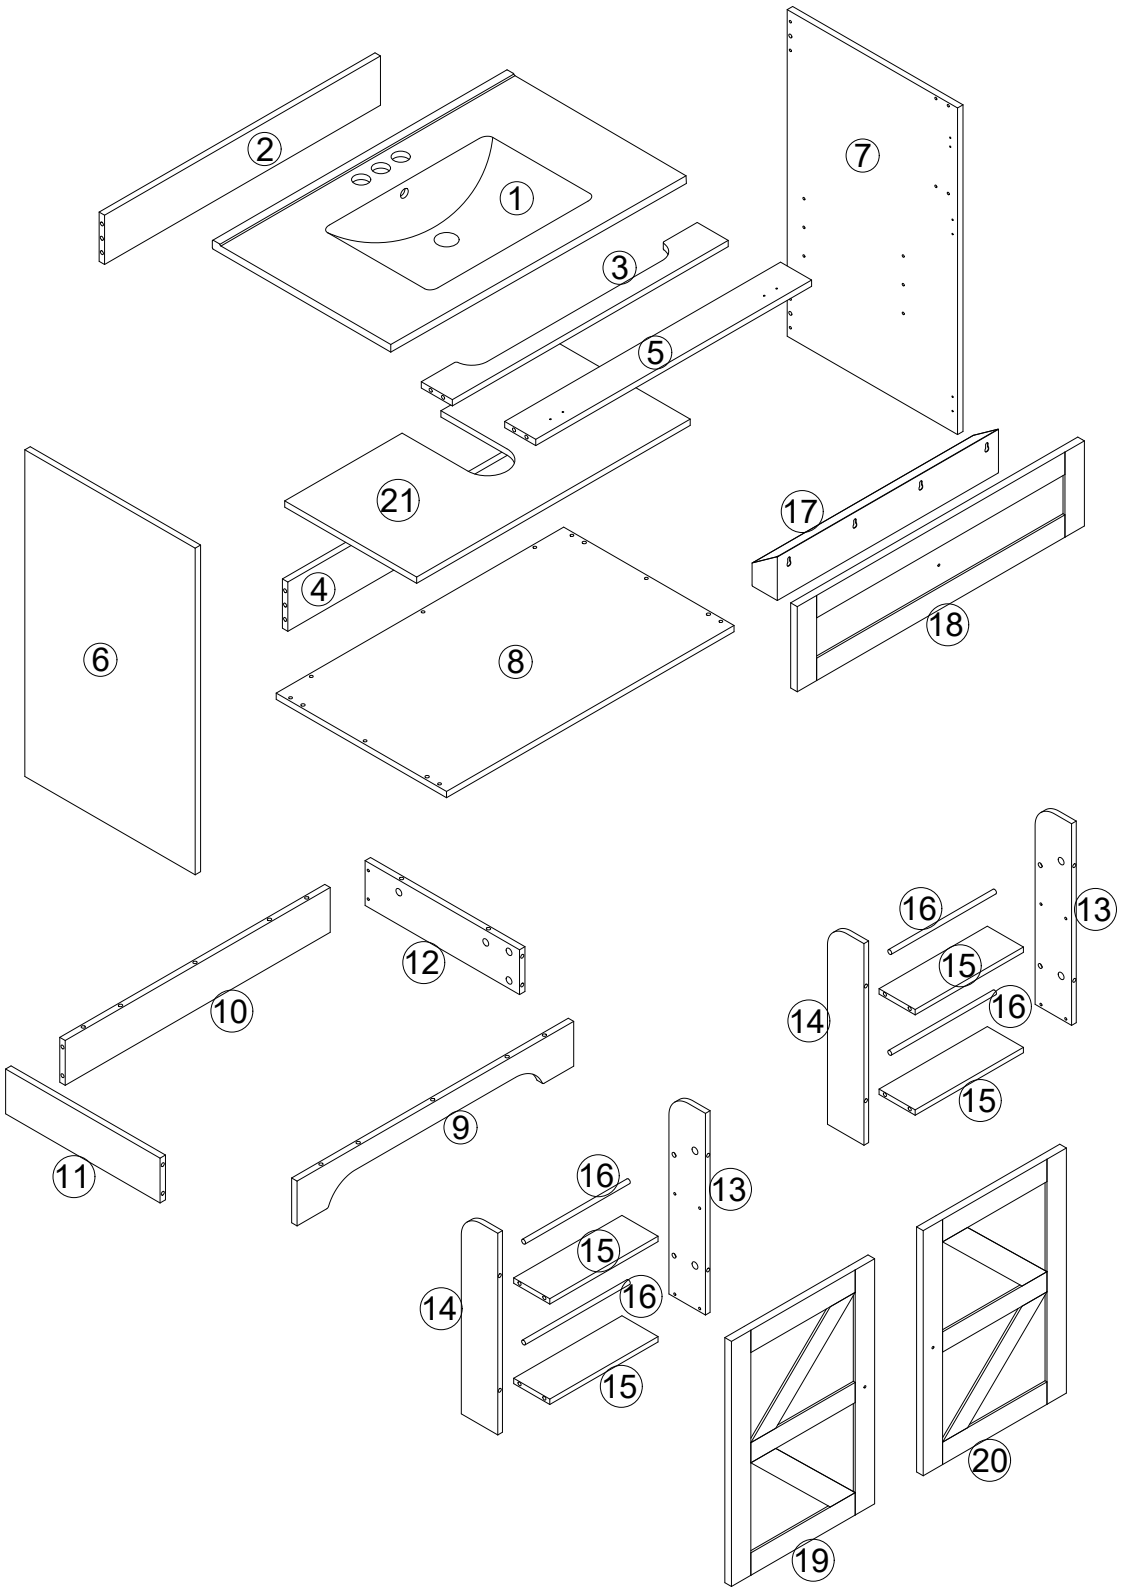







TIPS

1. When installing the product, use a soft surface (such as carpet or cardboard) to avoid scratching or damaging the surface of the product.
2. Please try to use a manual screwdriver instead of electric screw driver. A manual screwdriver can be used to better control the tightness of the screws.
3. The product is unstable before it is assembled. Please pay attention to the product installation sequence, and align all screws and screw holes before tightening.

Part List

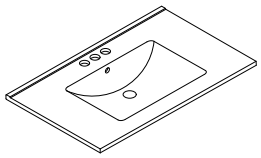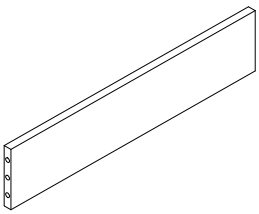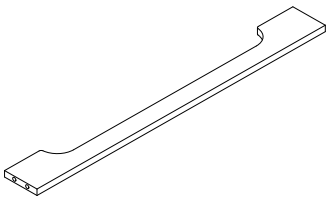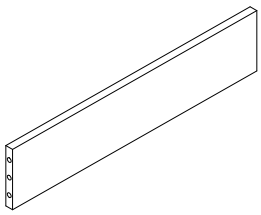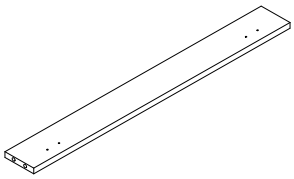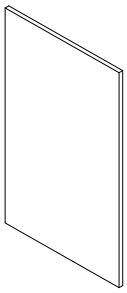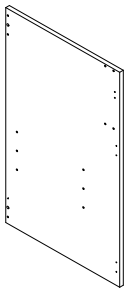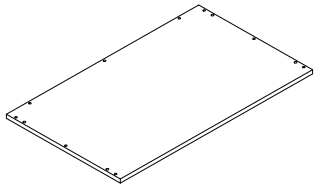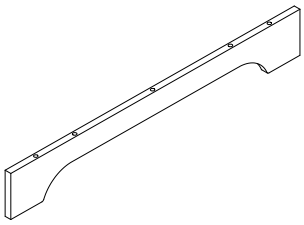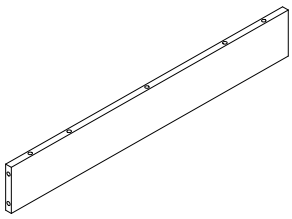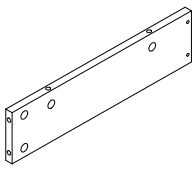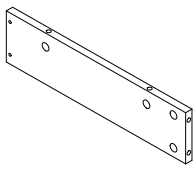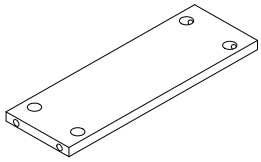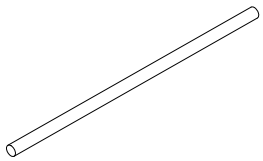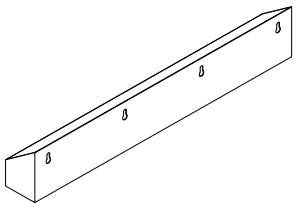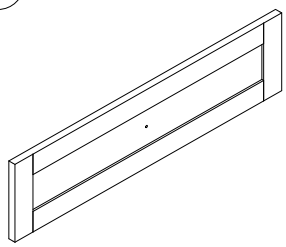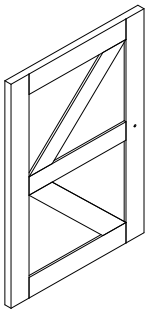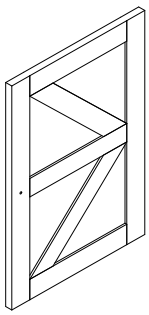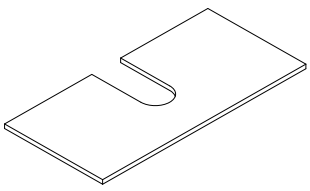
① x1 	② x1 	③ x1 	④ x1 
⑤ x1 	⑥ x1 	⑦ x1 	⑧ x1 
⑨ x1 	⑩ x1 	⑪ x1 	⑫ x1 
⑬ x2 	⑭ x2 	⑮ x4 	⑯ x4 
⑰ x1 	⑱ x1 	⑲ x1 	⑳ x1 
㉑ x1 			

Part List

A	x58+2	B	x58+2	C	x12	D	x9
							
Ø6x34mm		Ø15x9.5mm		Ø8x30mm		Ø6x40mm	
E	x3	F	x3	G	x1	H	x2
							
		5/32"*18mm		4mm			
I	x2	J	x16	K	x4	L	x16
							
Ø35mm		Ø8x15mm(Niken)		Ø8x15mm(Black）		Ø8x12mm	
M	x12	N	x2	O	x2	P	x2
							
Ø4x12mm		Ø10x2mm		Ø8*40mm		Ø8*50mm	
Q	x4	R	x1	S	x4	T	x4
							
60*40*15*20mm						Ø13x4mm	
Y	x2	U	x2	W	x4	X	x1
							
45*17*14mm		45*15*1mm		Ø6*12mm			


STEP 1

A x8pcs
T x4pcs

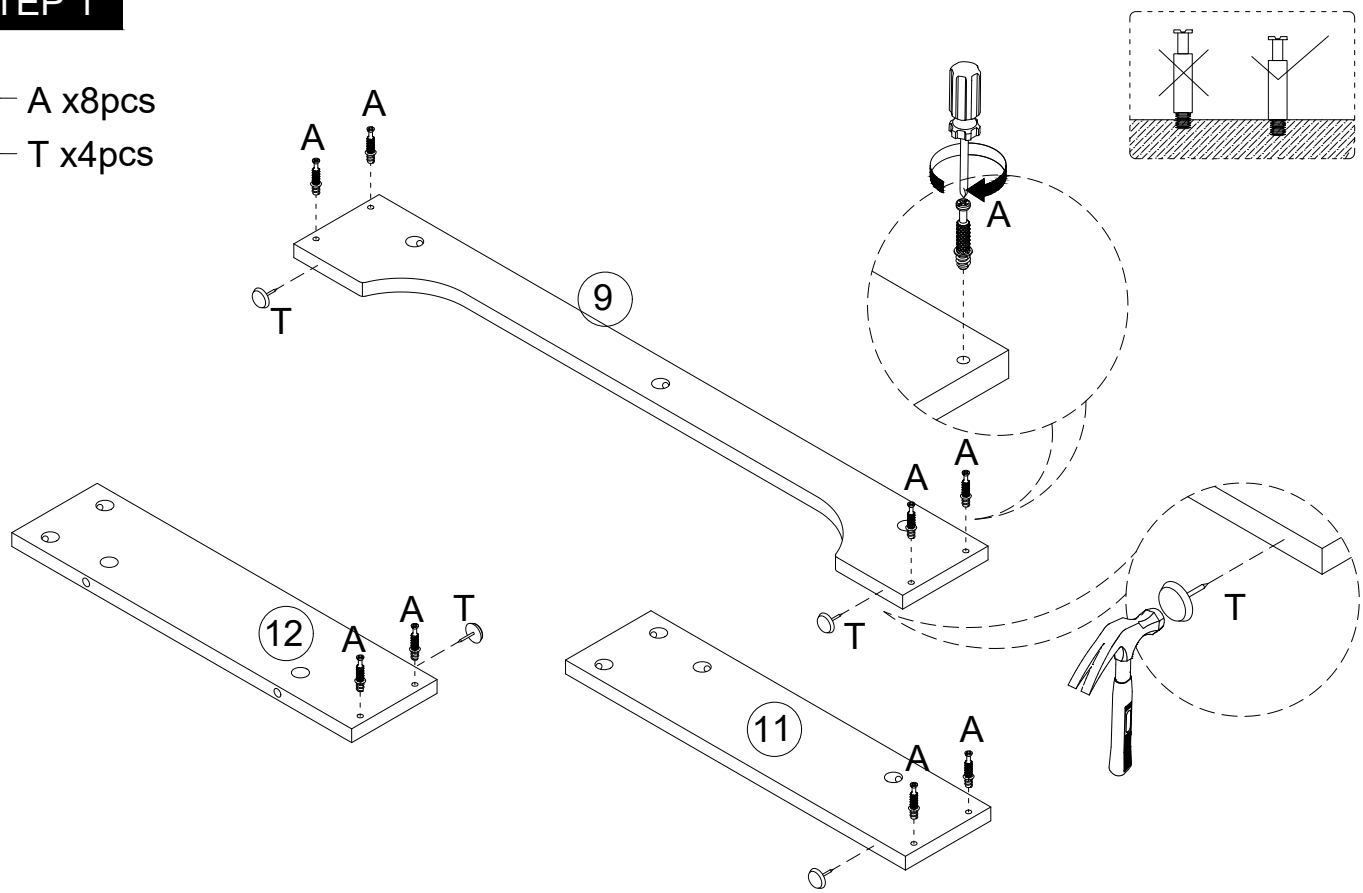


STEP 2

B x4pcs
J x4pcs
Y x 2pcs

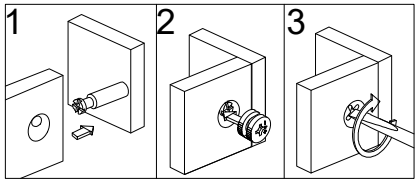


STEP 3

— B x4pcs

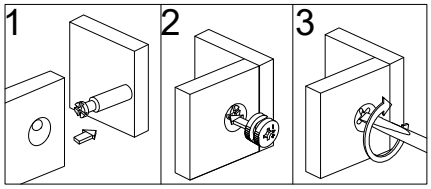


STEP 4


— A x26pcs

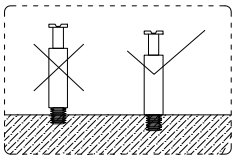

STEP 5

— B x8pcs

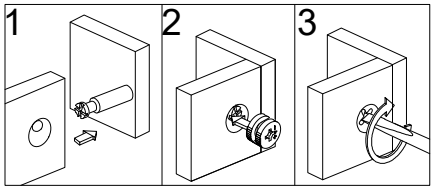


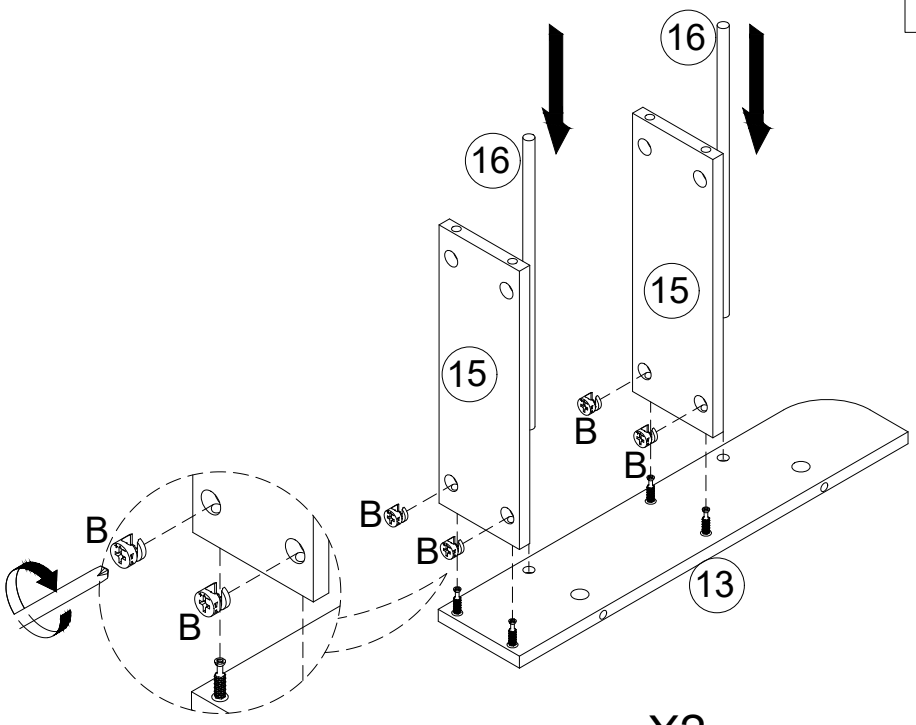


X2

STEP 6

— B x8pcs

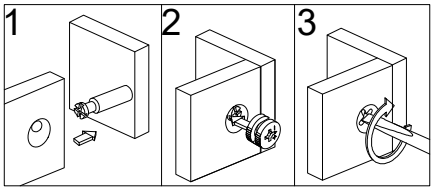


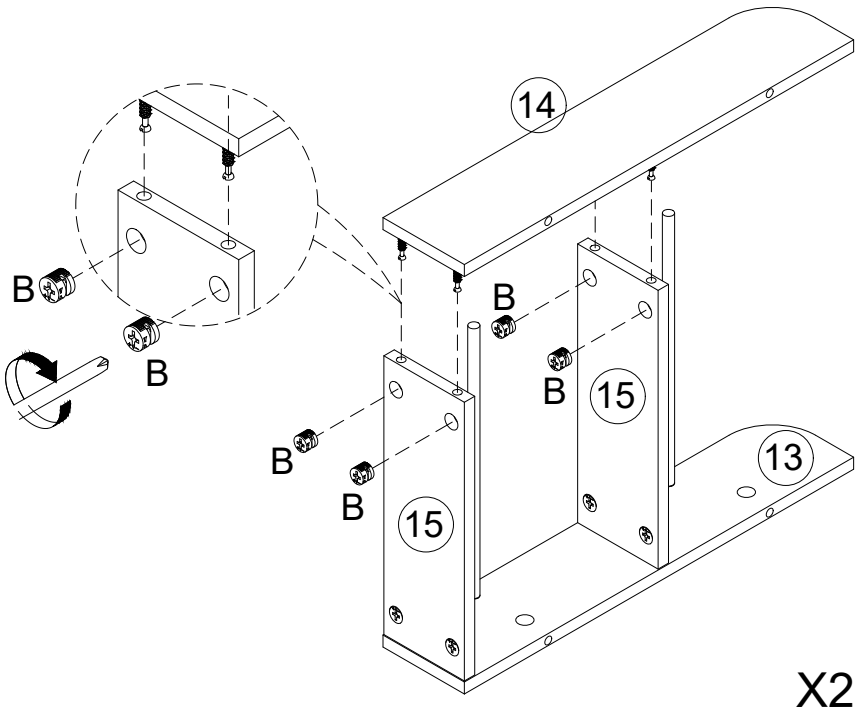

X2


STEP 7

— A x8pcs

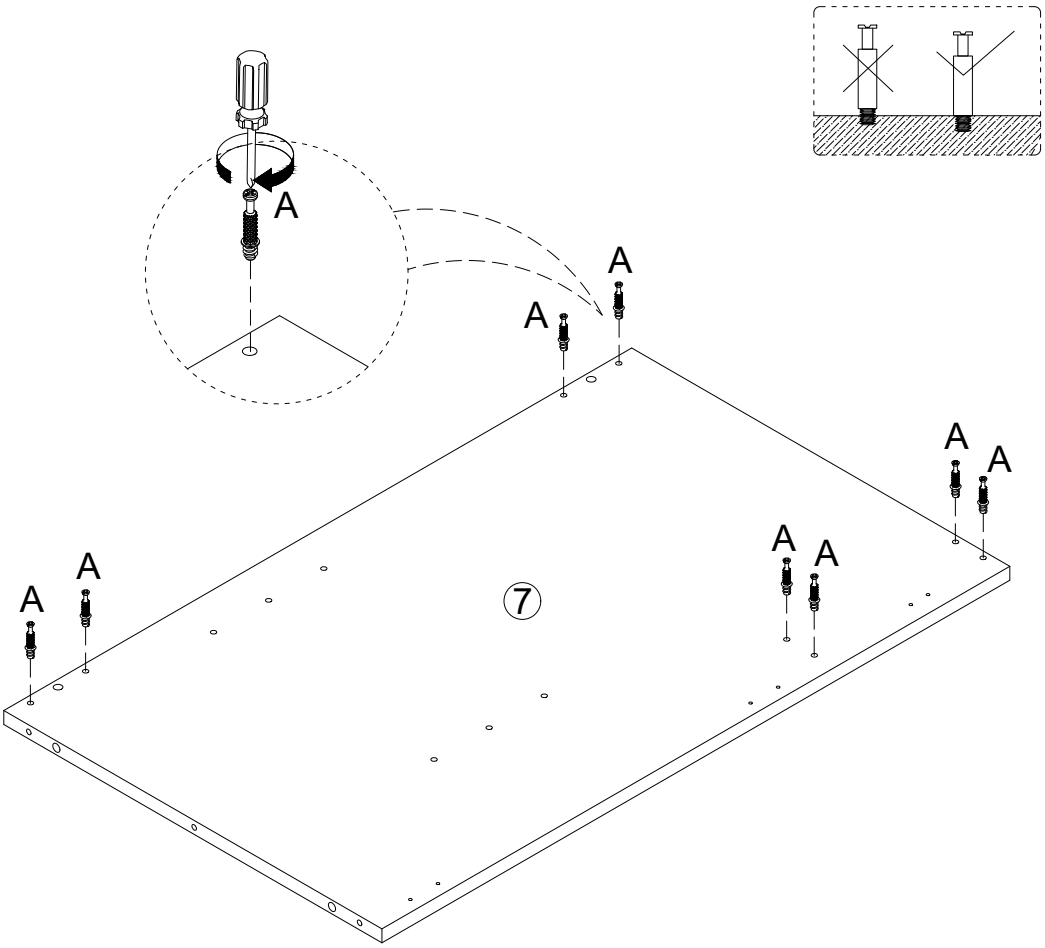


STEP 8


— A x8pcs

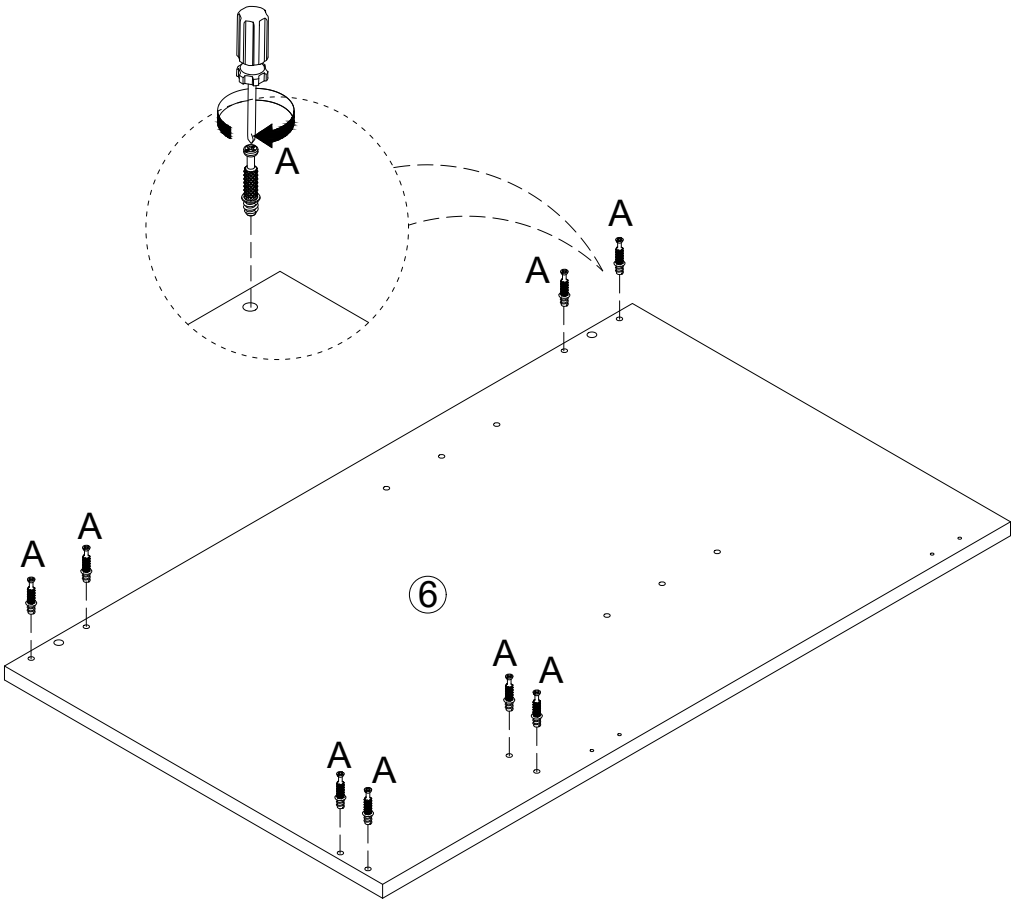

STEP 9


B x 8pcs
C x 2pcs

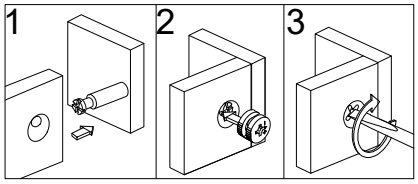


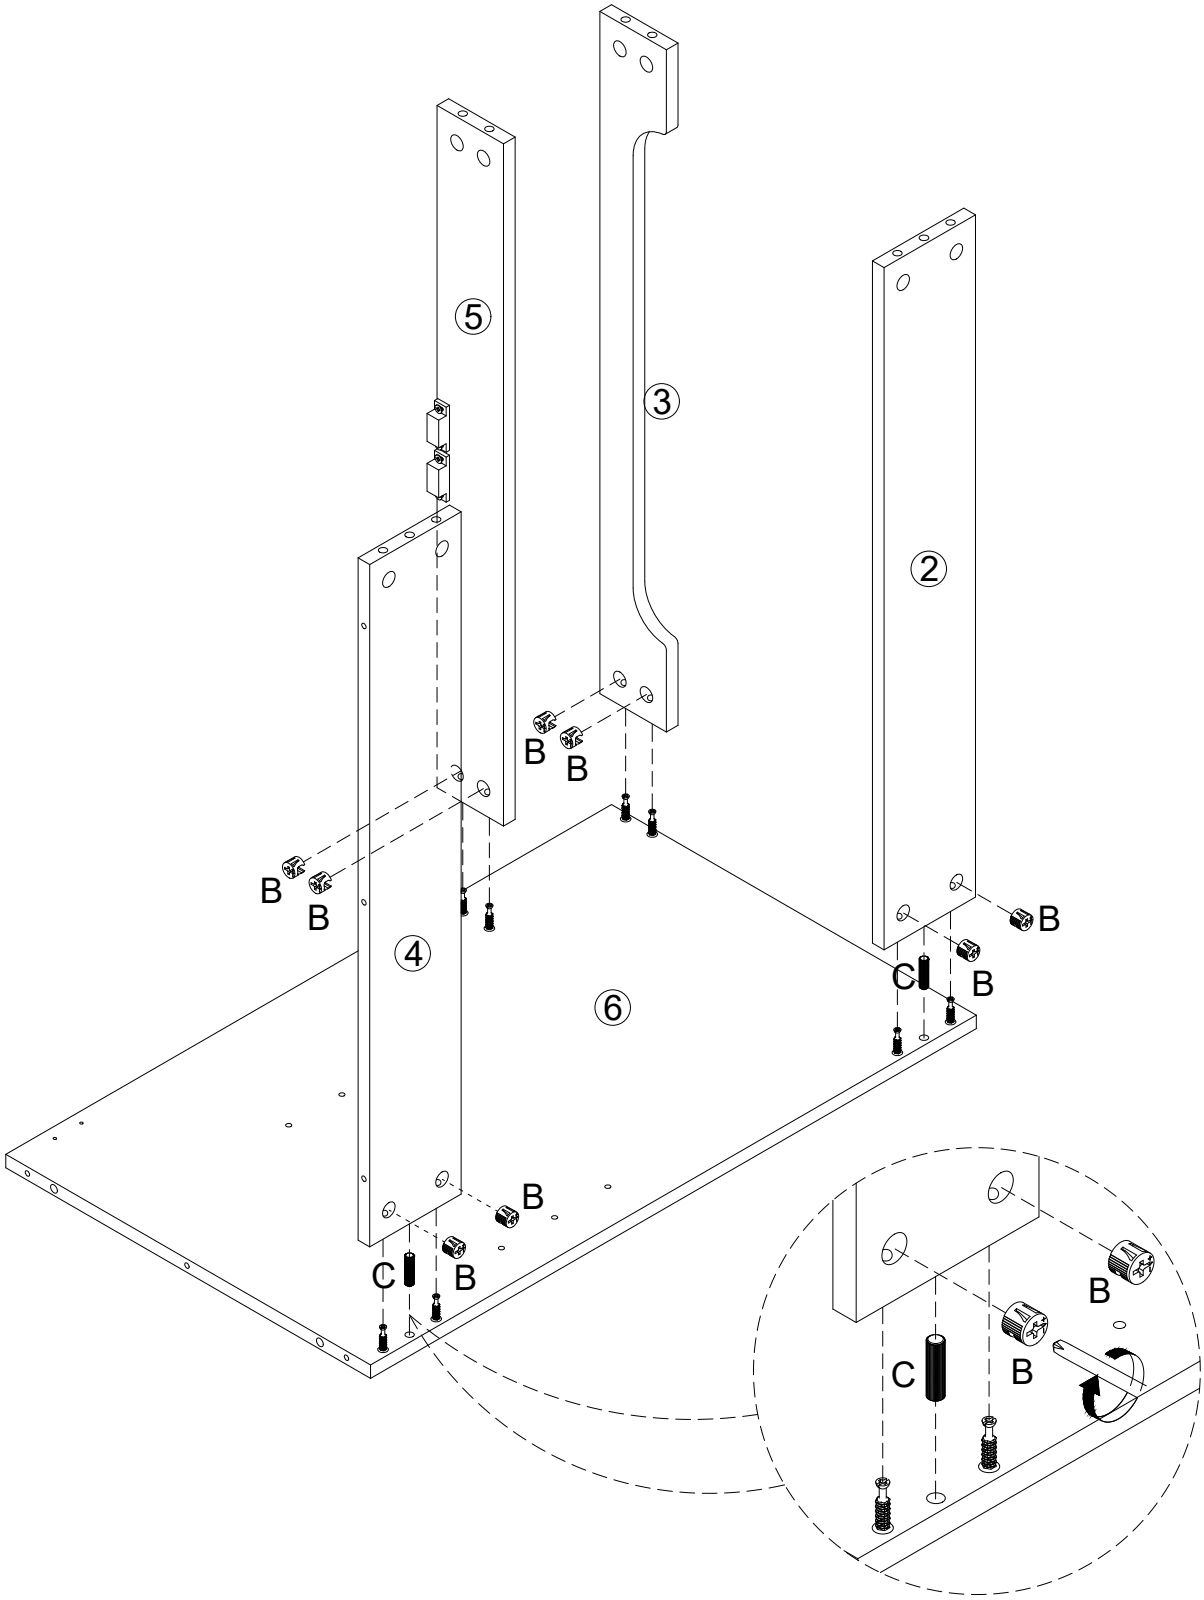

10


- B x 8pcs
- C x 2pcs

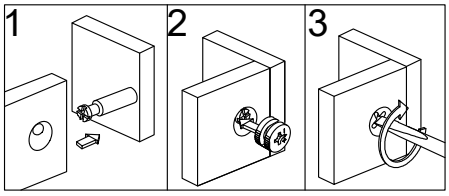

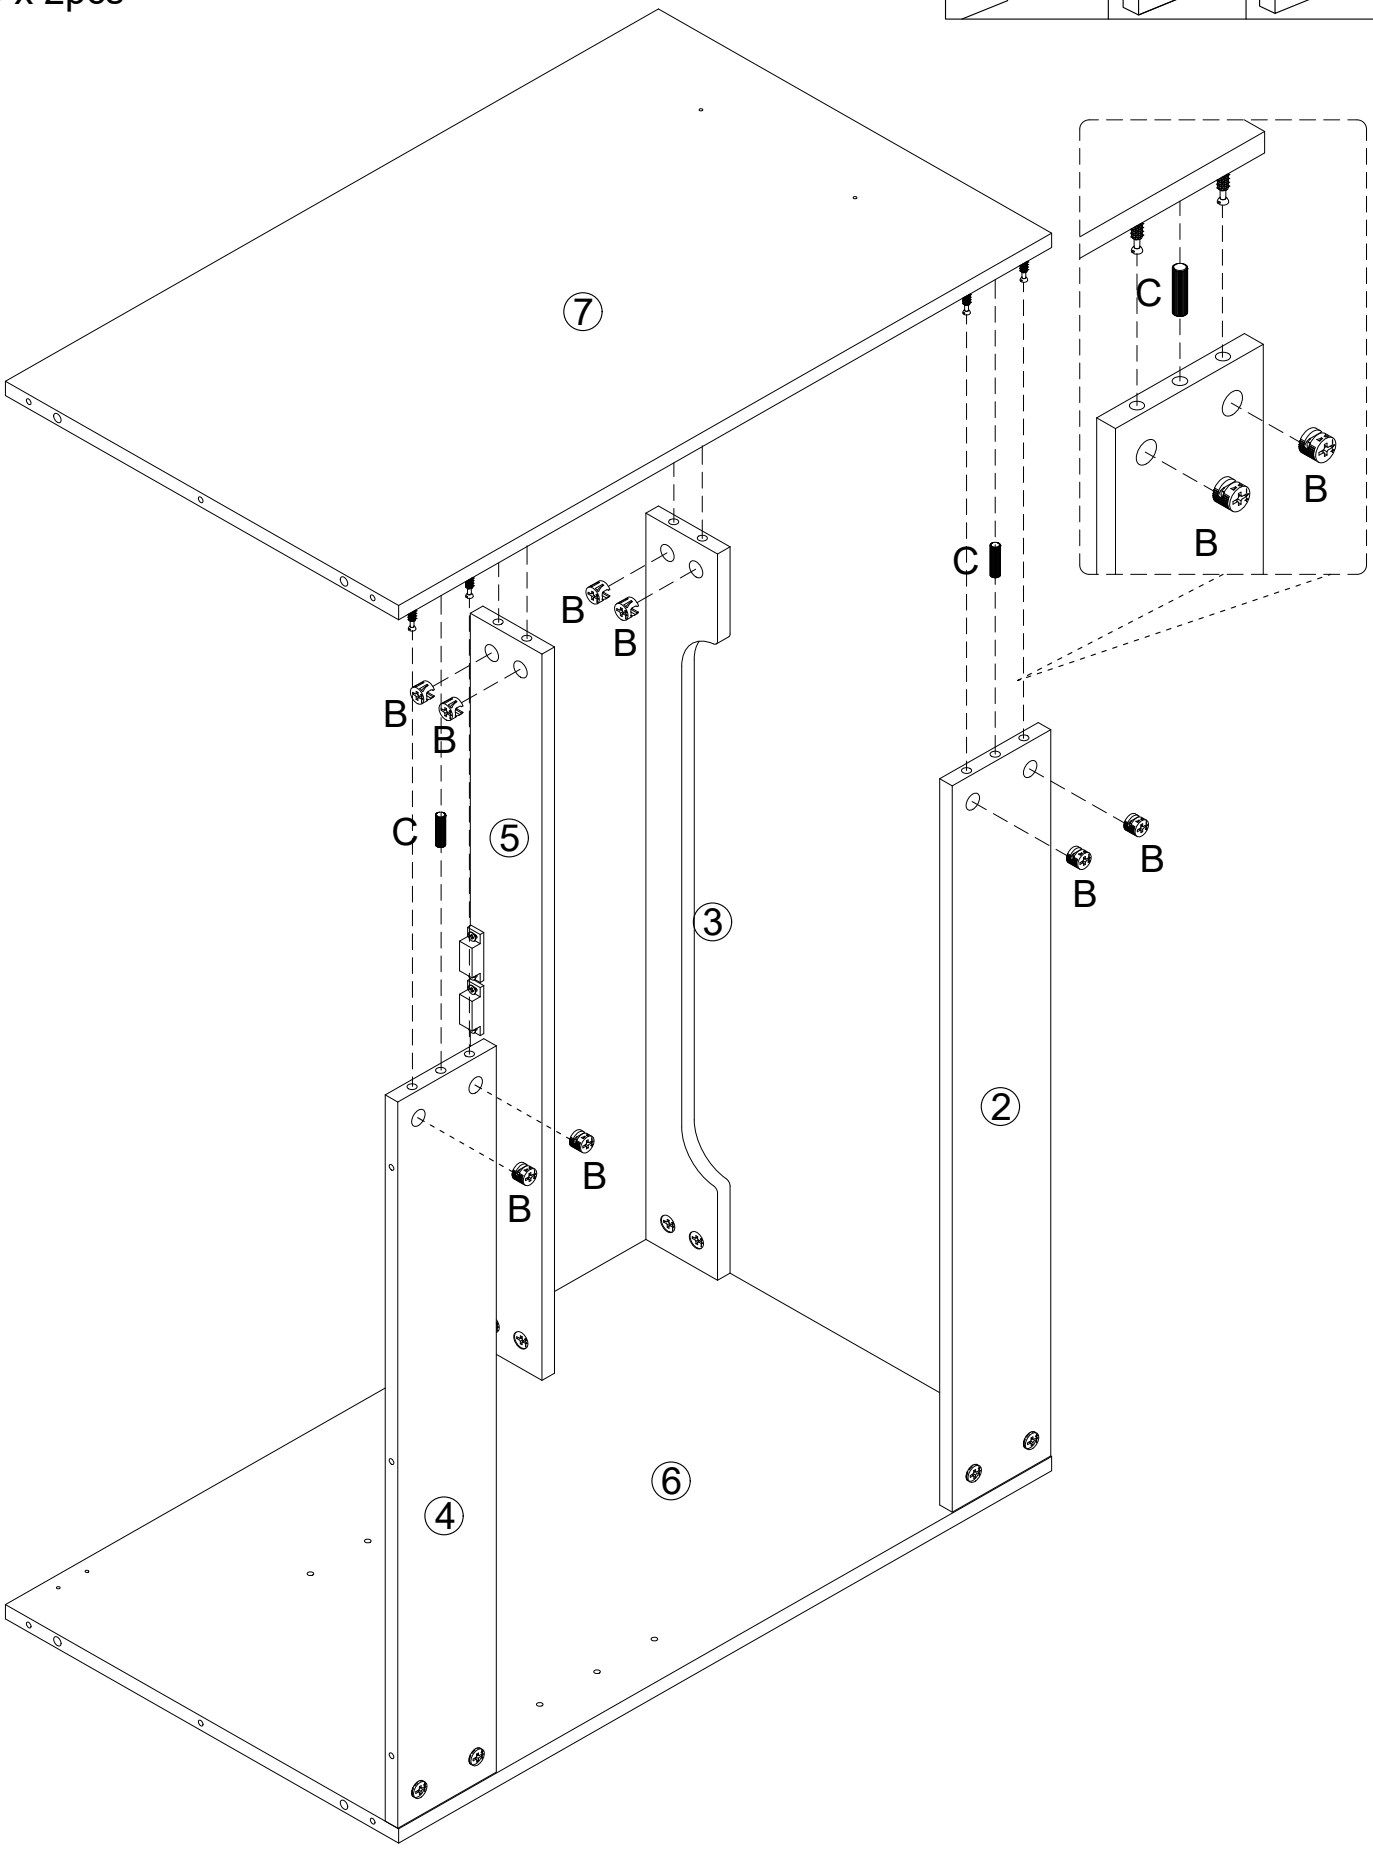


STEP 10


- C x 4pcs
- D x 9pcs
- G x 1pc

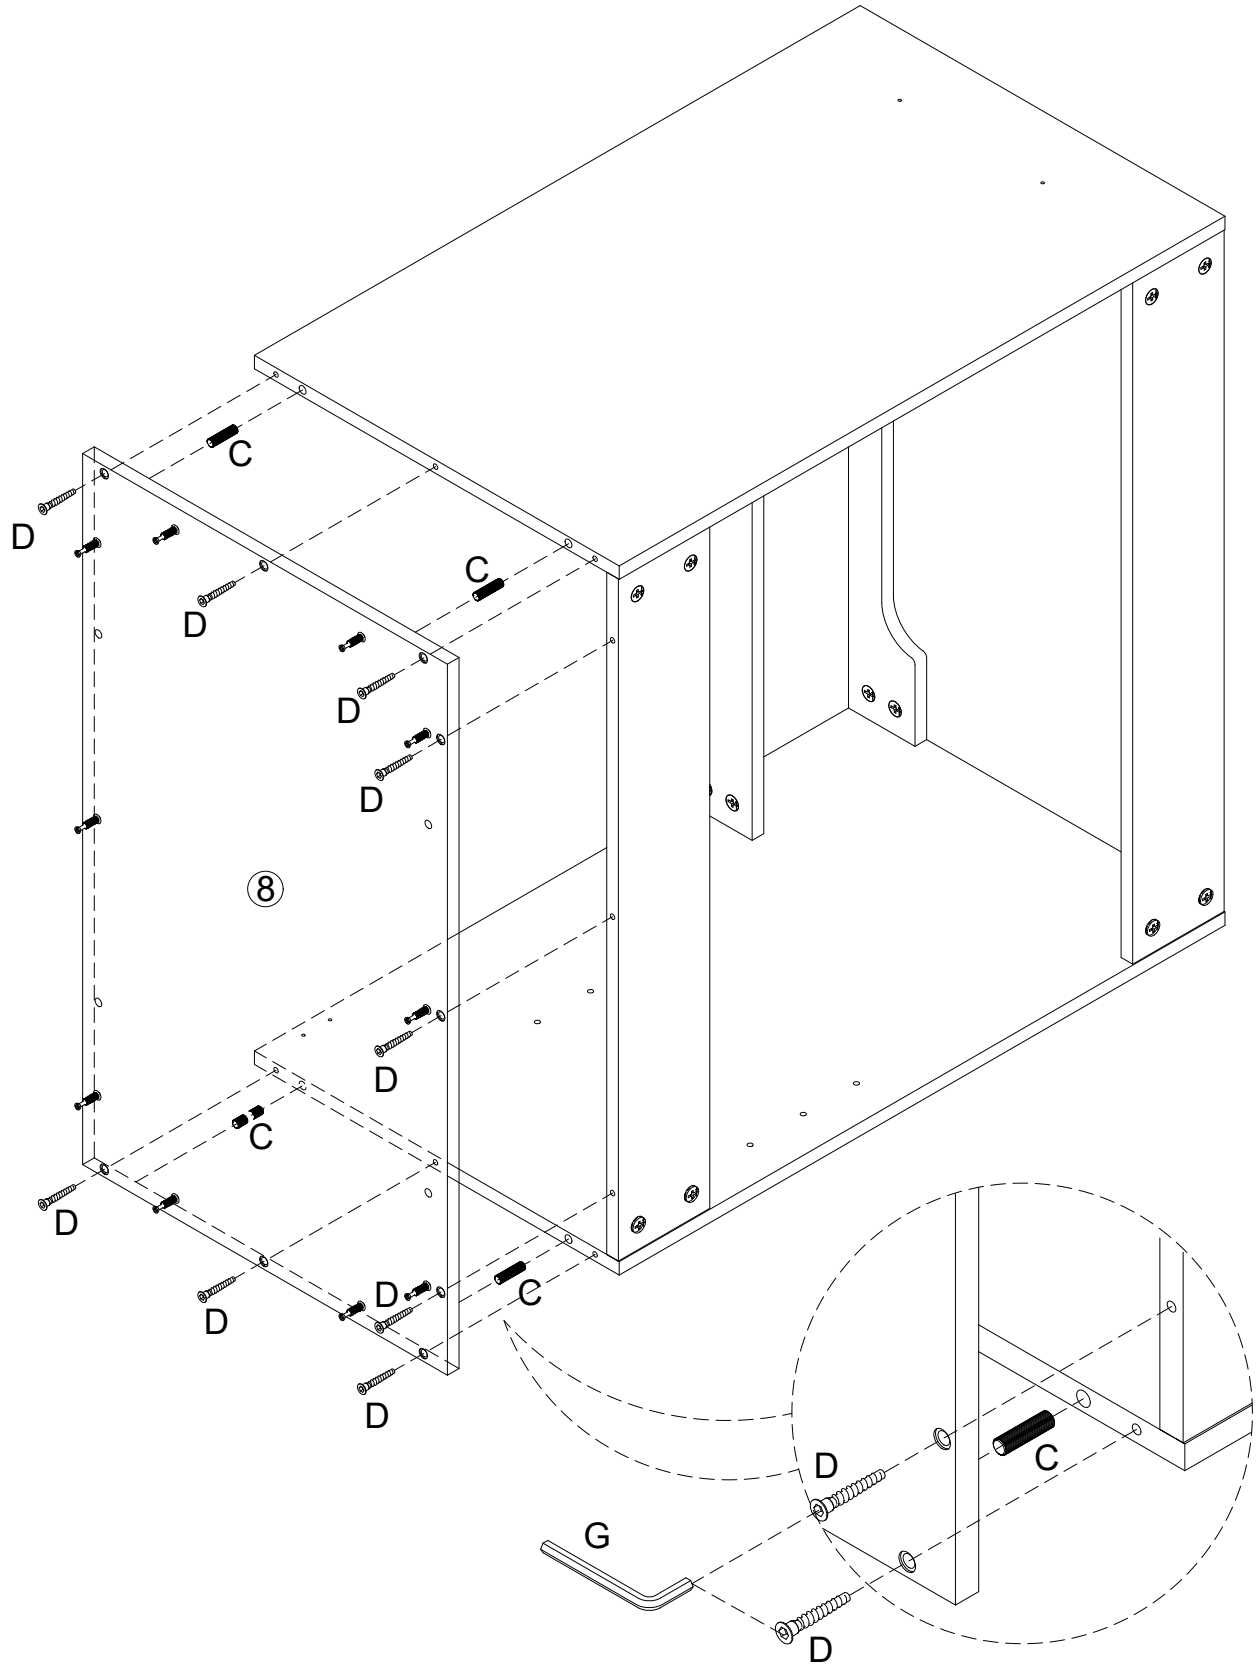

STEP 11


B x 10pcs
C x 4pcs

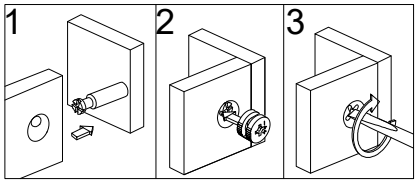


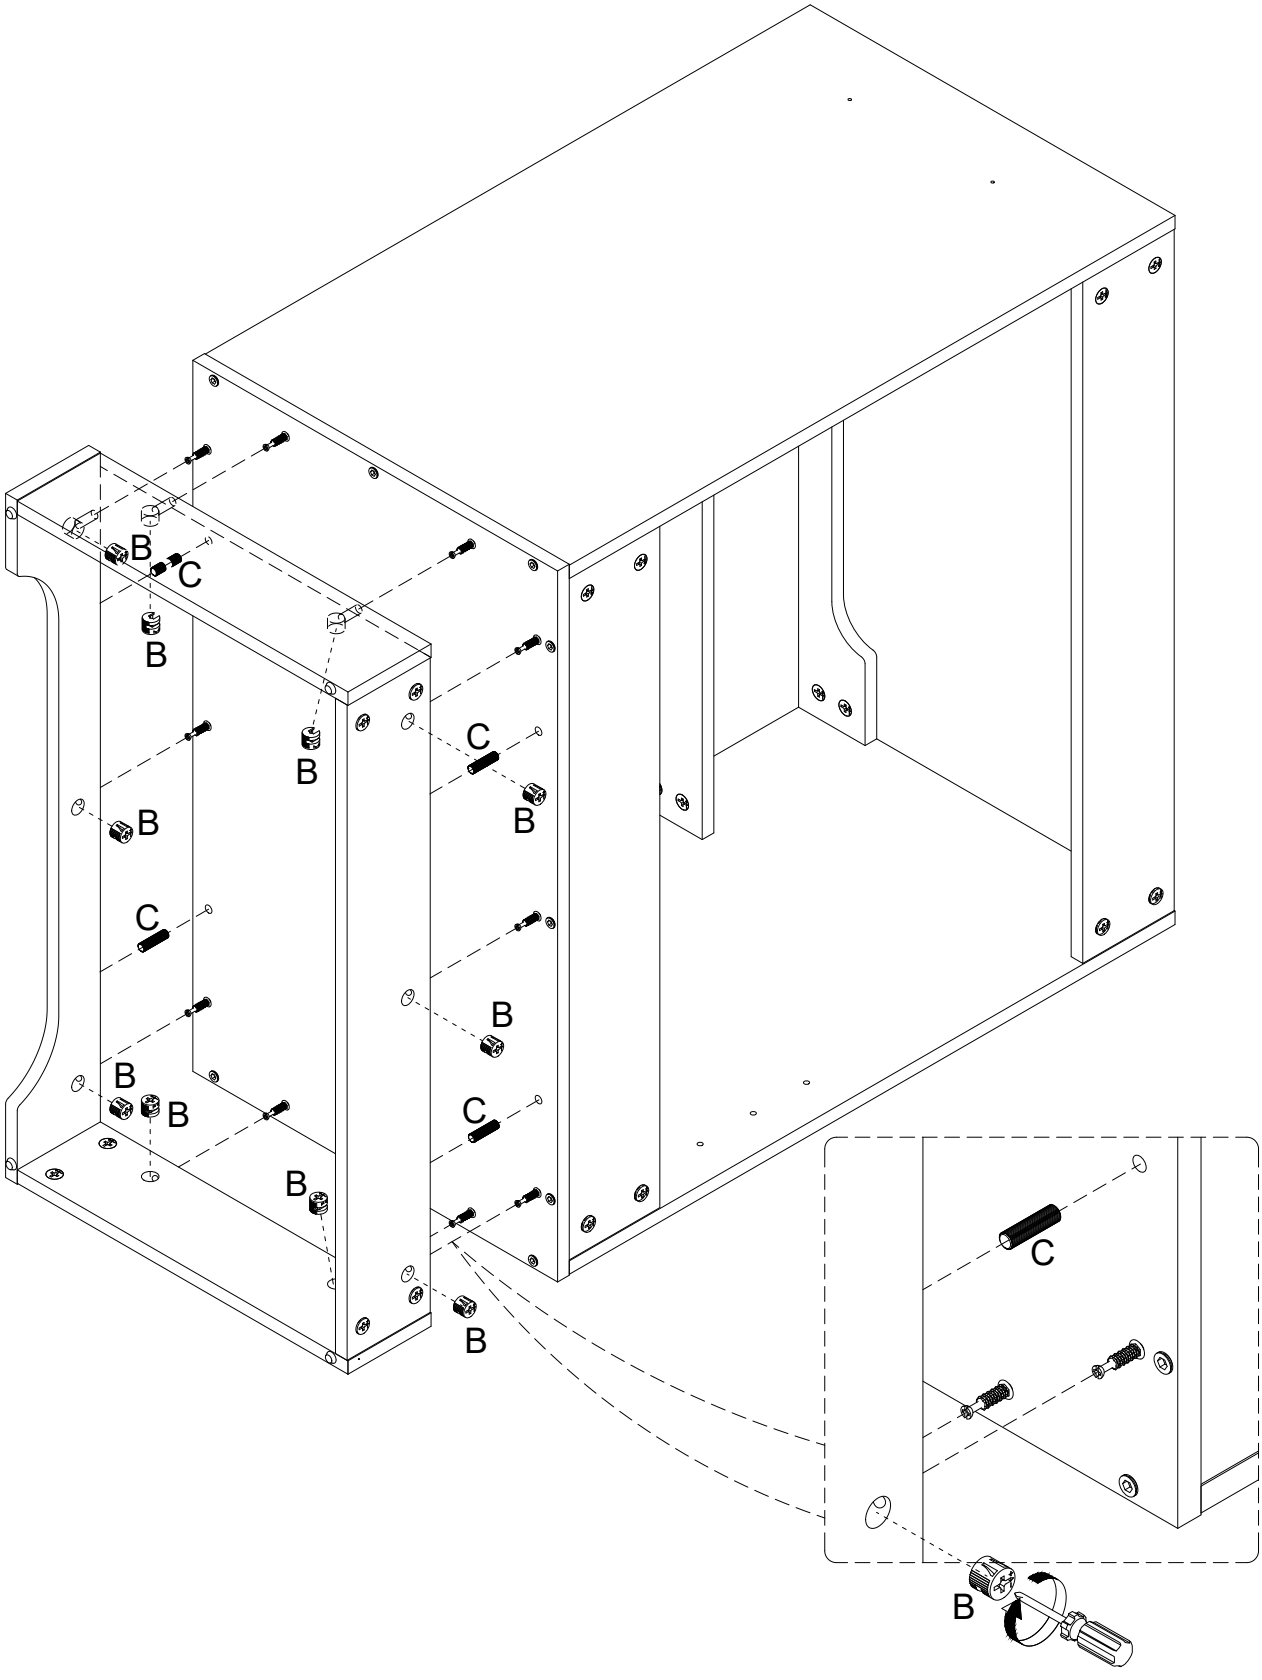

STEP 12


- A x 8pcs
- L x 8pcs
- Q x 4pcs
- U x 2pcs
- W x 4pcs

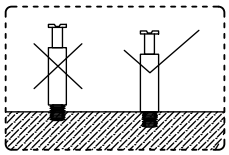


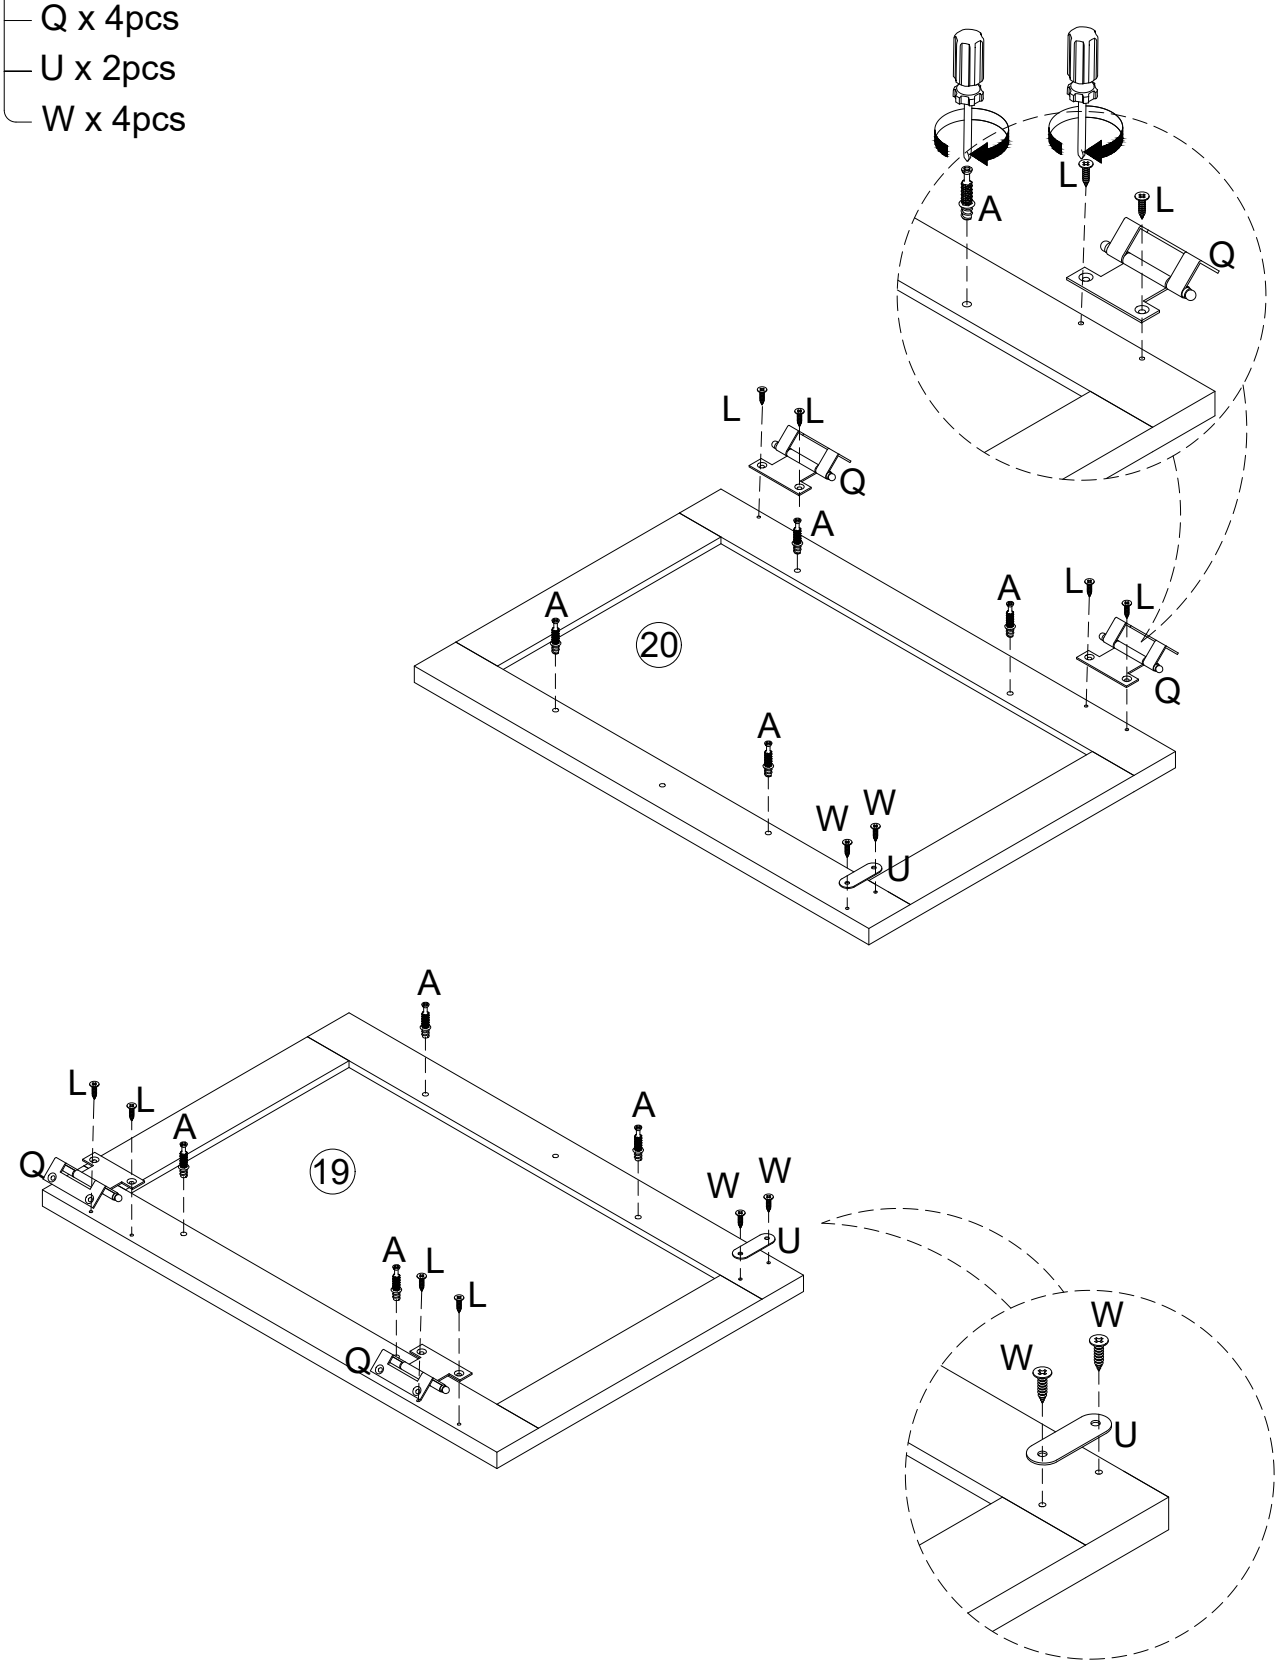


STEP 13

— B x 8pcs

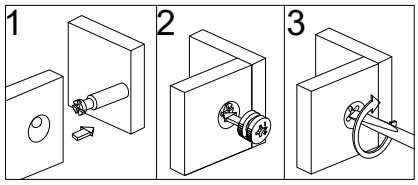


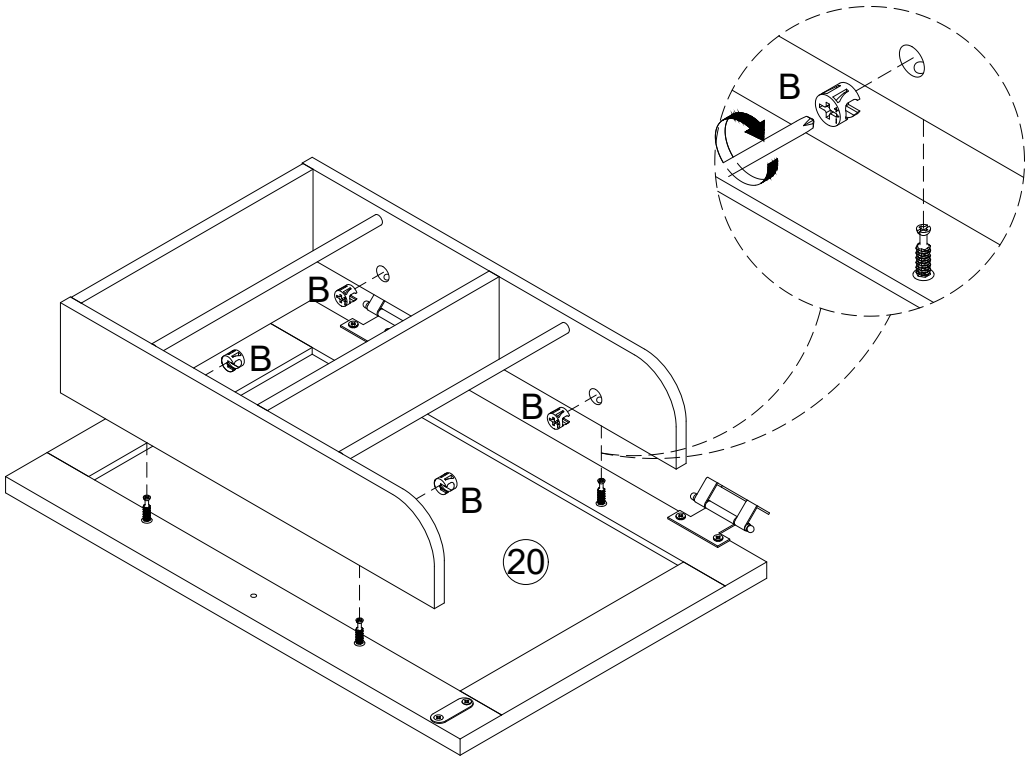

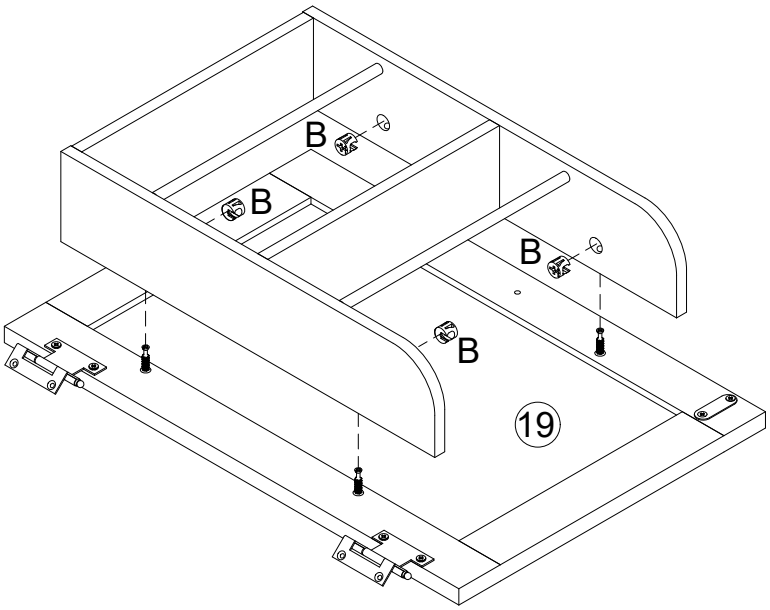


STEP 14

- I x 2pcs
- J x 4pcs
- M x 2pcs
- R x 1pc

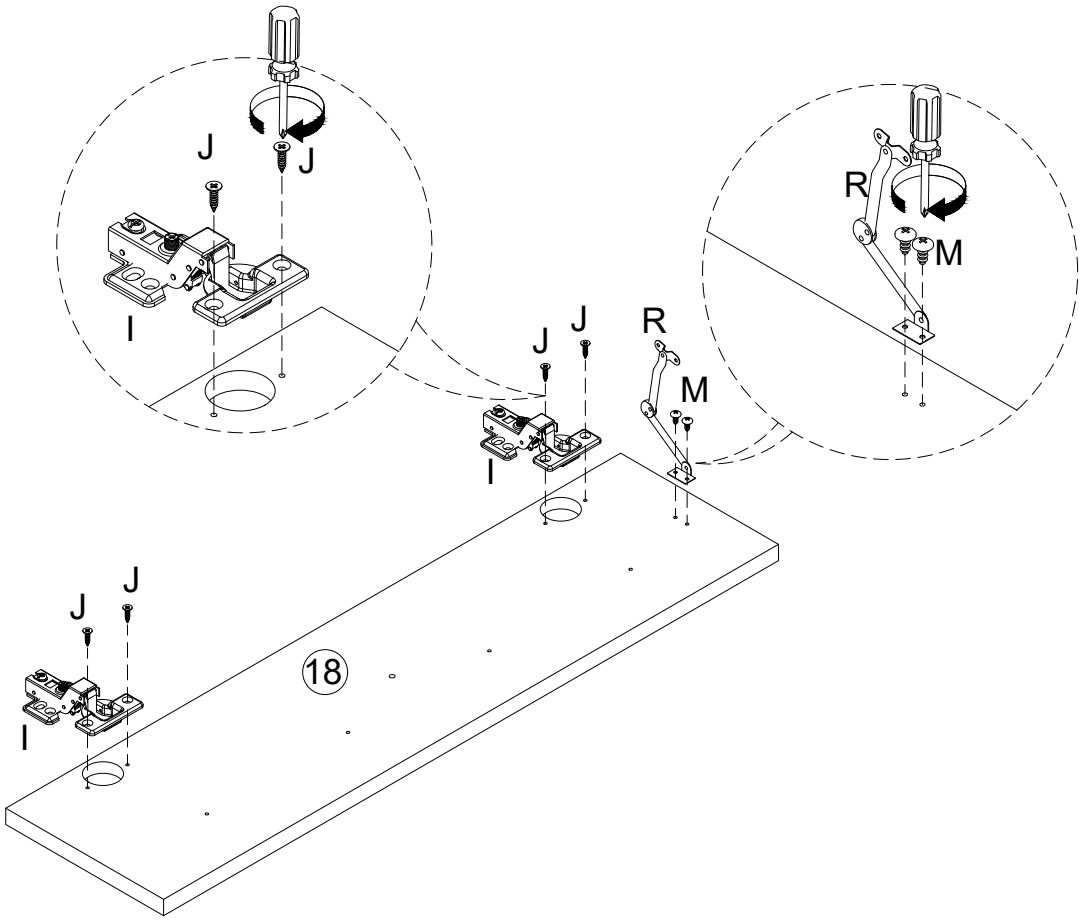


STEP 15

- E x 1pc
- F x 1pc

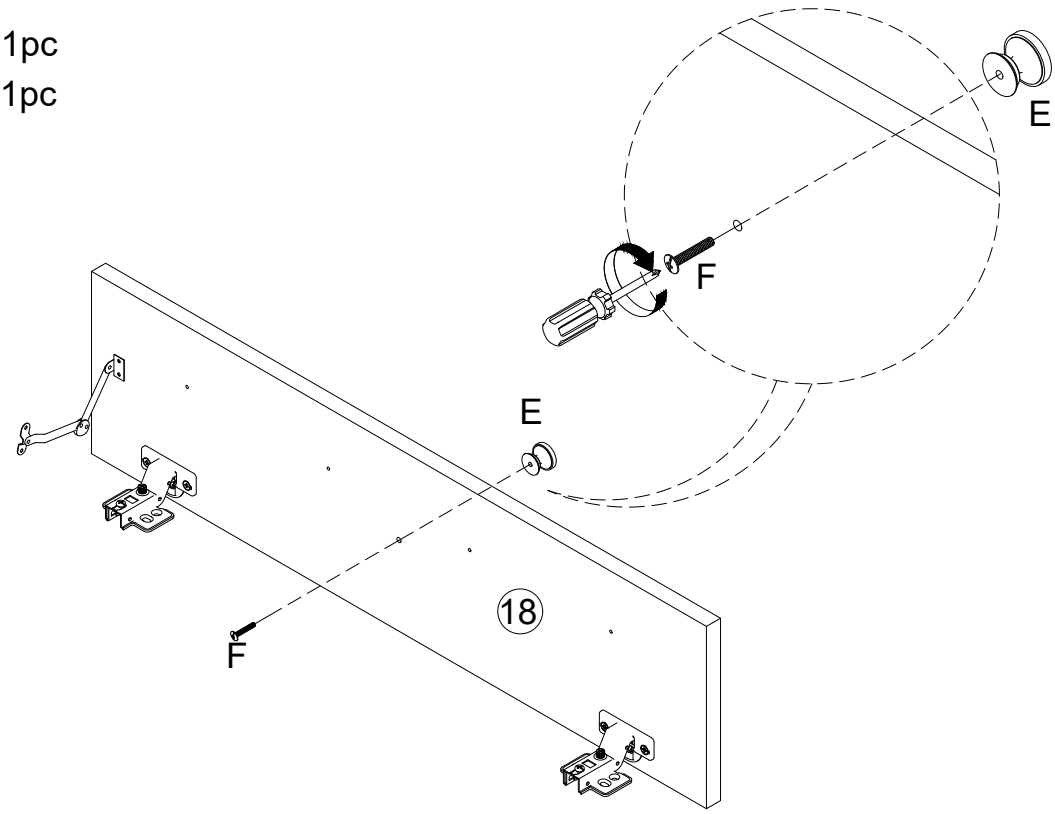


STEP 16

— M x 4pcs

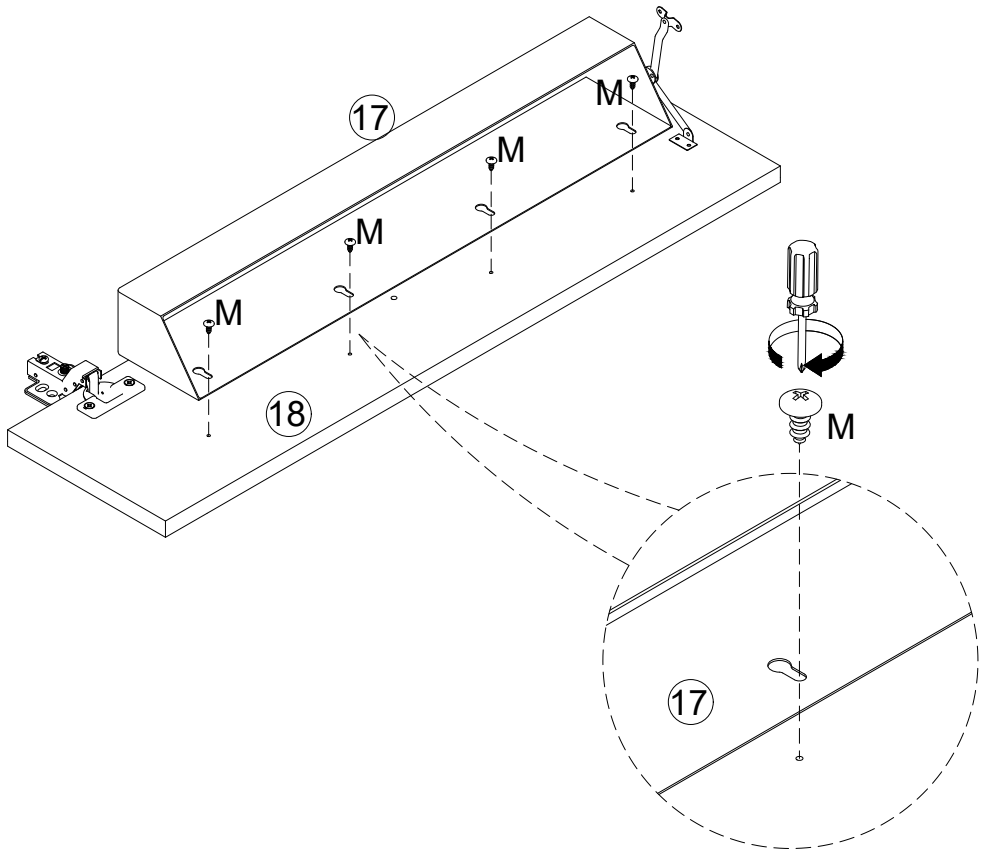


STEP 17

— J x 8pcs
— M x 2pcs
— N x 2pcs

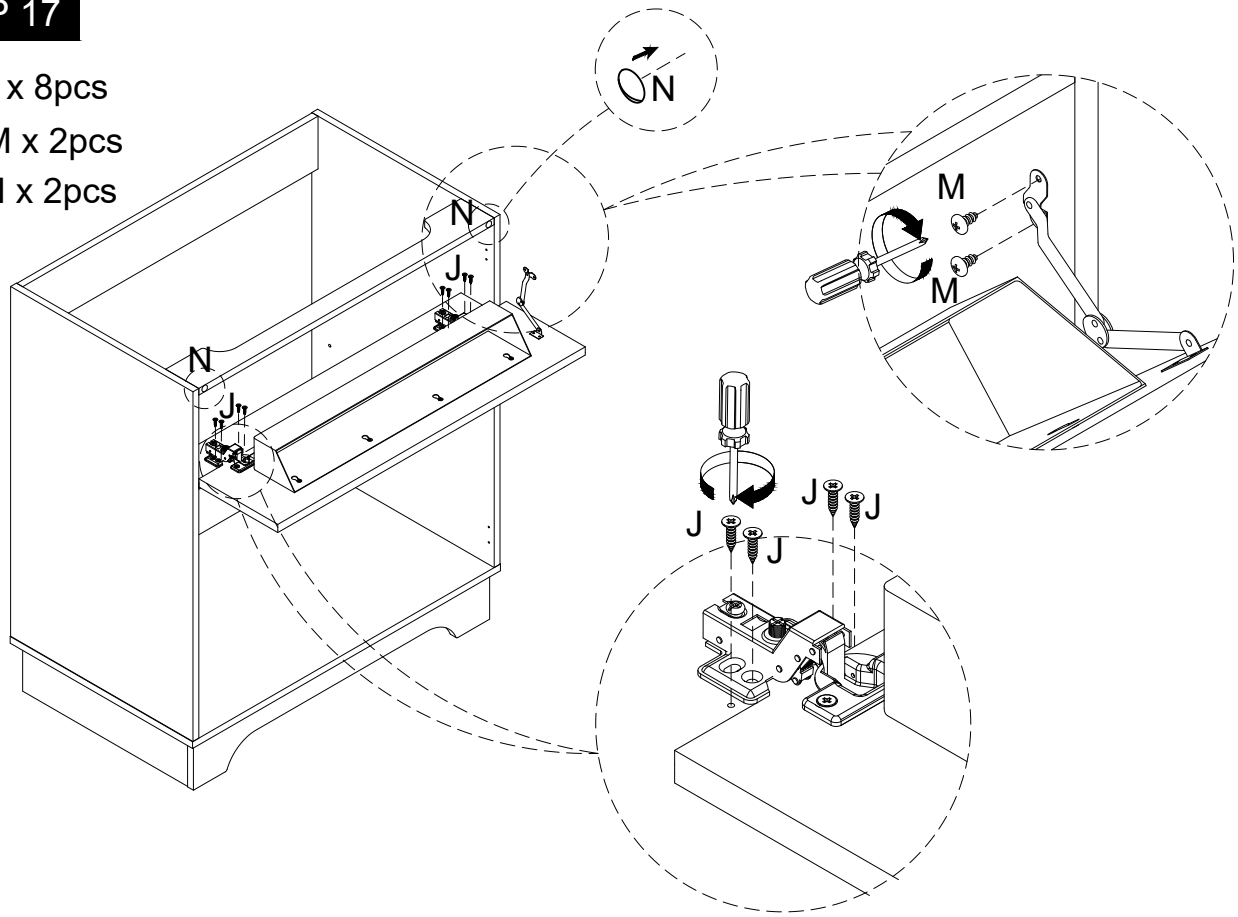


STEP 18

— L x 8pcs

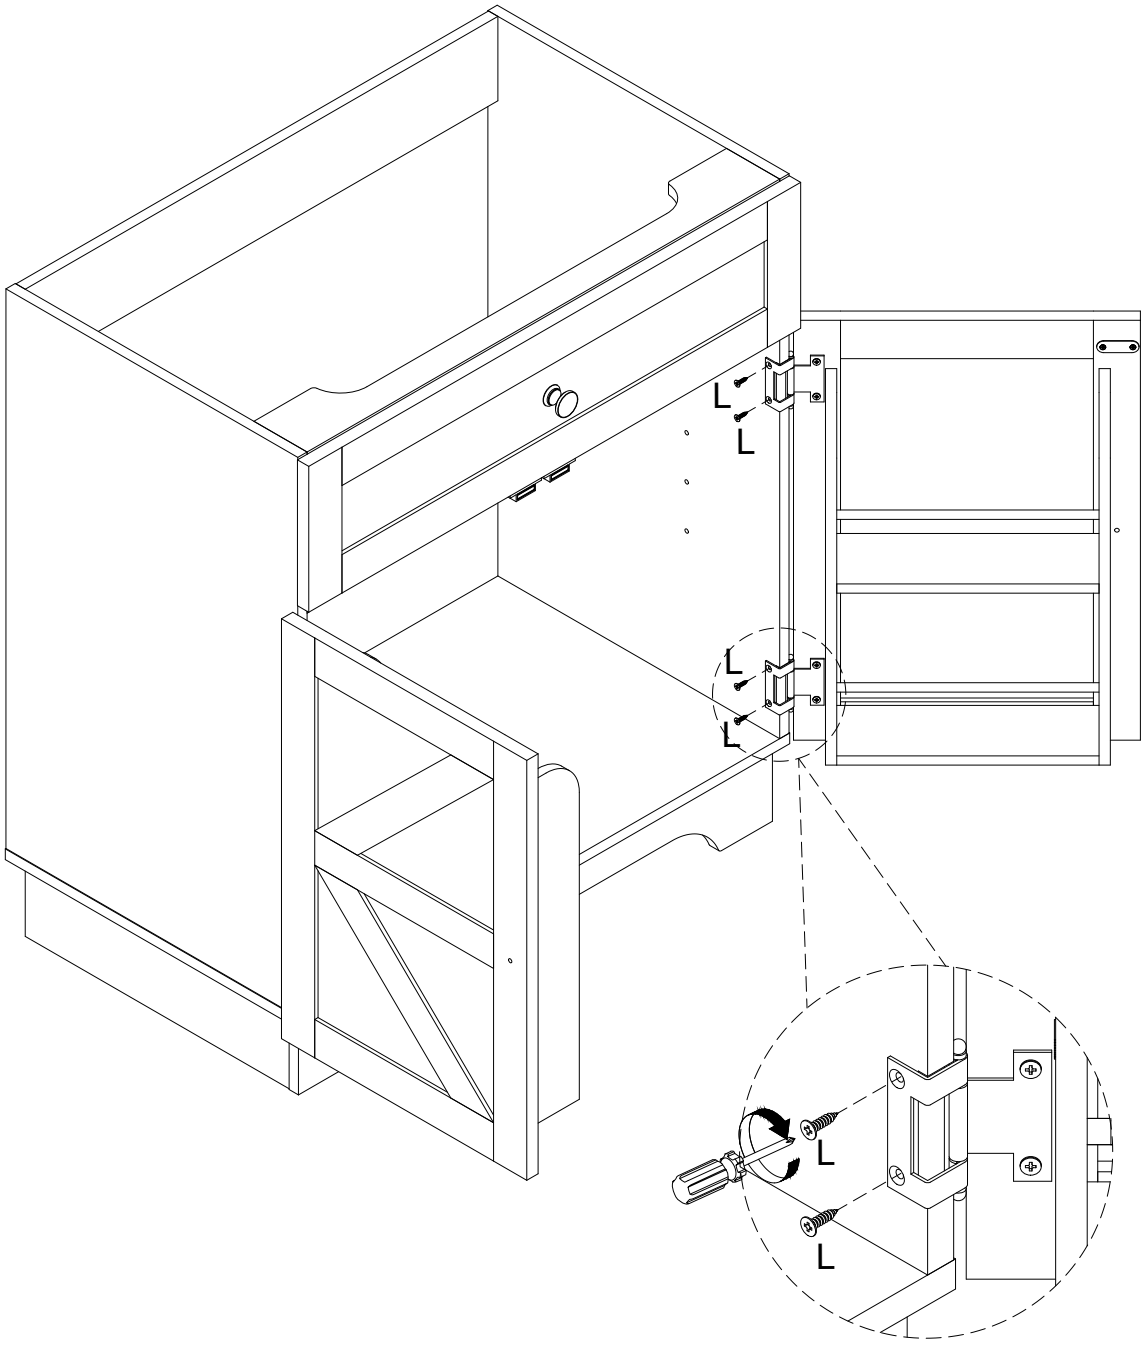


STEP 19


E x 2pcs
F x 2pcs

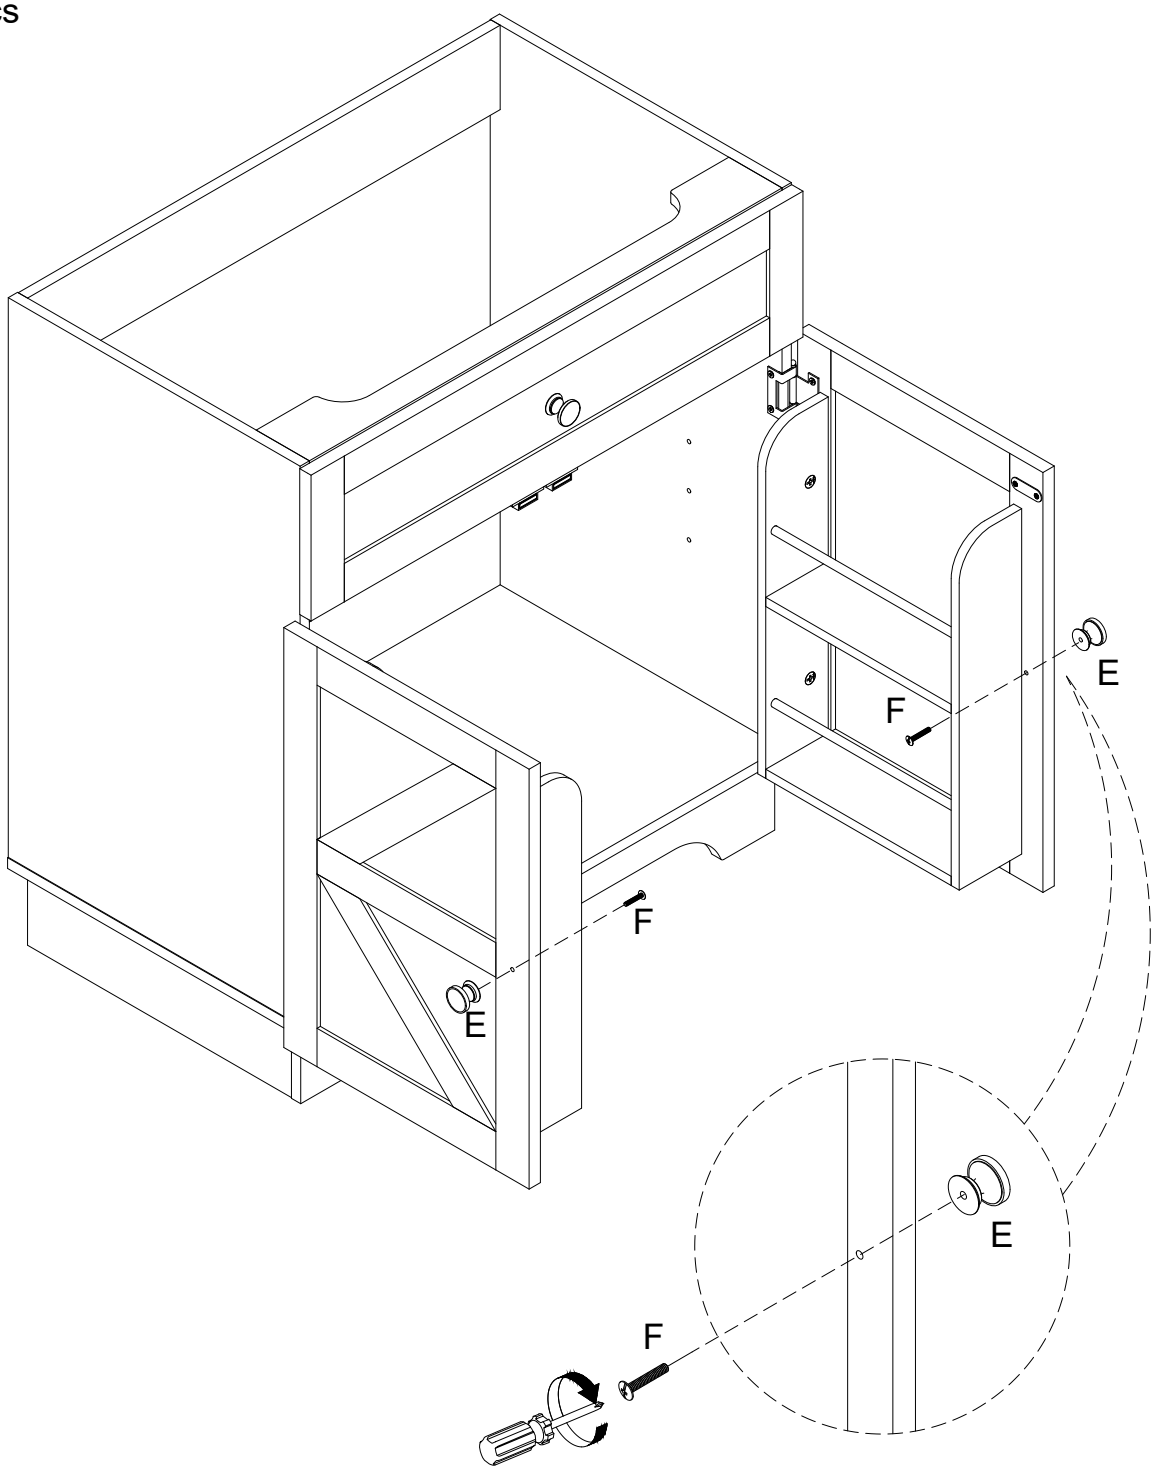

STEP 20


M x 4pcs
S x 4pcs

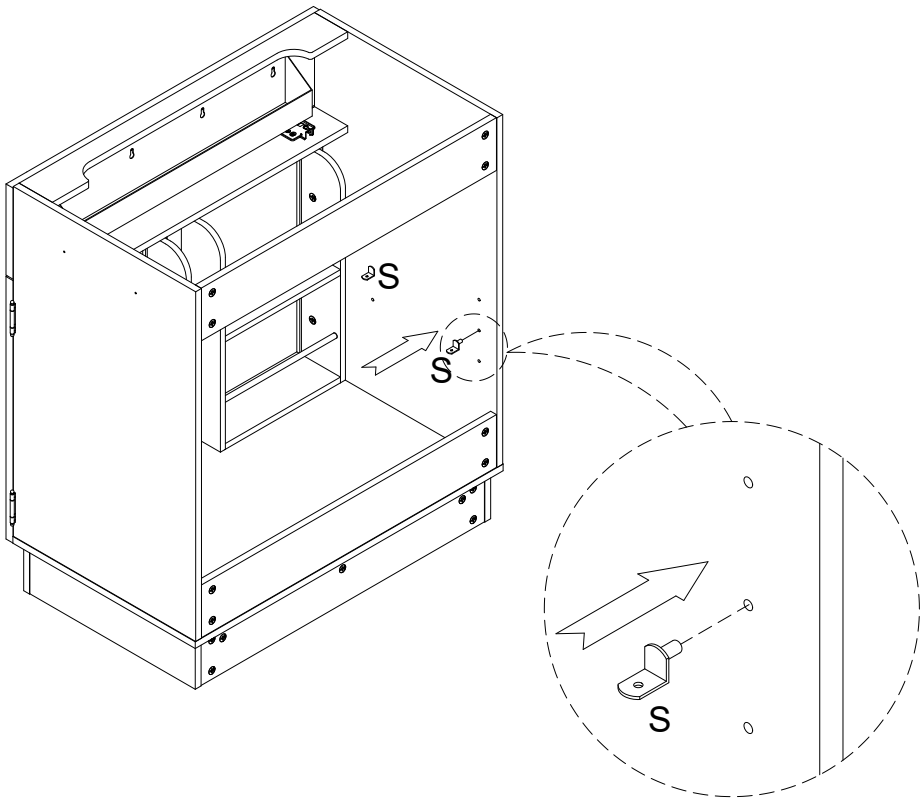

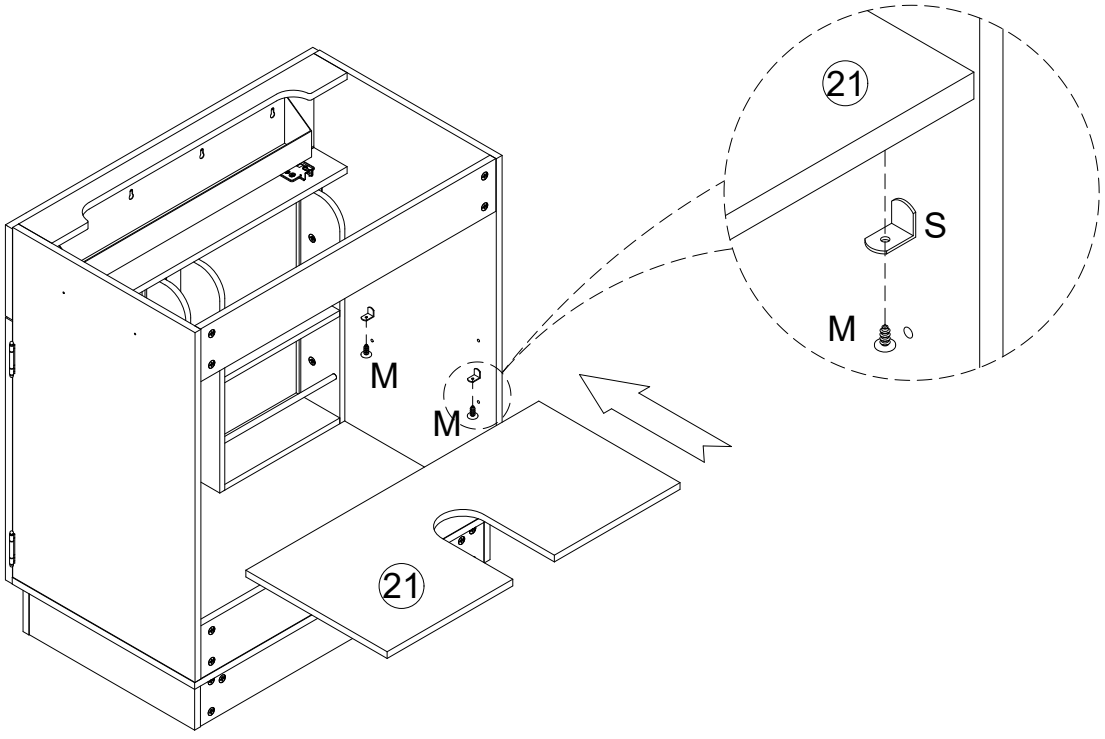

STEP 21

- H x 2pcs
- K x 4pcs

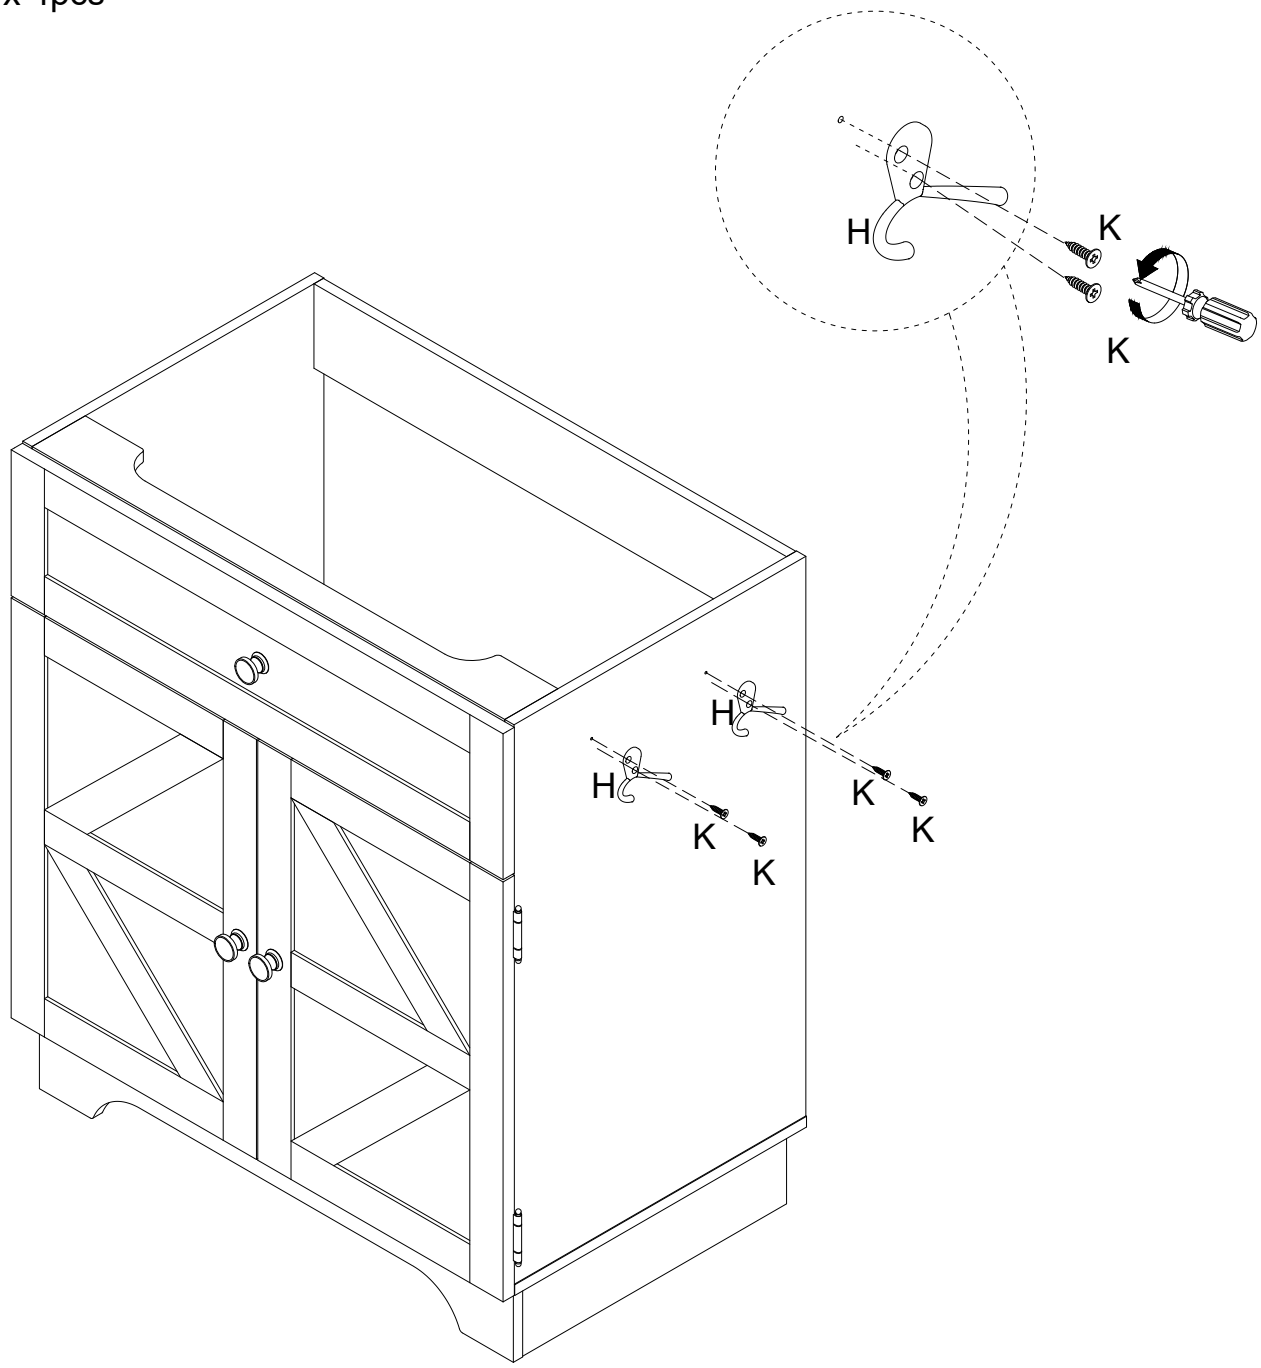

STEP 22

O x 2pcs

P x 2pcs


***Note:** Clean area where the vanity will be permanently located prior to beginning installation, ensuring the vanity will not interfere with any water supply and drain lines once mounted.

***** With the help of another adult, carefully place vanity against the wall in its final location. From inside vanity, drill hole through vanity mounting area and into wall studs.

Using mounting hardware (**O**) appropriate for your installation site, secure vanity to wall stud

* **WARNING**


Vanity **MUST** be secured to wall

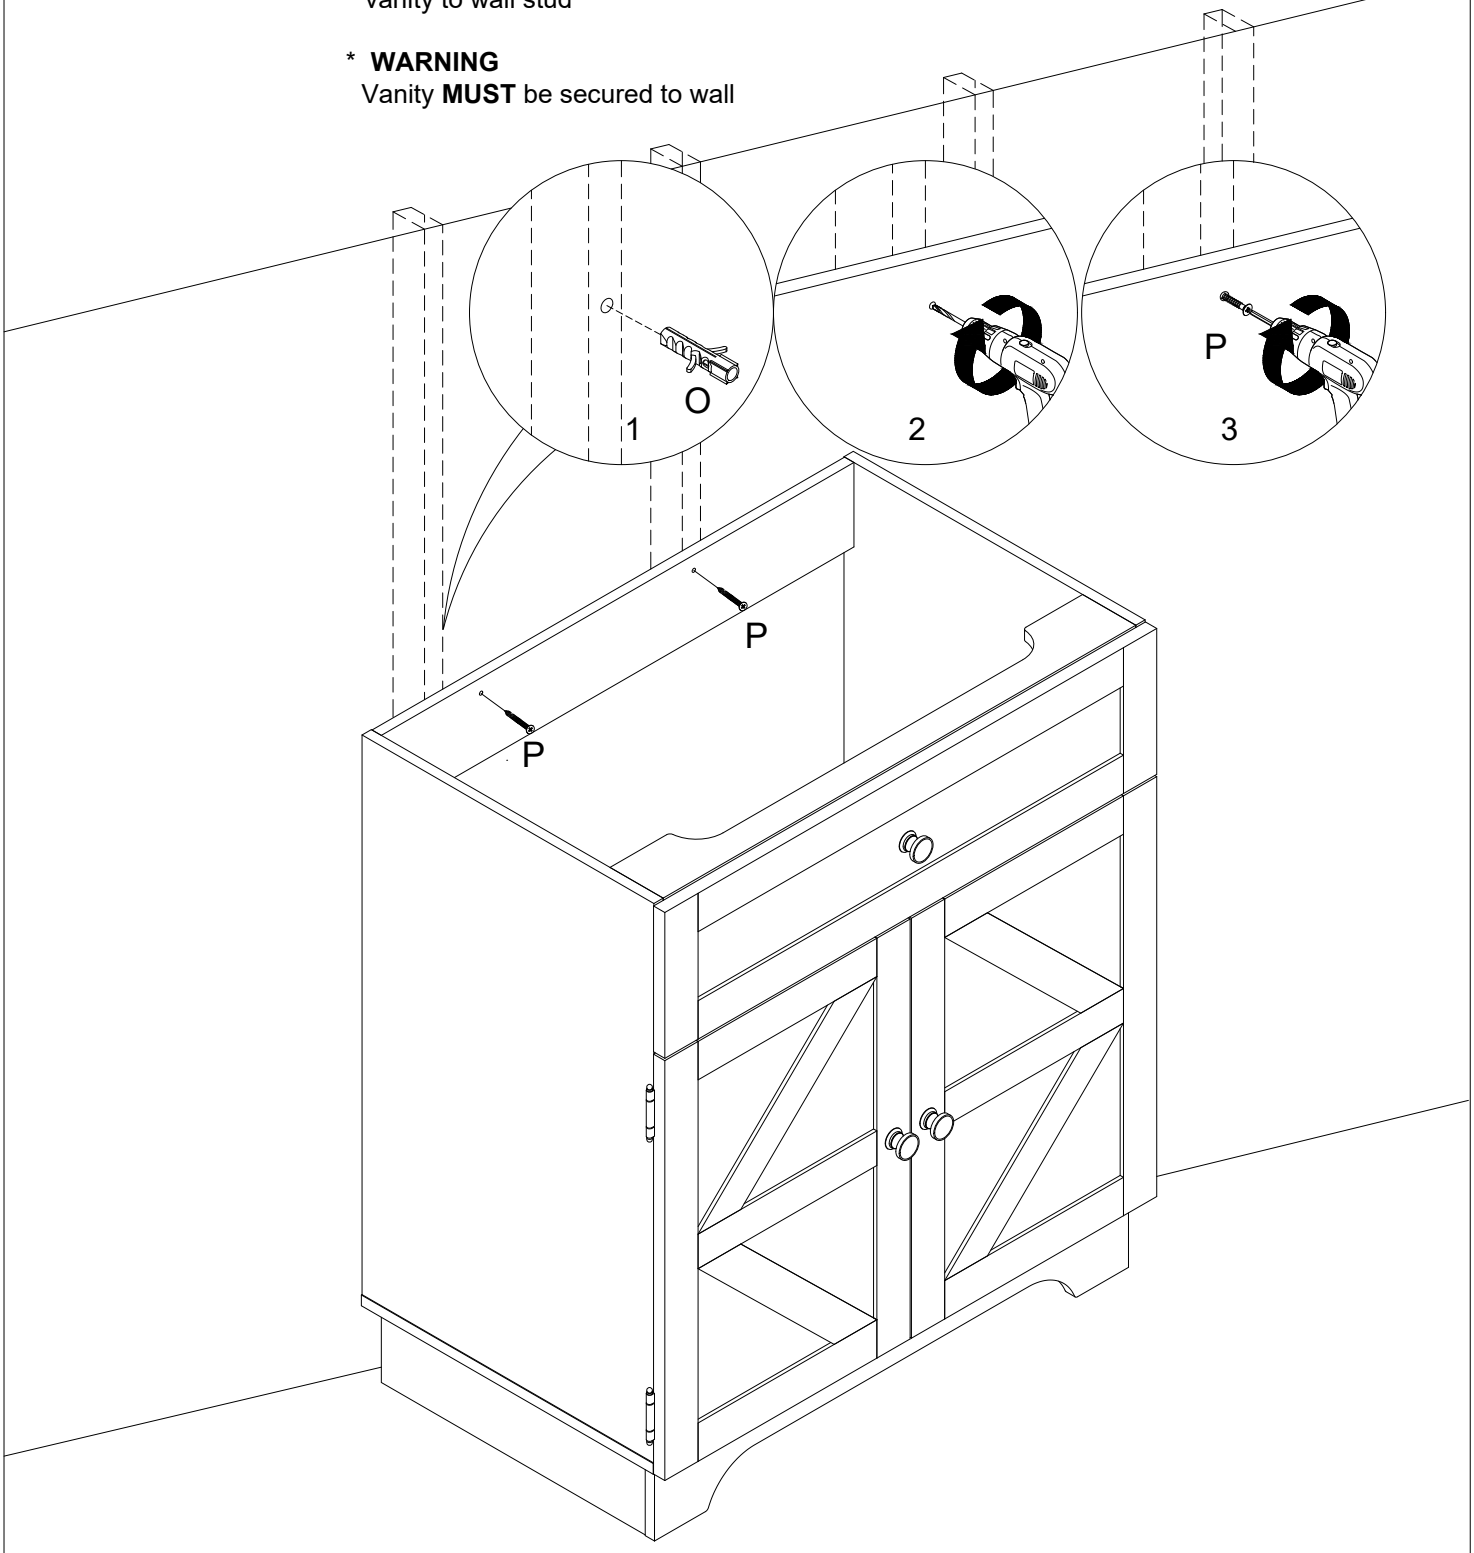


STEP 23

Note: At this stage it may be easier to install the faucet and drain kit (not included) to top (1) per the manufacturer's instructions.

* Apply stain free silicone or latex silicone caulk (not included) to the top edge of vanity. With the help of another adult, gently lower top (1) onto the vanity. Wipe away any excess caulk with a soft cloth, and wait approximately 24 hours for it to dry.

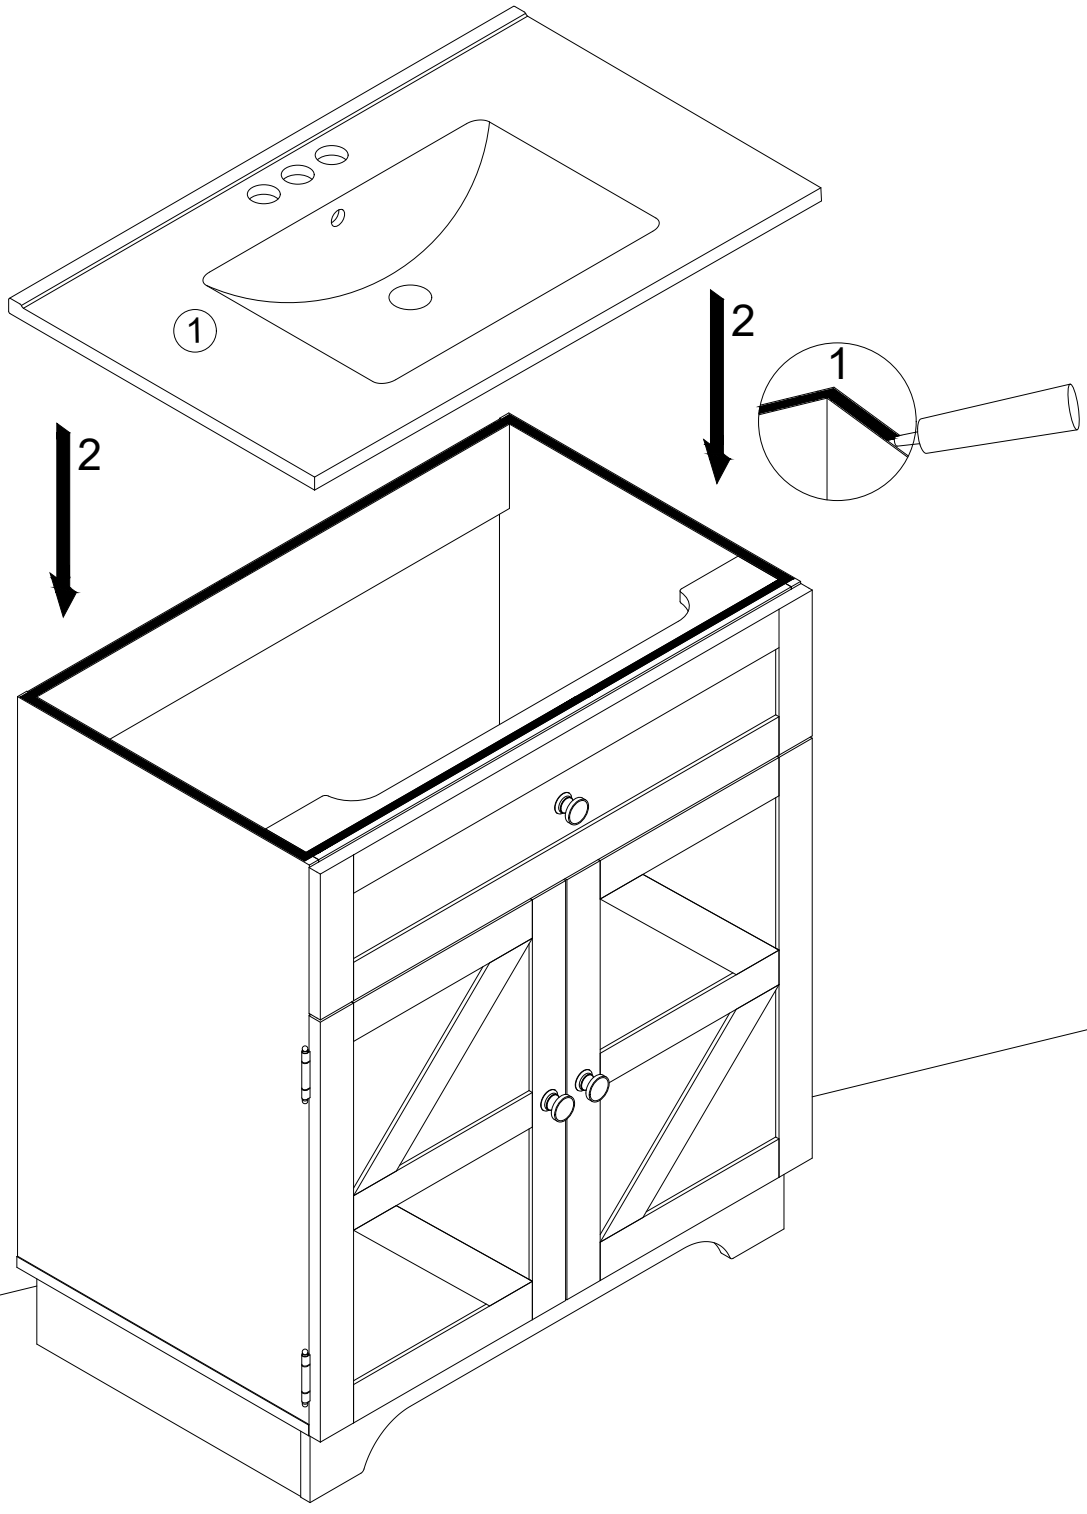


STEP 24

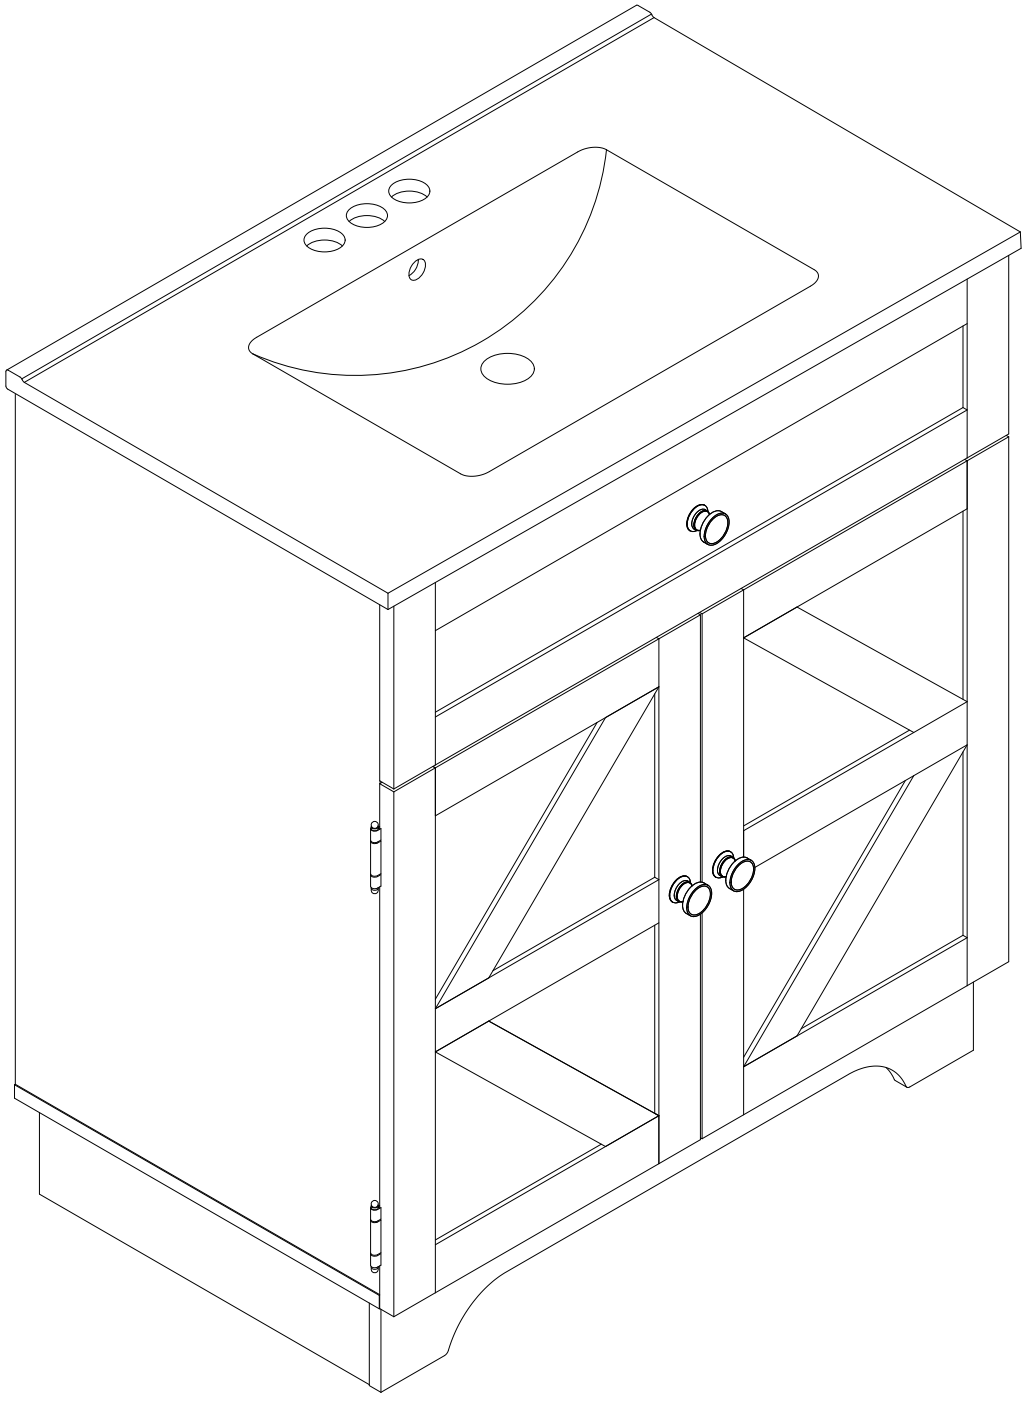

VIETNAM MAESTRO COMPANY LIMITED
No. 9(Factory No. 3,11, Hoang Hung Factory Cluster),
Lai Uyen Street 84, Lai Uyen Town, Bau Bang District,
Binh Duong Province, Vietnam

Made in Vietnam

FURNITURE INSTRUCTION

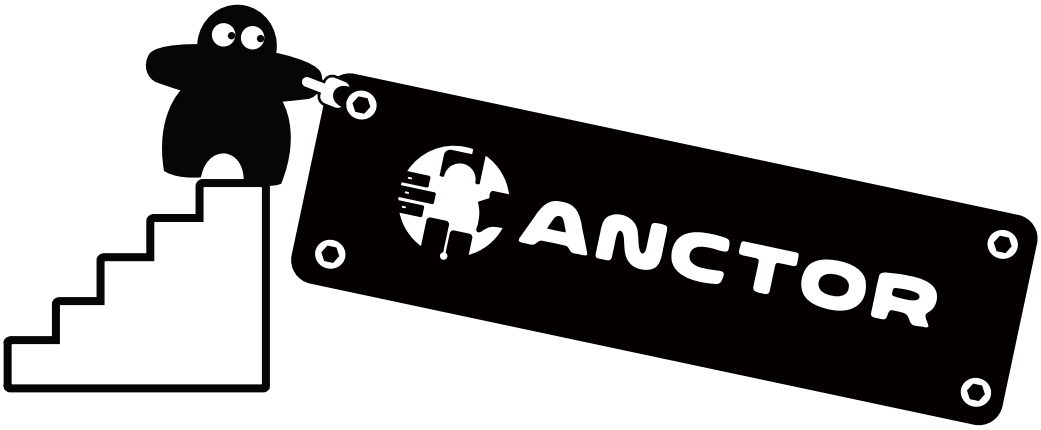

PUZZEL YOUR HOUSE

Please don't tighten the screws completely and go back later for a final tightening of all the screws after pieces are aligned with each other.