


# SKU:N711P188171

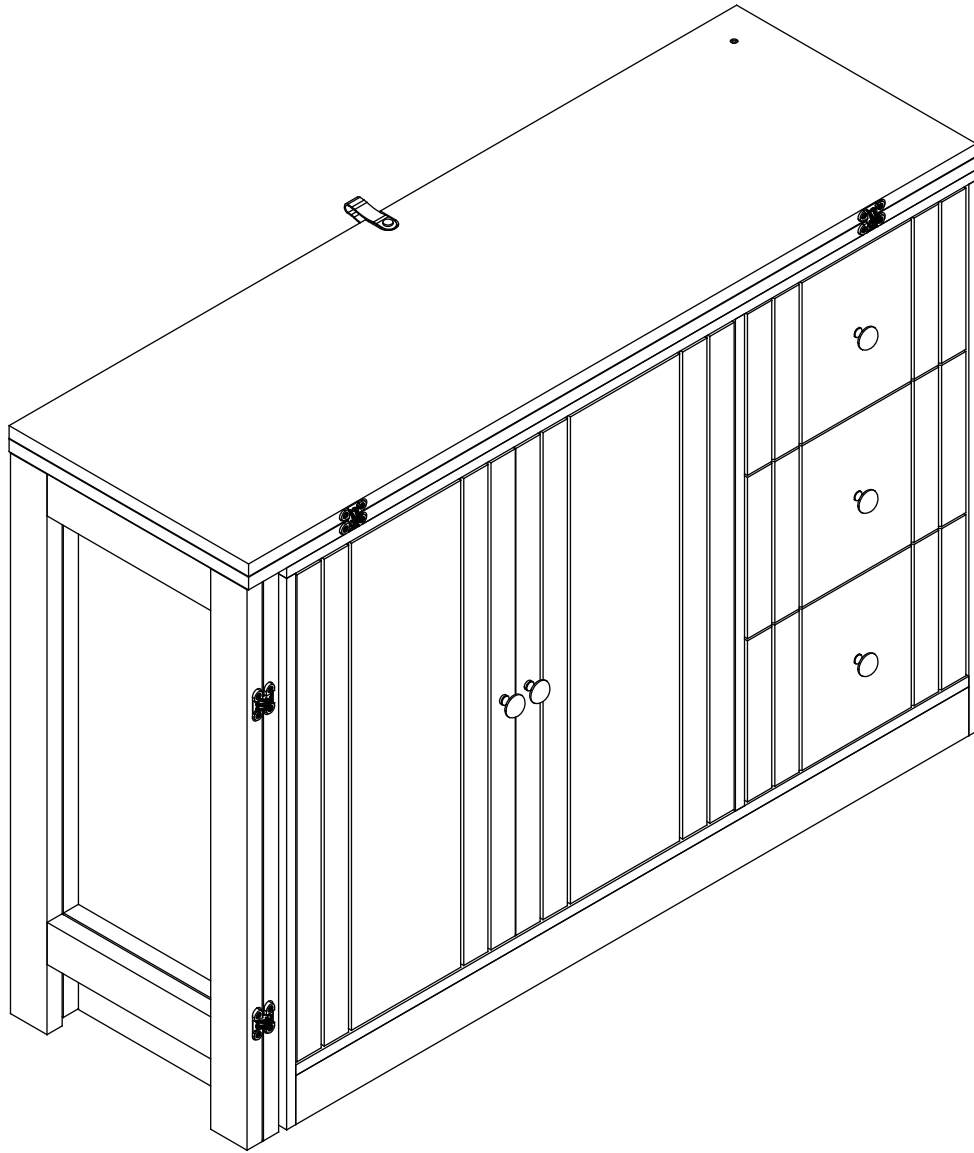

- 1.Note:This is not clothing storage cabinet and it is not recommended to use it as a clothing storage cabinet.
- 2.All cabinets come with TRO,stainless steel or our "L-Bracket" when shipped.

1. Thank you for choosing *our products*.

2. Return Policy



DO NOT RETURN TO THE STORE! Skip the process of returning your product and contact us directly for a replacement

If you find that parts of your order are missing or damaged, we will gladly ship any needed replacement parts free of charge.

If your product's quality does not meet your expectations or you have found any sort of defect, please contact our customer service department and let us know the details of your order and any issues encountered, we will try our best to provide you with a solution. Feel free to also directly contact our manufacturer concerning needed replacement parts and they will be happy to help provide you with a solution or answer any questions you may have.

#### Recommendations Before Beginning Assembly



- Read instructions, cover to cover



- Have 2-4 adults on hand for assembly depending on product size



- Do not assemble directly on flooring or carpet



- Assemble on a clean non-marring surface (example: packing foam)



- Save all packaging until finished

#### 3. Assembly Notice:

- If you encounter any problems during assembly and find that you cannot continue, rest assured we will help you solve the situation as soon as possible. Simply keep all of the parts of the product stored in a safe place and contact us immediately so we may assist you further.
- Once you have opened your package, remove all inner hardware packages and take the parts out. One by one, Place the parts out neatly in front of you, then refer to the instructions to ensure no parts are missing. If any pieces are found missing, please carefully look in the box first, as the hardware packaging might have torn making the

hardware spill in the box.

- Some key parts of your product may be stored and hidden inside of other parts. Please open any zippered or hook & loop storage compartments to remove all parts. (example: cushions and legs being stored in the underside of a sofa)
- **IMPORTANT:** When setting up your product, **DO NOT INSTALL THE SCREWS ALL THE WAY IN THE BEGINNING.** Place each screw into their proper hole and use your hand to twist the screw halfway. Twist all the screws in halfway to ensure the holes will match up properly and the product is level on the ground. When everything seems fitted, then tighten the screws.
- When you have completed assembly, we suggest you have more than one person to assist you with lifting and placing the product.

## Care & Maintenance



Do not put hot items directly on furniture surface



Do not clean furniture with harsh cleansers or polish



Do not place furniture under direct sunlight



Do not place furniture near heating or cooling vents



Do not write on furniture without a padded barrier to protect the surface



Do not place furniture outside. For indoor use only



Not for commercial use. For residential use only



Stains may be removed with mild soap solution and damp cloth




Children should not climb or jump on the furniture




Dust and pick-up spills using a clean, non-colored, lint-free cloth

## Caution


- This product contains small components. Please ensure that they are kept away from small children.
- Do not use power tools to assemble your furniture. Power tools may strip or damage the parts.

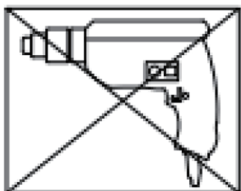


# SKU:N711P188171

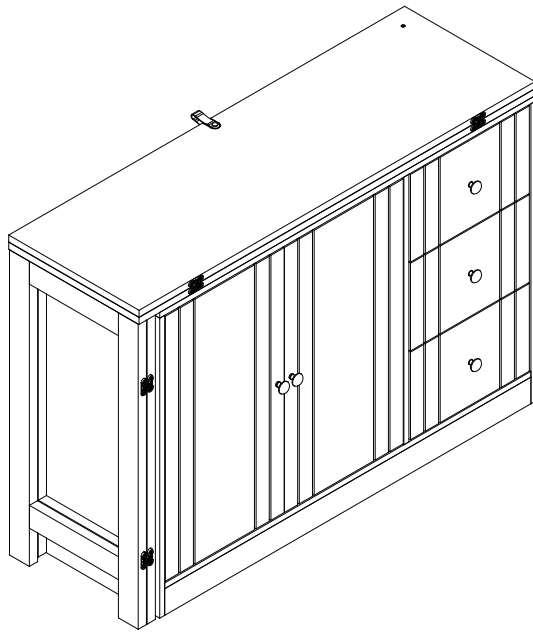

## Part list

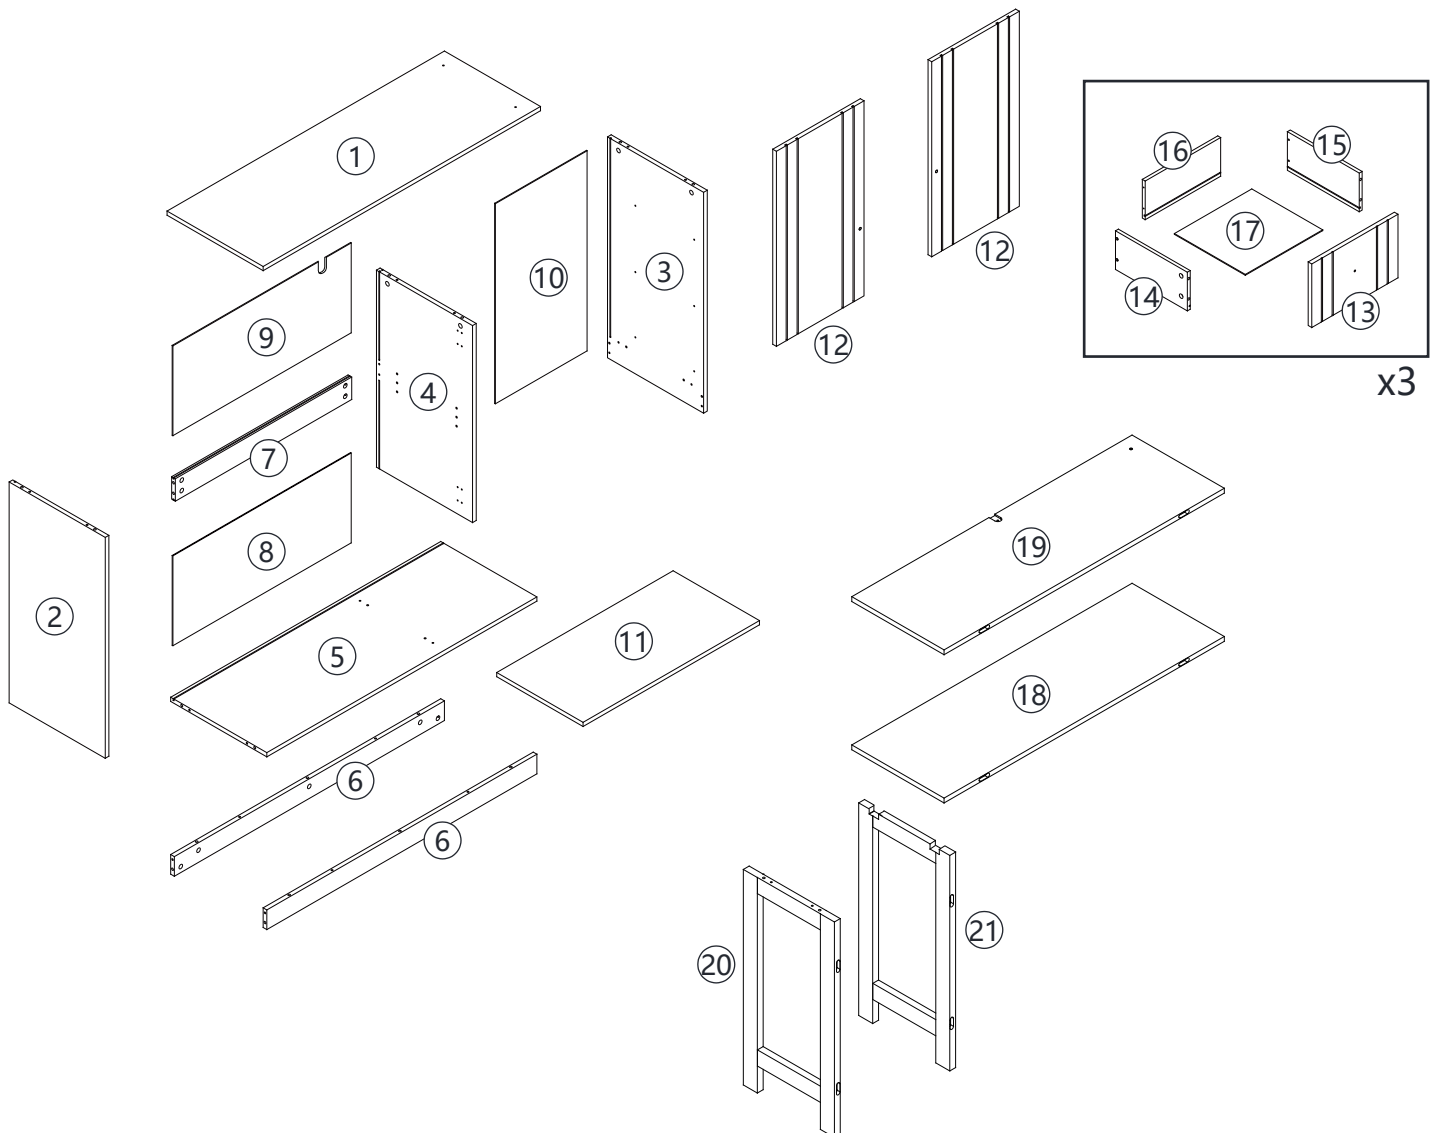


1

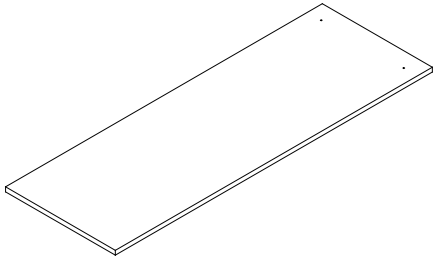


1PC

2

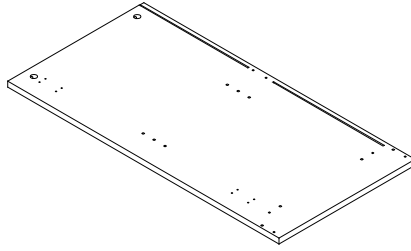


1PC

3

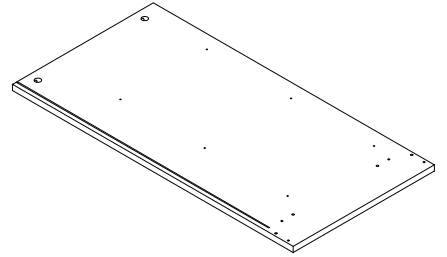


1PC

4

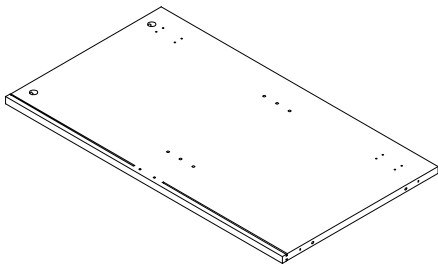


1PC

5

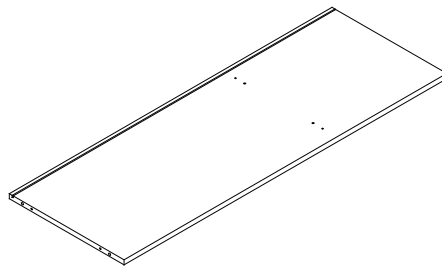


1PC

6

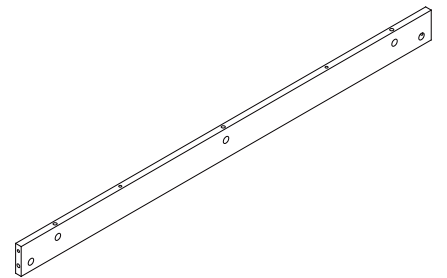


2PCS

7

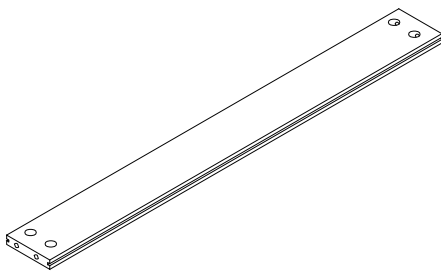


1PC

8

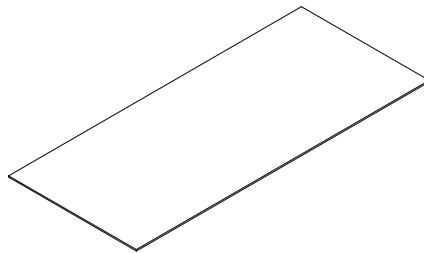


1PC

9

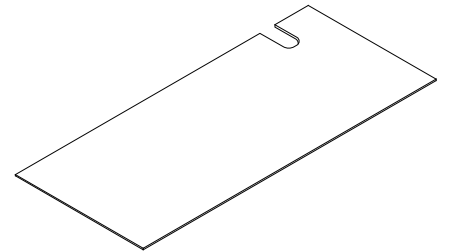


1PC

10

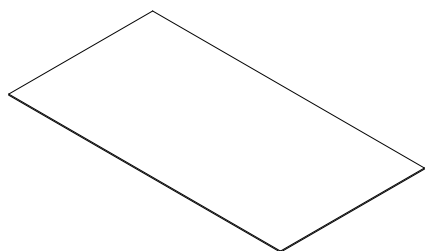


1PC

11

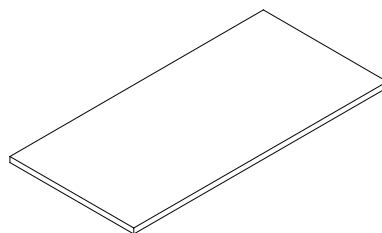


1PC

12

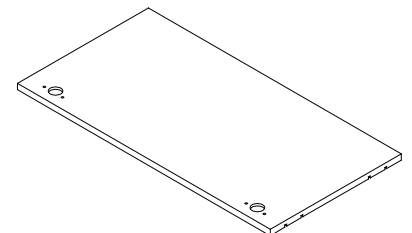


2PCS

13

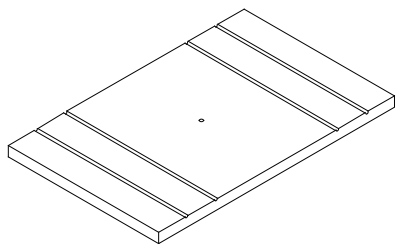


3PCS

14

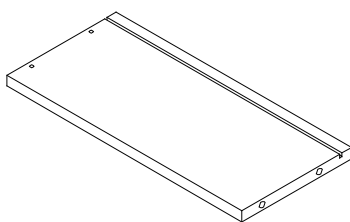


3PCS

15

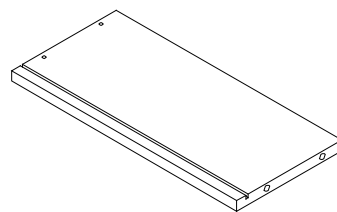


3PCS

16

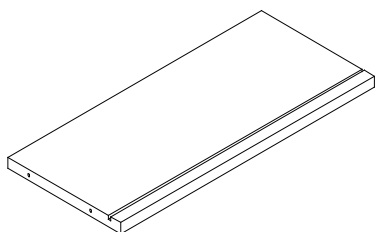


3PCS

17

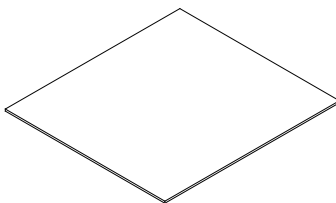


3PCS

18

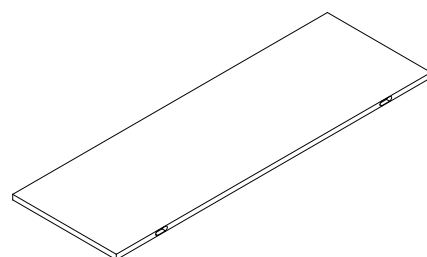


1PC

19

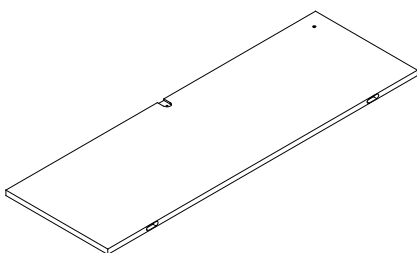


1PC

20





















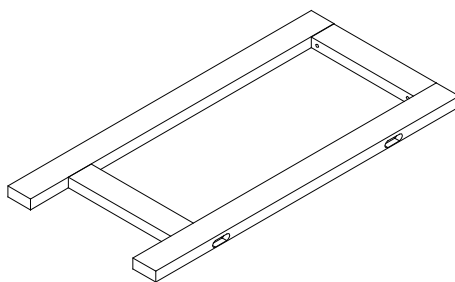


1PC




21

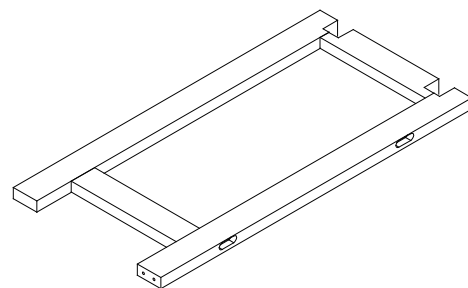




1PC
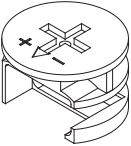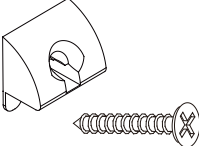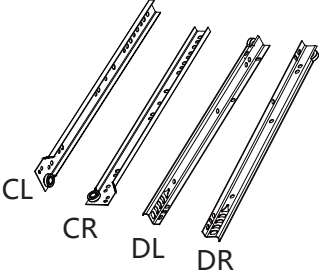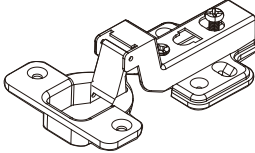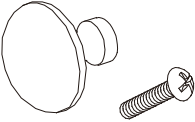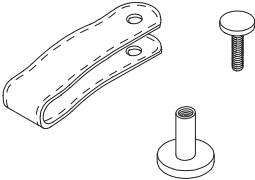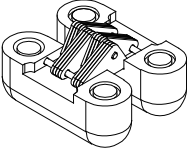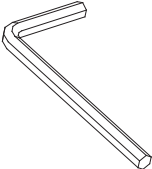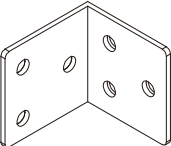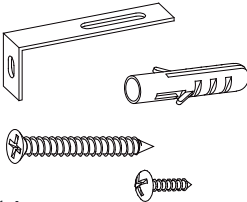
|                                                                                                    |                                                                                                                  |                                                                                                     |                                                                                                      |
|----------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------|
|  <p>Ø6x35mm</p>   |  <p>Ø15x9mm</p>                 |  <p>Ø6x30mm</p>   |  <p>Ø4x35mm</p>   |
| <b>A×36</b>                                                                                        | <b>B×36</b>                                                                                                      | <b>C×22</b>                                                                                         | <b>D×14</b>                                                                                          |
|  <p>Ø3x16mm</p>   |  <p>CL<br/>CR<br/>DL<br/>DR</p> |  <p>Ø3x12mm</p>   |                   |
| <b>E×8</b>                                                                                         | <b>F×3</b>                                                                                                       | <b>G×24</b>                                                                                         | <b>H×4</b>                                                                                           |
|  <p>Ø4x12mm</p>   |  <p>Ø4x18mm</p>                 |  <p>Ø3.5x12mm</p> |                   |
| <b>I×26</b>                                                                                        | <b>J×5</b>                                                                                                       | <b>K×1</b>                                                                                          | <b>L×4</b>                                                                                           |
|                 |                               |                 |  <p>Ø4x30mm</p> |
| <b>M×2</b>                                                                                         | <b>N×1</b>                                                                                                       | <b>O×4</b>                                                                                          | <b>P×16</b>                                                                                          |
|  <p>Ø6x60mm</p> |                               |                 |  <p>Ø4x14mm</p> |
| <b>Q×2</b>                                                                                         | <b>R×1</b>                                                                                                       | <b>S×2</b>                                                                                          | <b>T×12</b>                                                                                          |
|                 |  <p>Ø4x14mm<br/>Ø4x40mm</p>   |                                                                                                     |                                                                                                      |
| <b>U×1</b>                                                                                         | <b>V×1</b>                                                                                                       |                                                                                                     |                                                                                                      |




STEP 1

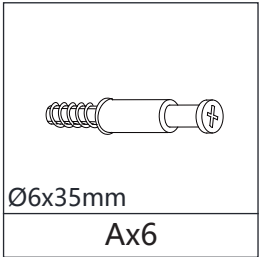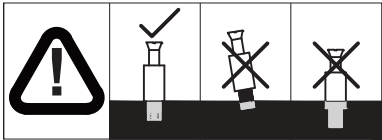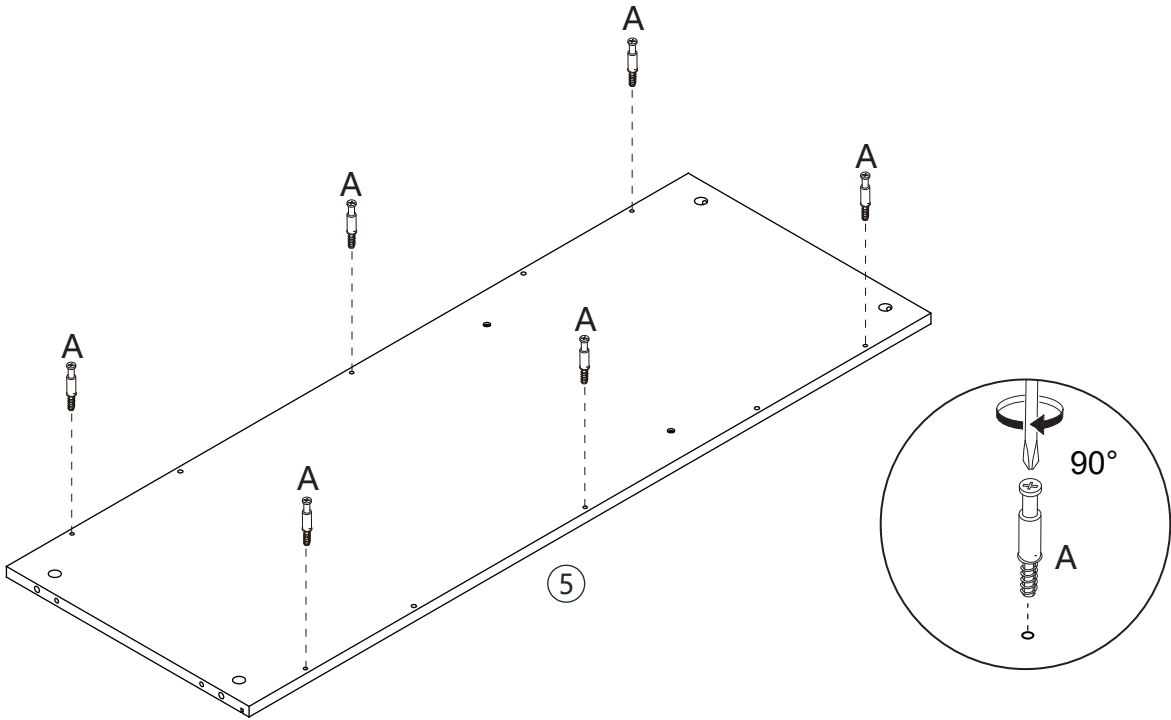




STEP 2

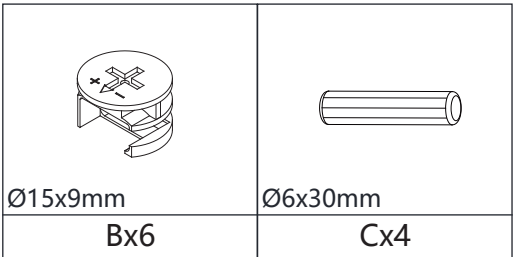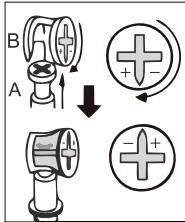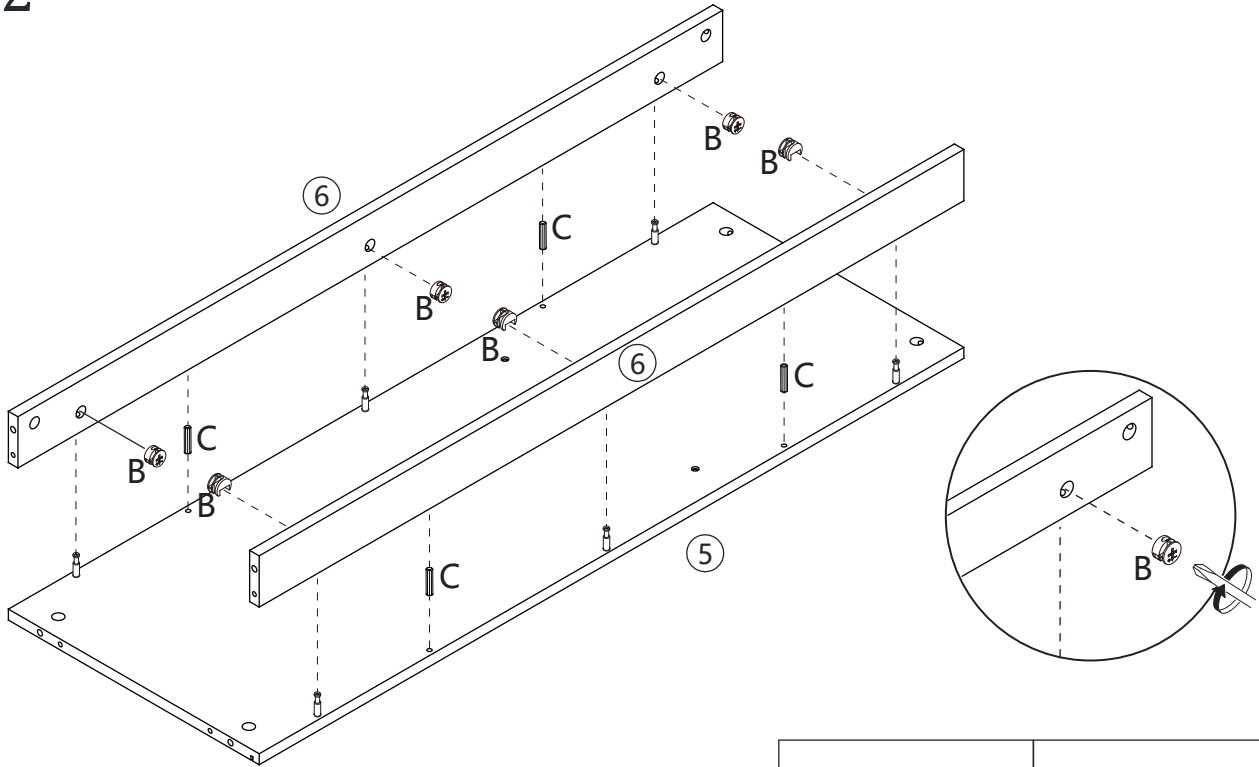


STEP 3

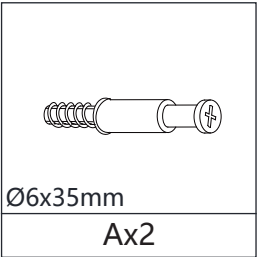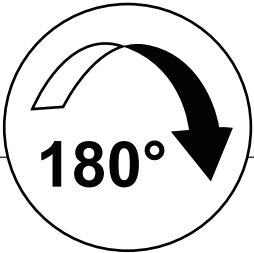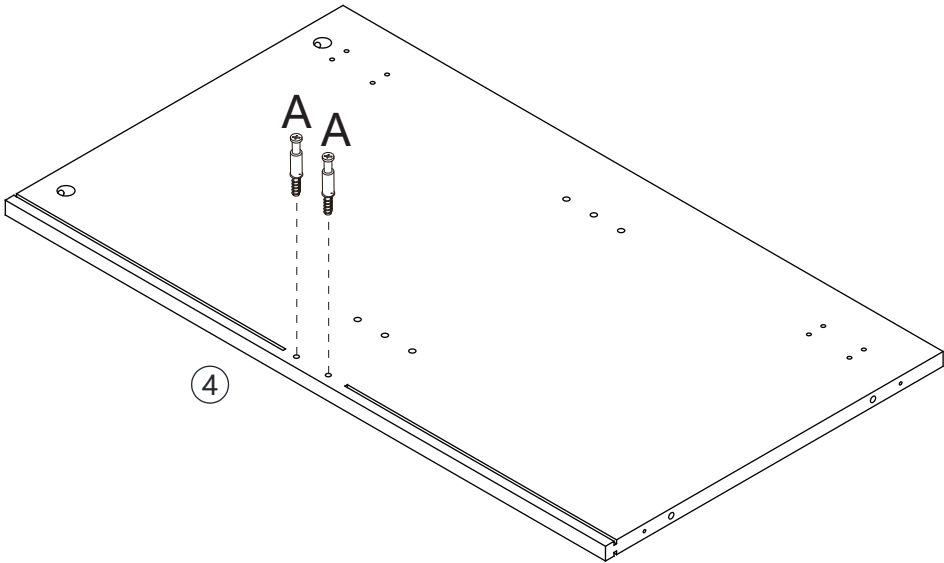


STEP 4

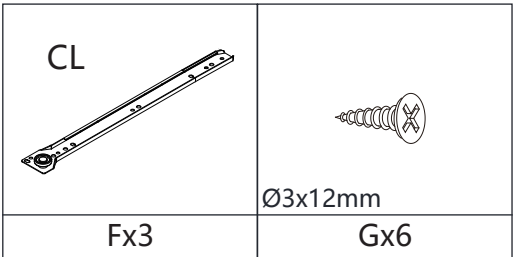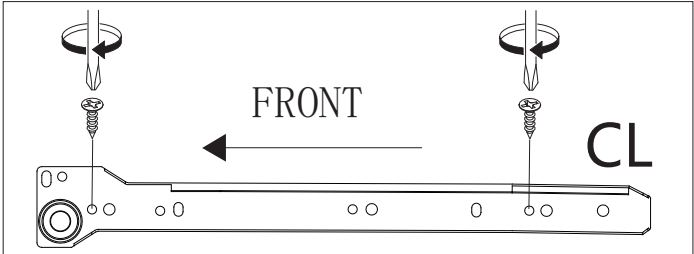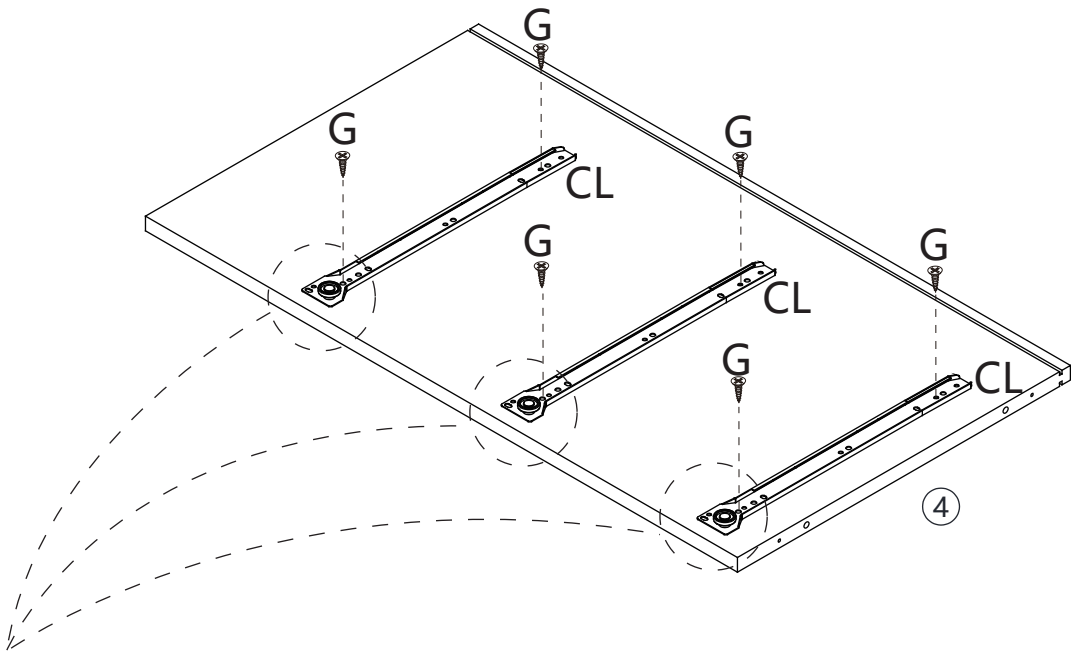


STEP 5

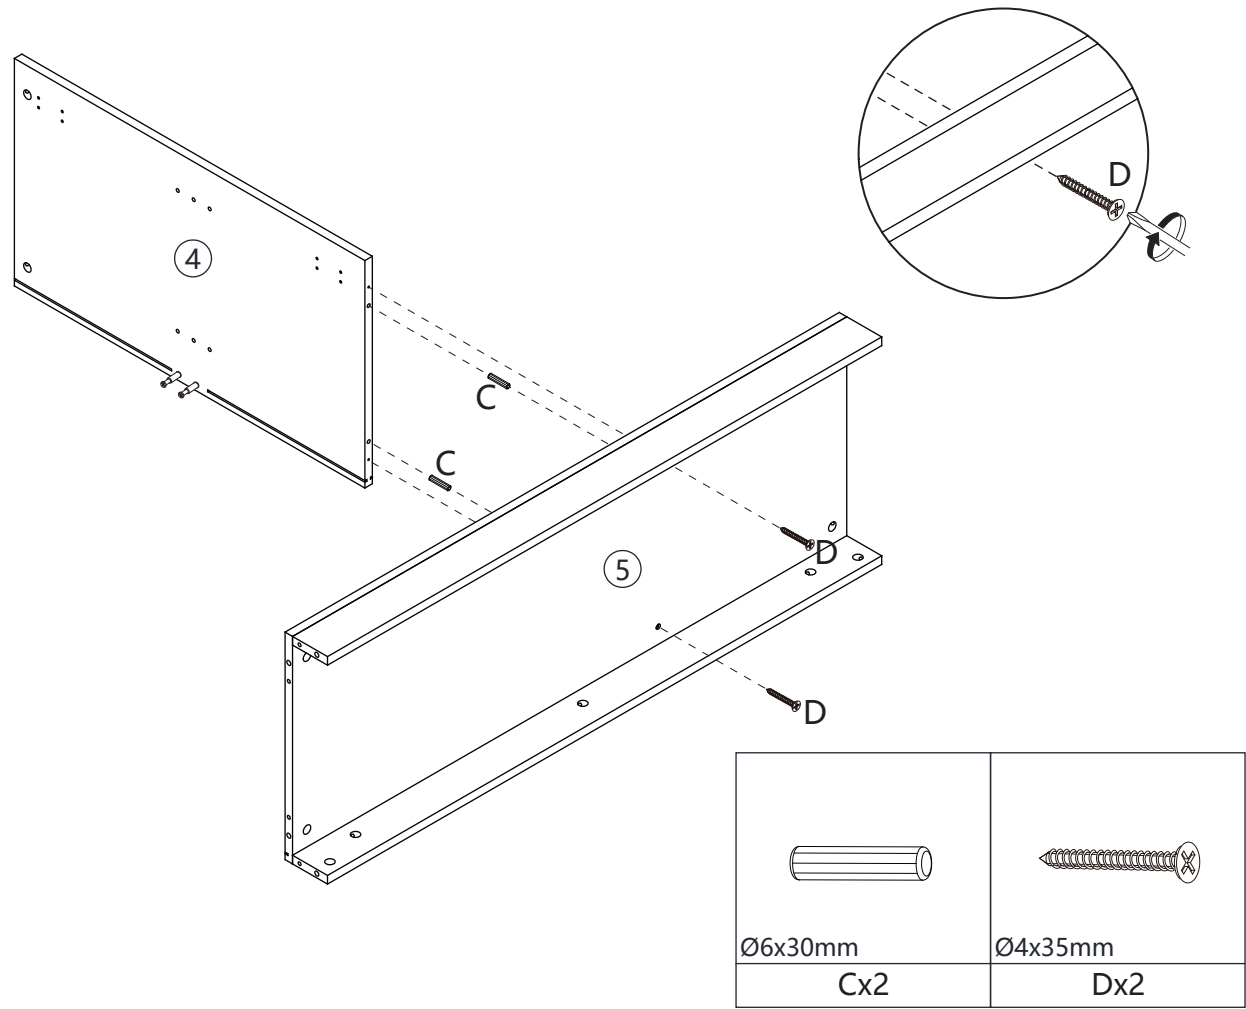


STEP 6

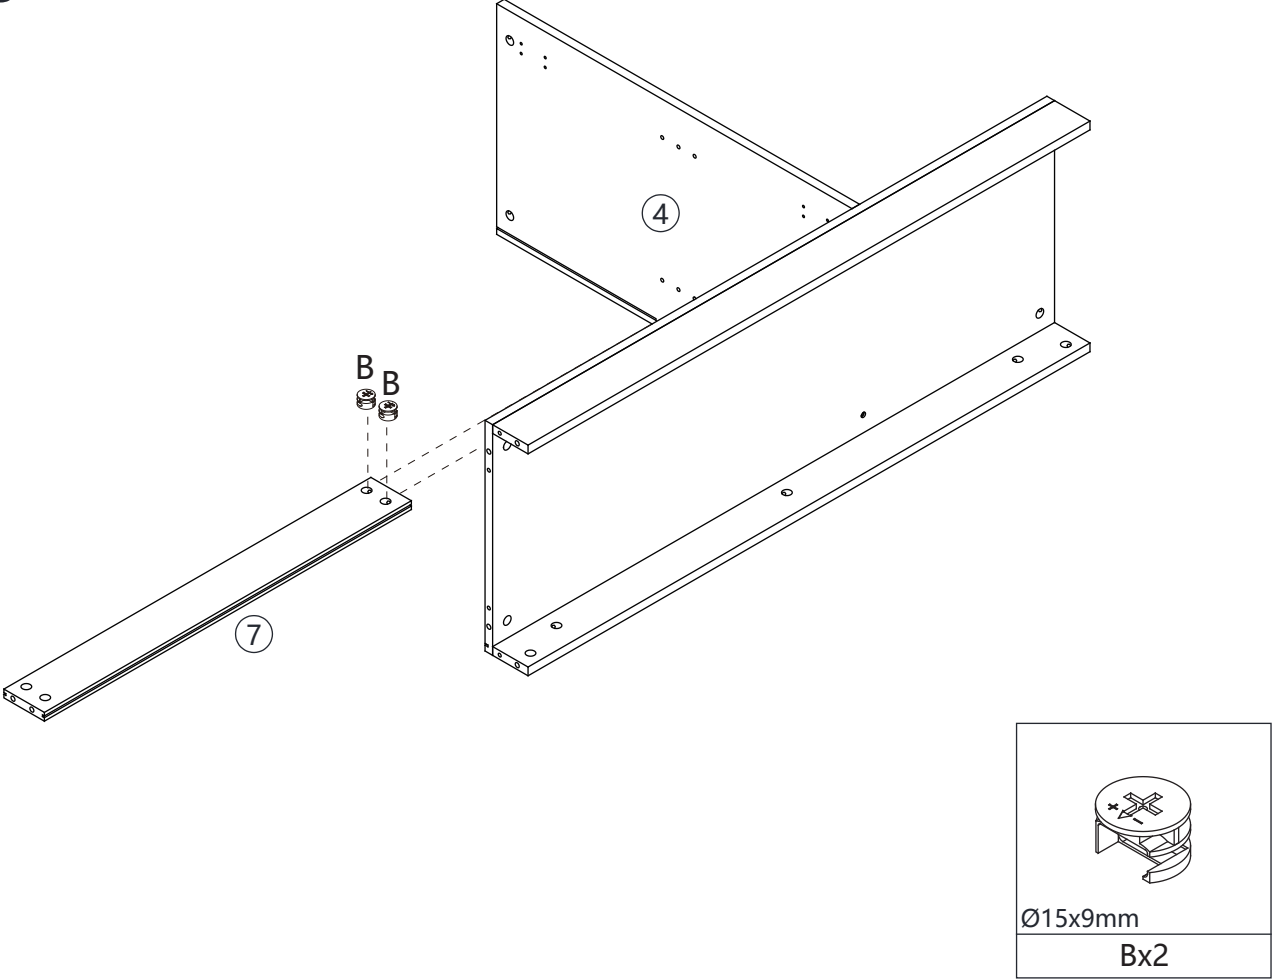

## STEP 7

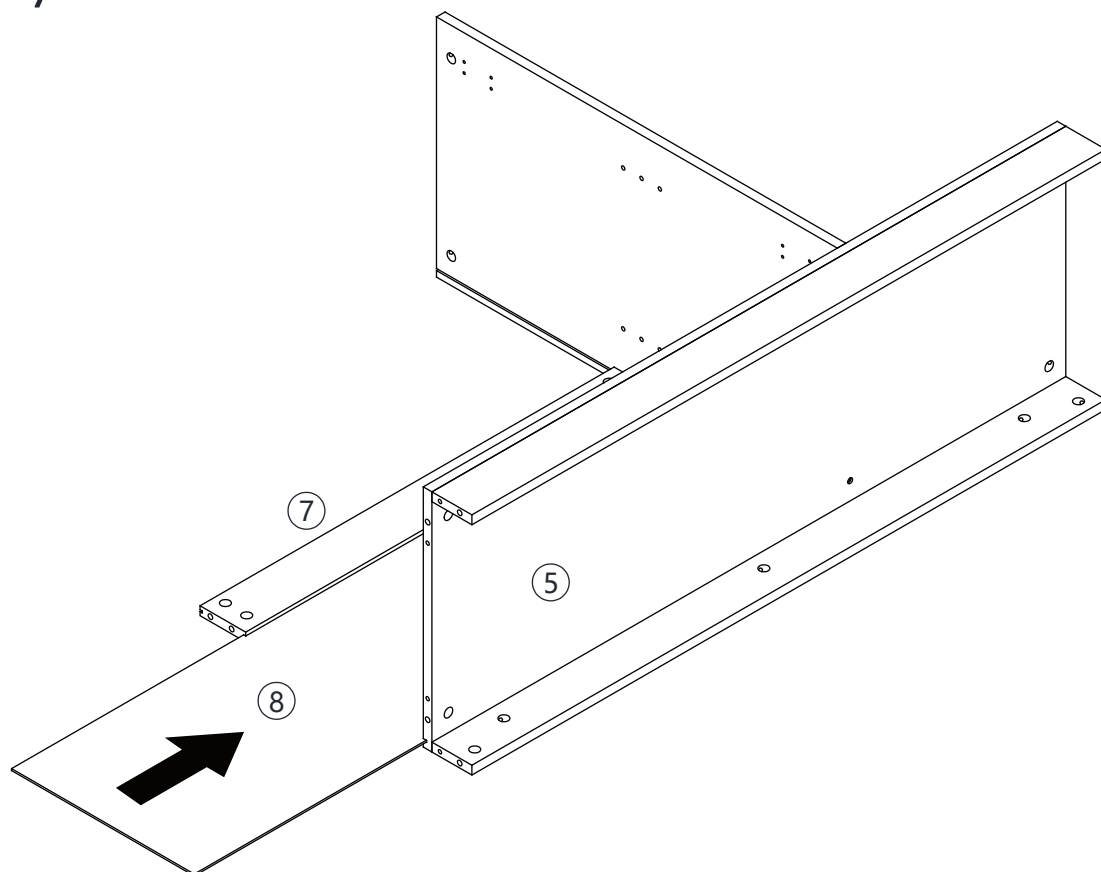



## STEP 8


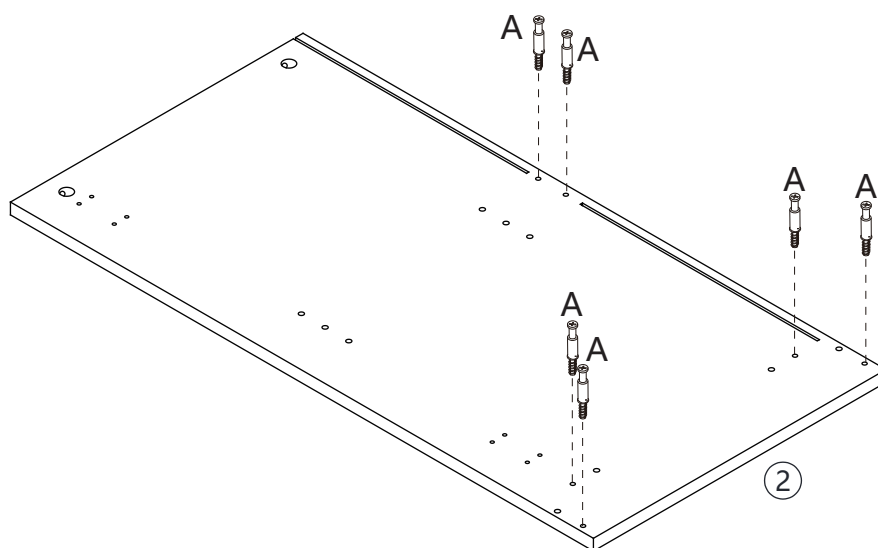


Ø6x35mm


Ax6


STEP 9

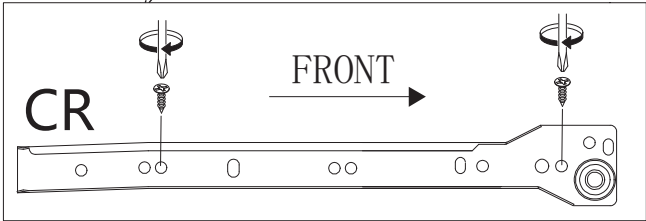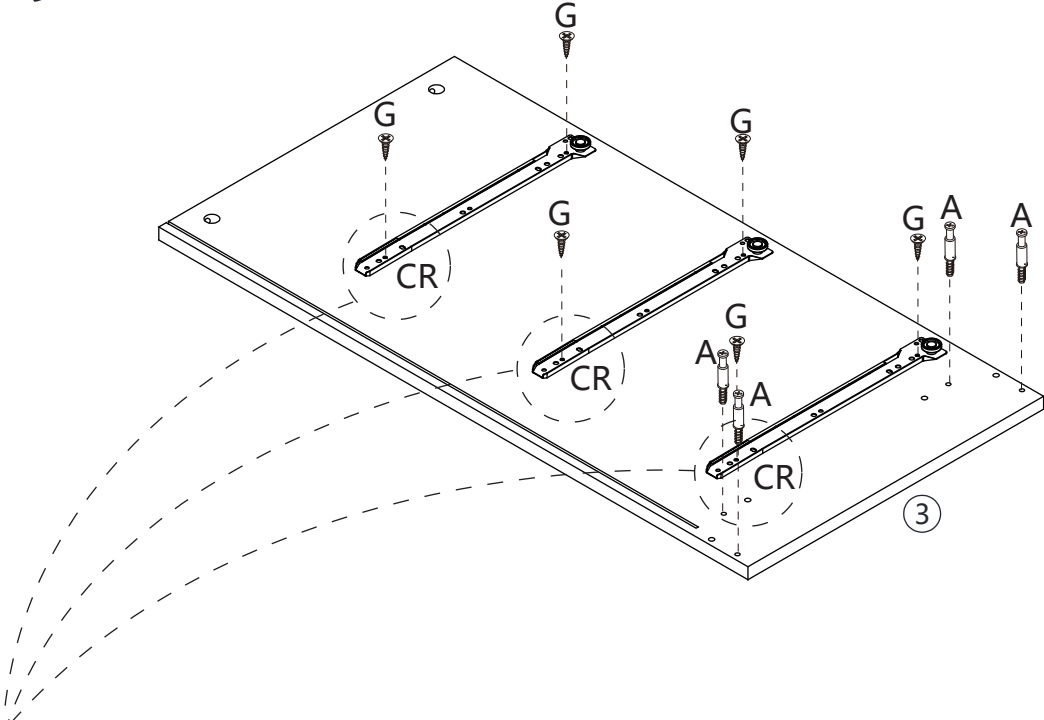

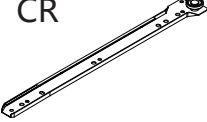
|                                                                                   |                                                                                      |                                                                                     |
|-----------------------------------------------------------------------------------|--------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
|  |  |  |
| Ax4                                                                               | Fx3                                                                                  | Gx6                                                                                 |

STEP 10

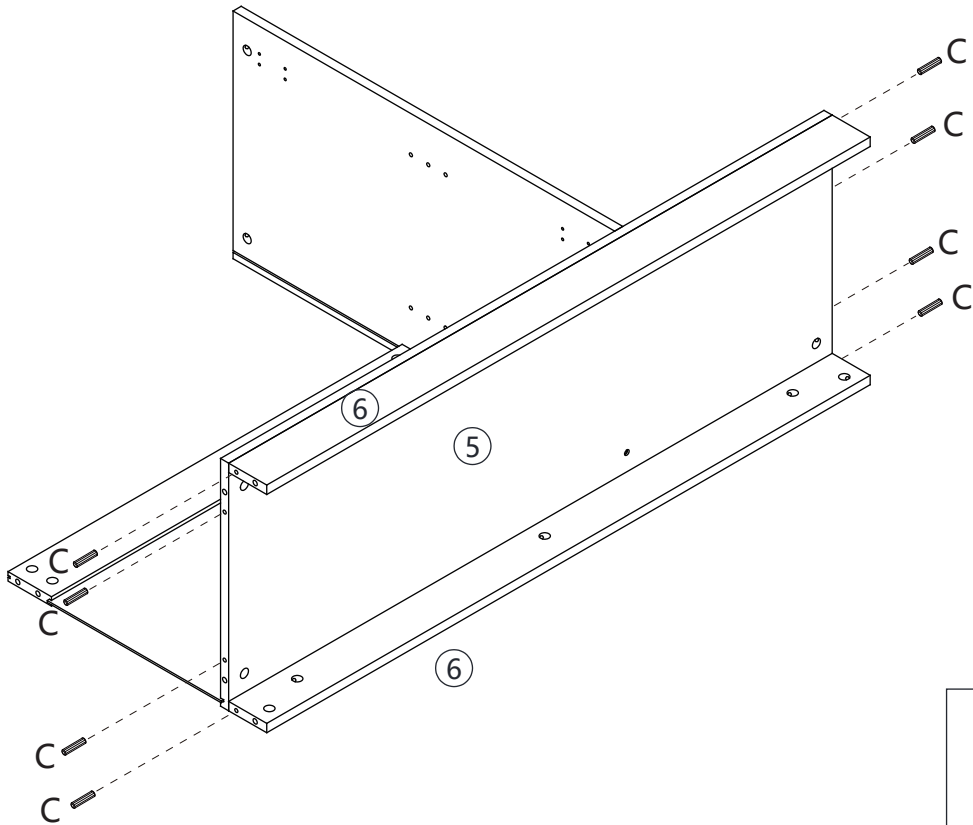


|                                                                                       |
|---------------------------------------------------------------------------------------|
|  |
| Ø6x30mm                                                                               |
| Cx8                                                                                   |


## STEP 11

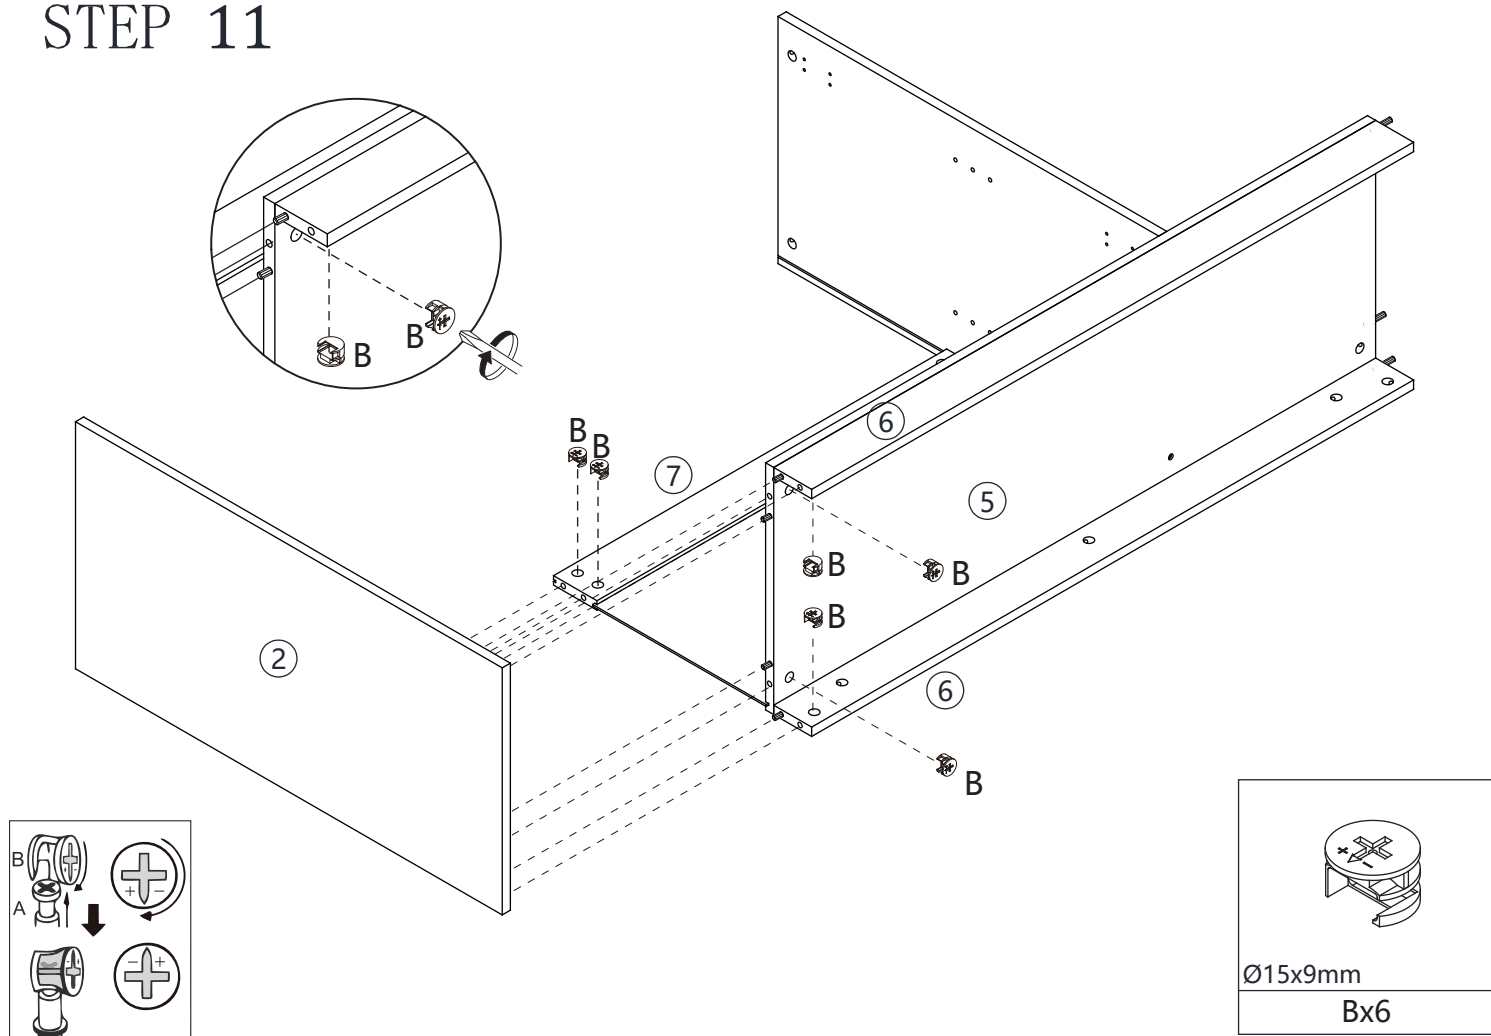


## STEP 12



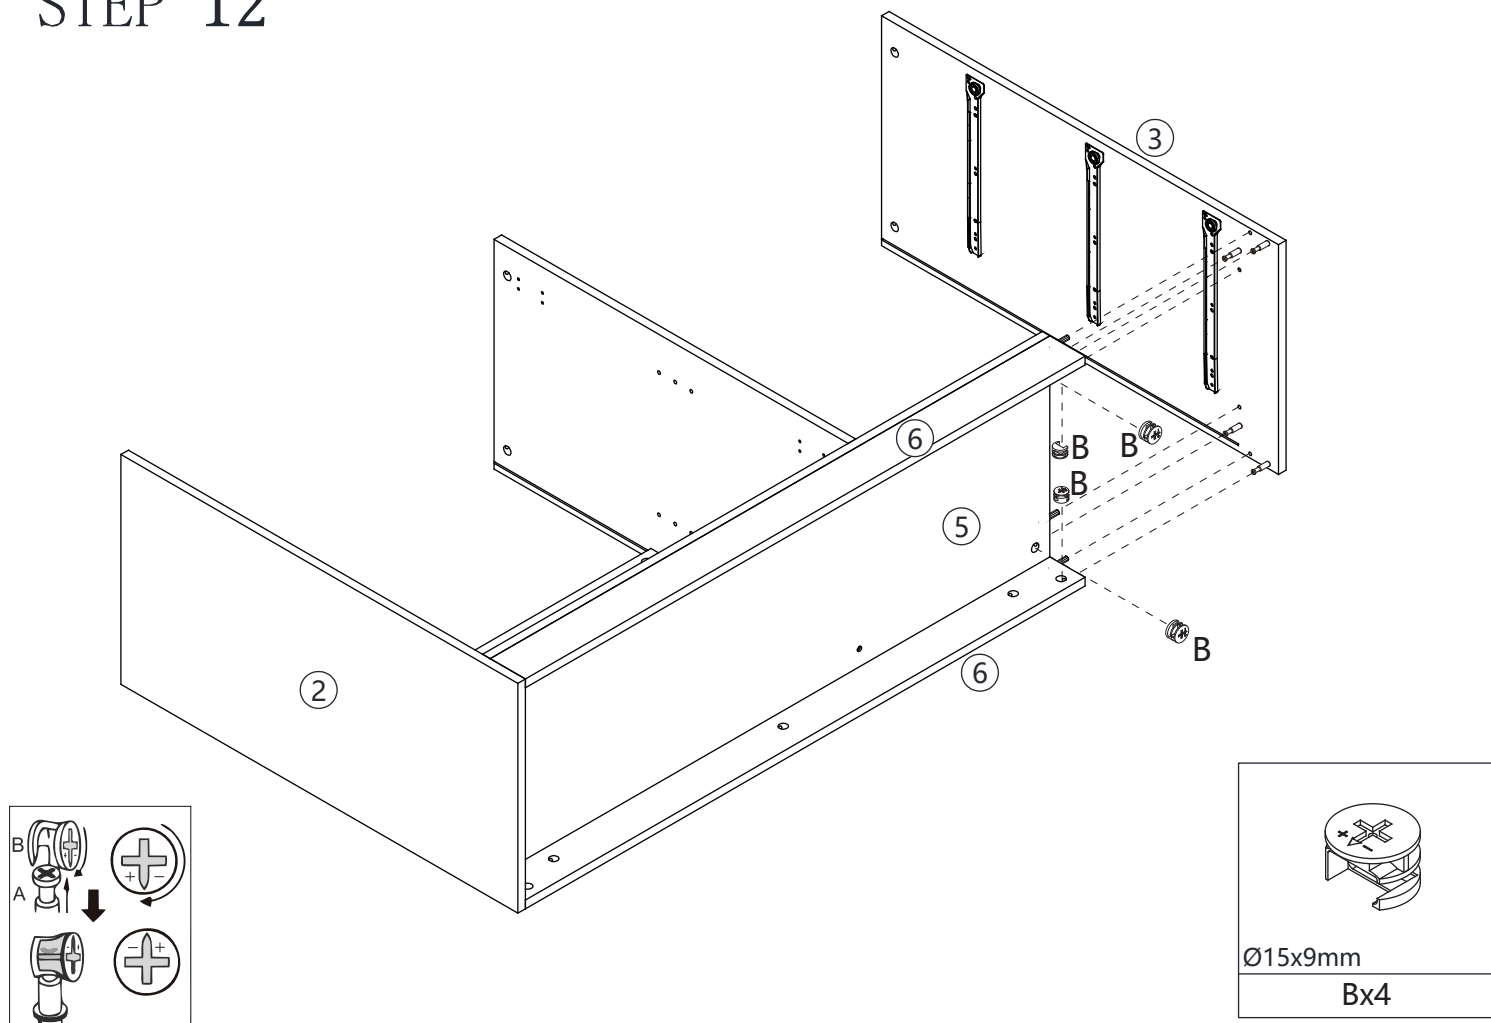


STEP 13



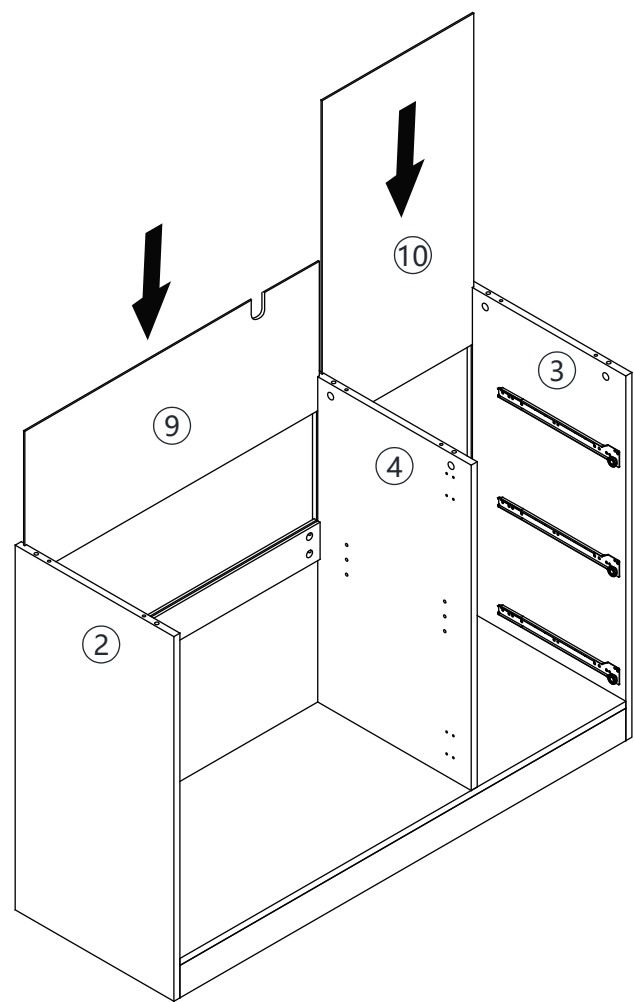



STEP 14

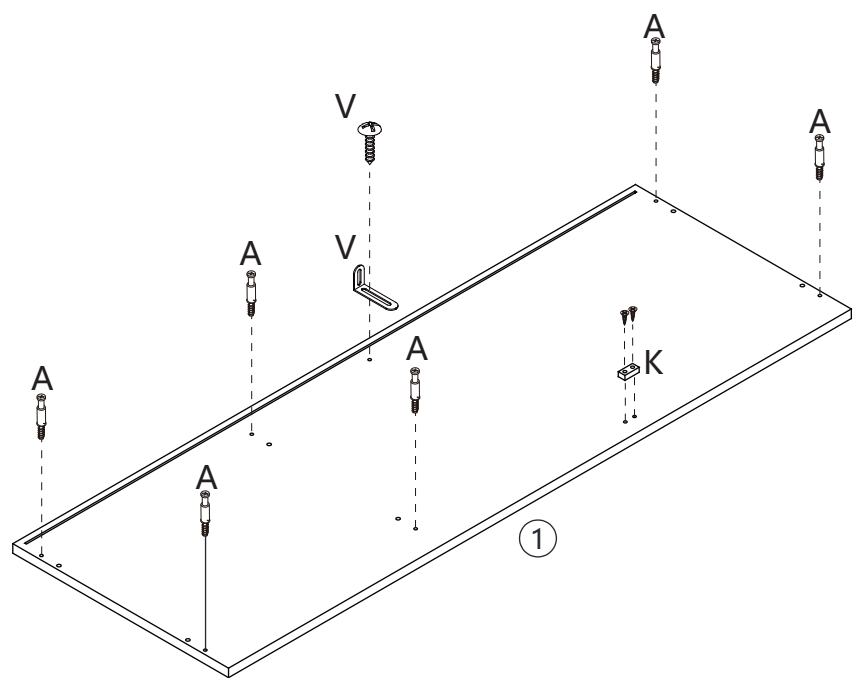



|                                                                                     |                                                                                       |                                                                                       |
|-------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|
|  |  |  |
| Ø6x35mm                                                                             | Ø3.5x12mm                                                                             | Ø4x14mm                                                                               |
| Ax6                                                                                 | Kx1                                                                                   | Vx1                                                                                   |


STEP 15

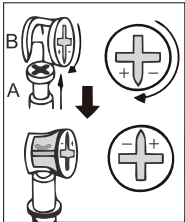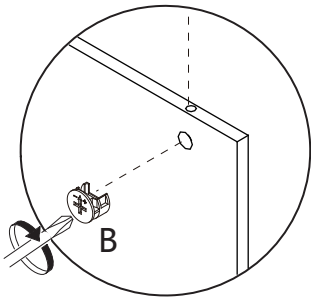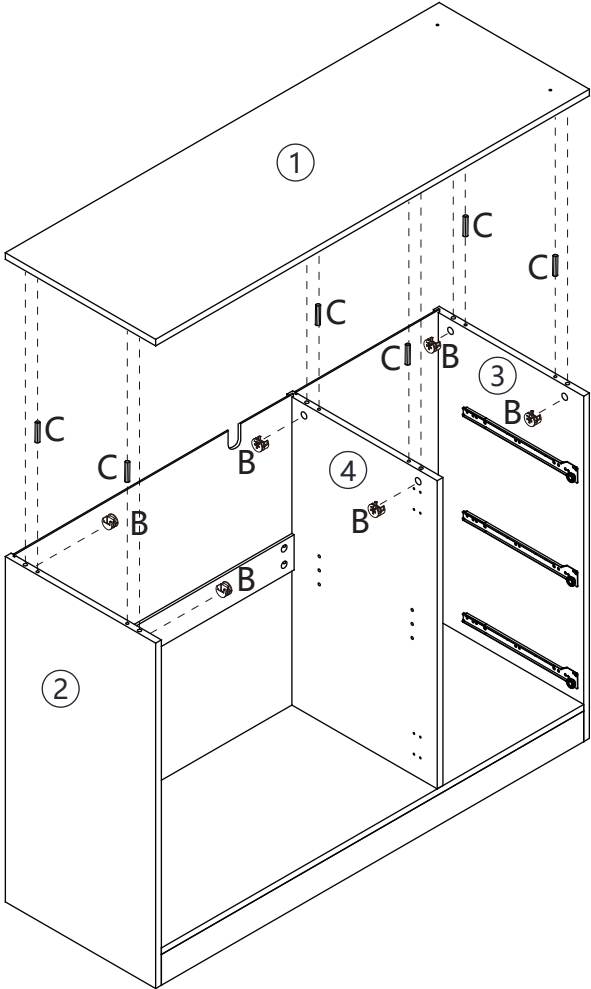

|                                                                                      |                                                                                     |
|--------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
|  |  |
| Ø15x9mm<br>Bx6                                                                       | Ø6x30mm<br>Cx6                                                                      |



STEP 16

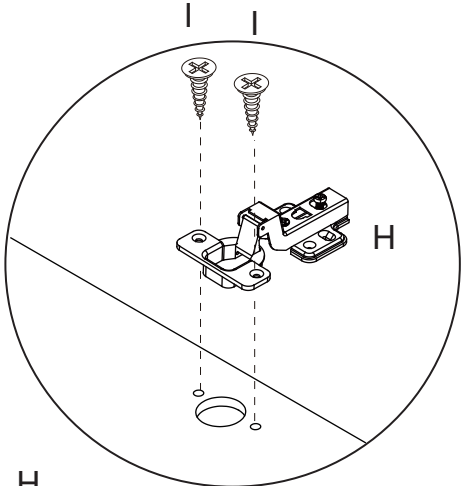
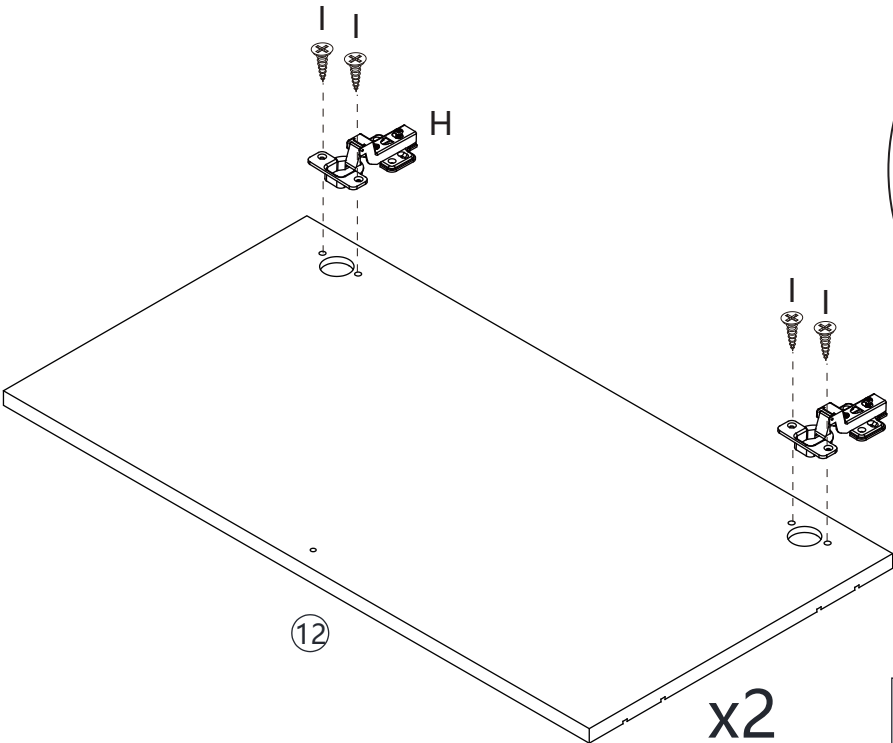


|                                                                                       |                                                                                       |
|---------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|
|  |  |
| Hx4                                                                                   | Ø4x12mm<br>Ix8                                                                        |


# STEP 17

Note: Please assemble the door according to the installation steps first. If the cabinet door is deviated, the internal hinge needs to be slowly adjusted to solve the problem.

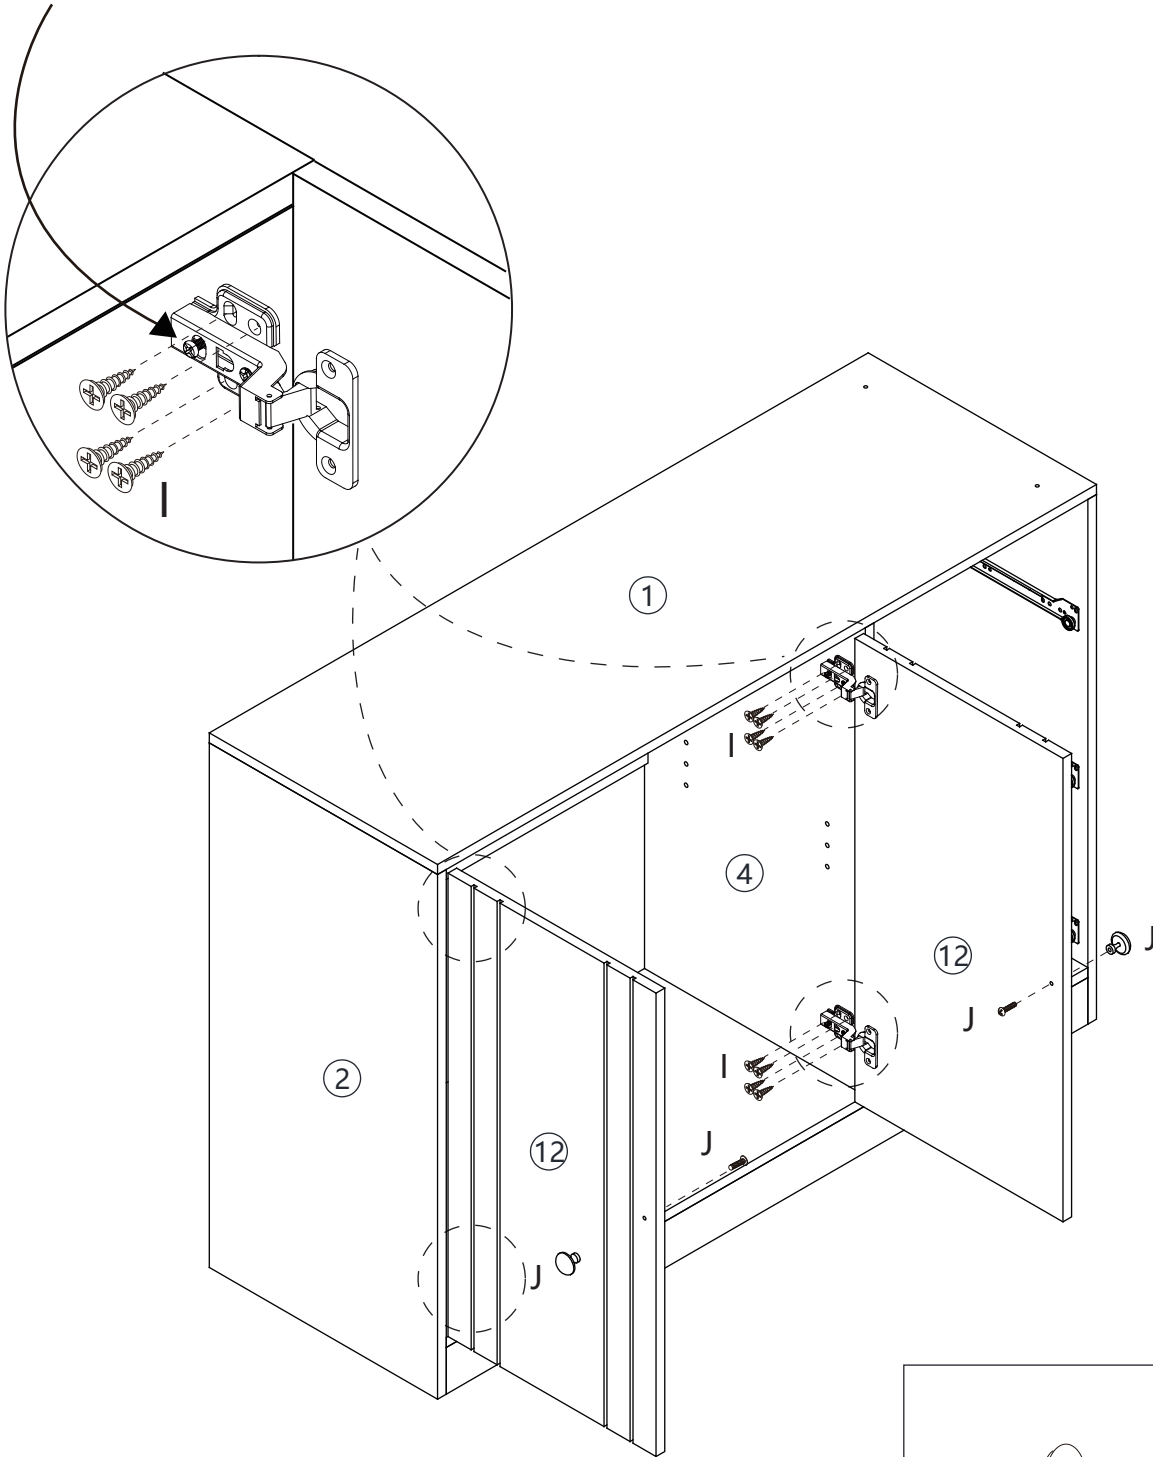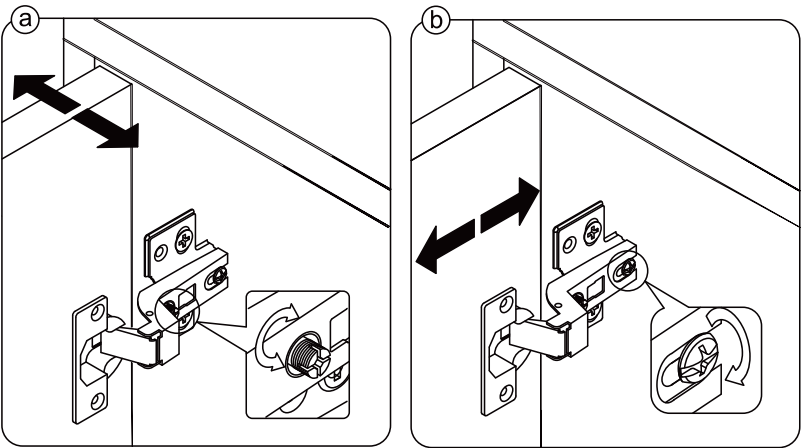


|                                                                                       |                                                                                       |
|---------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|
|  |  |
| Ø4x12mm<br>1x16                                                                       | Ø4x18mm<br>Jx2                                                                        |




## STEP 18

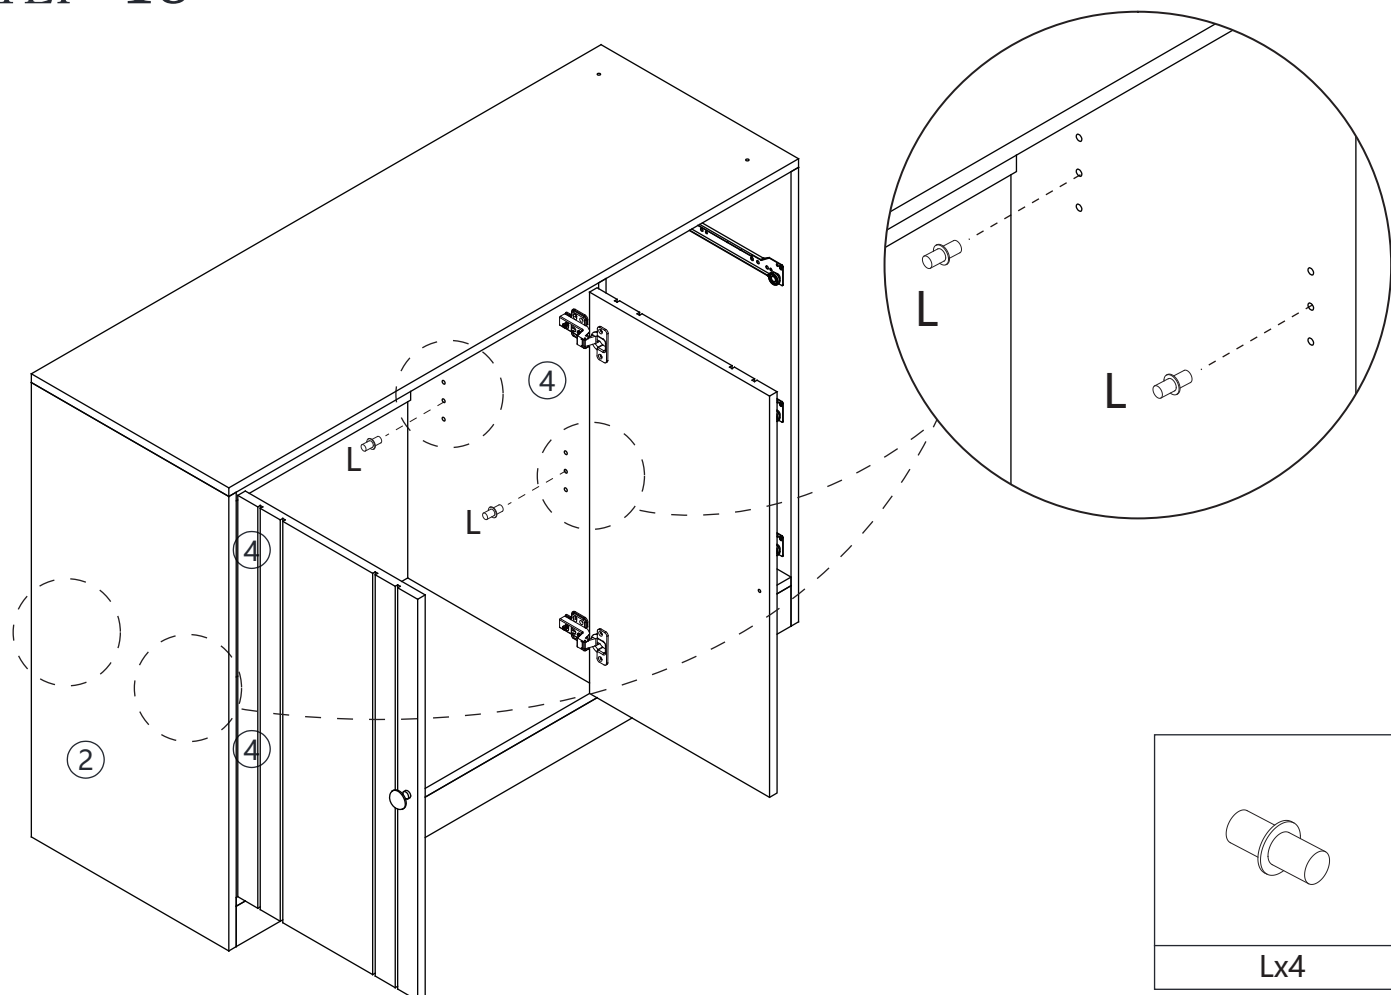

## STEP 19

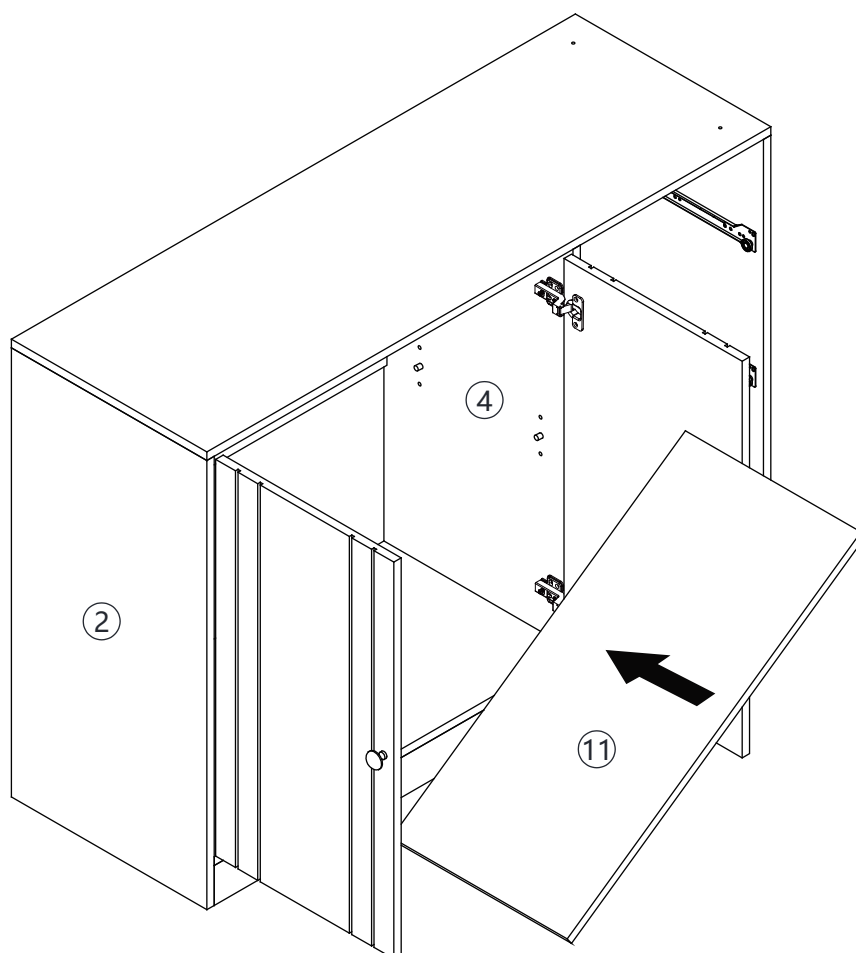


## STEP 20

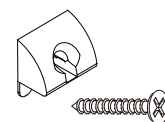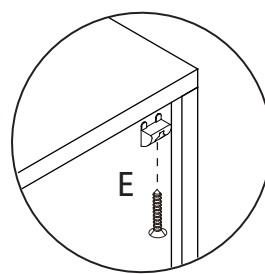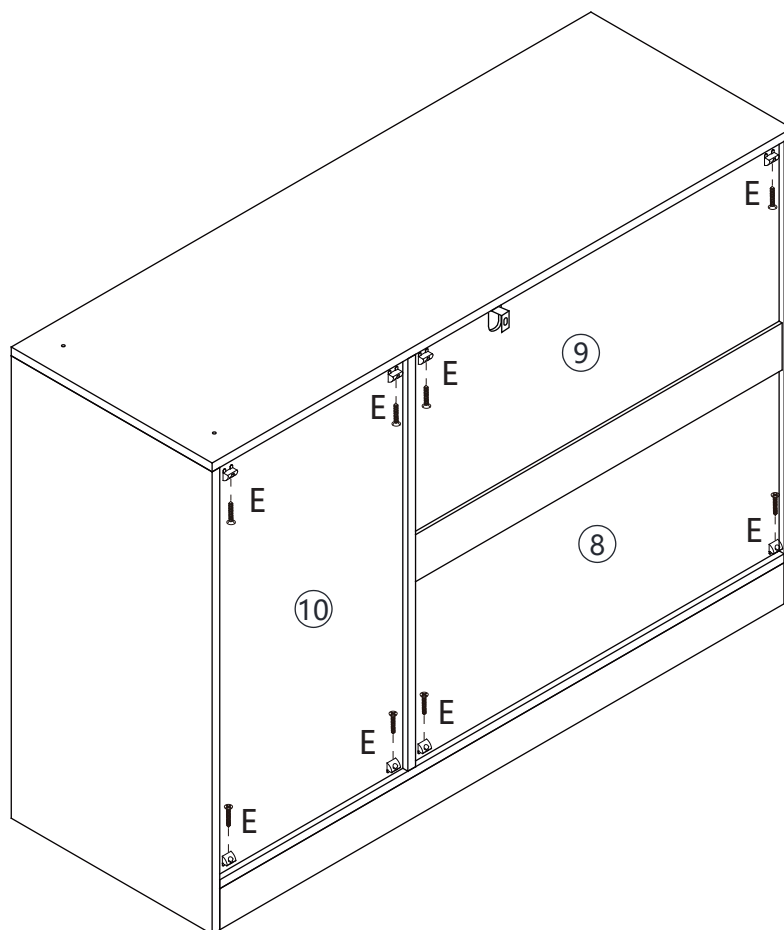

Ø3x16mm

Ex8



## STEP 21

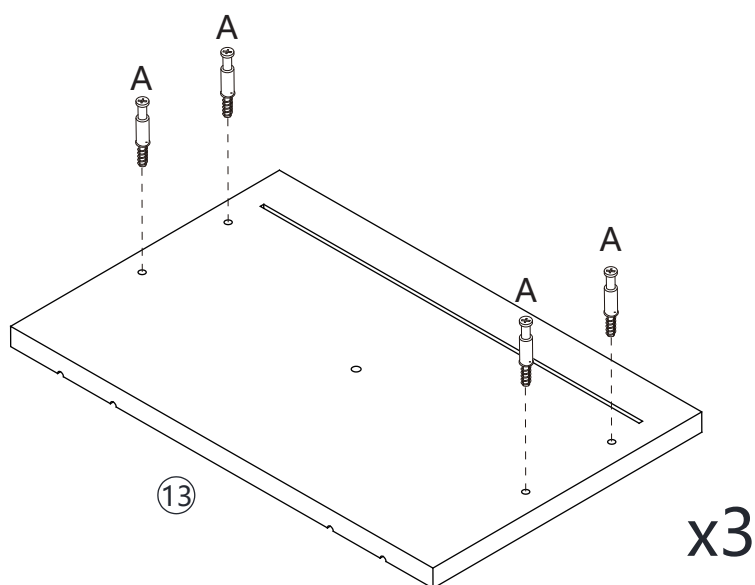

Ø6x35mm


Ax12

STEP 22

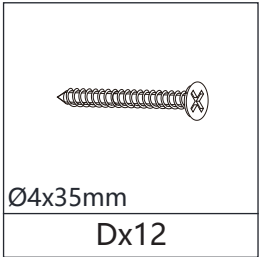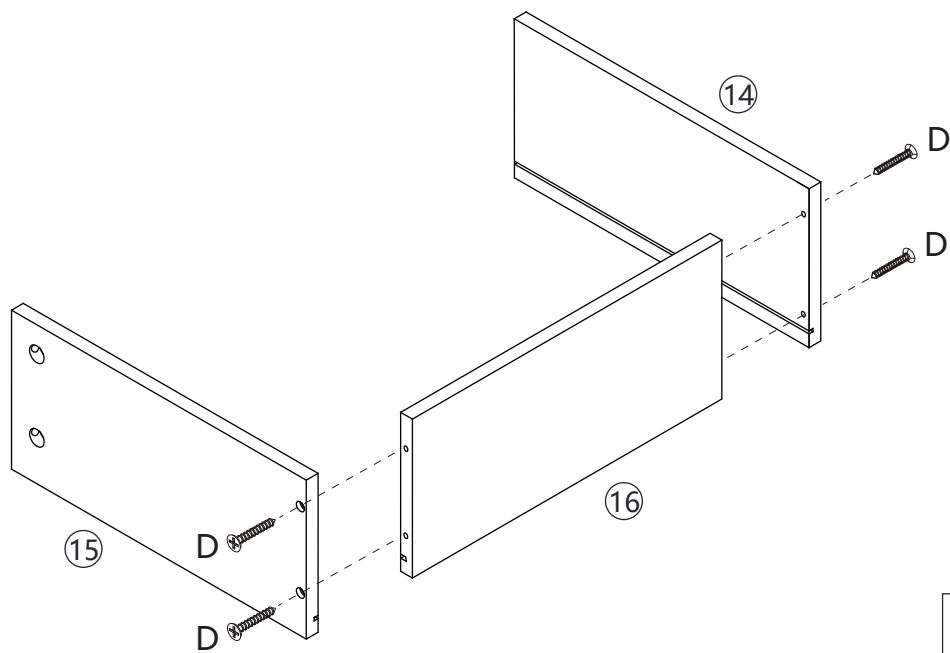



STEP 23

x3

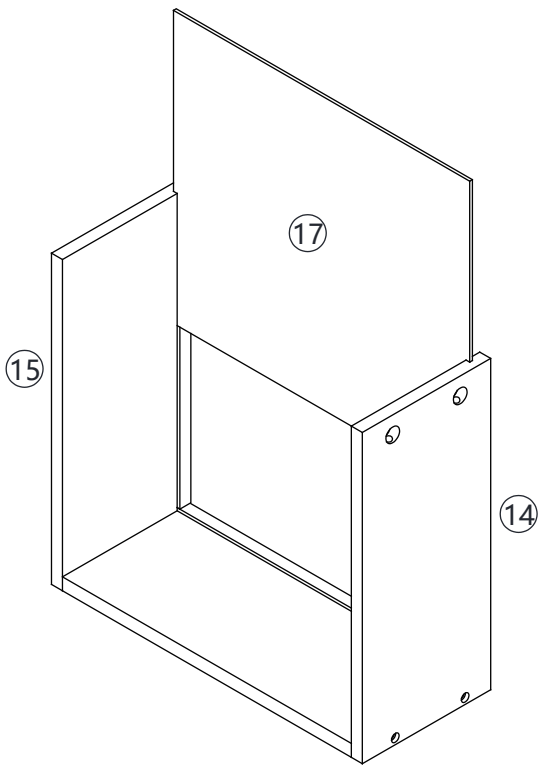




x3

STEP 24

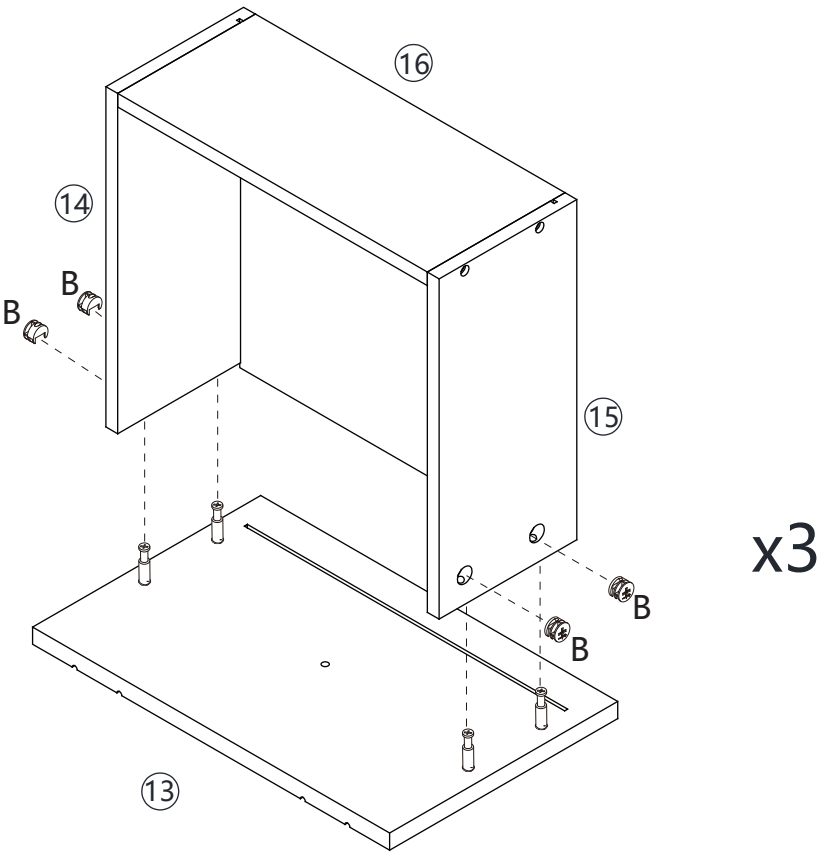


Ø15x9mm  
Bx12


STEP 25

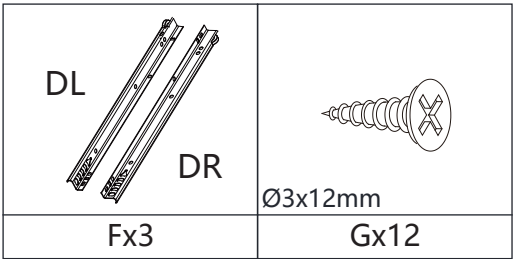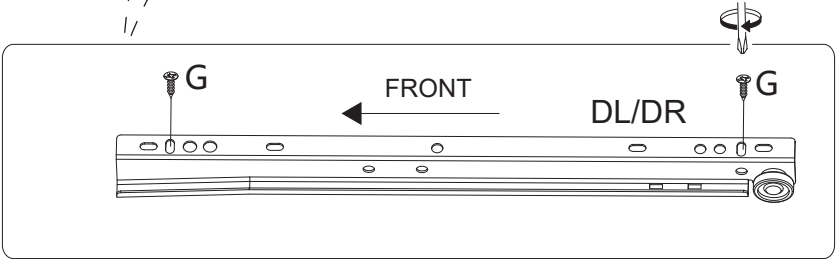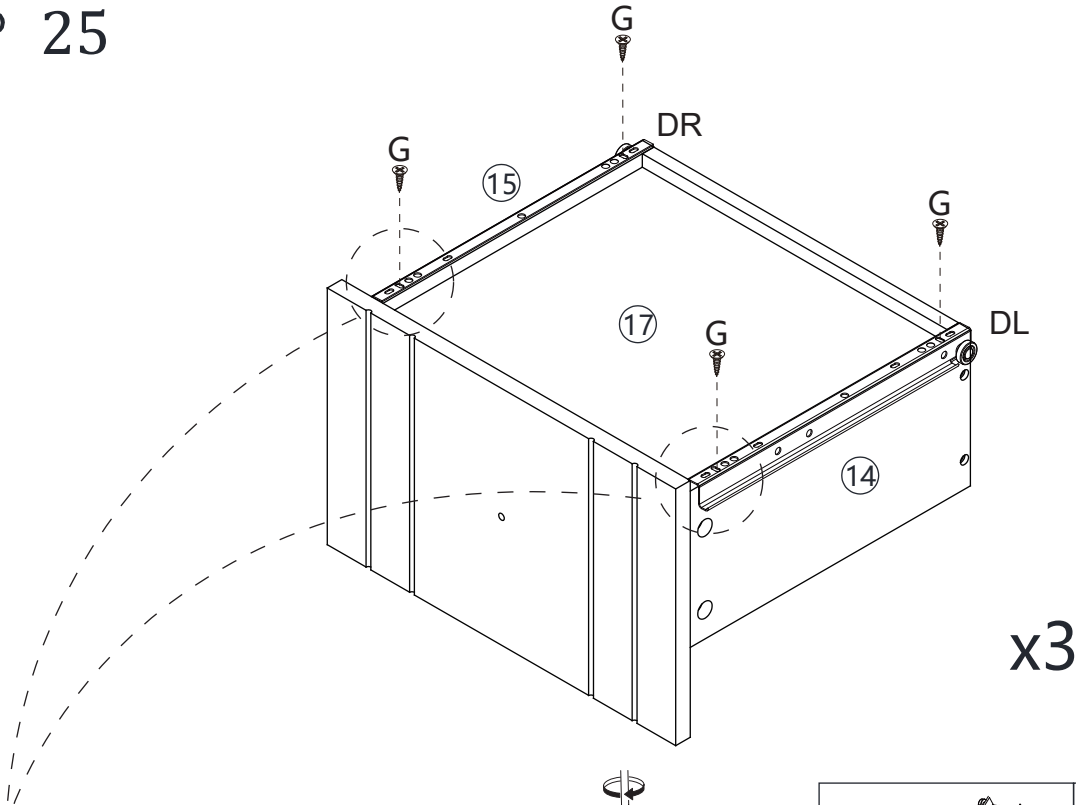

## STEP 26

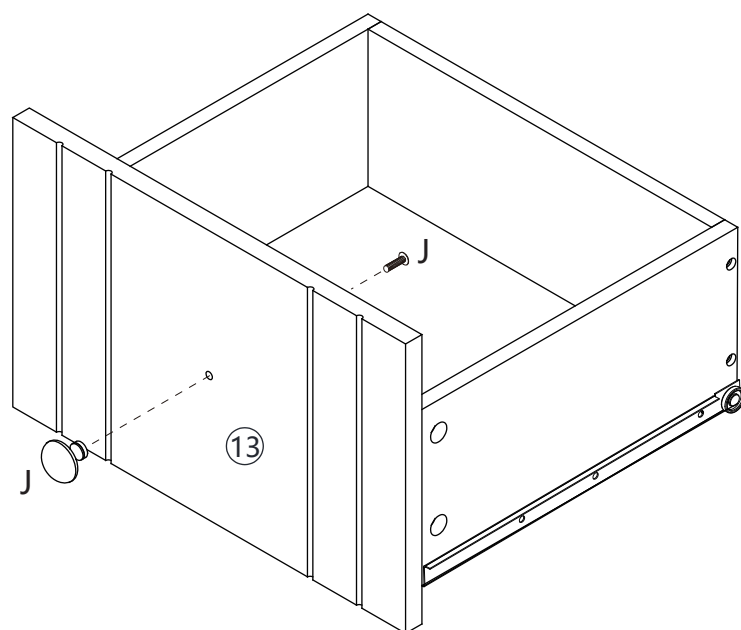


x3




Ø4x18mm

Jx3


## STEP 27

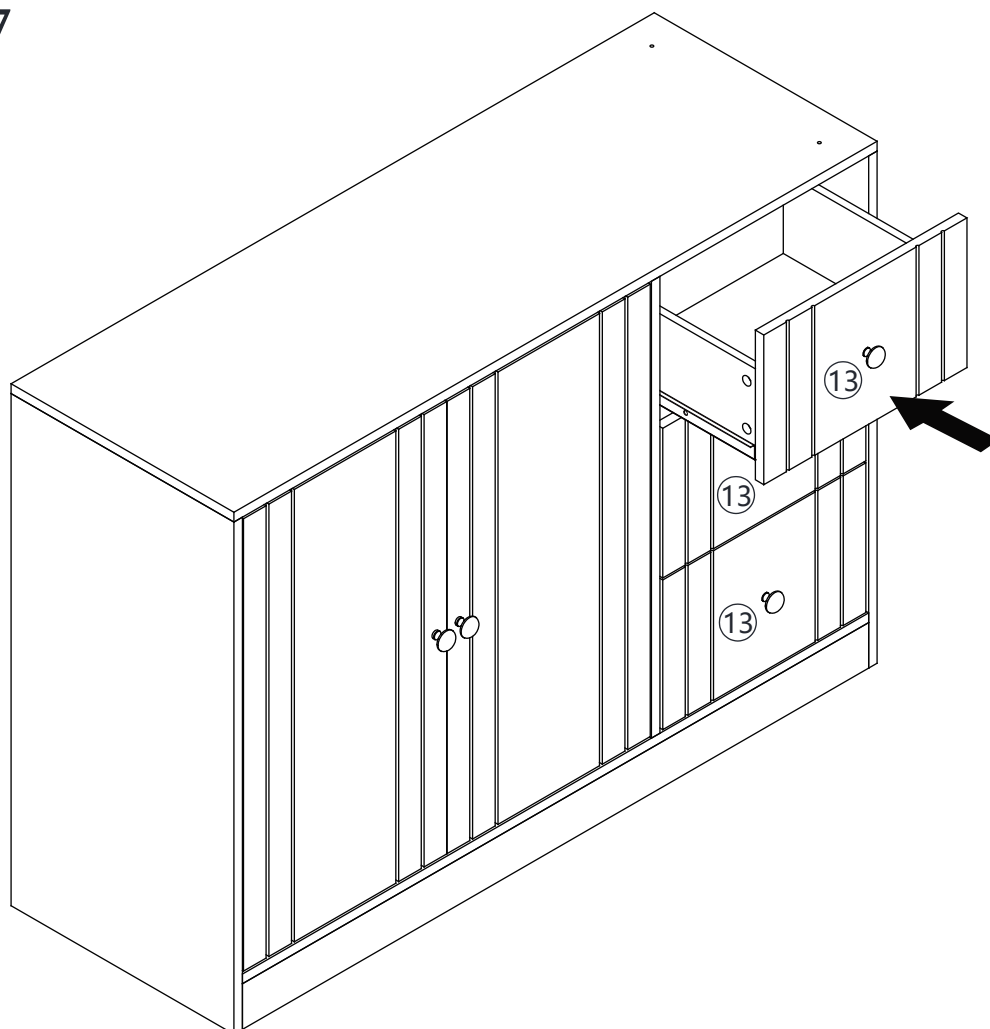

STEP 28





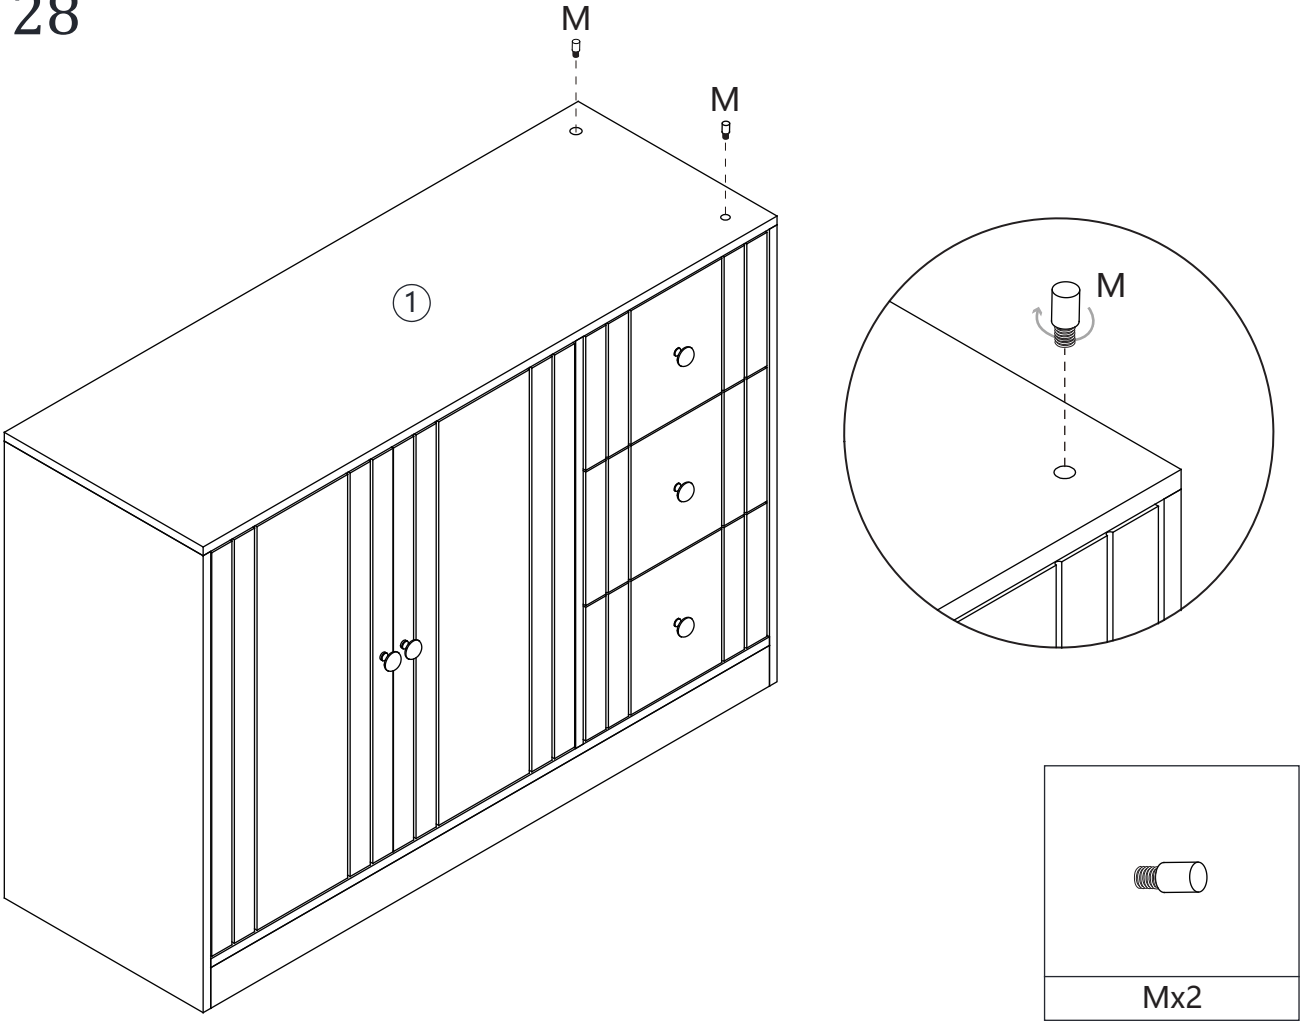


STEP 29

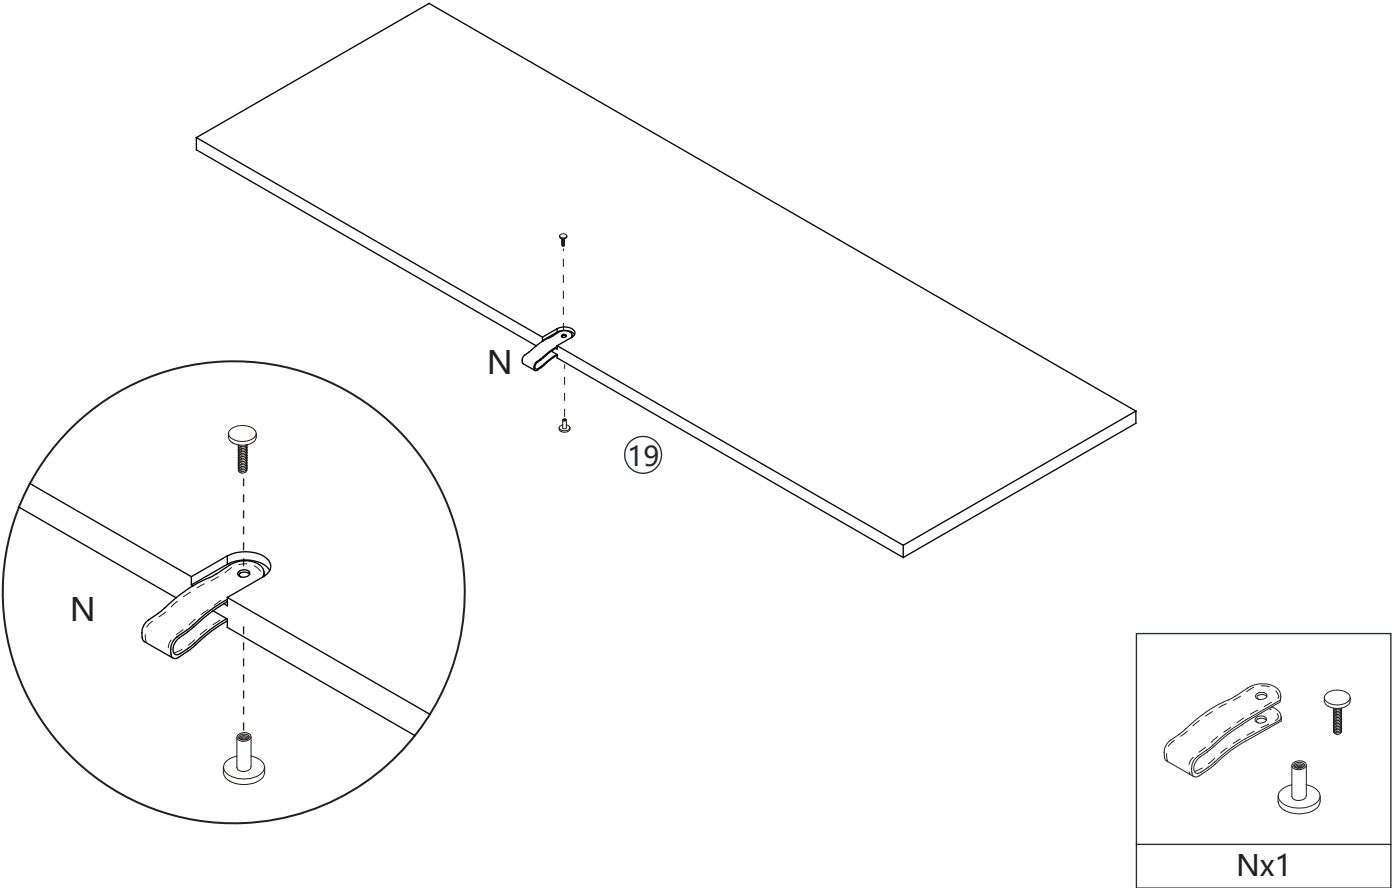


## STEP 30


With the holes of panels 18 and 19 facing up, put the sides without holes together.

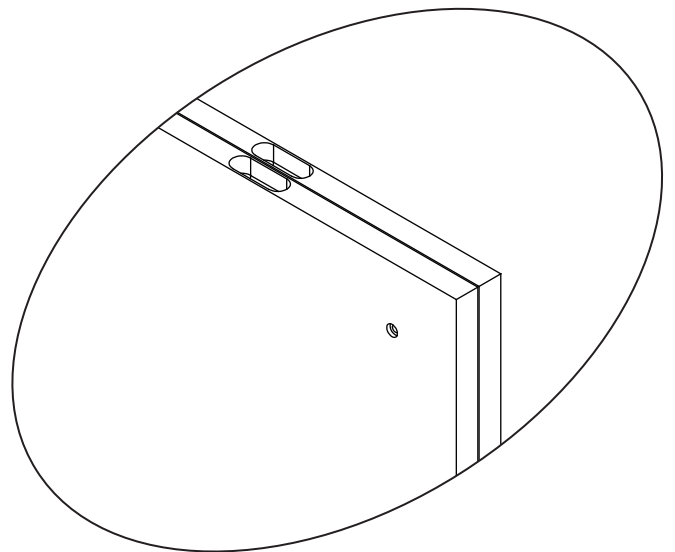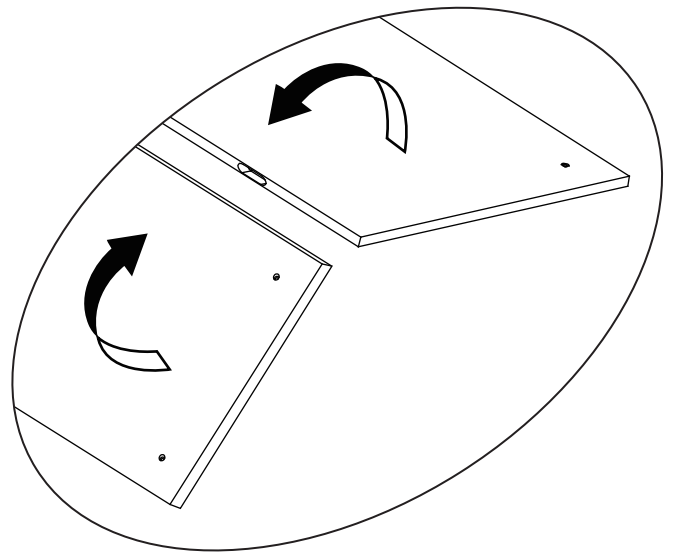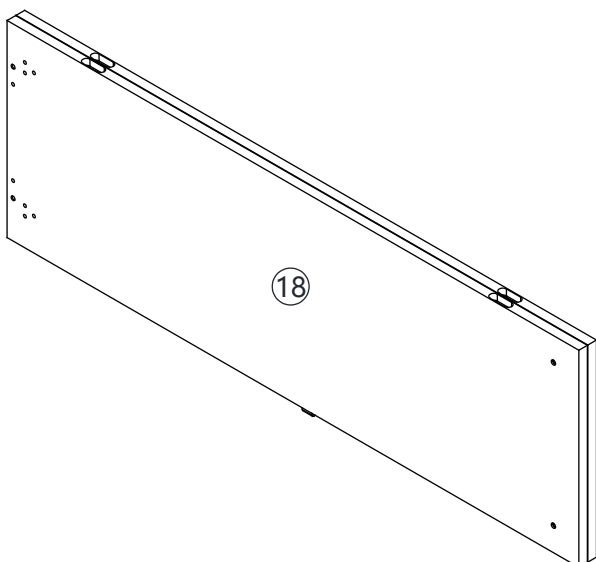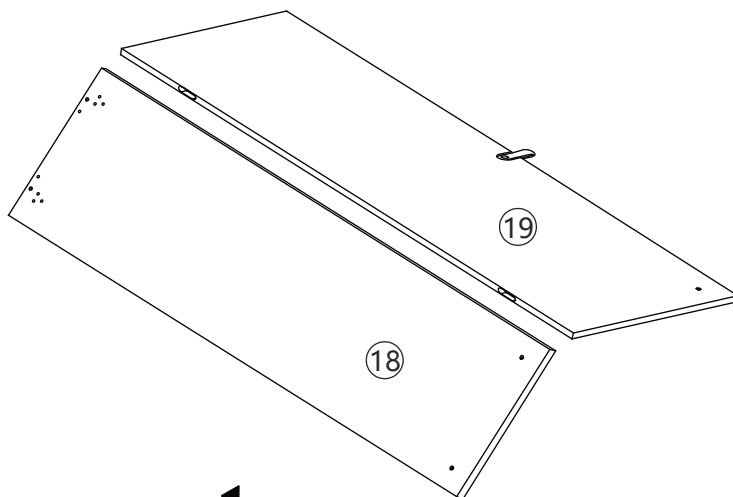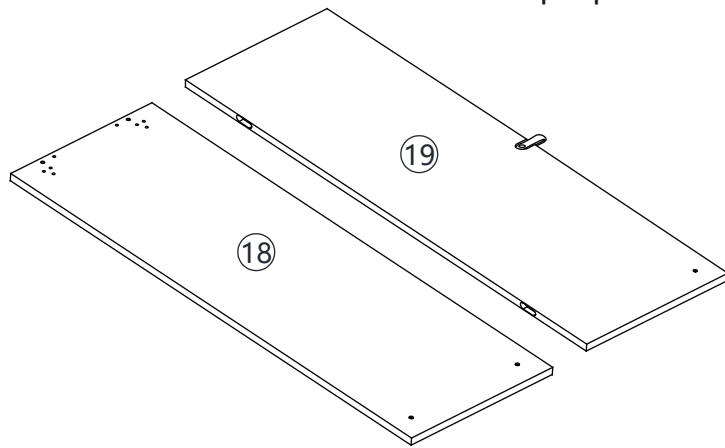



STEP 31

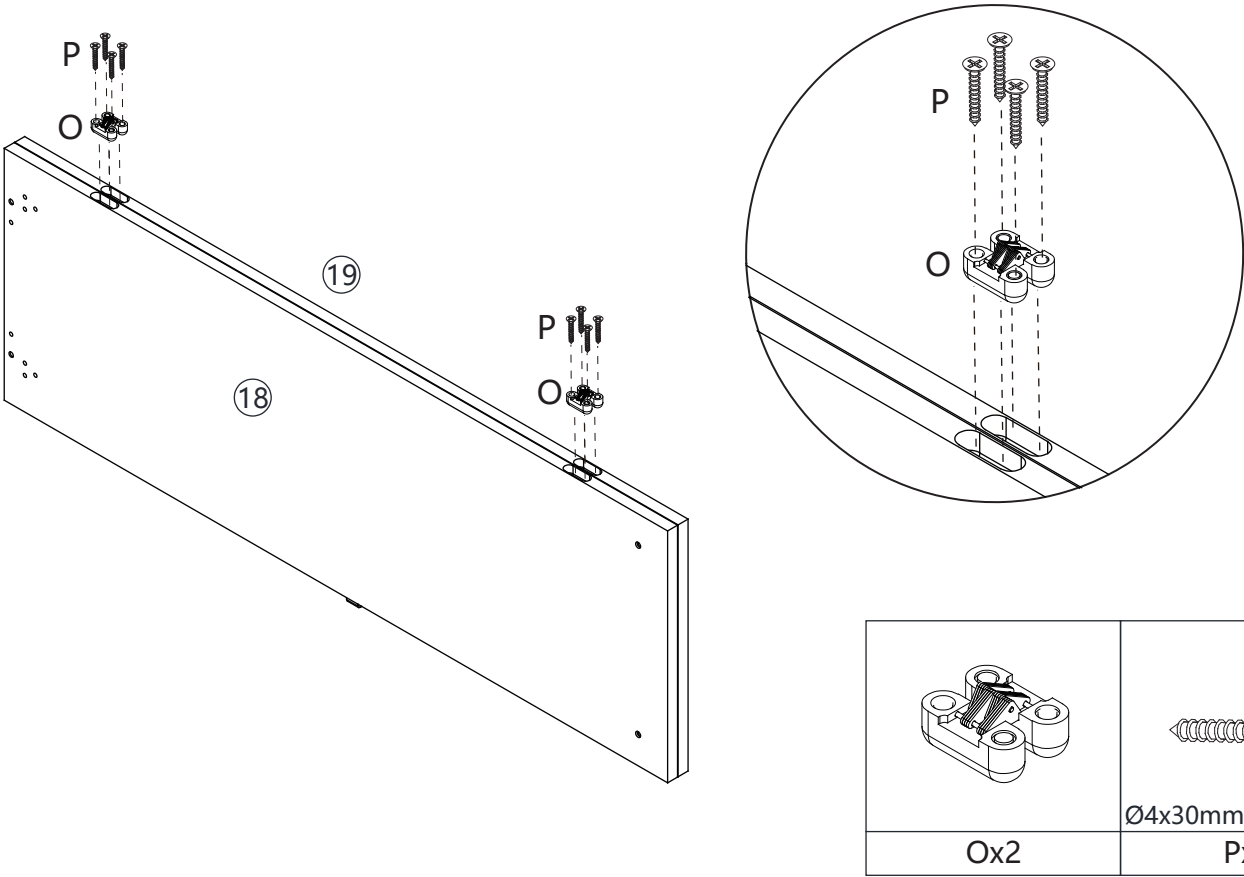



STEP 32

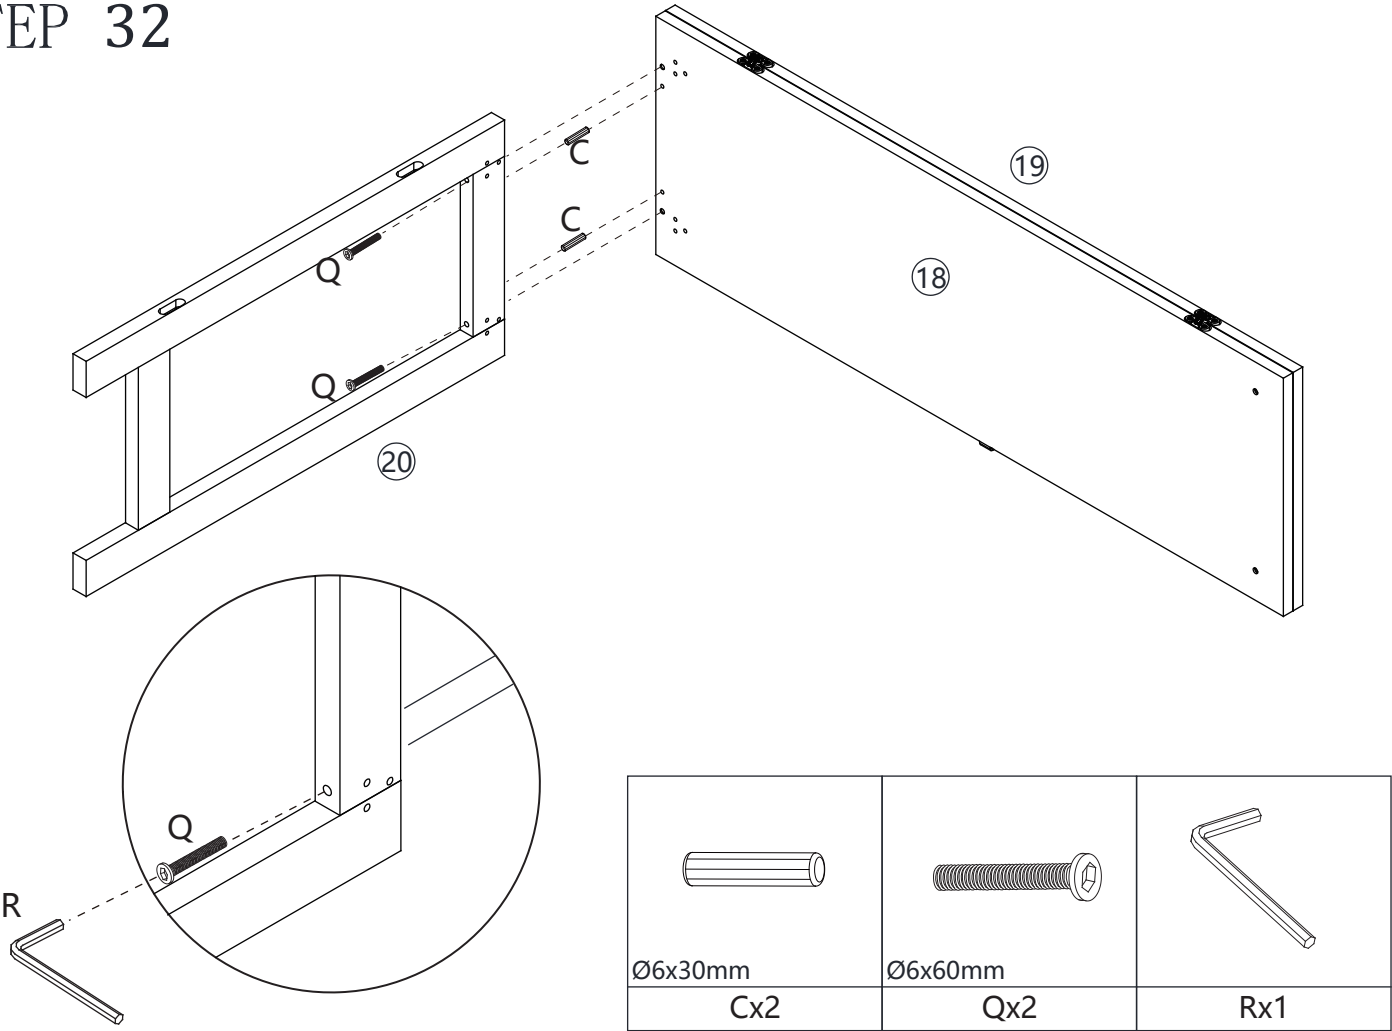

## STEP 33

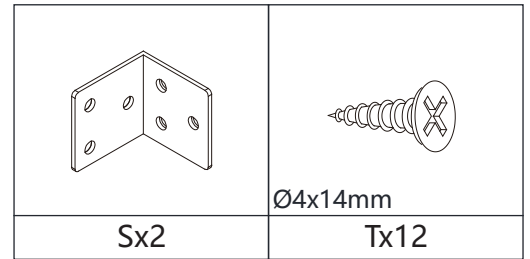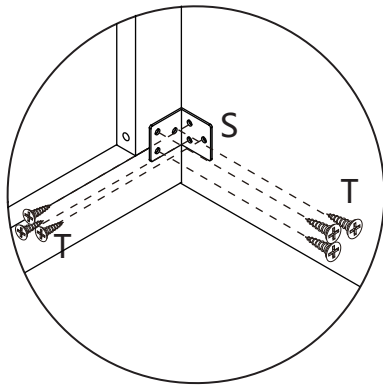

## STEP 34

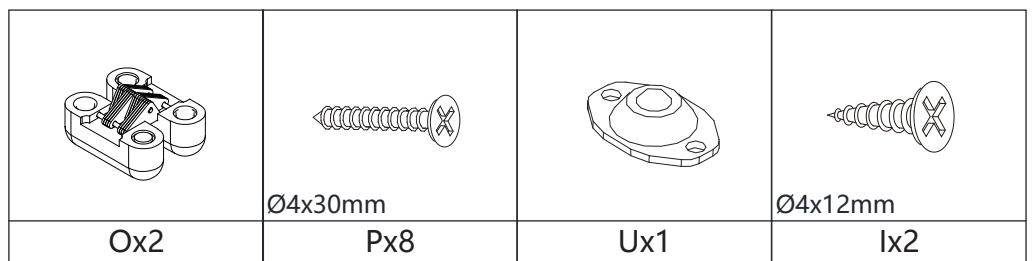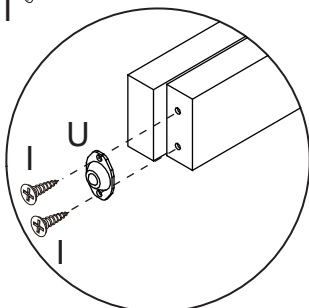


# STEP 35

Step 1. Mark the position on the wall.


Step 2. Drill and insert the expandable screw V by hammer.

Step 3. Use screw V to attach it and tighten by screwdriver.

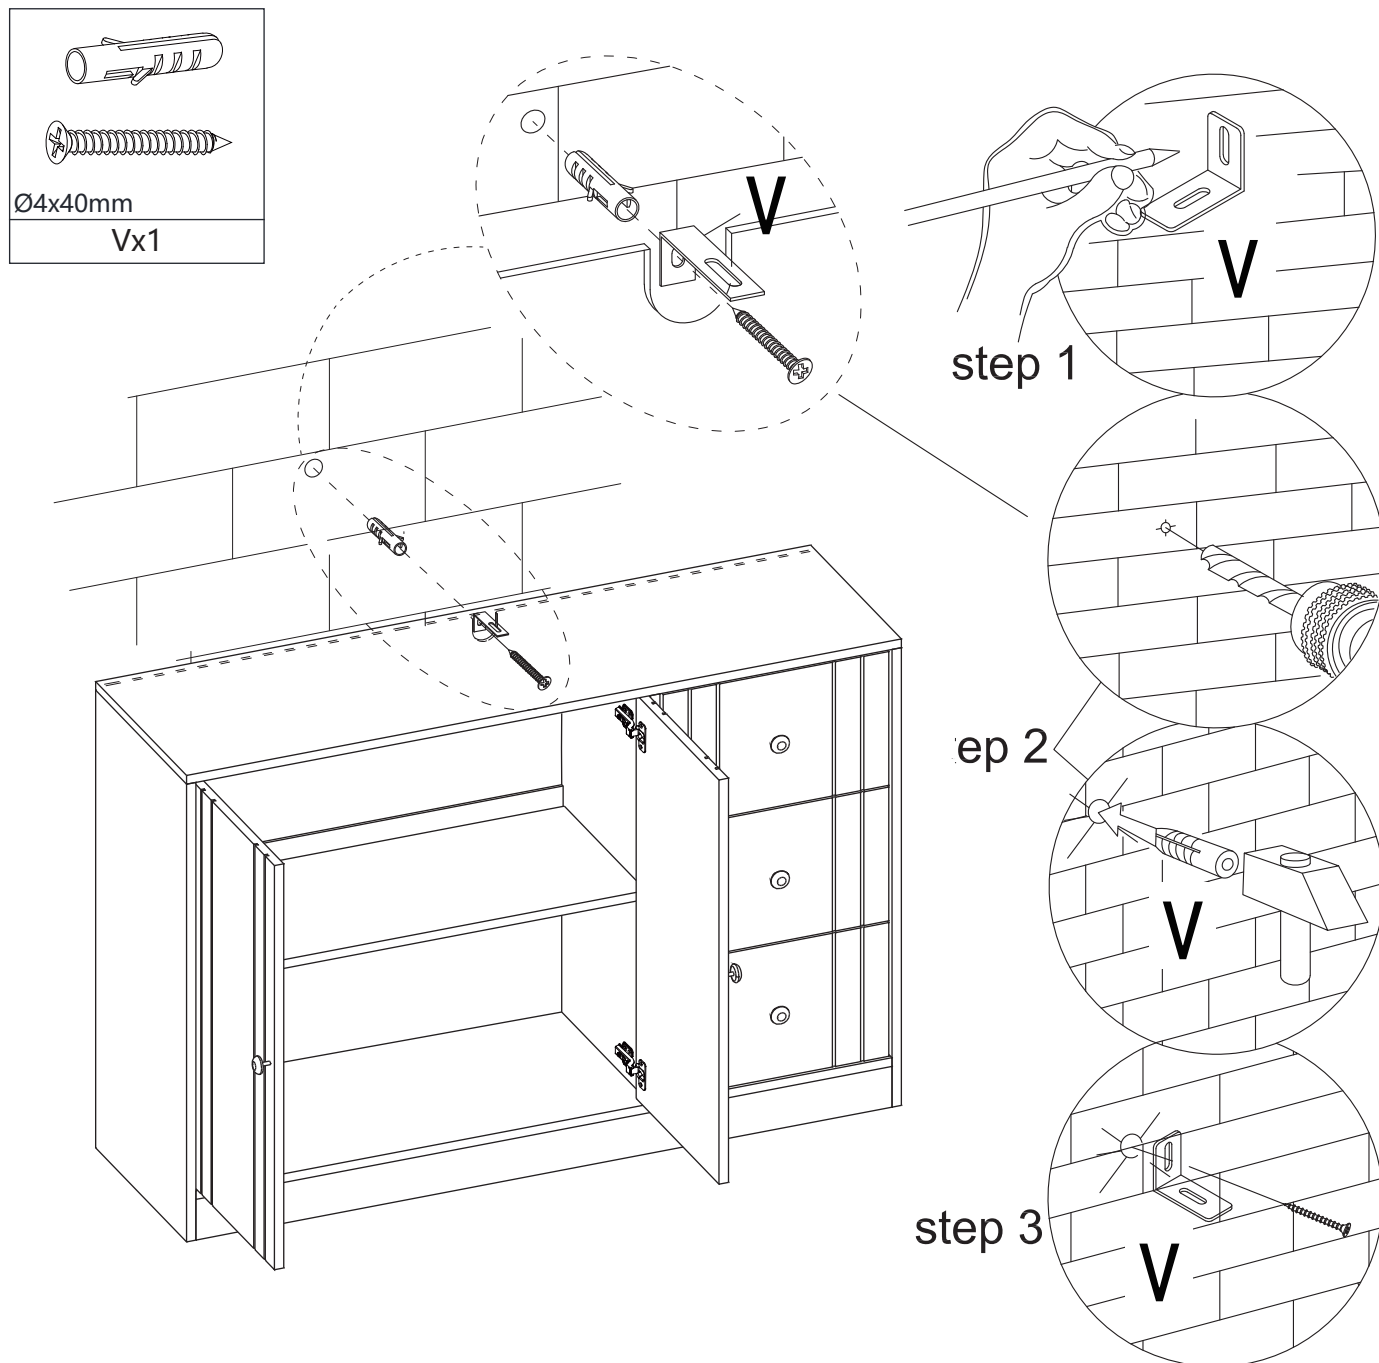

If it is a solid wall, please use expansion and self-tapping screws to secure the cabinet to the wall, if it is a wooden wall, only use self-tapping screws. Please don't overtighten screws.

## STEP 36

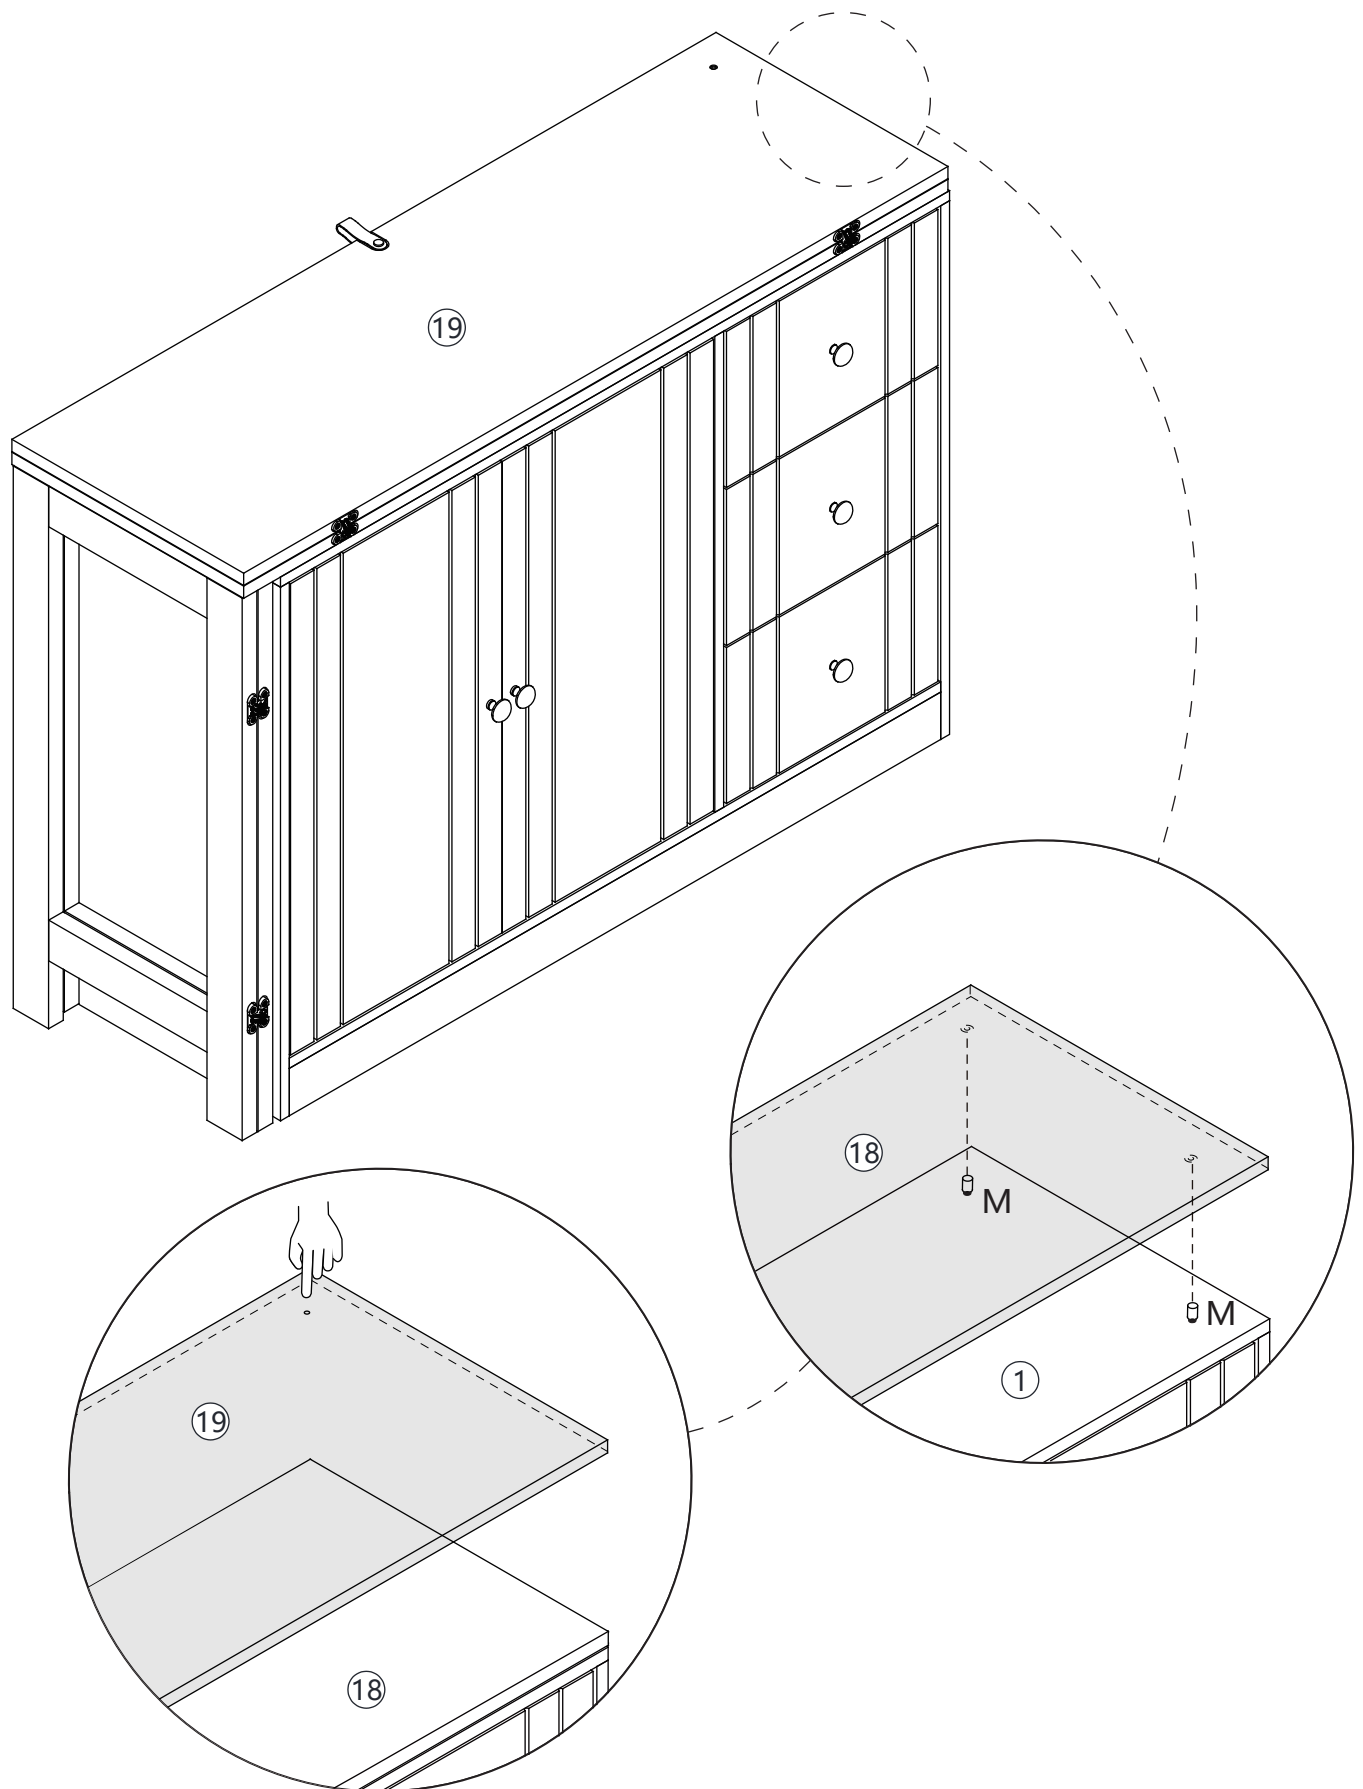

Align the holes on Panel (18) with M on Panel (1).  
After folding the table, the hole on panel (19) will face upward.

## STEP 37

Fixed desktop or expand the desktop as shown below.

