
Owner Manual

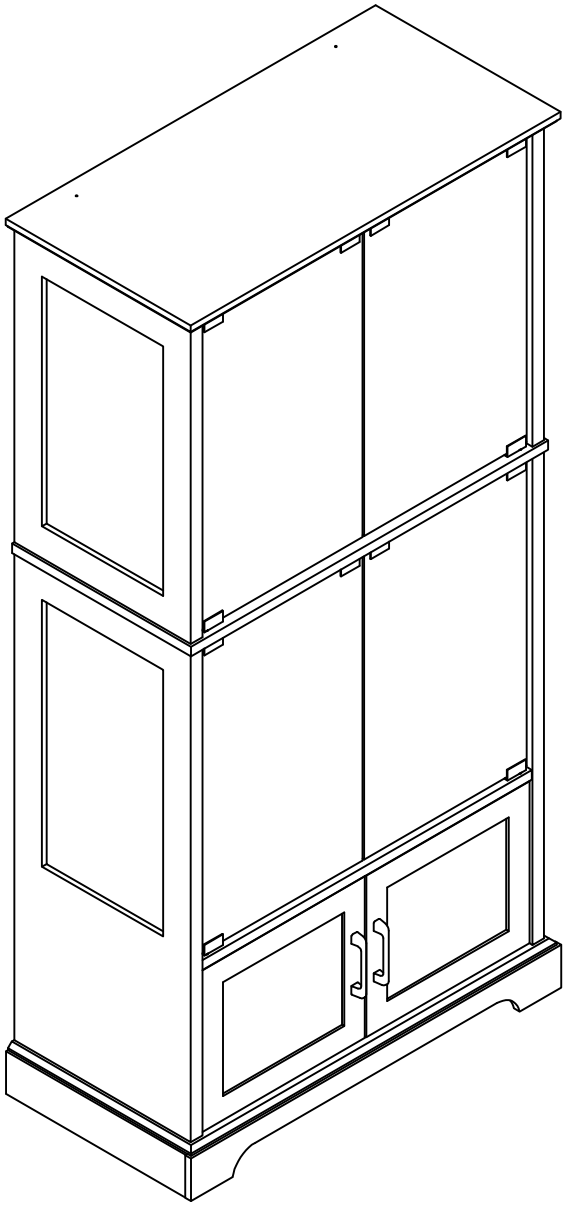

Please follow the steps in the manual strictly

Made In China

⚠ Safety and Care Advice

Important – Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on the following pages.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• During assembly do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.



• To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

• Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts

• Regularly check and ensure That all bolts and fittings are tightened properly.

WARNING
In order to help prevent overturning – please follow these instructions


To help prevent product toppling over please follow the below steps:-

Use the anti tip stap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

Cam Locks Usage (for later step)


Step 1

Connect the male camlock as diected in the assembly instructions using a scewdriver.

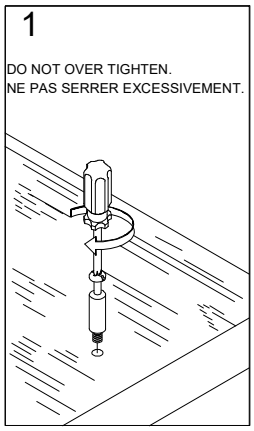

Step 2


Push the male camlock into the entry hole.

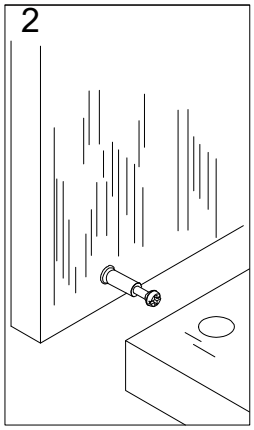

Step 3

Insert the female camlock as shown in the instruction.

Note：ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

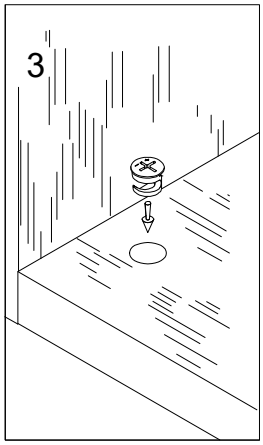



Step 4

Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.




















The joint is now secure.

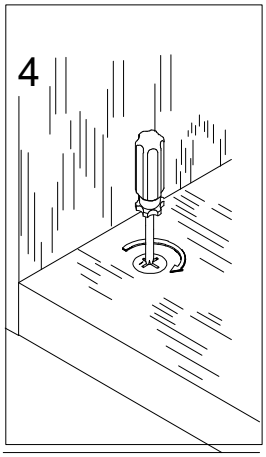

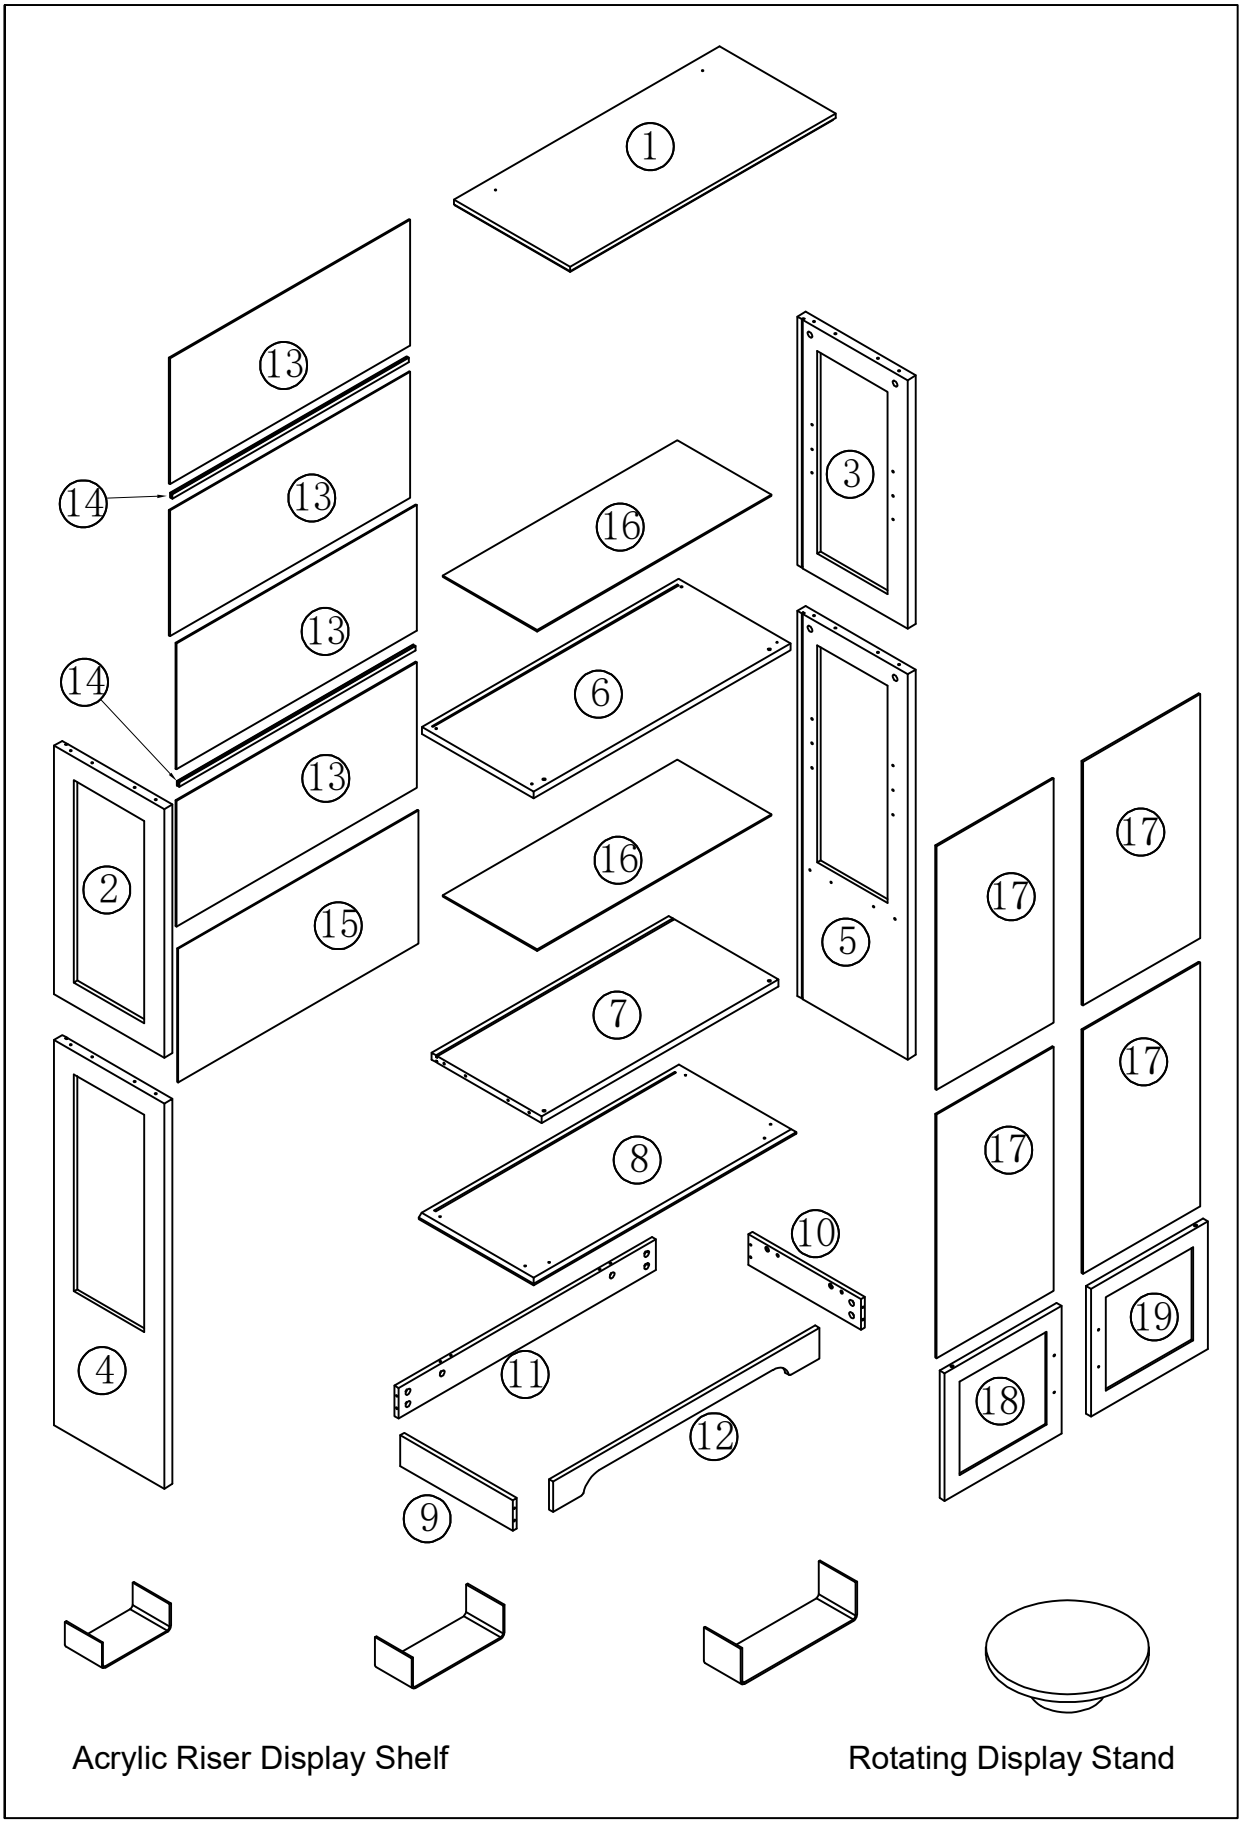


Acrylic Riser Display Shelf


Rotating Display Stand

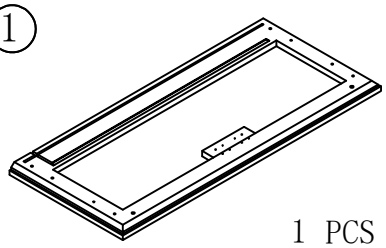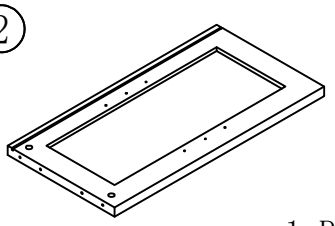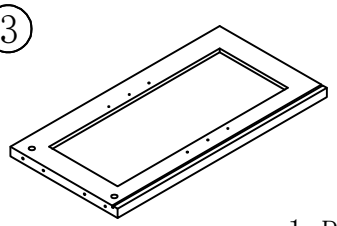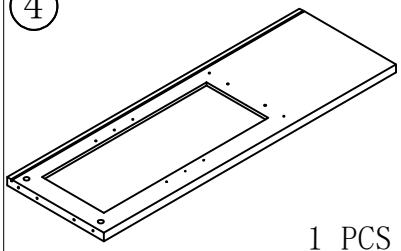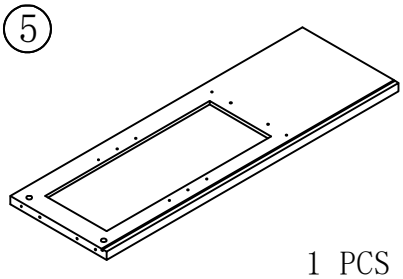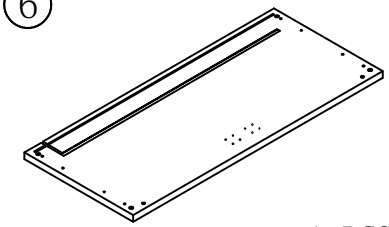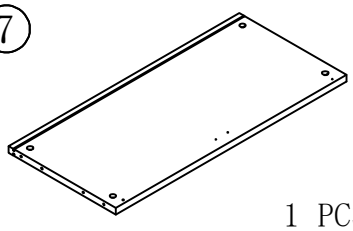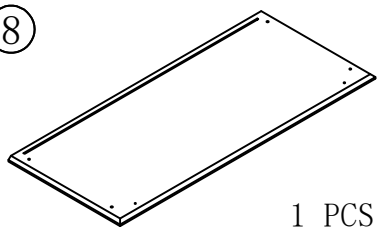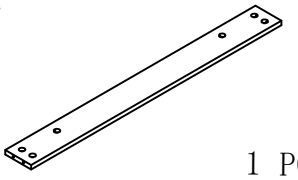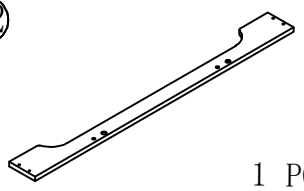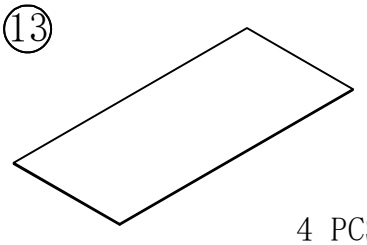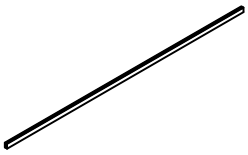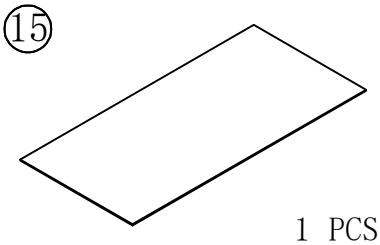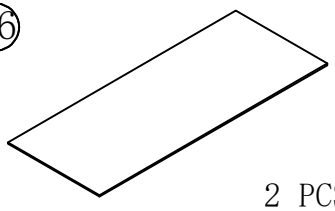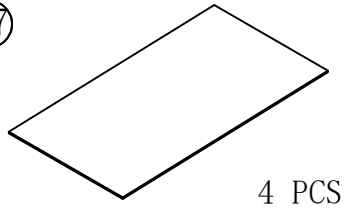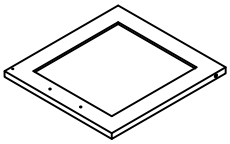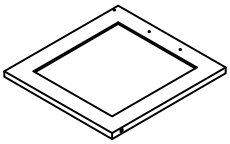
①  1 PCS	②  1 PCS	③  1 PCS
④  1 PCS	⑤  1 PCS	⑥  1 PCS
⑦  1 PCS	⑧  1 PCS	⑨  1 PCS
⑩  1 PCS	⑪  1 PCS	⑫  1 PCS
⑬  4 PCS	⑭  2 PCS	⑮  1 PCS
⑯  2 PCS	⑰  4 PCS	⑱  1 PCS
⑲  1 PCS		


two installers














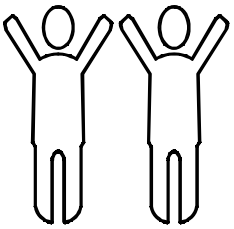


prepare the following three tools in advance

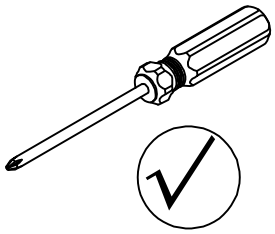


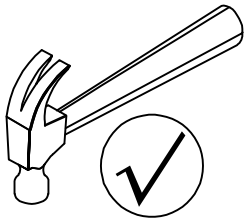

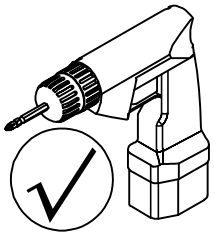

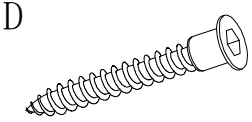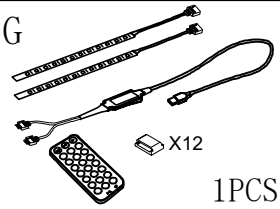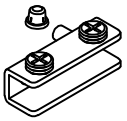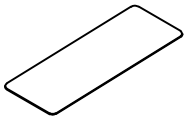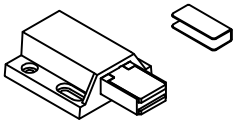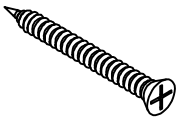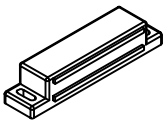
A  M6*36mm 22+2PCS	B  Ø15*10mm 22+2PCS	C  Ø6*30mm 14+2PCS	D  M5*45mm 8+1PCS
E  57*20*20mm 6+1PCS	F  M6*10mm 12+2PCS	G  1PCS	H  23*13*10mm 8+1PCS
I  13*13*11mm 22+2PCS	J  M3*16mm 22+2PCS	K  40*20*13mm 8PCS	L  37*16*1mm 24+2PCS
M  38*38*15mm 4PCS	N  M3*14mm 18+2PCS	O  M3*14mm 4+1PCS	P  4mm 1PCS
Q  M4*35mm 2PCS	R  65*32*15mm 2PCS	S  M8*37mm 2PCS	T  112*22*9mm 2PCS
U  M4*19mm 4+1PCS	V  Φ12*25mm 4+1PCS	W  46*16*14mm 1PCS	X  34*12*1mm 2PCS
Y  Φ21mm 12+2PCS			

STEP1

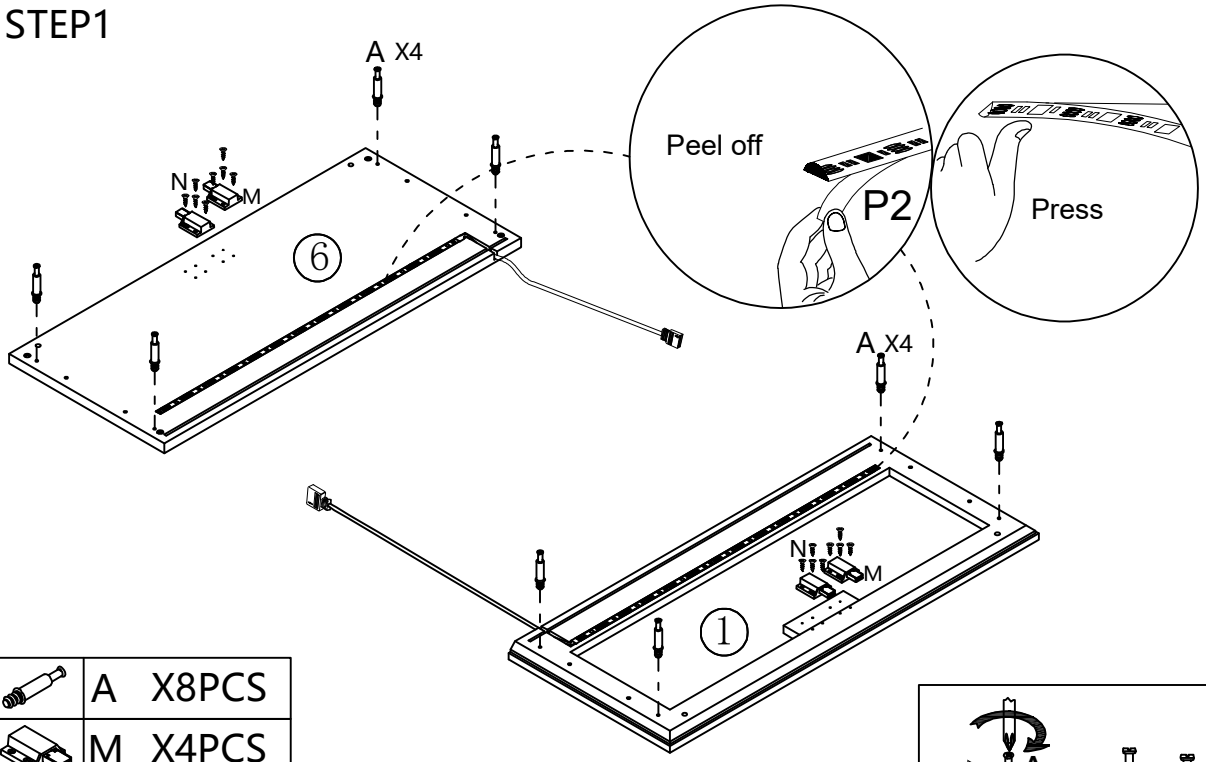


A	X8PCS
M	X4PCS
N	X16PCS
G	X1PCS


Install the corresponding screws and accessories along the dotted lines

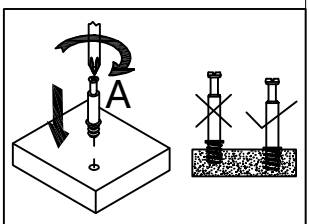

STEP2

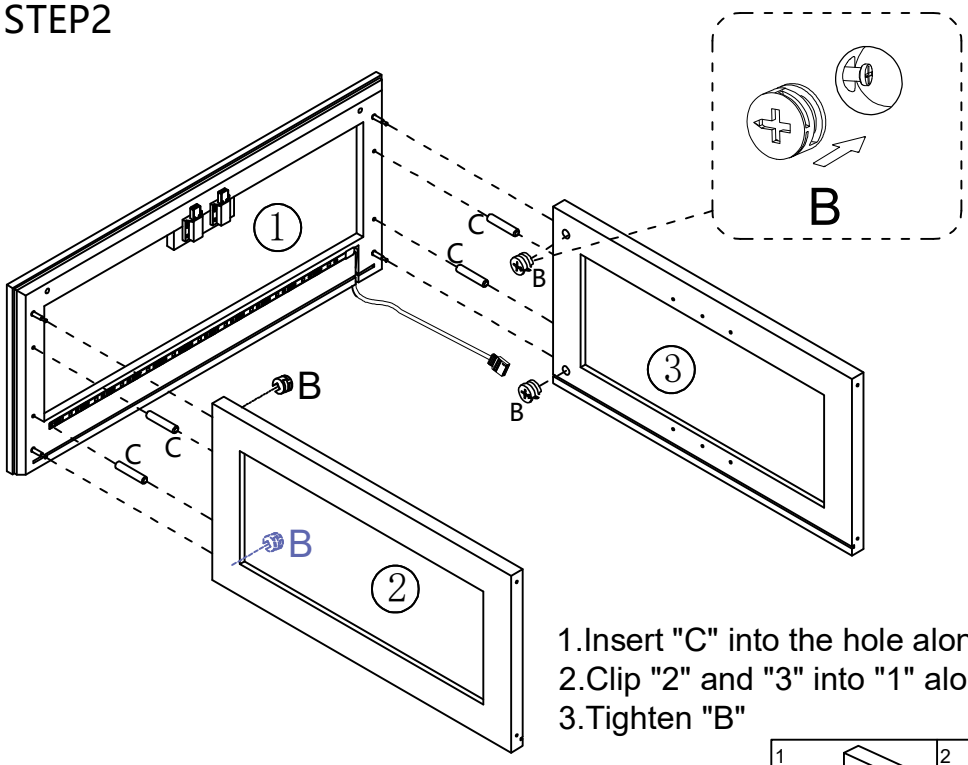


1.Insert "C" into the hole along the dotted line
2.Clip "2" and "3" into "1" along the dotted line
3.Tighten "B"

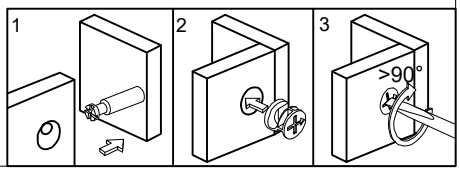


B	X4PCS
C	X4PCS

STEP3

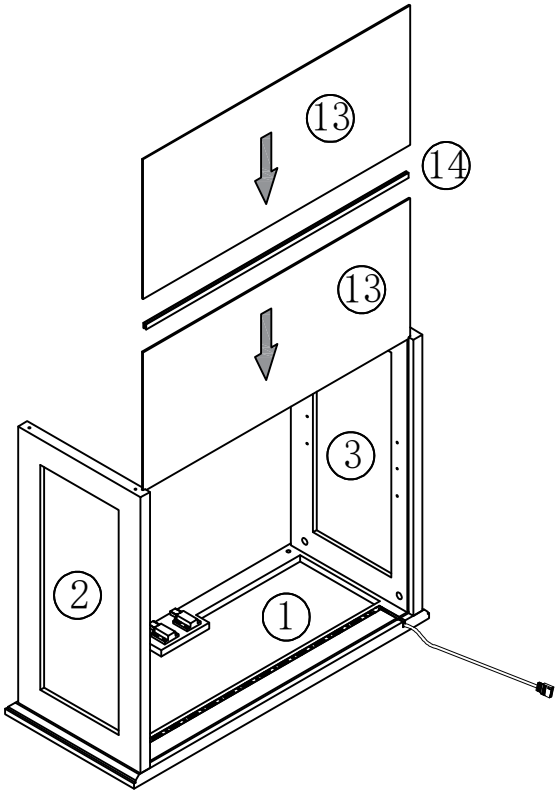

STEP4


Install the corresponding screws along the dotted lines
Note: Screws must be placed into the correct holes.

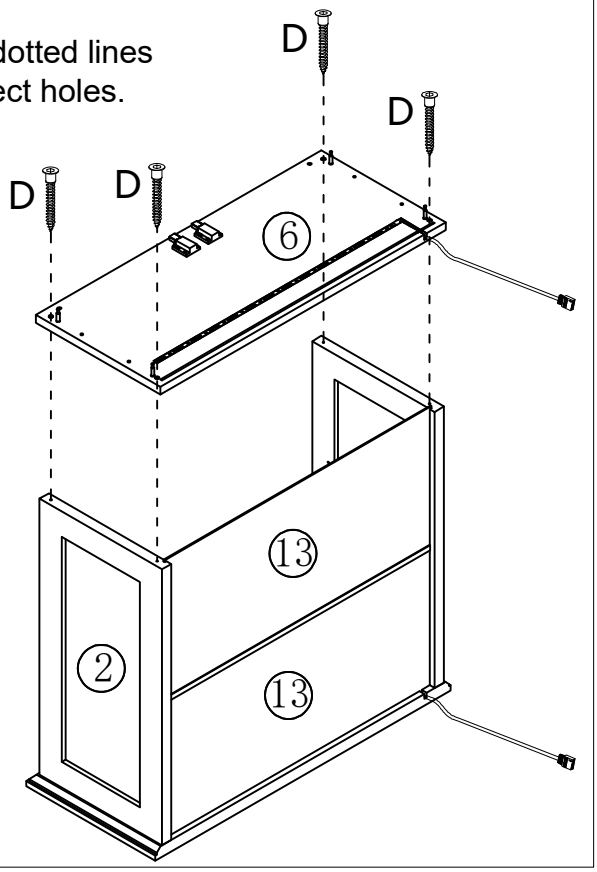

	D X4PCS

STEP5


Use the screwdriver to drive "A" into the correct hole along the dotted line

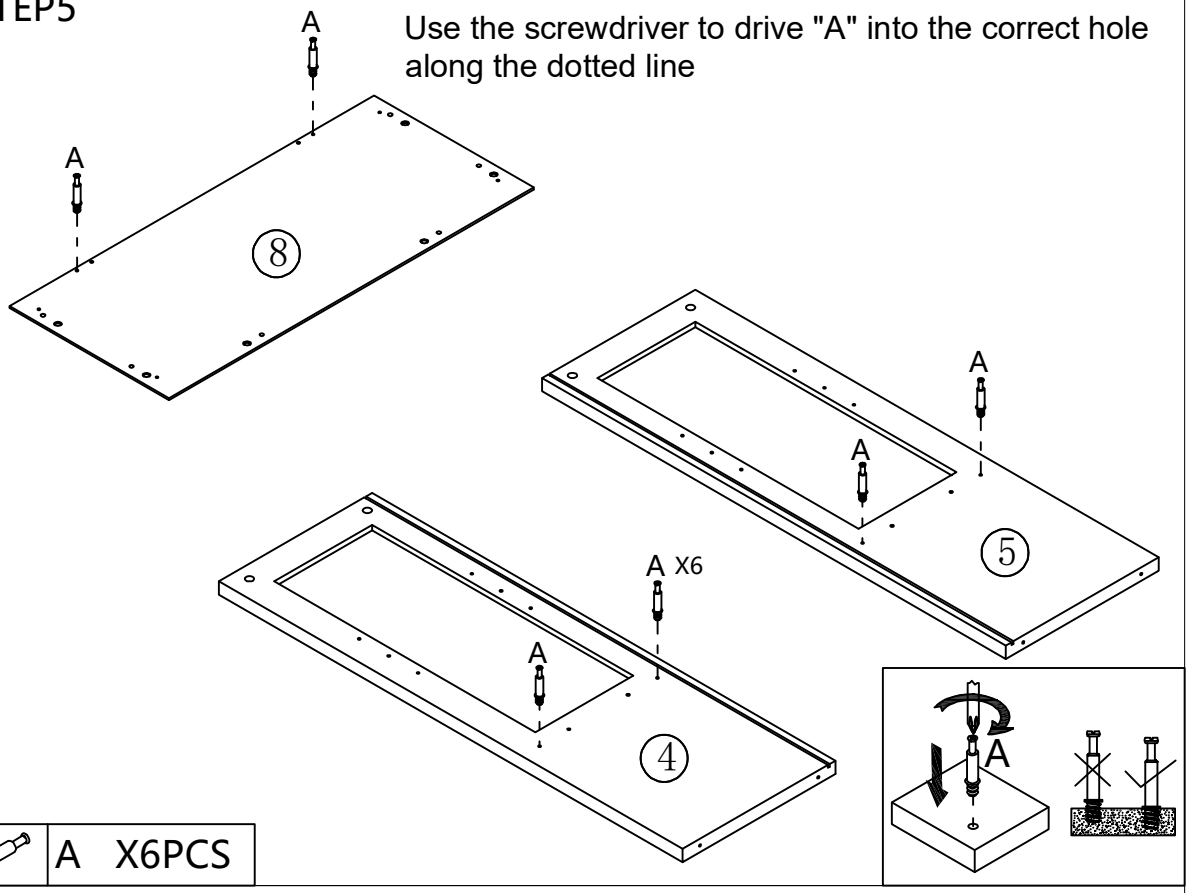

	A X6PCS


STEP6

Note: Before driving in the screw, make sure the orientation of "W" is correct

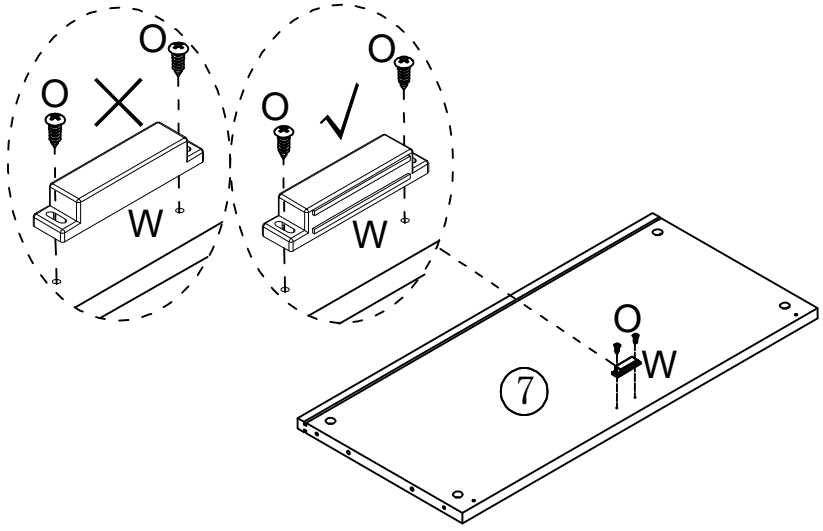

	W X1PCS
	O X2PCS


STEP7

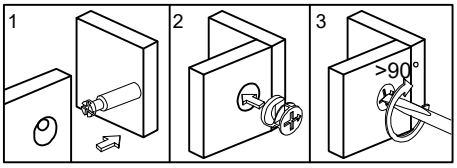

1. Insert "C" into the hole along the dotted line
2. Clip "4" and "5" into "7" along the dotted lines
3. Tighten "B"

	B X4PCS
	C X4PCS


STEP8

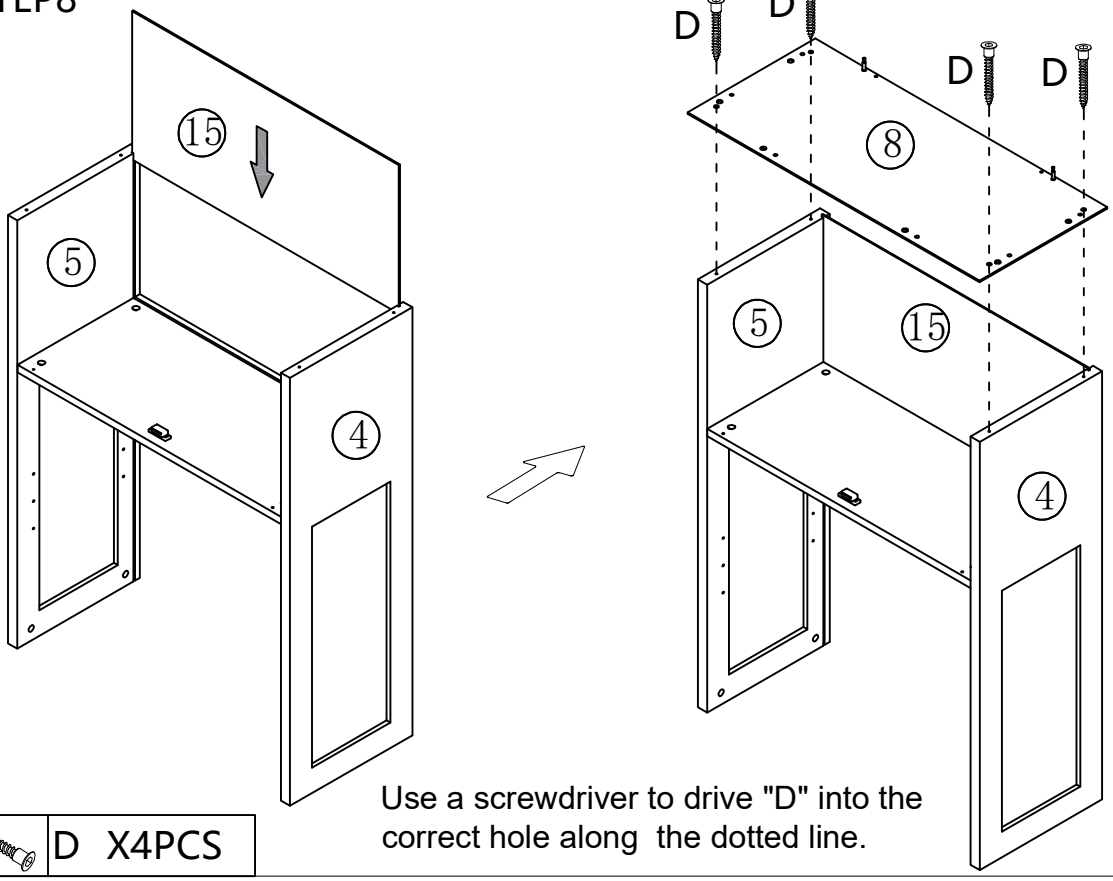


Use a screwdriver to drive "D" into the correct hole along the dotted line.


	D X4PCS

STEP9

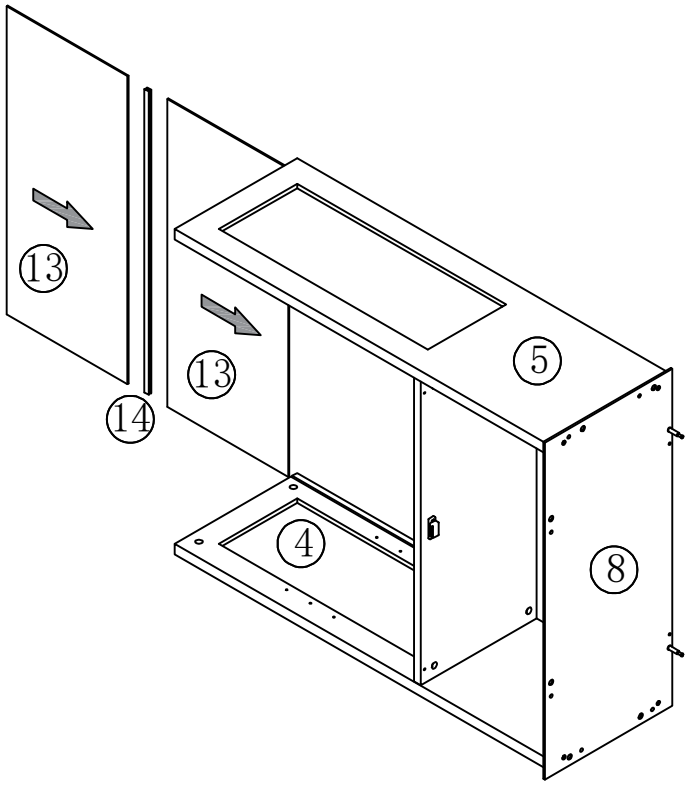

STEP10

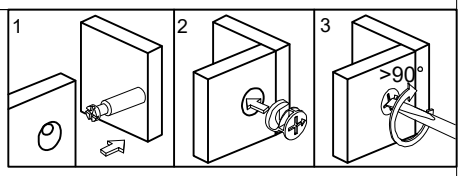

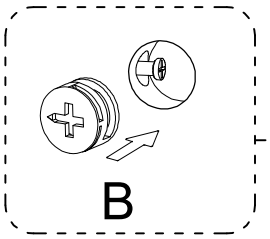


	B X4PCS
	C X4PCS


1. Insert "C" into the hole along the dotted line.
2. Join the upper and lower parts along the dotted line.
3. Tighten "B"

STEP11

Install "A", "E", and "F" along the dotted lines

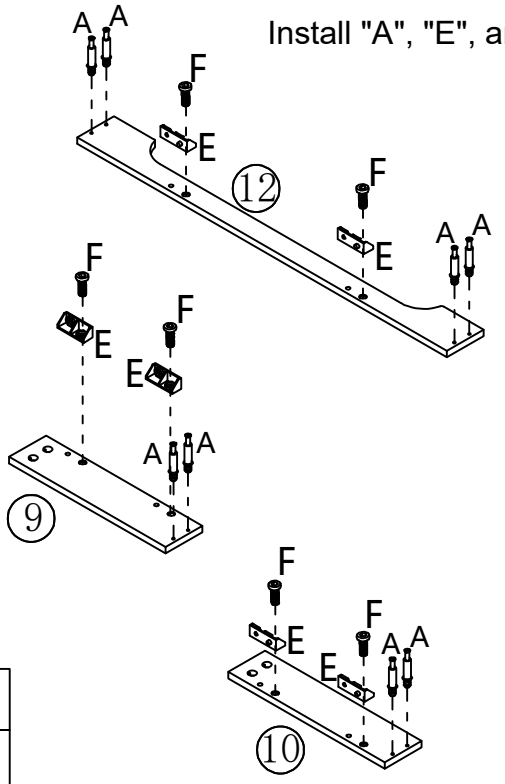


	A X8PCS
	E X6PCS
	F X6PCS

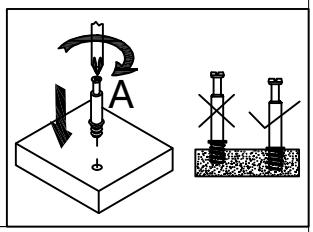


STEP12

Install "9" and "10" into "11" along the dotted line, then tighten with "B"

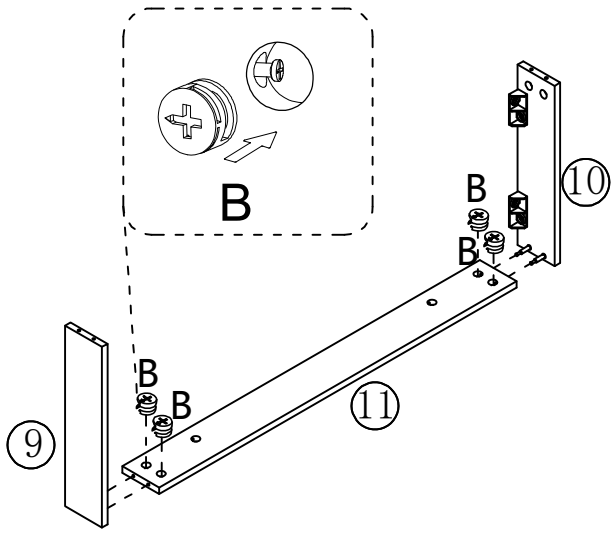



	B X4PCS

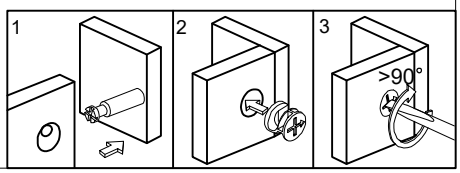

STEP13

Install "12" along the dotted line, then tighten with "B"

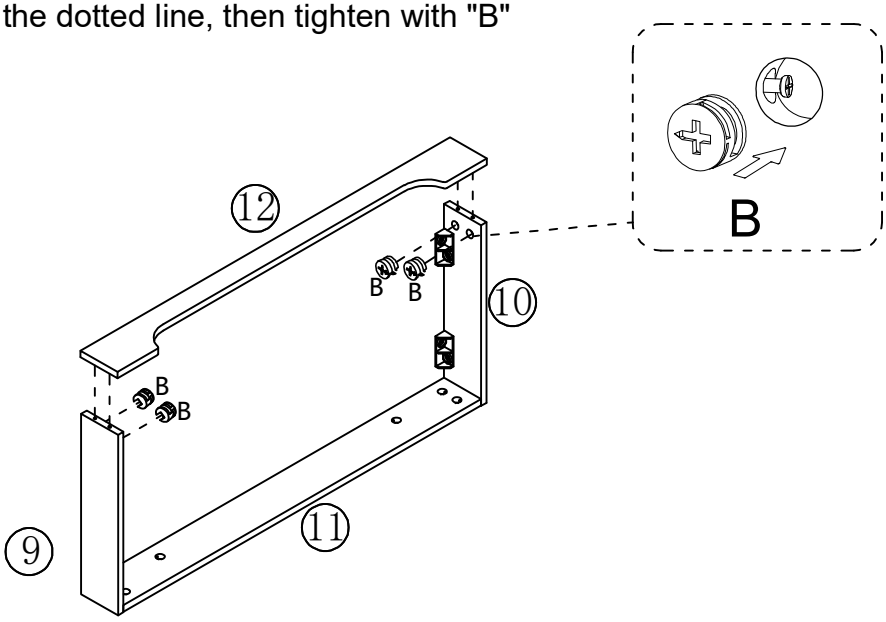


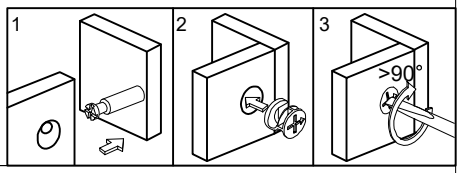

	B X4PCS


STEP14

1. Stick "Y" onto the corresponding hole
2. Insert "C" into the corresponding hole
3. Attach the base to the display cabinet
4. Tighten with "F" and "B"

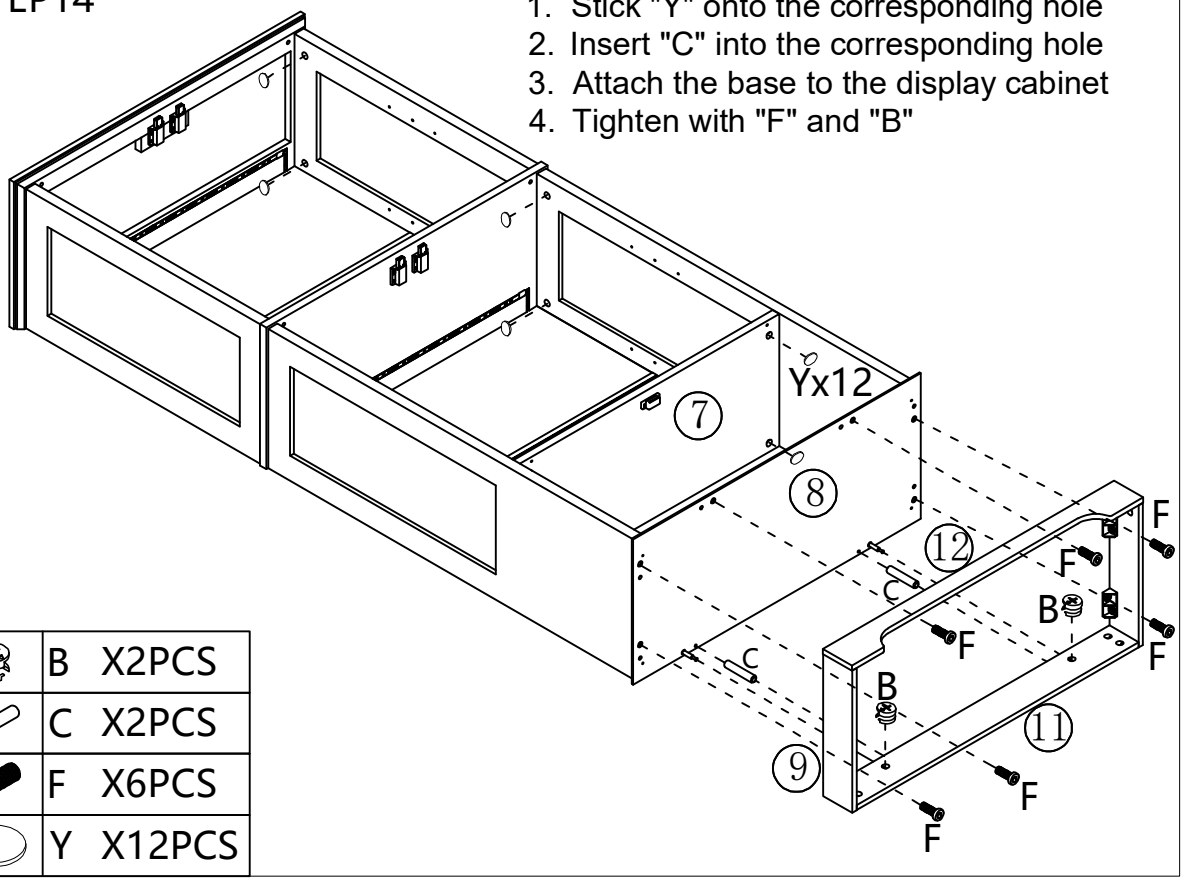

	B X2PCS
	C X2PCS
	F X6PCS
	Y X12PCS


STEP15

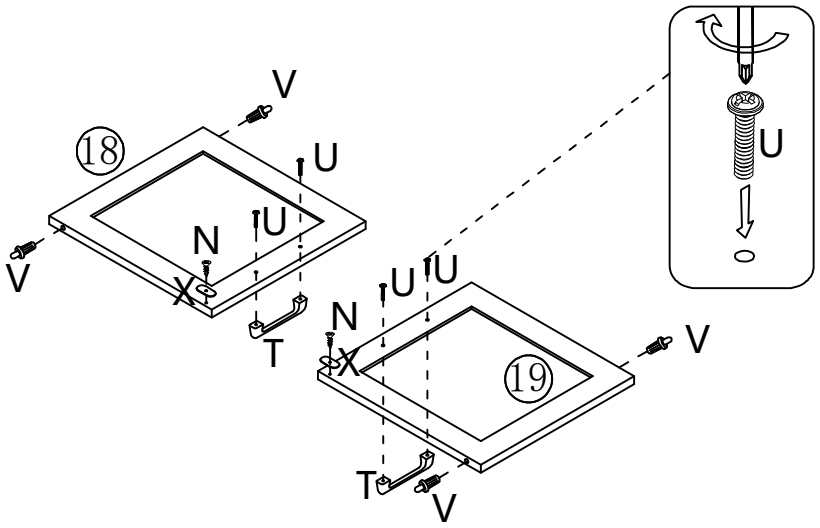

	N X2PCS
	T X2PCS
	V X4PCS
	U X4PCS
	X X2PCS


1. Use "U" to install "T" onto "18" and "19"
2. Use "N" to install "X" onto "18" and "19"
3. Install "V" on both sides of "18" and "19" along the dotted line


STEP16

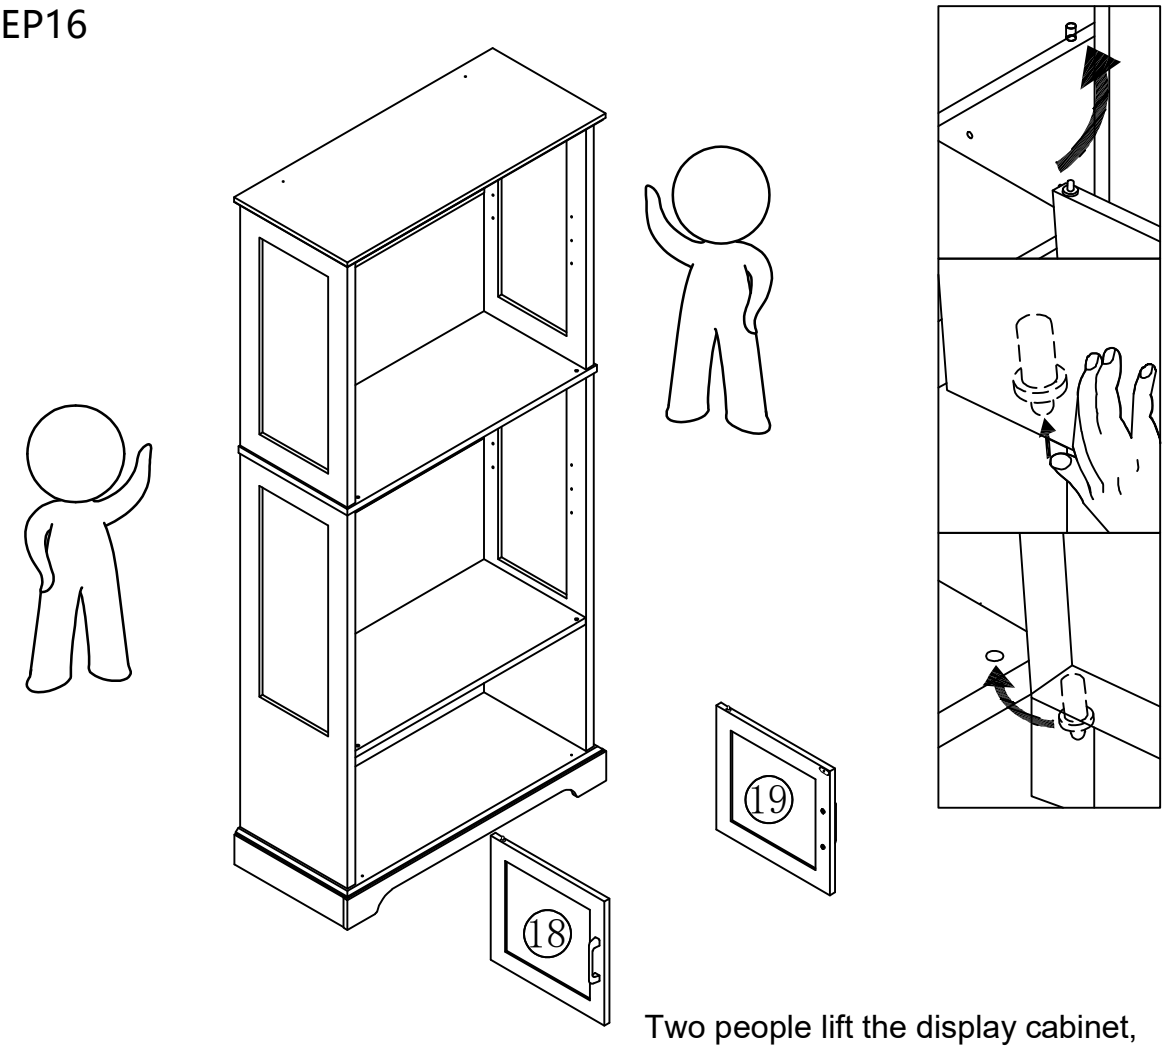

Two people lift the display cabinet, then install the door

STEP17

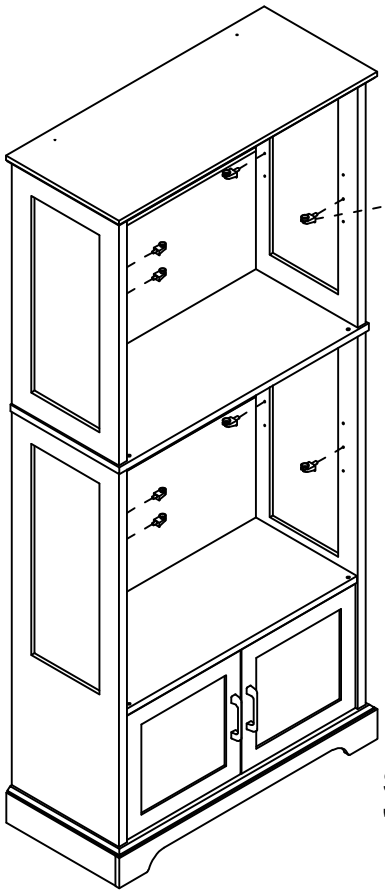

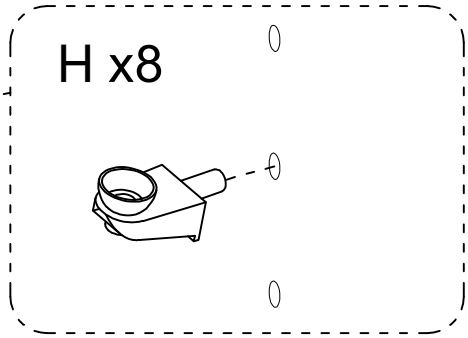


Select one of the holes and install "H" into it




H X8PCS

STEP18

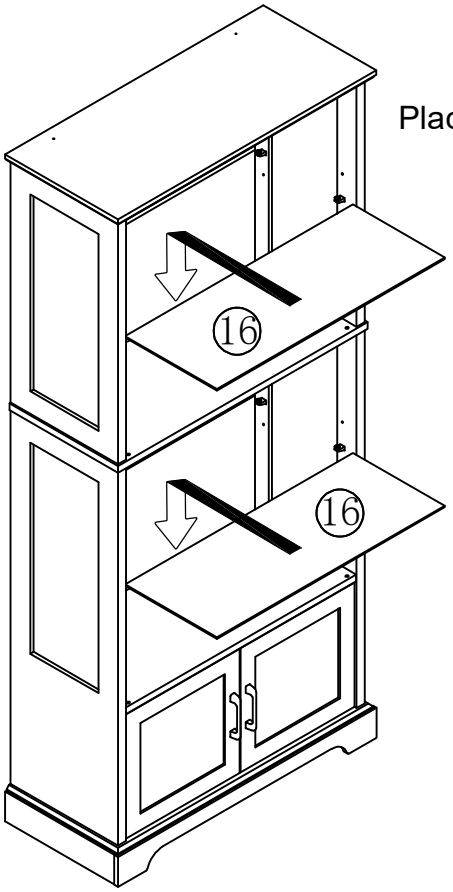

Place the glass shelf in position


STEP19

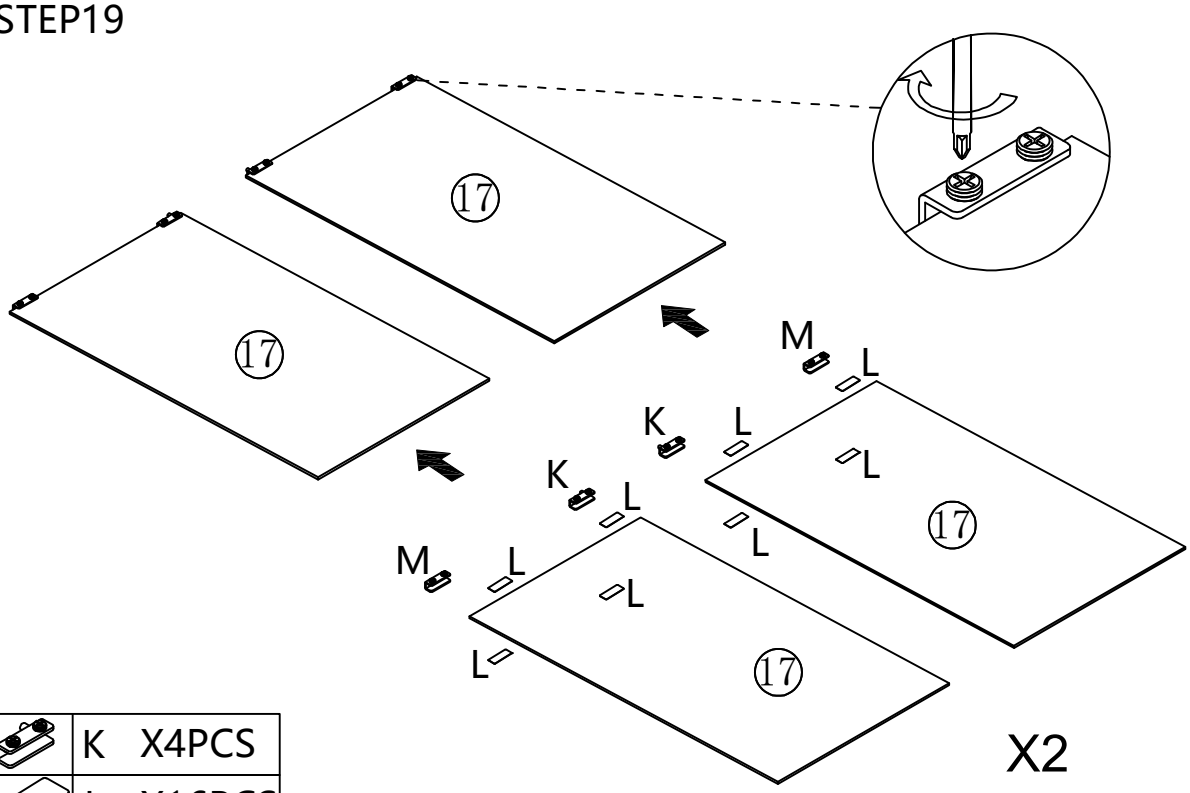

K	X4PCS
L	X16PCS
M	X4PCS

Loosen the screws on "M" slightly, place "L" above and below the glass, then retighten the screws on "M" appropriately
(Note: Do not over-tighten, otherwise the glass may break)


STEP20

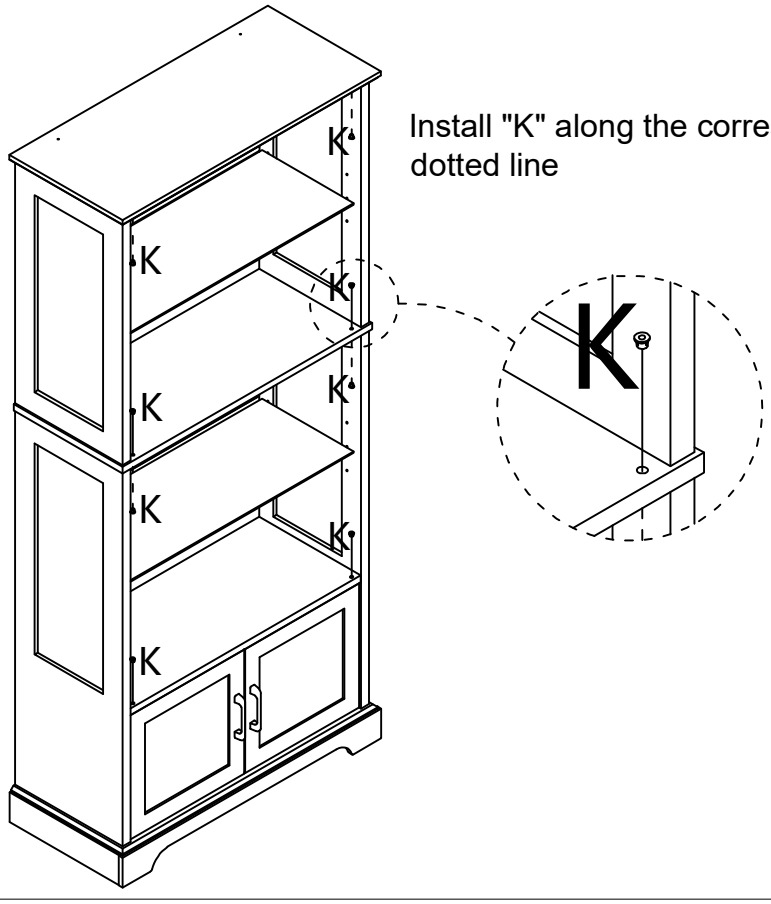



Install "K" along the corresponding dotted line

K	X8PCS


STEP21

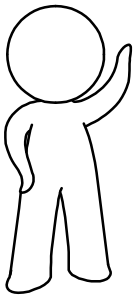

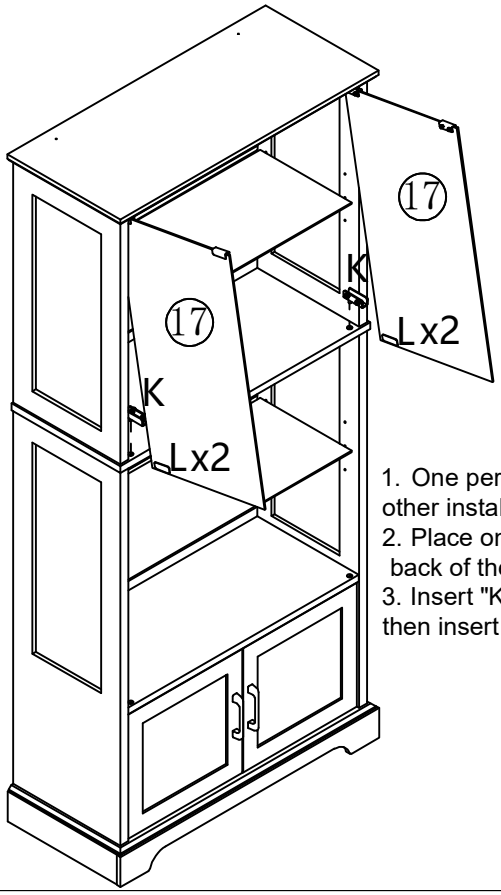


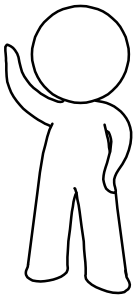


1. One person holds the glass while the other installs the glass door
2. Place one "L" on the front and one on the back of the glass
3. Insert "K" into the corresponding hole, then insert "17" into "K"

	K X2PCS
	L X4PCS


STEP22

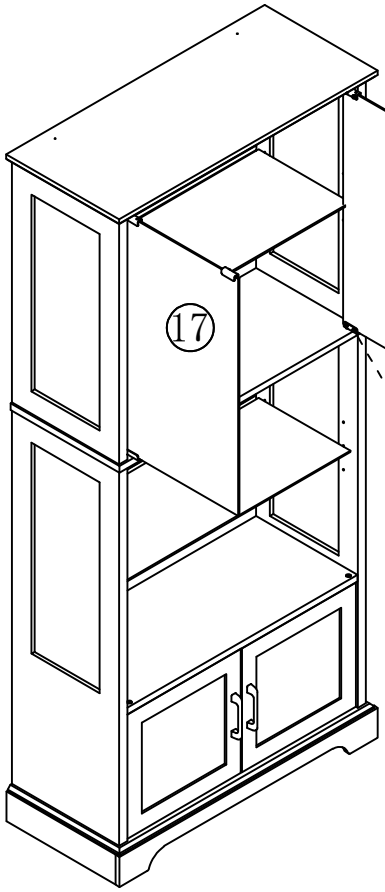


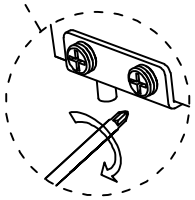


Tighten the screws

STEP23

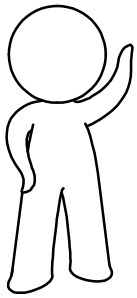

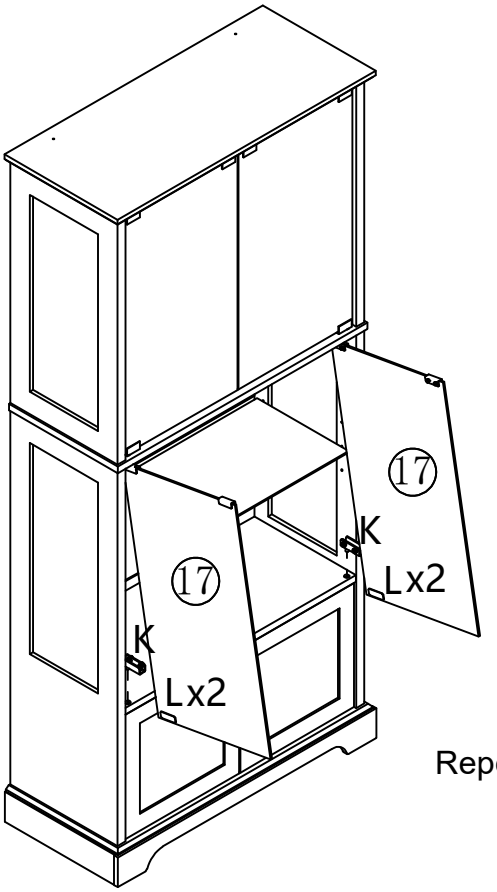


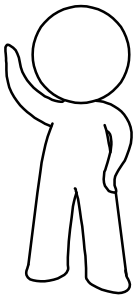

Repeat the previous step

	K X2PCS
	L X4PCS


STEP24

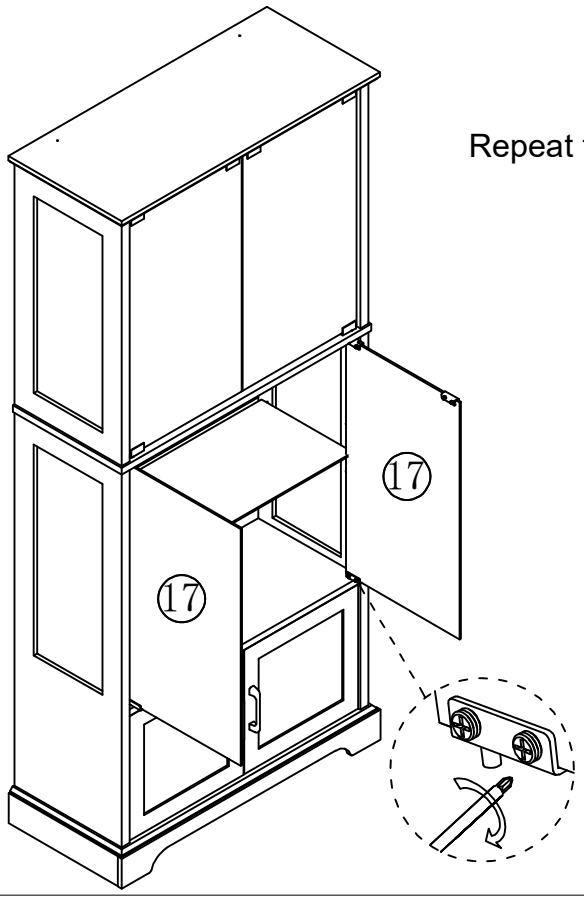


Repeat the previous step

STEP25


Remote control

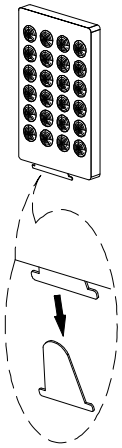

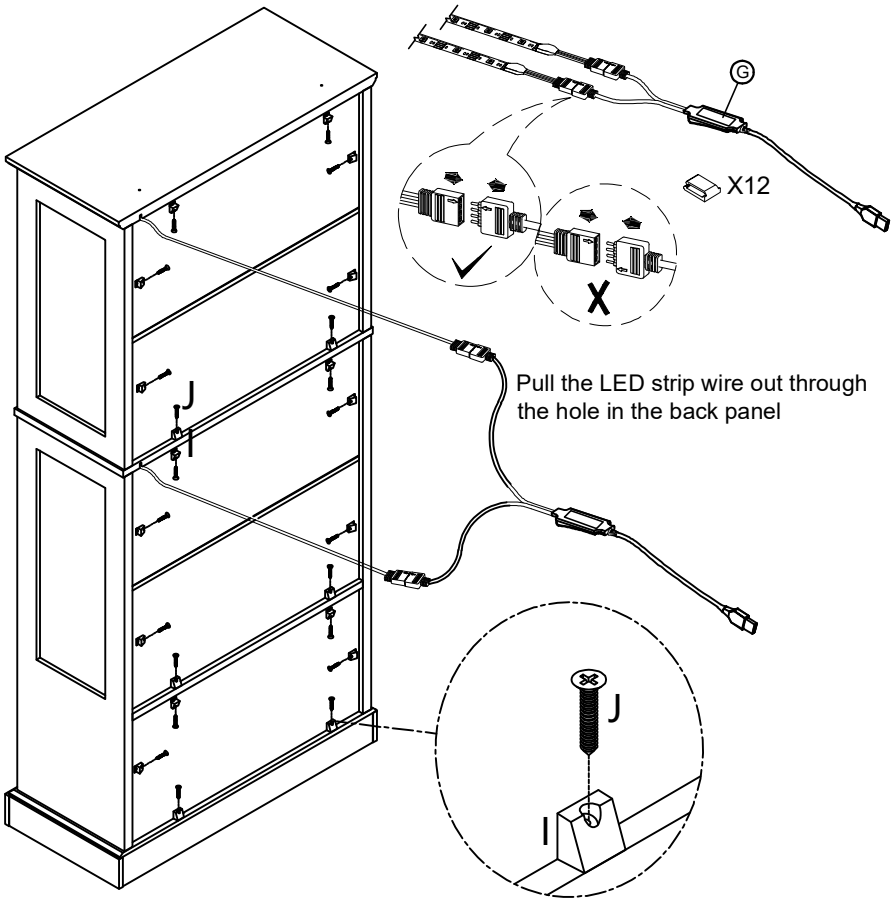


G X12	G X1PCS
I	I X22PCS
J	J X22PCS

STEP26

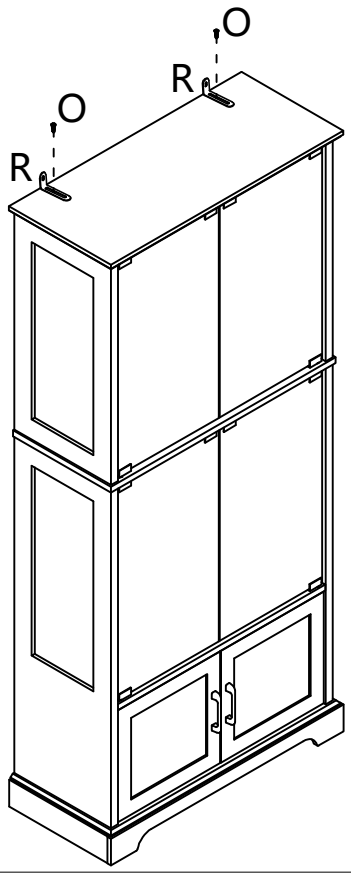


R	R X2PCS
O	O X2PCS


STEP27

Method 1：For solid or concrete wall.  S


① 1.Choose your desired location on the wall. Have your friend hold the product in place and use a pencil to mark where the anchor will go.




② 2.Drill pilot holes in the wall using a drill bit that matches the outer diameter of the wall anchors.

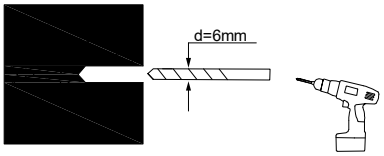

③ 3.Gently insert the wall anchor into the pre-drilled hole.

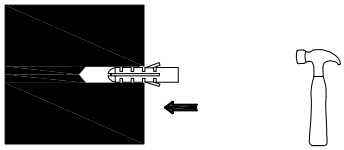


④ 4.Insert the screws into the wall anchor with a screwdriver to complete the installation.

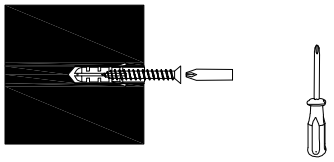

 S X2PCS

STEP28

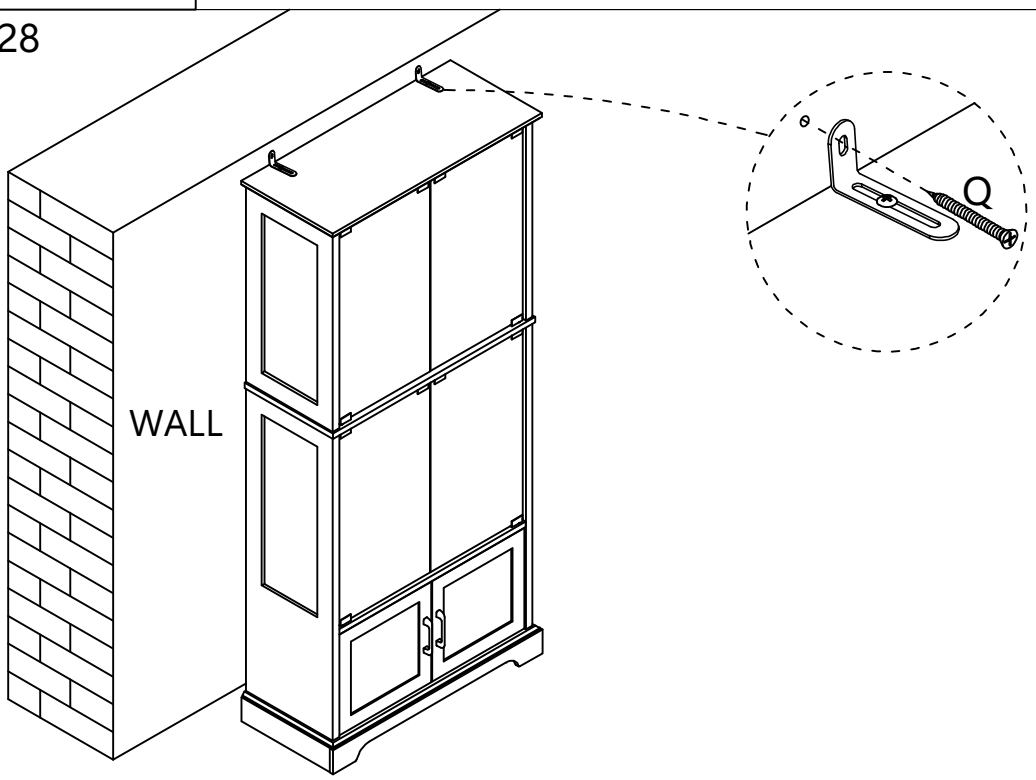

 Q X2PCS