
Tribesigns

DESIGNED FOR LIFE

Assembly Instructions

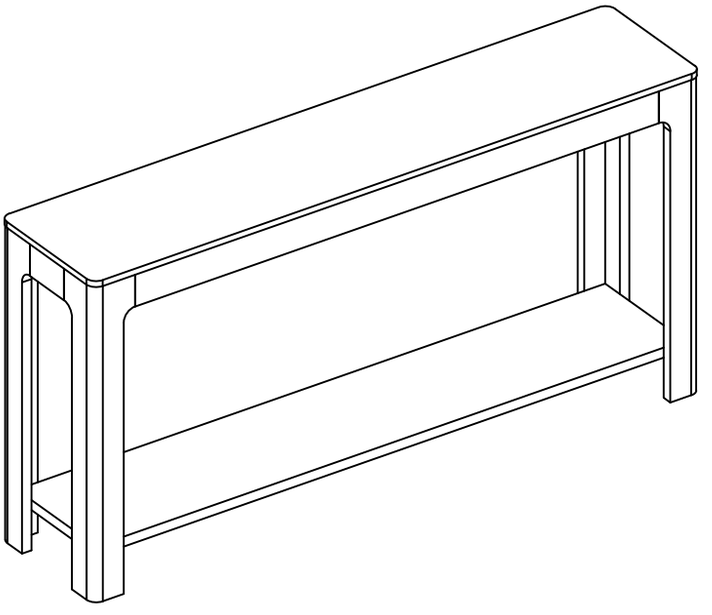

Foyer table	Model No. **HOGA-HL0234**	LITTLE TREE Little Tree by Tribesigns www.tribesigns.com

Contact Us

We're here to help you.



Your satisfaction is our top priority. If you encounter any issues with this product, such as missing or damaged parts, we're here to help. Please retain the original packaging and take photos of the packaging and the product, then contact us as soon as possible.

Warm Tips


1. Carefully read these instructions and keep them for future reference.
2. Check the parts list and confirm everything's there before starting assembly.
3. When assembling, put all parts on a soft, smooth surface like a carpet to avoid scratches.
4. Don't fully tighten screws until all parts are confirmed in place to avoid misalignment.

How to Get the Assembly Video


Step 1 Scan the QR code.


Installation Video


Step2 Search with the Model No.
(on the bottom left corner of the title page)

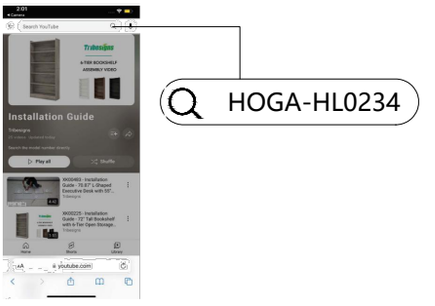


Note: If you can't find the assembly video, please contact us.

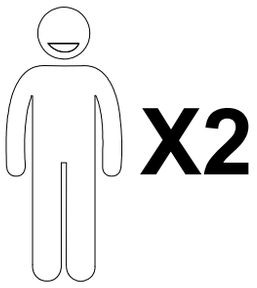

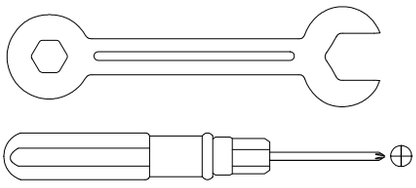

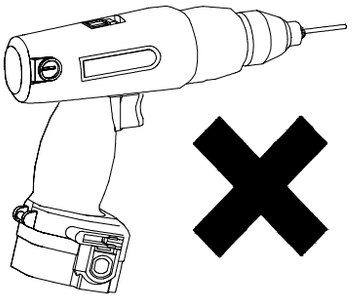



We recommend using hand tools for assembly.
If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

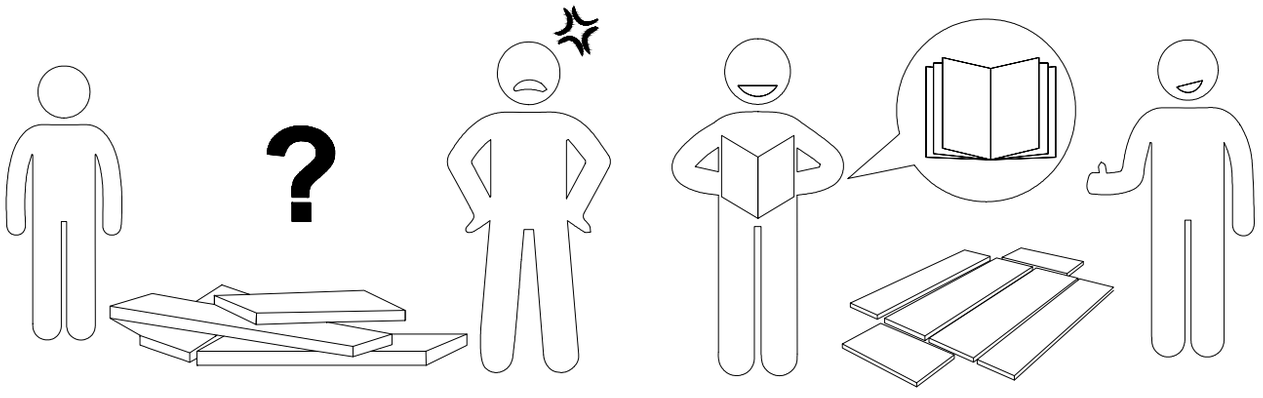


Install the Anti-Tip Straps

Using the anti-tip straps can reduce the risk of tipping over, but can not eliminate it.

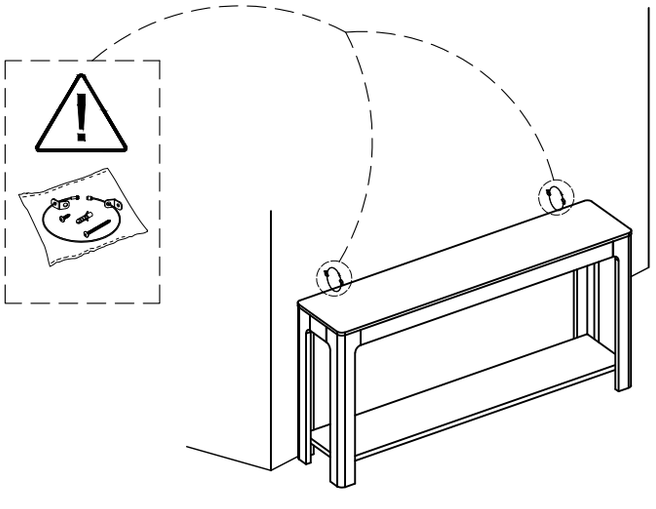








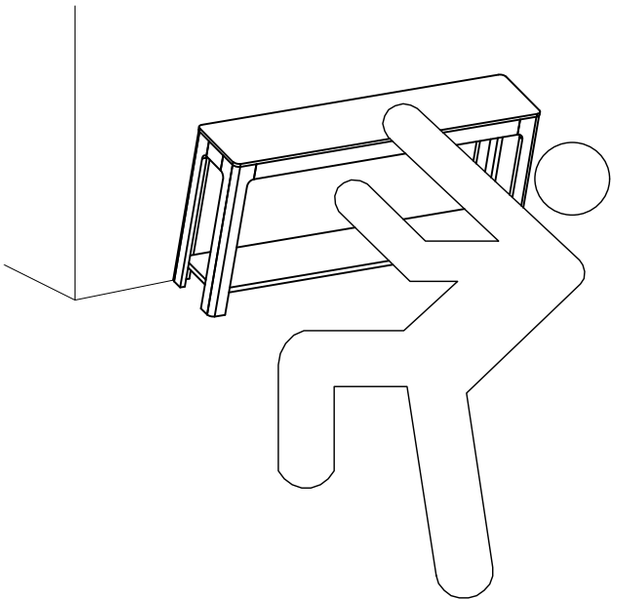


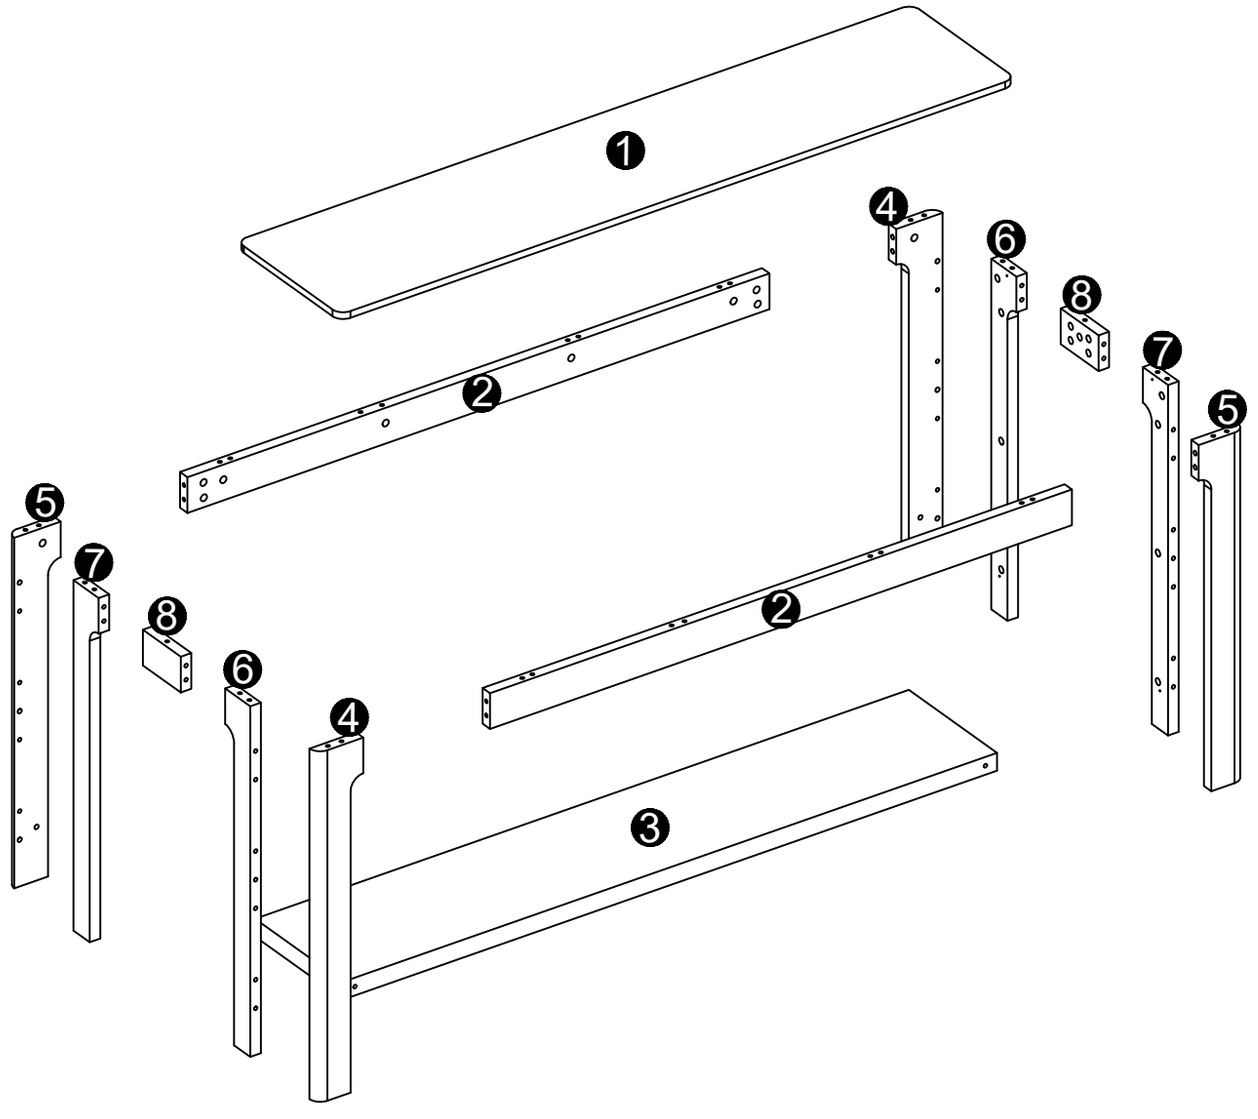







⚠ Caution


Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for a free replacement if you encounter any damaged or missing parts.

Parts List

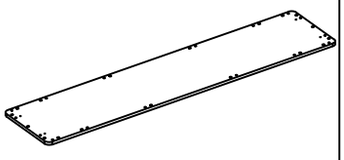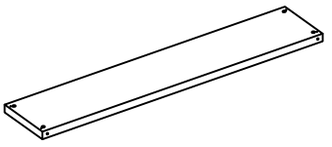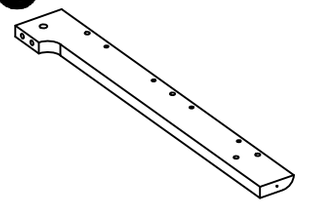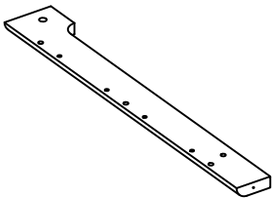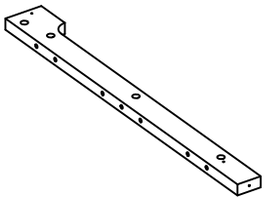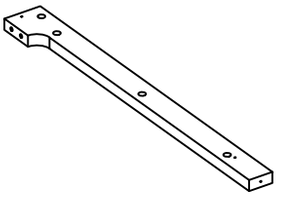1  1 pc	2  2 pcs	3  1 pc	4  2 pcs
5  2 pcs	6  2 pcs	7  2 pcs	8  2 pcs


Hardware List

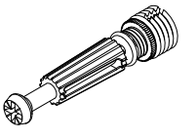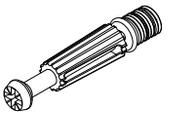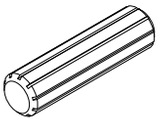A	B	C	D	E	F
 M6x40mm	 Ø15x12mm		 Ø8x30mm	 Ø3.5x14mm	 Ø14x4mm
35 pcs	51 pcs	17 pcs	33 pcs	17 pcs	9 pcs

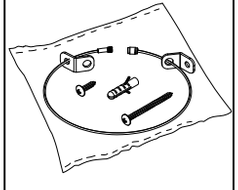
G	H	I			
					
8 pcs	13 pcs	2 pcs			

Installation of Cams and Pins


Step 1-2: Align the plastic part with the mounting hole and press it in. If you can't press it in, loosen the screw counter clockwise or completely remove the screw from the plastic part and try again.
Step 3-4: After pressing the plastic part into place, use a screwdriver to tighten the screw clockwise.

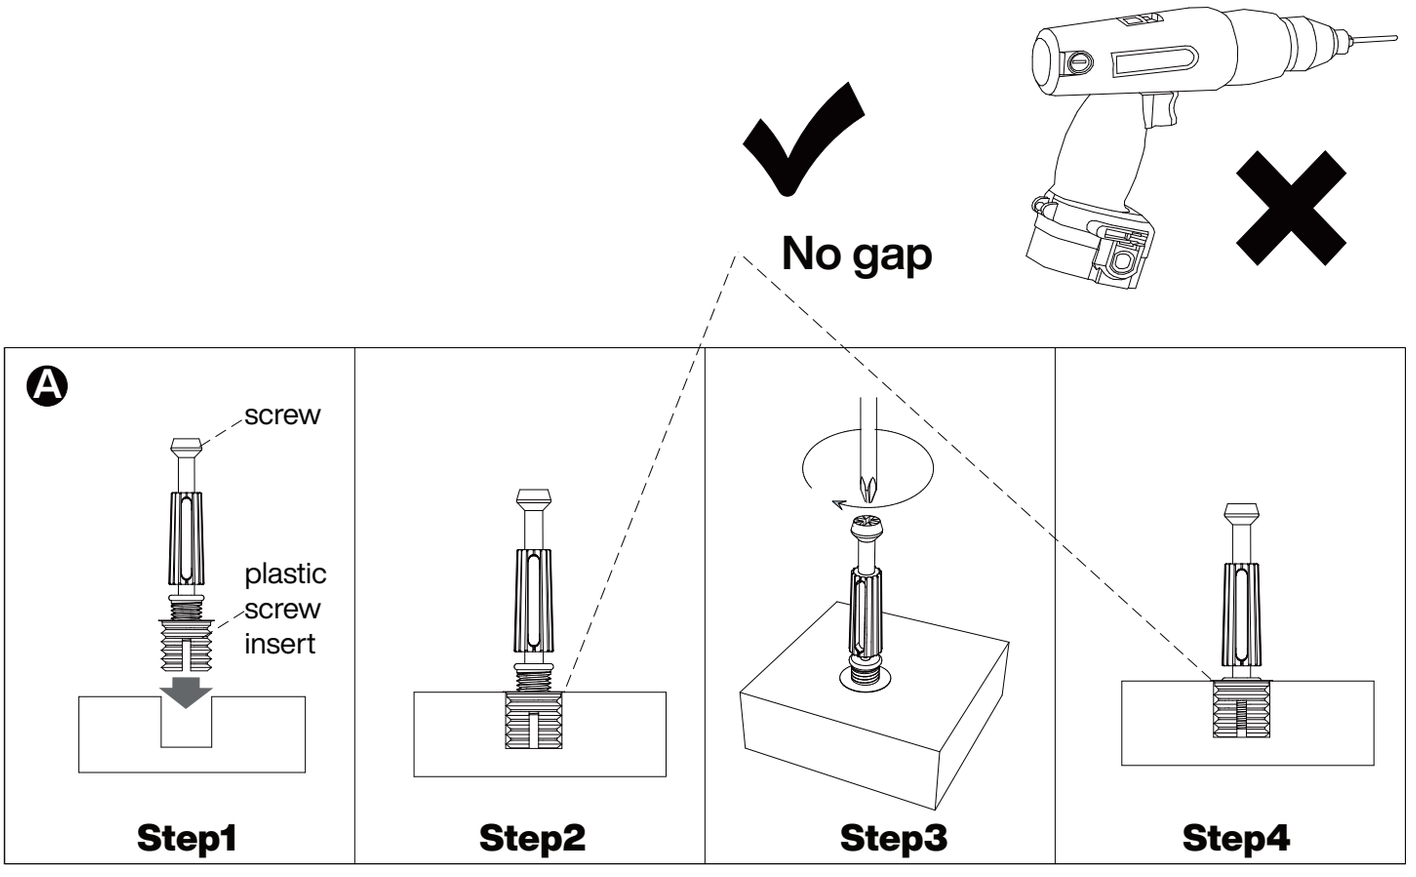


Screw the pin into the hole. Set the cams correctly by aligning the head of the cams with the lock pins. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

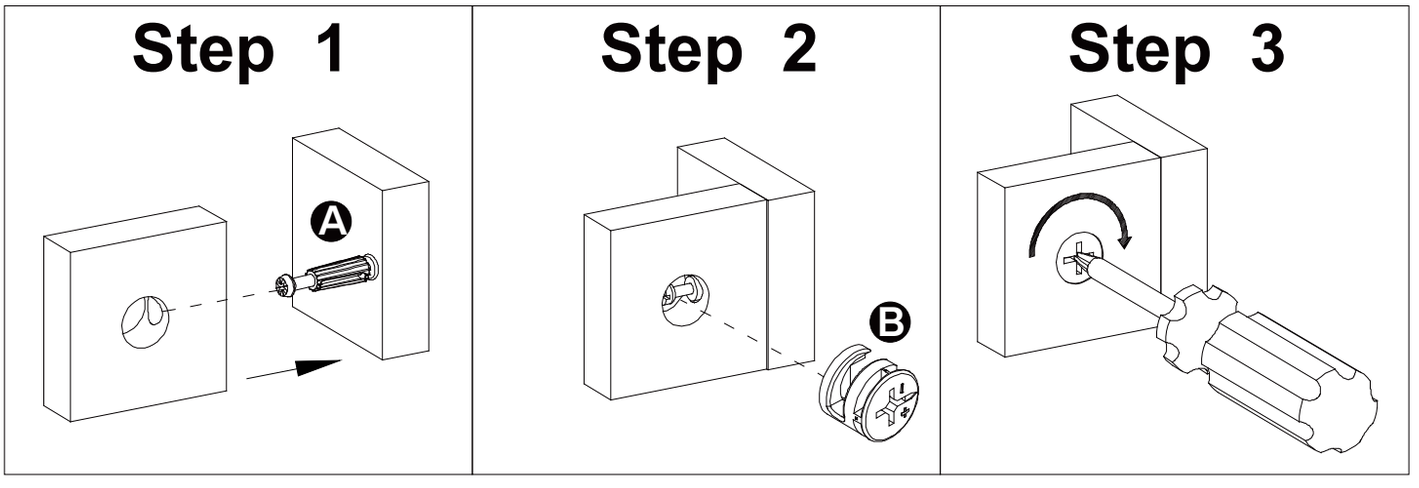



1


A	C
	
M6x40mm	M6x40mm
34 pcs	16 pcs

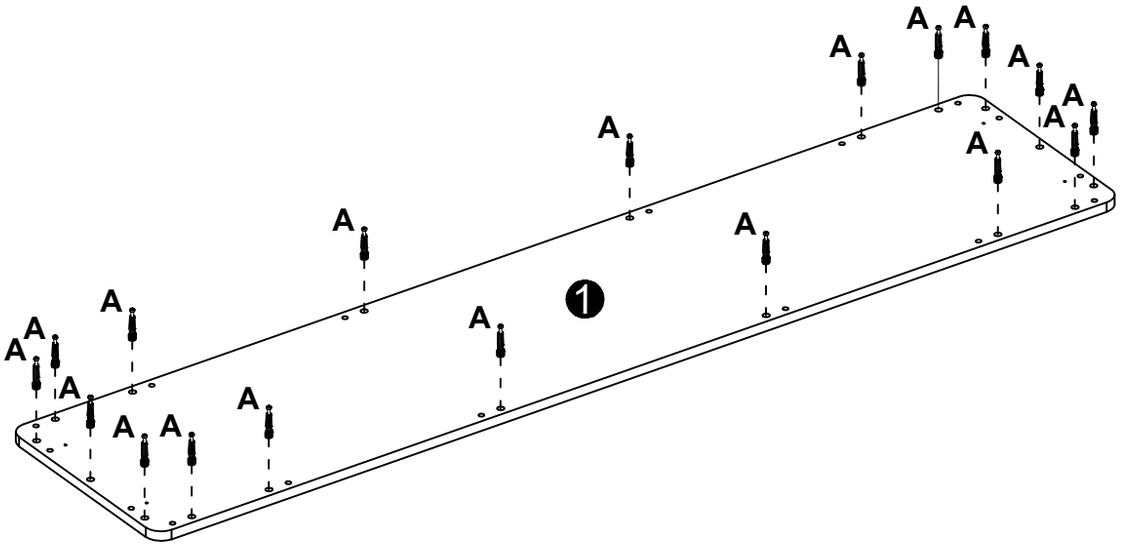



2

H	B	D
		
Ø20mm	Ø15x12mm	Ø8x30mm
8 pcs	12 pcs	16 pcs

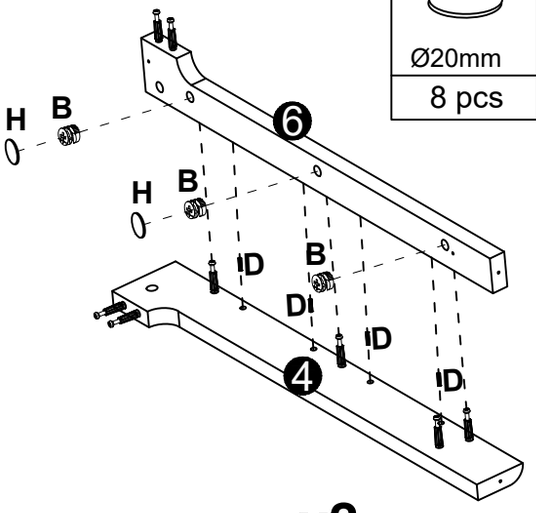


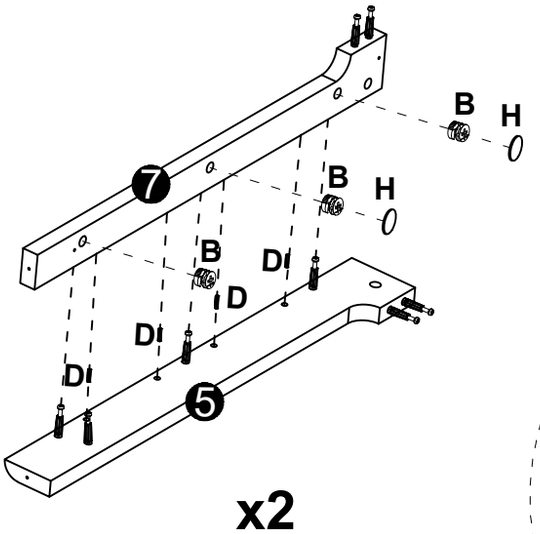


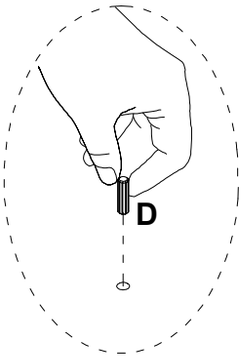


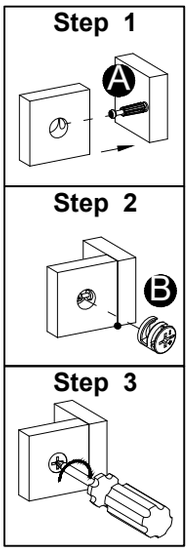


3

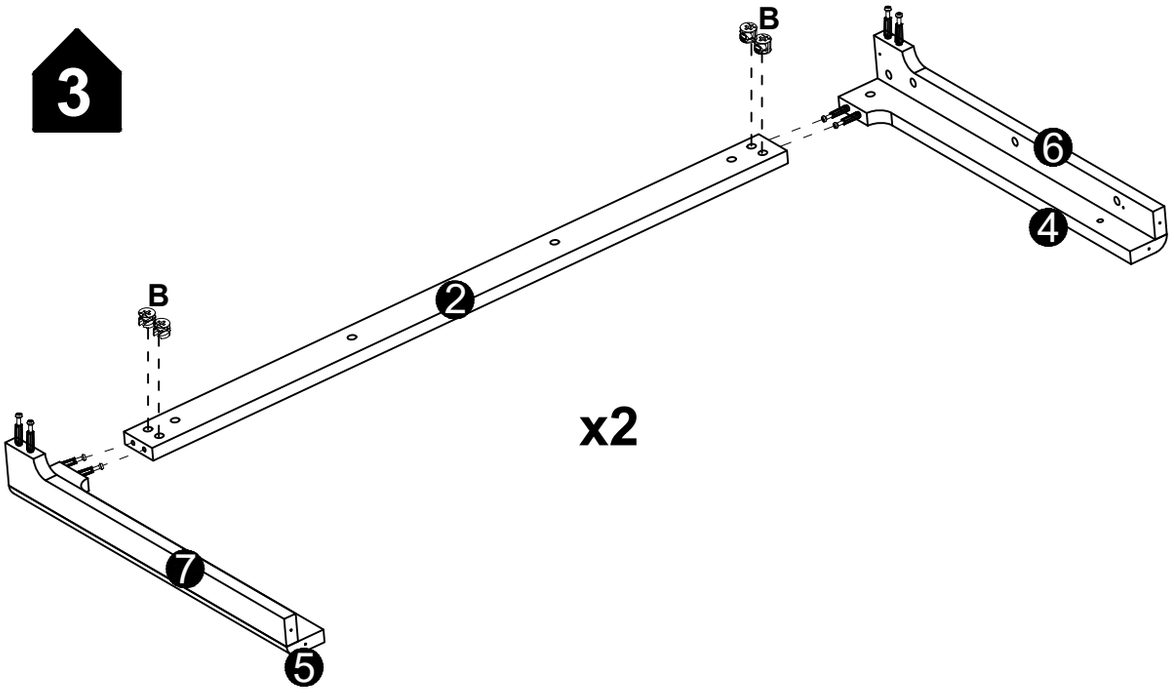

B

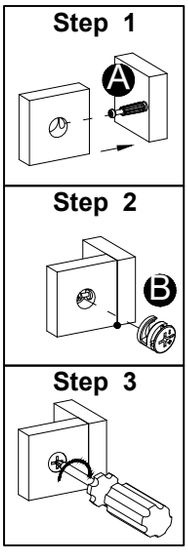Ø15x12mm
8 pcs

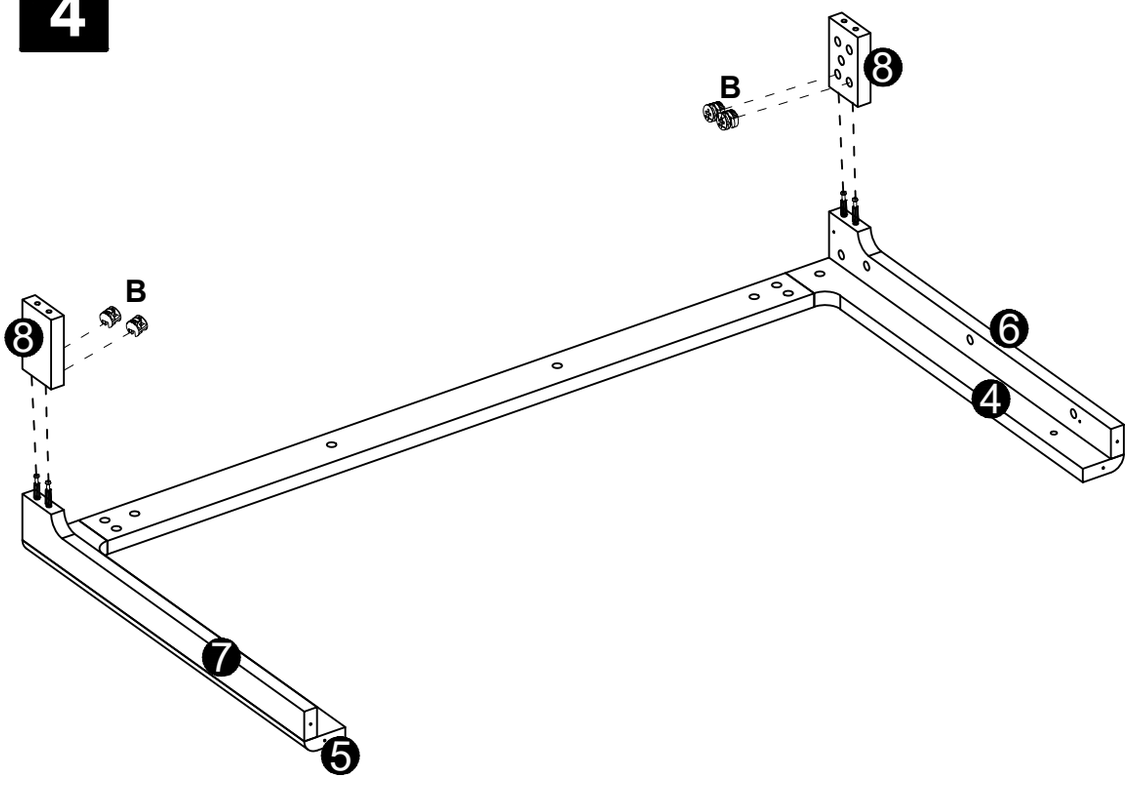


4




B

Ø15x12mm
4pcs


Step 1

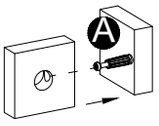


Step 2

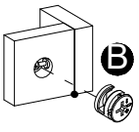

Step 3

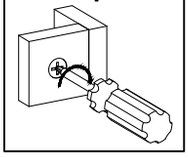


5

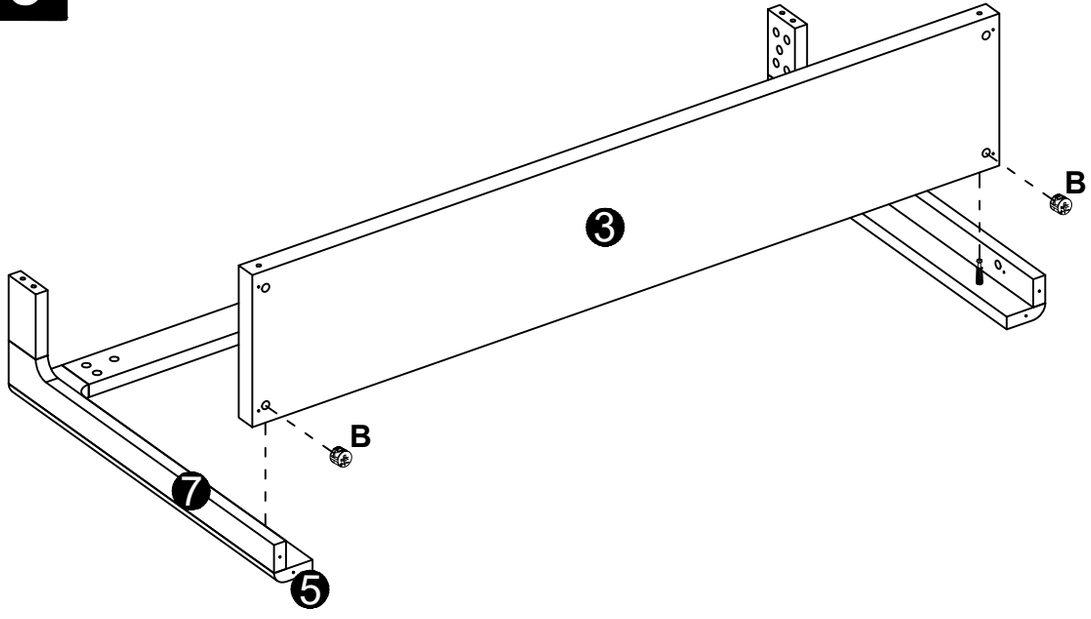


B

Ø15x12mm
2 pcs


Step 1

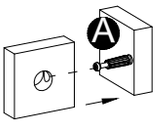


Step 2

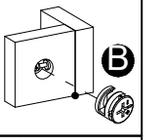


Step 3

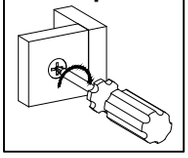


6

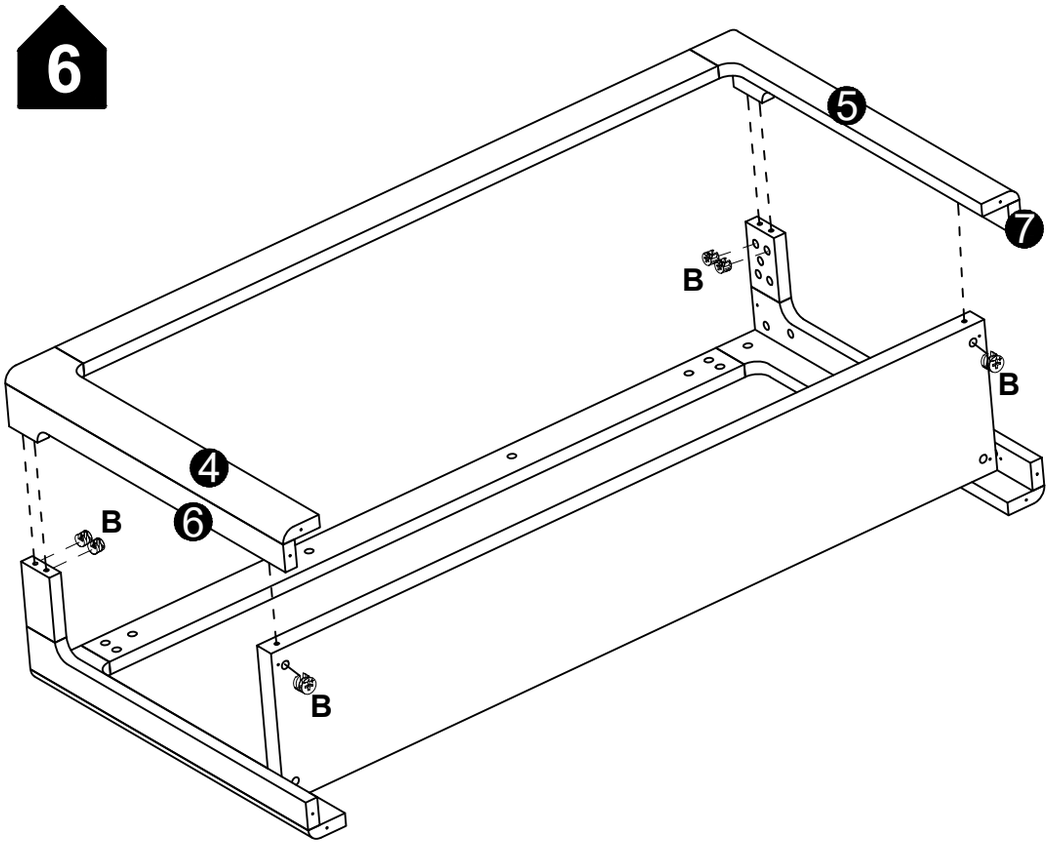


B

Ø15x12mm
6 pcs

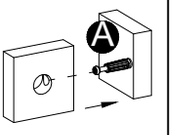
Step 1

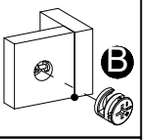


Step 2




Step 3

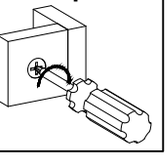


7

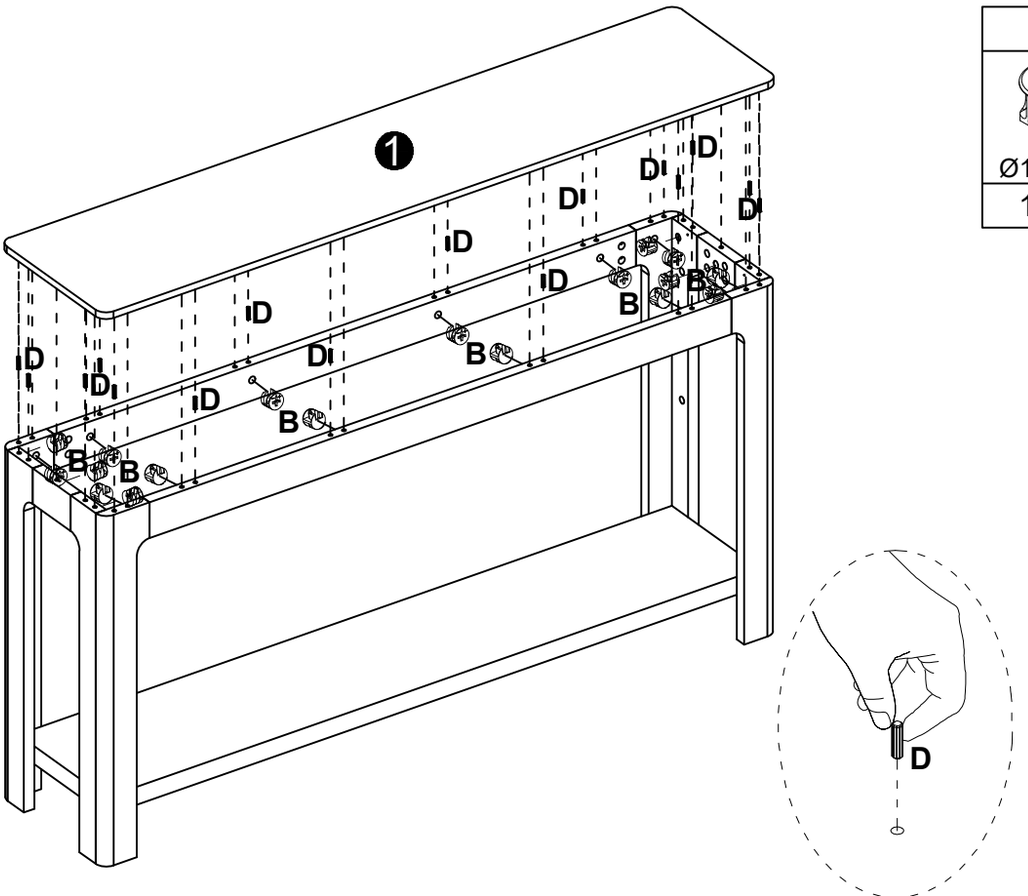


B	D
	
Ø15x12mm	Ø8x30mm
18 pcs	16 pcs


Step 1

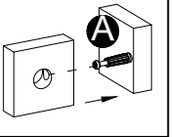

Step 2

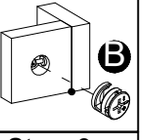



Step 3

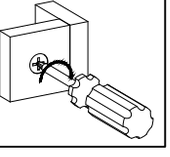


8


E	G
 Ø3.5x14mm	
16 pcs	8 pcs

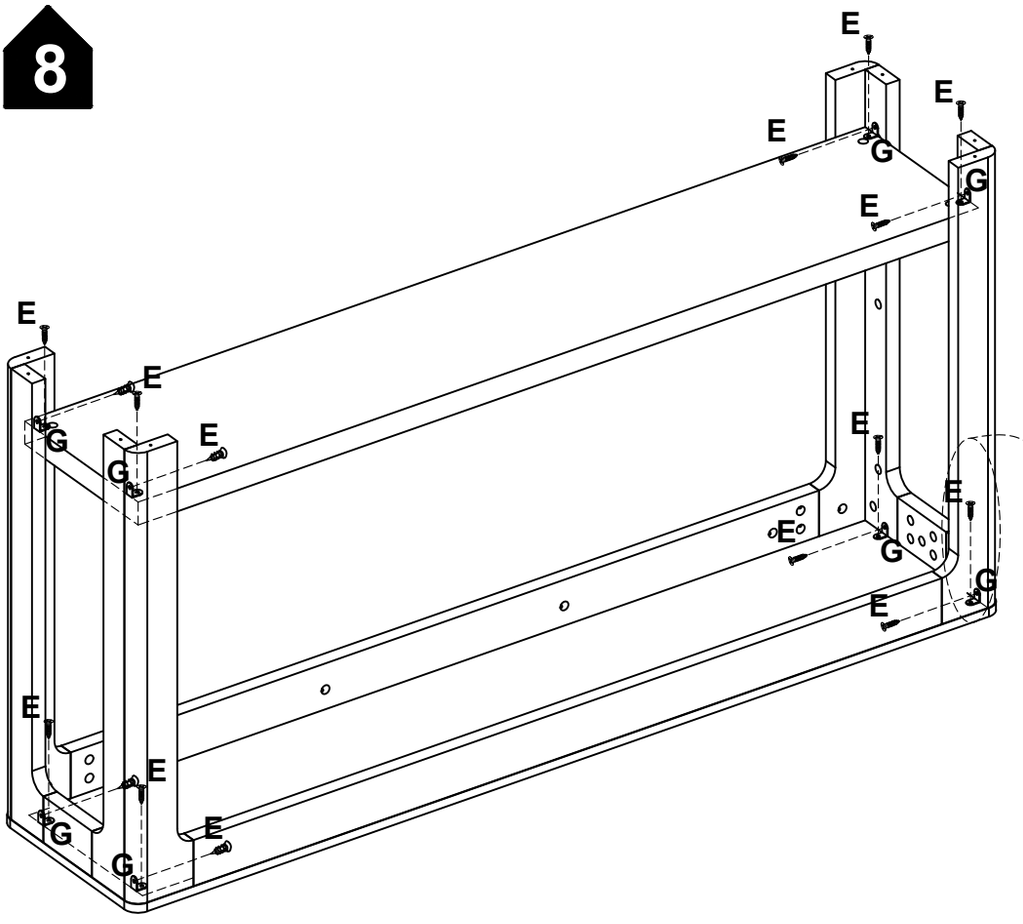


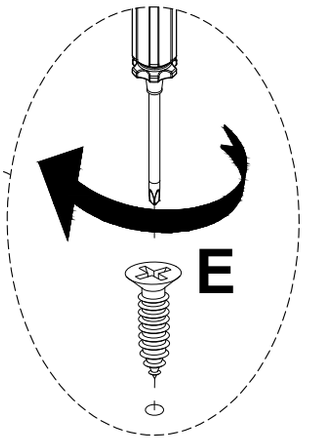

9


F
 Ø14x4mm
8 pcs

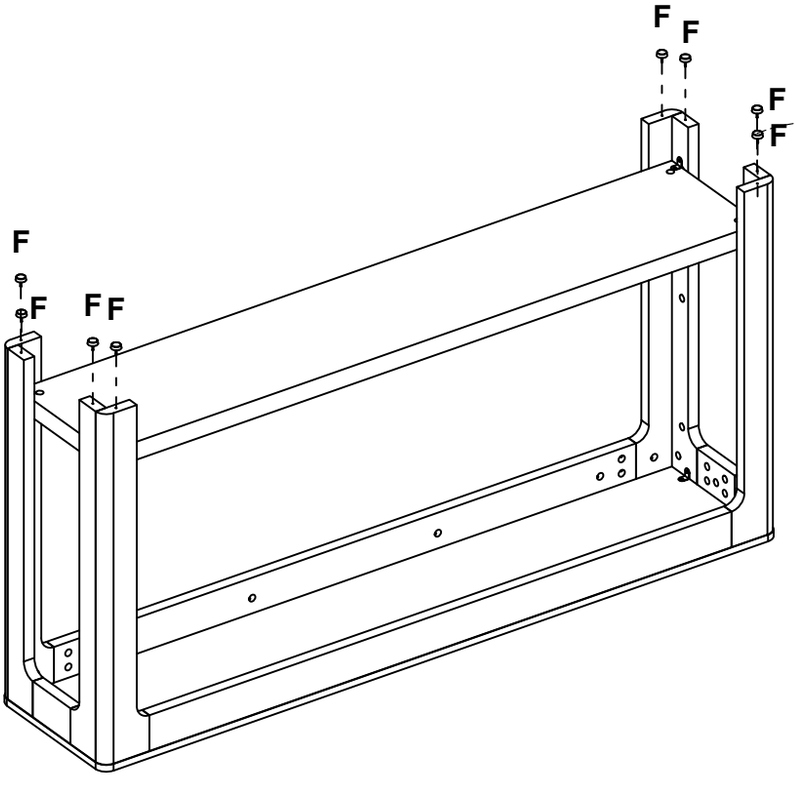


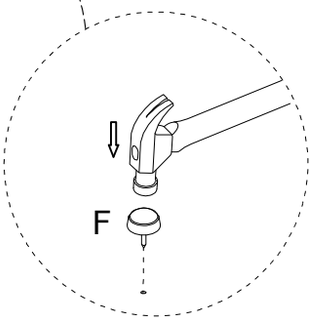


Caution! Tap lightly

10

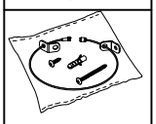I

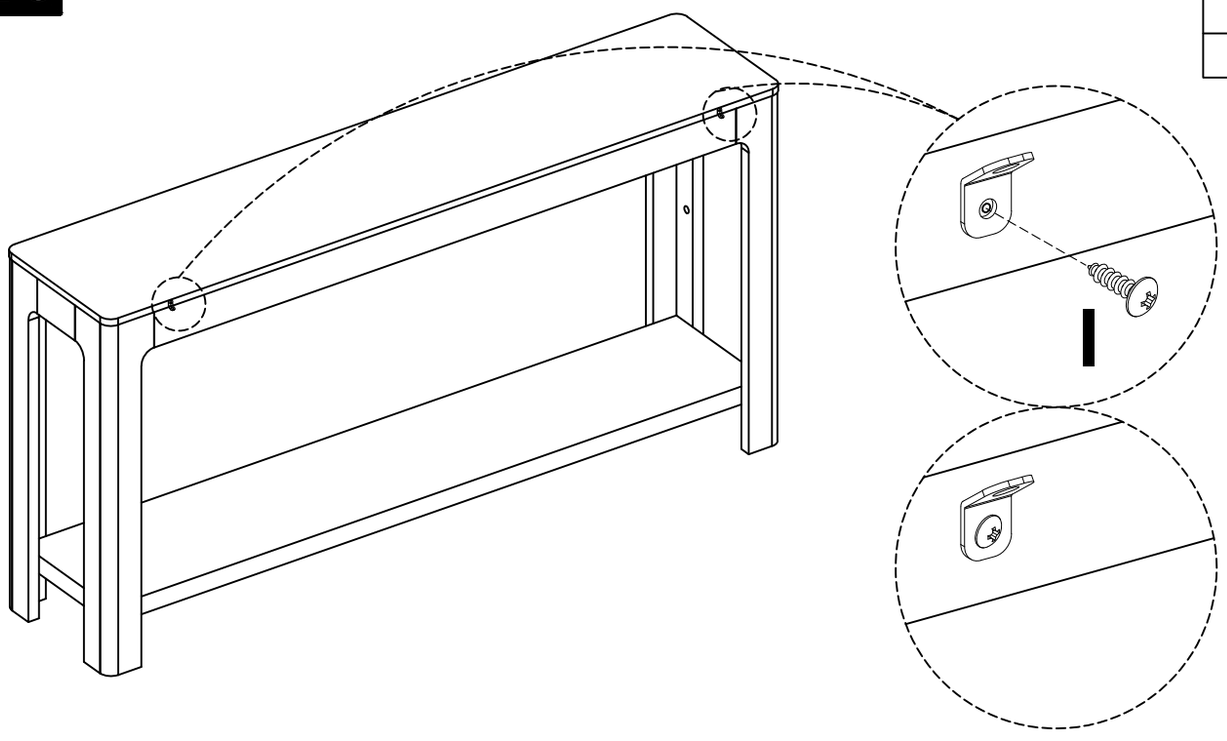2 pcs

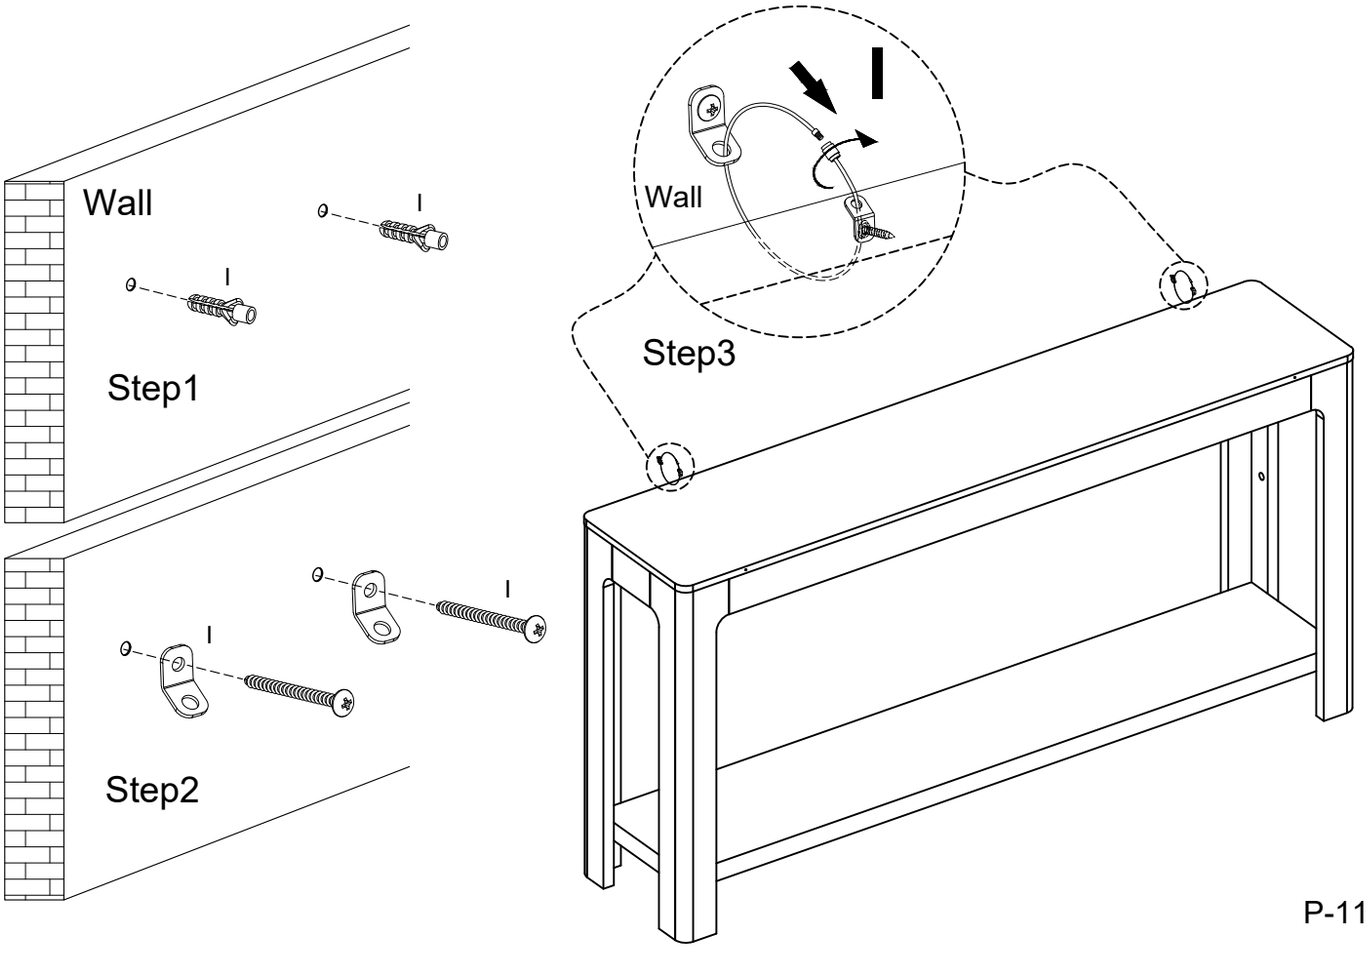




Tribesigns

DESIGNED FOR LIFE

Thank you for your support!

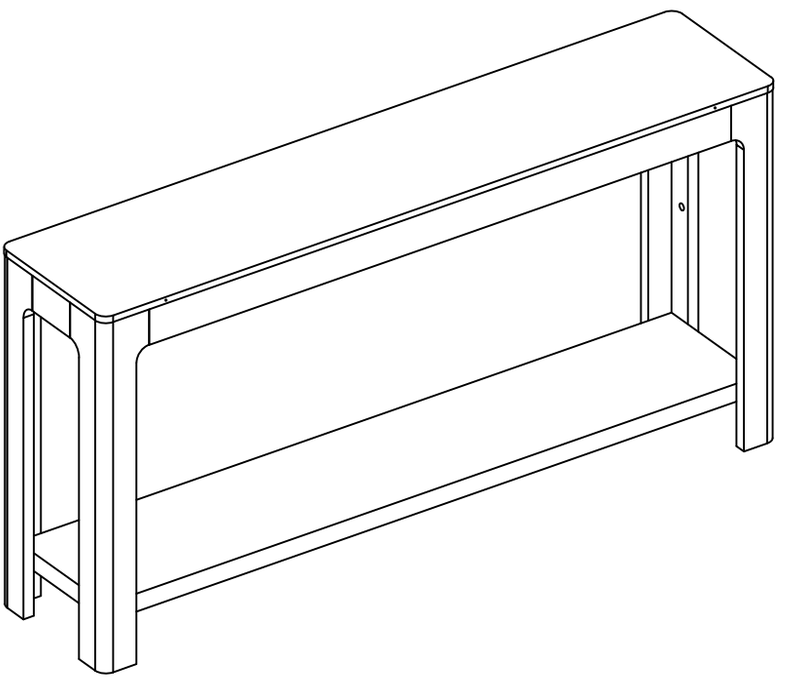

Contact our customer service team

support@tribesigns.com
www.tribesigns.com

1-424-220-6888
7 AM to 8 PM EST,
Monday to Friday

Follow Tribesigns

Facebook | Instagram | Pinterest | Twitter | YouTube | TikTok | WhatsApp