
S01B


Installation Instructions

Sliding Shower and Bath Doors

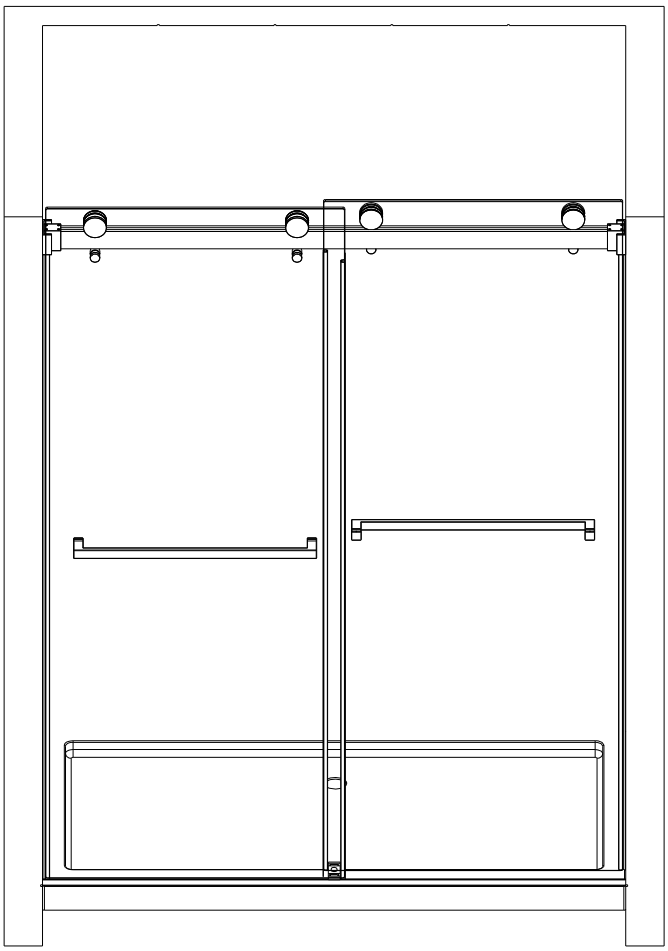

Scan for **YouTube HD** Product Install Video

Scan QR Code for Installation Video

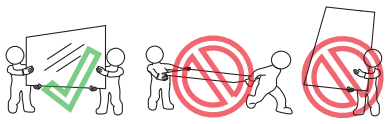

This door requires professional installation. Two installers are recommended.


All plastic bags are not toys. Keep them out of reach of infants and children to prevent choking

V04-2026


Tools




Level




Tape Measure



Pencil



Phillips Screwdriver



Silicone



Power Drill



Drill Bit Ø1/8" (3mm)




Drill Bit Ø3/16" (4mm)




Drill Bit Ø1/4" (6mm)




Drill Bit Ø5/16" (8mm)

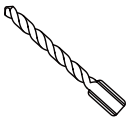

Drill Bit Ø3/8" (10mm)

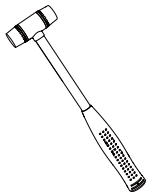

Soft Head Hammer

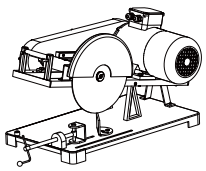


Chop saw**



Safety Glasses




Work Gloves



Hacksaw**



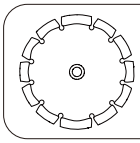


**Use the proper saw blade to cut stainless steel.



Painter's Tape




Razor Knife



Extender Driver Bit



#3 Phillips Driver Bit

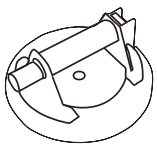

Professional-grade Glass suction cup

TIP


Measure the finished opening before proceeding with the installation to be sure that the correct model size has been ordered.

Be sure to cover the shower drain to prevent losing small parts.

Threshold must be level; Walls must be plumb.

Parts
1/1


Shower Door Components - Detailed Diagram

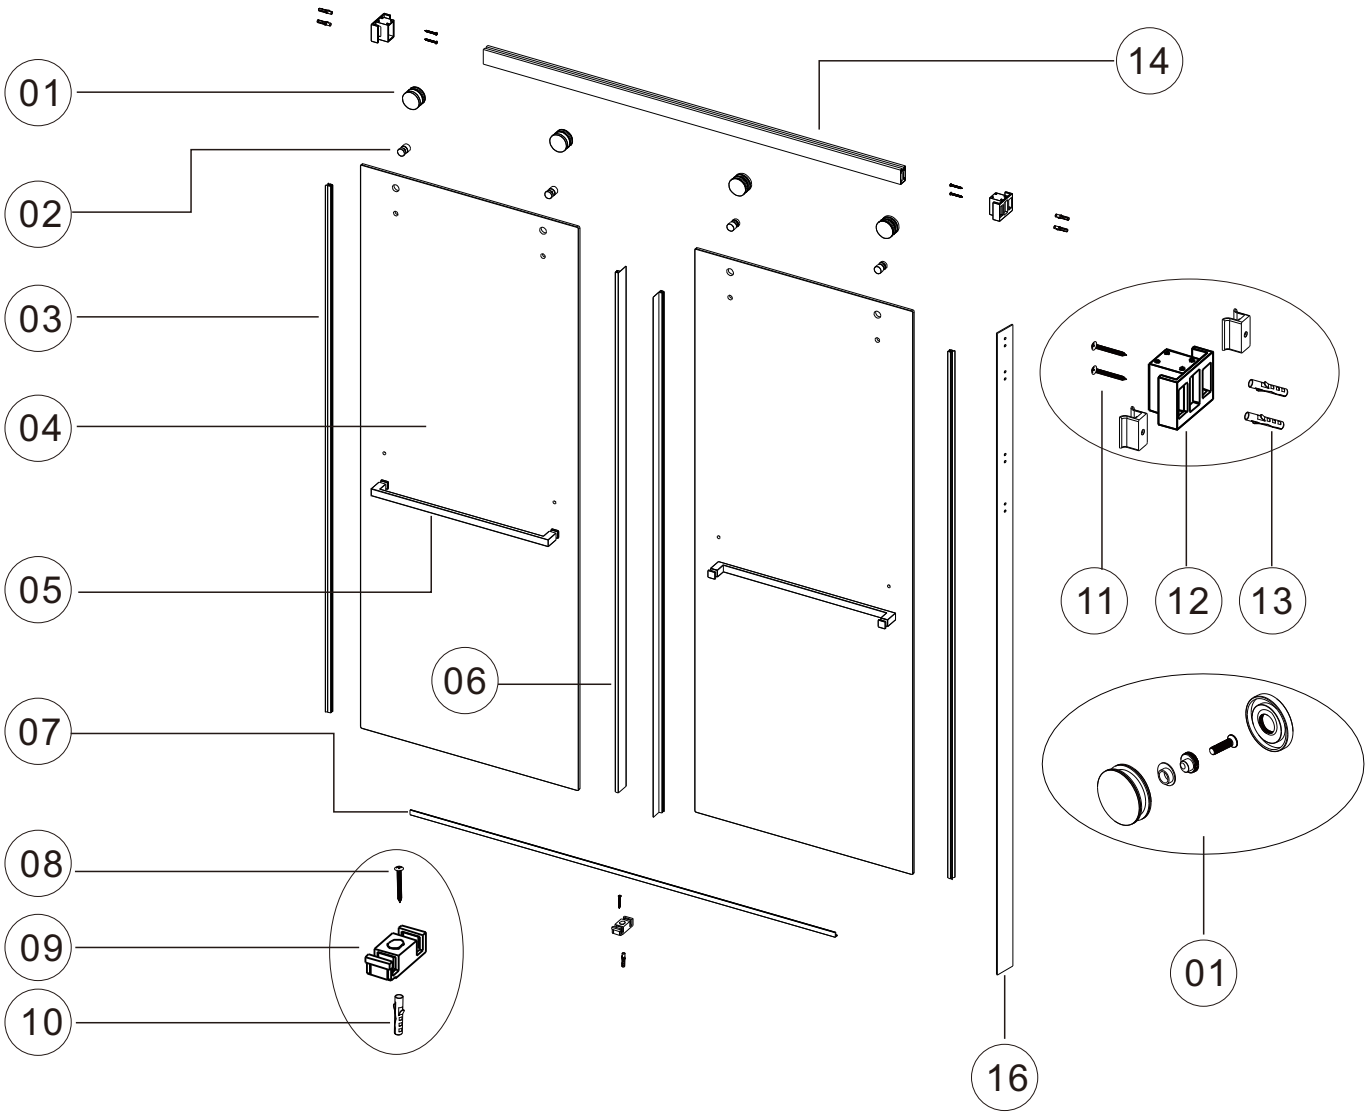


01 Roller Assembly x4	02 Anti-Jump Pin x4	03 Bulb Vinyl Strip x2	04 Sliding Glass x2	05 Handle x2	06 Vertical Vinyl Strip x2
07 Bottom Threshold x1	08 St4x30 Countersunk screw x1	09 Guide block (with caps) x1	10 Wall anchor (1/4"/6mm) x1	11 St5x60 Truss Head Screw x4	12 Wall Bracket x2
13 Wall anchor (5/16"/8mm) x4	14 Top guide Rail x1	15 Allen wrench (2.5/3/4/5) set	16 Quick Positioning Plate x1		

Spec
1/1

Dual Hand Configuration Available

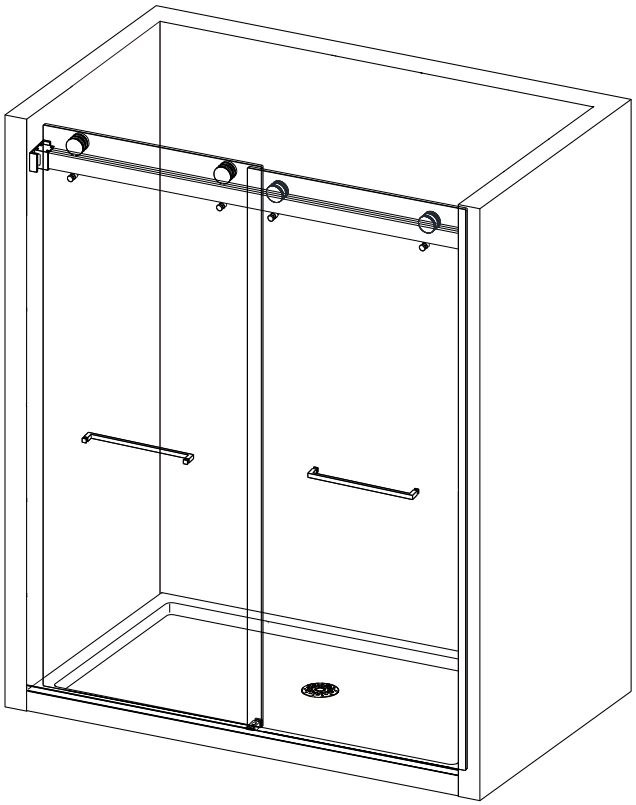

Left-hand installation

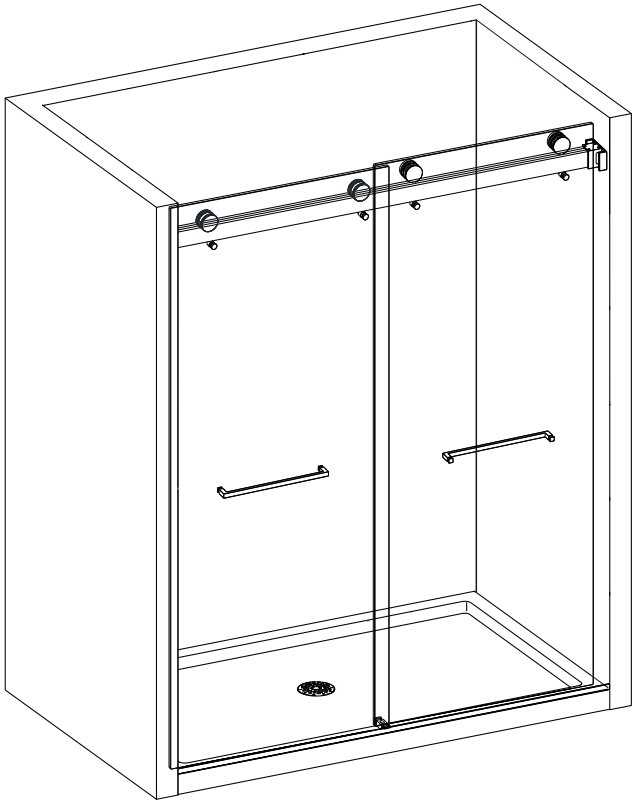


Right-hand installation

NOTE

This enclosure supports both left-hand and right-hand installation; instructions are demonstrated based on right-hand configuration, with left-hand setup following identical procedures.

Inst.Steps
1/1

Check Shower Base/Floor Level and Wall Plumb

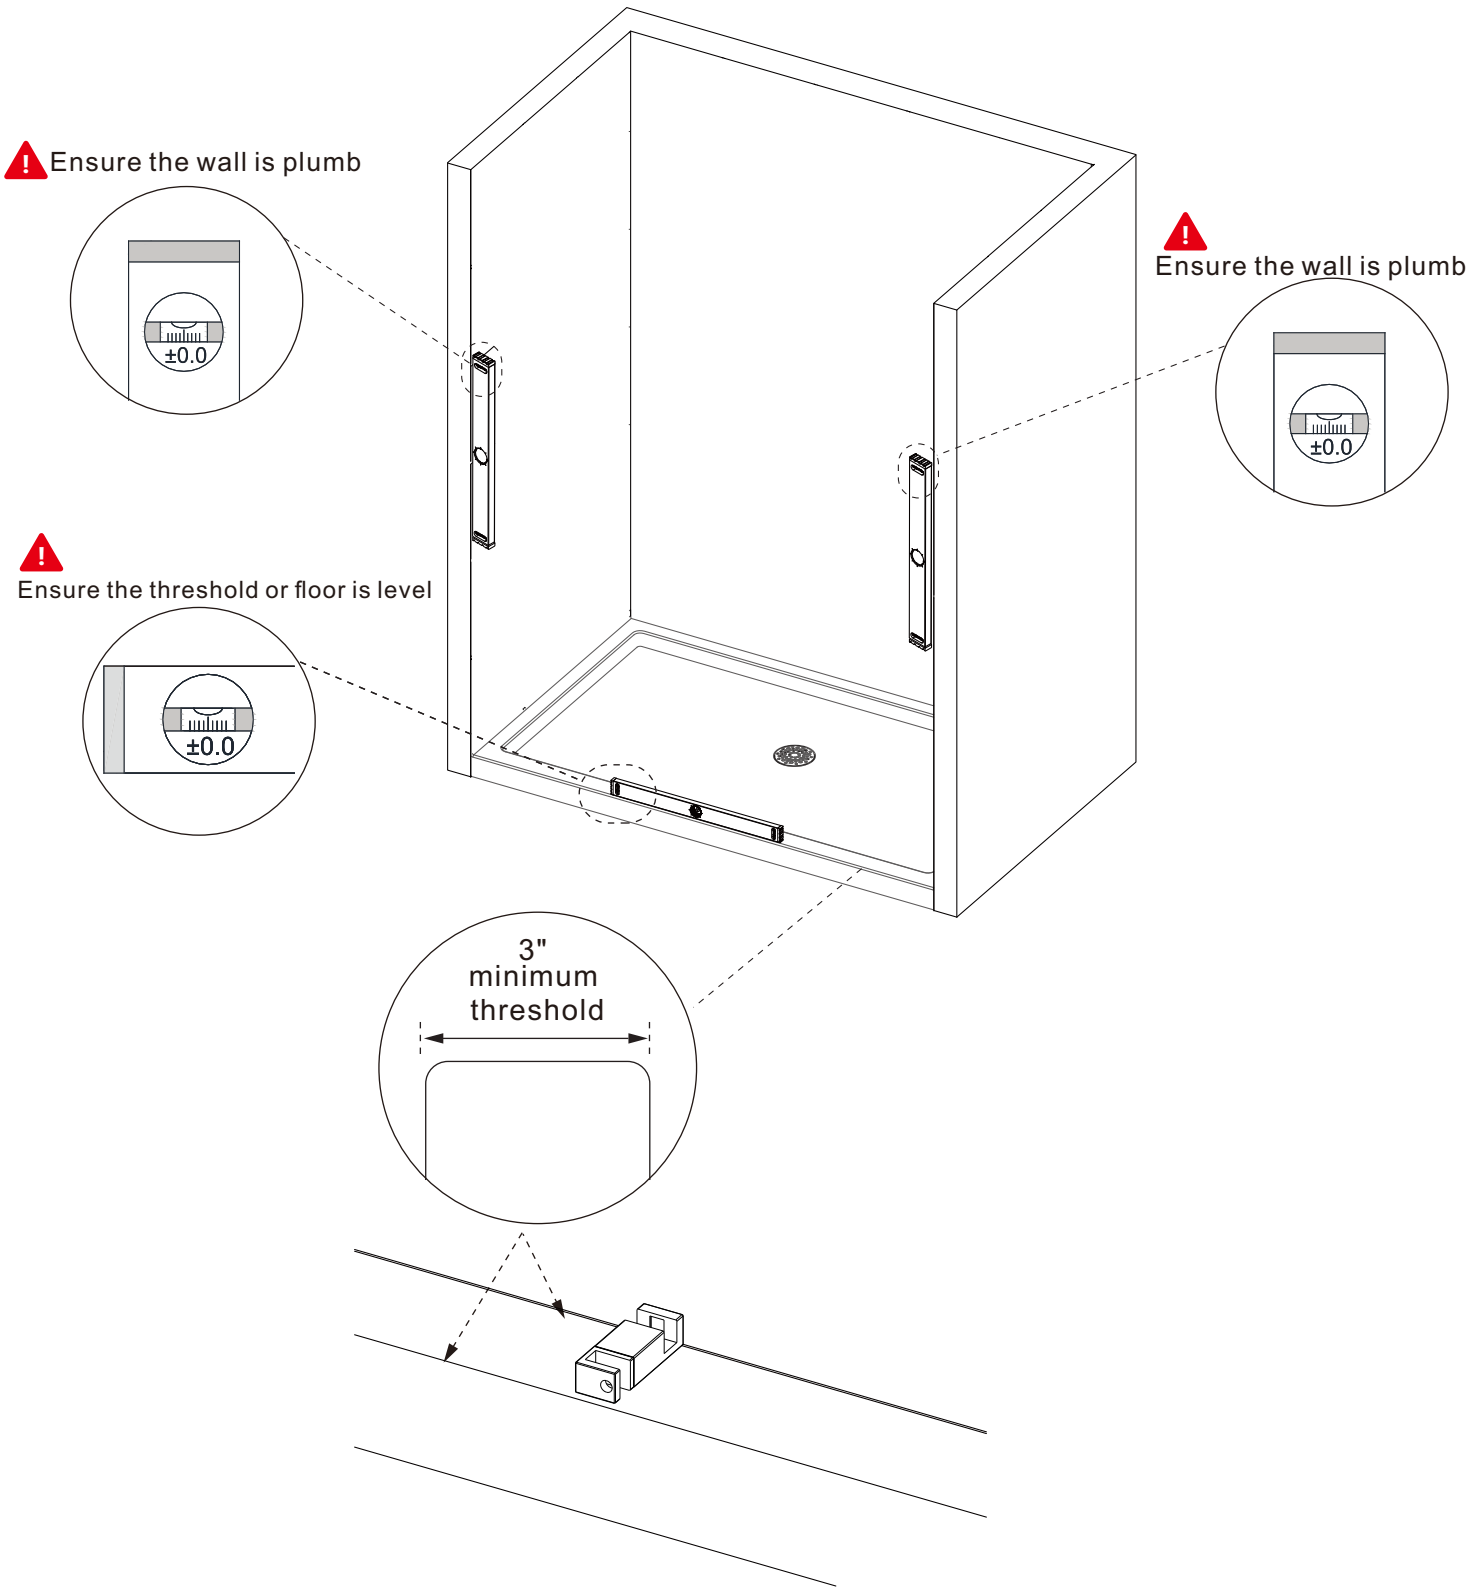


NOTE

If installed on a threshold, the shower door requires a minimum of 3 inches (3") of flat threshold space.


Inst.Steps

2/1


Measure Installation Width, Then Cut The Top Guide Rail To Fit

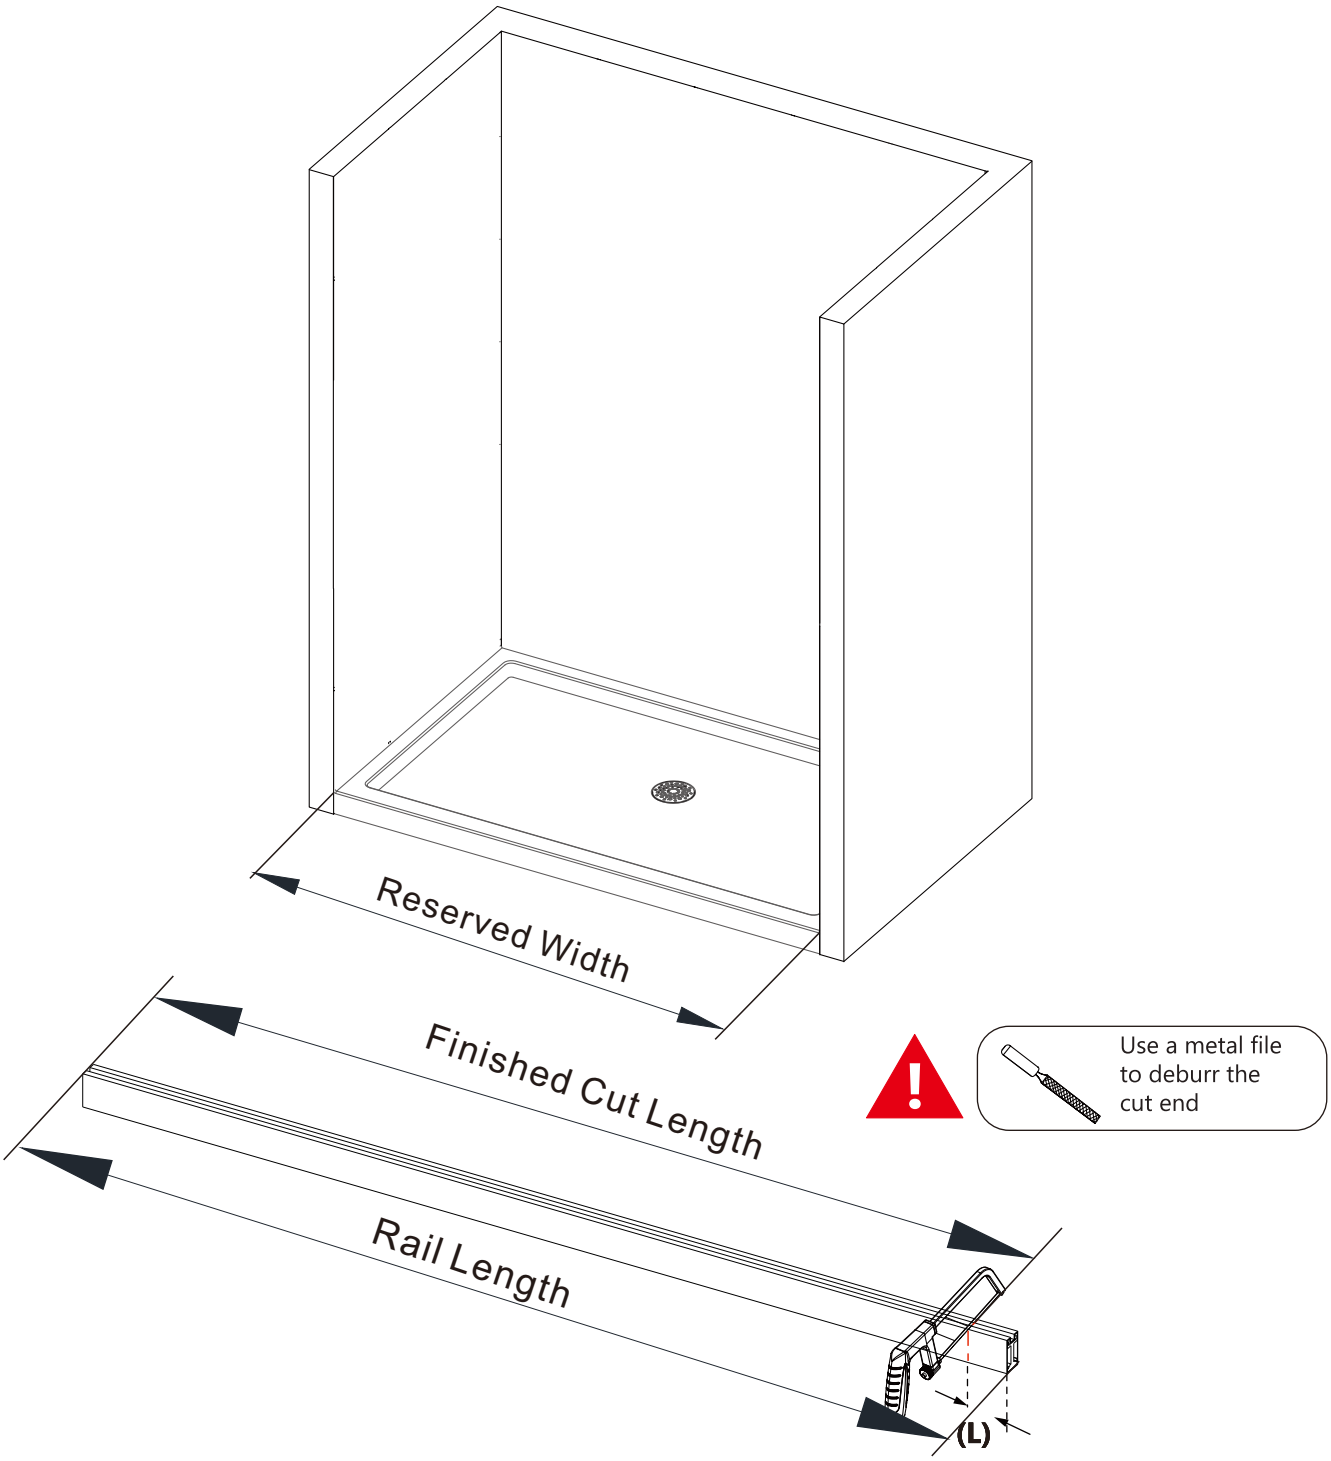

Use a metal file to deburr the cut end

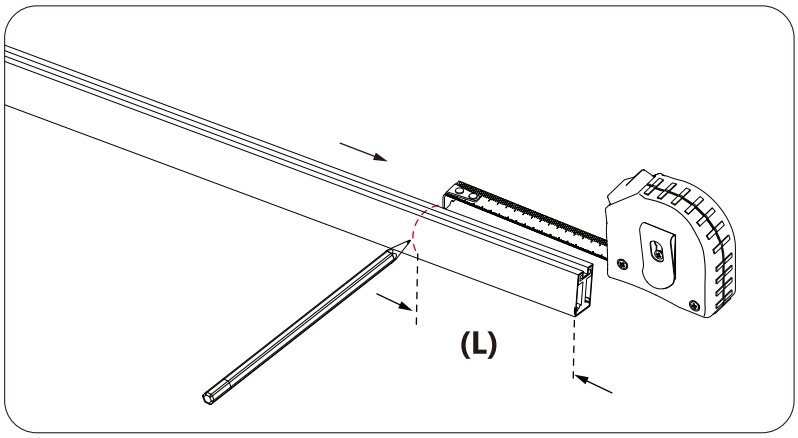

Tools Need

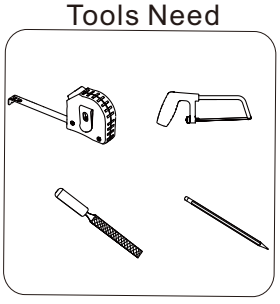

Inst.Steps
2/2


Measure Install Width Cut Rail To Fit

Reserved Width, Rail Length & Finished Cut Length（Table 1）			
NO	Reserved Width	Rail Length	Finished Cut Length
1	44"（1118mm）~45"（1143mm）（Incl. 44 "）	46 7/8"（1190mm）	42 7/8"（1089mm）~43 7/8"（1114mm）
2	45"（1143mm）~46"（1168mm）（Incl. 45 "）	46 7/8"（1190mm）	43 7/8"（1114mm）~44 7/8"（1139mm）
3	46"（1168mm）~47"（1193mm）（Incl. 46 "）	46 7/8"（1190mm）	44 7/8"（1139mm）~45 7/8"（1164mm）
4	47"（1193mm）~48"（1219mm）（Incl. 47 "）	46 7/8"（1190mm）	45 7/8"（1164mm）~46 7/8"（1190mm）
5	50"（1270mm）~51"（1295mm）（Incl. 50 "）	52 7/8"（1342mm）	48 7/8"（1241mm）~49 7/8"（1267mm）
6	51"（1295mm）~52"（1320mm）（Incl. 51 "）	52 7/8"（1342mm）	49 7/8"（1266mm）~50 7/8"（1292mm）
7	52"（1320mm）~53"（1346mm）（Incl. 52 "）	52 7/8"（1342mm）	50 7/8"（1291mm）~51 7/8"（1318mm）
8	53"（1346mm）~54"（1371mm）（Incl. 53 "）	52 7/8"（1342mm）	51 7/8"（1317mm）~52 7/8"（1342mm）
9	56"（1422mm）~57"（1447mm）（Incl. 56 "）	58 5/8"（1490mm）	54 5/8"（1388mm）~55 5/8"（1413mm）
10	57"（1447mm）~58"（1473mm）（Incl. 57 "）	58 5/8"（1490mm）	55 5/8"（1413mm）~56 5/8"（1439mm）
11	58"（1473mm）~59"（1498mm）（Incl. 58 "）	58 5/8"（1490mm）	56 5/8"（1439mm）~57 5/8"（1464mm）
12	59"（1498mm）~60"（1524mm）（Incl. 59 "）	58 5/8"（1490mm）	57 5/8"（1464mm）~58 5/8"（1490mm）
13	62"（1574mm）~63"（1600mm）（Incl. 62 "）	64 5/8"（1642mm）	60 5/8"（1540mm）~61 5/8"（1566mm）
14	63"（1600mm）~64"（1625mm）（Incl. 63 "）	64 5/8"（1642mm）	61 5/8"（1566mm）~62 5/8"（1591mm）
15	64"（1625mm）~65"（1651mm）（Incl. 64 "）	64 5/8"（1642mm）	62 5/8"（1591mm）~63 5/8"（1617mm）
16	65"（1651mm）~66"（1676mm）（Incl. 65 "）	64 5/8"（1642mm）	63 5/8"（1617mm）~64 5/8"（1642mm）
17	68"（1727mm）~69"（1752mm）（Incl. 68 "）	70 5/8"（1795mm）	66 5/8"（1694mm）~67 5/8"（1719mm）
18	69"（1752mm）~70"（1778mm）（Incl. 69 "）	70 5/8"（1795mm）	67 5/8"（1719mm）~68 5/8"（1745mm）
19	70"（1778mm）~71"（1803mm）（Incl. 70 "）	70 5/8"（1795mm）	68 5/8"（1745mm）~69 5/8"（1770mm）
20	71"（1803mm）~72"（1828mm）（Incl. 71 "）	70 5/8"（1795mm）	69 5/8"（1770mm）~70 5/8"（1795mm）

Inst.Steps
3/1

Measure Wall Bracket Holes

Height of the Wall Bracket Holes		
No	Height of the Shower Door	Height of the Wall Bracket Holes
1	60"/1524mm	62 1/4"/1413mm
1	66"/1676mm	62 1/4"/1565mm
2	76"/1930mm	72 1/4"/1819mm
3	78"/1981mm	74 1/4"/1868mm
4	80"/2032mm	78 1/4"/1919mm

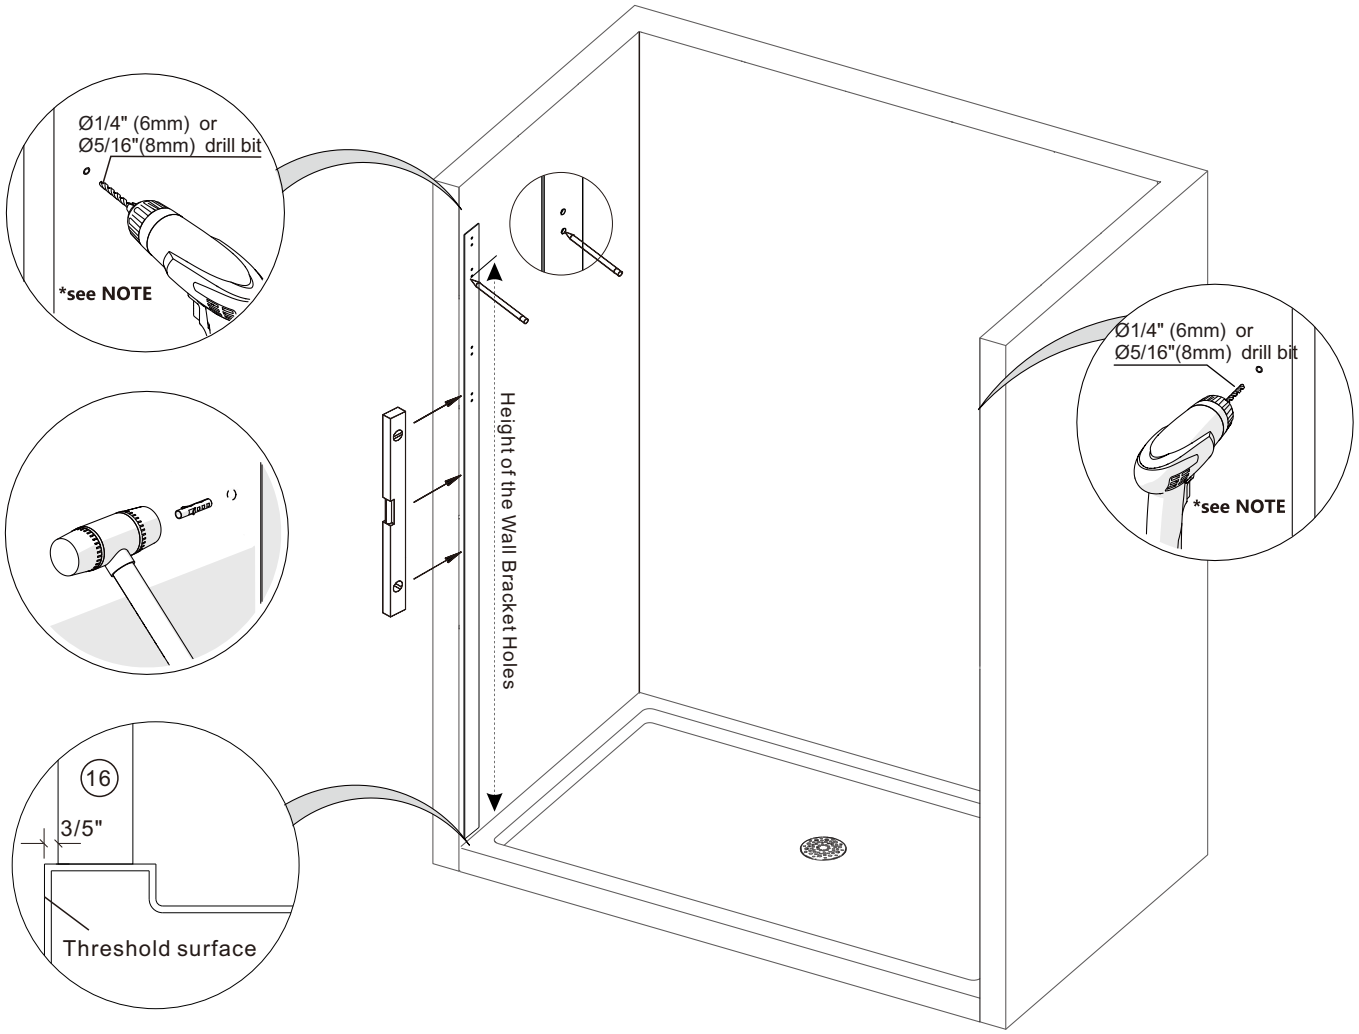

Position quick positioning plate 3/5"(16mm) from threshold edge (when installing on shower base)

Drill & Screw Recommendations by Installation Case


For Guide Rail Brackets:
- **If a stud is present behind the wall**:
  drill a **Ø1/4"(6mm)** hole up to the stud. **(recommended)**


OR
- **If no stud is present behind the wall**:
  drill a **Ø5/16"(8mm)** hole and install the **Wall Anchor .**

Parts Need	Tools Need
13 Wall Anchor (5/16"/8mm) x4	


Inst.Steps
4/1

Wall Bracket & Top Guide Rail Assembly and Installation

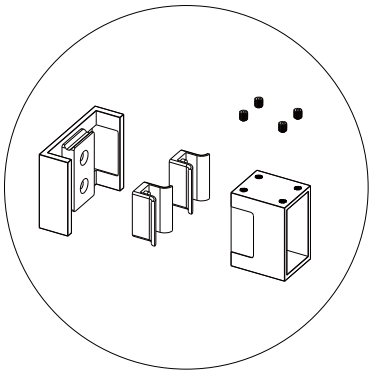


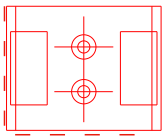

CORRECT -
recommended.


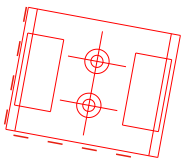


INCORRECT -
not recommended.

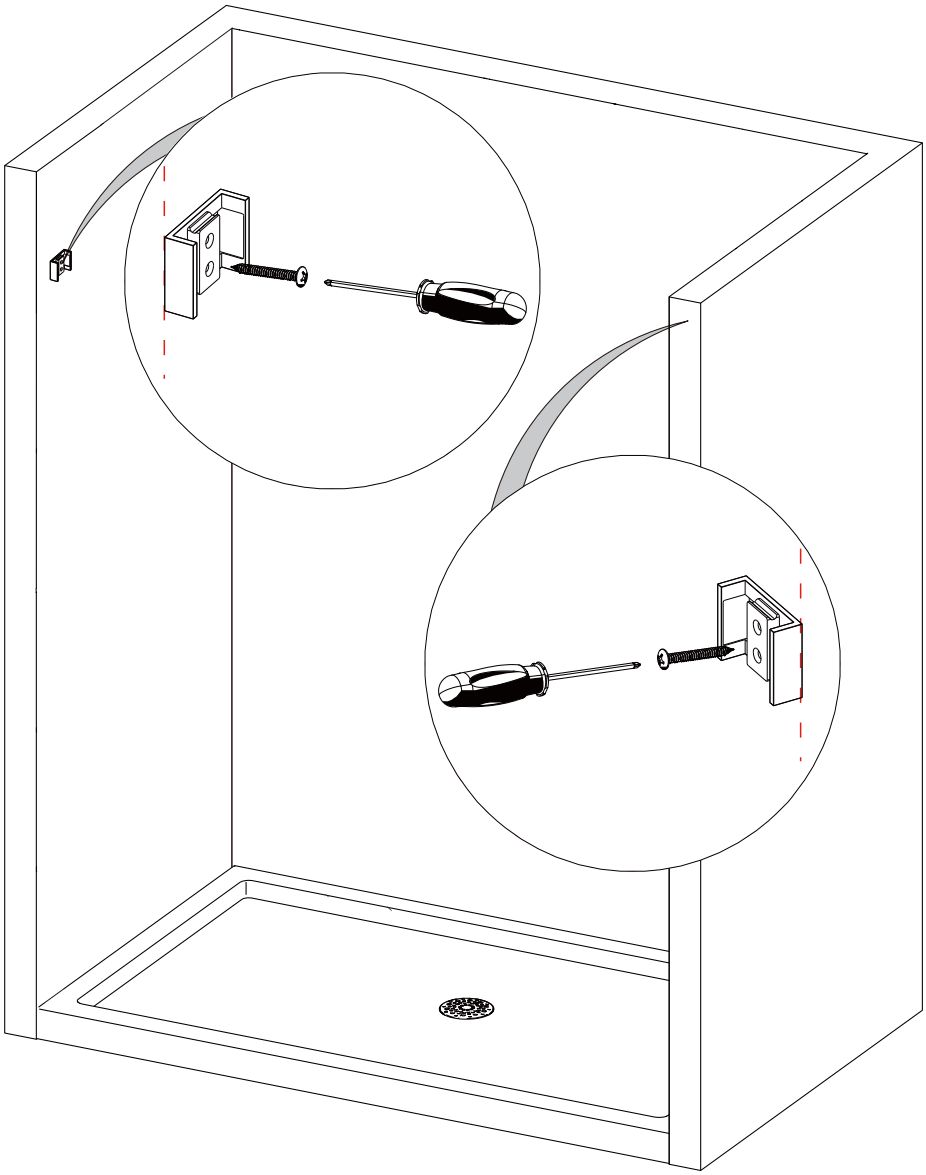


The adjustment set screws within the Guide Rail Bracket (#14) must be aligned vertically for easier access to adjust for level if necessary after the glass is installed. Align the set screws vertically and tighten.


DO NOT attach the handle to the Sliding Glass until instructed.
DO NOT attempt to lift the Sliding Glass with the handle as this may result in damage to the glass and/or serious personal injury. Use a professional grade glass suction cup and an assistant.

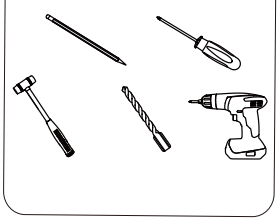
Parts Need	Tools Need
11  St5x60 Truss Head Screw x4	


Inst.Steps
5/1

Inside Sliding Glass Rollers Installation

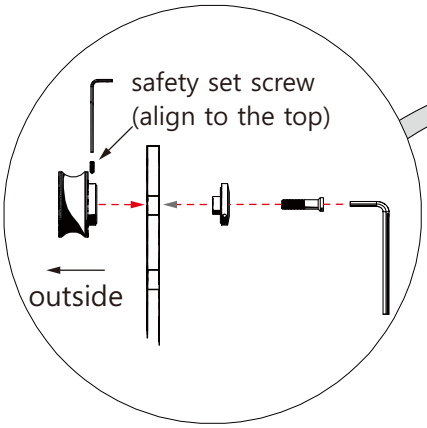

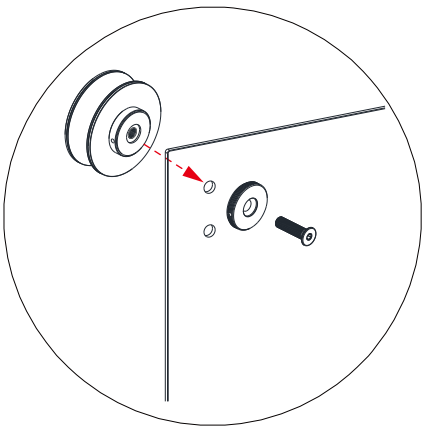




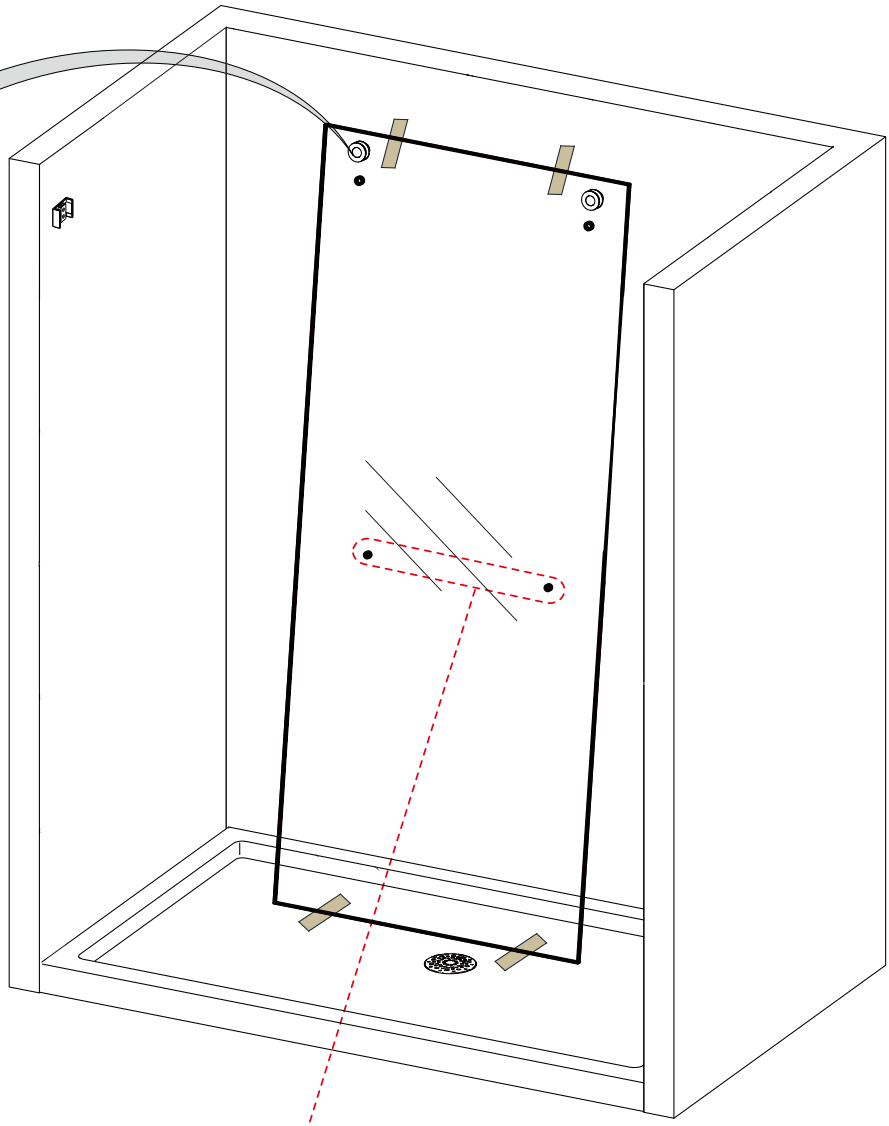


*For left-hand installation, carefully rest the left sliding glass inside the shower to await installation.

Leave the corner protectors on the glass until it is necessary to remove them

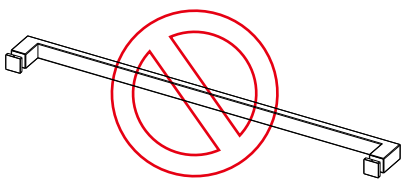

Before you install the **Sliding Glass (#04)**, attach the top **Roller Assemblies (#01)** to the **Sliding Glass (#04)** with the wheels facing outside of the shower.
Align the **safety set screw** towards the top for easier access. Then, take the **Sliding Glass (#04)** into the shower area and lean it against the wall with the handle holes on the correct side. Always use padding to protect the glass and shower surfaces.


Parts Need

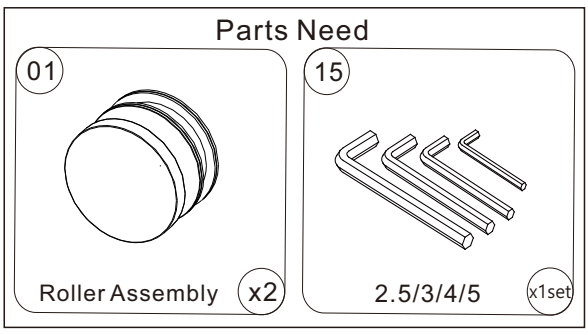

Inst.Steps
6/1

Top Guide Rail Installation

Ensure the top guide rail is level

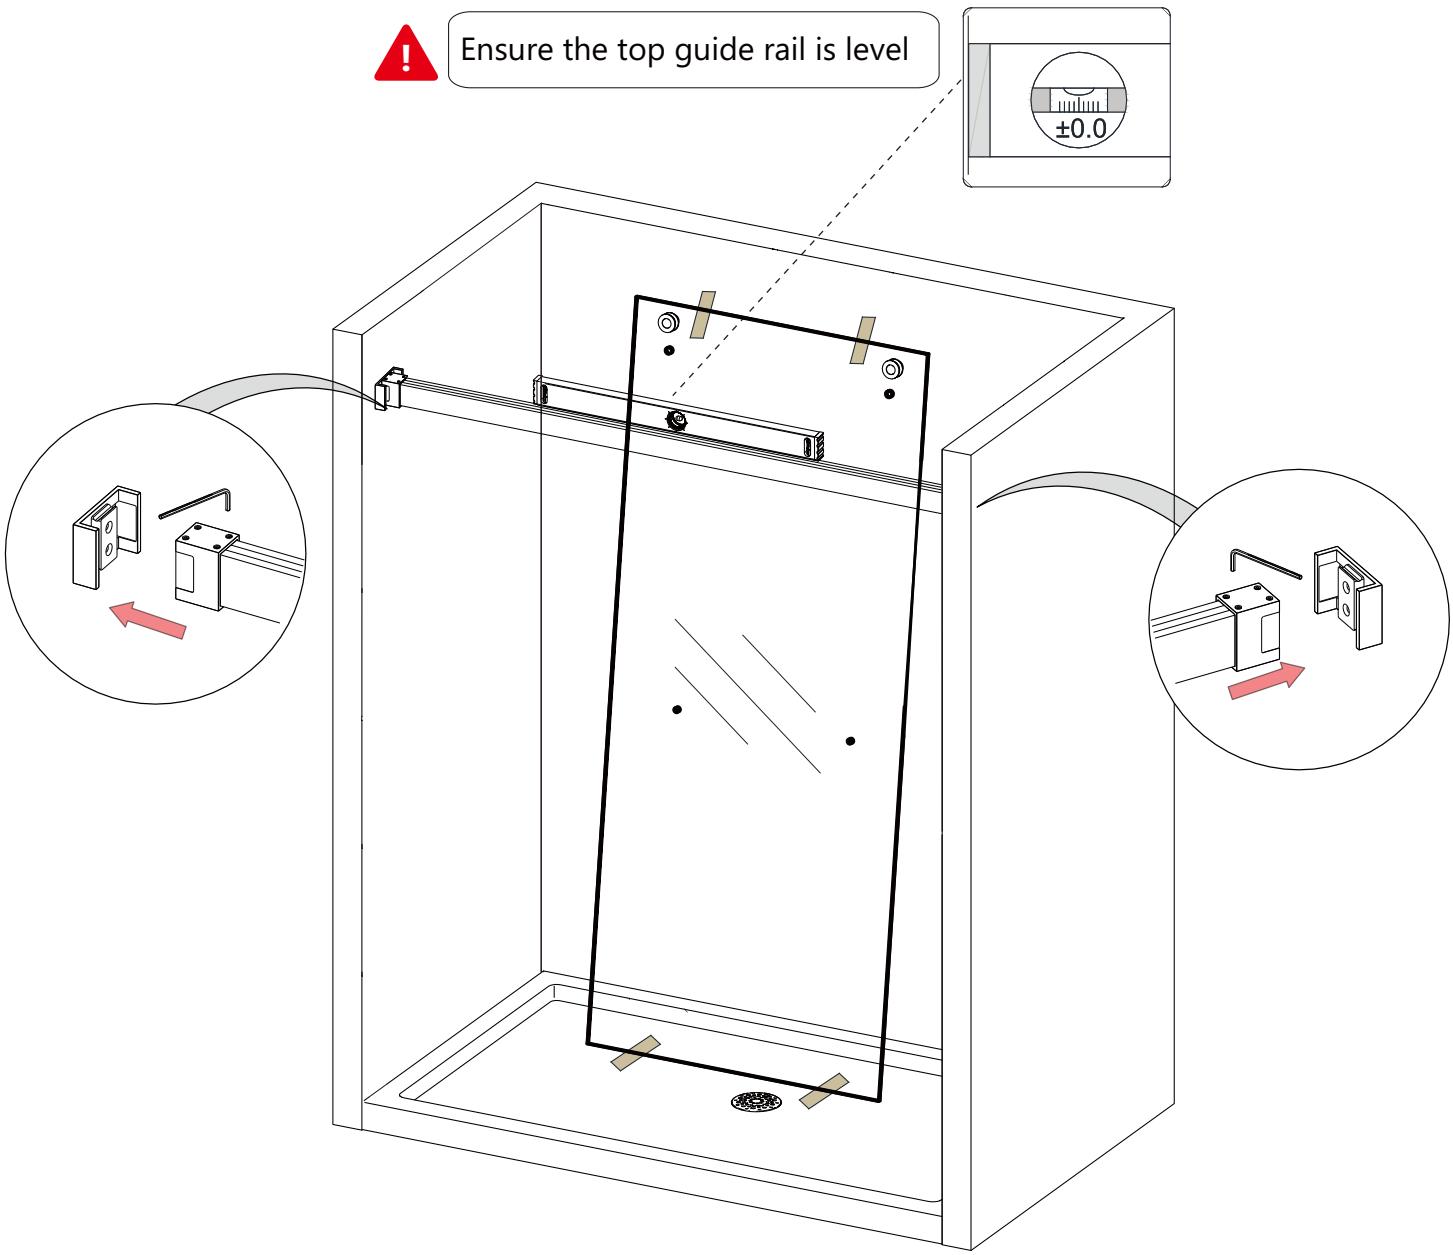




Parts Need

15	14	12
2.5/3/4/5 x1set	Top Guide Rail x1	Wall Bracket x2

Inst.Steps
7/1


Bottom Guide Block Installation

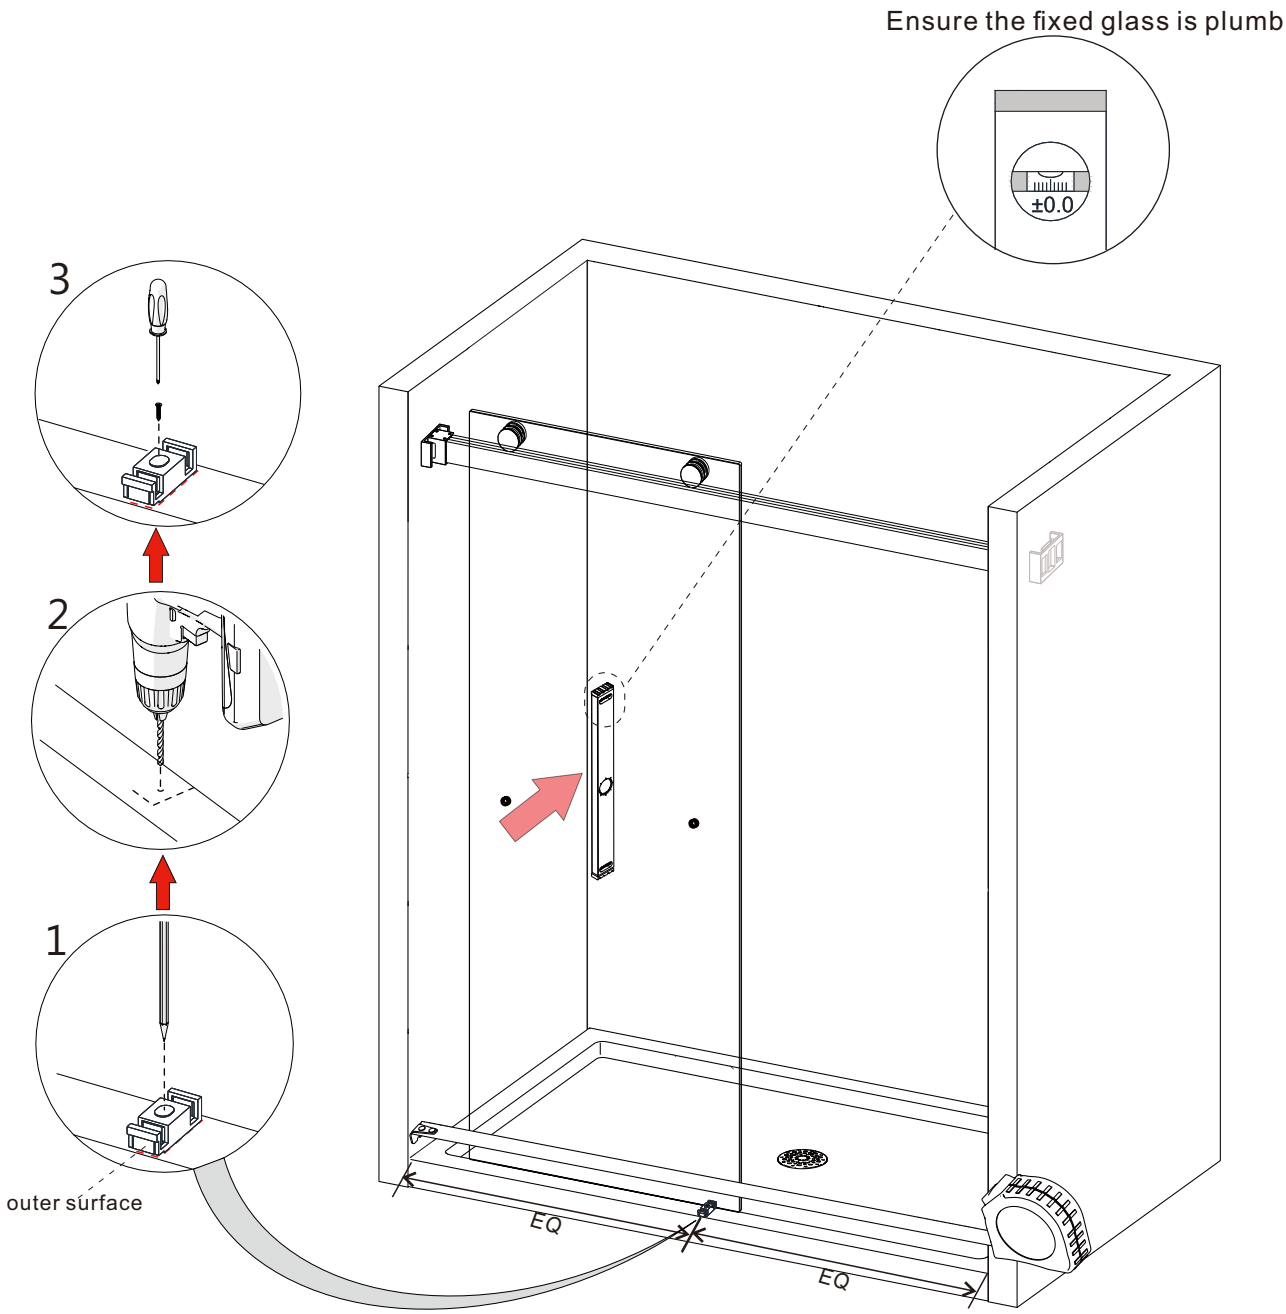


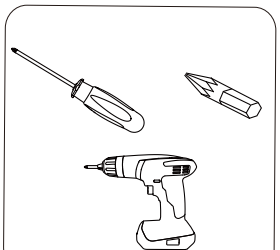Parts Need		Tools Need
08	09	
		
St4x30 Countersunk screw x1	Guide Block x1	



Inst.Steps
8/1

Outside Sliding Glass Rollers Installation

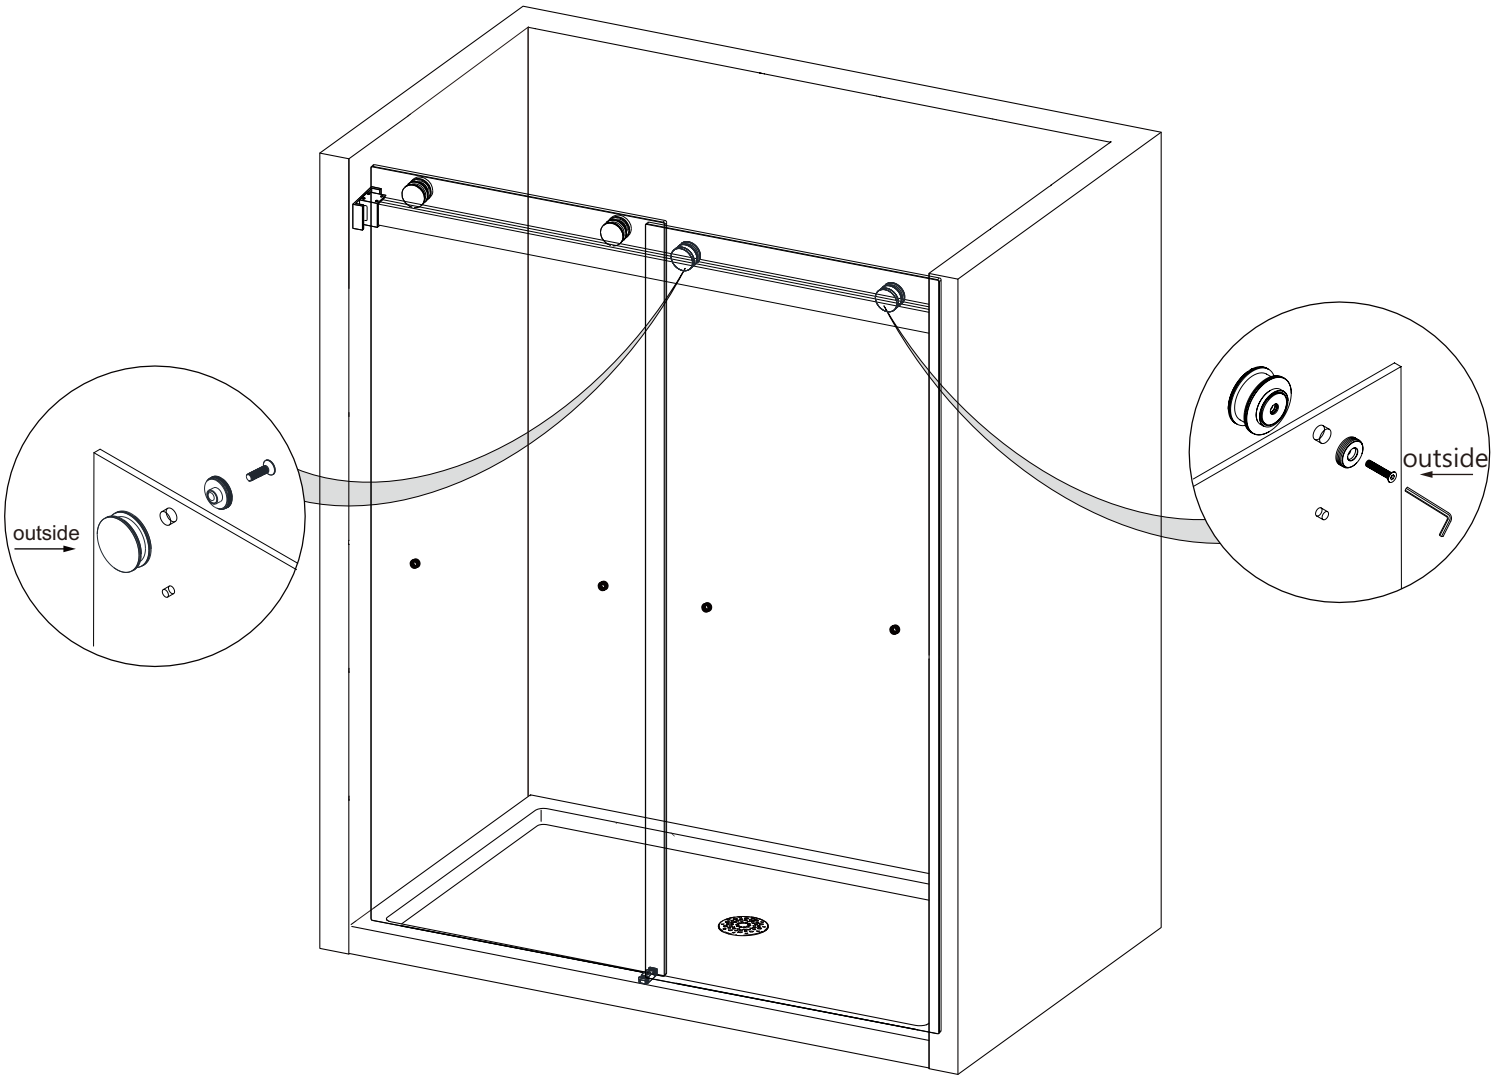

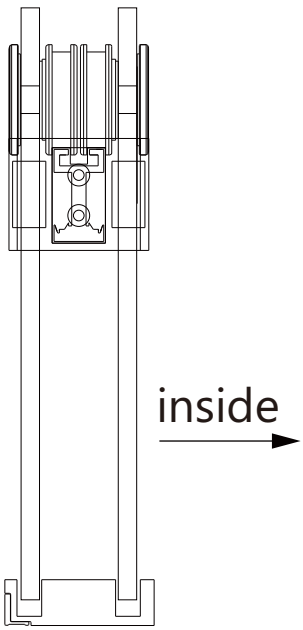



Parts Need

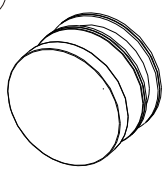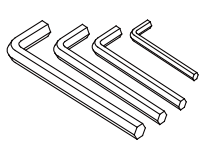01		Roller Assembly	x2
15		2.5/3/4/5	x1set


Inst.Steps
9/1

Bottom Threshold Strip Fit & Installation

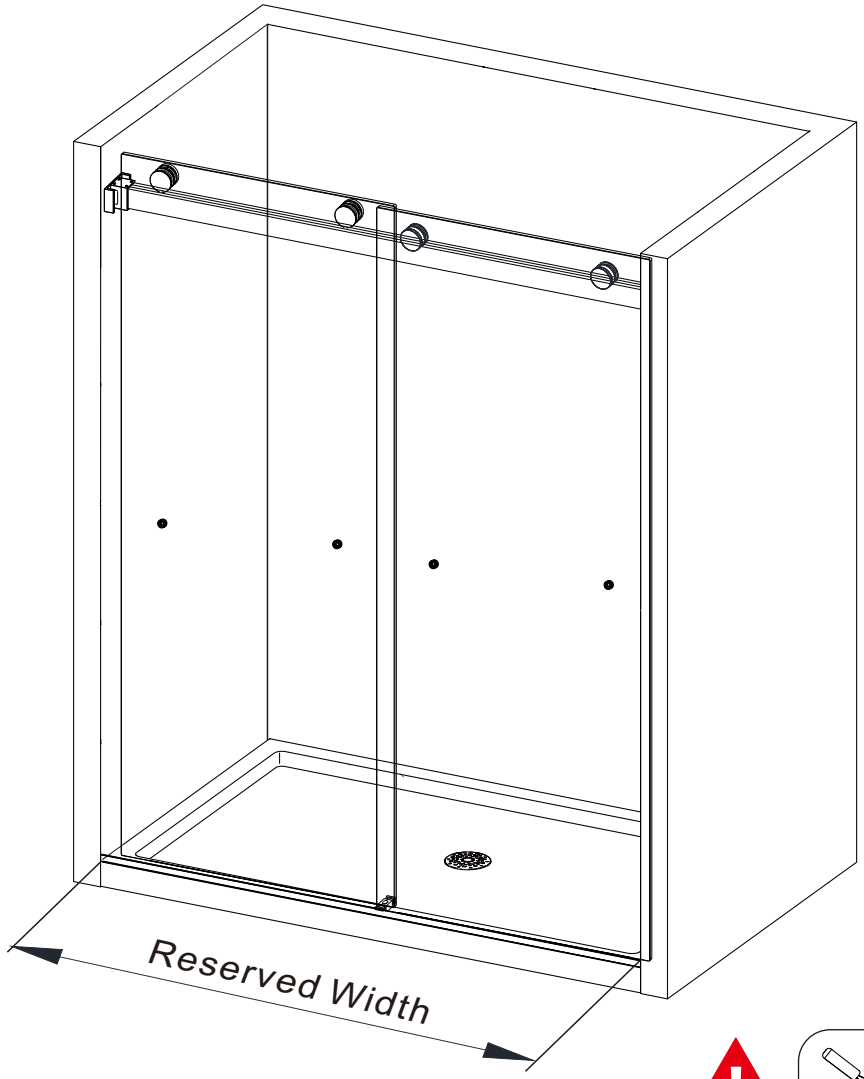

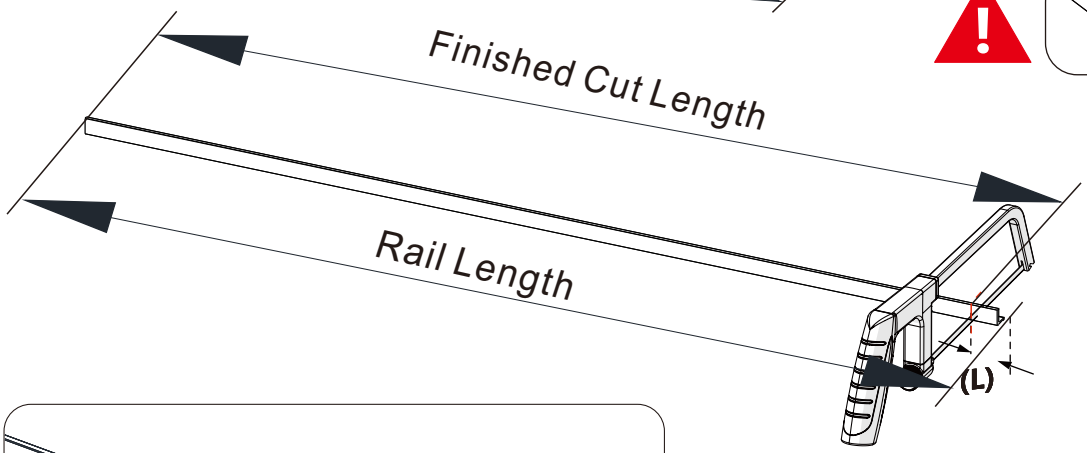


Use a metal file to deburr the cut end

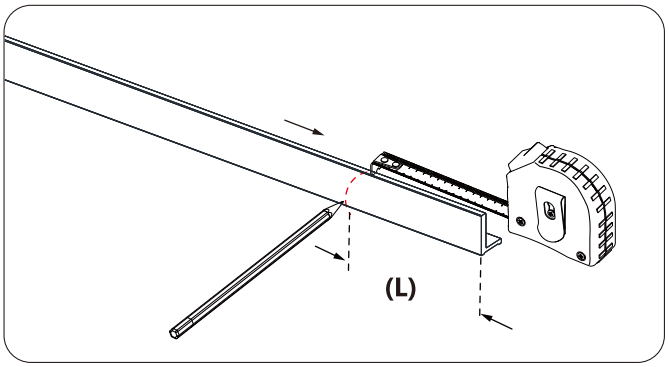


Parts Need	Tools Need
07 Bottom Threshold x1	


Inst.Steps
10/1

Inside Sliding Glass Rollers Adjustment

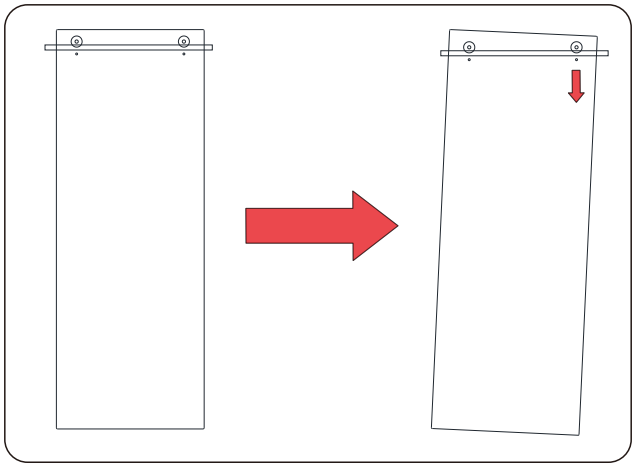

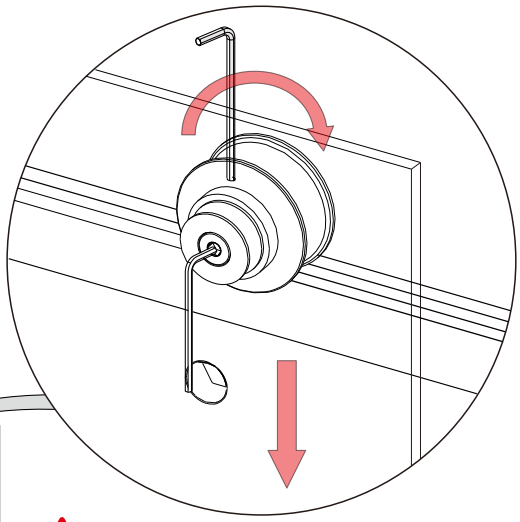


Back out screws partially

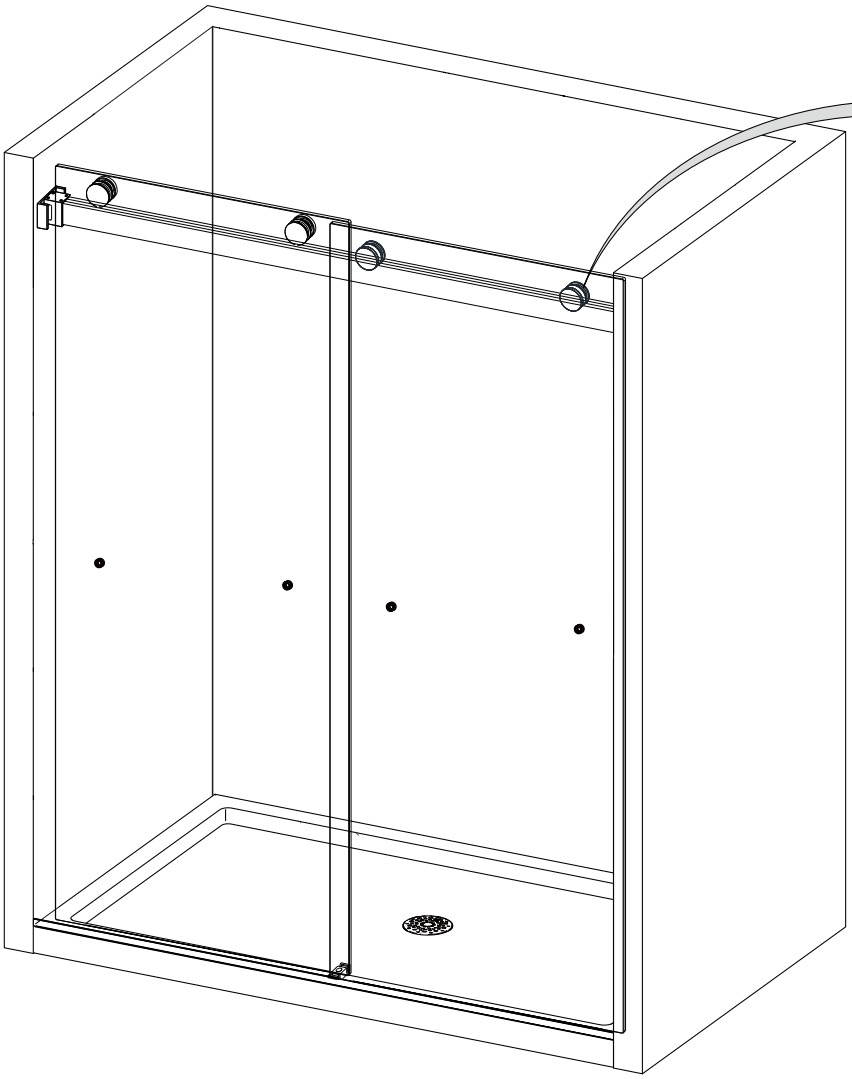


Adjust the right eccentric rollers to conform the sliding glass to snug right wall contact.

Inst.Steps
11/1

Outside Sliding Glass Rollers Adjustment

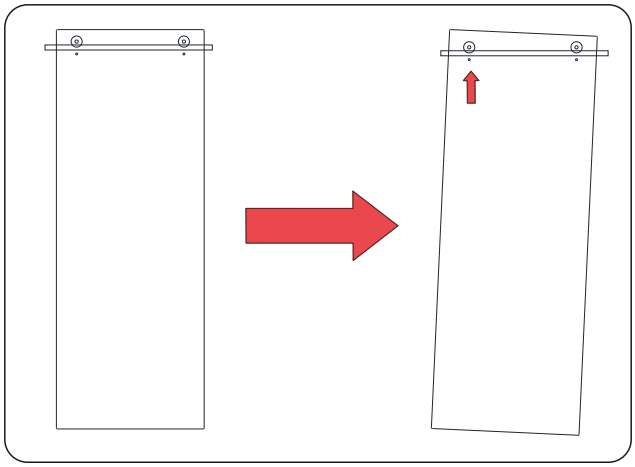

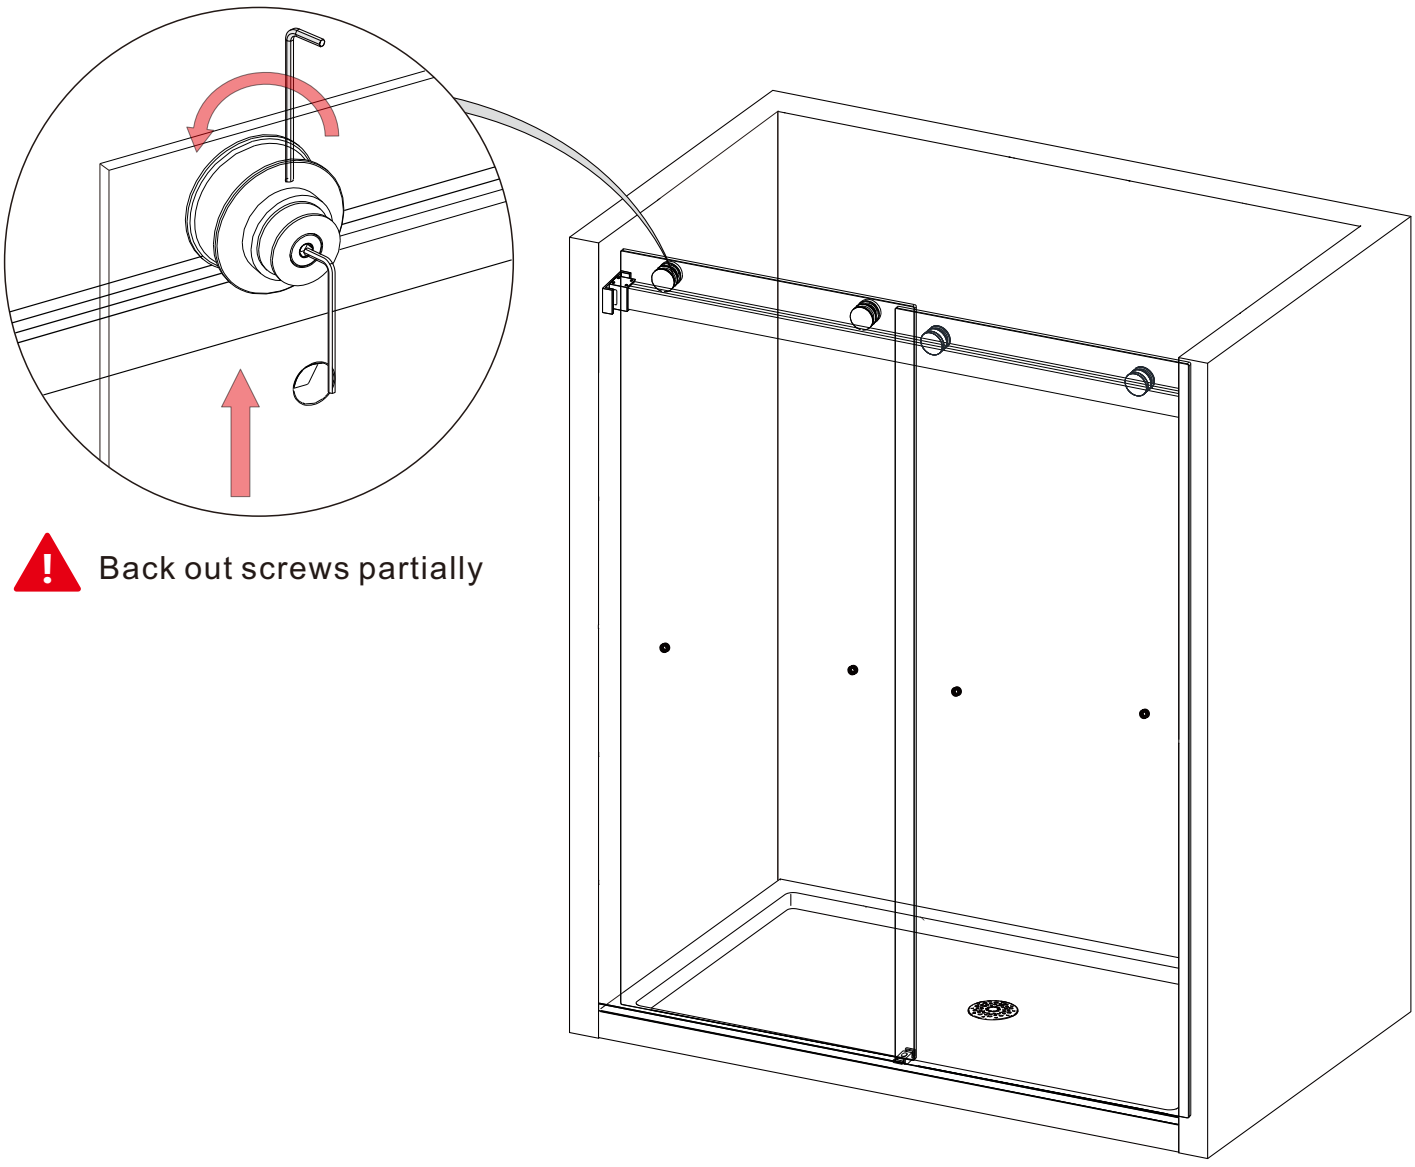



Back out screws partially

Adjust the left eccentric rollers to conform the sliding glass to snug left wall contact.

Inst.Steps
12/1


Anti-Jump Pin Installation

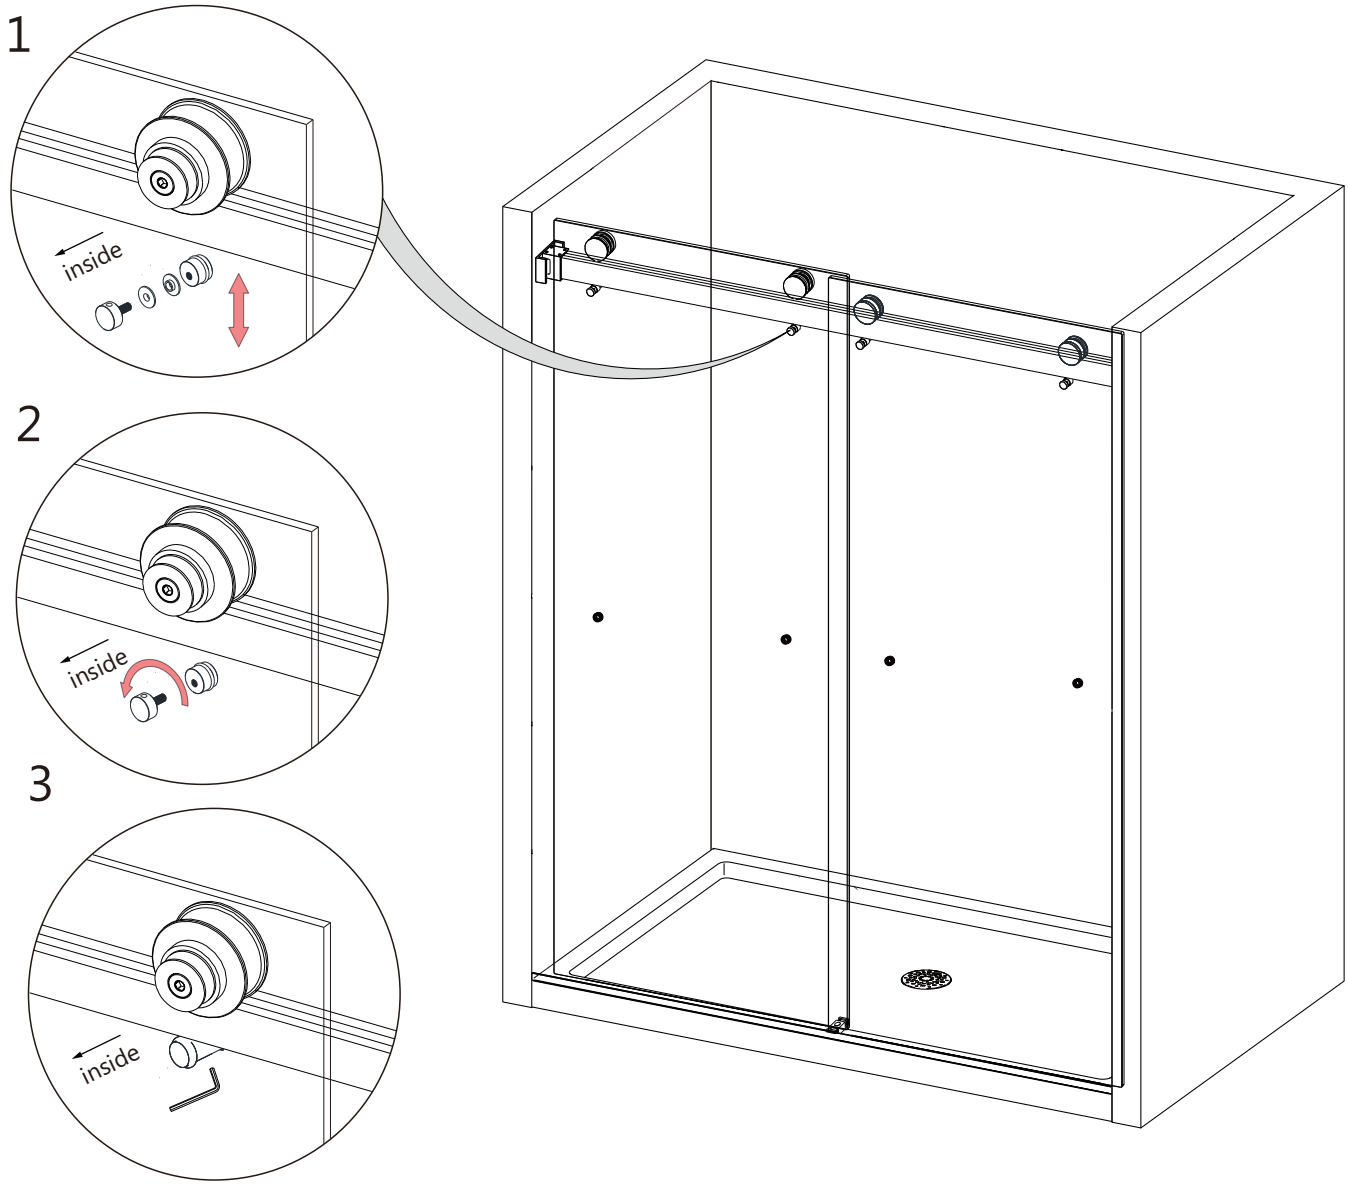

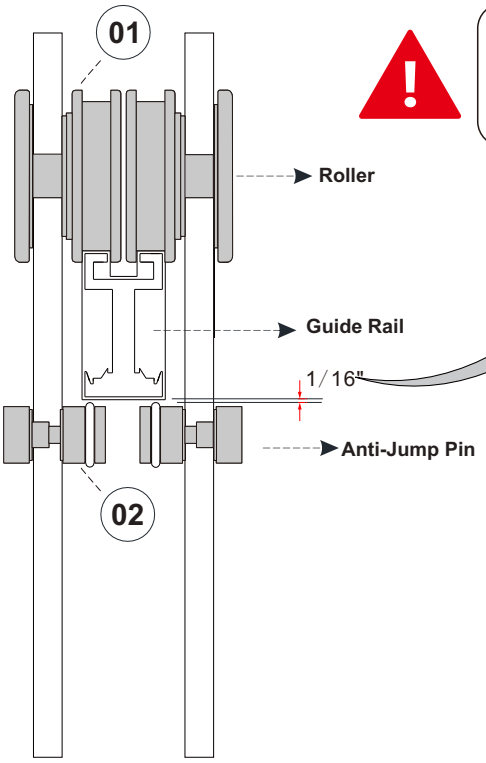


Position the anti-jump pin (#02) to leave a 1/16" gap between its top edge and the rail's bottom edge, then tighten the adjustment post.

Parts Need



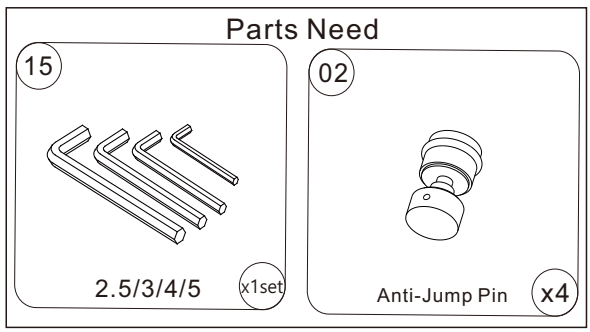


Inst.Steps
13/1

Vinyl Seals & Handle Installation

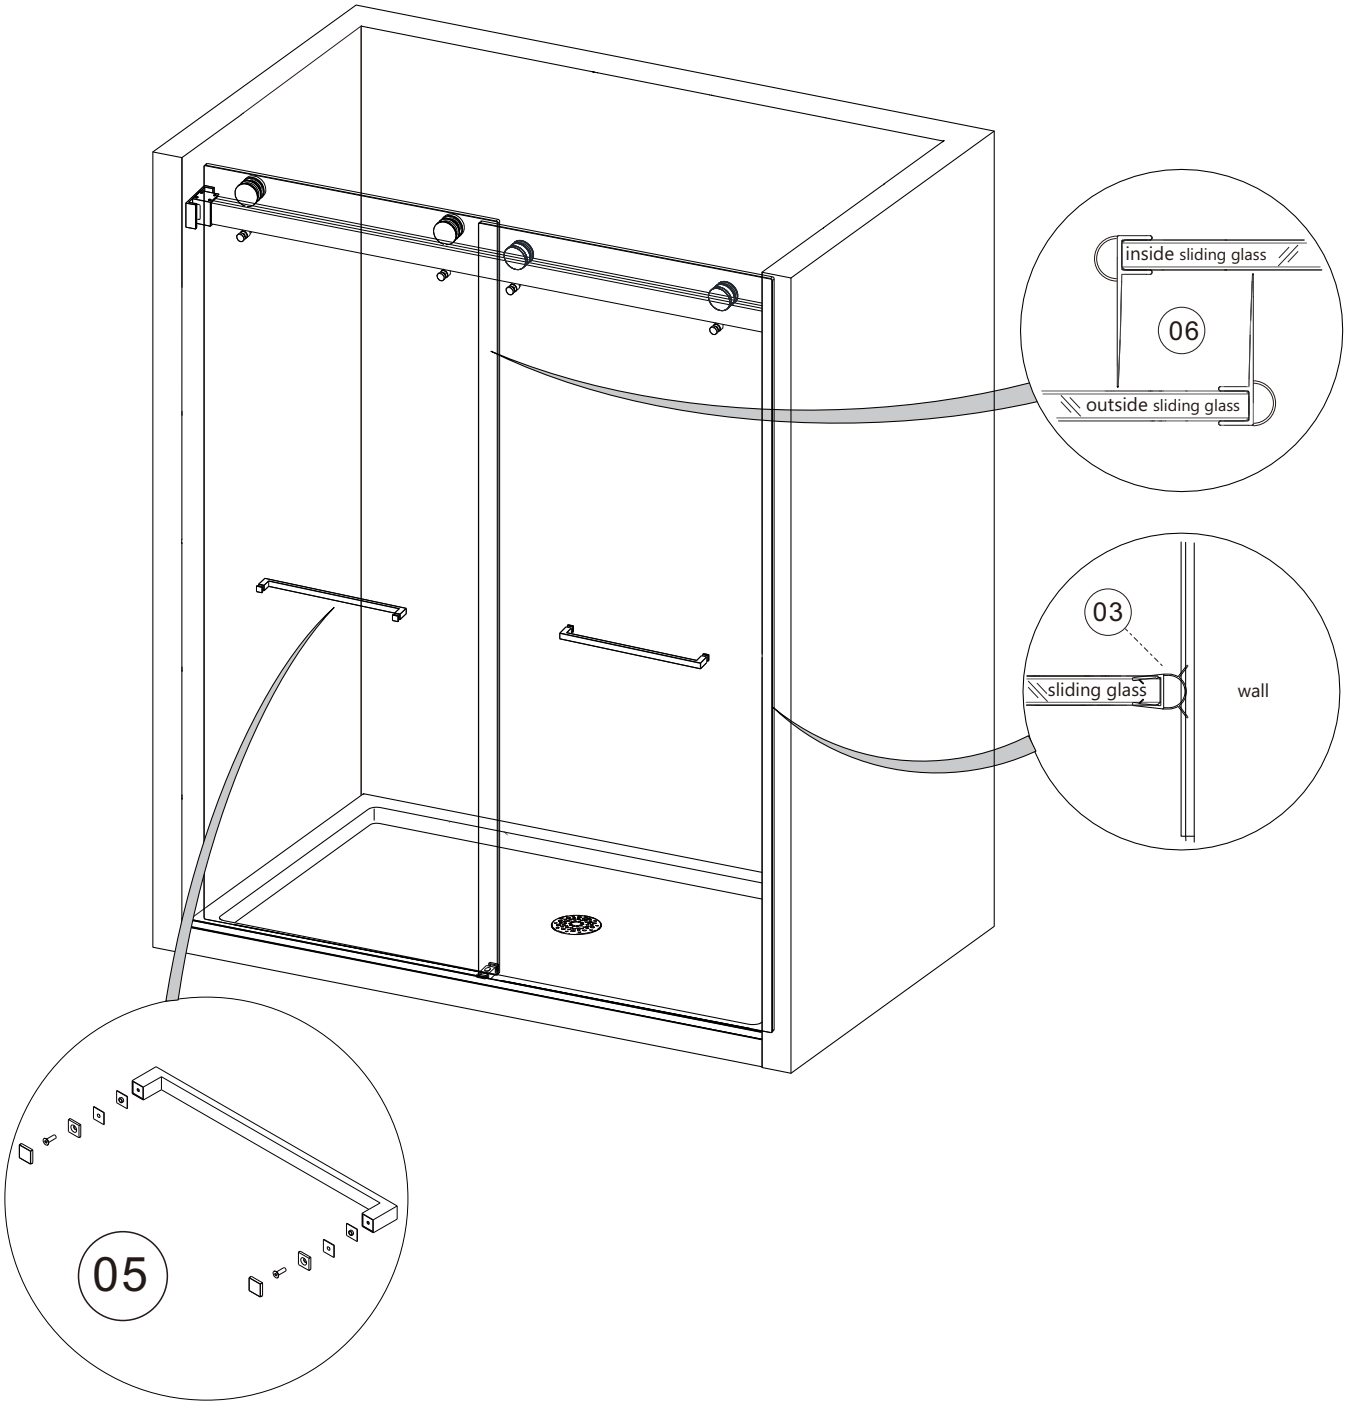

Use a razor knife to trim the **Vertical Vinyl Seal (#06)** at the top to avoid interfering with the **Anti-Jump Pin (#02)**, and at the bottom to avoid interfering with the **Top guide Rail (#09)**.

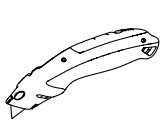Parts Need			Tools Need
06  Vertical Vinyl Strip x2	03  Bulb Vinyl Strip x2	05  Handle x2	

Inst.Steps
14/1


Silicone Application & Curing

The surfaces need to be clean and free of debris before applying silicone.





Allow 24 hours for the silicone to cure before using the shower.

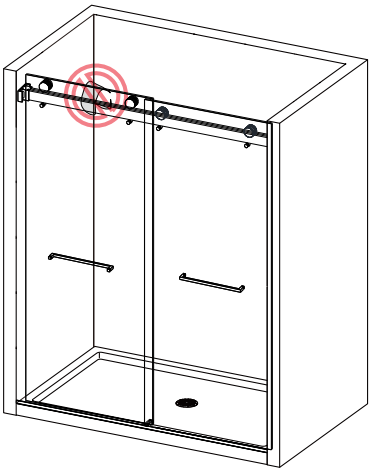

DO NOT hang or drape a towel or wash cloth over the Top Guide Rail as this may cause the Roller Assembly wheels to get stuck and possibly cause serious damage or injury.

Troubleshooting

Problem/Symptom	Suggested Solution
Missing Parts	•Check all shipping/packaging material for missing parts/components. •If not found, contact Email: supports@ibathwiller.com to order factory part replacement.
Top Guide Rail was cut too short or was cut from wrong end during installation.	•The **Top Guide Rail (#14)** is pre-cut for the model size, and will be shorter than the model width to allow for the **Guide Rail Brackets (#12)**. •If the **Top Guide Rail (#14)** is cut too short or cut from the wrong end, contact Email: supports@ibathwiller.com to order factory part replacement.
Water Leakage	•Confirm the **Bottom Threshold (#07)**, **Bulb Vinyl Strip (#03)**, and the **Vertical Vinyl Strips (#06)** are installed correctly. •Confirm that the entire unit has been properly sealed with silicone caulk; allow at least 24 hours to allow the silicone to cure and set before using the shower unit. •Direct the shower head/water flow away from the area.
The door rolls open or closed	•Check the **Top Guide Rail (#14)** for level. Adjust the **Guide Rail Brackets (#12)** •Adjust the **Roller Wheel Assemblies (#01)** on the door, if needed, to allow the door to seal evenly against the wall. •To influence the **Top Guide Rail (#14)** slightly, the innermost **Glass-to-Rail Brackets (#12)** can be adjusted. •Confirm the **Guide Block (#09)** is square to the **Sliding Glass (#04)** and threshold.
The door does not track smoothly	•Confirm the **Sliding Glass (#04)** is not making contact with the bottom of the **Guide Block (#09)**. •If the **Sliding Glass (#04)** needs to be raised, adjust the **Roller Wheel Assemblies (#01)** to raise it. •Be sure that there is nothing on the **Top Guide Rail (#14)** that could block the **Roller Wheel Assemblies (#01)**. •Check the **Bottom Roller Assemblies (#01)** are 1/16" beneath the **Top Guide Rail (#14)** and are not making any contact with the **Top Guide Rail (#14)**.
Mishandled glass	• Always take precautions when handling tempered glass. • A glass suction cup and an assistant are helpful when carrying large, heavy lites of glass. •Never allow tempered glass (especially the edges) to come in contact with any hard surface, which can cause chipping, splintering or complete glass failure. •Any damaged glass should be immediately replaced. •Do not use a shower with damaged glass. •Leave plastic corner protectors on the glass until ready to install. •Always protect the glass once removed from the box by padding the top and bottom of the glass with cardboard, styrofoam or other soft material until ready to install.

Do not return product to store. Contact us with any questions.
Add: 830 N. Central Avenue, Upland CA, 91786
Web: www. ibathwiller. com
Email: supports@ibathwiller.com
TEL: 909-282-5408