


Assembly Instructions

V01.240728.01

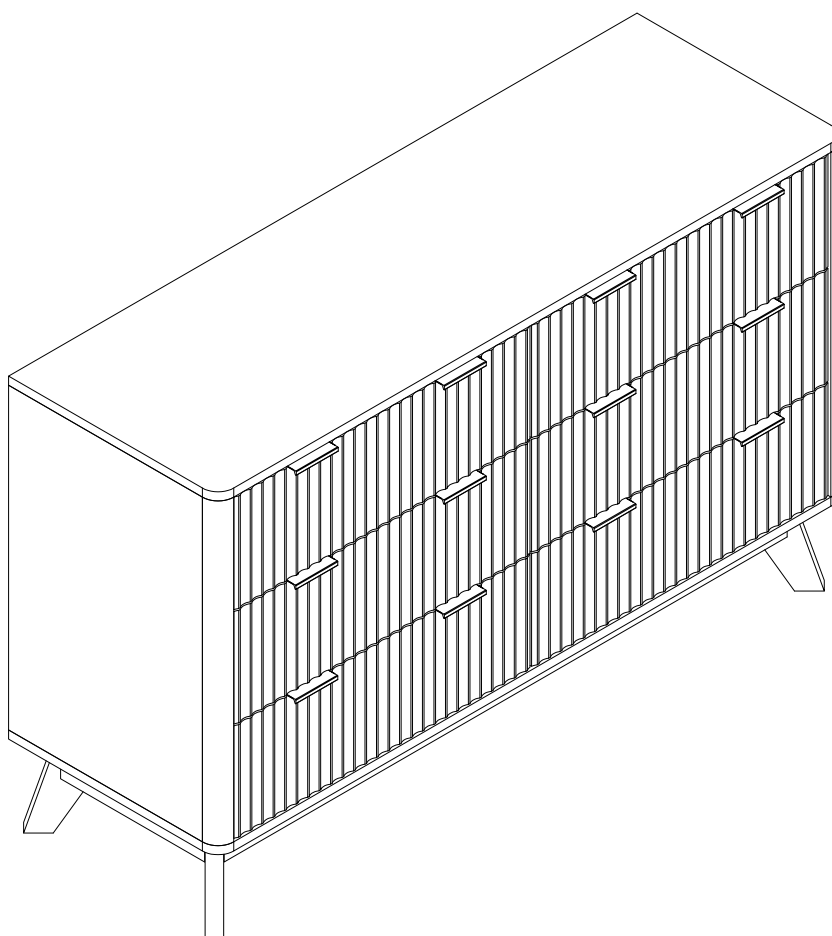

Grantee:



DO NOT RETURN: Keep the regular item and get a Replacement and new products instead of Return.



REFUND: Any problems caused by us can be compensated by a refund.

We are very sorry if we have caused you any trouble.
Try to contact our service team at first time to solve your problem.
Thank you for giving our service team another chance.
Thank you for your patience and cooperation.

Before Start:



Check part List: Check the part list to make sure you have all parts before starting assembly



Cursory glance: A cursory glance through the manual can help speed up the installation process and reduce mistakes before starting



Follow Instructions: Follow instructions step by step to avoid Unnecessary mistakes, destruction and failure.

Recommended:



Two Person may help assemble work easier.






Phillips and hexagonal screwdriver.

















Power tools can reduce installation time.

Hardware Part List


A		M6x35mm	x68+3	☐	Q			x2	☐
B		M15x10mm	x68+3	☐	R		M4x9mm	x12+1	☐
C		M6x30mm	x22+2	☐	S		M7x50mm	x8	☐
D			x12	☐	T			x1	☐
E		M4x12mm	x36+3	☐	U			x1	☐
F		M6x10mm	x12+1	☐	V		M3x12mm	x24+2	☐
G		M6x20mm	x12+1	☐					
H			x1	☐					
I			x4	☐					
J		M4x35mm	x8	☐					
K		M4x12mm	x6	☐					
L			x2	☐					
M		M4x30mm	x30+3	☐					
N			x12	☐					
O			x16	☐					
P		M3x16mm	x16+1	☐					

Components Part List

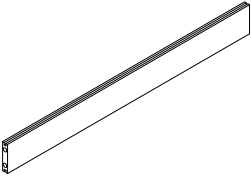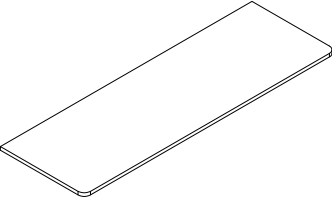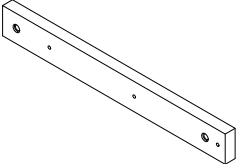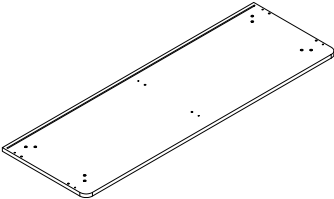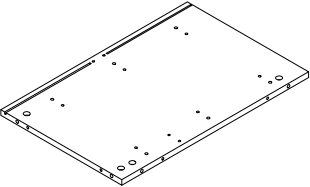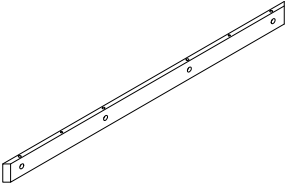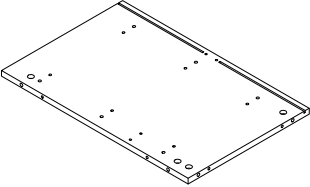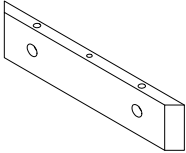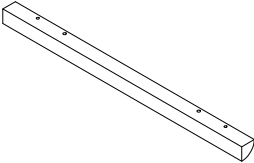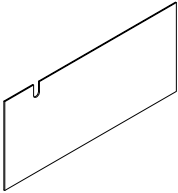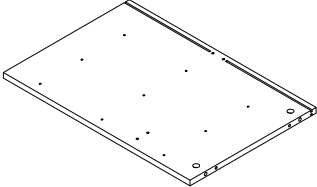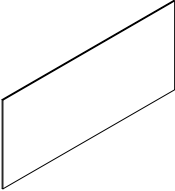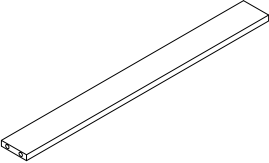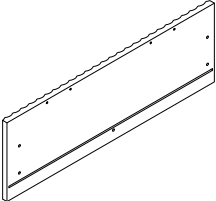1		x4	☐	9		x2	☐
2		x1	☐	10		x6	☐
3		x1	☐	11		x1	☐
4		x1	☐	12		x2	☐
5		x1	☐	13		x2	☐
6		x2	☐	14		x2	☐
7		x1	☐	15		x2	☐
8		x2	☐	16		x3	☐

Components Part List


17

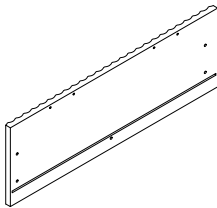

x3




18

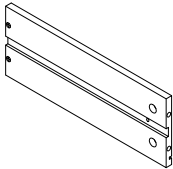

x6




19

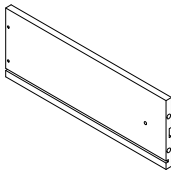

x6




20

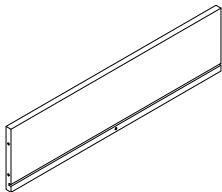

x6




21

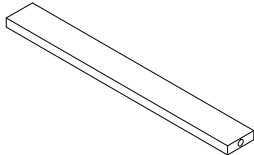

x6






22

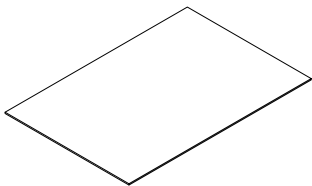



x6




Disassemble diagram:

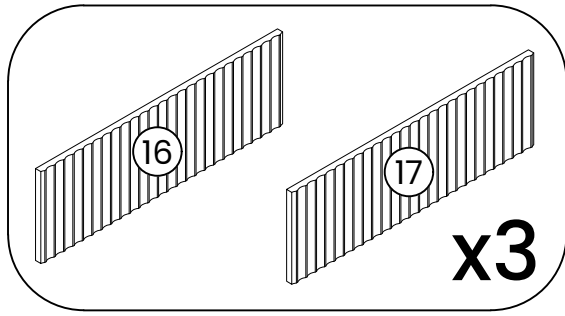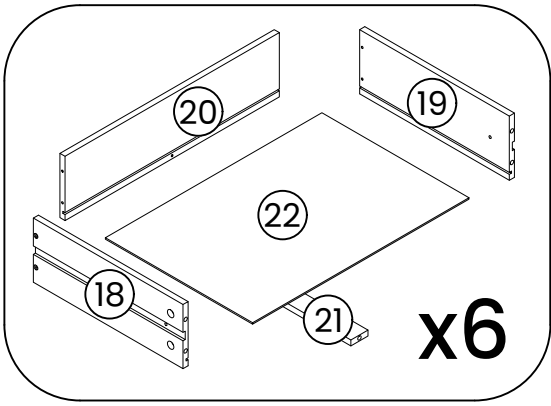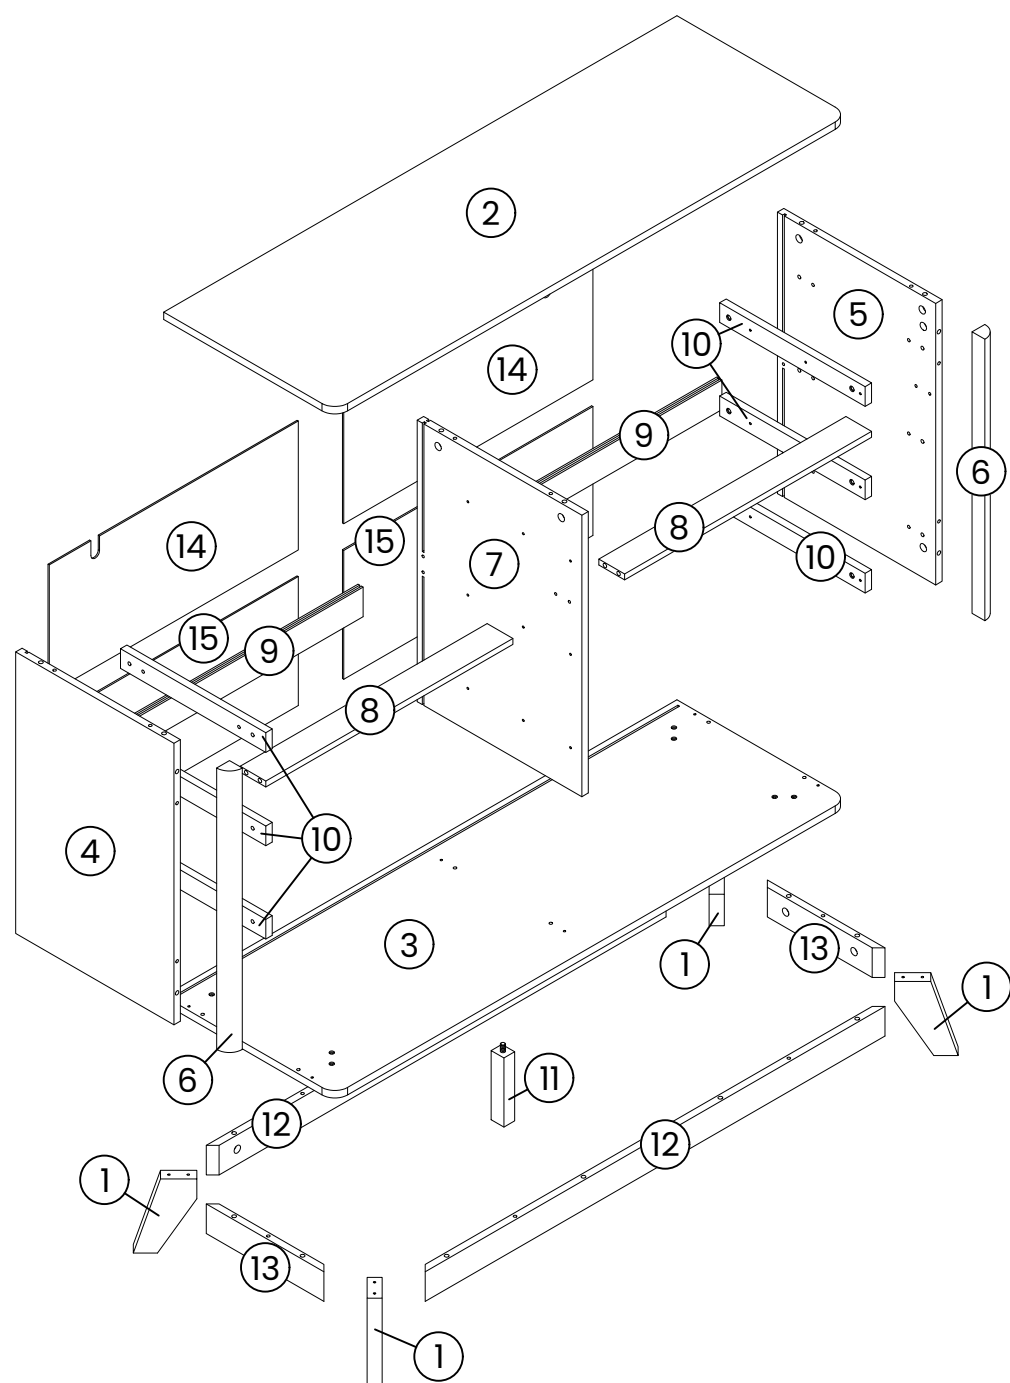

Step 1 / 31

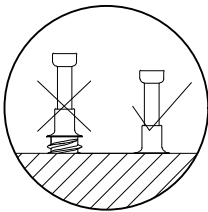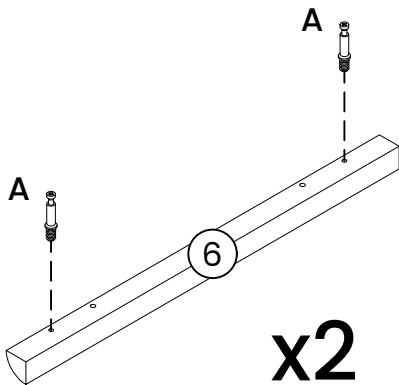

6

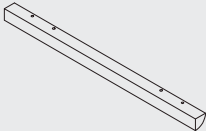

x2


A



x4




Note:

Step 2 / 31

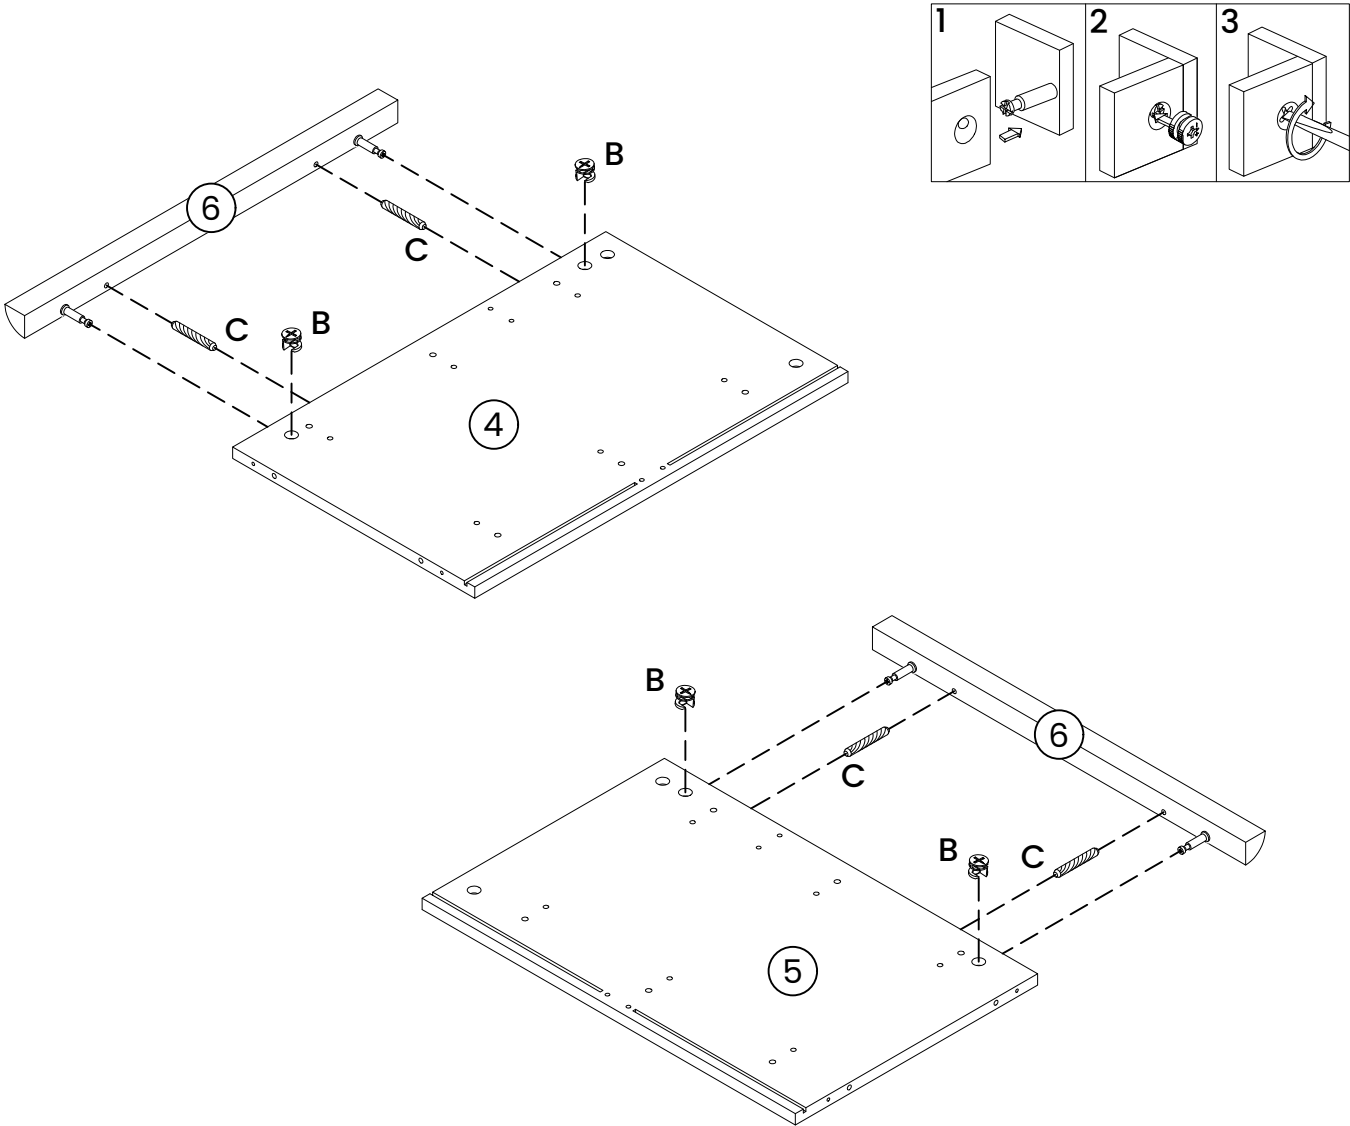





Note:

Step 3 / 31

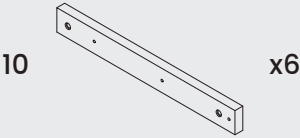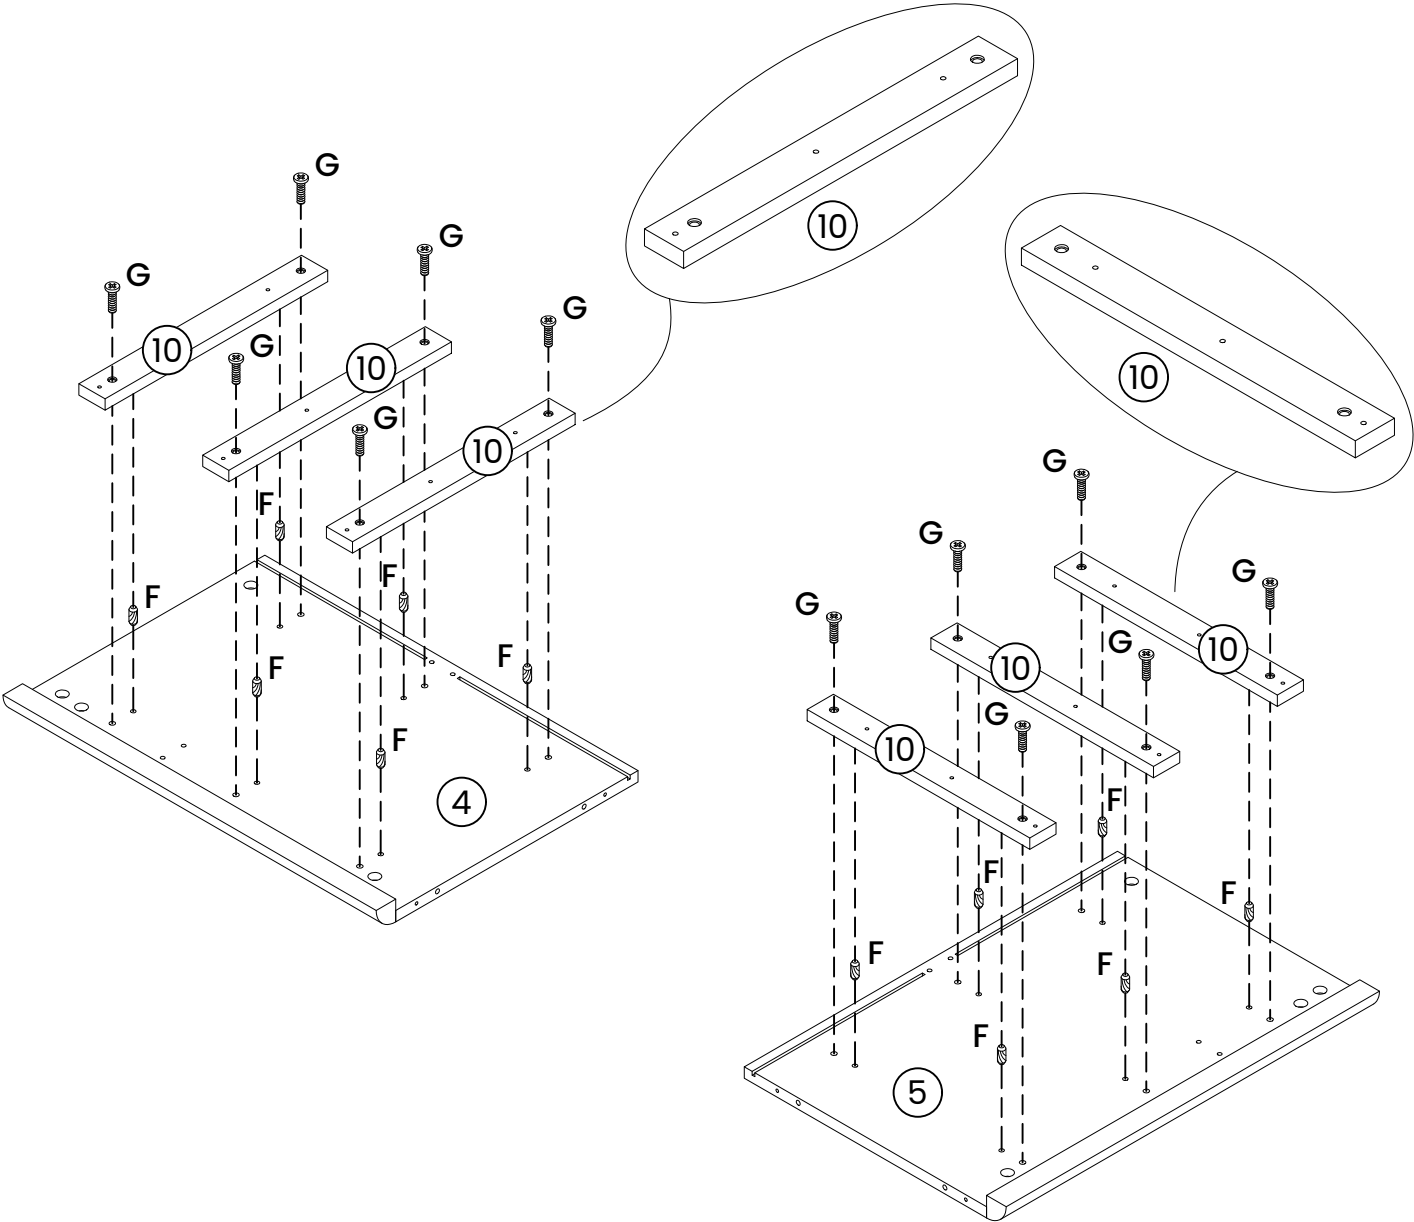



Note:

Step 4 / 31

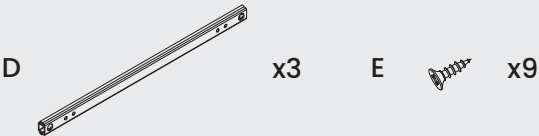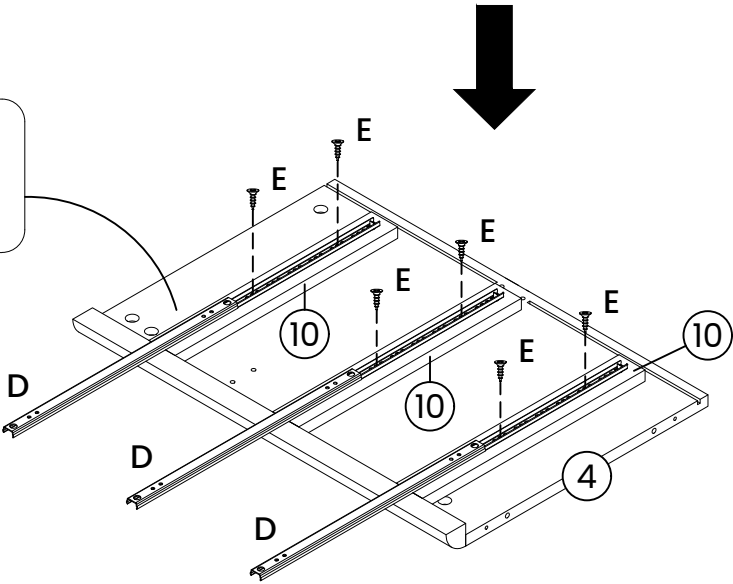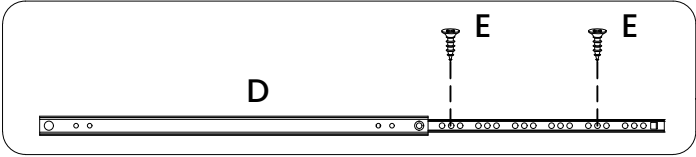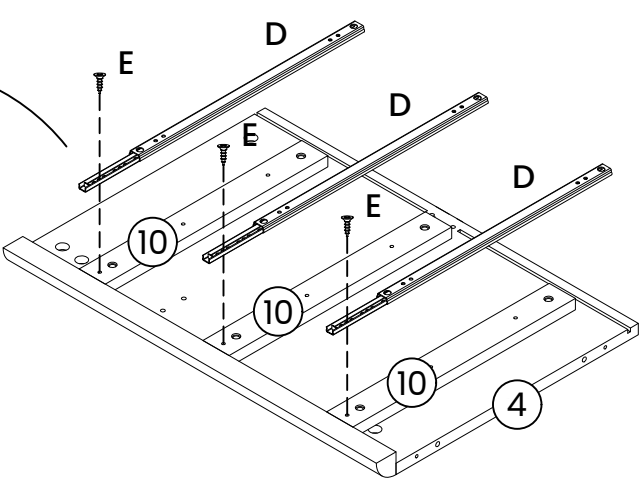

Note:
To locate correct holes, slide(D) needed to be moved in 2 directions.




Step 5 / 31

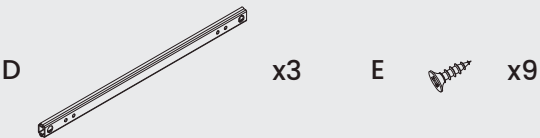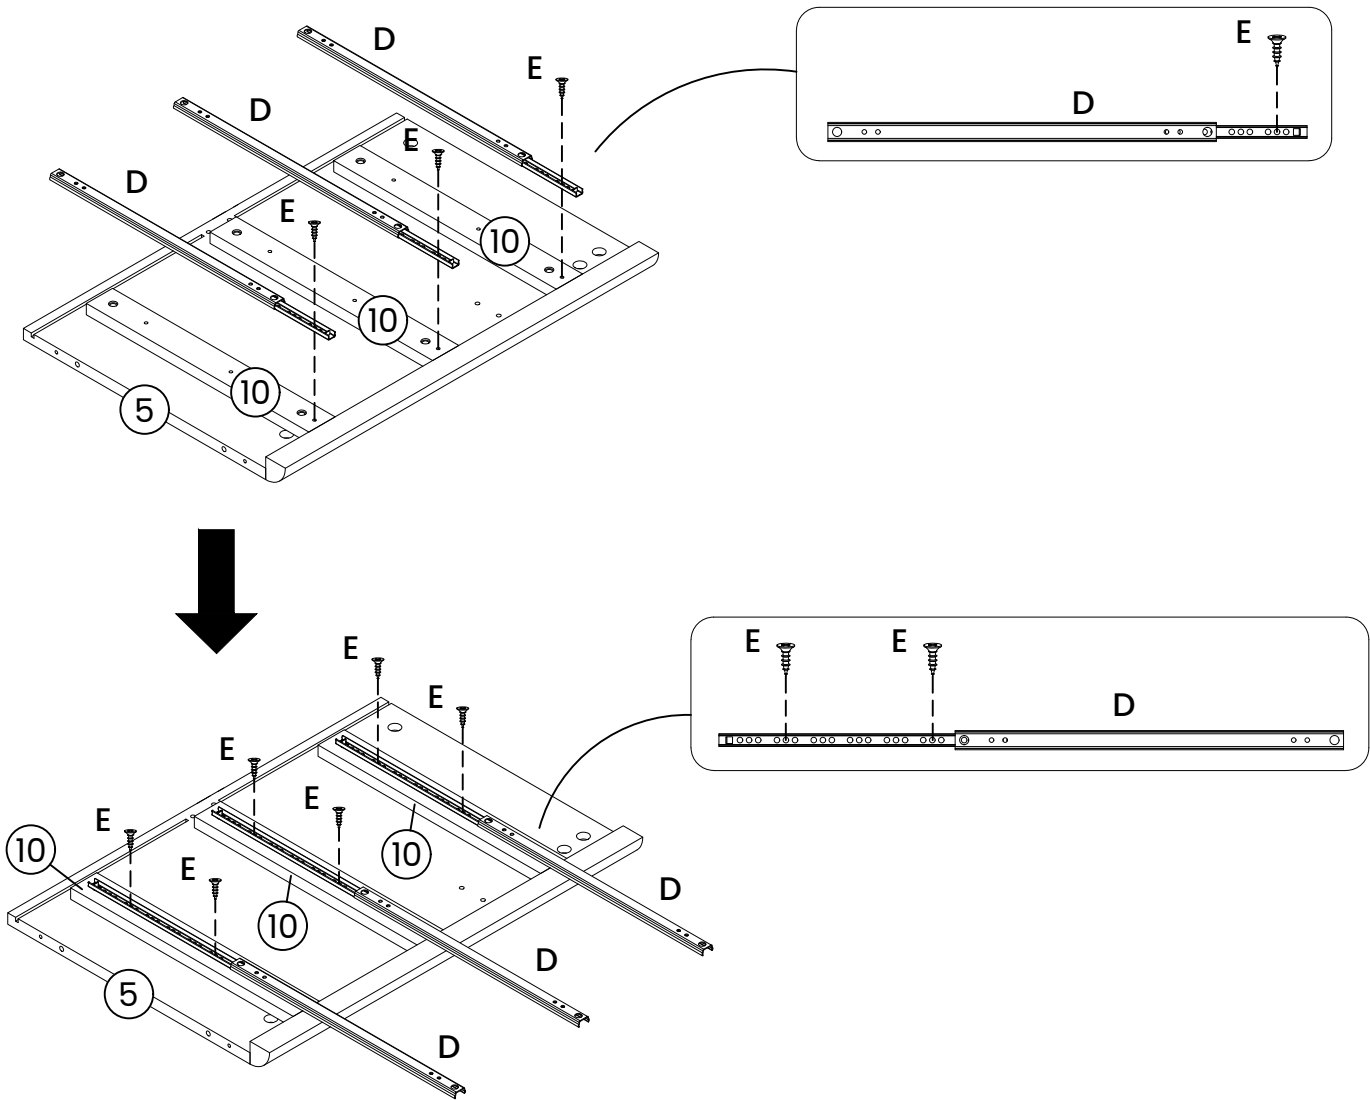

Note:

To locate correct holes, slide(D) needed to be moved in 2 directions.






Step 6 / 31

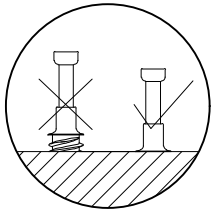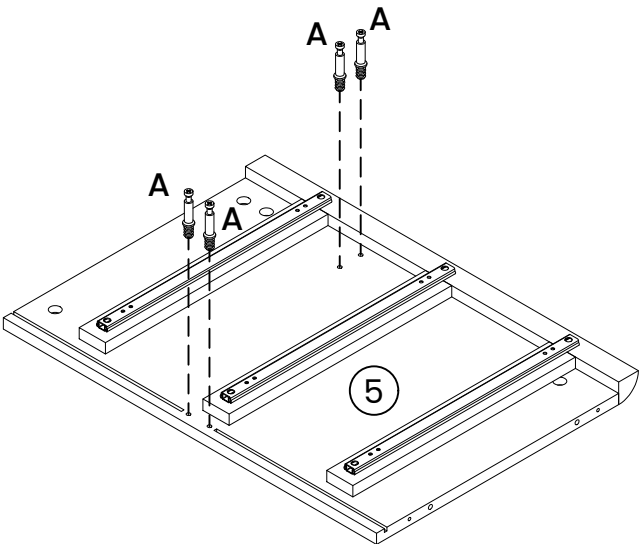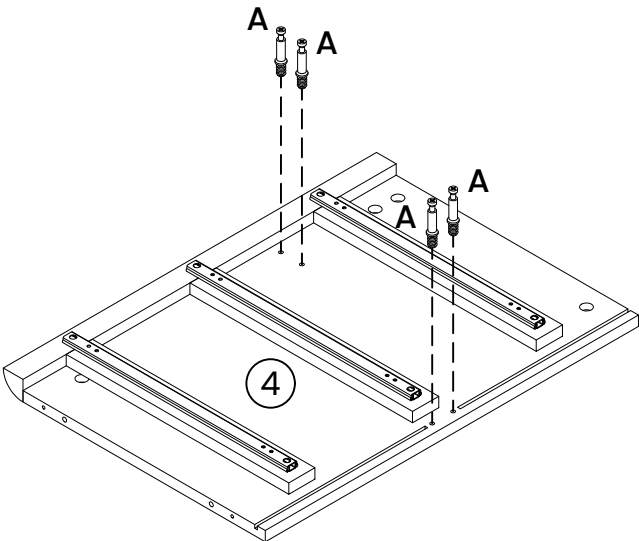








A  x8

Note:

Step 7 / 31

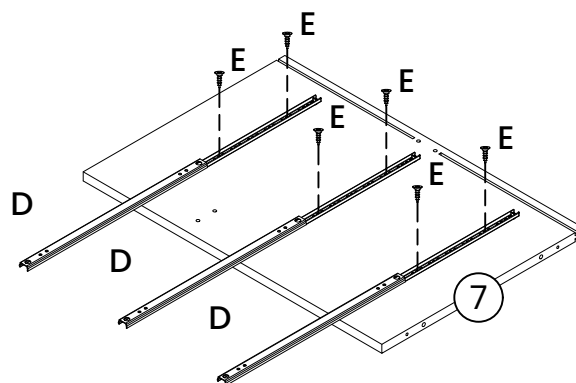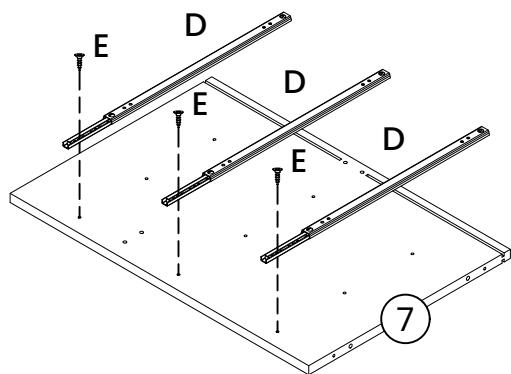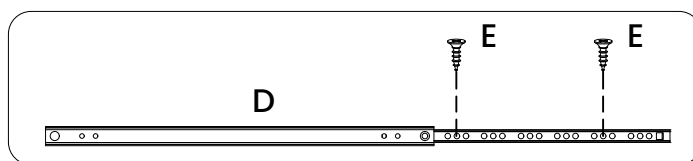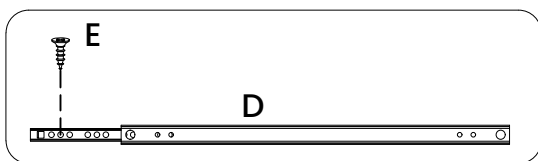

180°

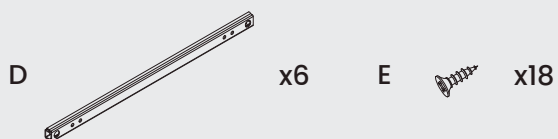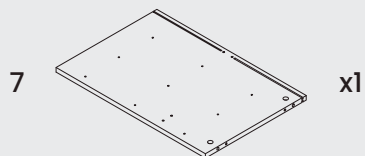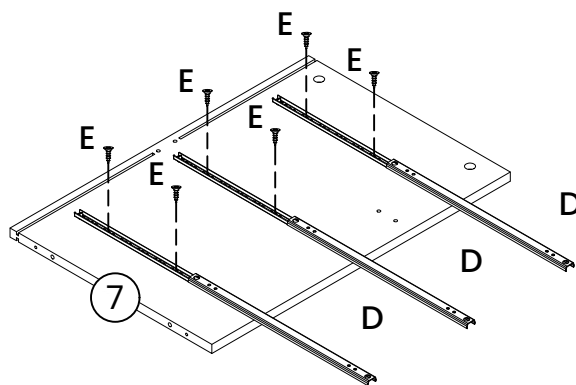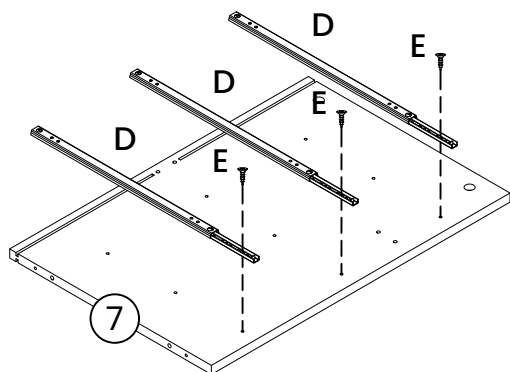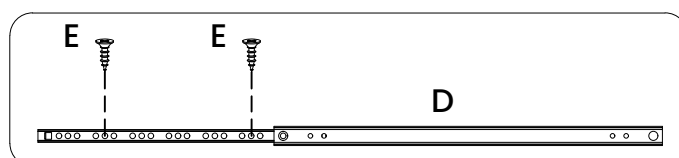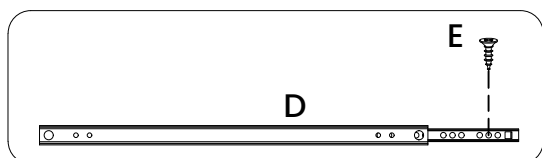


Note:

Both sides of part 7 needed to be installed.

To locate correct holes, slide(D) needed to be moved in 2 directions.

Step 8 / 31



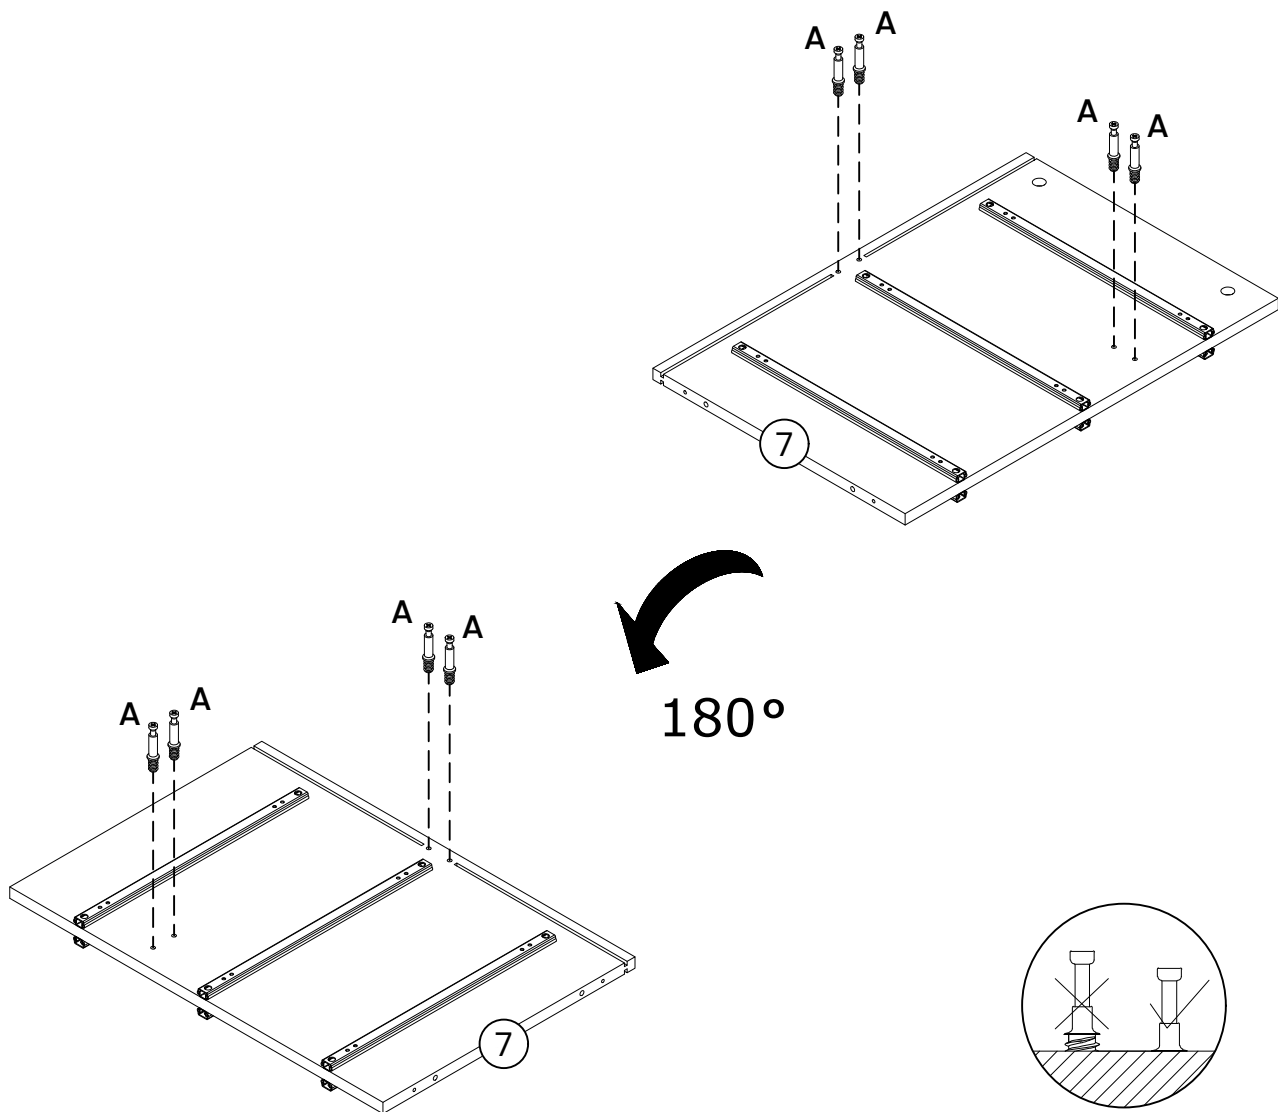


A  x8

Note:



Both sides of part 8 needed to be installed.

Step 9 / 31

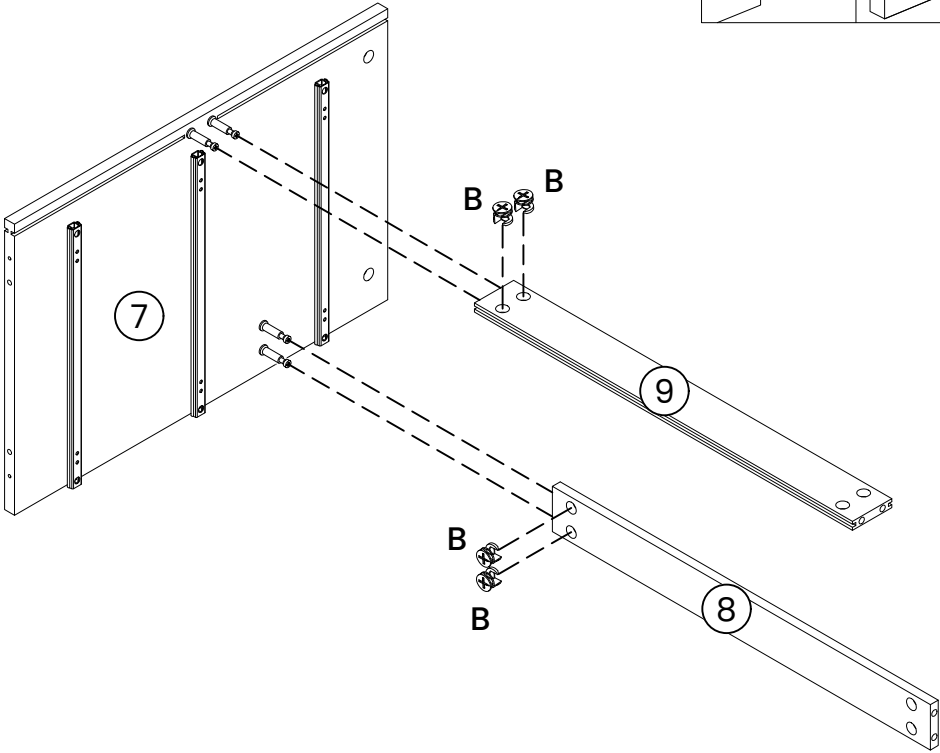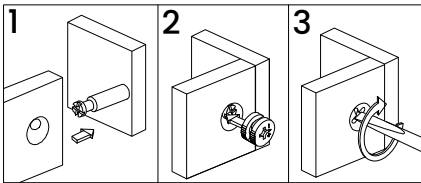

Note:


Step 10 / 31

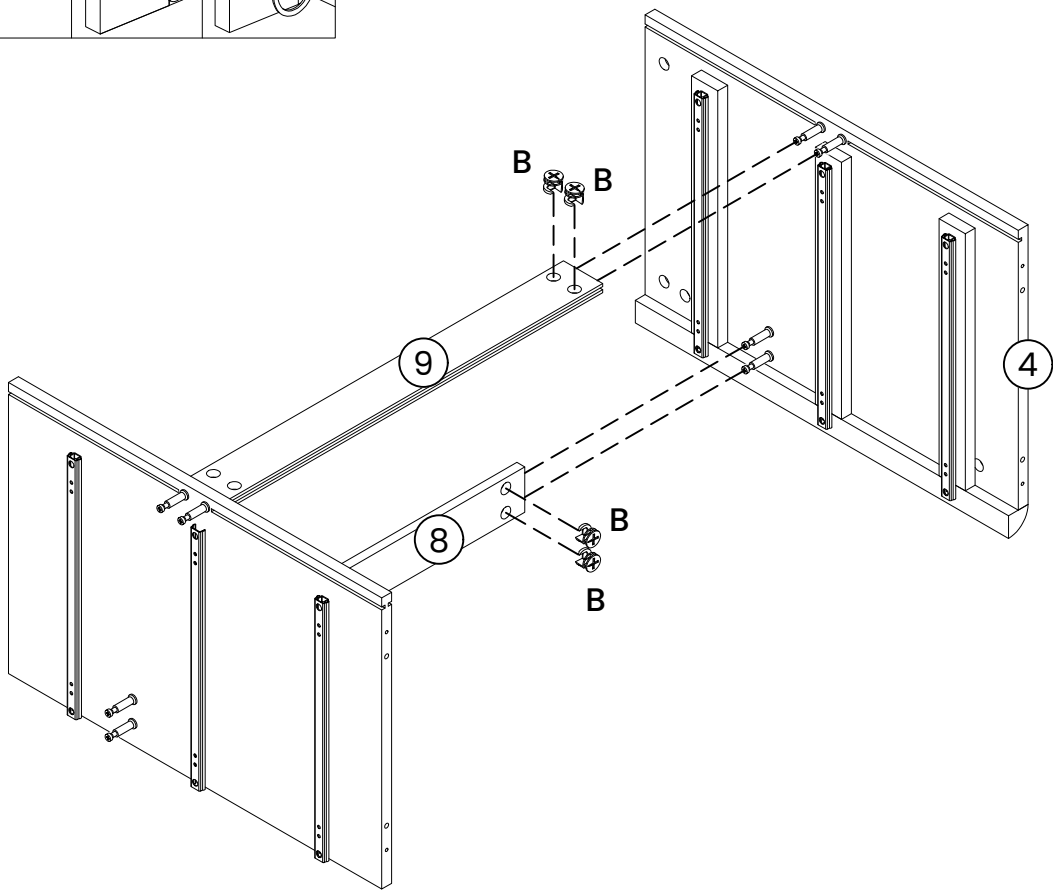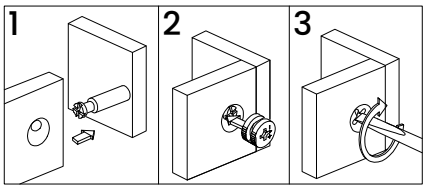

B  x4



Note:

Step 11 / 31

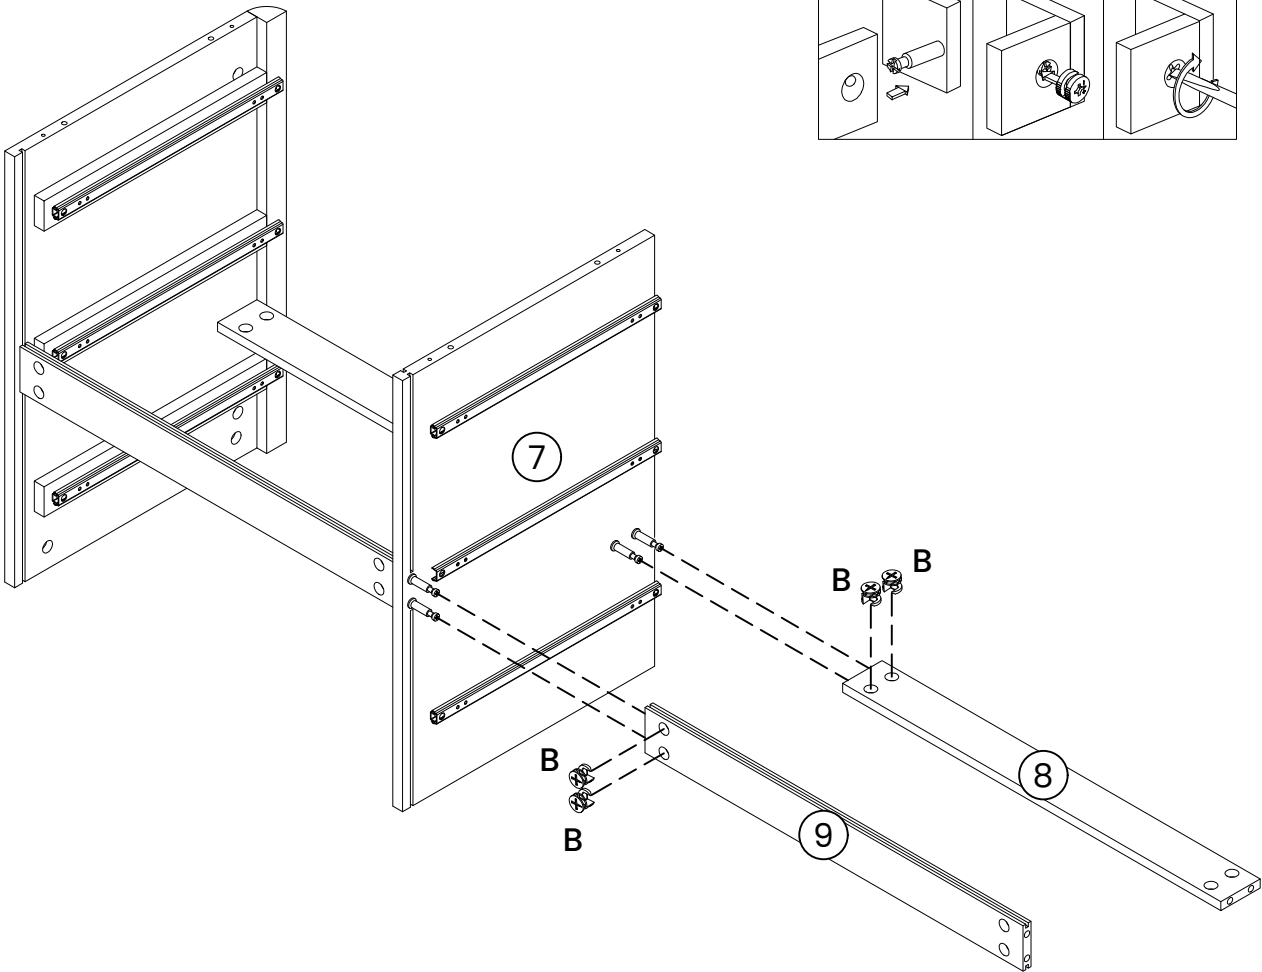

Note:



Step 12 / 31

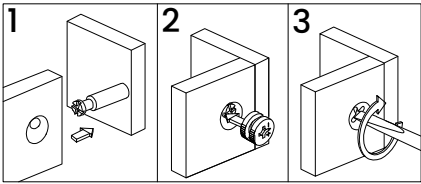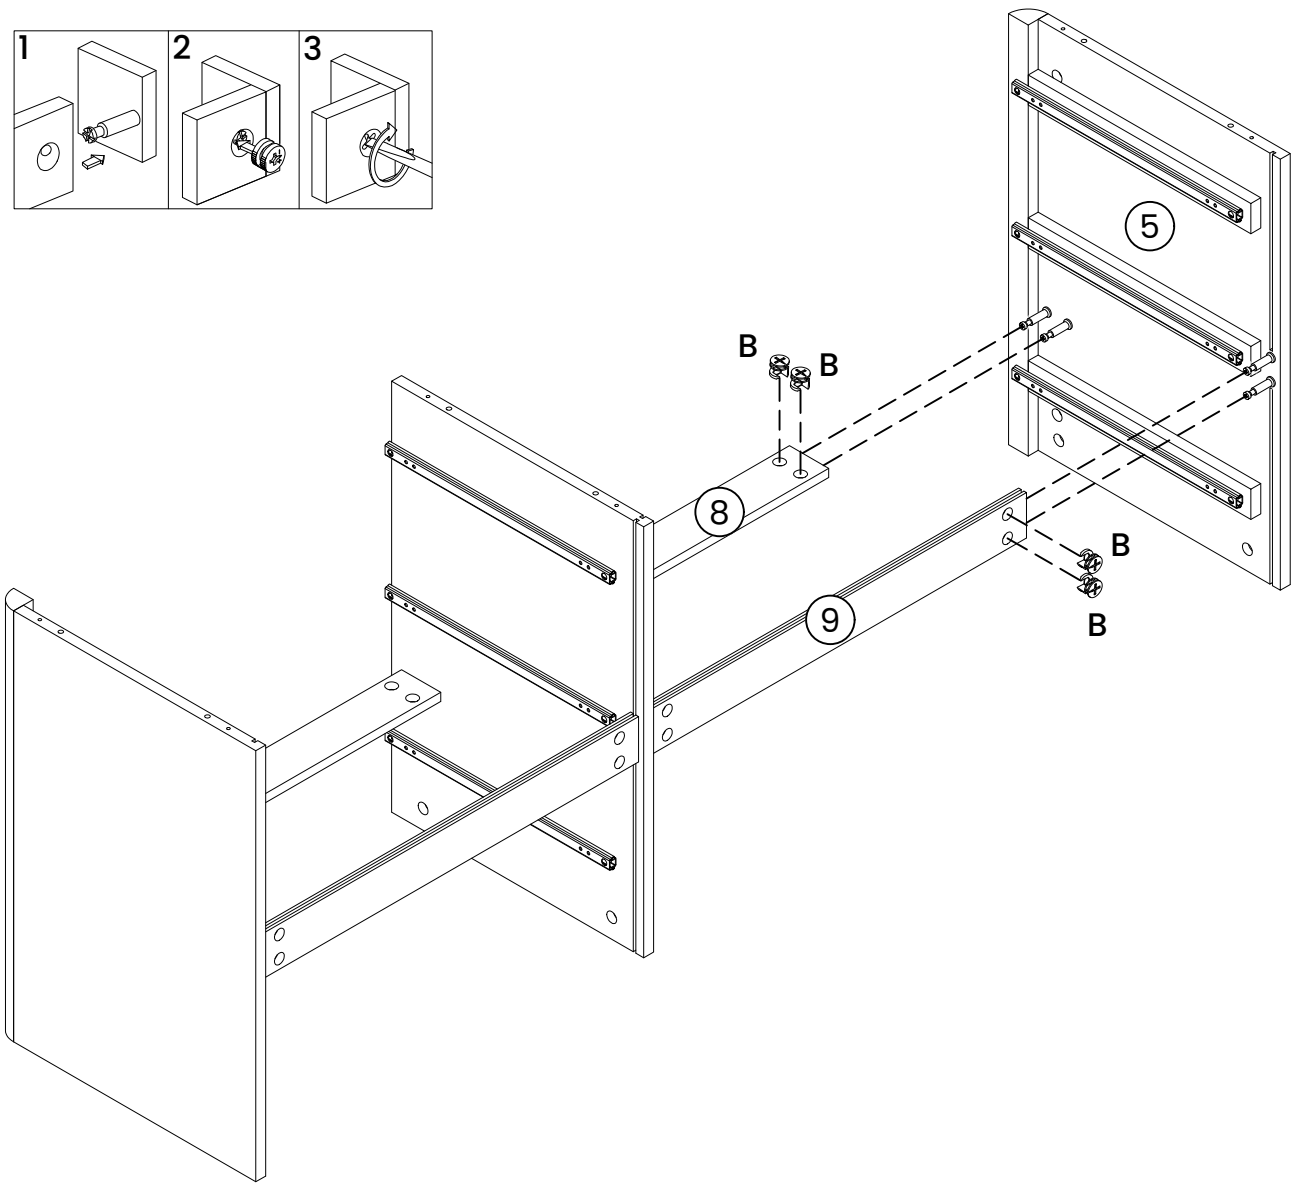

B  x4



Note:

Step 13 / 31

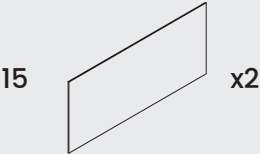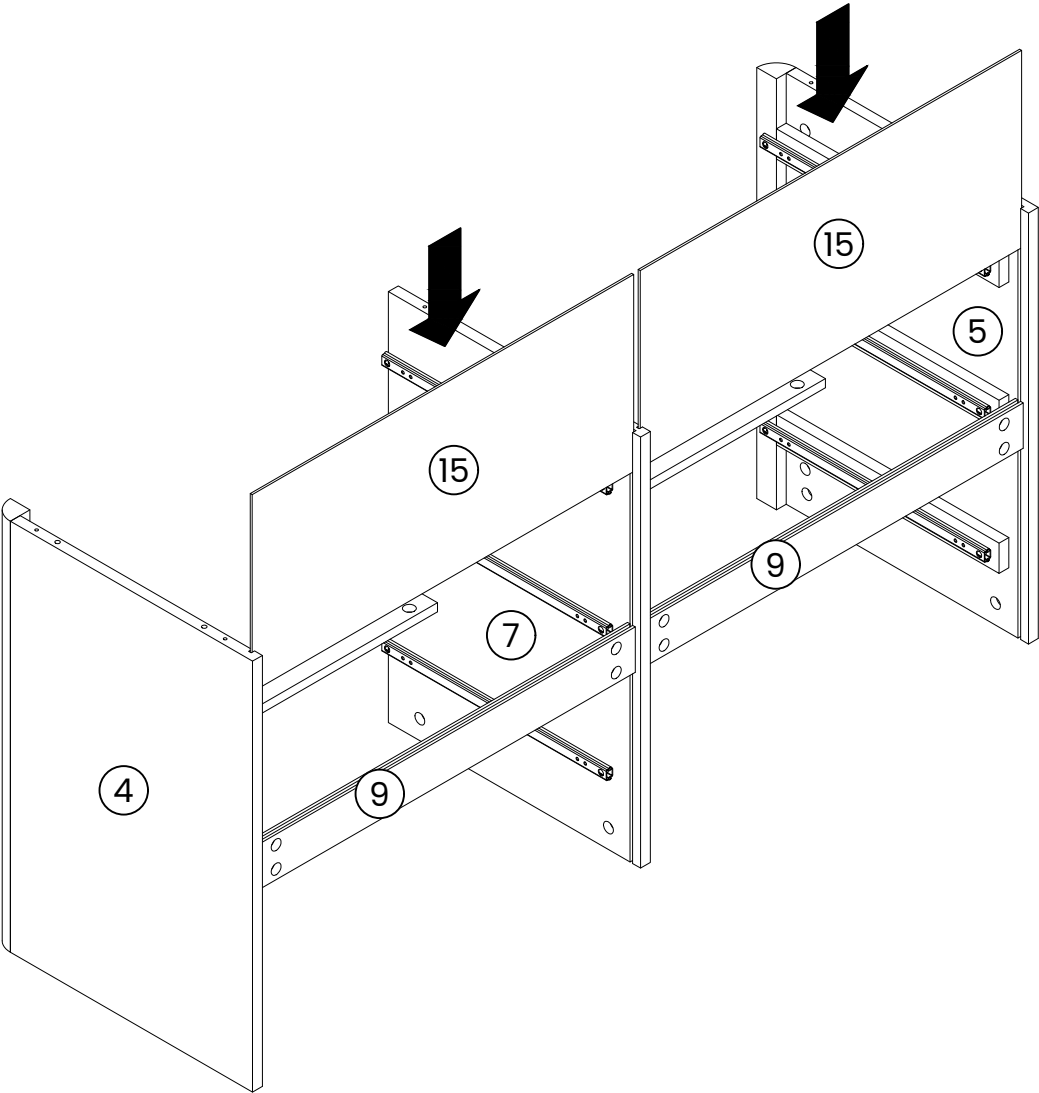




Note:

Step 14 / 31

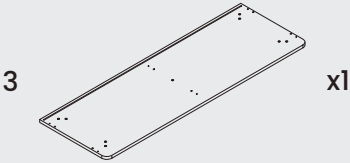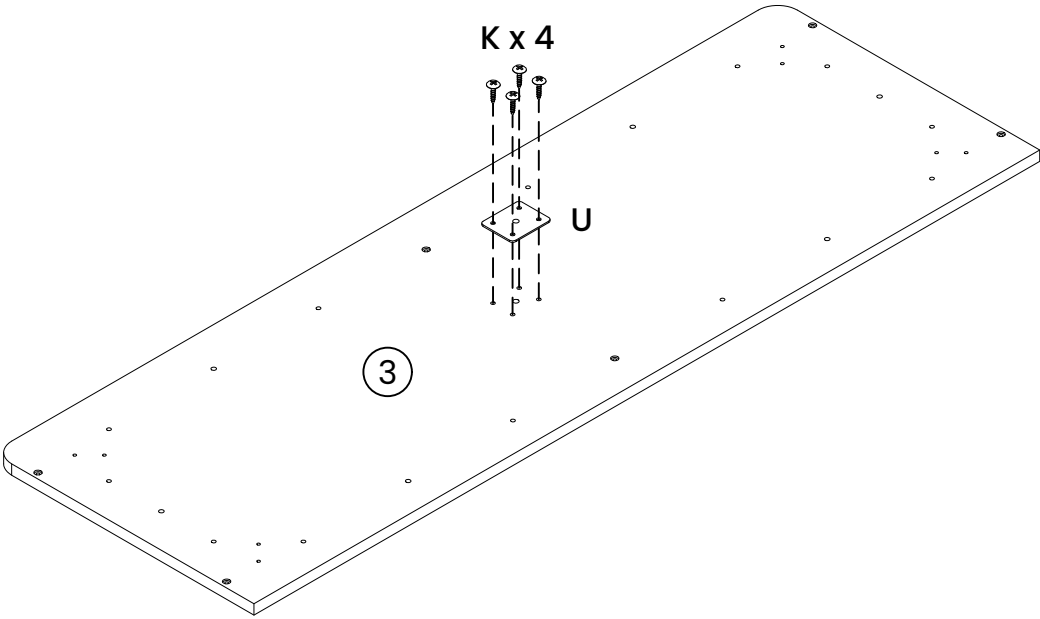



Note:

Step 15 / 31

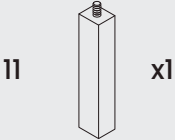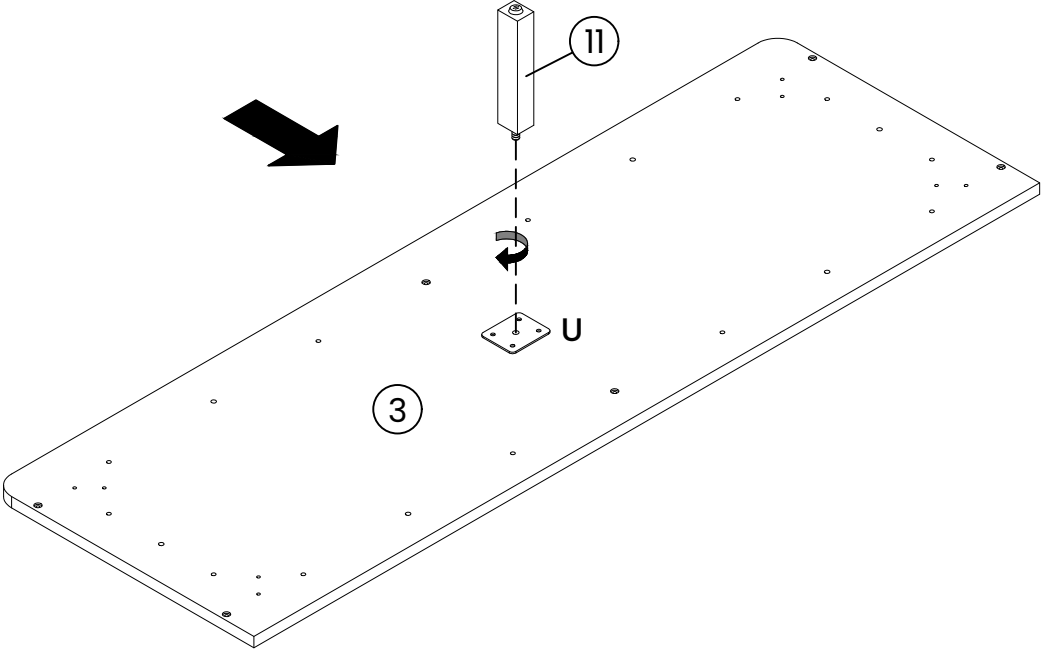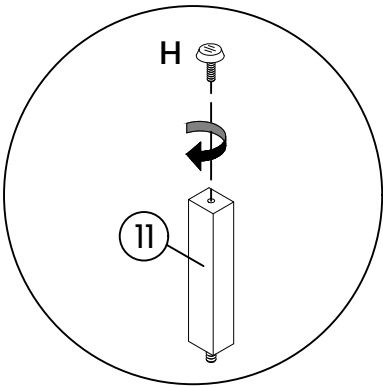

Note:




Step 16 / 31

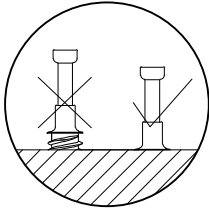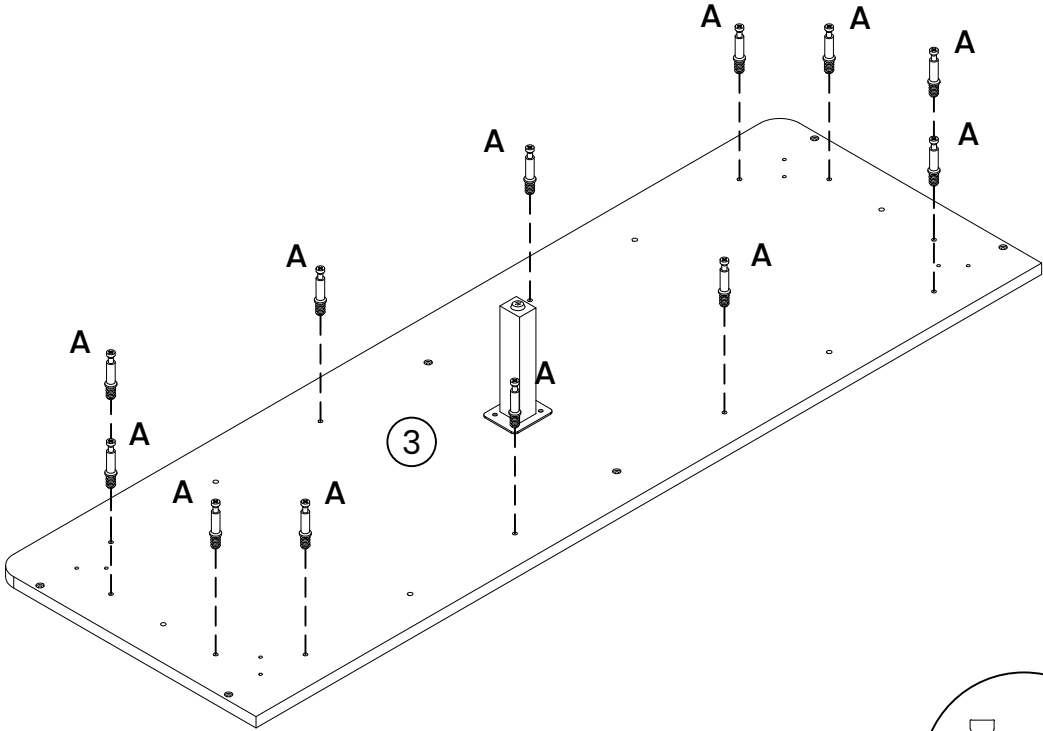

A  x12


Note:

Step 17 / 31

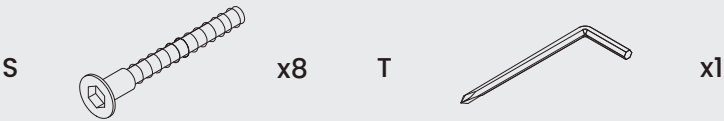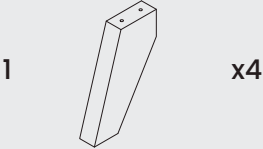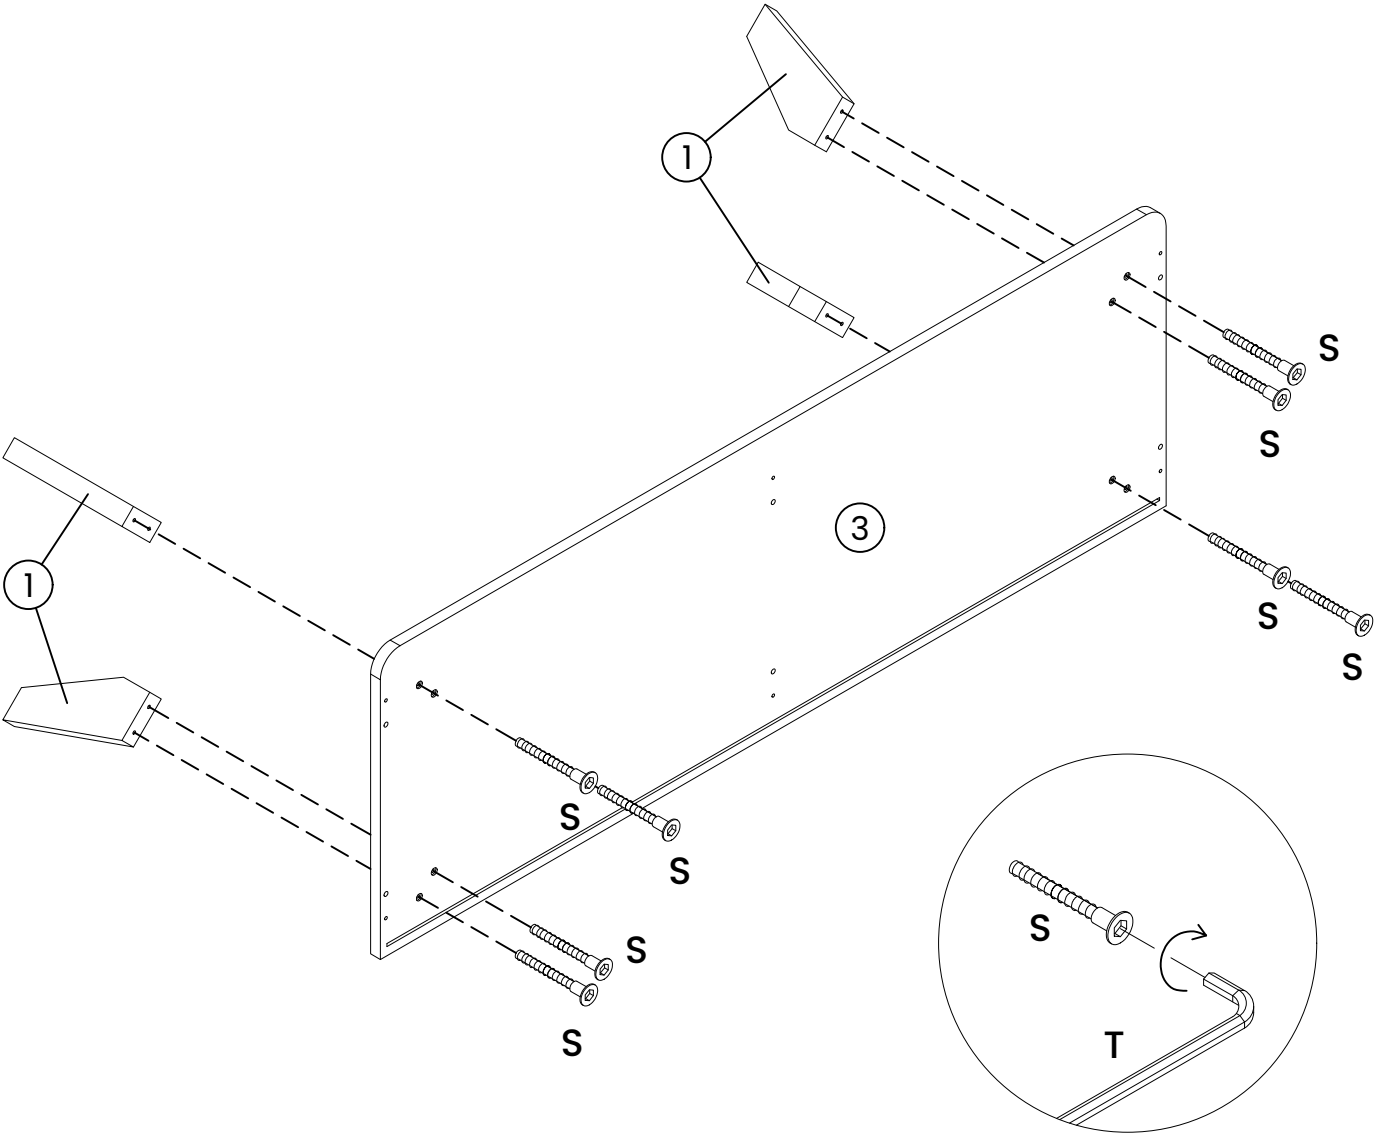

Note:




Step 18 / 31

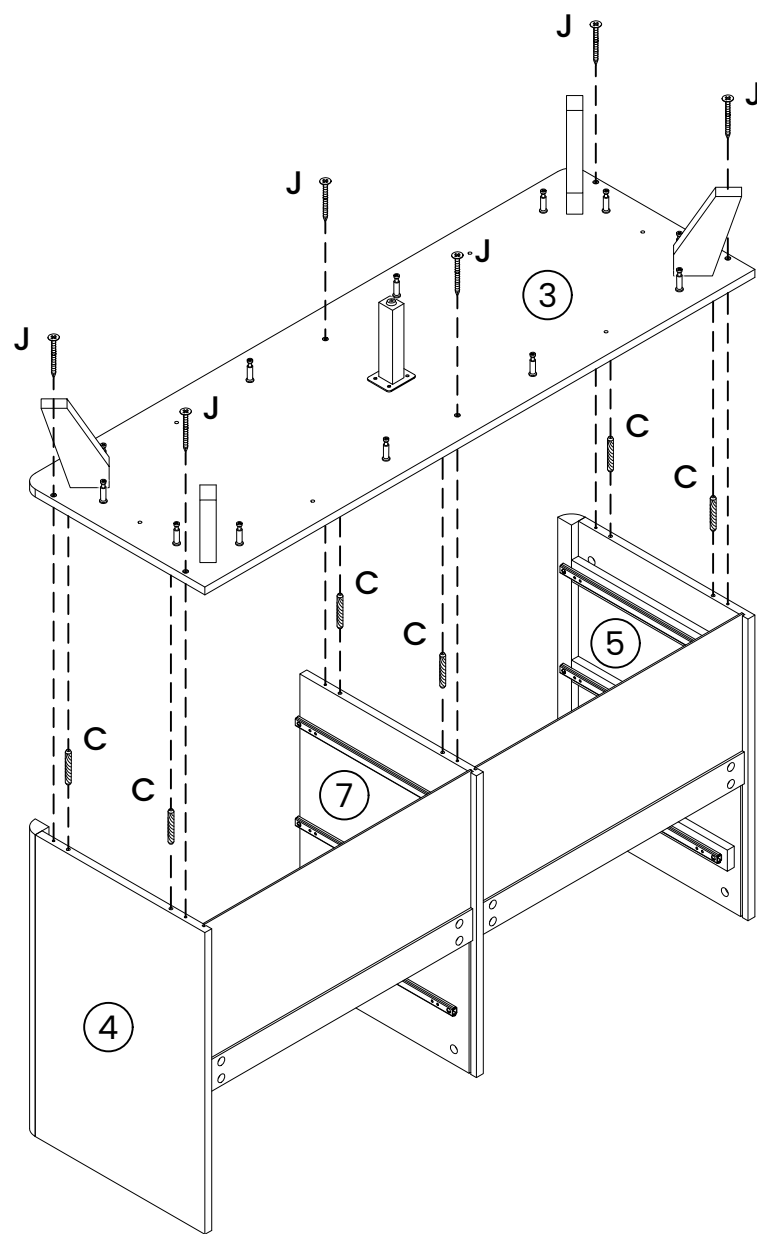

C  x6 J  x6


Note:
Two persons required.

Step 19 / 31

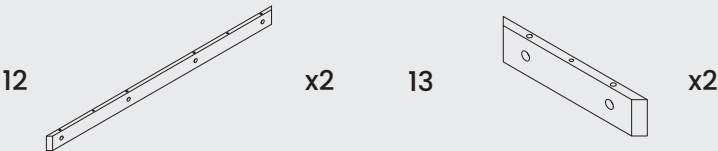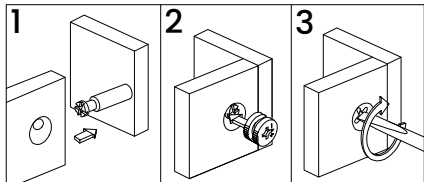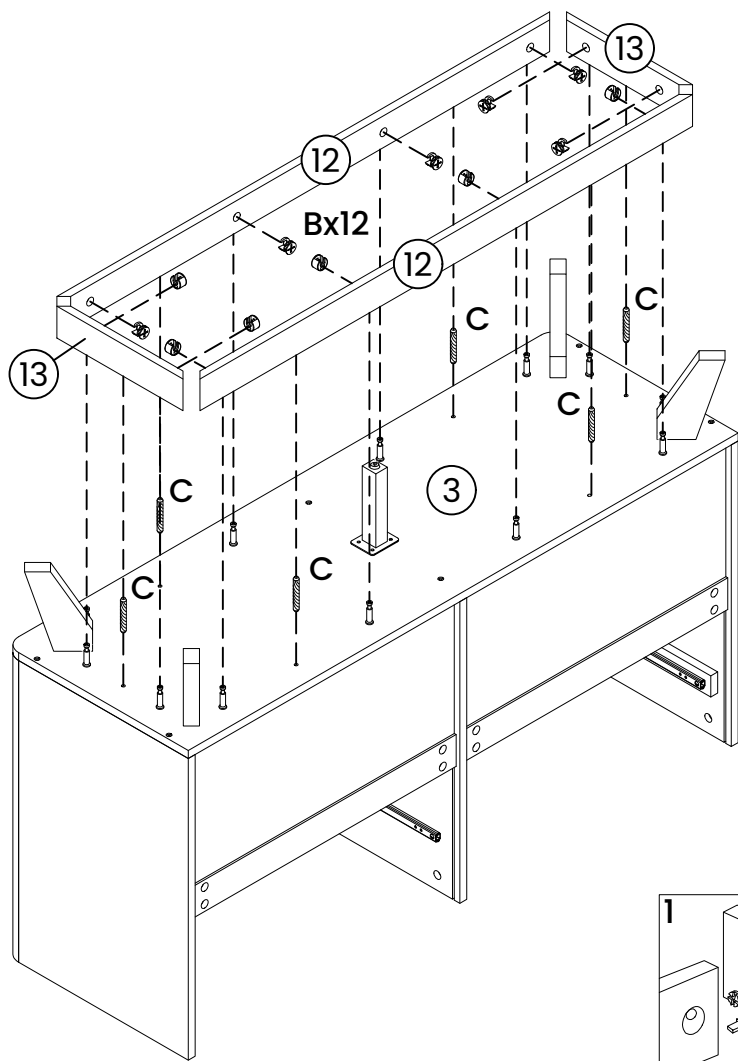

Note:



Step 20 / 31

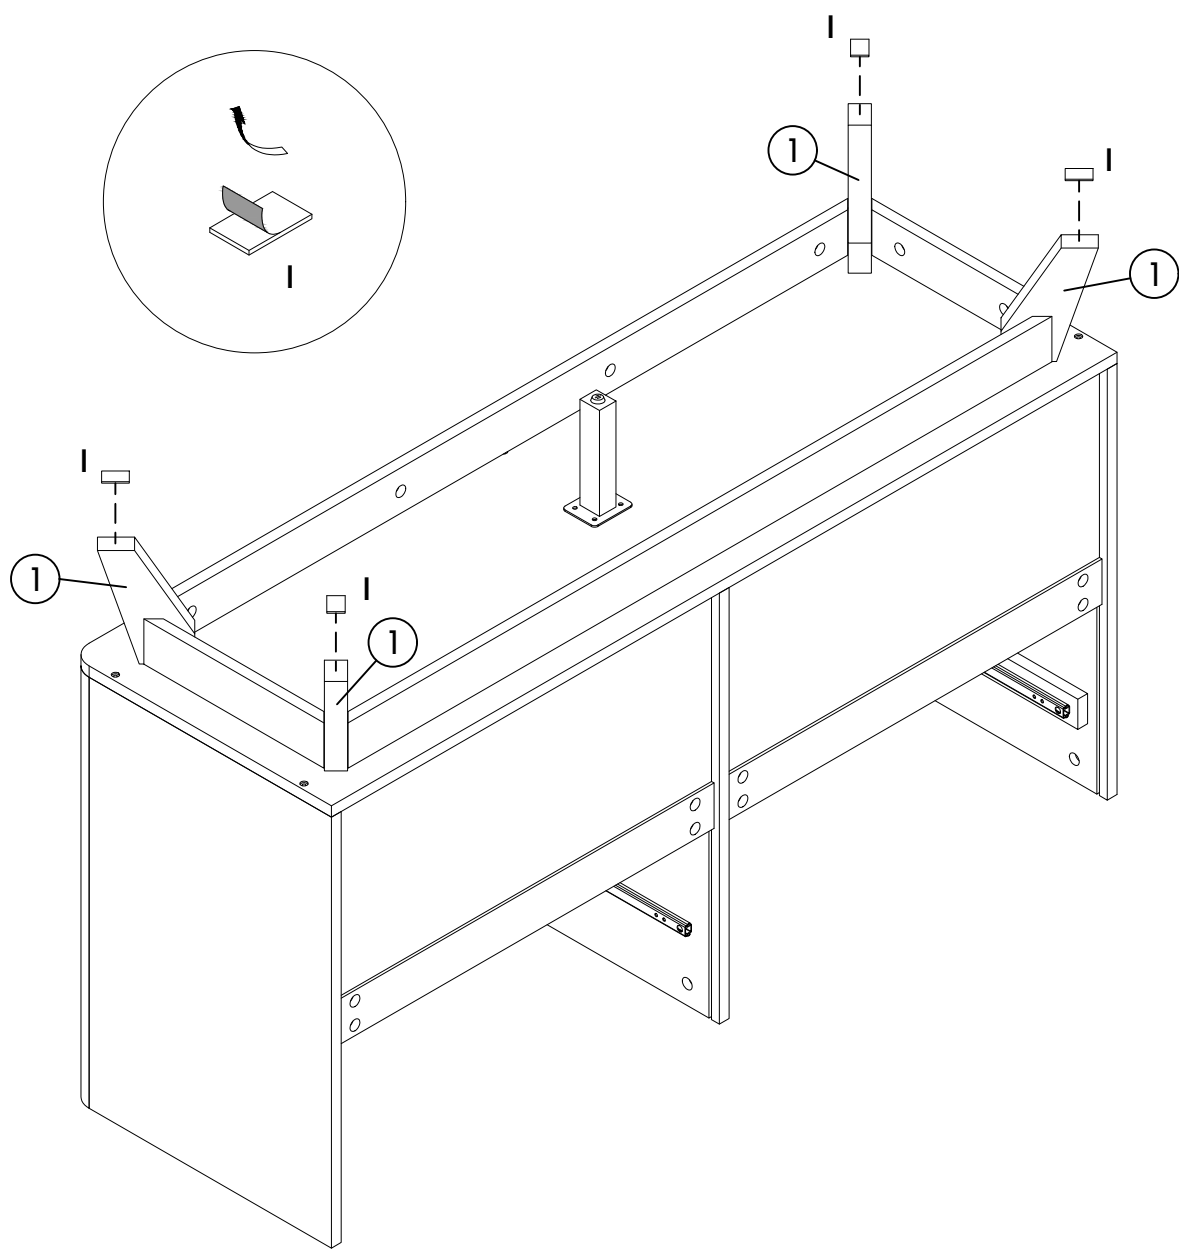

I  x4



Note:

Step 21 / 31

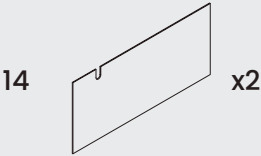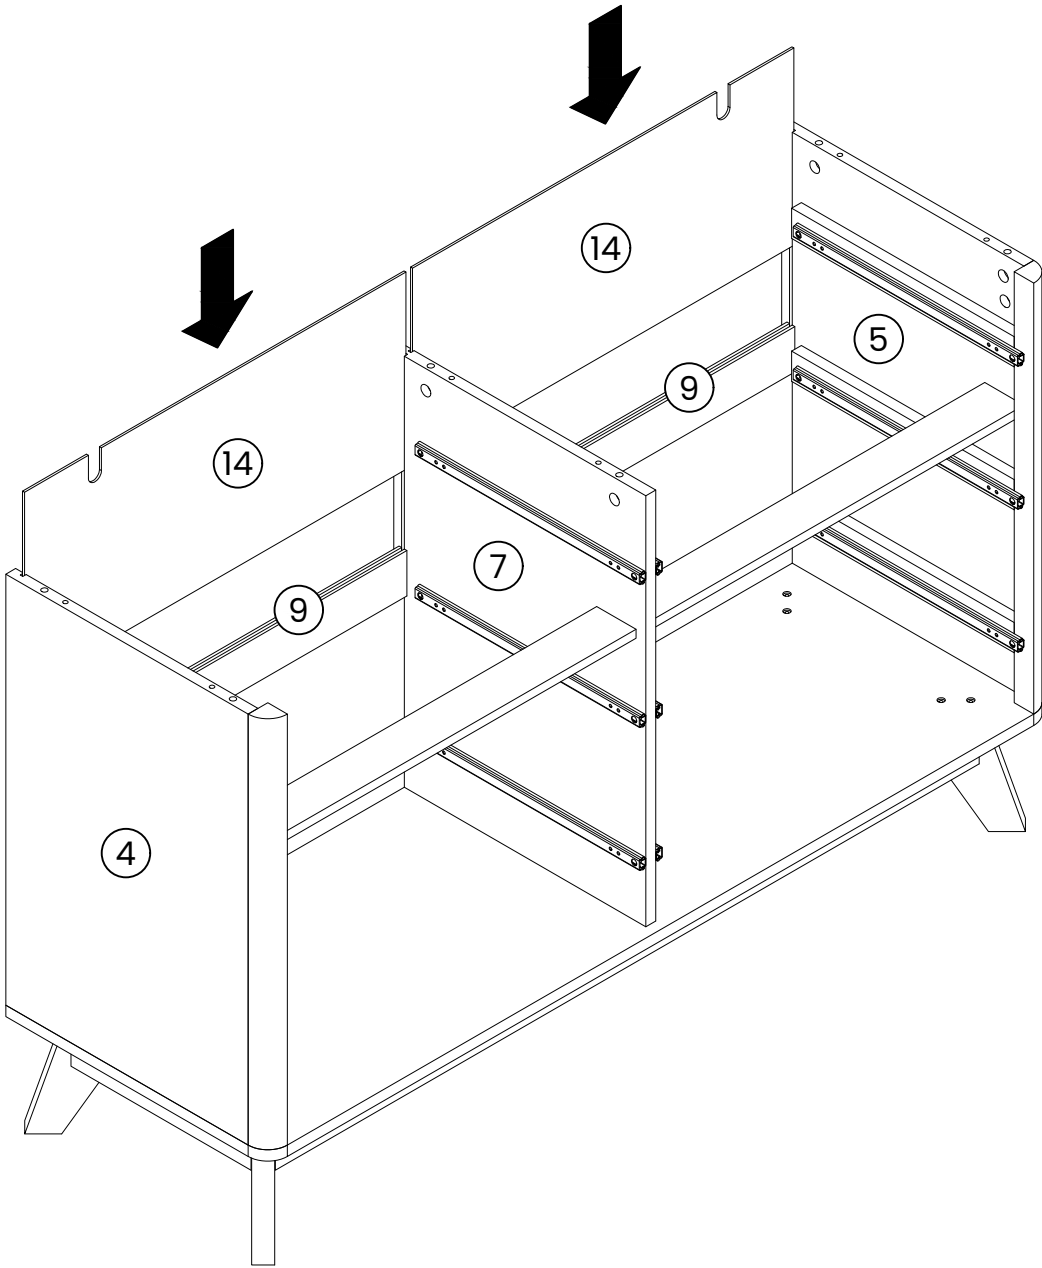



Note:

Step 22 / 31

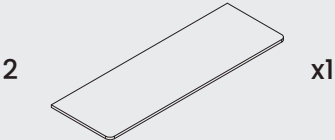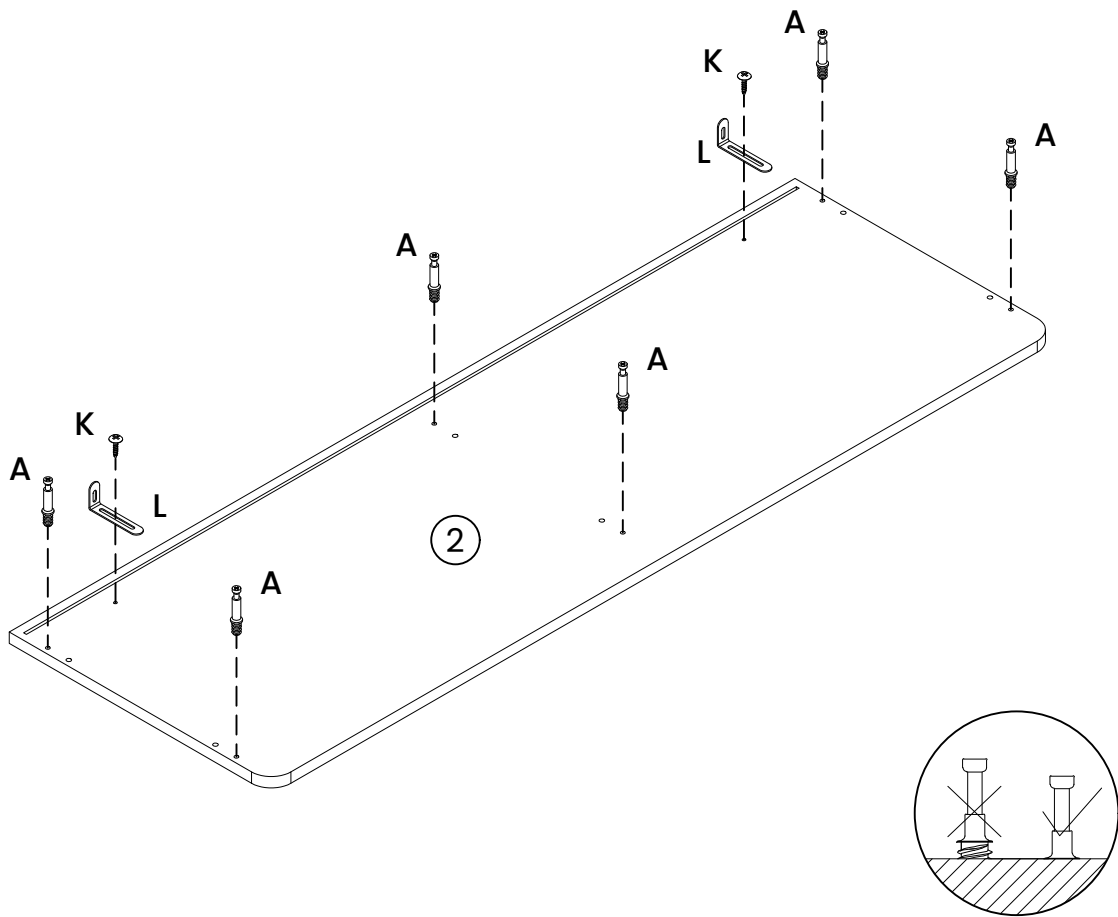

Note:


Step 23 / 31

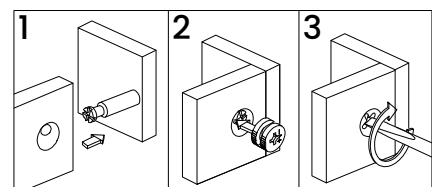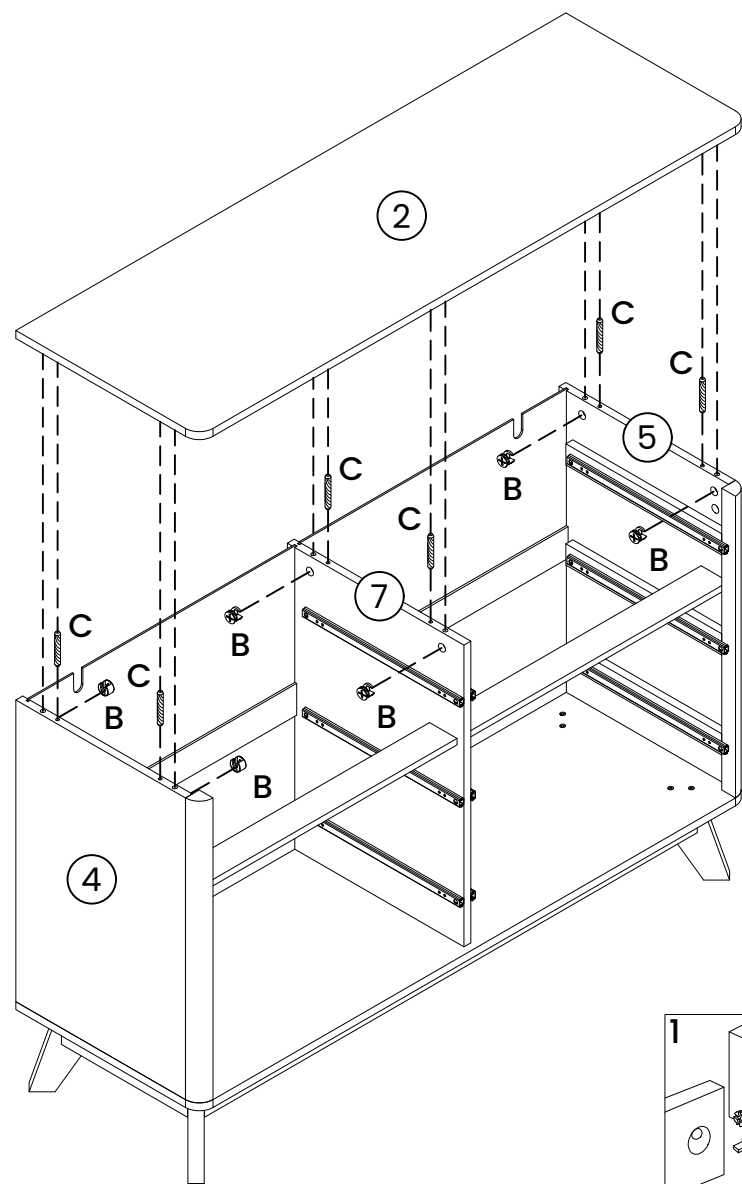

B  x6 C  x6

Note:
Two persons required.

Step 24 / 31

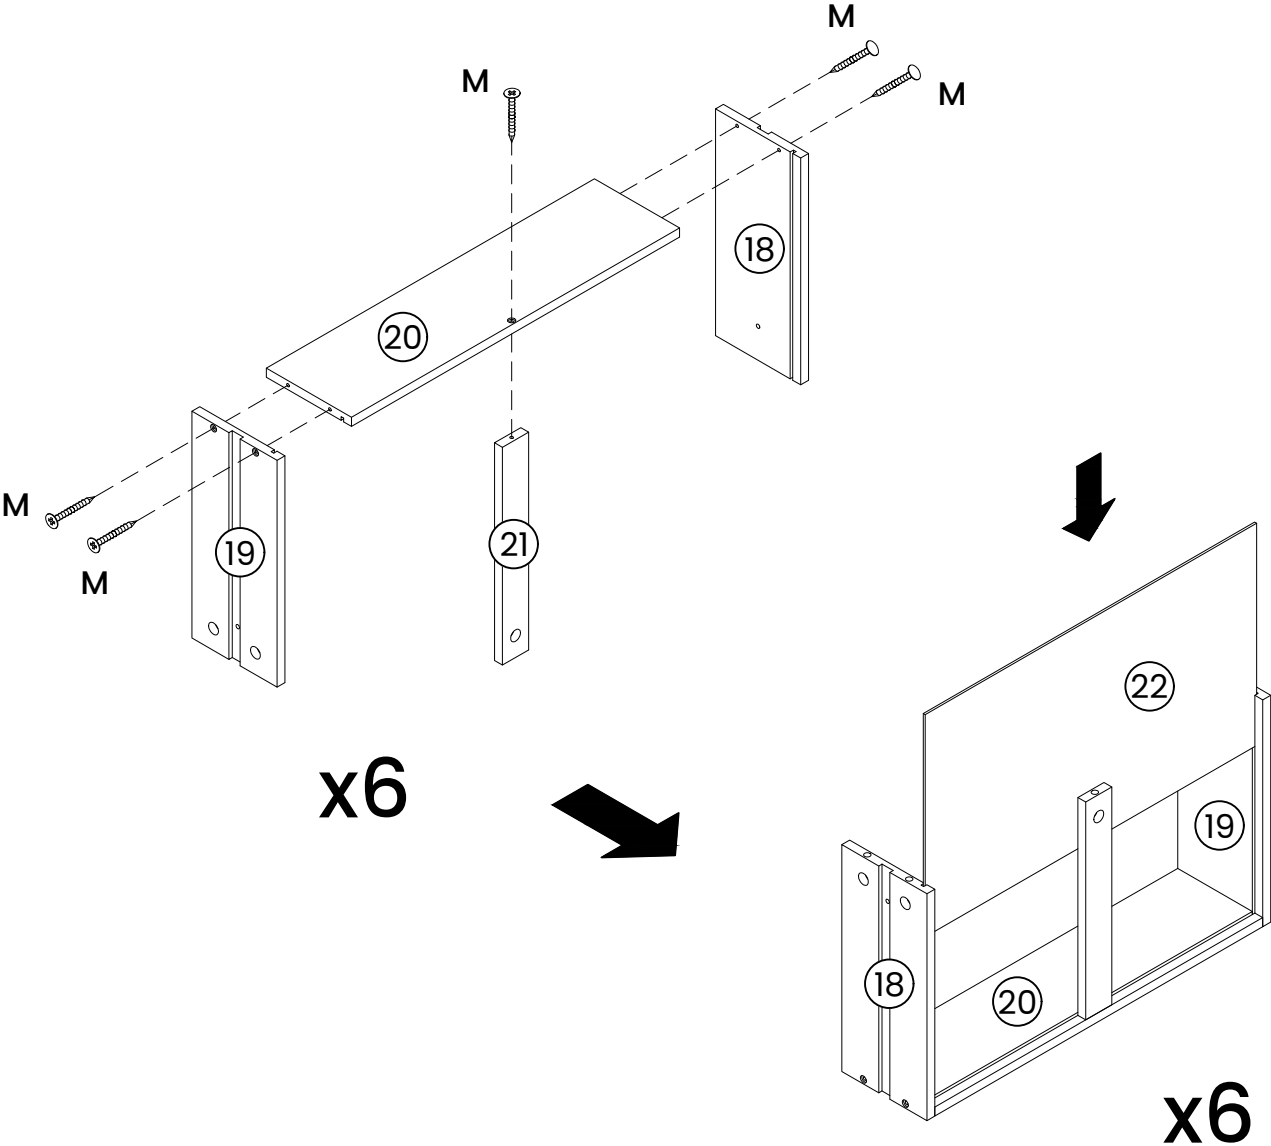


- 18 x6 19 x6 20 x6 21 x6 22 x6


M x30

Note:


Step 25 / 31

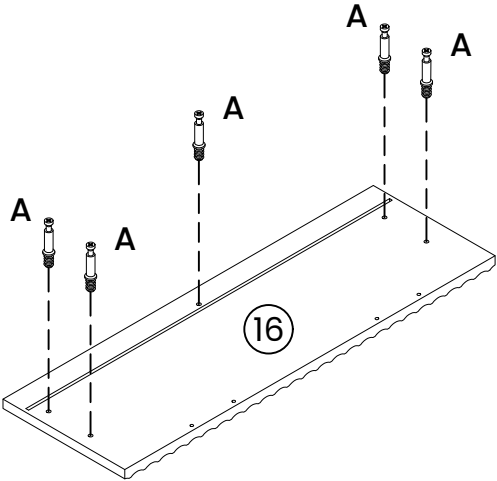


x3

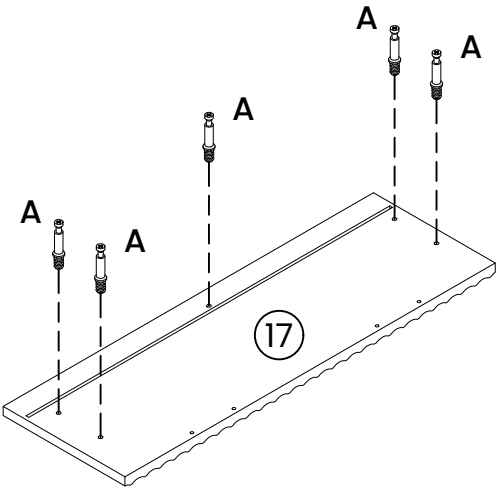

x3

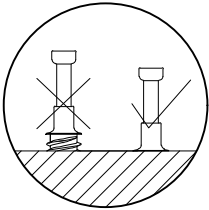


16

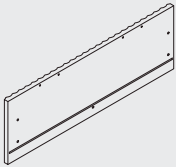

x3

17

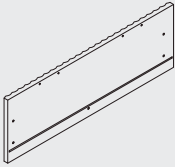

x3




A



x30


Note:

Step 26 / 31

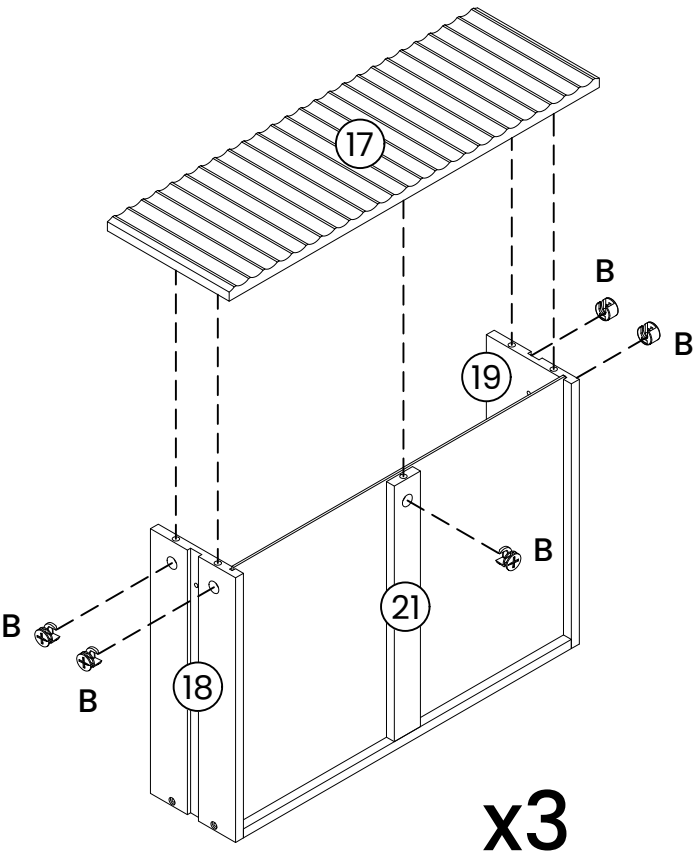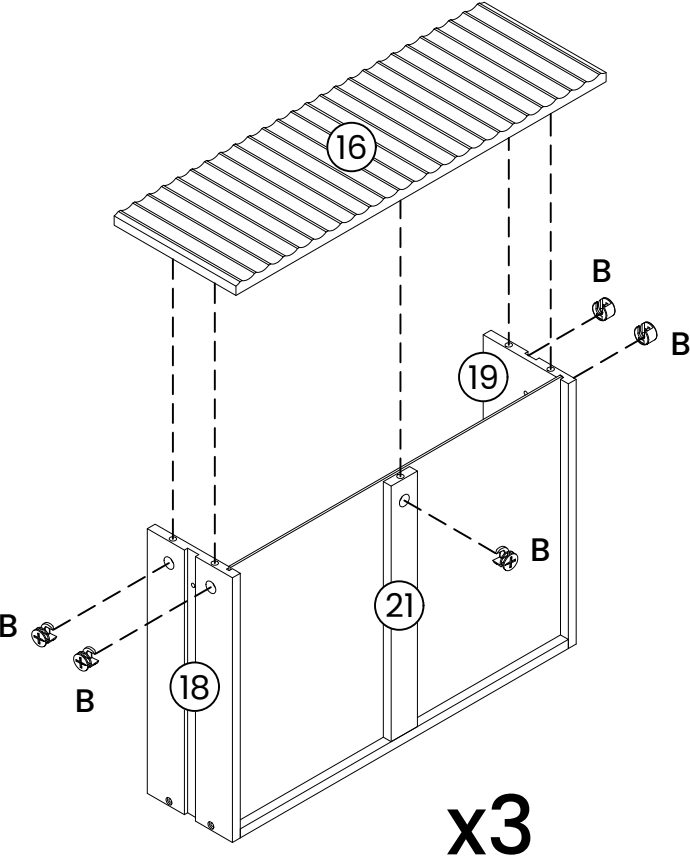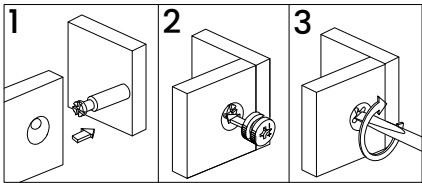


B  x30

Note:

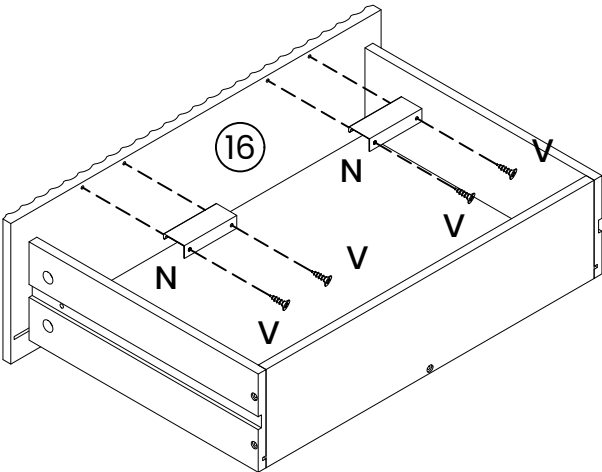


x3

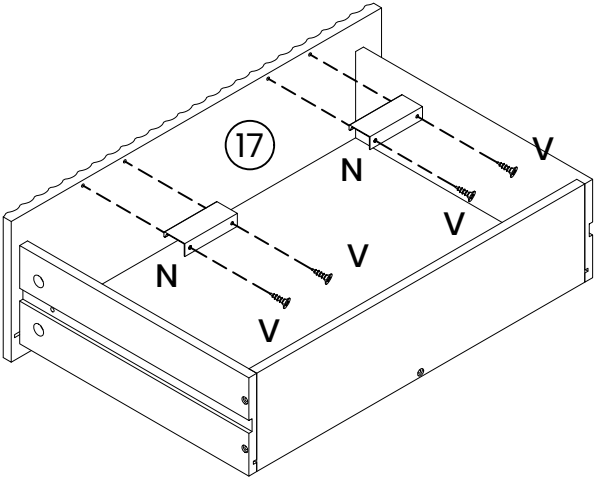

x3

N



x12



V



x24

Note:


Step 28 / 31

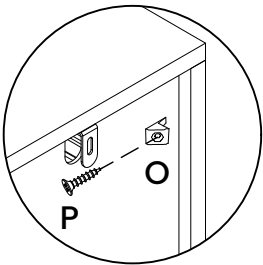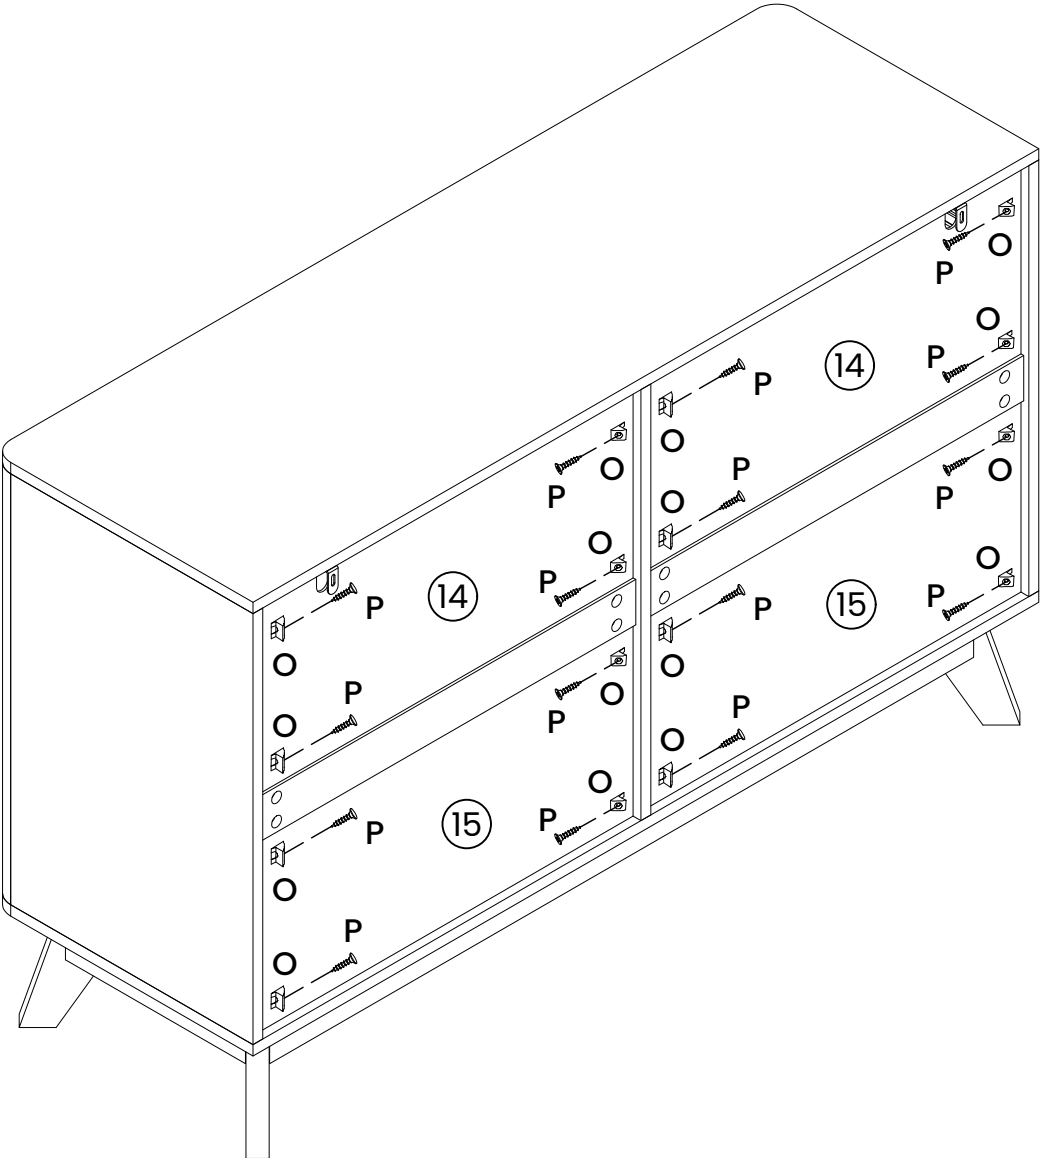



O  x16 P  x16

Note:

Step 29 / 31

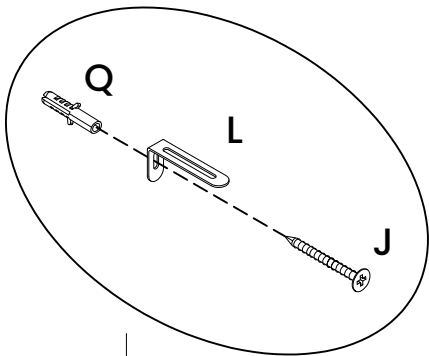


WALL

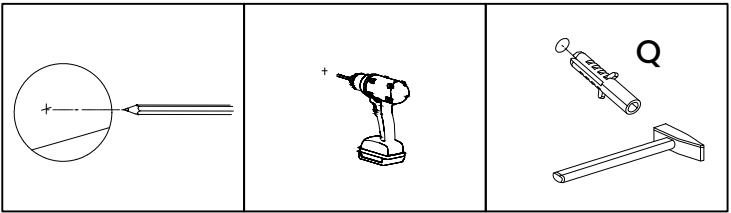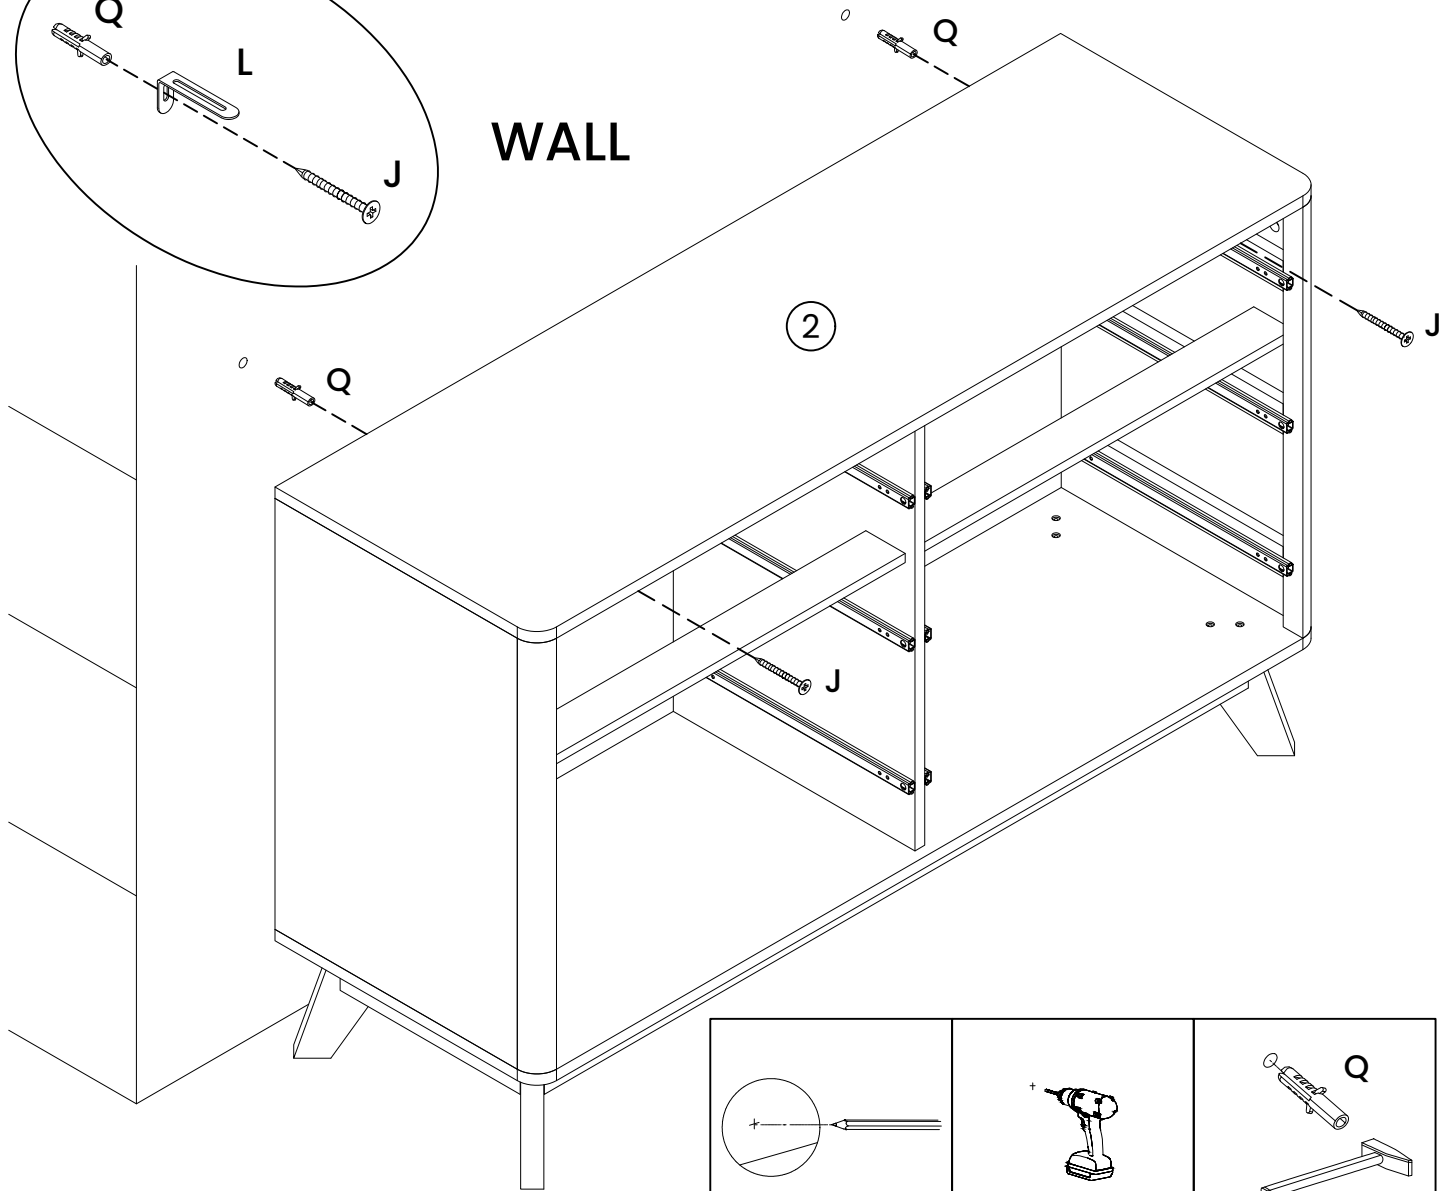

J  x2 Q  x2



Note:

Step 30 / 31

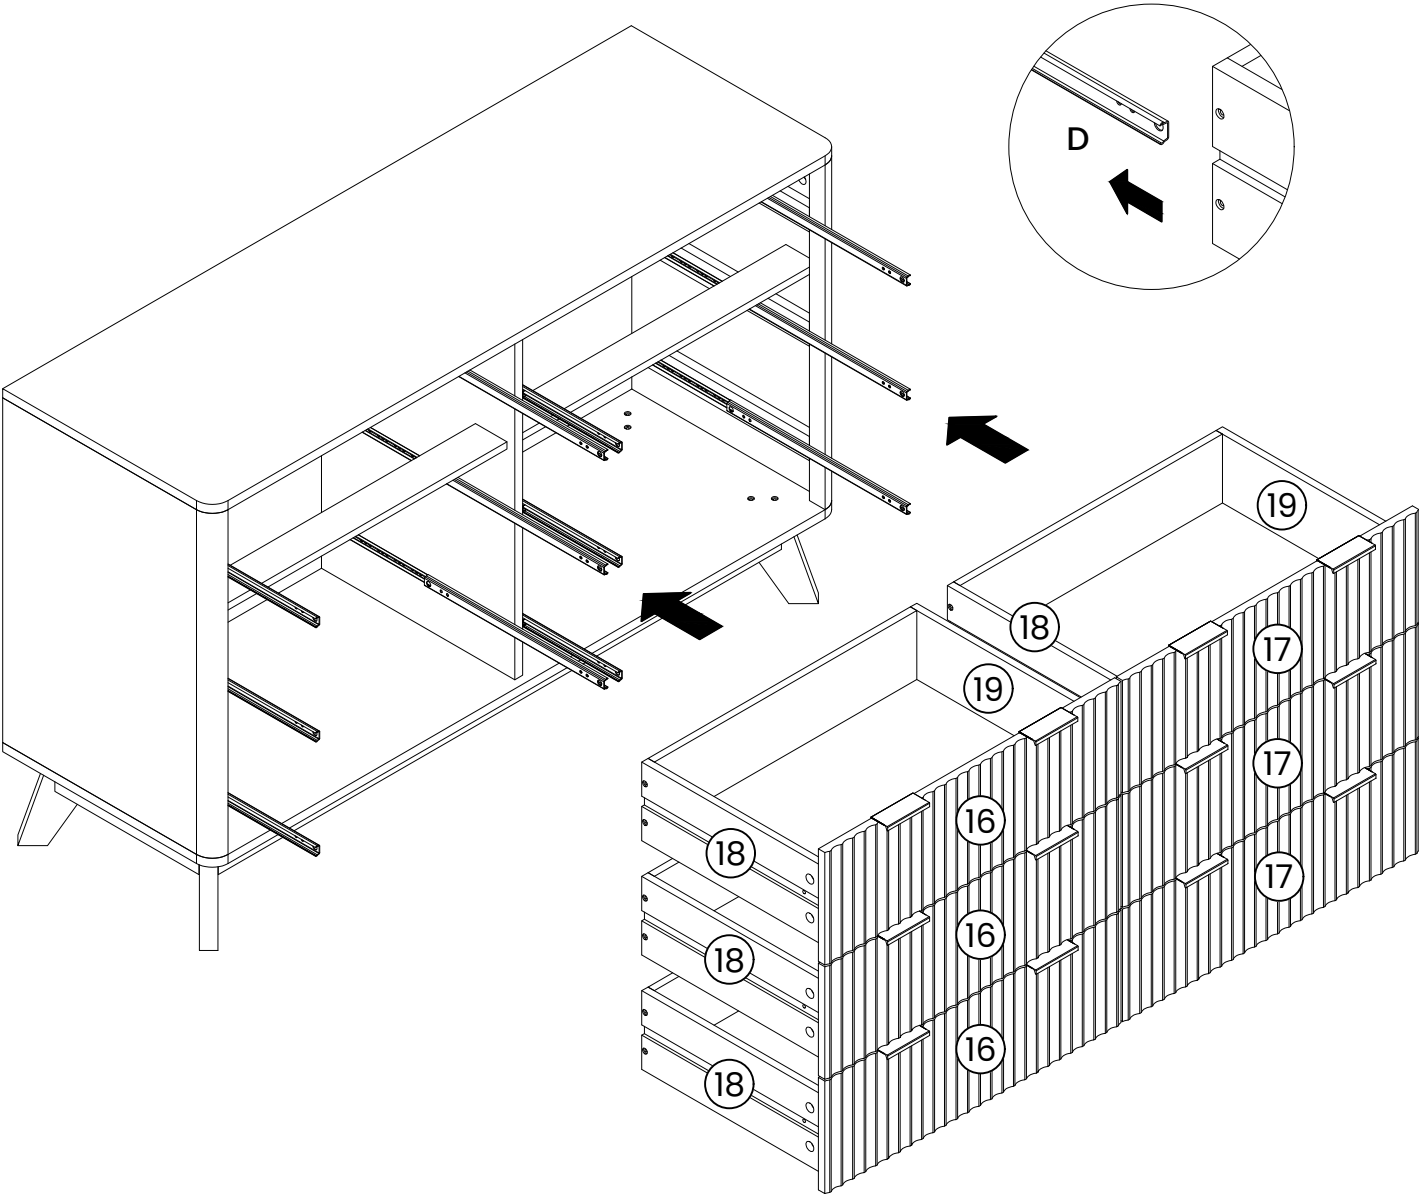

Note:

Step 31 / 31

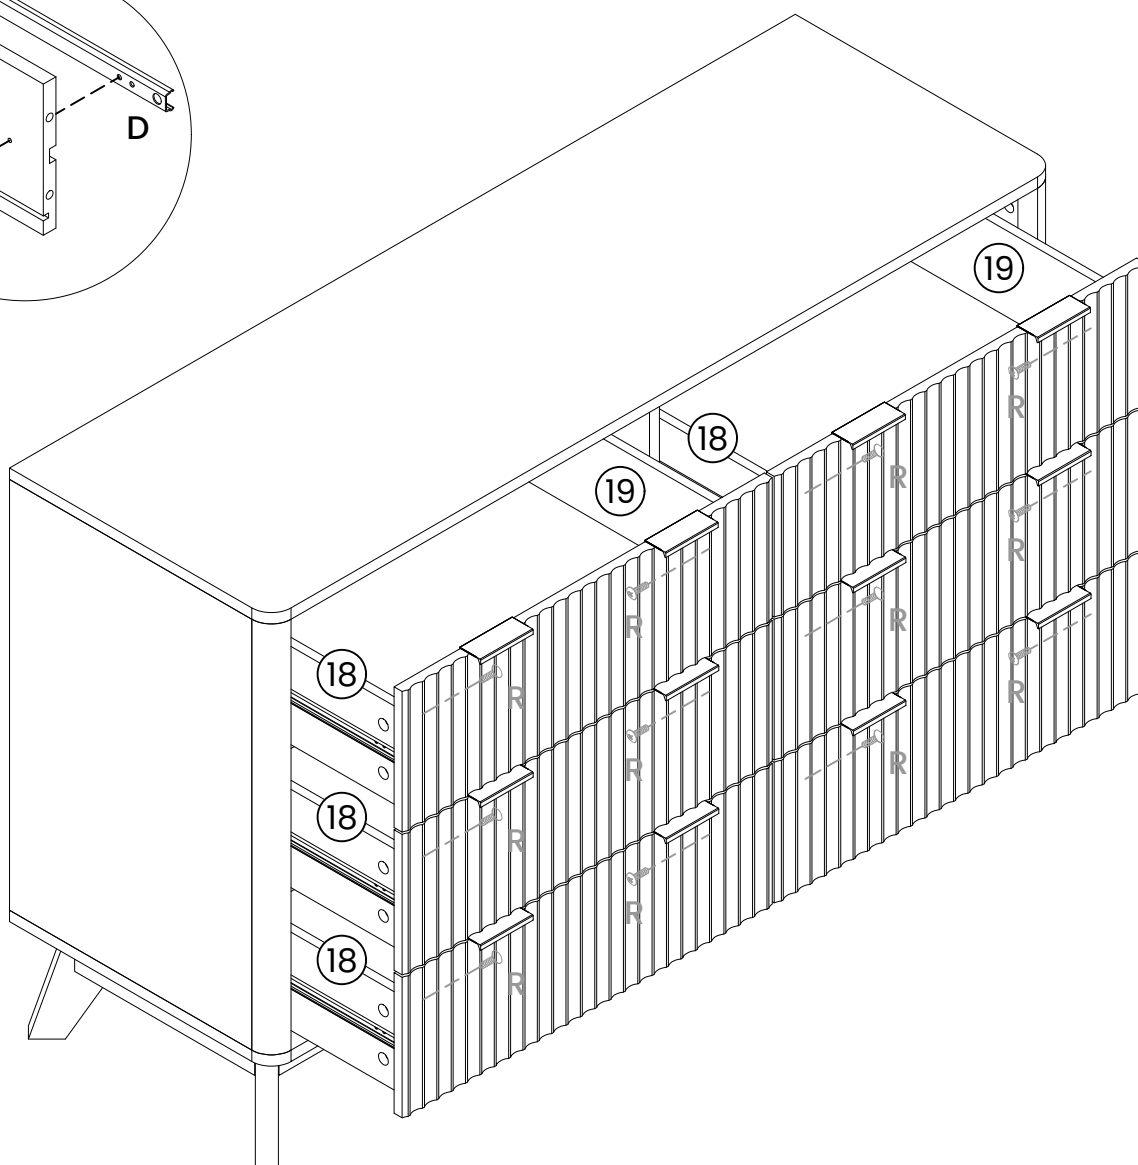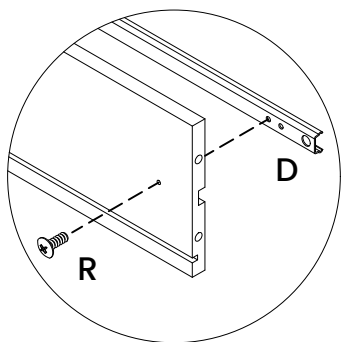


R  x12


Note:

Screw R needed to be installed from inside of the drawer to outside.


You may need patience to get a perfect smooth slide of drawer experience, and we appreciate your patience.
Asking for a second person to assist you will simplify the process.

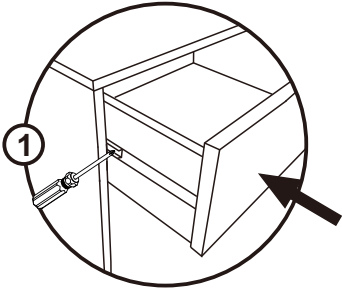


1.Align Components: Position the groove on the drawer side to match the rail profile. Insert a precision tool (e.g., screwdriver tip) into the outermost hole of the slide rail. Ensure both sides are aligned symmetrically.

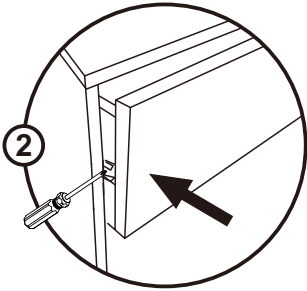

2.Slide Drawer Inward: Gently push the drawer into the cabinet until slide come up against drawer front. This step needs to be done simultaneously for both sides.

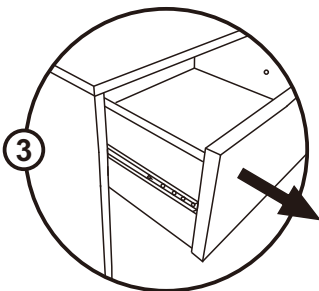

3.Secure & Adjust: While maintaining pressure on the tool, slowly pull the drawer outward until slide can not be moved.

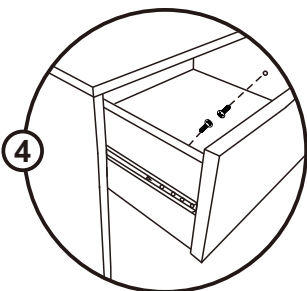

4.Finalize Installation: Locate the pre-drilled mounting holes where the rails meet the drawer sides. Securely tighten all screws on both sides.