


# ASSEMBLY INSTRUCTIONS

## Cabinet with Mirror

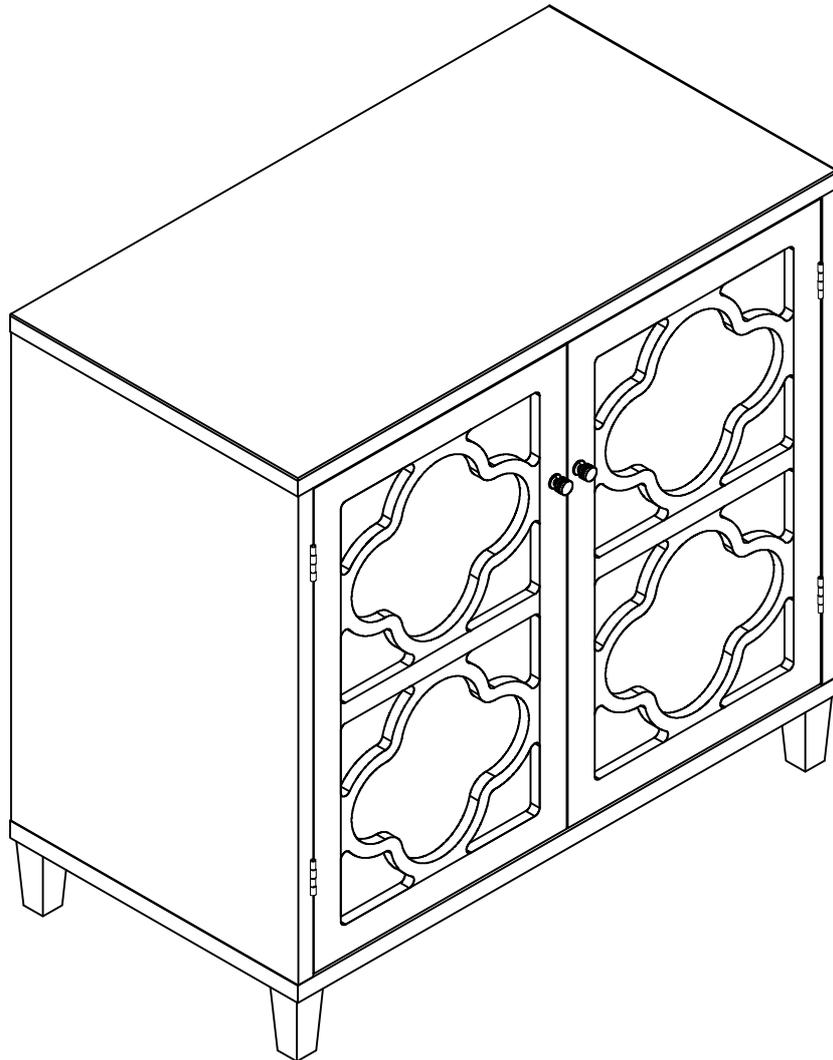


**ASSEMBLY  
REQUIREMENTS**

2-Person  
Assembly

2 Hours  
Assembly Time  
(Approximate)

Tools Required  
(Not Provided)



Phillips Screwdriver



Flat Screwdriver



Mallet

**Thank you for purchasing our product!**

Please refer and use this assembly instruction to assemble the product. Contact our customer service department in case there are any missing or damage parts or hardware.

**We appreciate your business!**

# ASSEMBLY INSTRUCTIONS

## Cabinet with Mirror

### ASSEMBLY PREPARATION

- Remove all packaging materials, staples and packing straps from the carton.
- Refer to Parts List and Hardware List, and ensure parts and hardware are complete before assembly. Contact customer service for missing parts.
- Place all wooden parts on a clean, flat and soft surface (e.g. carpet or rug) to prevent parts from getting scratched.

### SAFETY PRECAUTION

1. KEEP ALL HARDWARE PARTS OUT OF REACH OF CHILDREN.
2. DISPOSE PLASTIC PACKAGING MATERIAL IMMEDIATELY TO AVOID ANY RISK OF SUFFOCATION TO CHILDREN AND ANIMALS.

### TIPS FOR ASSEMBLY

1. Allow ample room for assembly and in close proximity to where the product will be placed.
2. Assemble the product on a surface that does not scratch or damage the exterior gloss and finish of the furniture.
3. Identify all of the parts, hardware and quantities required for each step.
4. During assembly, do not over-tighten any fittings as this may cause damage.
5. DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT.
6. Always place the product on a flat, level surface.
7. Do not sit or stand on the partially assembled product; only use the product for which it is intended.

### CARE AND MAINTENANCE









- Use a slightly damp cloth to clean the product. Do not use bleach or abrasive cleaning material.
- Check all the fittings periodically and re-tighten as necessary. Do not use the product if any of the parts is damaged or broken.
- Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or delaminate.
- Do not place hot items (e.g. hot drinks) directly onto the wood surface.
- Do not drag and/or pull the furniture.

This product is for indoor and household use only - not for commercial use.




# ASSEMBLY INSTRUCTIONS

## Cabinet with Mirror

### PARTS LIST
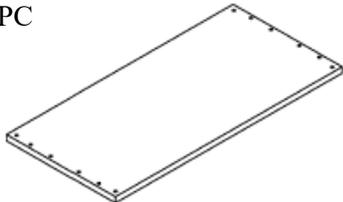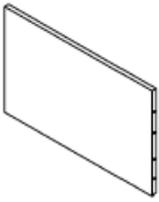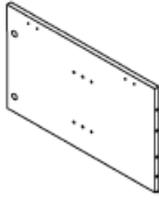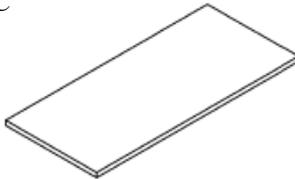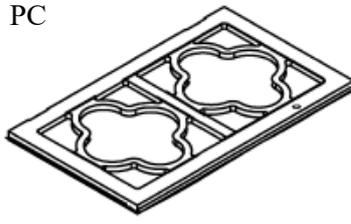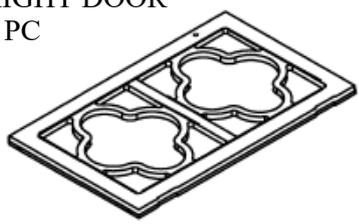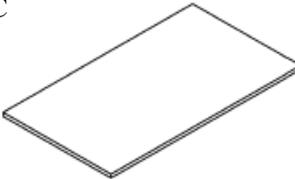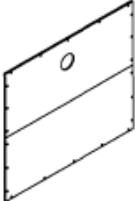
<p><b>BOTTOM PANEL</b> 1 PC</p>  <p style="text-align: right;"><b>A</b></p>	<p><b>LEG</b> 4 PCS</p>  <p style="text-align: right;"><b>B</b></p>	<p><b>LEFT PANEL</b> 1 PC</p>  <p style="text-align: right;"><b>C</b></p>
<p><b>RIGHT PANEL</b> 1 PC</p>  <p style="text-align: right;"><b>D</b></p>	<p><b>TOP PANEL</b> 1 PC</p>  <p style="text-align: right;"><b>E</b></p>	<p><b>LEFT DOOR</b> 1 PC</p>  <p style="text-align: right;"><b>F</b></p>
<p><b>RIGHT DOOR</b> 1 PC</p>  <p style="text-align: right;"><b>G</b></p>	<p><b>SHELF</b> 1 PC</p>  <p style="text-align: right;"><b>H</b></p>	<p><b>BACK PANEL</b> 1 PC</p>  <p style="text-align: right;"><b>I</b></p>

### HARDWARE LIST

<p><b>WOOD DOWEL</b> 12 PCS</p>  <p style="text-align: center;">D8*30 (1)</p>	<p><b>CAM BOLT</b>  (2A) D15 (2A)</p> <p><b>CAM-LOCK</b>  (2B) 4 SETS</p>	<p><b>VELVET HOLE COVER</b> 4 PCS</p>  (3)	<p><b>ROUND HEAD BOLT</b>  (4A) M6*40 (4A)</p> <p><b>FLAT WASHER</b>  (4B) 8 SETS</p>
<p><b>MAGNET LOCK</b>  (5A)</p> <p><b>ROUND HEAD SCREW</b>  (5B) M3*12 1 SET</p>	<p><b>IRON CLASP</b>  (6A)</p> <p><b>FLAT HEAD SCREW</b>  (6B) M3*12 2 SETS</p>	<p><b>HINGE</b>  (7A)</p> <p><b>FLAT HEAD SCREW</b>  (7B) M3*15 4 SETS</p>	<p><b>KNOB</b>  (8A)</p> <p><b>ROUND HEAD BOLT</b>  (8B) M4*25 2 SETS</p>
<p><b>ROUND HEAD SCREW</b> 22 PCS</p>  <p style="text-align: center;">M3*15 (9)</p>	<p><b>ALLEN KEY</b> 1 PC</p>  <p style="text-align: right;">(10)</p>	<p><b>WASHER (ø9)</b>  (11A)</p> <p><b>WASHER</b>  (11B)</p> <p><b>STRAP ANCHOR SCREW</b>  (11C)</p> <p><b>SCREW</b>  (11D)</p> <p><b>SCREW</b>  (11E) M3.5*30 1 SET</p>	<p><b>SHELF HOLDER</b> 4 PCS</p>  <p style="text-align: right;">M4*16 (12)</p>

# INSTRUCTIONS FOR CAM-BOLT & CAM-LOCK




CAM-BOLT



CAM-LOCK

## Tools Required



### INSERTING AND TIGHTENING CAM-BOLT

Place Cam-bolt on pre-drilled hole and screw in vertically

Shoulder is flushed (on the same level) with the panel.

Shoulder is above the panel.

Place Cam-bolt on the designated pre-drilled holes on the panel. Use a Phillips Screwdriver to screw-in Cam-bolt vertically until shoulder is flushed (on the same level) with panel.

### INSERTING CAM-LOCK

Insert Cam-lock with arrow align to Cam-bolt head

CORRECT

WRONG

Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.

### TIGHTENING CAM-LOCK




Use a Flat-head Screwdriver to turn Cam-lock clockwise so it locks onto the head of the Cam-bolt. Turn until it is snug (about 3/4ths of a turn) -- over-tightening could damage Cam-lock or/and Cam-bolt.

## STEP 1 - INSTALL LEG (B) TO BOTTOM PANEL (A)


- Insert Wood Dowel (1) into the hole (without screw thread) on (B) and attach leg to bottom-side of (A). Use a mallet to tap in wood dowel if necessary
- Use Bolt (4A) fitted with Flat Washer (4B) to fasten leg to bottom panel. Use Allen Key (10) to drive (4A).

Note: For illustrative purpose, Bottom Panel is shown flat down. It is easier to assemble the Legs with the Bottom Panel resting vertically on one of its long edge.

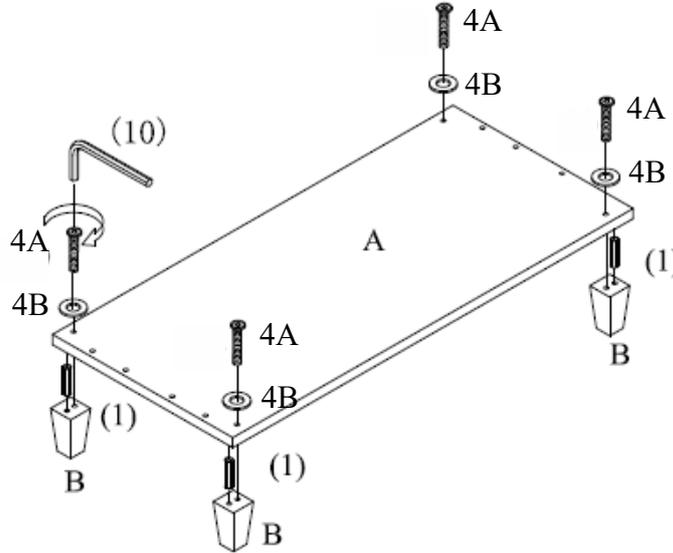


## STEP 2 - INSTALL LEFT AND RIGHT PANEL (C & D) TO BOTTOM PANEL (A)

- Position the parts as shown.
- Attach Left & Right Panel (C & D) to Bottom Panel (A) using Wood Dowel (1) as shown. Use a mallet to tap in wood dowel if necessary
- Use Bolt (4A) fitted with Flat Washer (4B) to fasten (C & D) to (A). Use Allen Key (10) to drive (4).
- With assistance, set the assembly right-side up carefully.

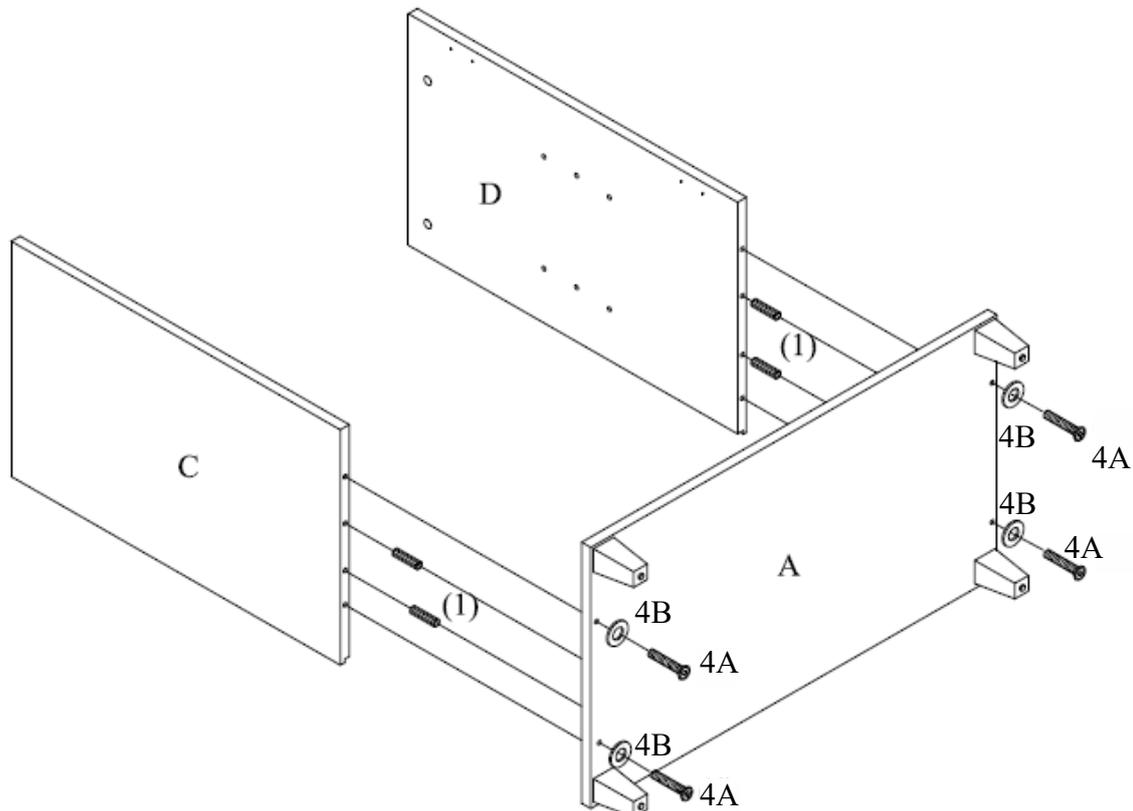


### STEP 3 - INSTALL TOP PANEL (E)

- a) Lay Top Panel (E) bottom-side up on a material that does not scratch or damage the part, and screw in Cam-bolt (2A). Refer to Page 4 for instructions on inserting and tightening cam-bolt.
- b) Insert Wood Dowel (1) into the inner middle holes on top edge of side panels (C & D).
- c) Position Top Panel (E) right-side up and attach to (C & D) via cam-bolts and wood dowels.
- d) Insert Cam-lock (2B) into designated holes on (C & D) and turn clockwise to lock onto cam-bolt.  
(Refer to Page 4 for instructions on inserting and tightening cam-lock.)
- e) Use Velvet Hole Cover (3) to conceal cam-lock holes.

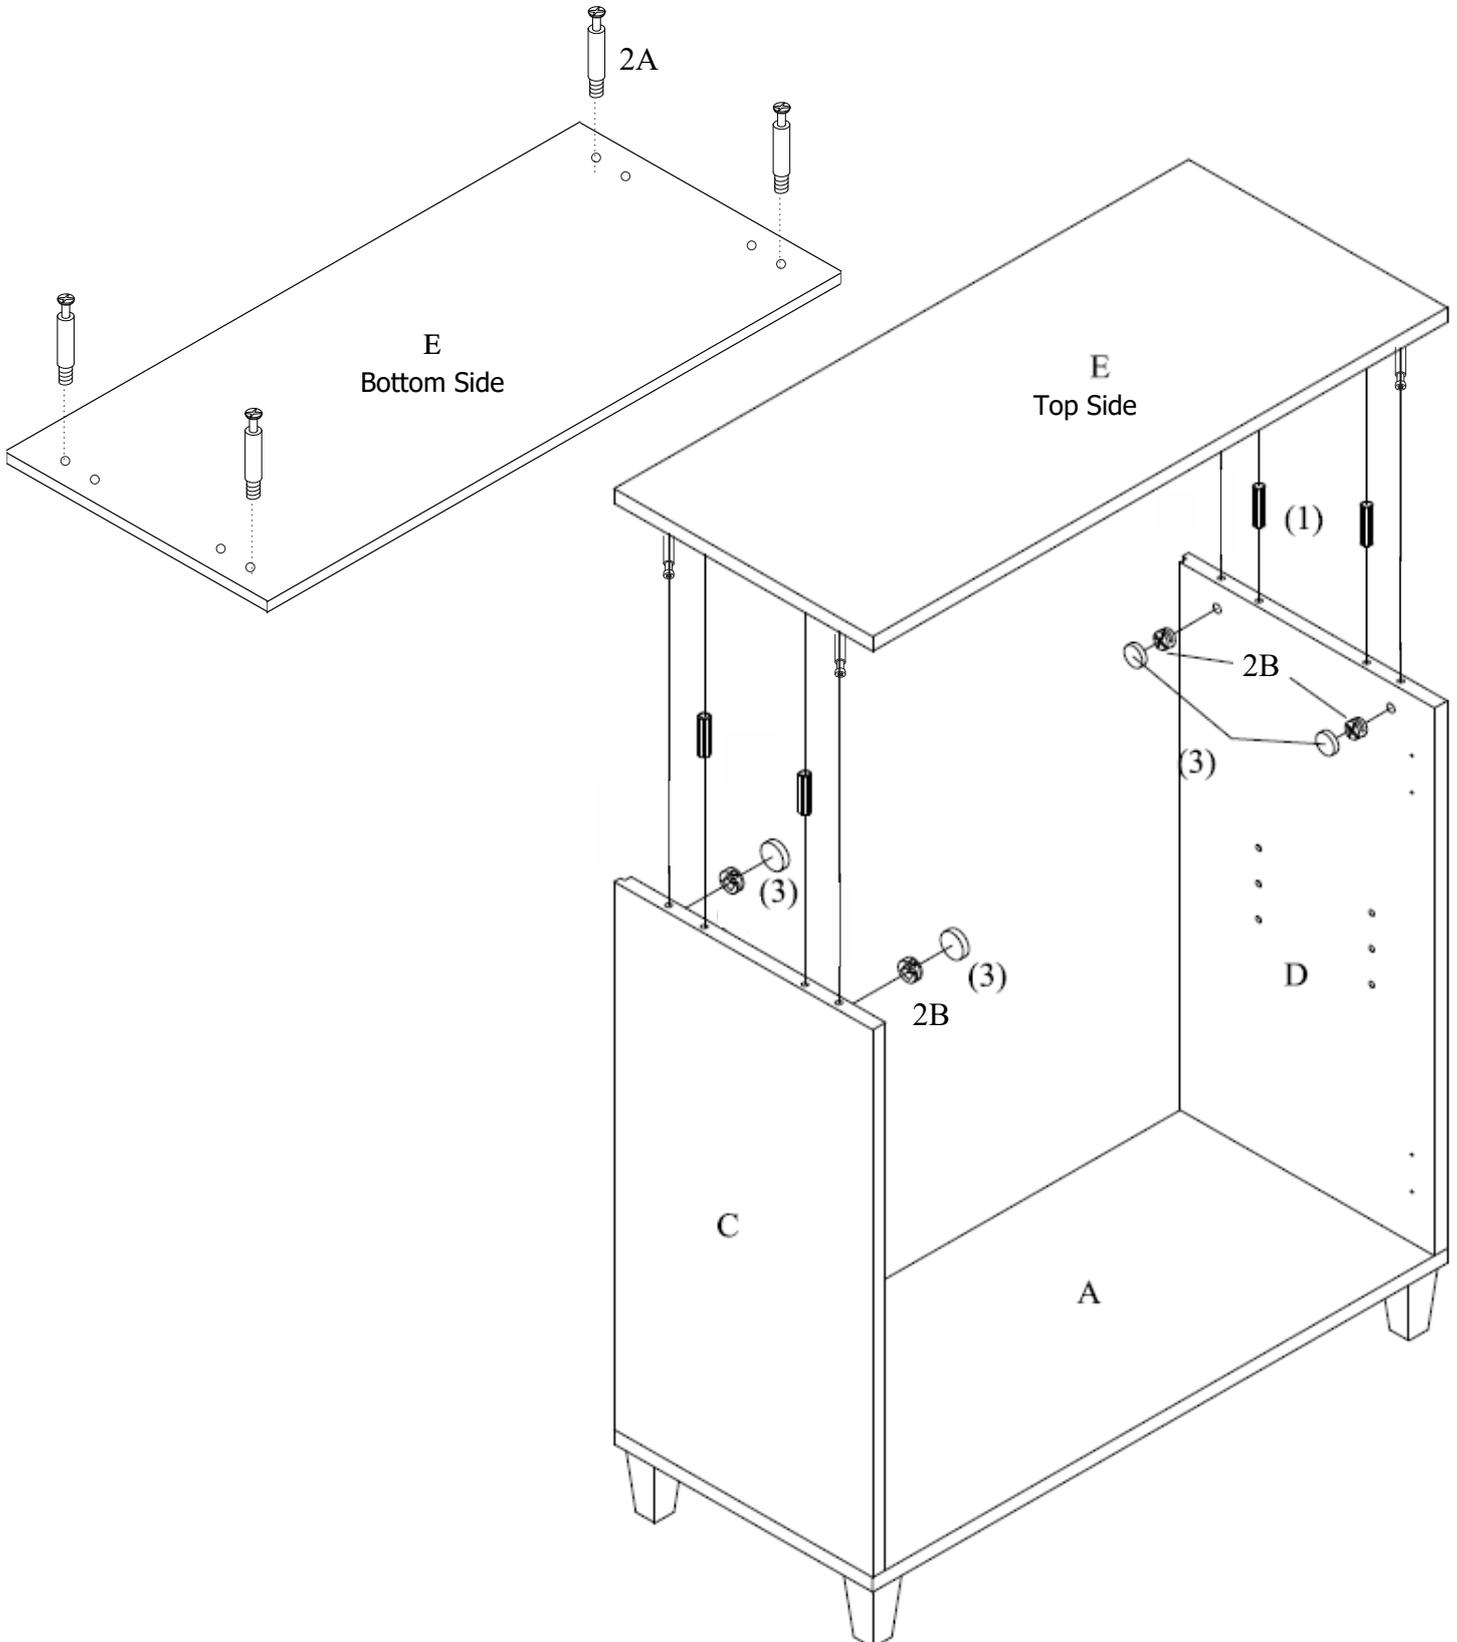


## STEP 4 - INSTALL DOOR HARDWARE

- a) Affix Iron Clasp (6A) to Left and Right Door (F & G) using Flat Screw (6B).
- b) Use Flat Head Screw (7B) to fasten Door Wing of Hinge (7A) to (F & G).
- c) Use Round Head Bolt (8B) to fasten Knob (8A) to each door.

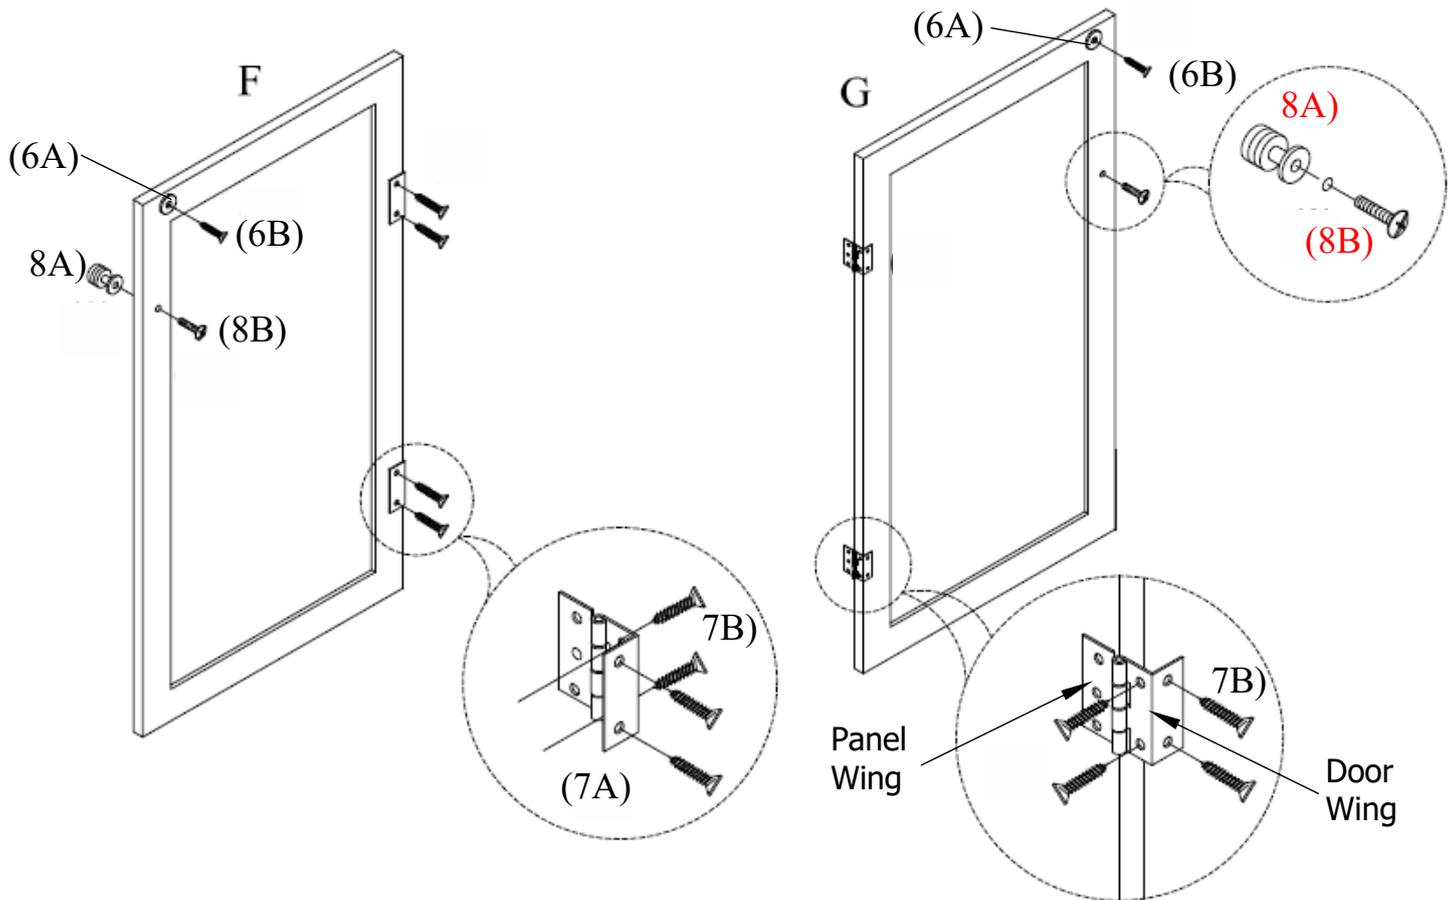


## STEP 5 - INSTALL DOOR AND MAGNETIC LOCK

- a) Align drill holes on Panel Wing of Hinge on Left & Right Door (F & G) to pilot holes on the respective Left & Right Panel (C & D), and use Flat Head Screw (7B) to fasten Panel Wing.
- b) Affix Magnet Lock (5A) to the bottom-side of Top Panel (E) using Round Head Screw (5B).

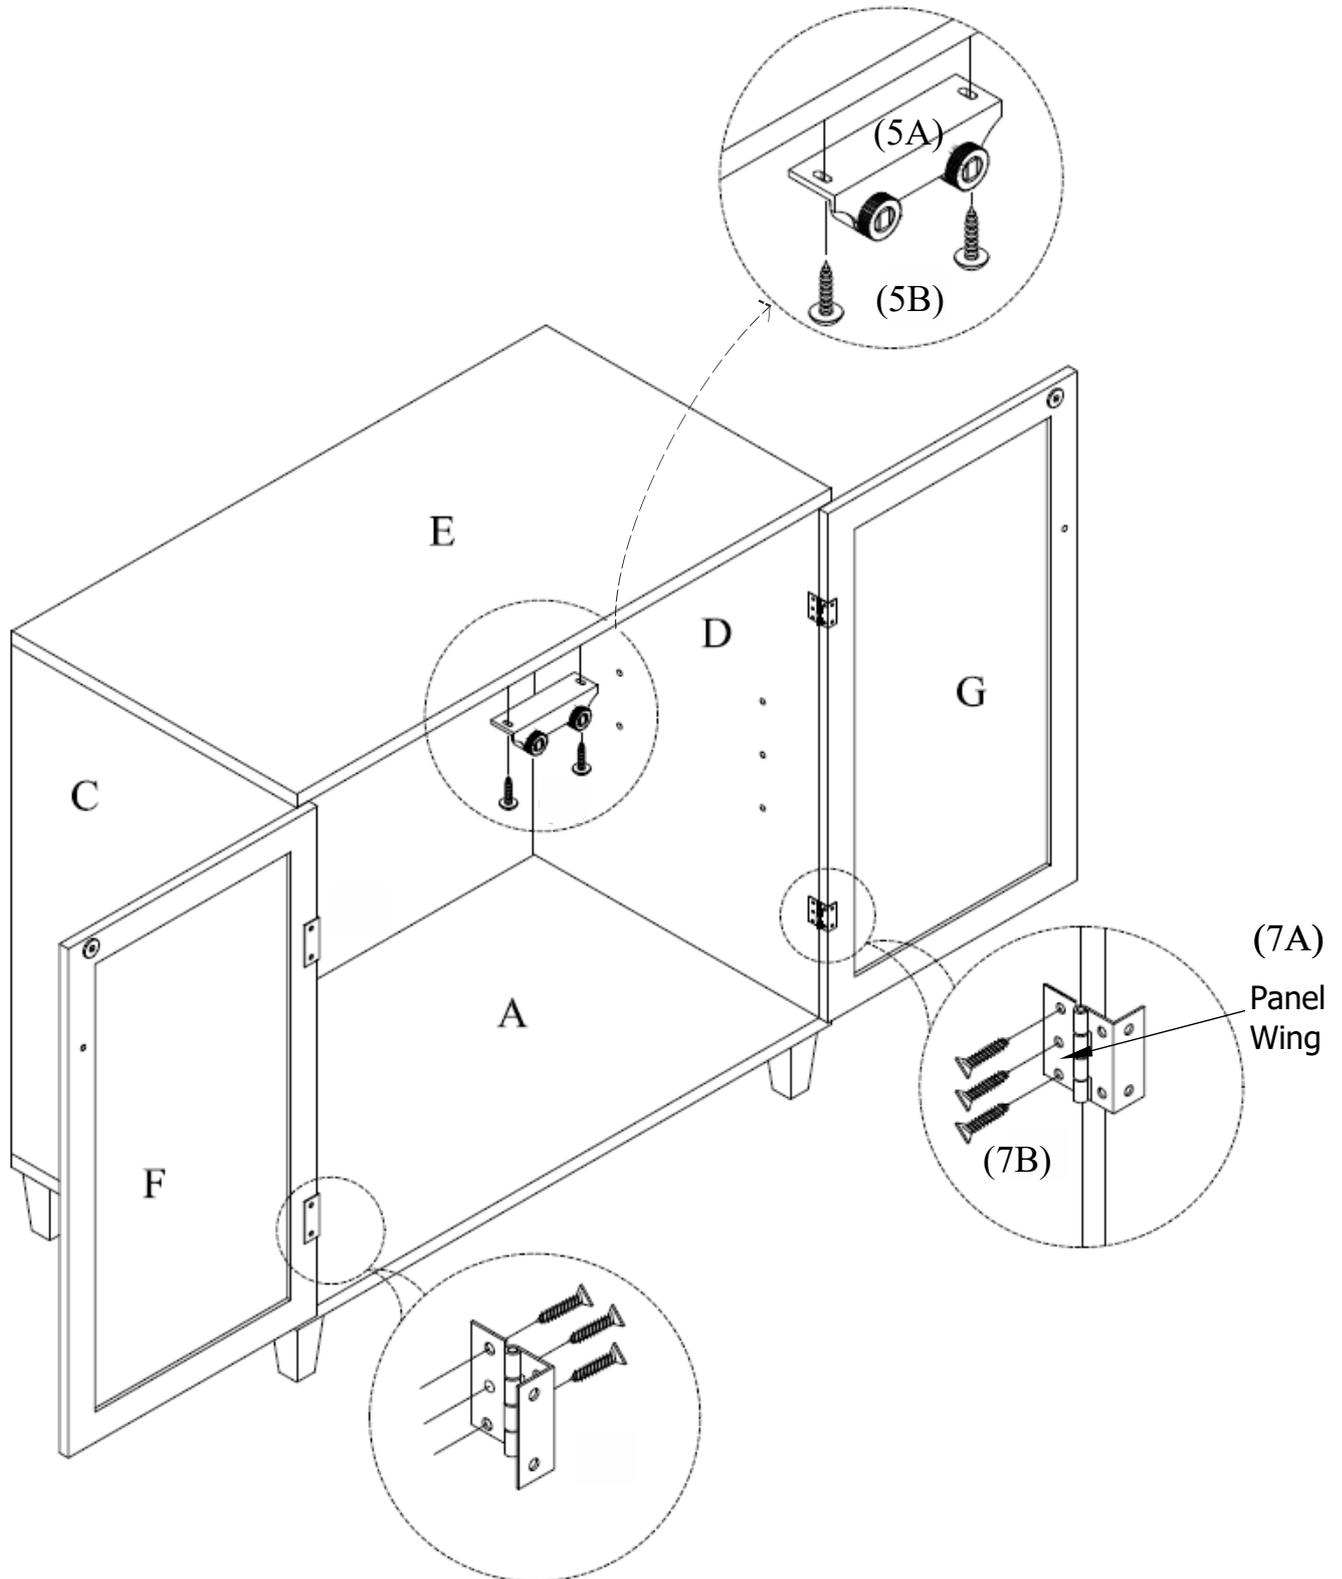


## STEP 6 - INSTALL SHELF

- a) Select desired the desired level for Shelf (H) and screw in Shelf Holder (12).
- b) Place Shelf (H) to sit on Shelf Holder (12).

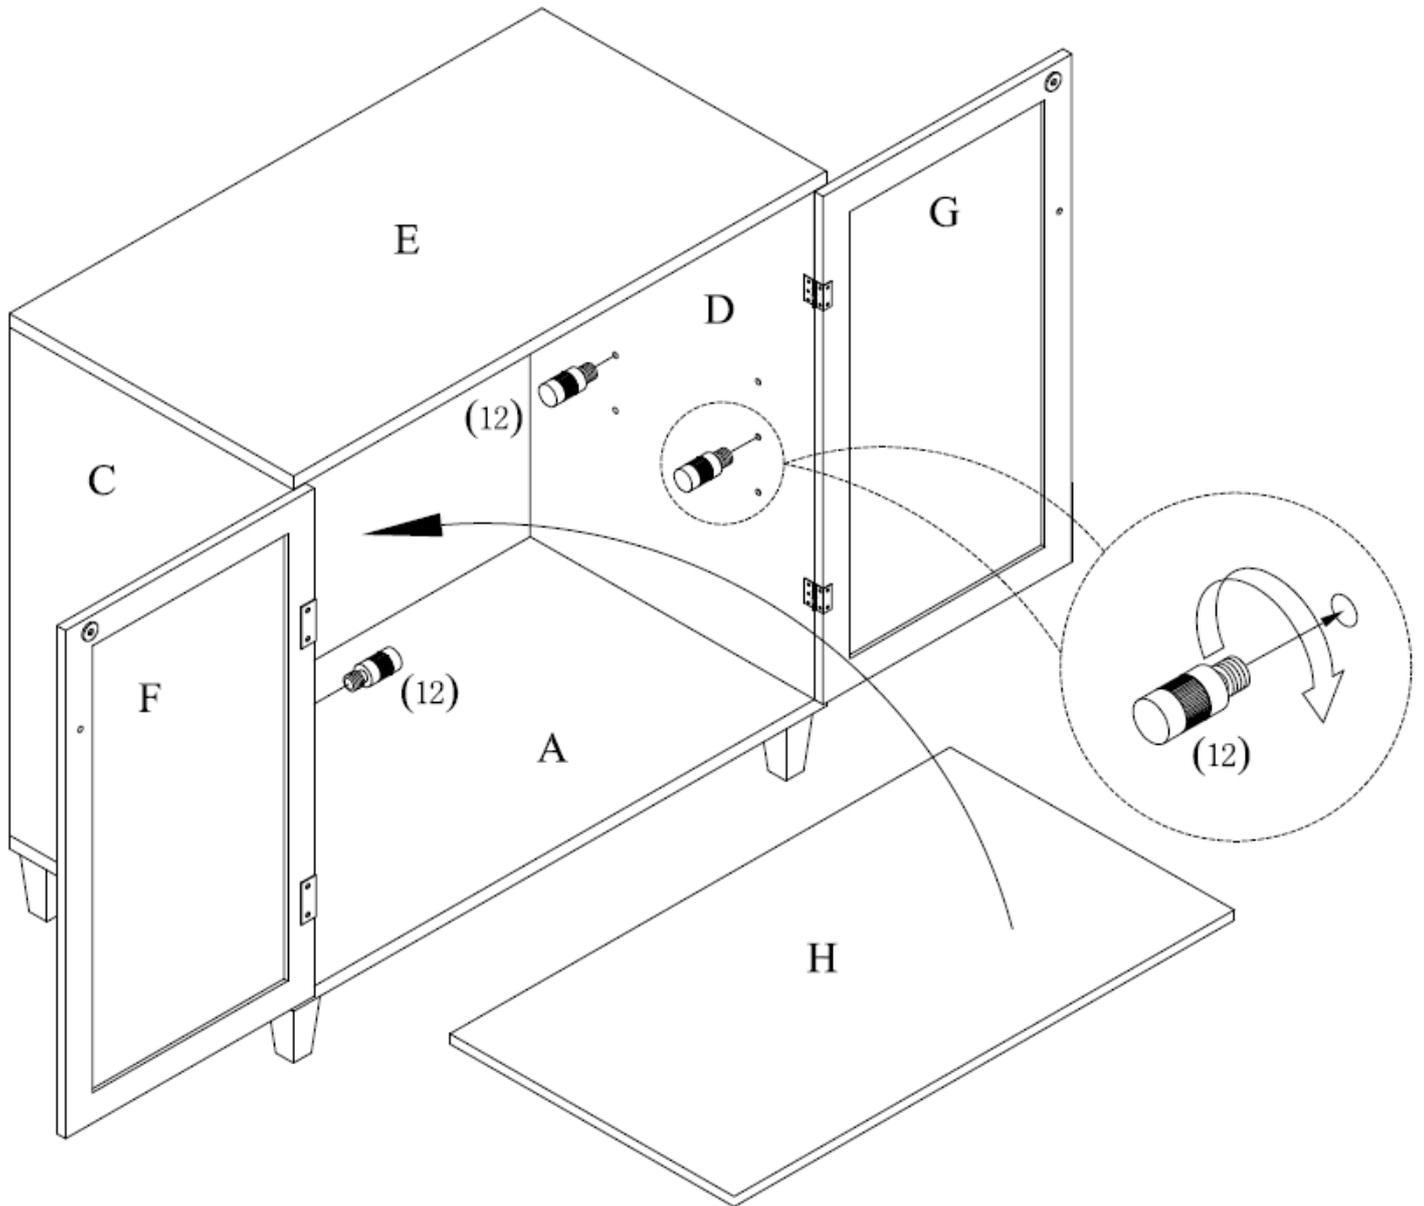

## STEP 7 - INSTALL BACK PANEL AND STRAP


- a) Place Back Panel (I) to fit on the Side, Top and Bottom Panels - check that Back Panel is spaced evenly within the 4 panels - and fasten with Round Head Screw (9) as shown.
- b) Use a Round Head Screw (9) fitted with Flat Washer (11B) to fasten Strap (11C) to center of Back Panel.

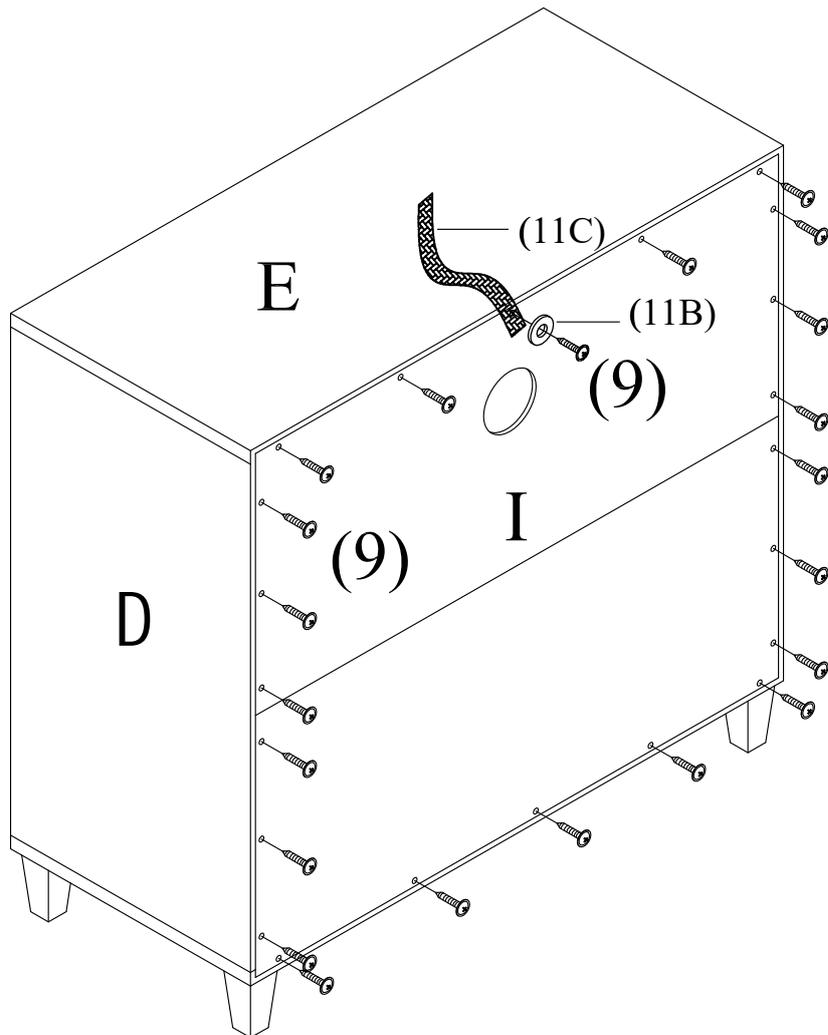

## STEP 7 - FASTEN STRAP TO WALL

NOTE: IN THIS STEP, BEFORE YOU DRILL A HOLE IN THE WALL ENSURE THAT THE LOCATION OF THE HOLE TO BE DRILLED IS FREE FROM HIDDEN ELECTRICAL WIRING, WATER, GAS OR OTHER UTILITY LINES AND CONDUIT.

- a) Drill a hole in the wall that would fit Anchor (11D) snugly and insert Anchor.
- b) Use Screw (11E) fitted with Washer (11A) to fasten the other/free end of Strap into the Anchor.

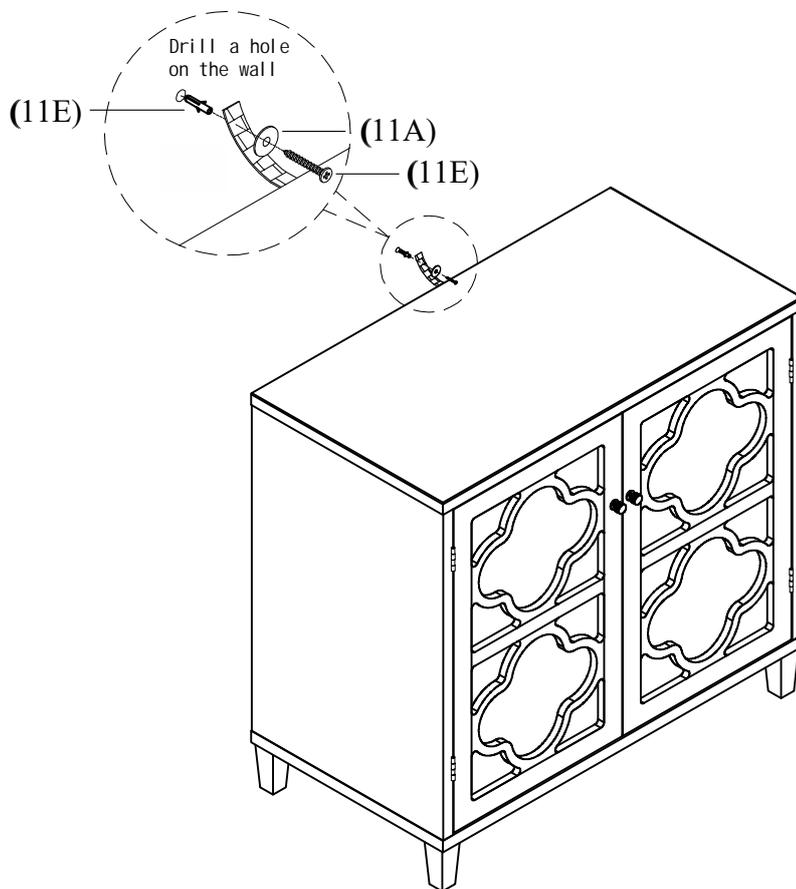

The assembly of cabinet is complete.