



ASSEMBLY INSTRUCTIONS

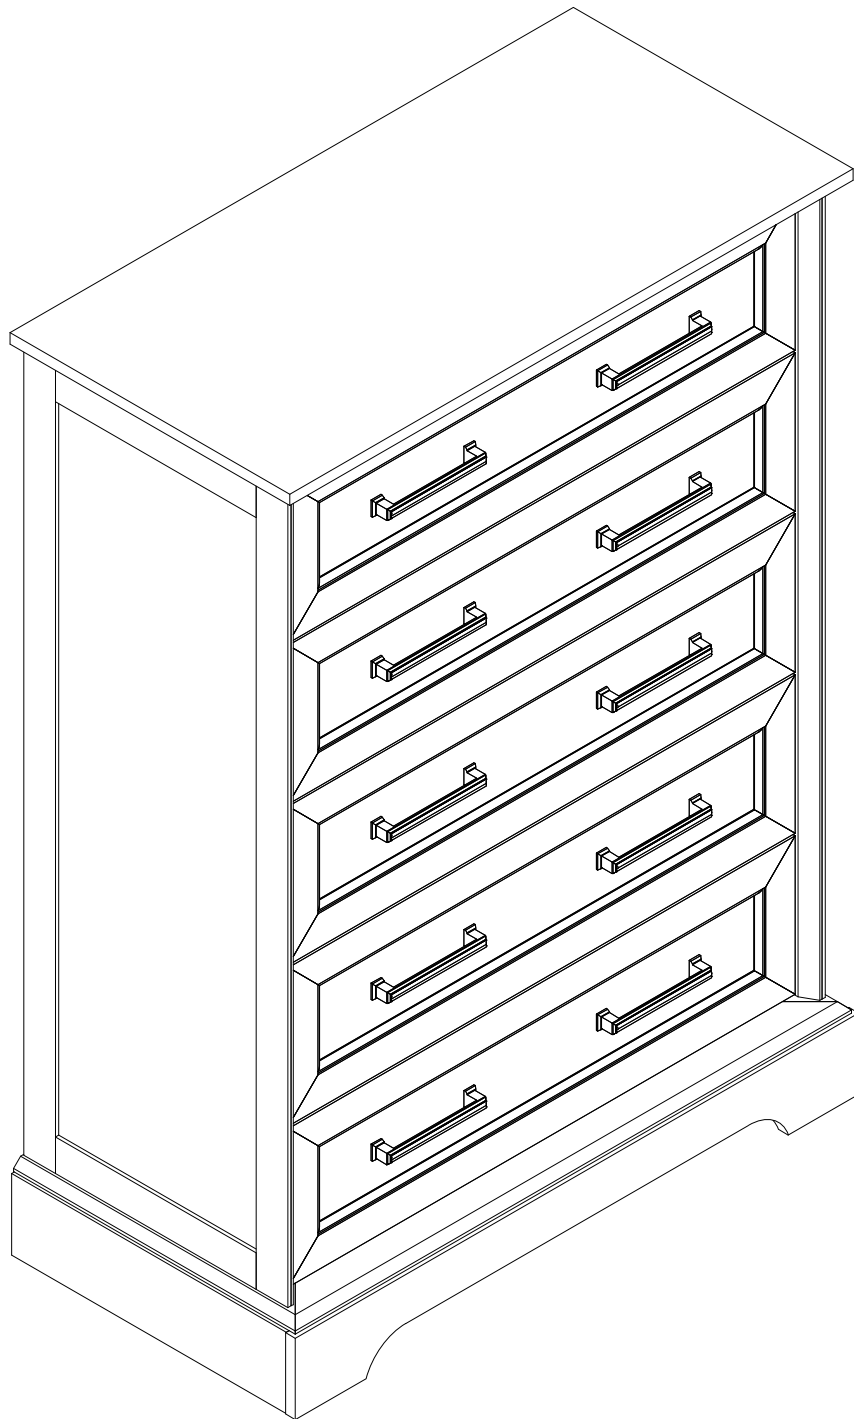

WARNING !


MAXIMUM LOAD
220 lb/ 100kg

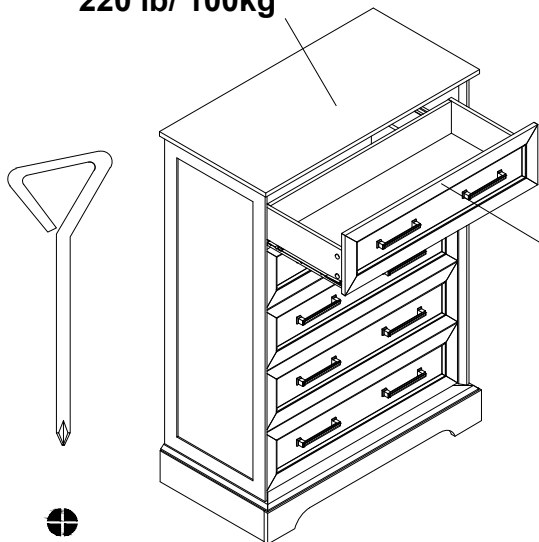


Estimated Time for Assembly

60 mins

MAXIMUM LOAD
20 lb/ 9.1kg

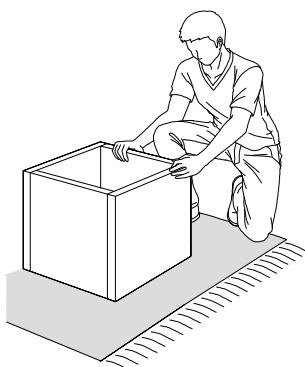

Assembly the furniture on empty carton, carpet, or rug to prevent scratches or damage.

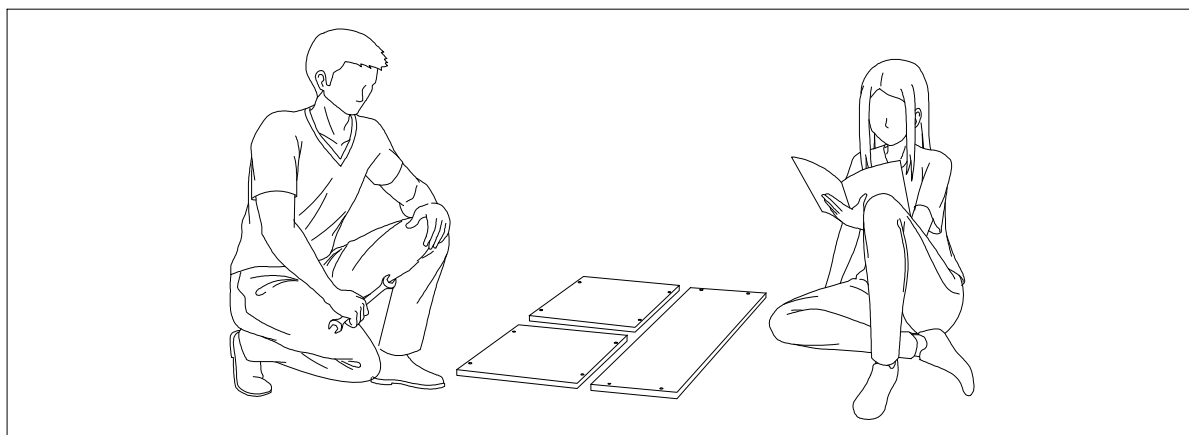


This furniture requires 2 people to assembly.

Make sure no parts are missing or damaged before assembly.


Board Identification

Not actual size

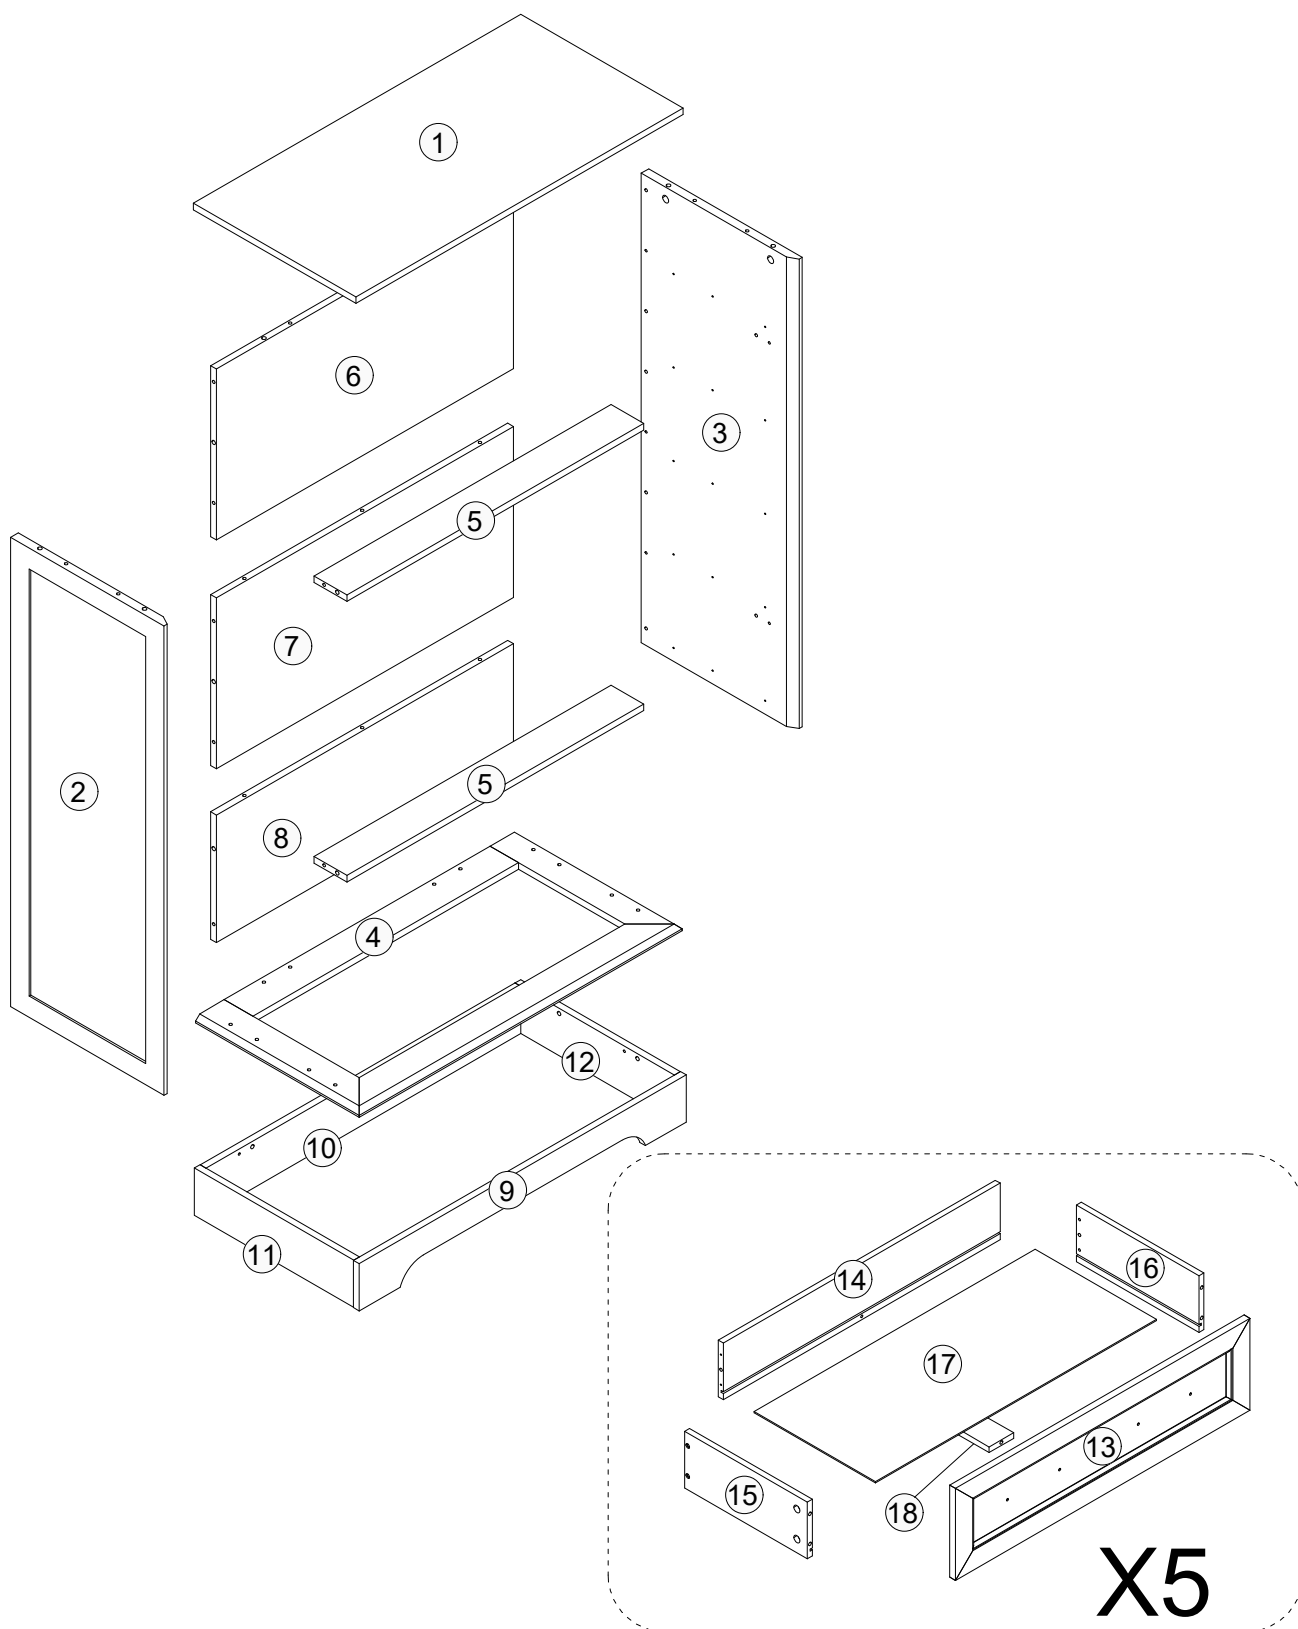


BOARD IDENTIFICATION


Not actual size

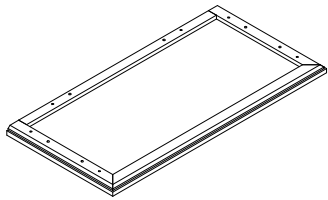


① x1

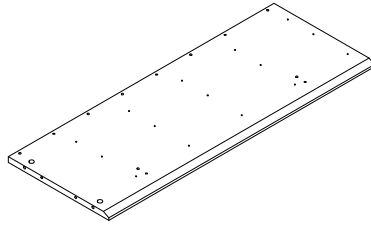


② x1

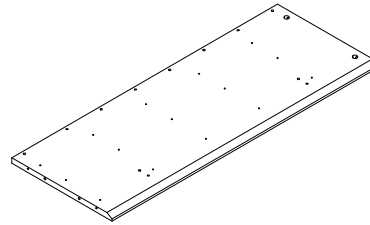


③ x1

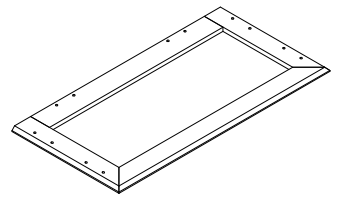


④ x1

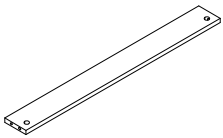


⑤ x2

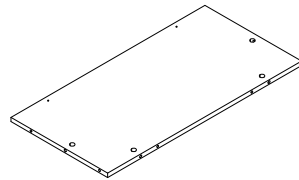


⑥ x1

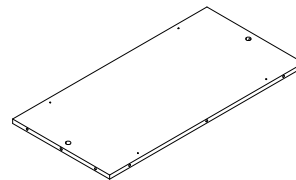


⑦ x1

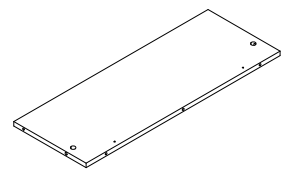


⑧ x1

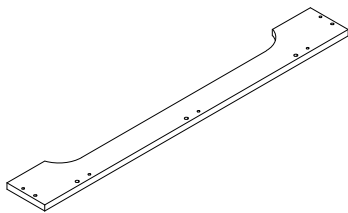


⑨ x1

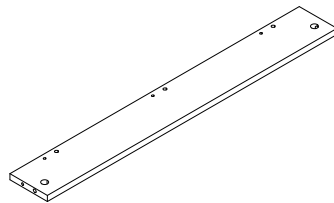


⑩ x1

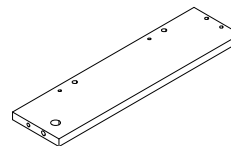


⑪ x1

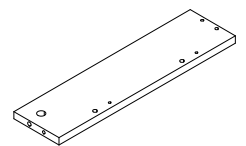


⑫ x1

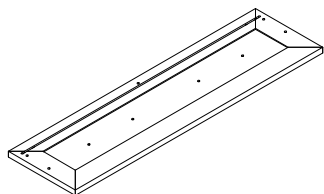


⑬ x5

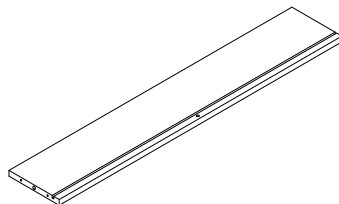


⑭ x5

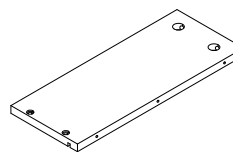


⑮ x5

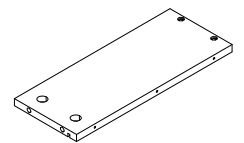

⑯ x5












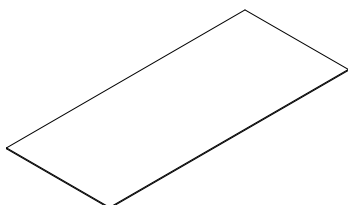


⑰ x5

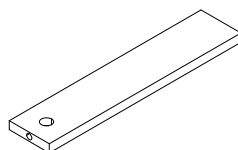


⑱ x5

HARDWARE LIST

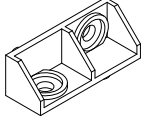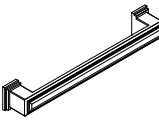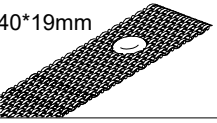
 Ø6x33.5mm A x45+4	 Ø15x9.5mm B x45+4	 Ø6x30mm C x46+4	 Ø5x38mm D x6+1				
 Ø3.5x12mm E x68+6	 F x10	 Ø6x12mm G x20+2	 H x4				
 M4x8mm I x20	 J x2+2	 K x10	 Ø4x38mm L x25+2				
M1x2 140*19mm  M2x4 Ø16xØ6.5x1mm  M3x2 Ø4x16mm  M				N1x2 Ø6x30  N2x2 Ø4x35  N		 O x1	
 CL x5		 CR x5					
 DR x5		 DL x5					

Cam Lock Fastening System


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

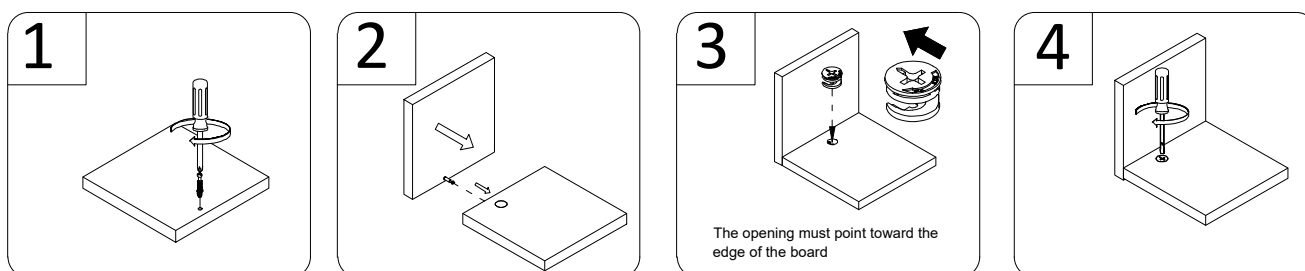



STEP 1

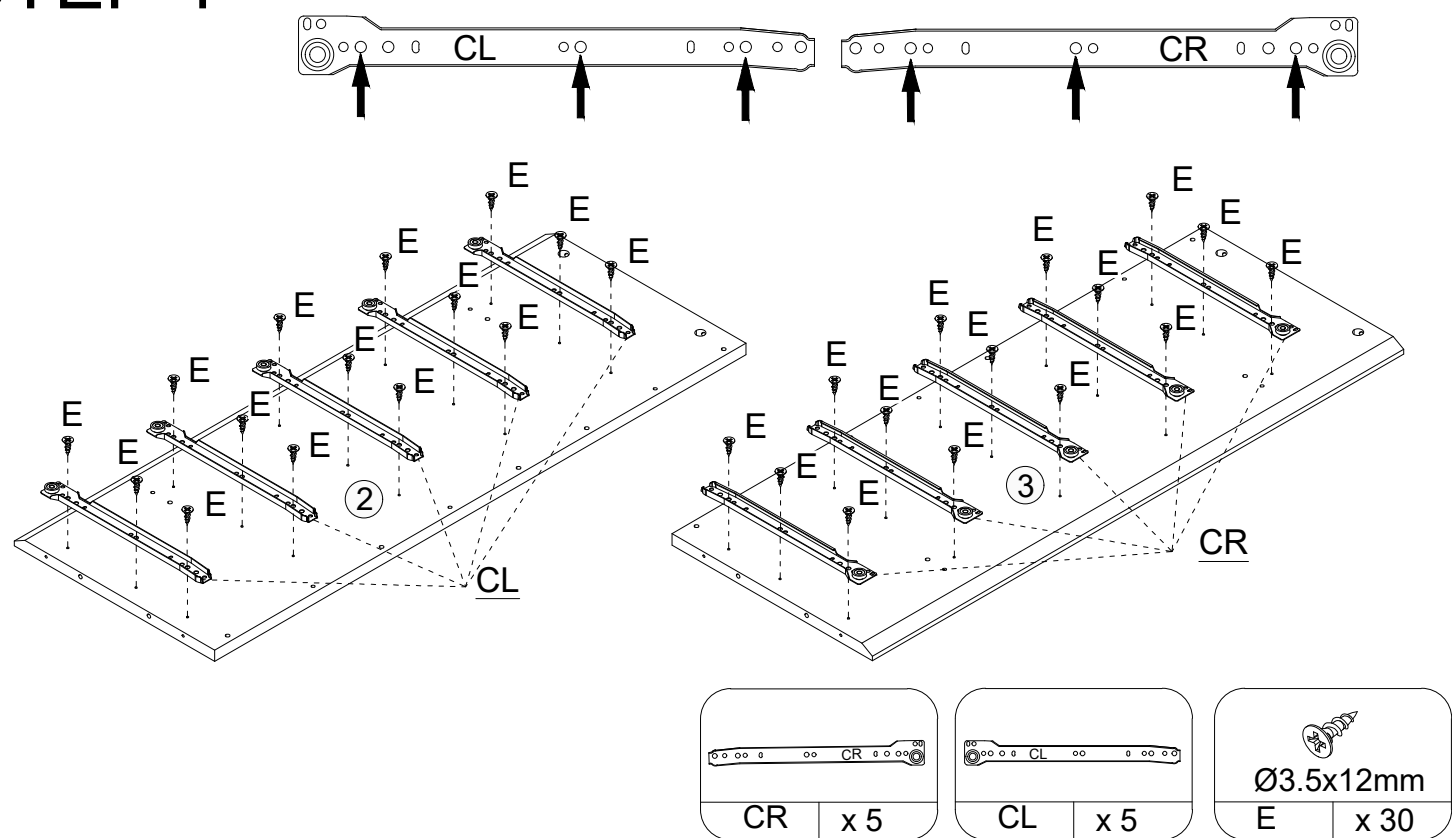




STEP 2

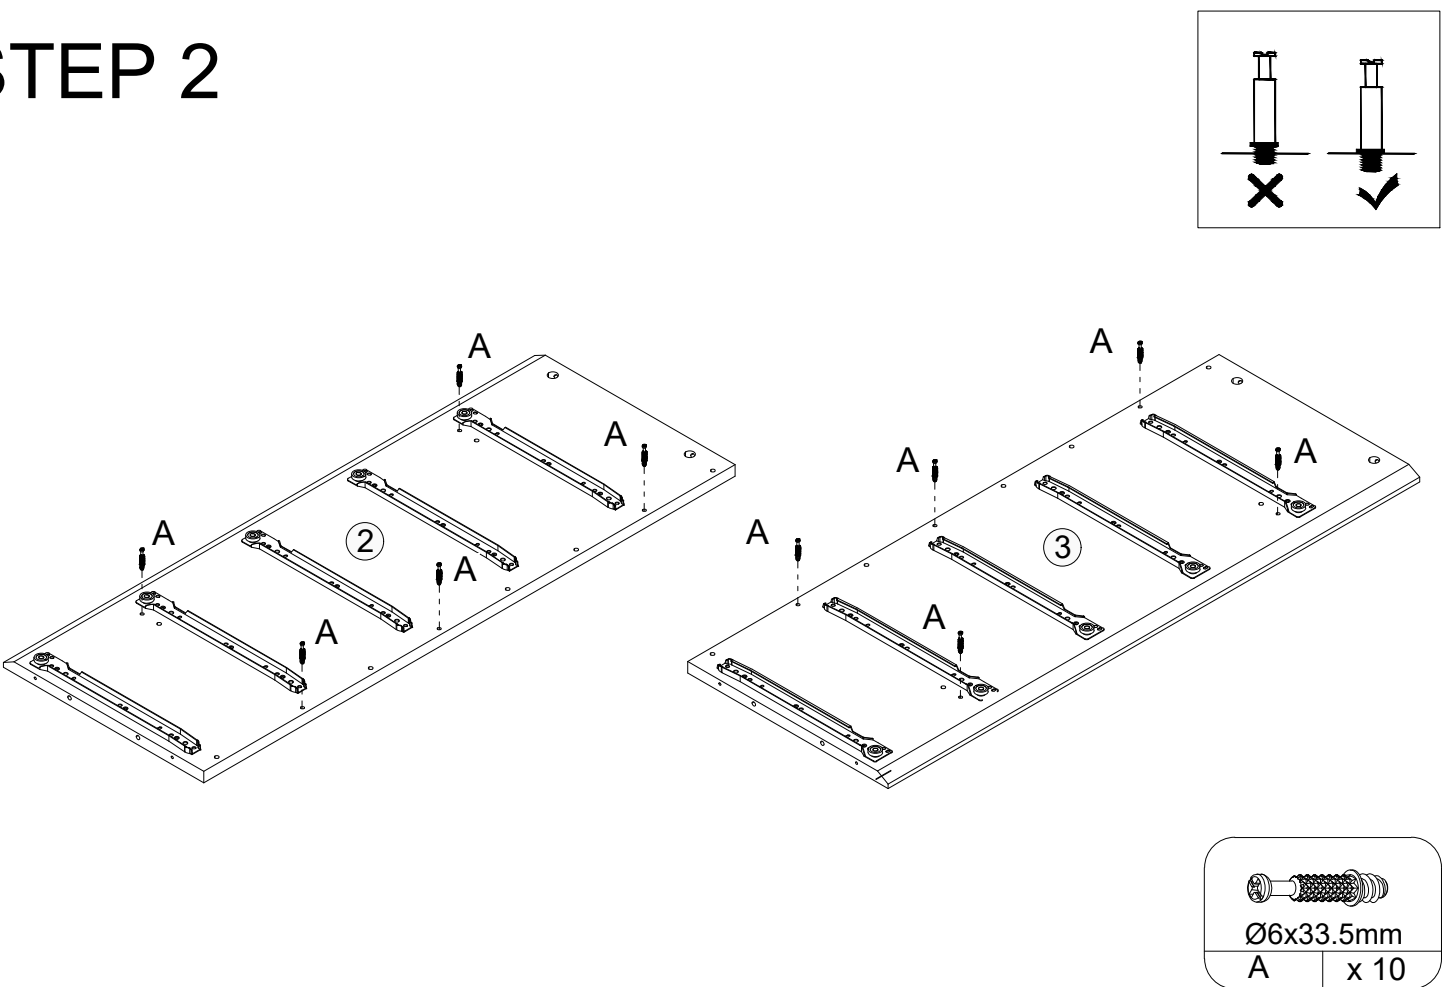


STEP 3

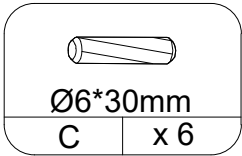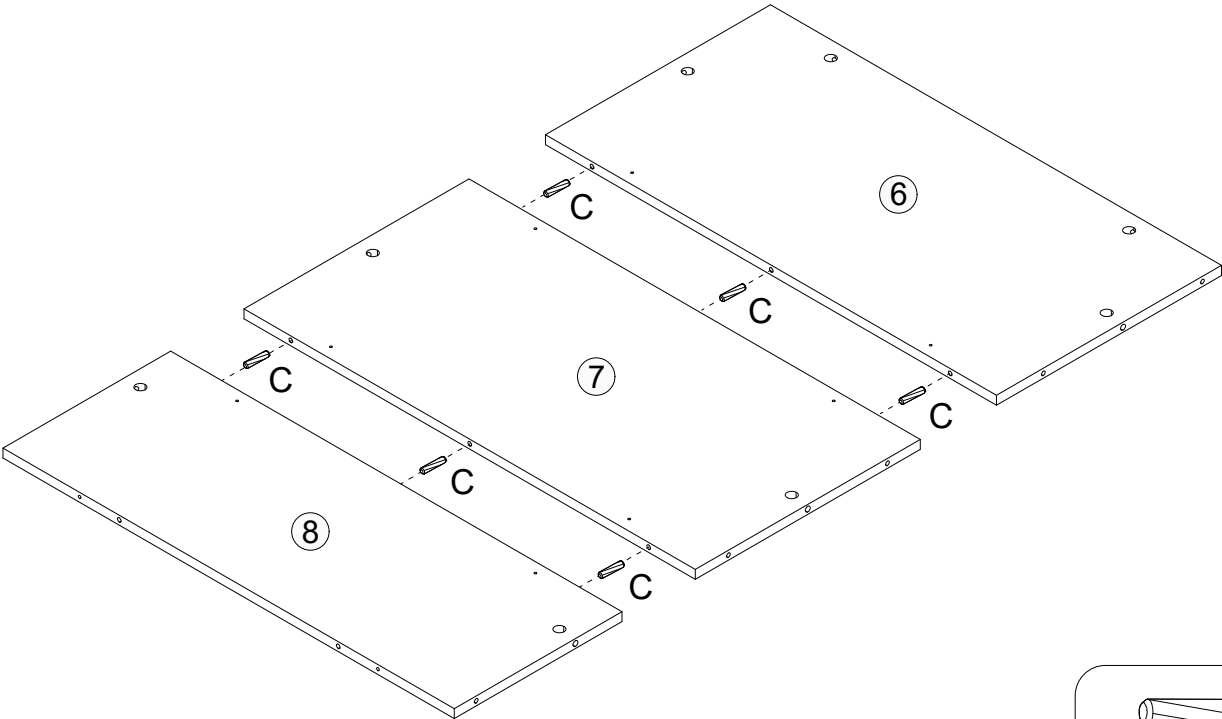


STEP 4

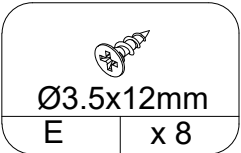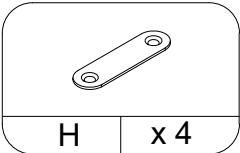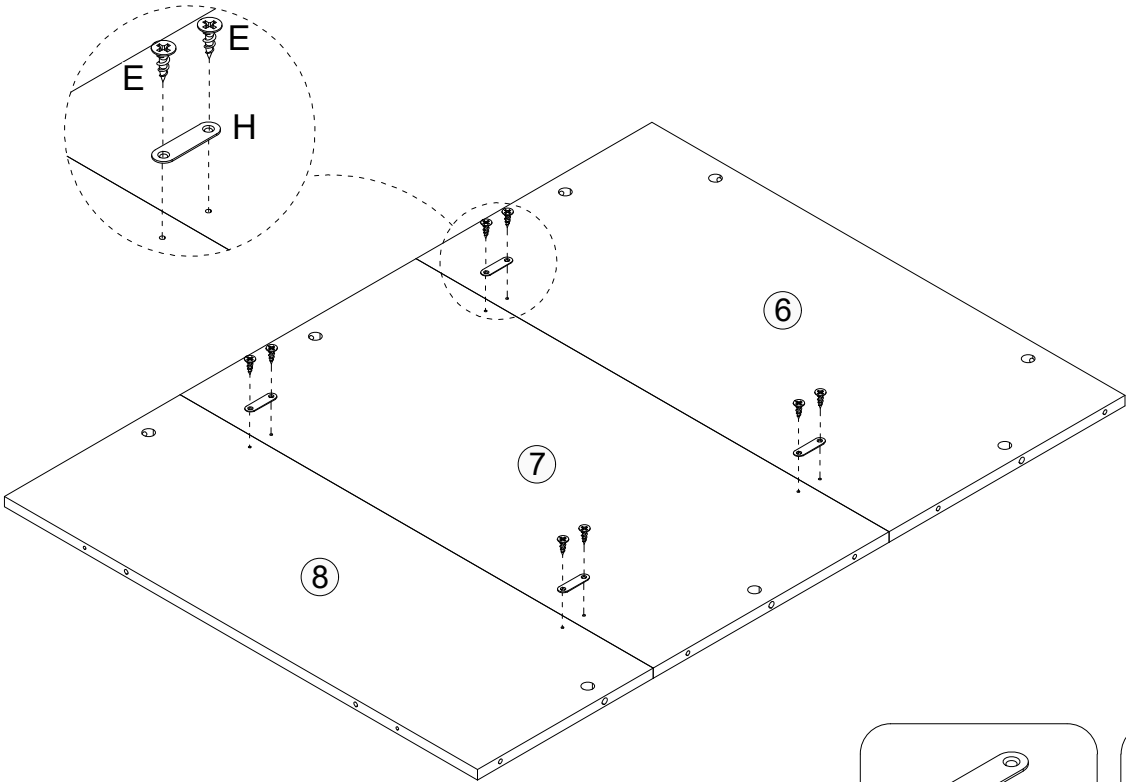


STEP 5

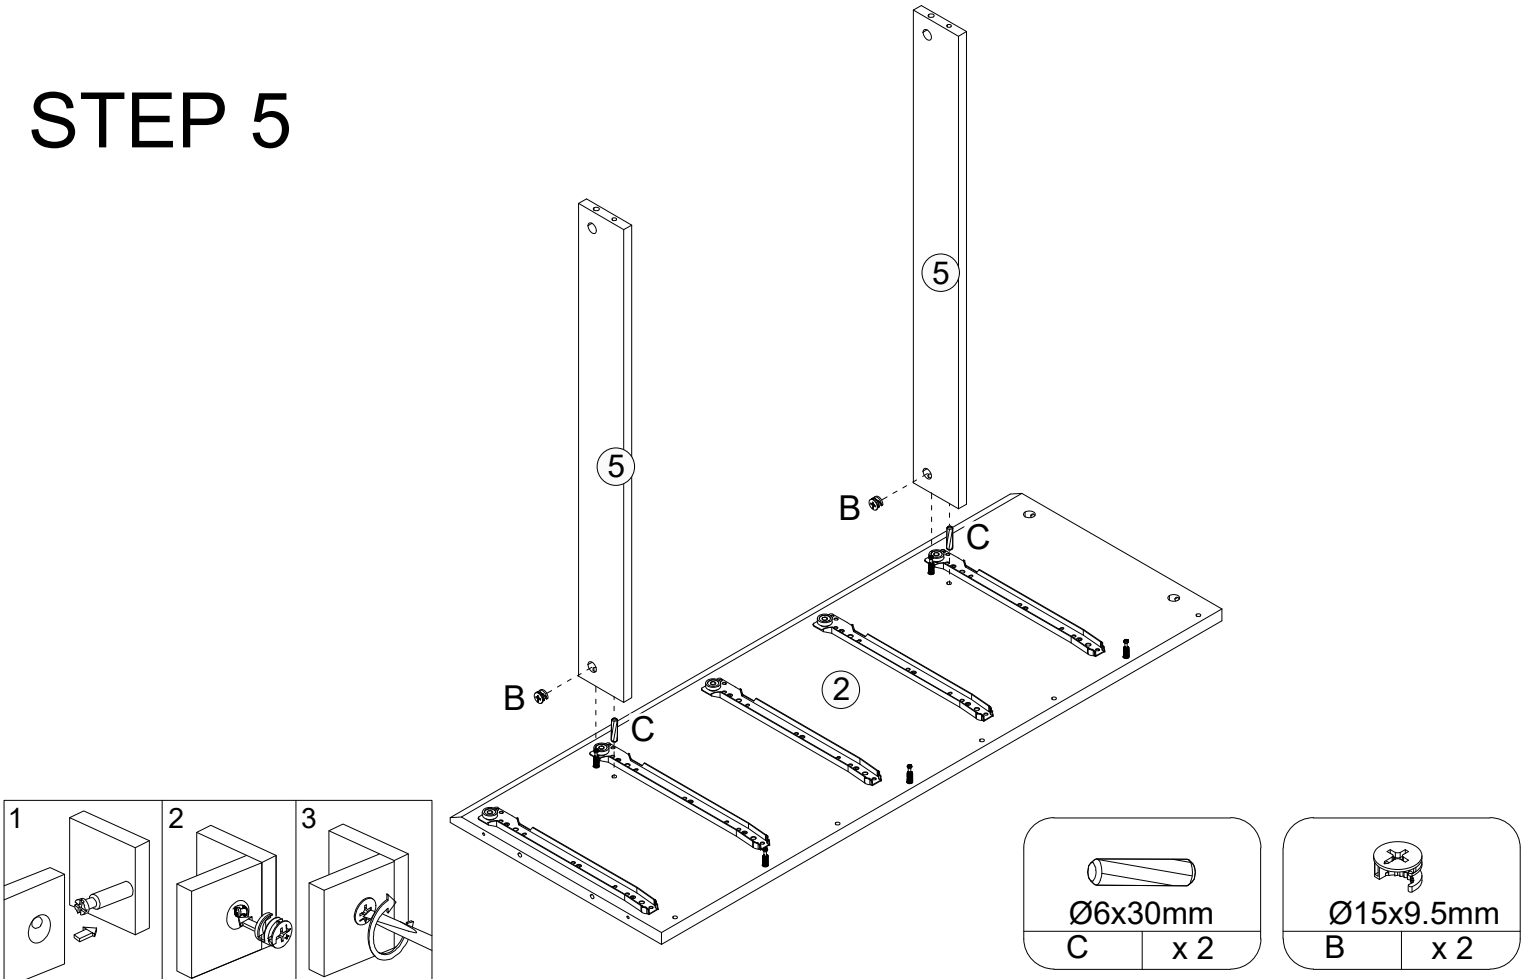



STEP 6

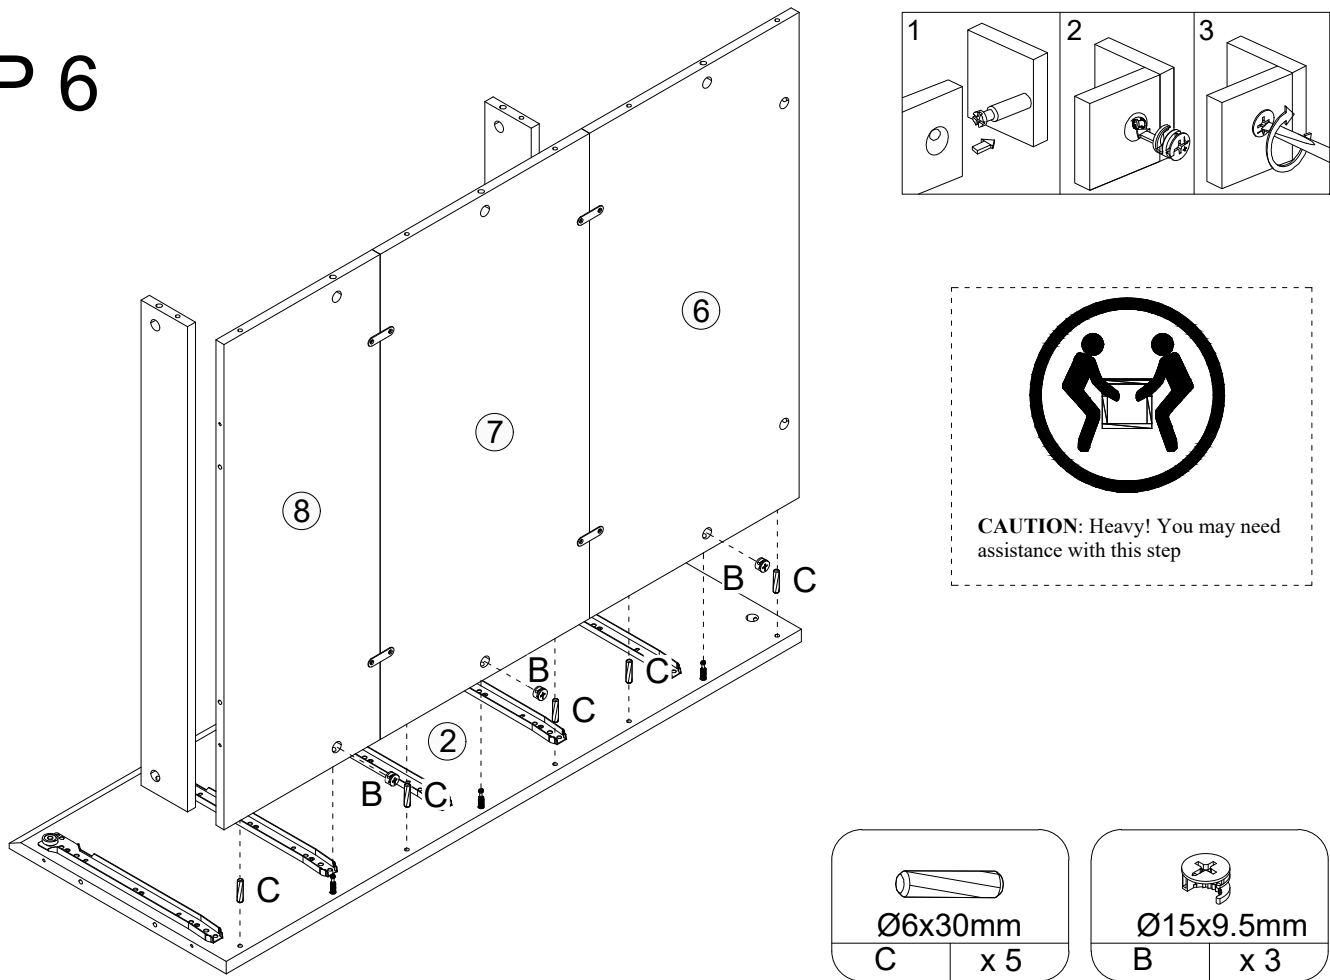


STEP 7

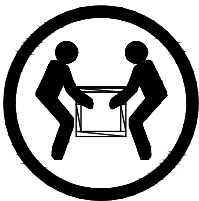

CAUTION: Heavy! You may need assistance with this step

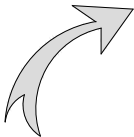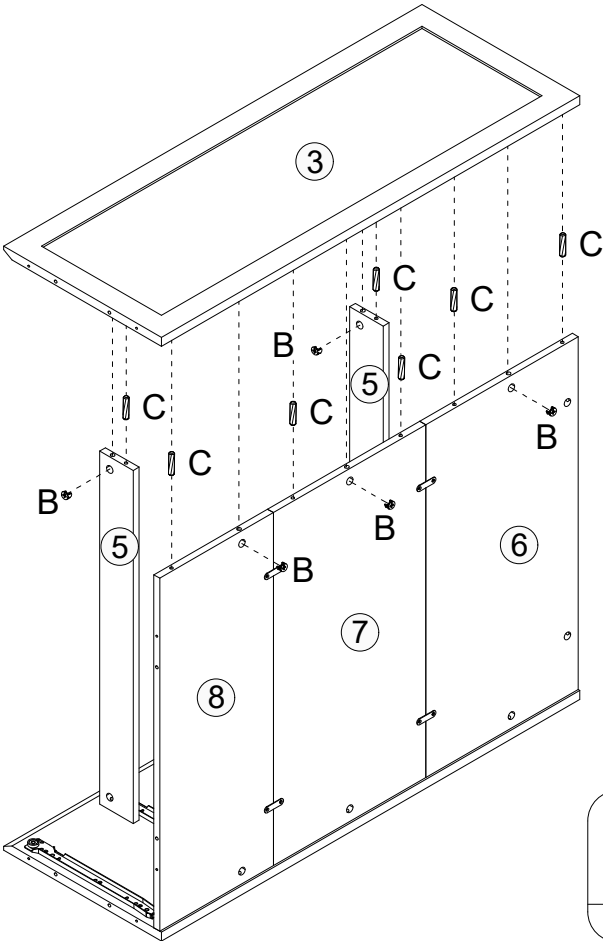


After this step is assembled, flip it 180 degrees(to step 8)

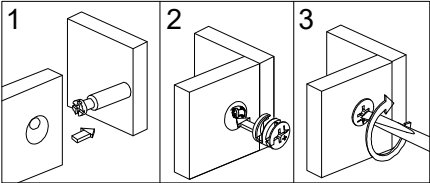



	
Ø6x30mm	
C	x 7

	
Ø15x9.5mm	
B	x 5


STEP 8

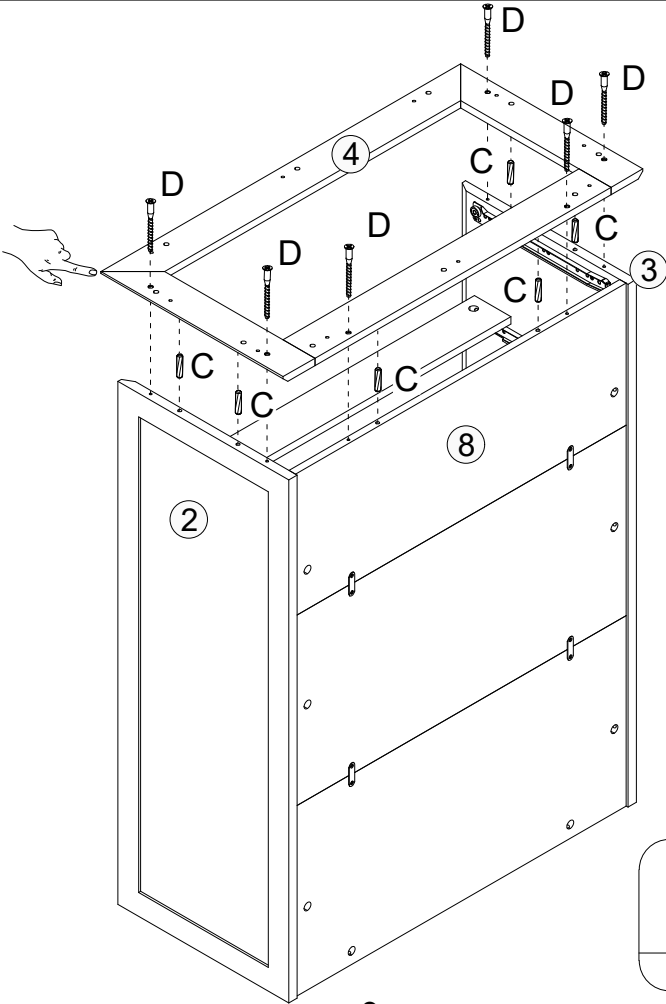


	
Ø6x30mm	
C	x 6

	
Ø5x38mm	
D	x 6


STEP 9

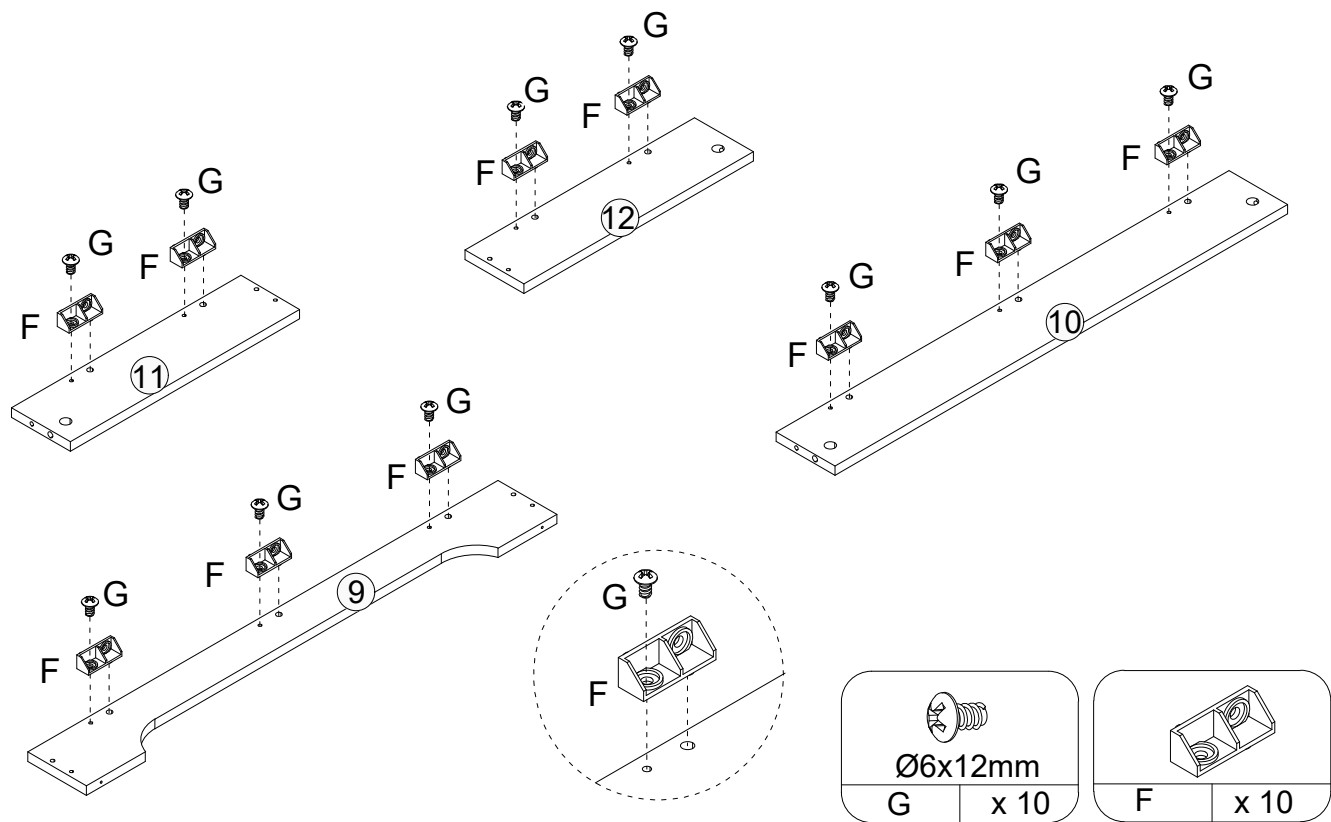


STEP 10

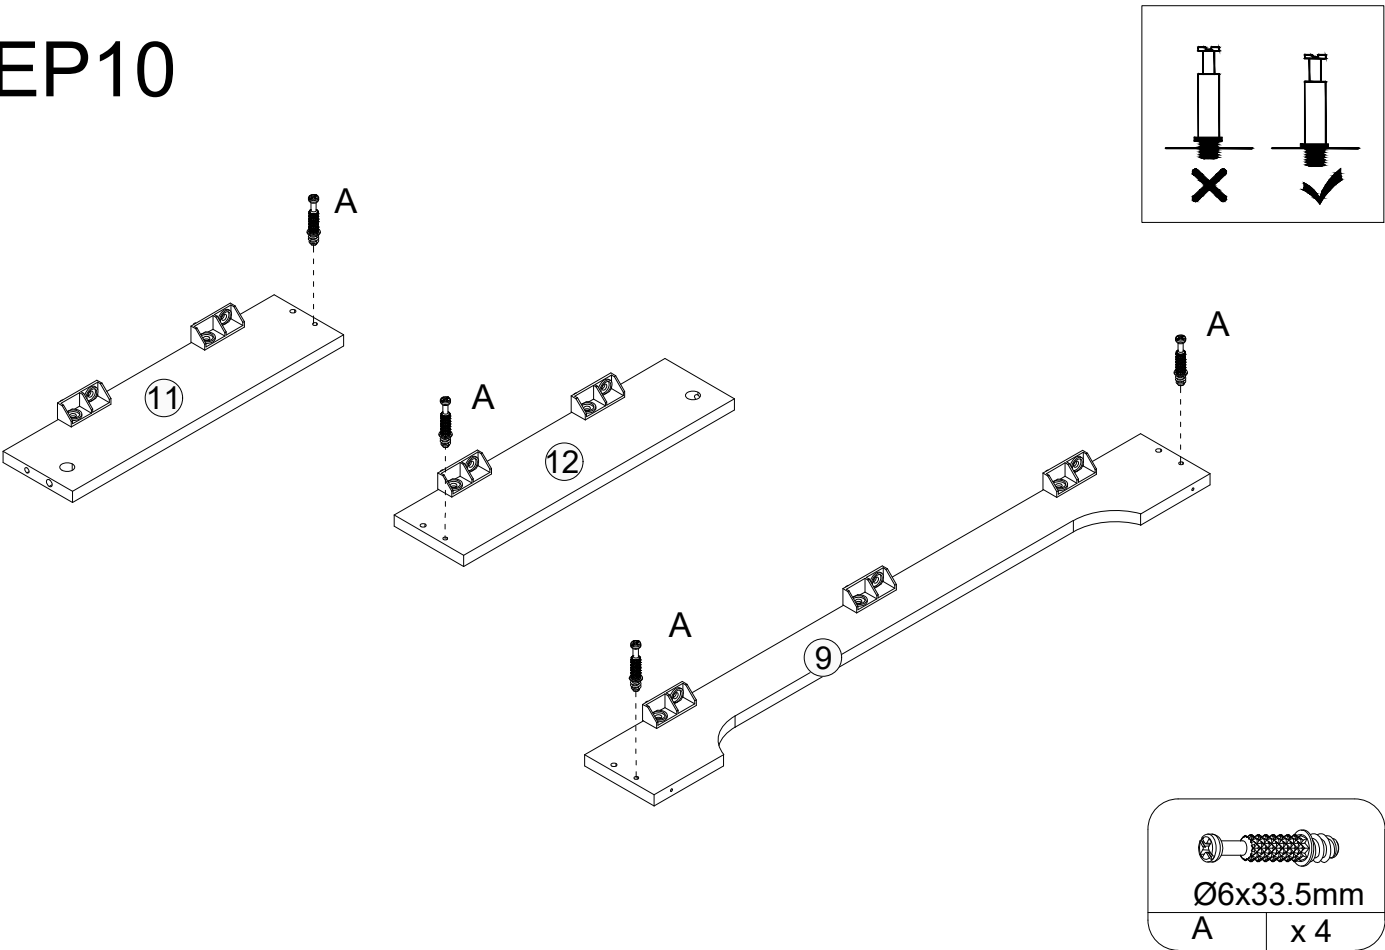




STEP 11

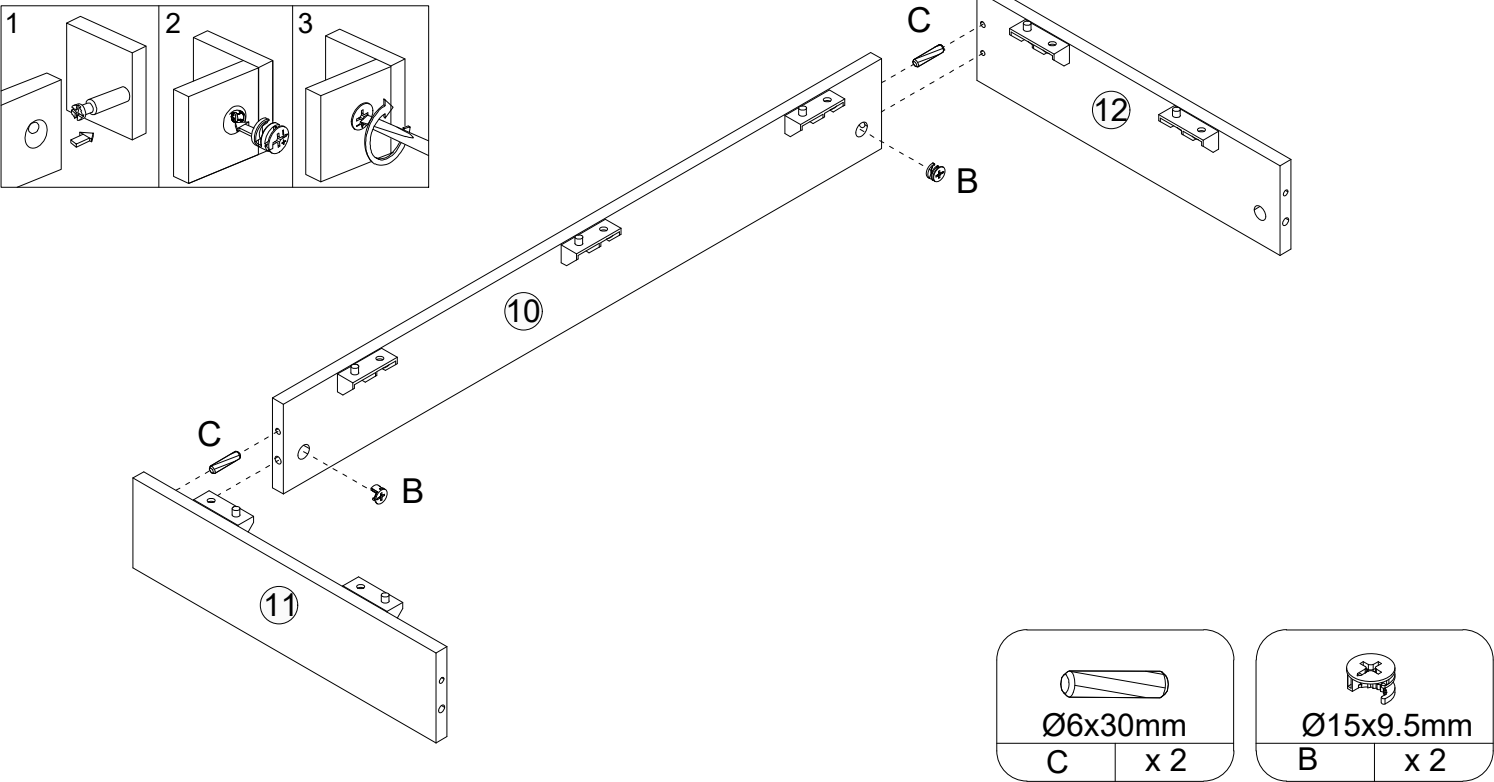



STEP 12

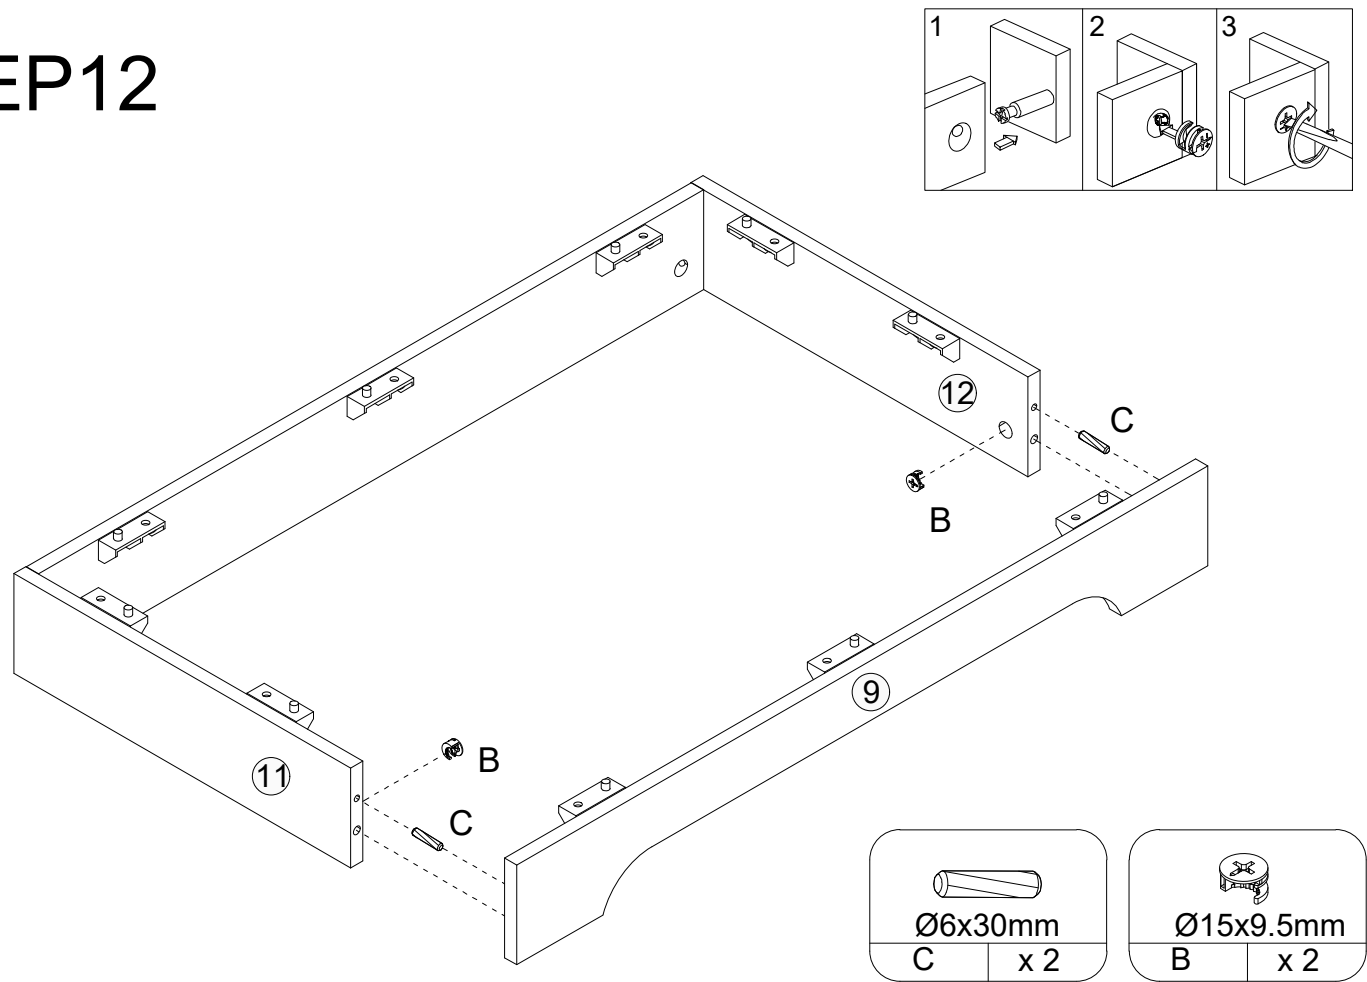


STEP 13

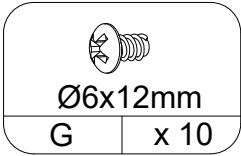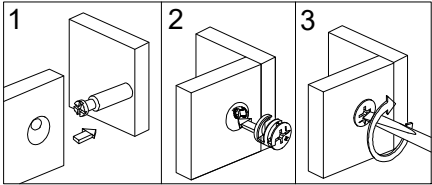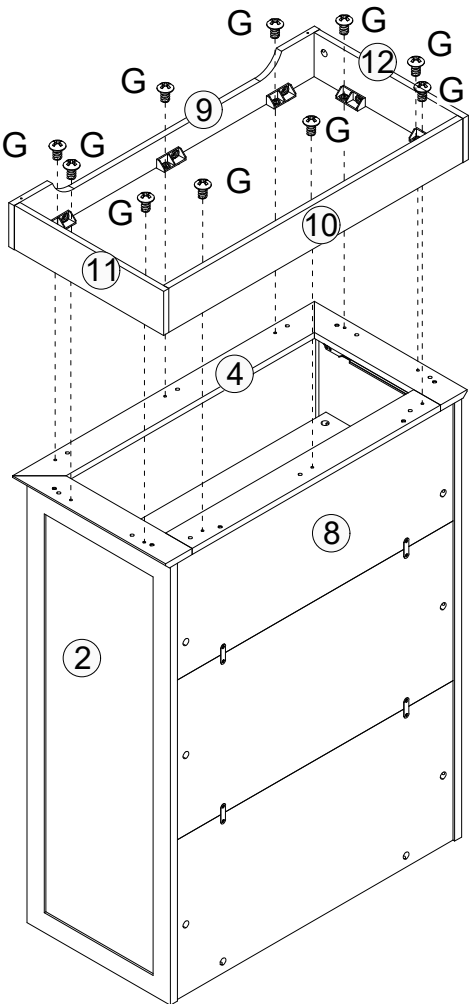




STEP14

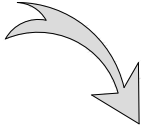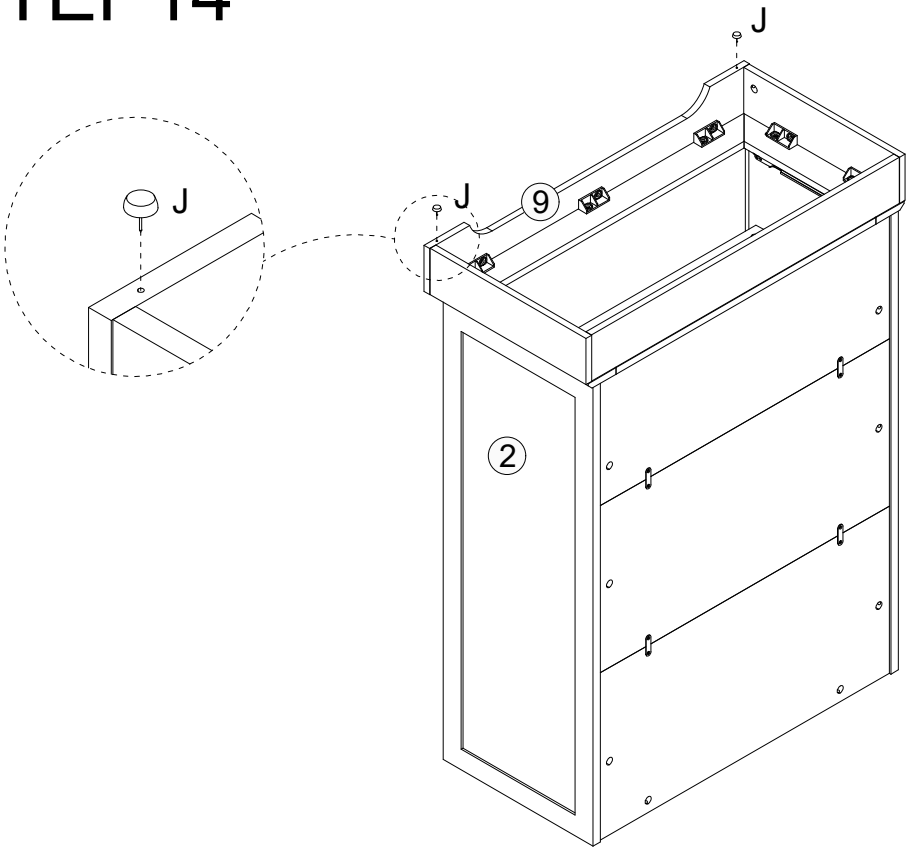




After this step is assembled,
flip it 180 degrees(to next step)

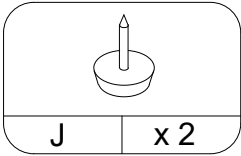



STEP 15

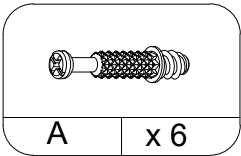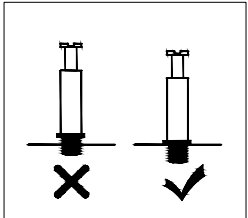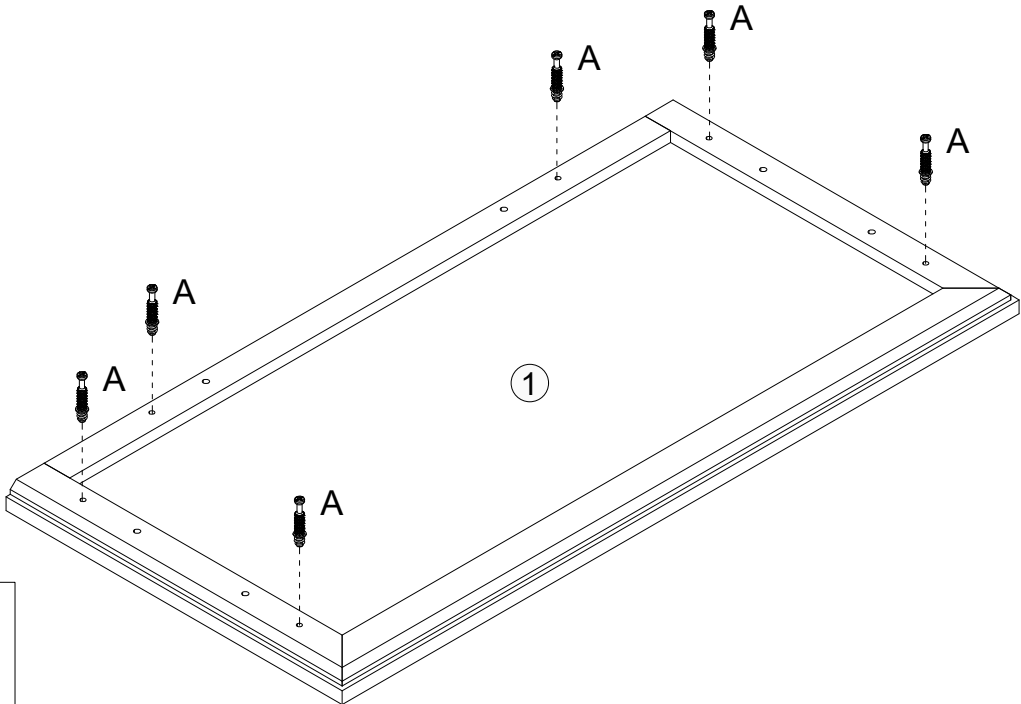

STEP16

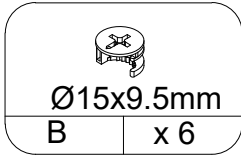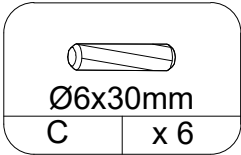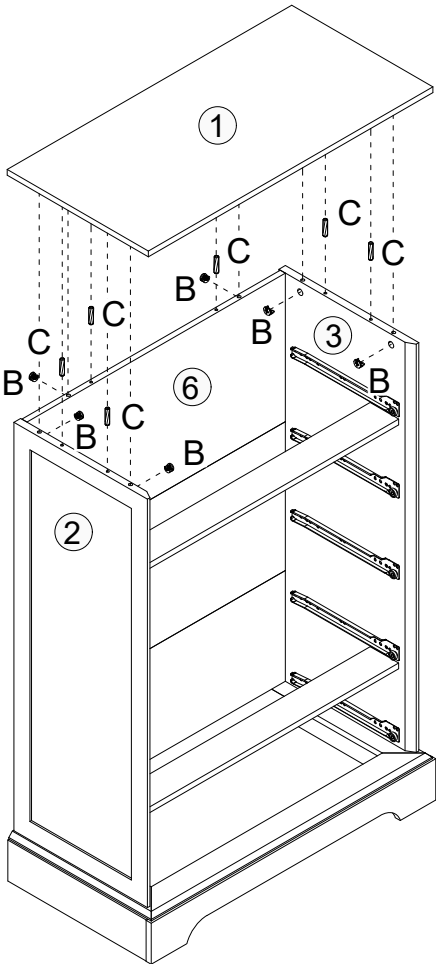



STEP 17

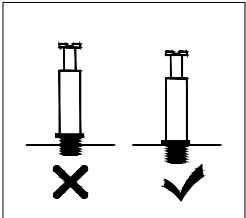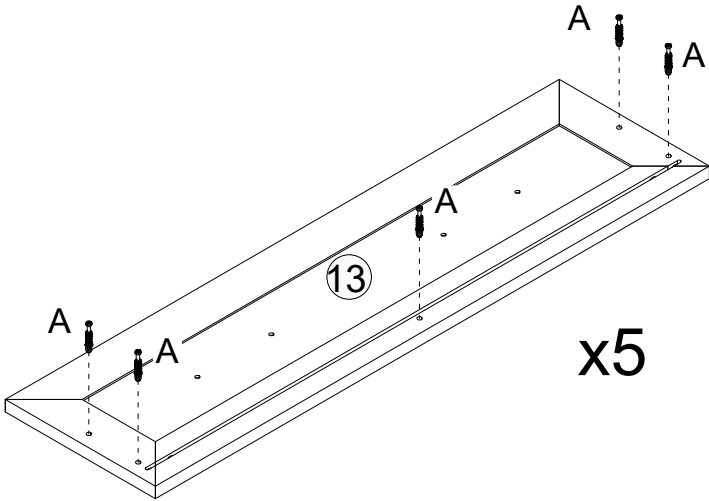

	
Ø6x33.5mm	
A	x 25


STEP 18

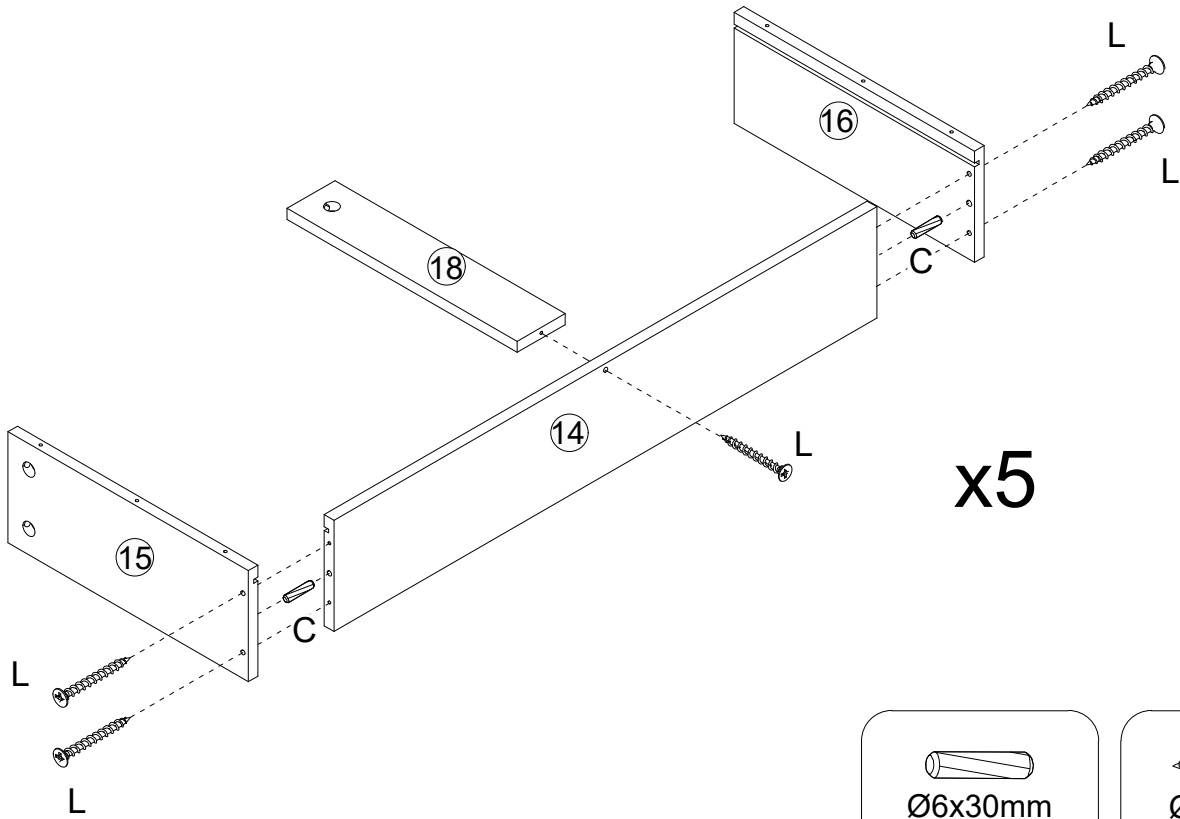




	
Ø6x30mm	
C	x 10

	
Ø4*38mm	
L	x 25


STEP 19

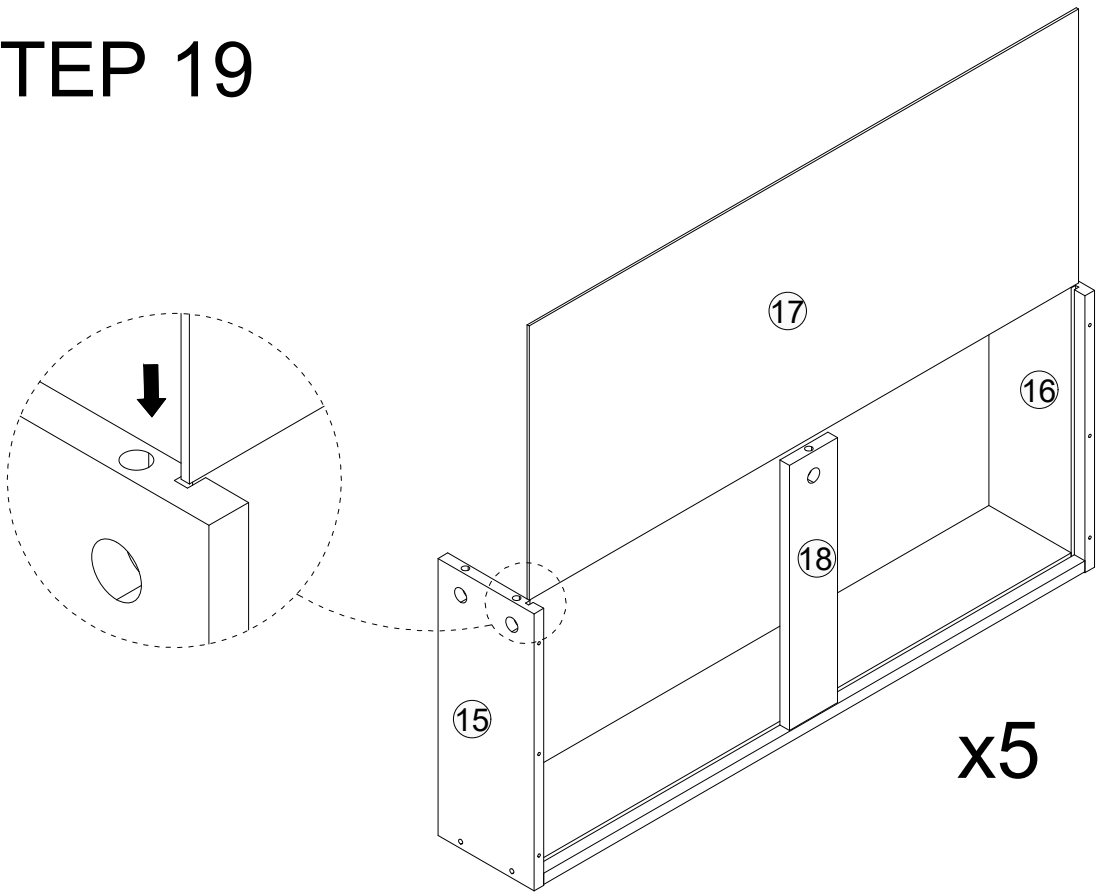


STEP 20

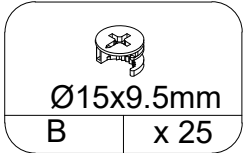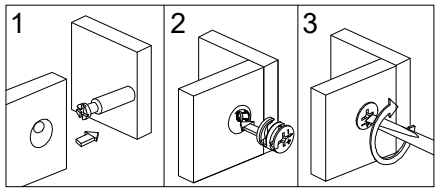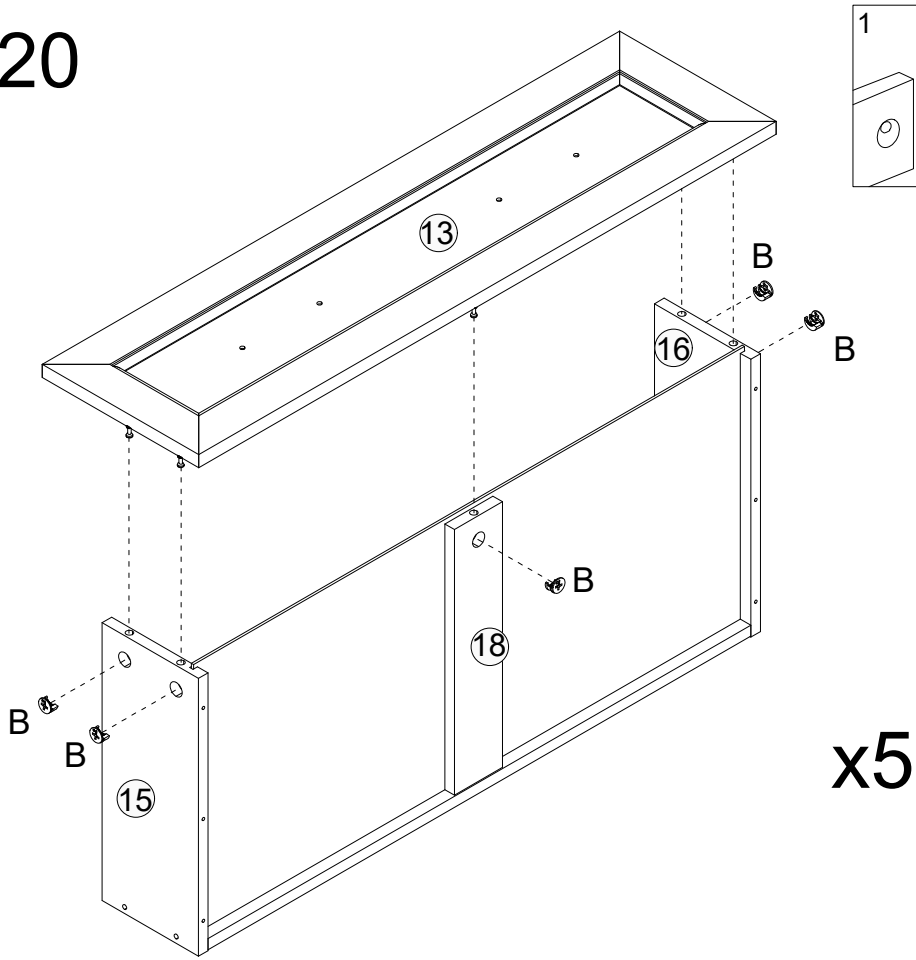


STEP 21

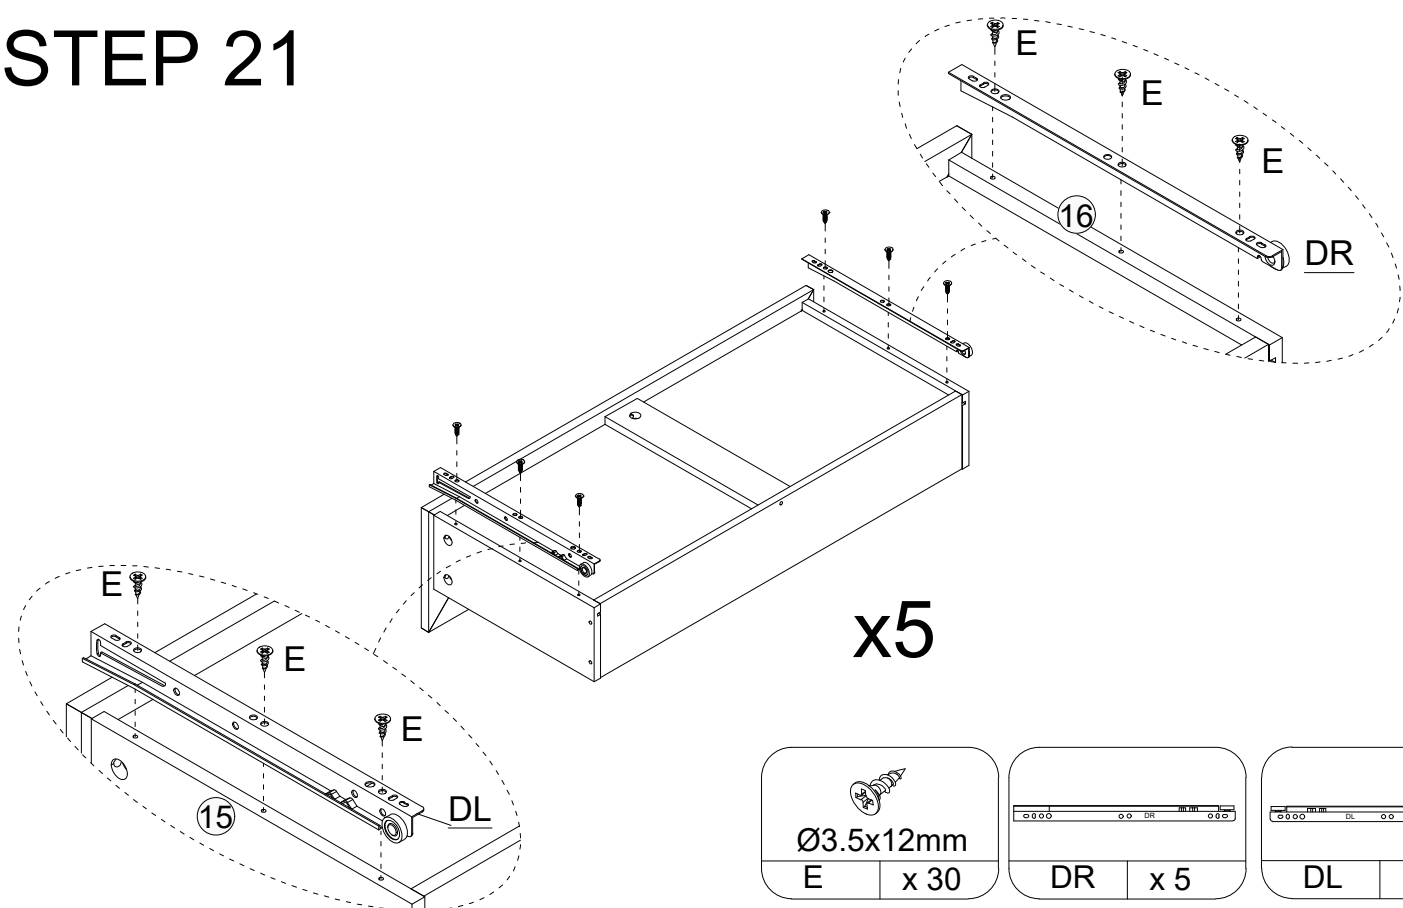


STEP 22

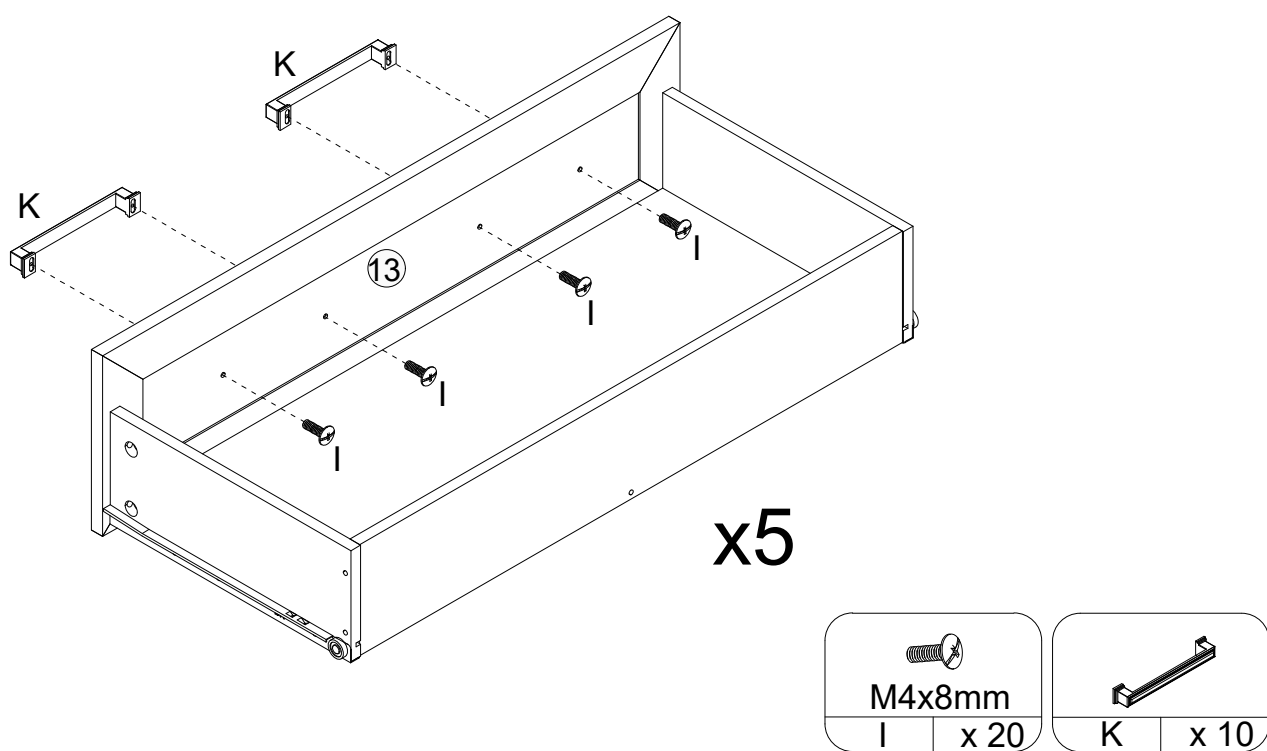

STEP 23

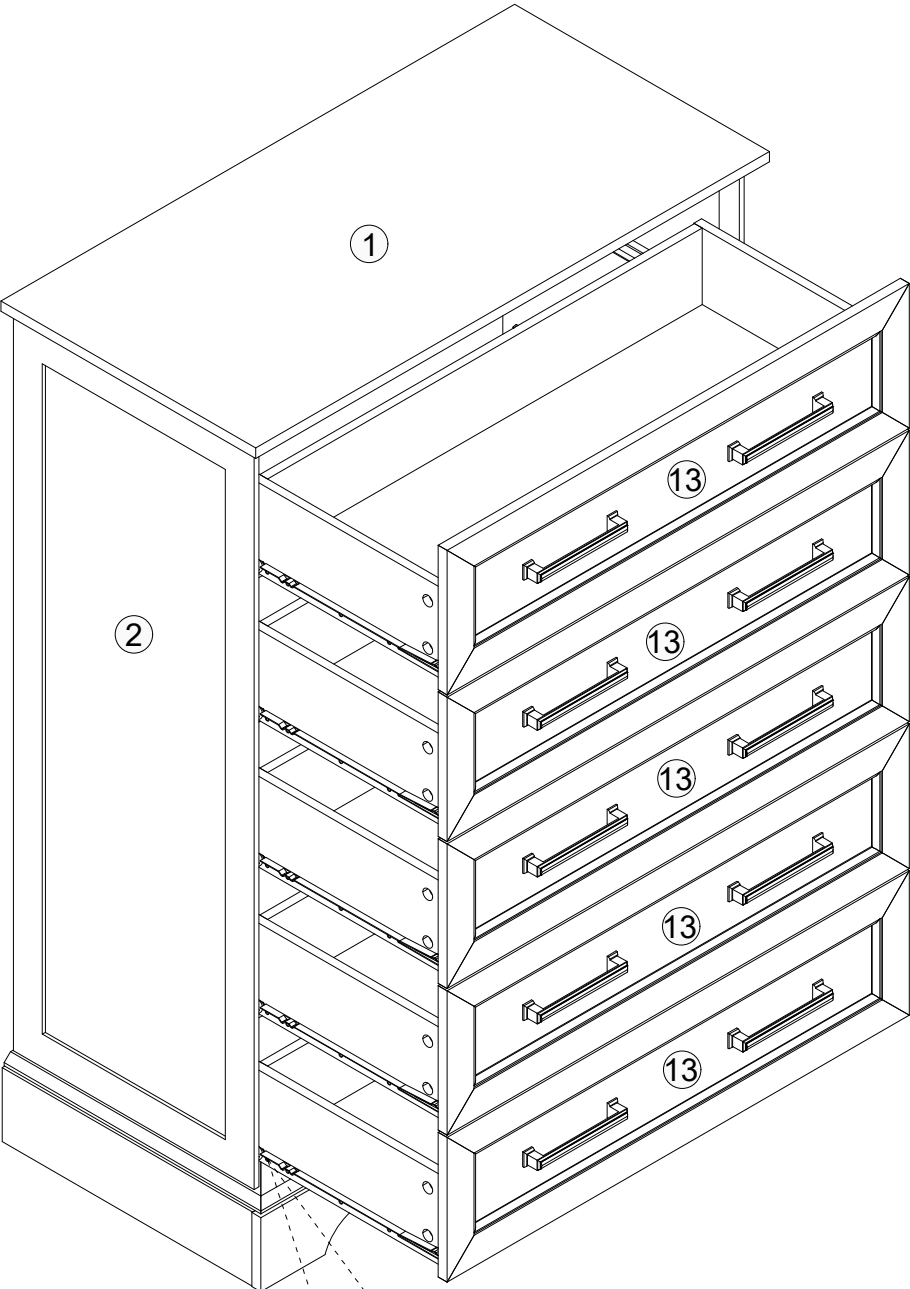


Cabinet Slide arms

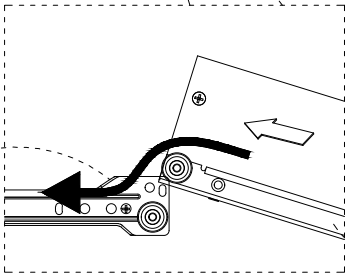

Drawer Slide brackets



STEP 24

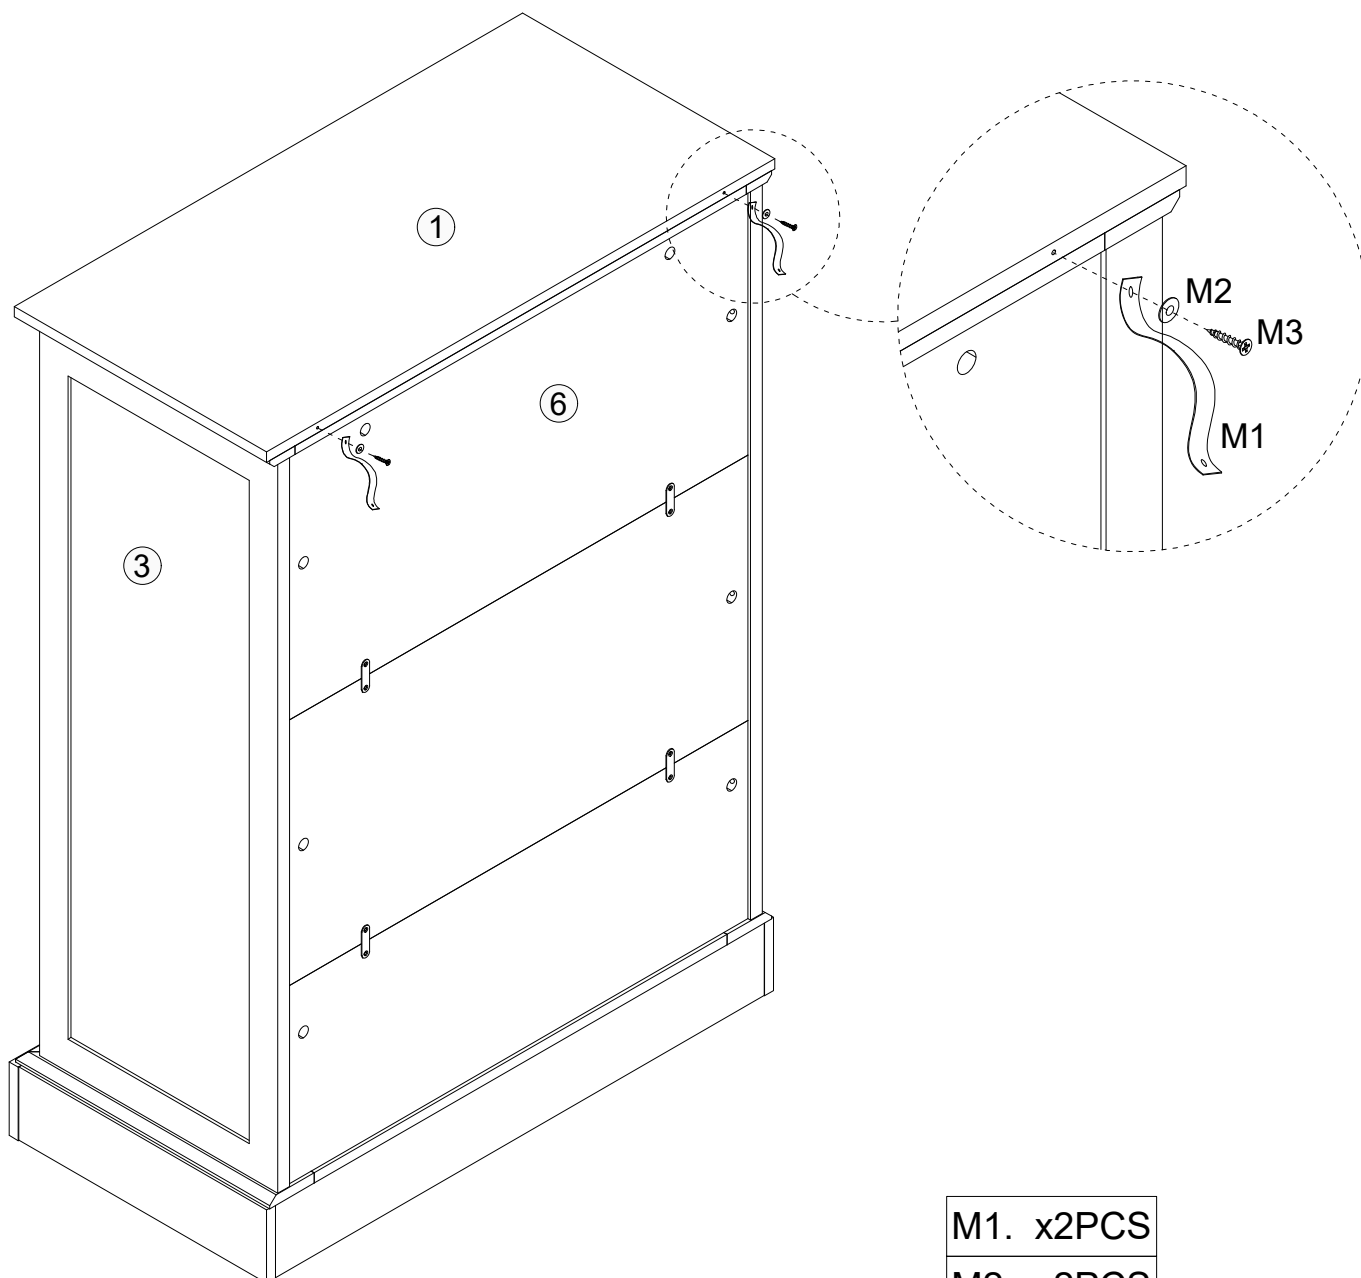

Use screw (M3) and washer (M2) to fix the strap (M1) follow position of holes on the peice 1.

M1.	x2PCS
M2.	x2PCS
M3.	x2PCS

STEP 25

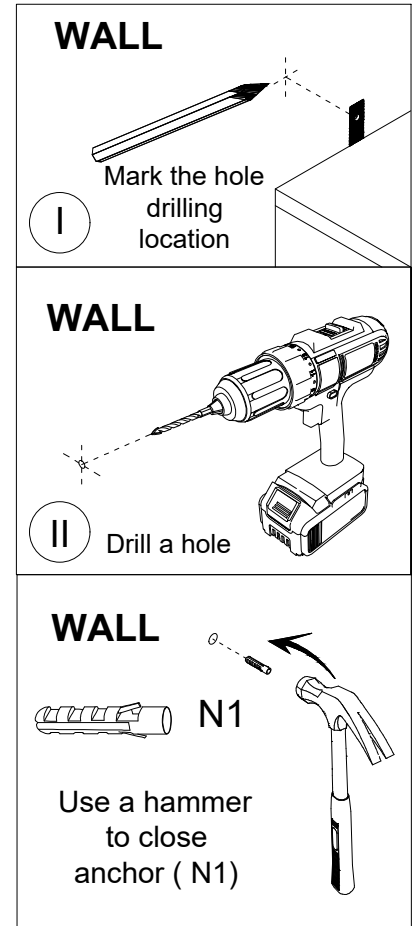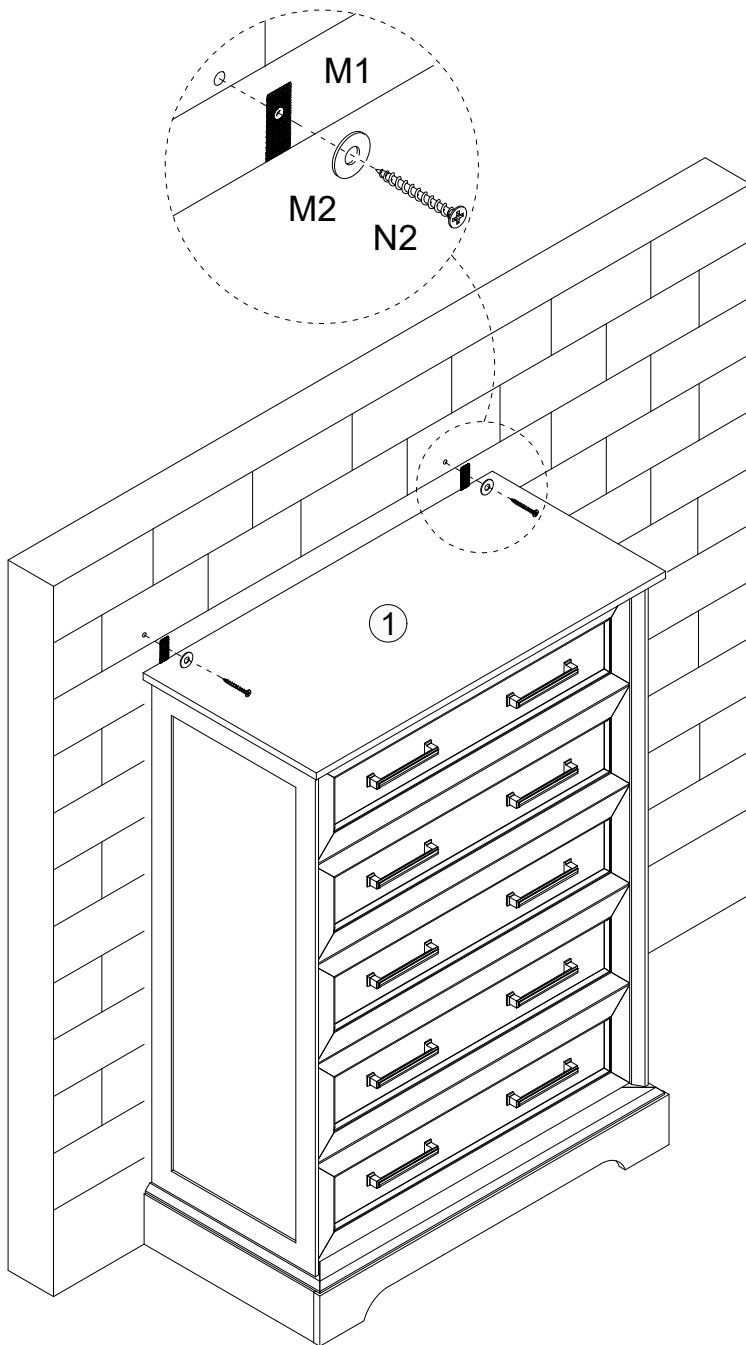

Step1: determine the location of the anti-overturning on the wall and then mark the position after confirming the product has been balanced.

Step 2: drill the hole and then fixed the anchor (N1) on the wall.

Step 3: use screw (N2) to fix the strap (M1), (M2) on the wall .

N1. x2PCS
N2. x2PCS
M2. x2PCS

FURNITURE CARE AND MAINTENANCE

Medium - Density Fiberboard and Particle board

Thank you for your purchase. We want your item to last as long as possible. To ensure the product gives you years of service, please refer to this care and maintenance guide.



MAINTENANCE

- Tighten all bolts and screws again within the first 2 weeks of assembly
- Check the tightness of all bolts every 2 months, tighten them if necessary



CLEANING

- Clean the surface of the MDF (medium - density fiberboard) or PB (particle board) with a lightly dampened cloth.
- Small amount of mild soap can be used if necessary
- Dry the surface immediately after cleaning.

⚠ DO NOT use bleach or alcohol detergent to clean the surface.

⚠ DO NOT apply wood treatment on parts made with MDF and PB.

Medium - density fiberboard and Particle board will swell and distort when suffer from water damage.

Make sure to dry the furniture immediately after cleaning