


Bathroom cabinet

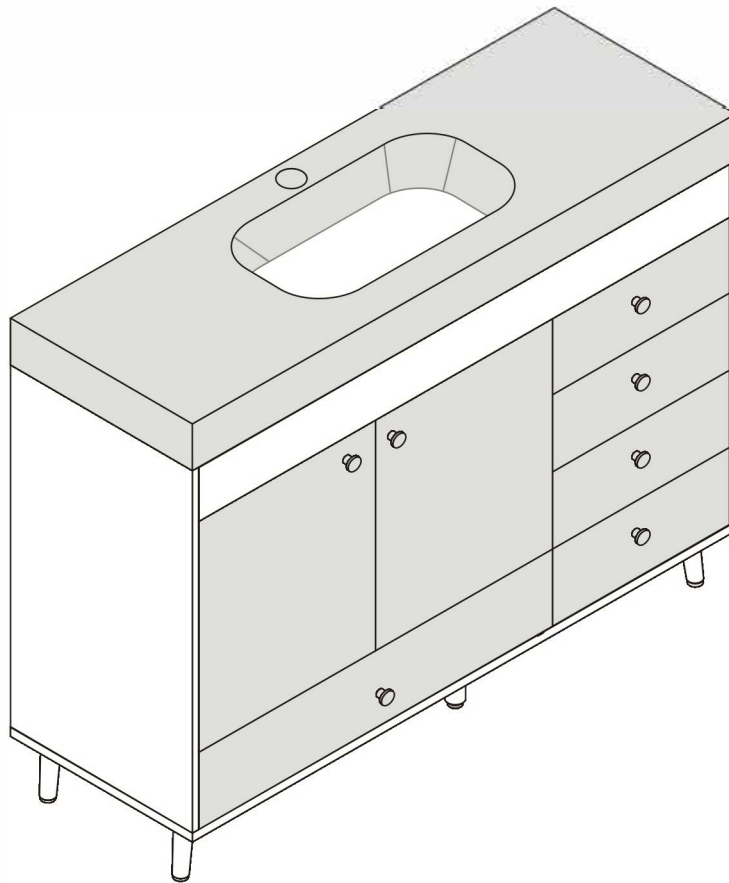


2 Persons


L906*W455*H593MM

Installation Instructions


Notes: Don't tighten screws completely at first, just in case parts were assembled wrongly and need disassemble. Tighten screws at last when all parts are put together.

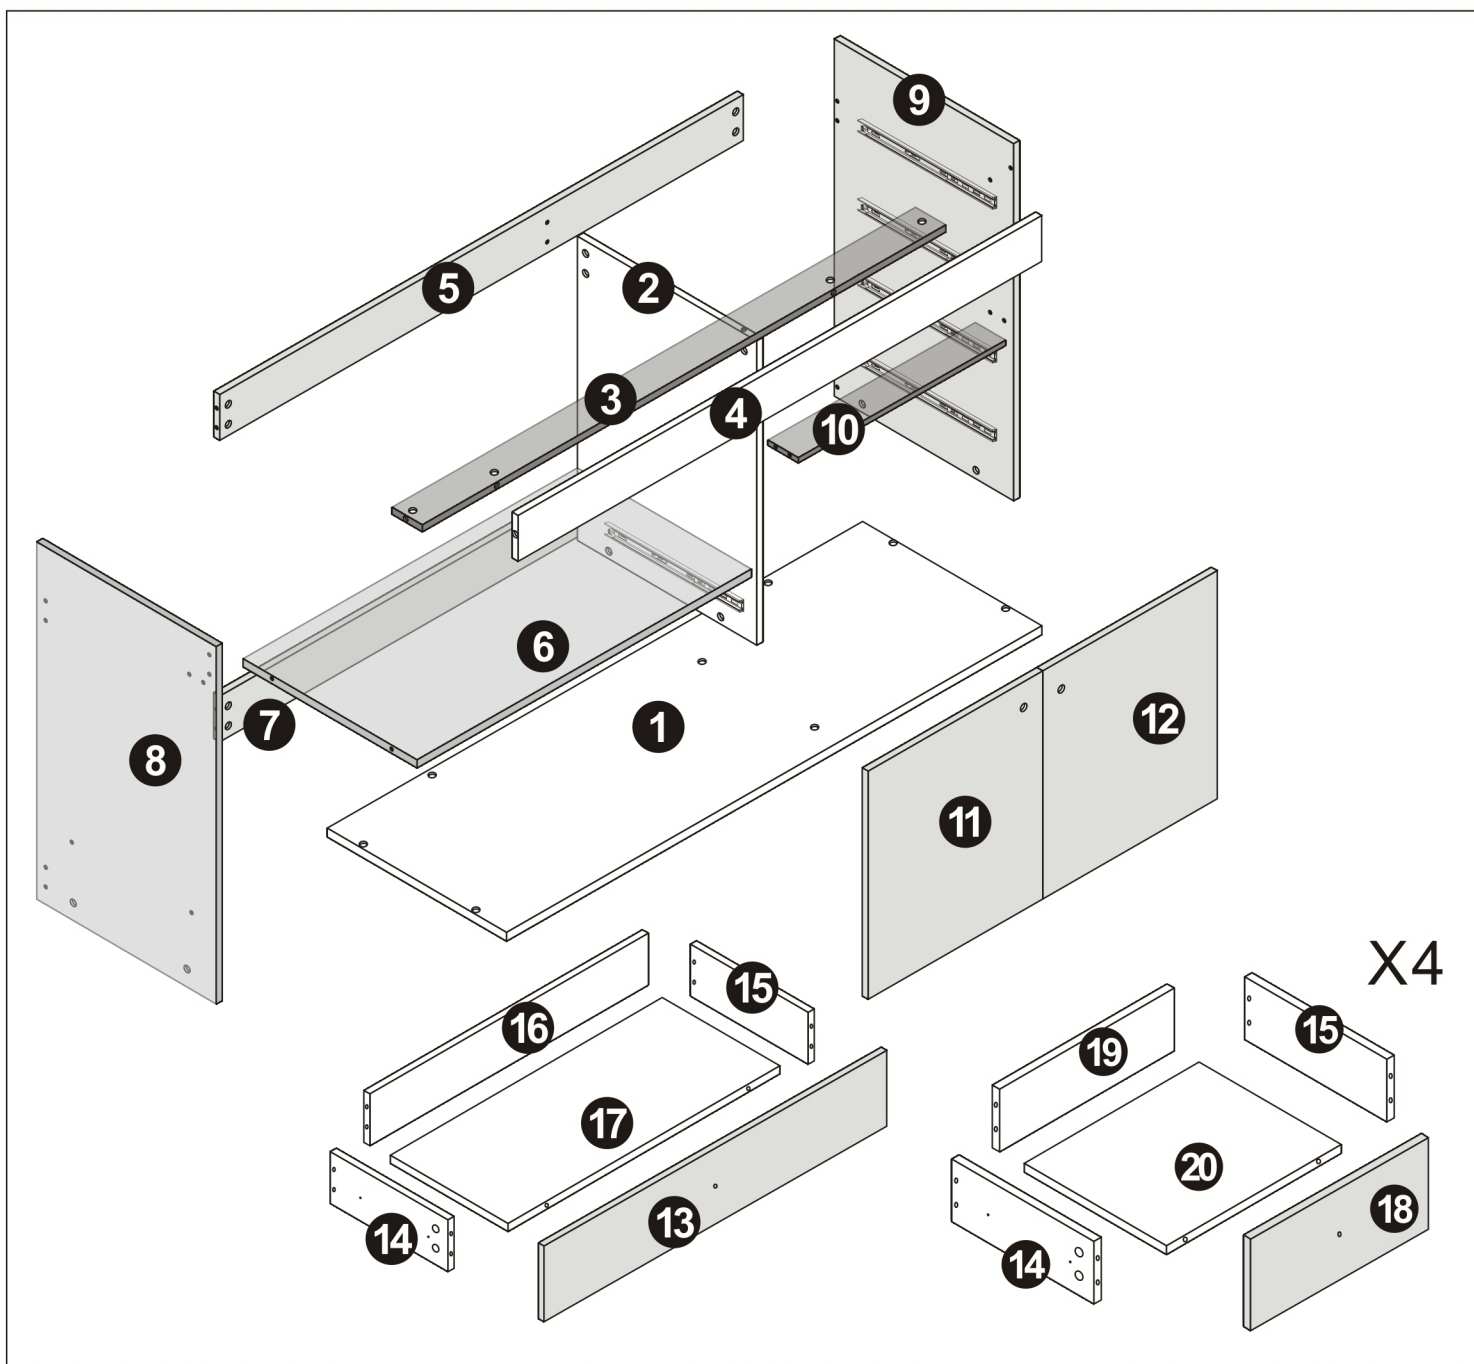


Disassembly and installation of accessories

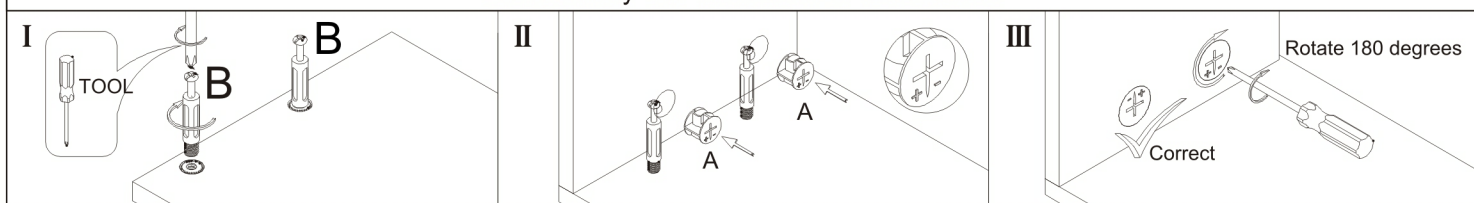

A 63PCS 15*10mm	B 63PCS 6*28mm	C 100PCS 3.5*14mm	D 50PCS 3.5*35mm	E 7PCS 4*20	F 7PCS Handles	G 4PCS Sponge Mat	H 2PCS Middle bend
I 2PCS Expansion screw	J 2PCS Corner code	K 5PCS Three-section Rail	L 4PCS Hardware Feet	M 1PCS Hardware Feet	N 2PCS Mid bend		

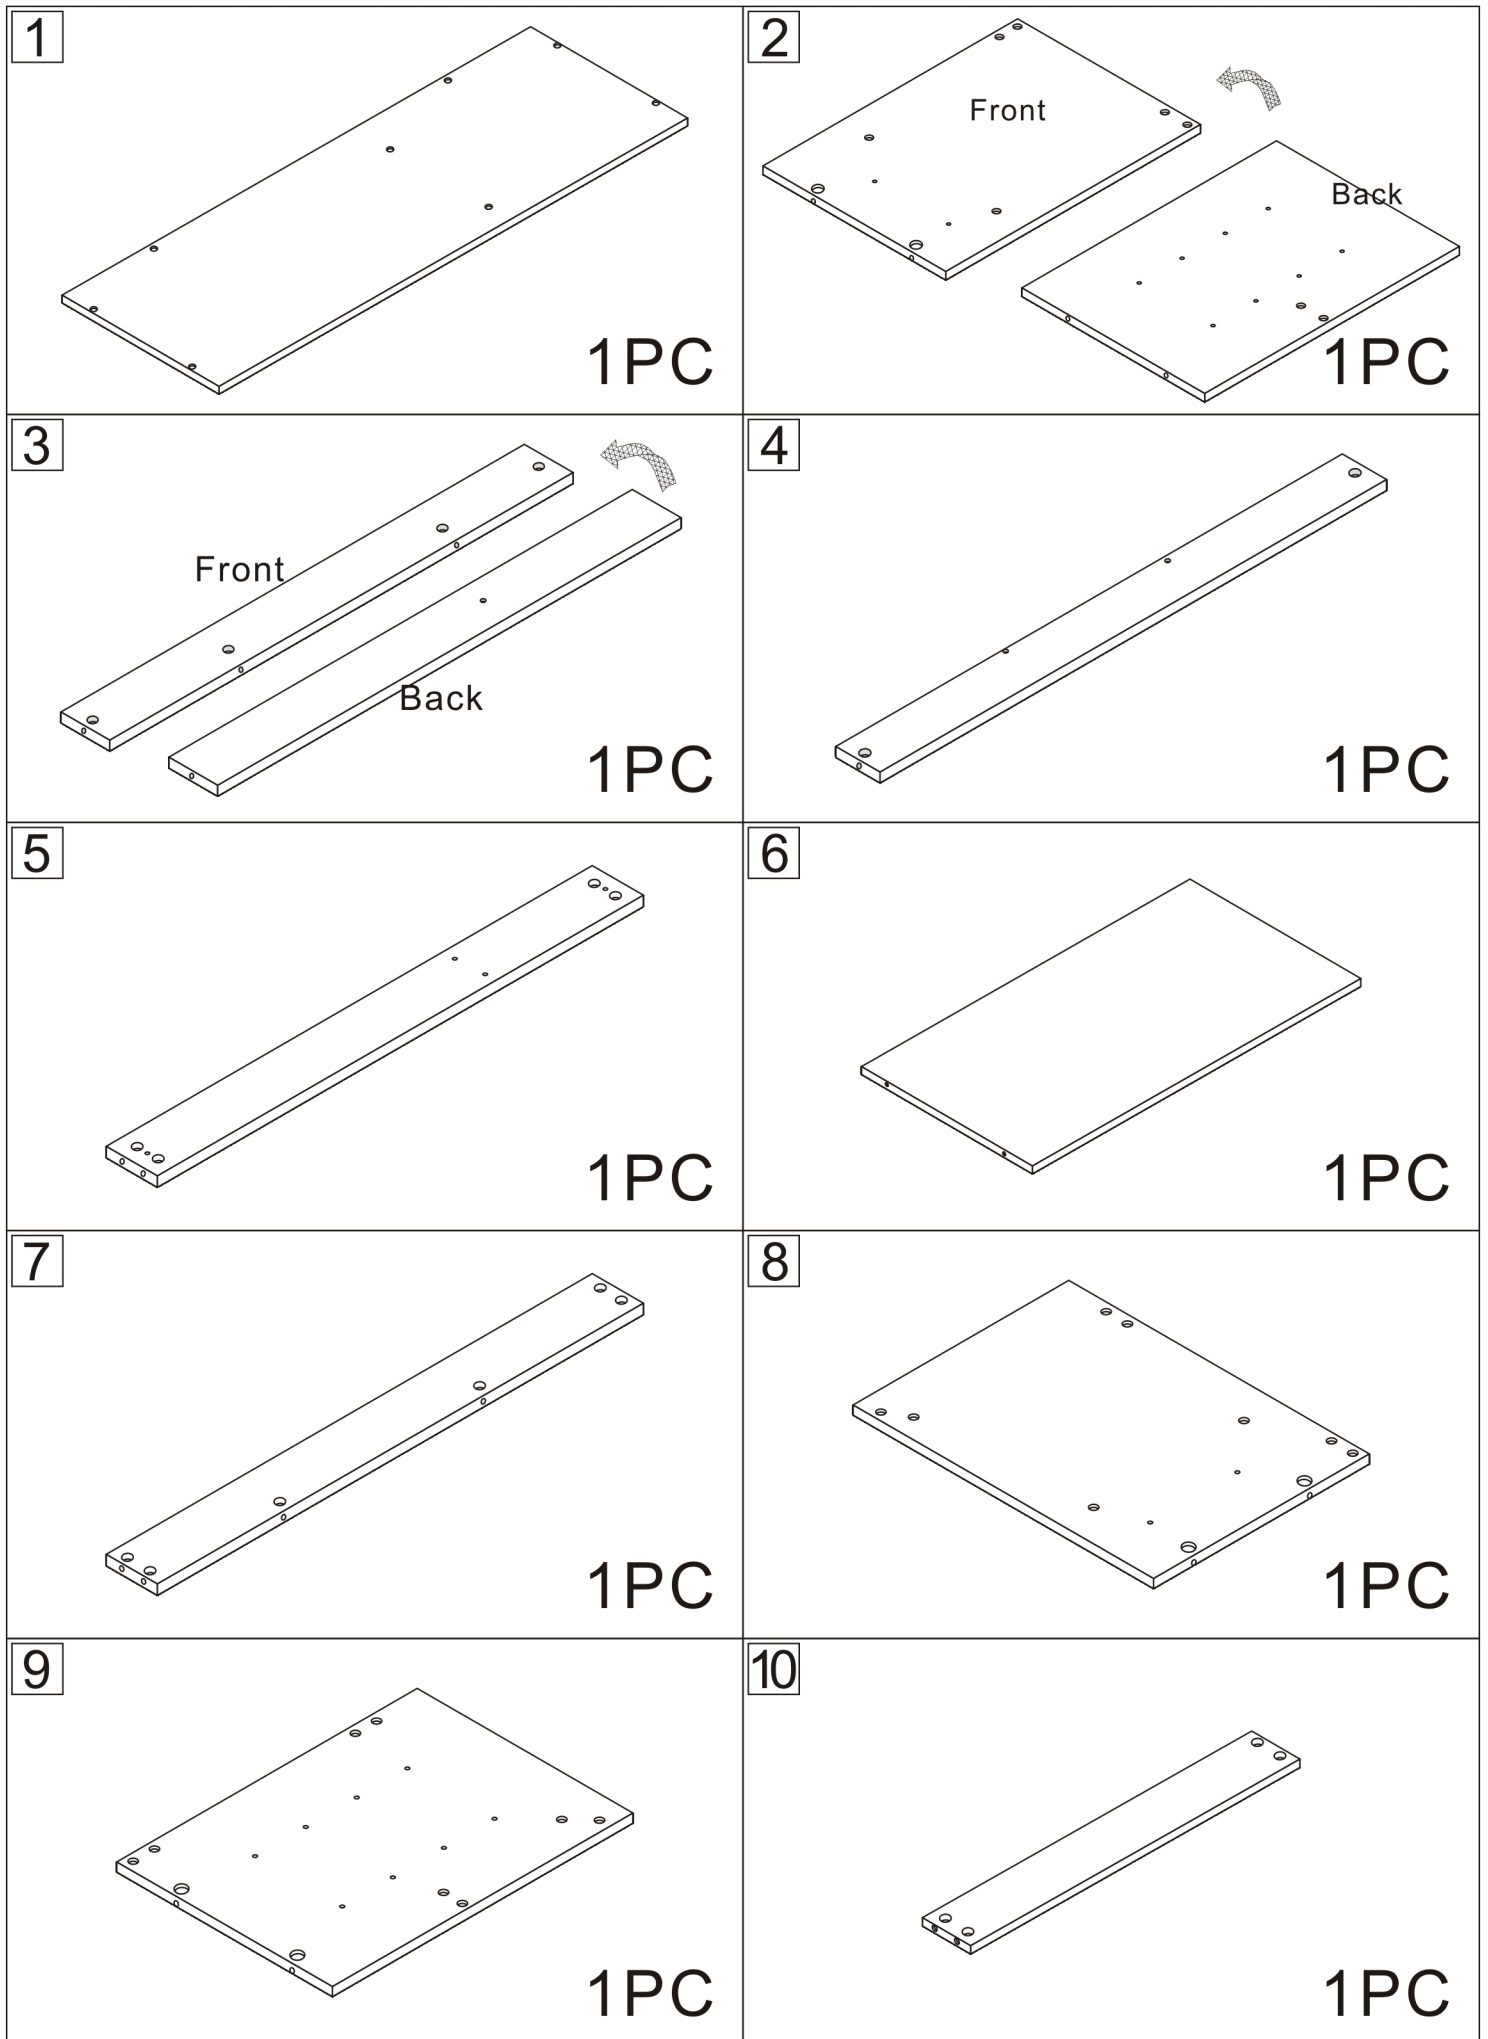


11

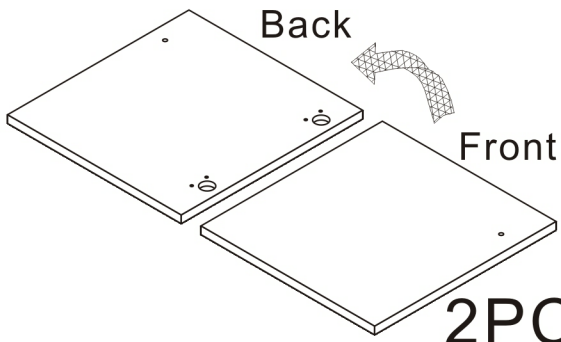


2PCS

12

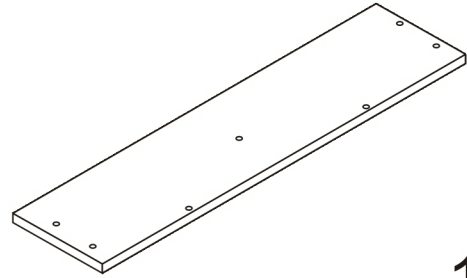


1PC

13

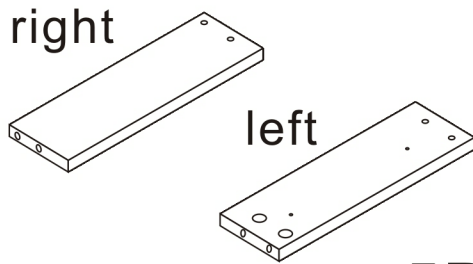


5PCS

14

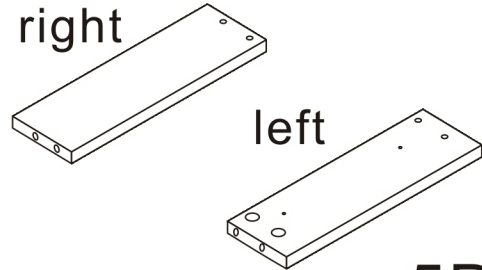


5PCS

15

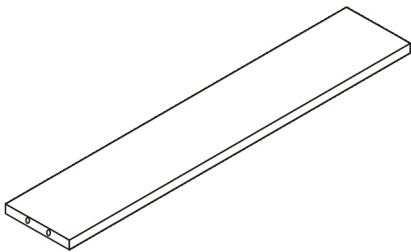


1PC

16

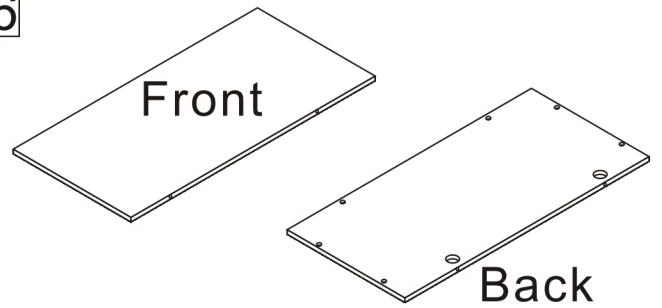


1PC

17

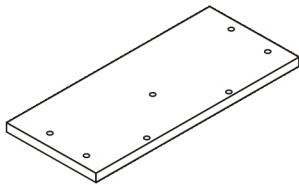


4PCS

18

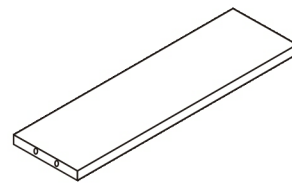










4PCS

19

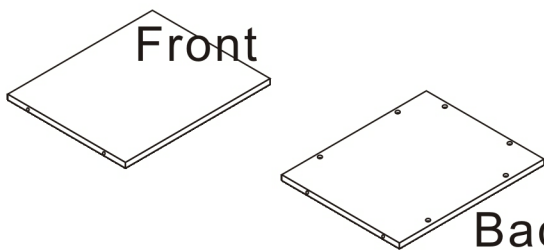


4PCS

1

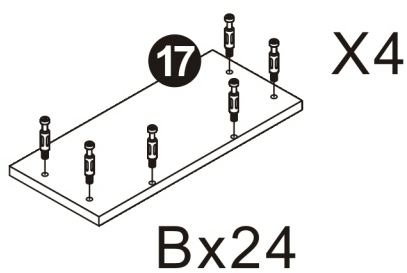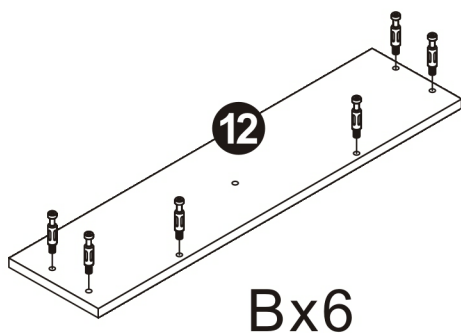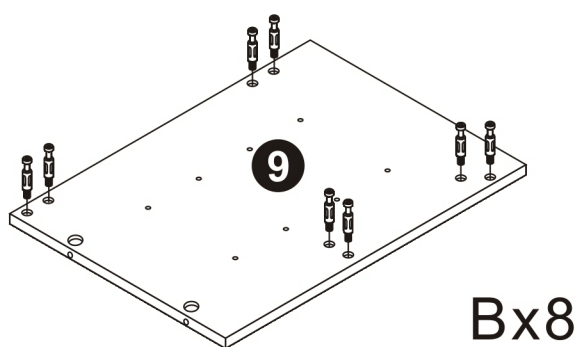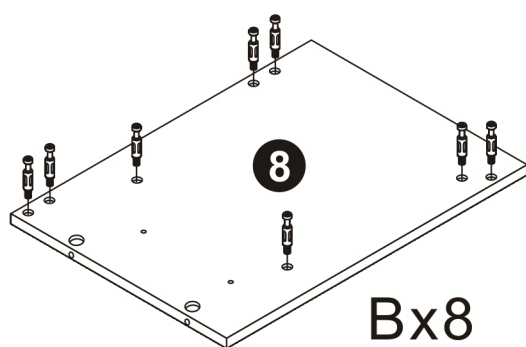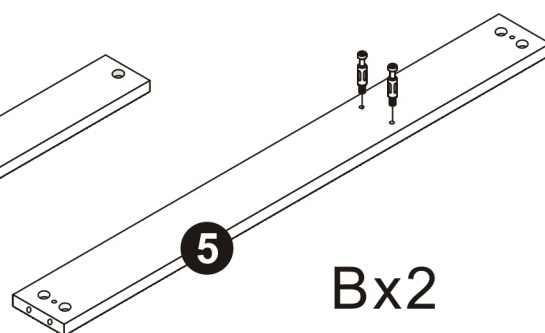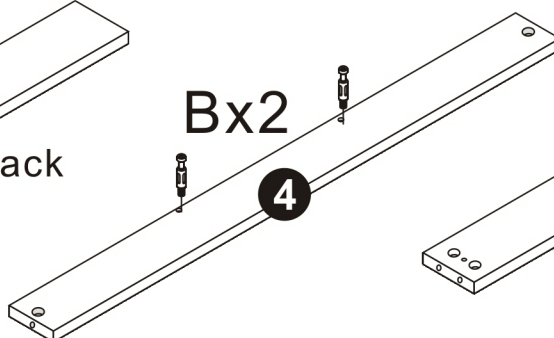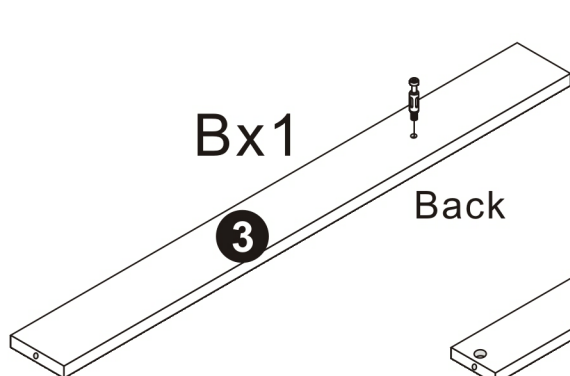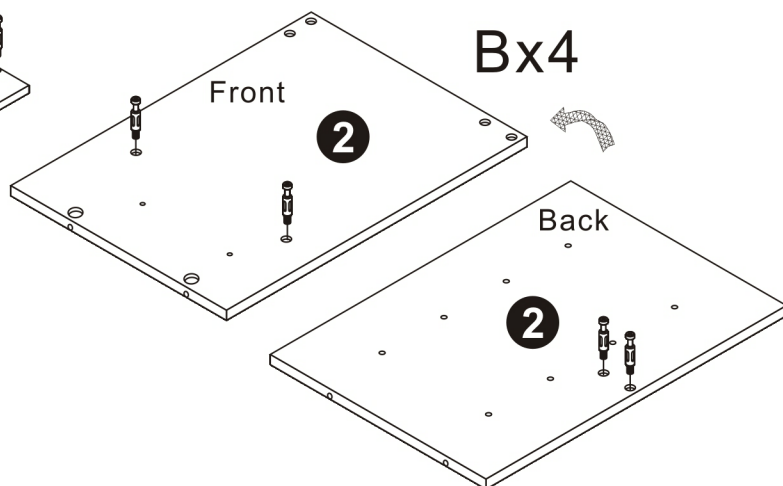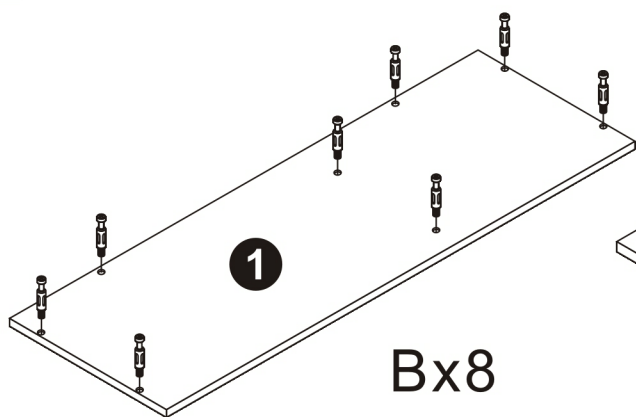


B	63PCS
	
6*28mm	

2

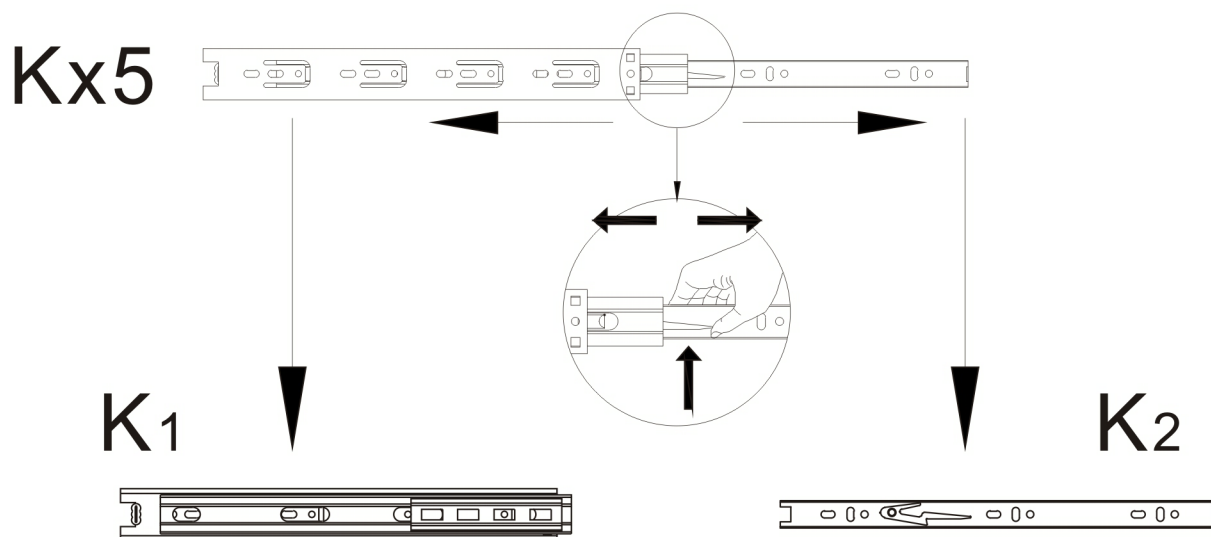


K ₁	5PCS
	
Three-section Rail	

3

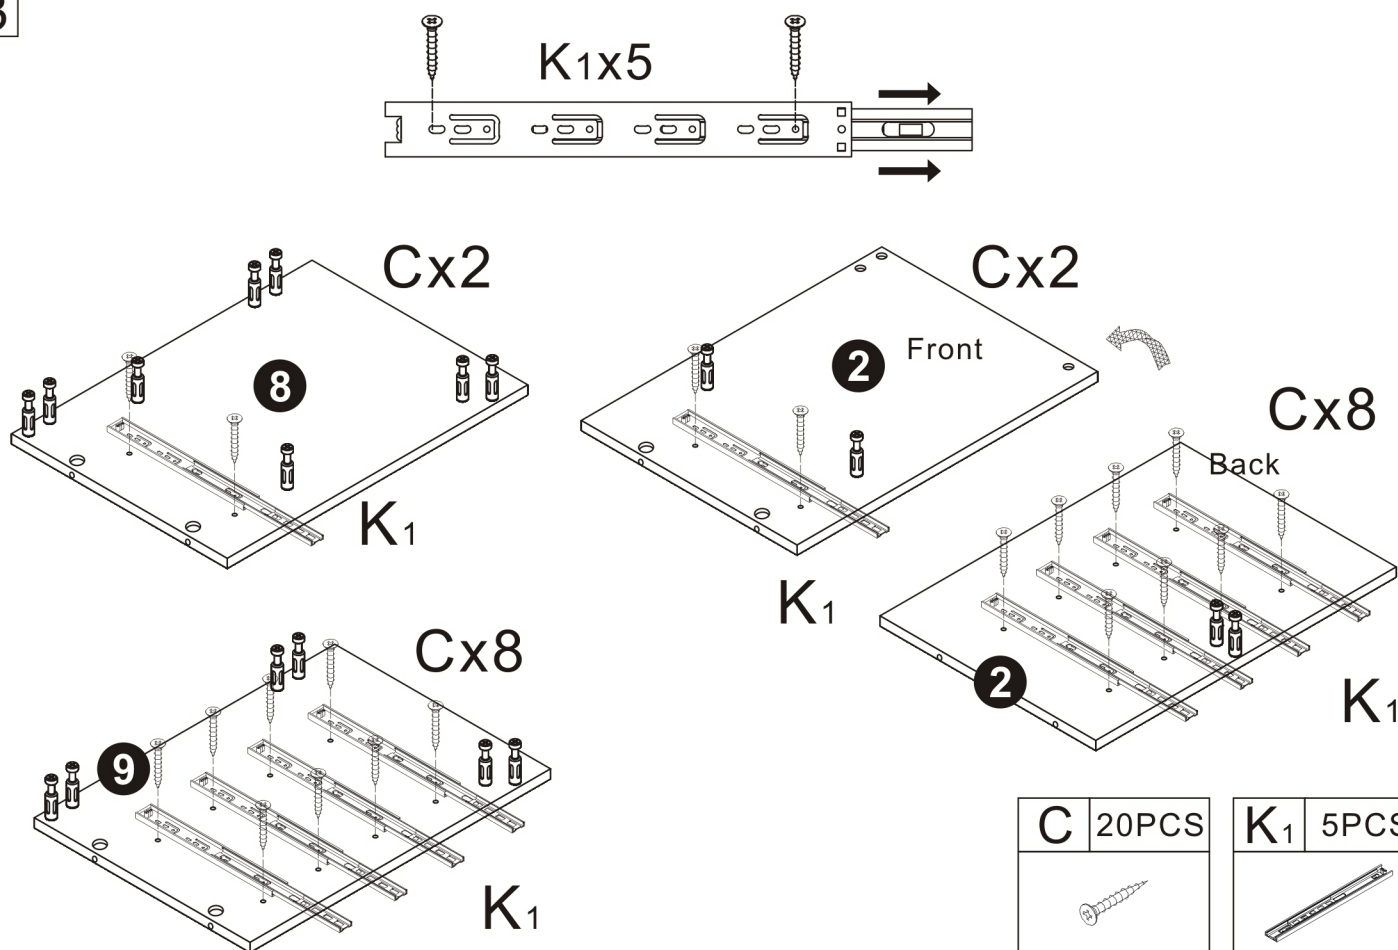

C	20PCS	K ₁	5PCS
			
3.5*14mm		12 inch Three-section Rail	

4

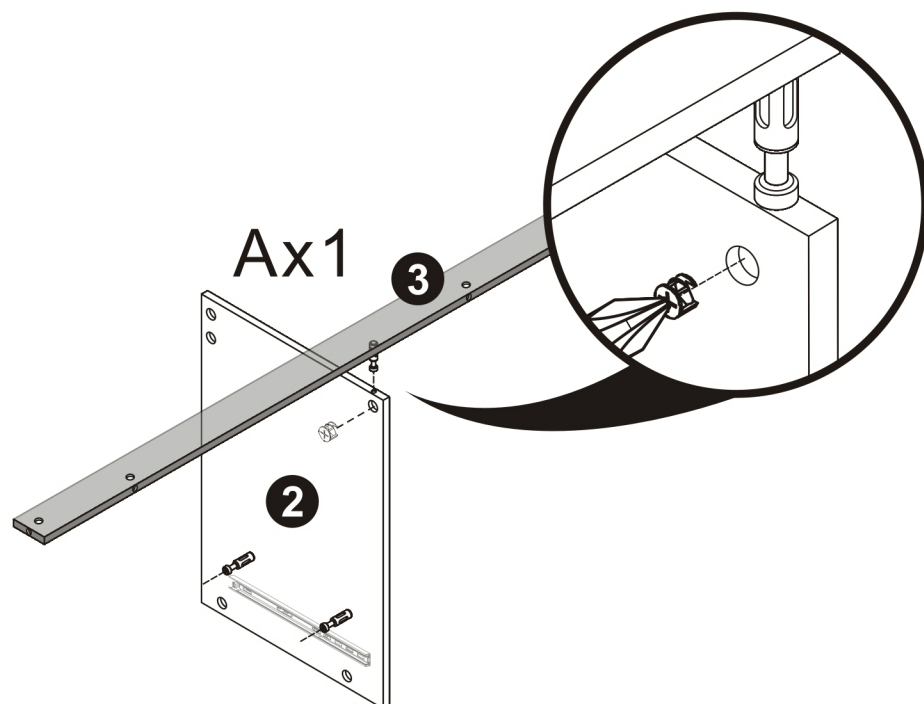


A 1PCS



15*10mm

5

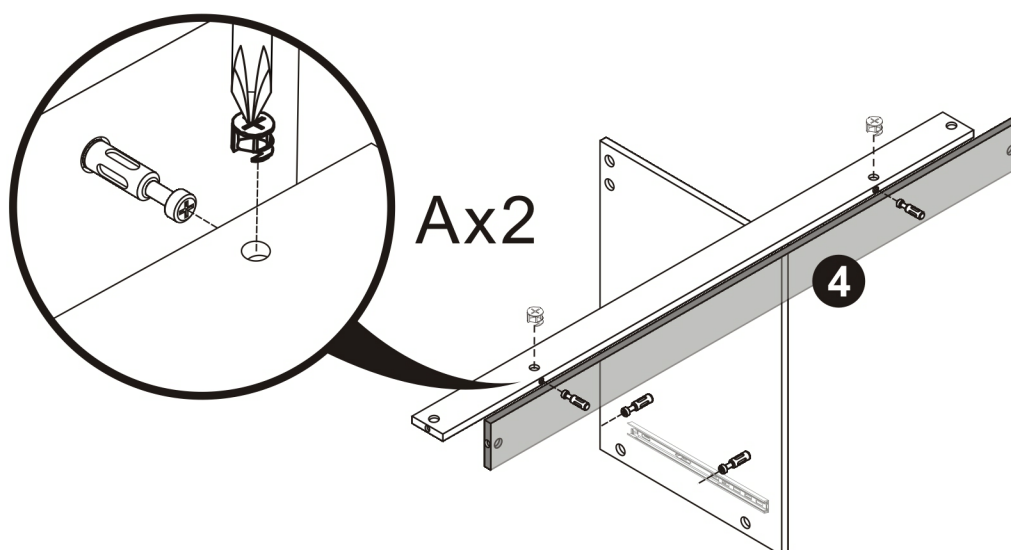


A 2PCS



15*10mm

6

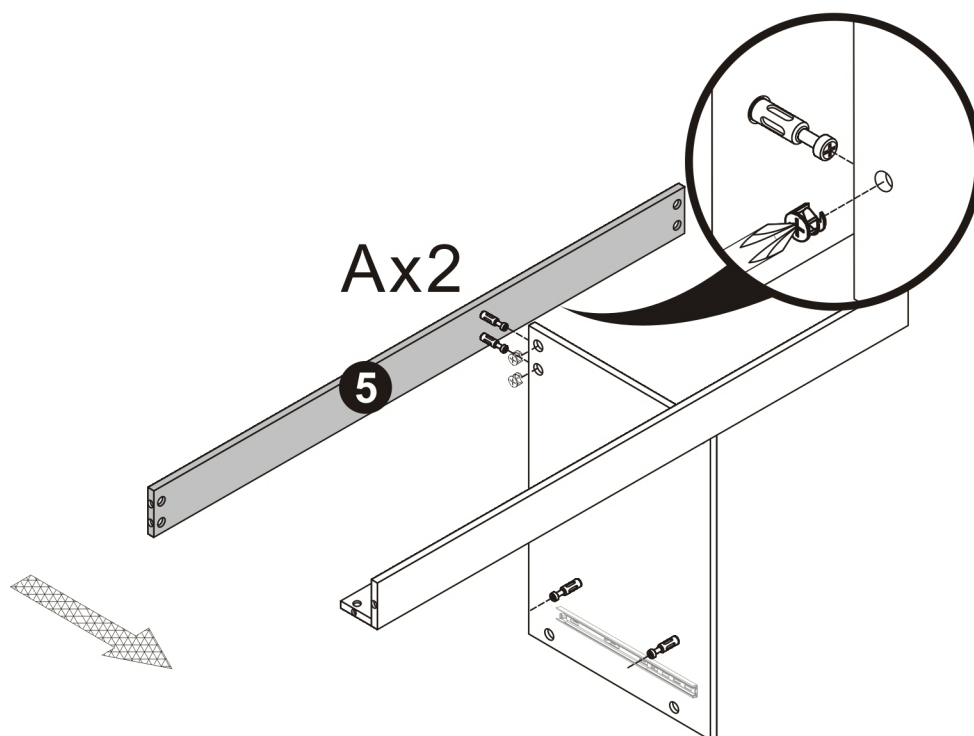

Ax2


5

A 2PCS



15*10mm

7

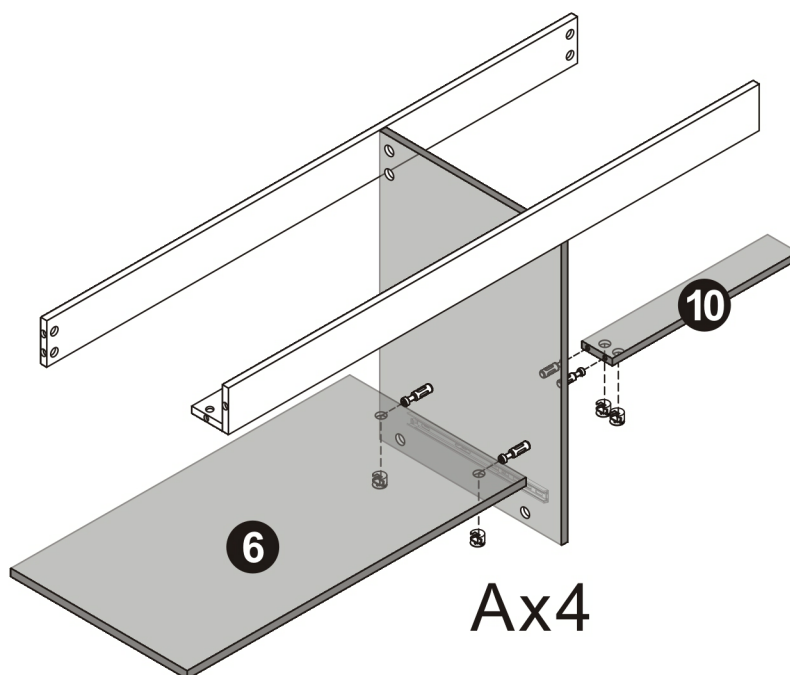

Ax4

6


10

A 4PCS



15*10mm

8

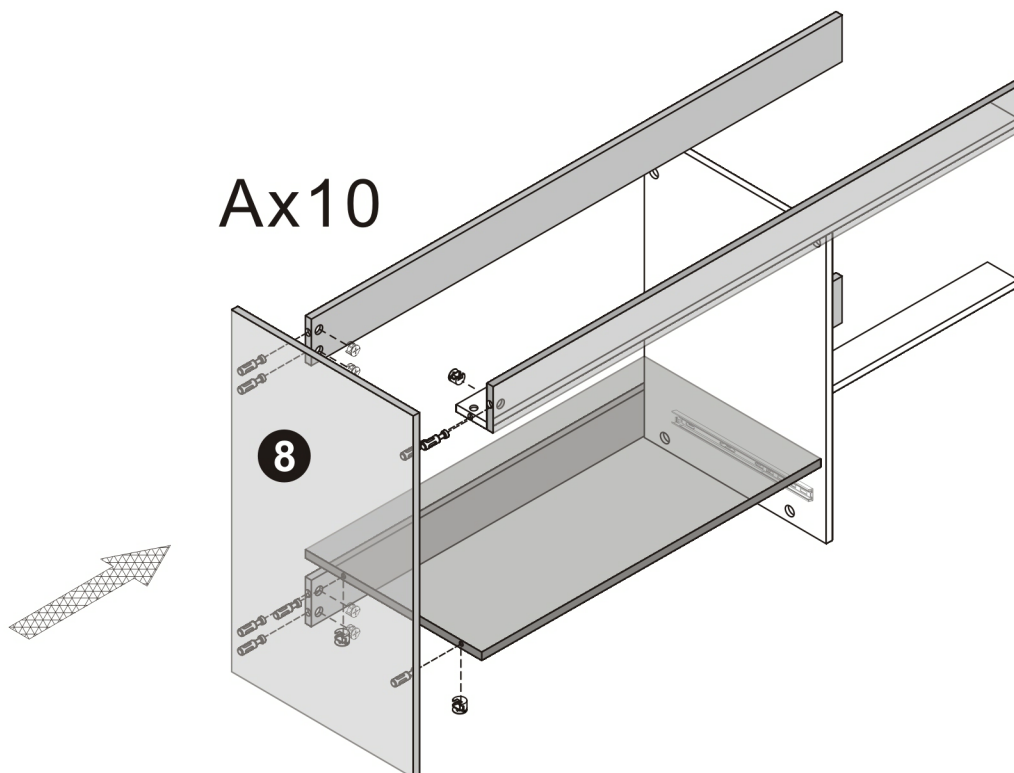


A 8PCS



15*10mm

9

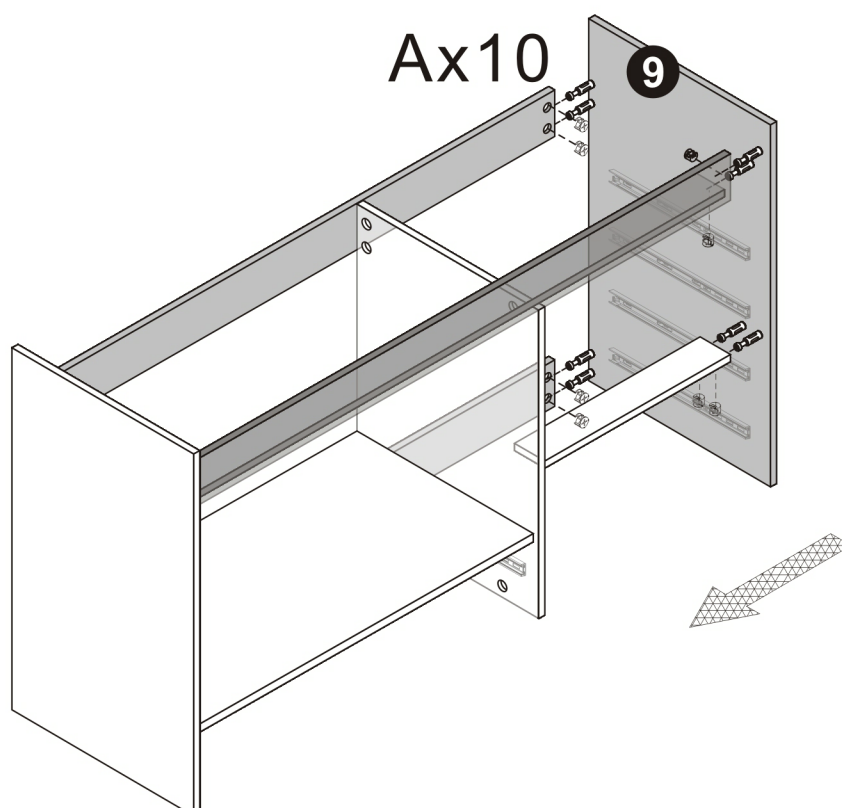


A 8PCS




15*10mm

10

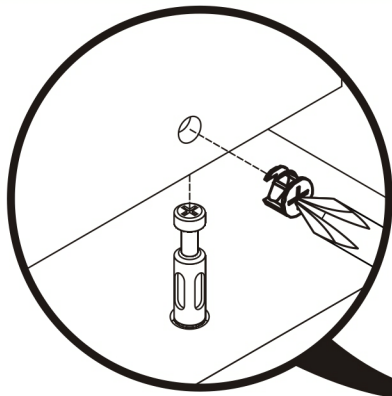

Ax8

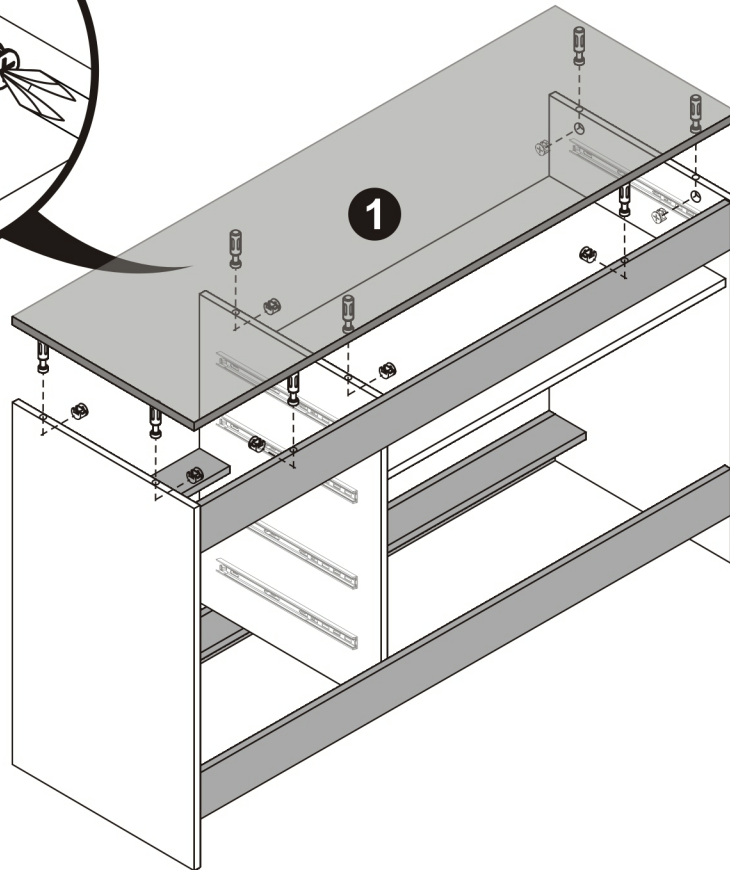

A 8PCS





15*10mm

11

Jx2

Cx16

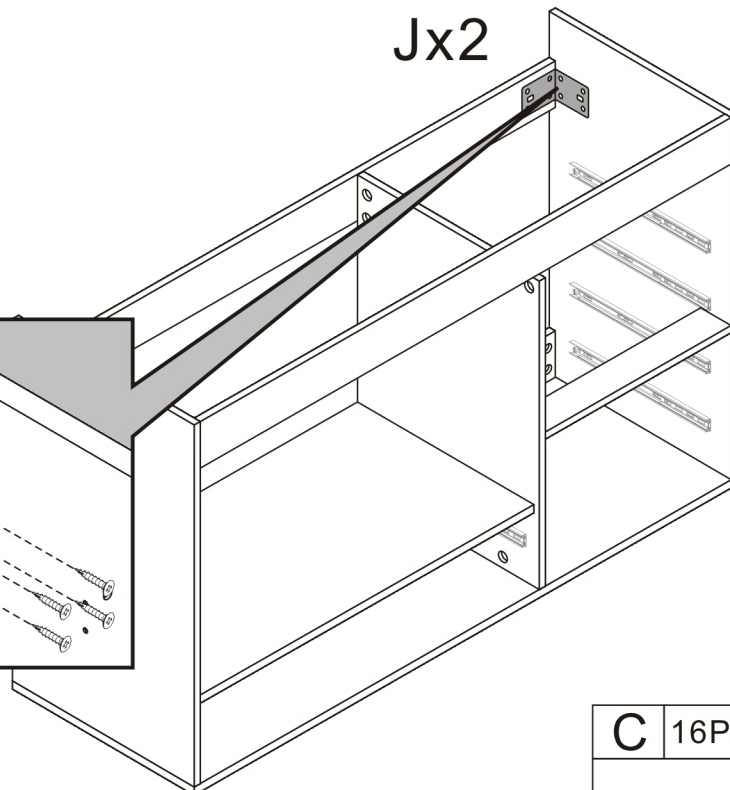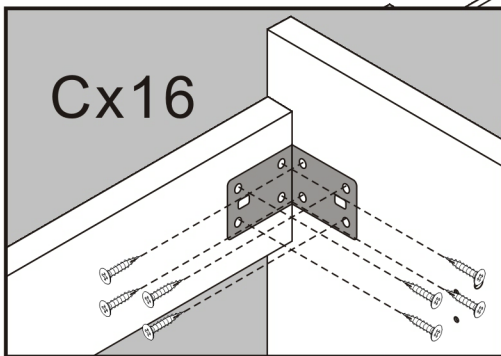

C 16PCS



3.5*14mm

J 2PCS






Corner code

12


Hx2
Cx4

Mx2
Cx4

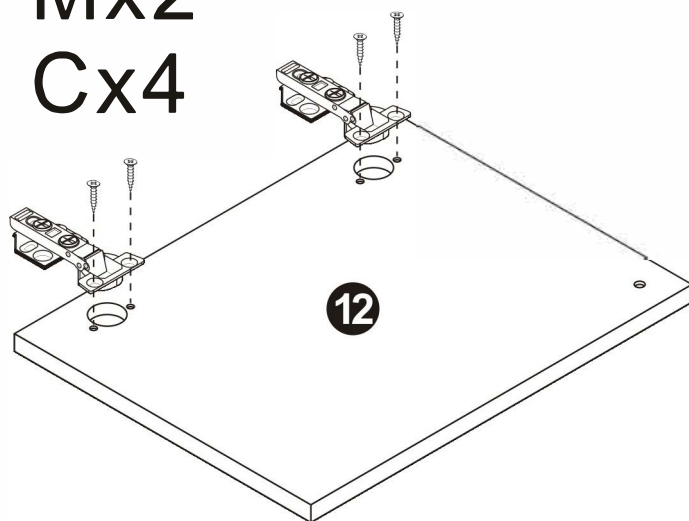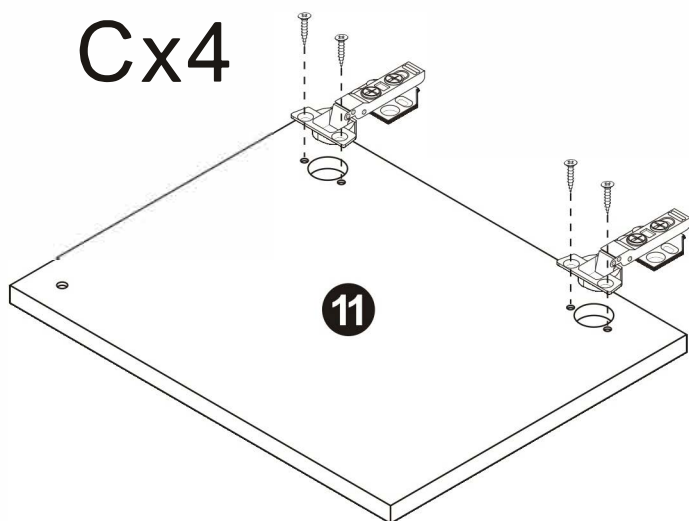

C	8PCS	H	2PCS	M	2PCS
					
3.5*14mm		Middle bend		Straight bend	

13

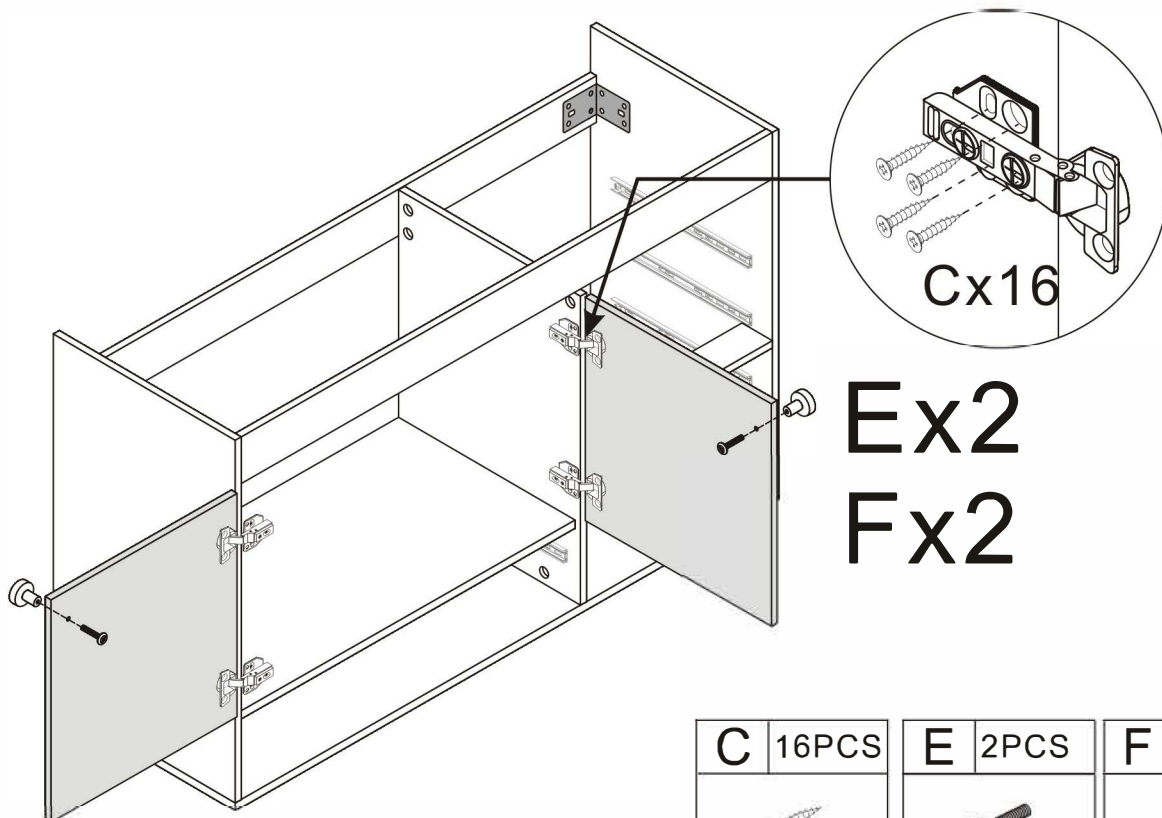

Ex2
Fx2



C	16PCS	E	2PCS	F	2PCS
					
3.5*14mm		4*20		Handles	

SPECIAL TIPS FOR DOOR ALIGNMENT


CONSEJOS ESPECIALES PARA LA ALINEACIÓN DE PUERTAS

CONSEILS SPÉCIAUX POUR L'ALIGNEMENT DES PORTES





- A. Lateral adjustment (Moving door left-right) by screw adjusting
 Ajuste lateral (Puerta móvil de izquierda a derecha) mediante tornillo de ajuste
 Réglage latéral (porte mobile gauche-droite) par réglage à vis

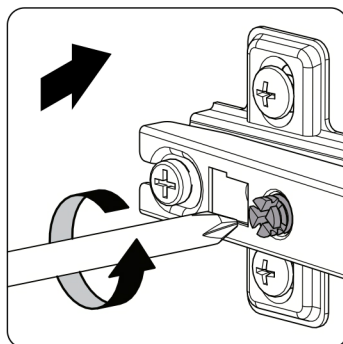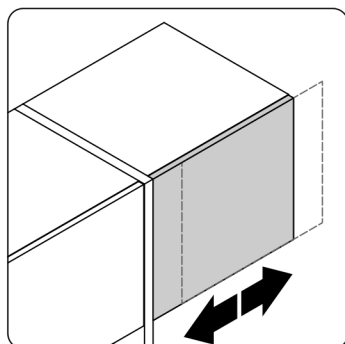





OR

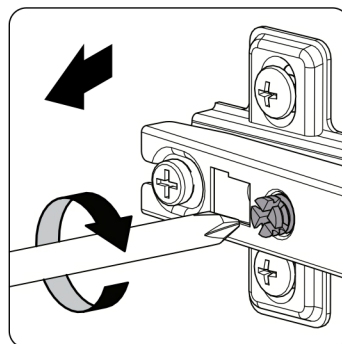


- B. Vertical adjustment (Moving door up-down) via the slot on the mounting plate
 Ajuste vertical (Puerta móvil arriba-abajo) a través de la ranura en la placa de montaje
 Réglage vertical (porte mobile de haut en bas) via la fente sur la plaque de montage

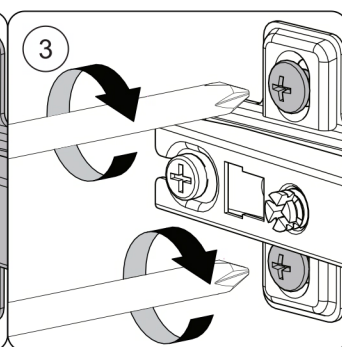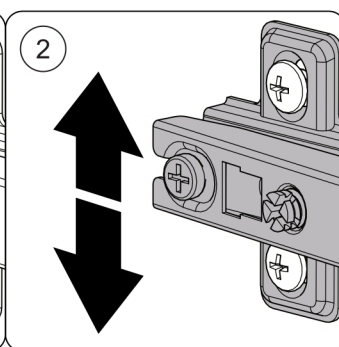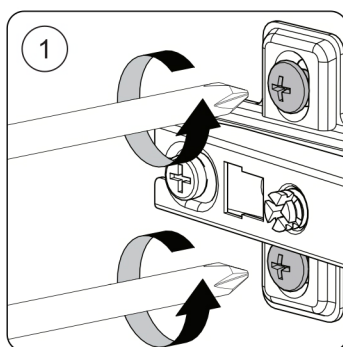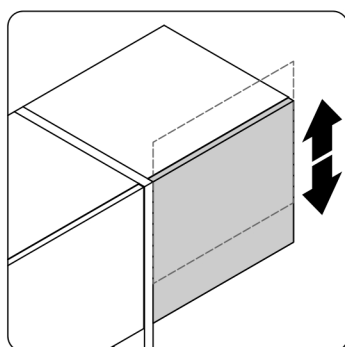

- C. Front-to-back adjustment (Spacing Door Off Cabinet) by slacking the hinge arm mounting screw
 Ajuste de adelante hacia atrás (espaciado entre la puerta y el gabinete) aflojando el tornillo de montaje del brazo de la bisagra
 Ajustement d'avant en arrière (espacement de la porte hors de l'armoire) en desserrant la vis de montage du bras de charnière

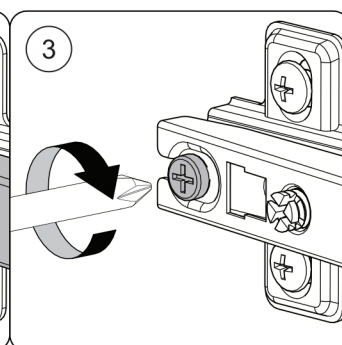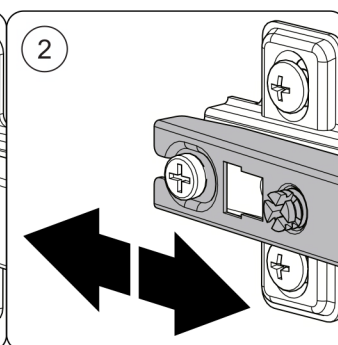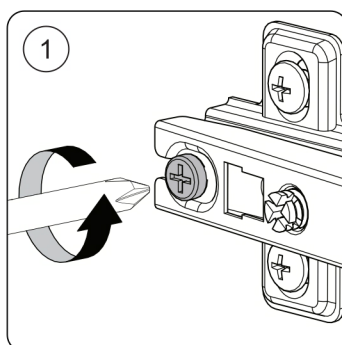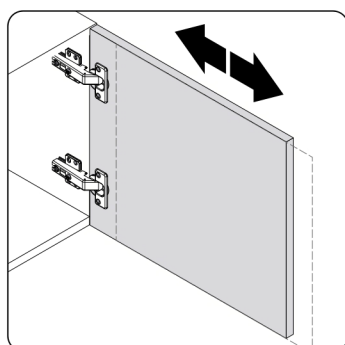


14

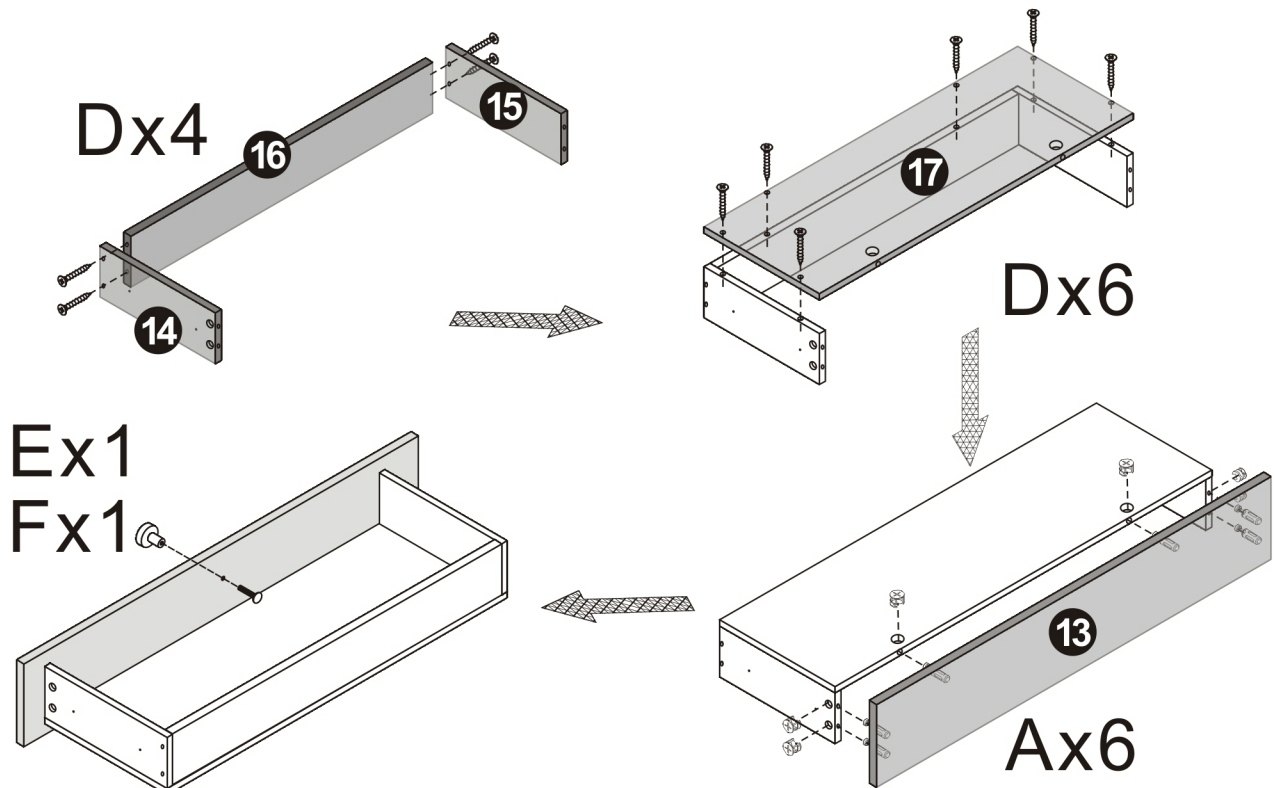


A	6PCS	D	10PCS	E	1PCS	F	1PCS
							
15*10mm		3.5*35mm		4*20		Handles	

15

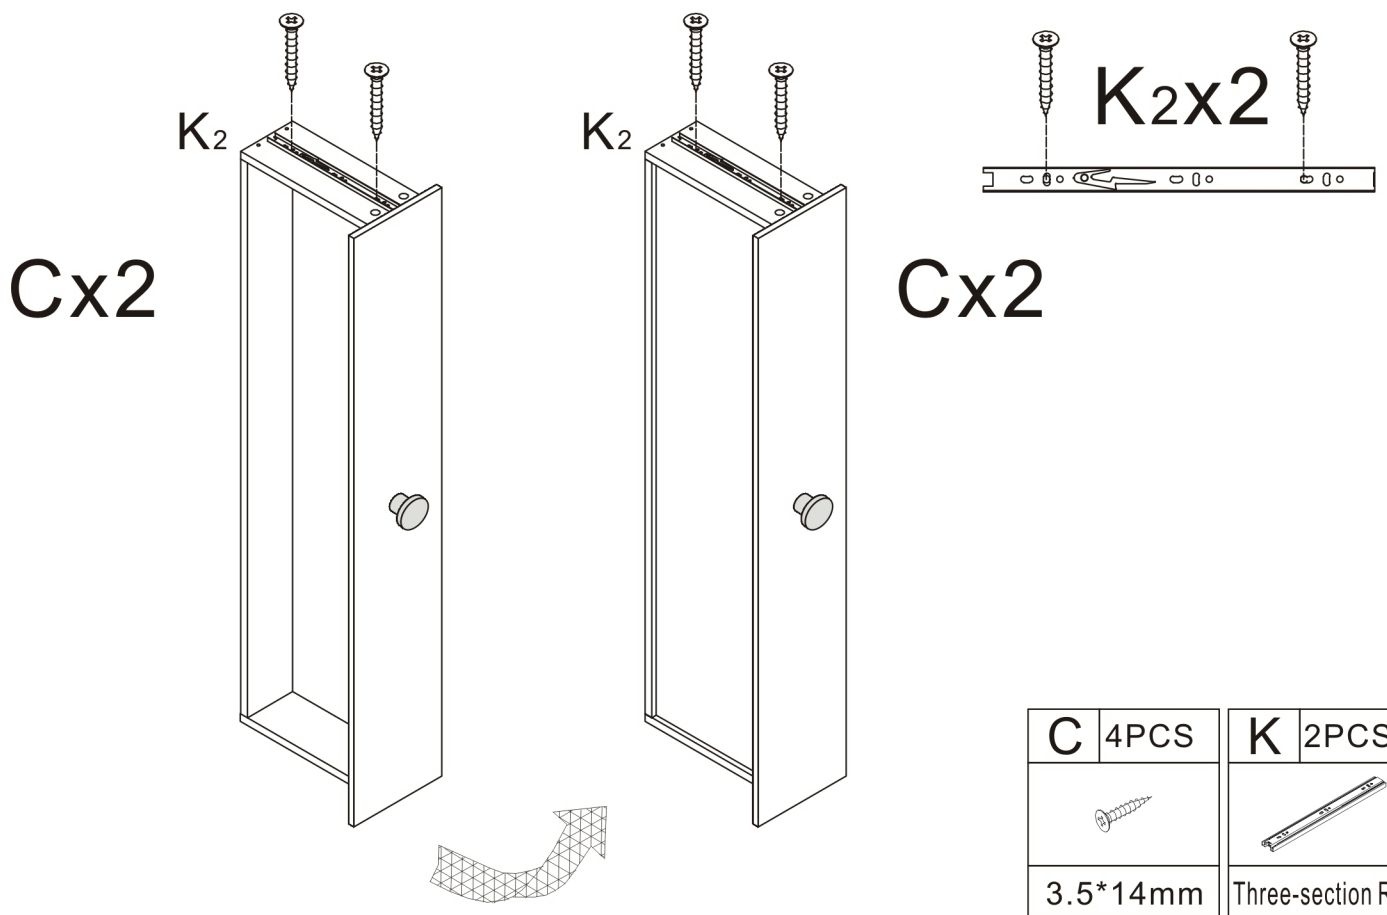

C	4PCS	K	2PCS
			
3.5*14mm		Three-section Rail	


16

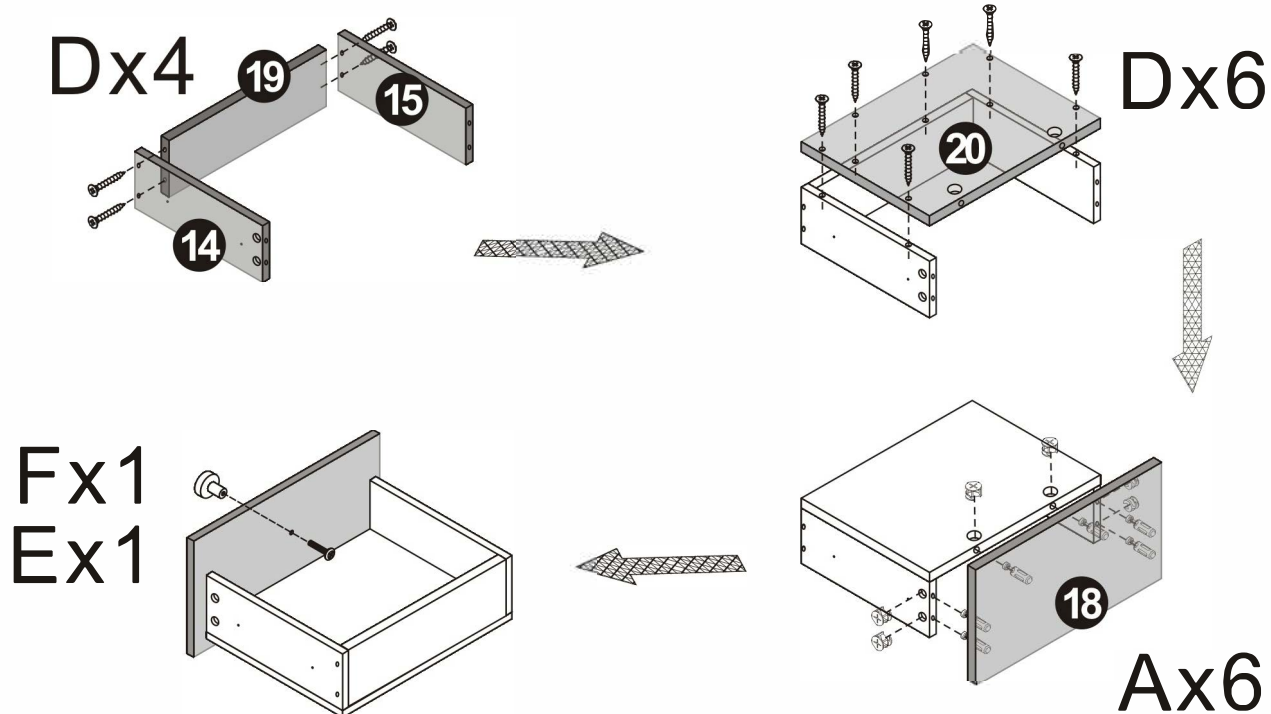

X4


A	24PCS	D	40PCS	E	4PCS	F	4PCS
							
15*10mm		3.5*35mm		4*20		Handles	

17

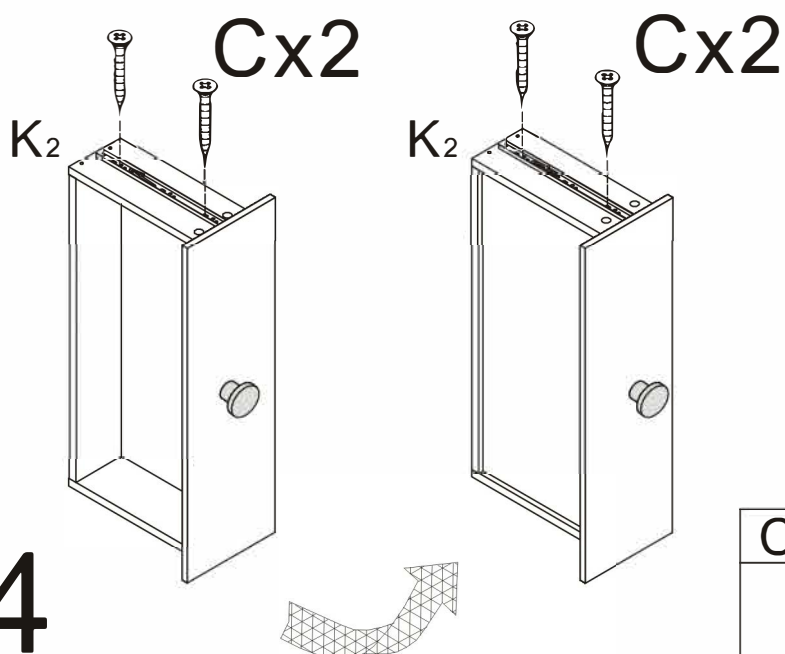

C	16PCS	K	4PCS
			
3.5*14mm		Three-section Rail	


18

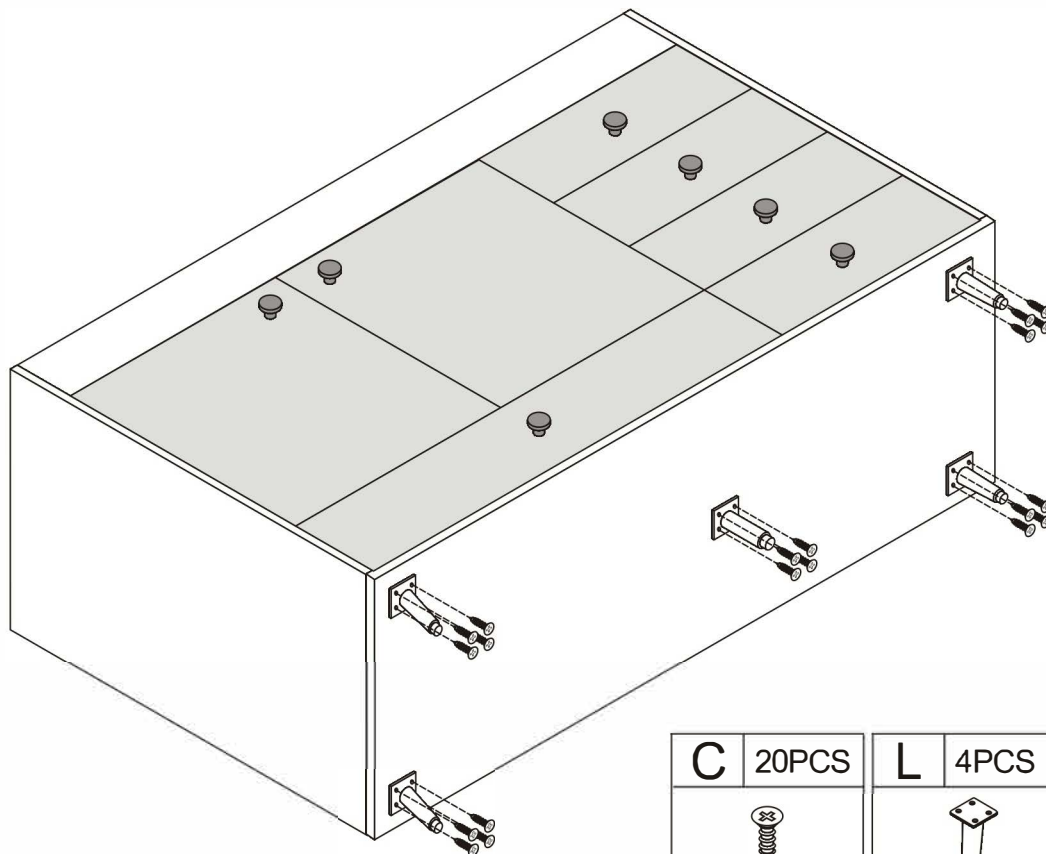

Cx20
Lx4
Mx1

C	20PCS	L	4PCS	M	1PCS
					
3.5*14mm		Hardware Feet		Hardware Feet	

19

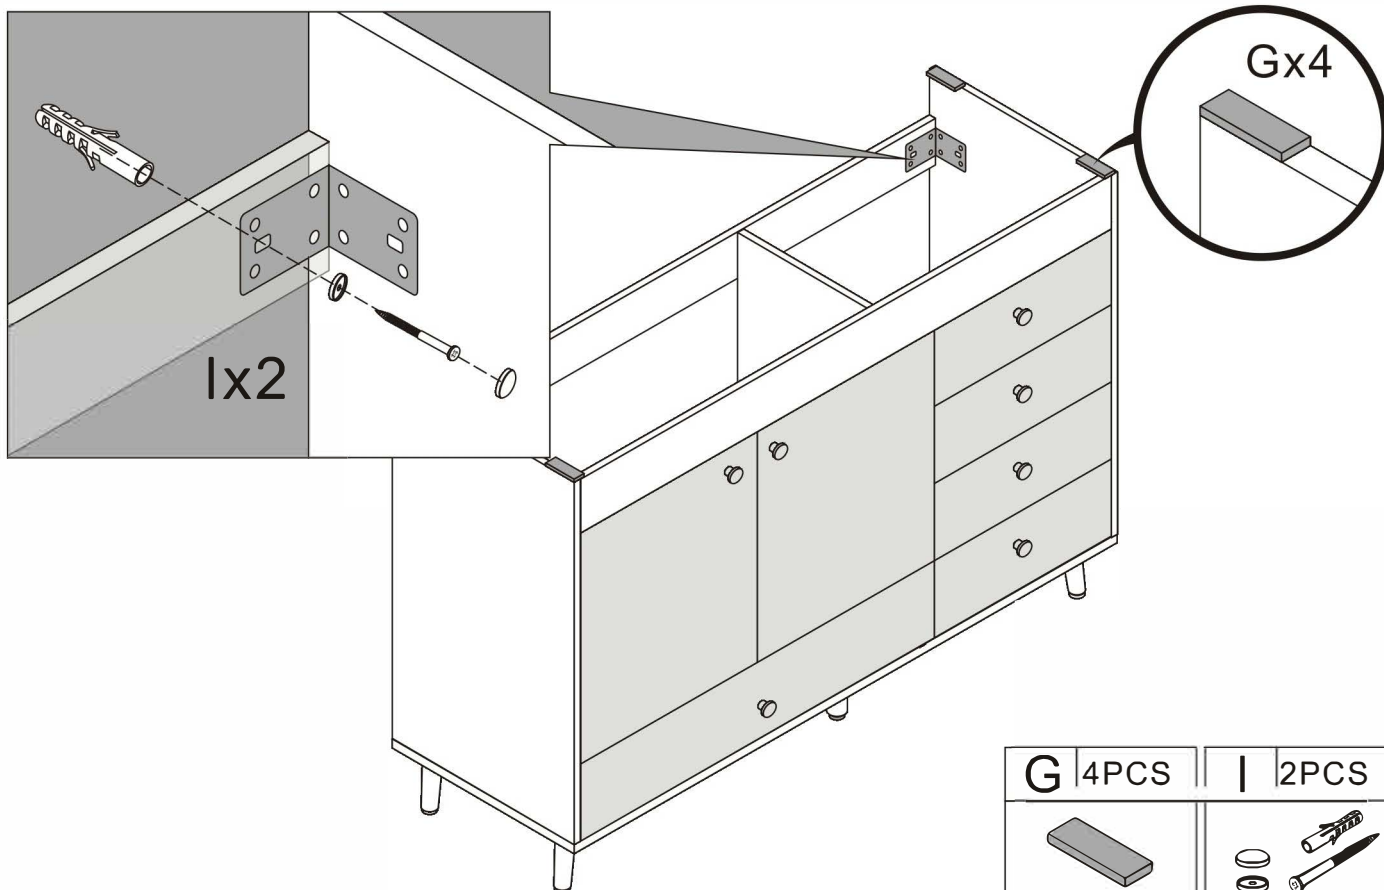


Gx4


Ix2

G	4PCS	I	2PCS
			
Sponge Mat		Expansion screw	

20

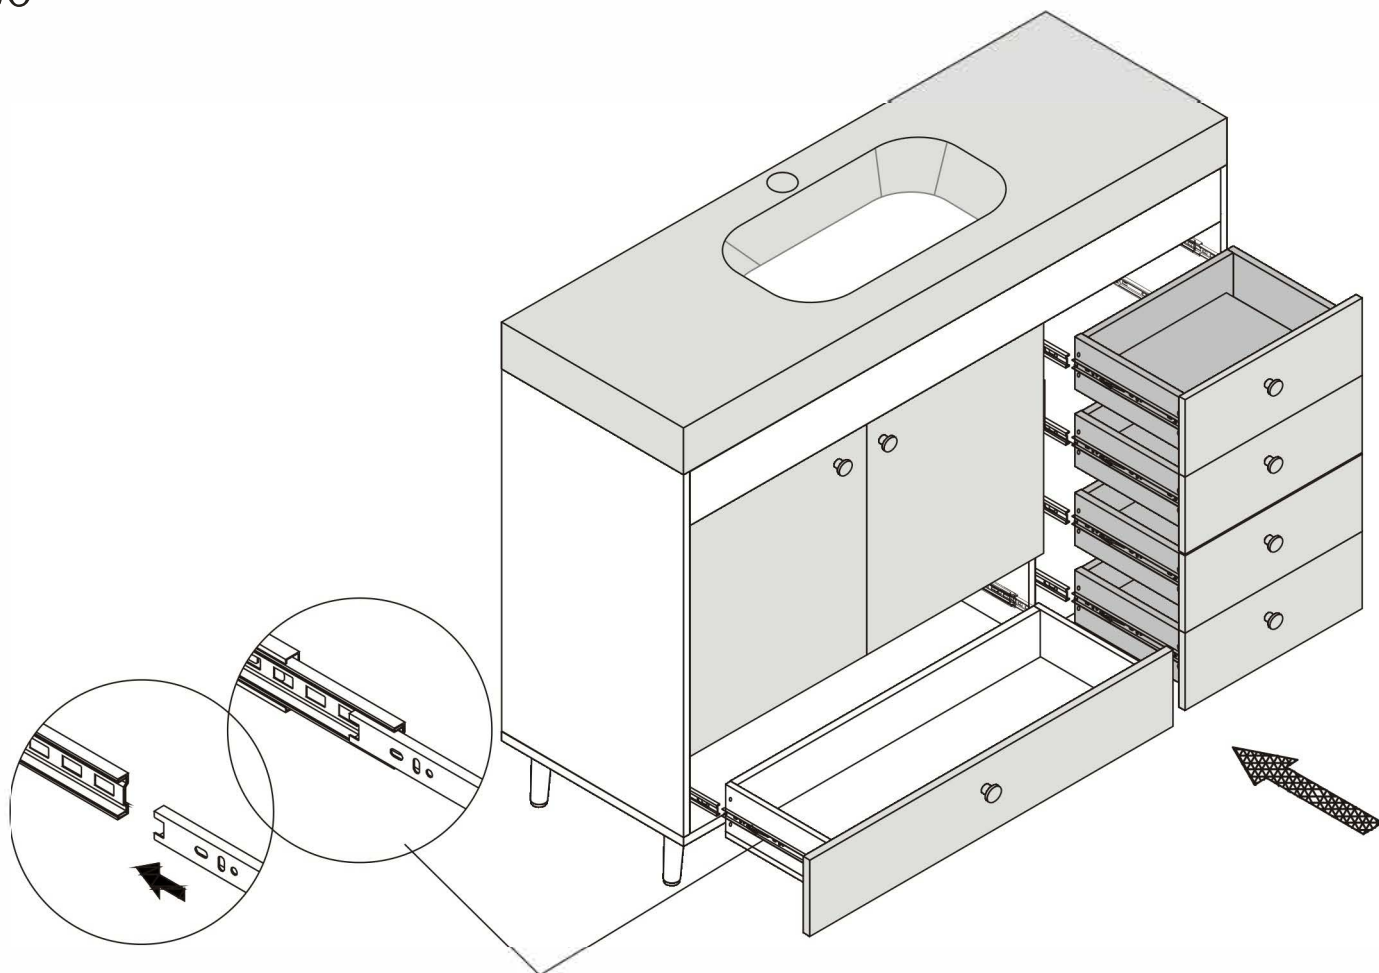

21

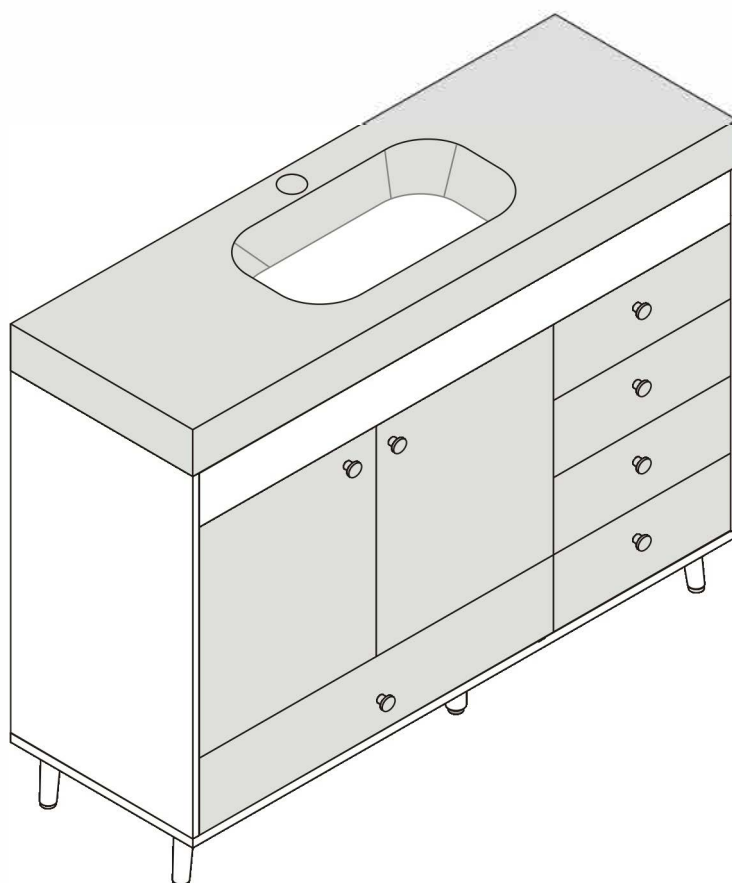

OK