

# INSTALLATION MANUAL



**Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.**





## Before You Start

-  Please read all instructions carefully.
-  Retain instructions for future reference.
-  Separate and count all parts and hardware.
-  Read through each step carefully and follow the proper order.
-  We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
-  Always place the product on a flat, steady and stable surface.
-  Keep all small parts and packaging materials for this product away from babies and children as they potentially pose a serious choking hazard.




## Assembly Instructions

We have designed our furniture with you, the customer in mind. Our clear, easy to follow step by step instructions will guide you through the project from start to finish. Feel confident that this will be a fun and rewarding project. The final product will be a quality piece of furniture that will go together smoothly and give years of enjoyment.

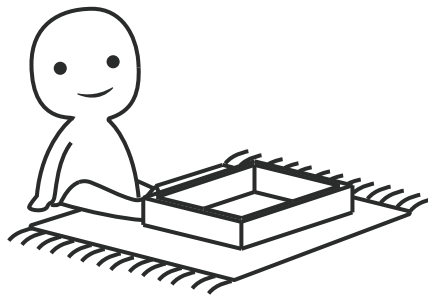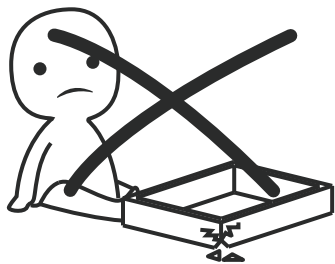

### ***AVOID SCRATCHES!***

In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

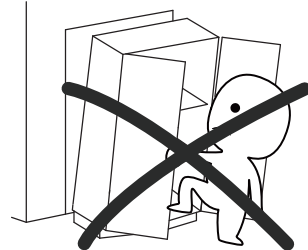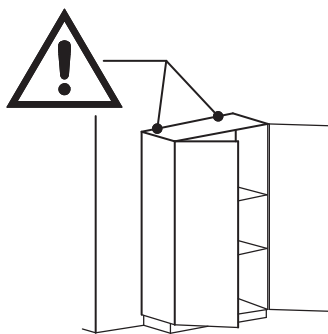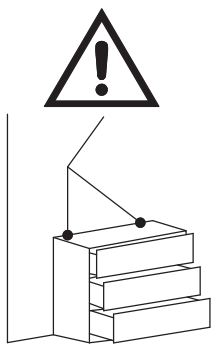

### ***ANTI-TOPPLE WARNING !***

Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.


### ***IMPORTANT !***

It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.



For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.


Completed Assembly

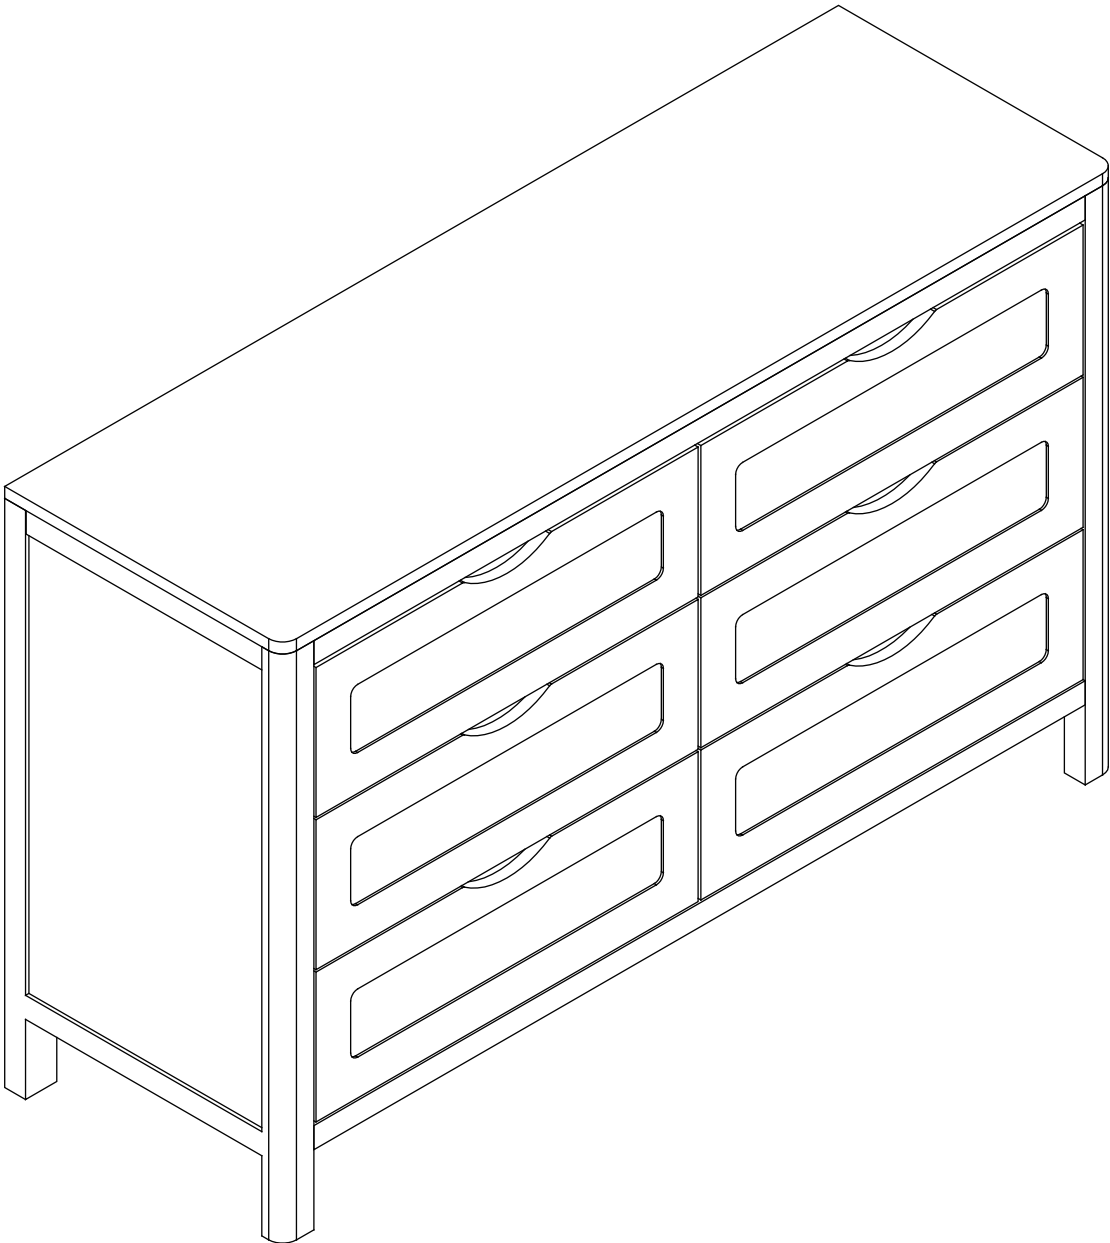

















Parts Description













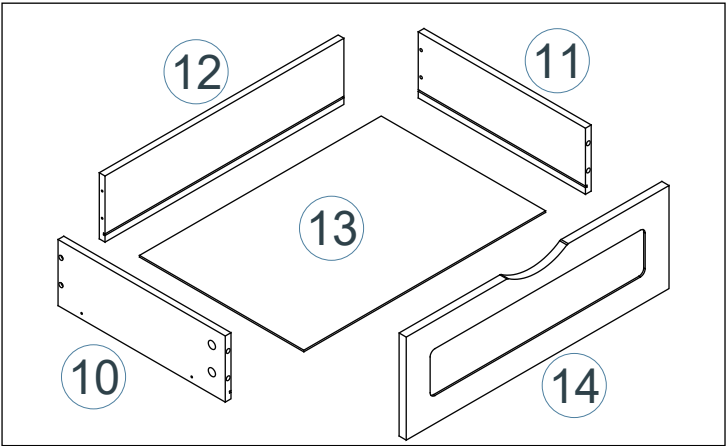
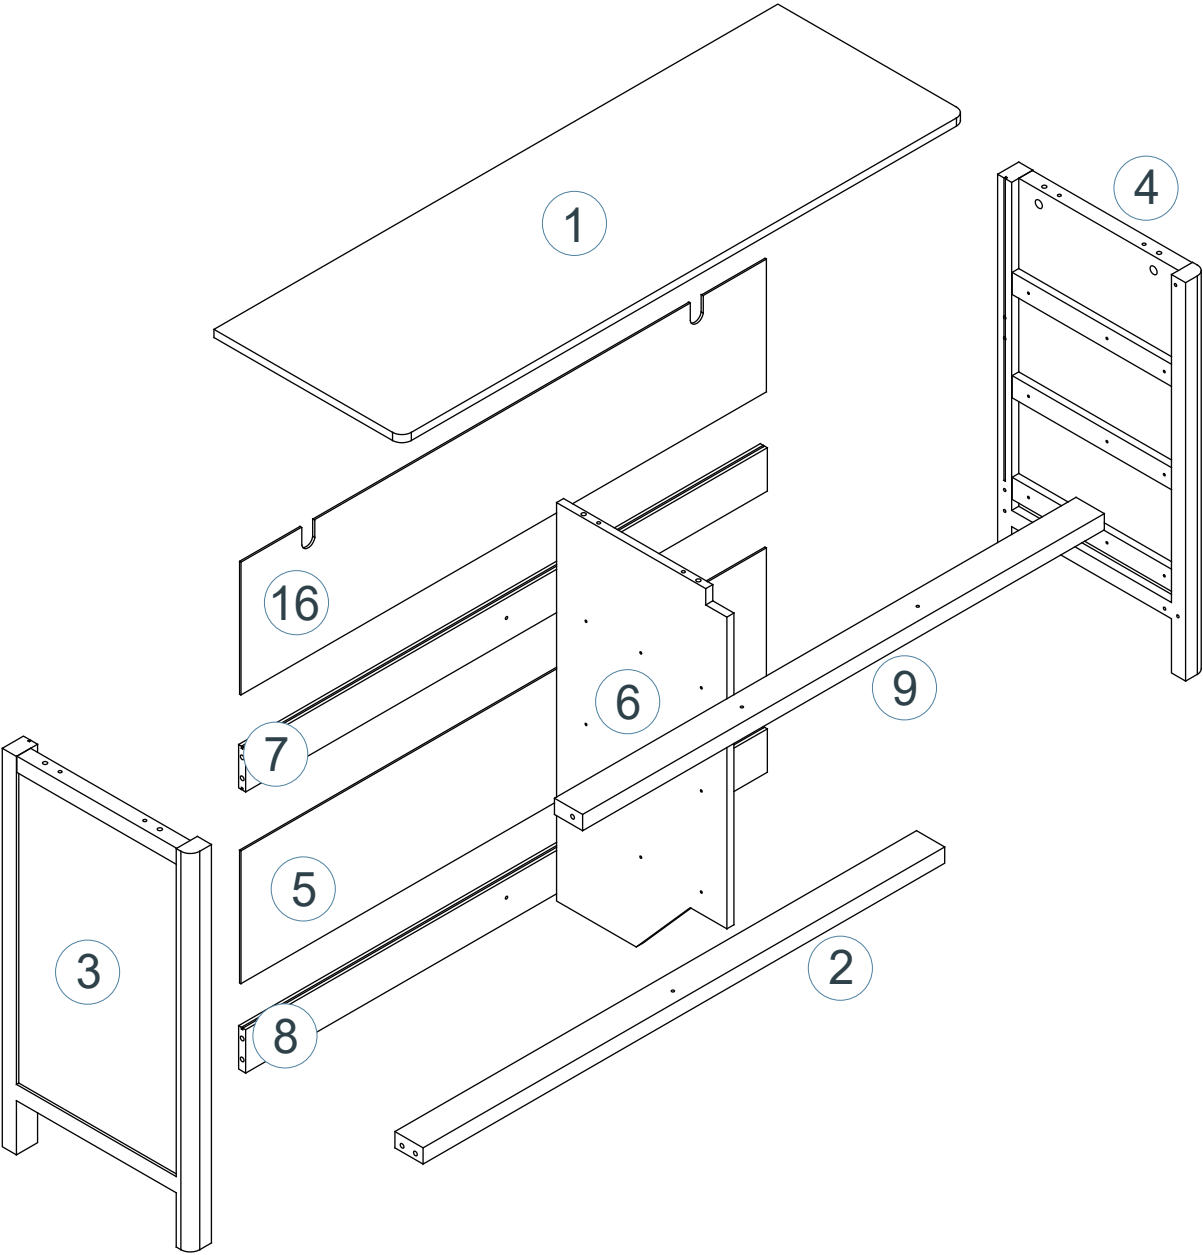


x3

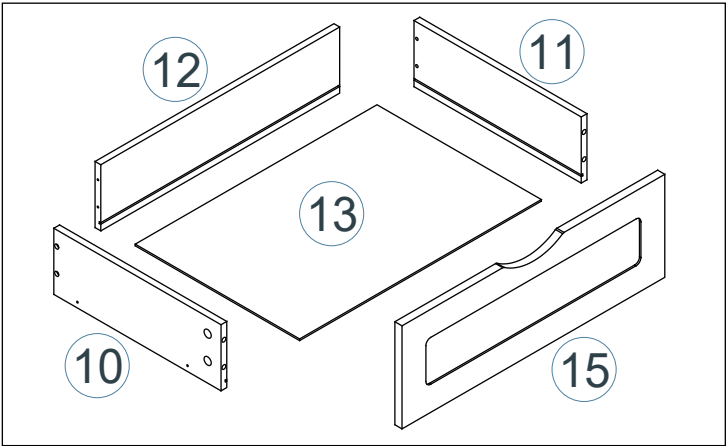


x3
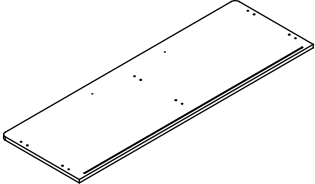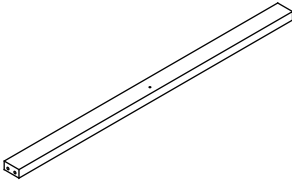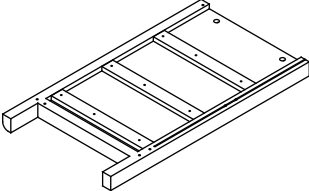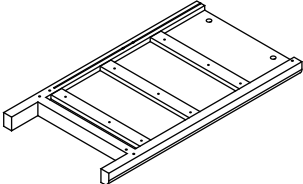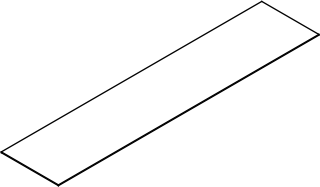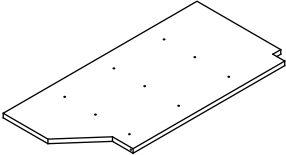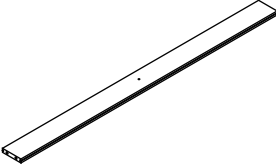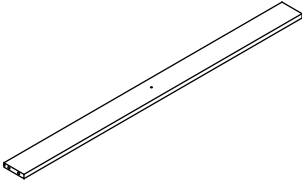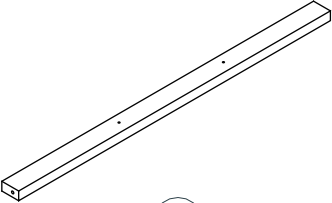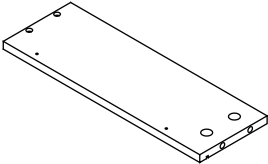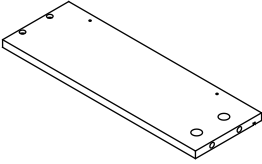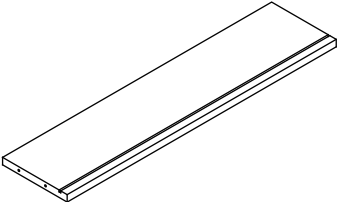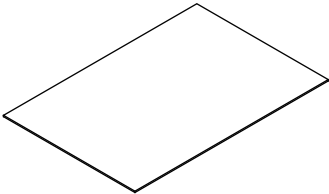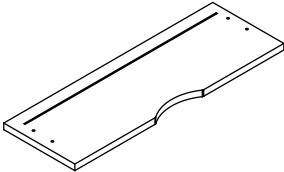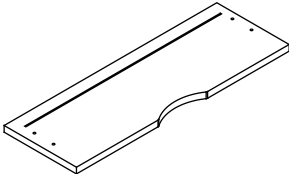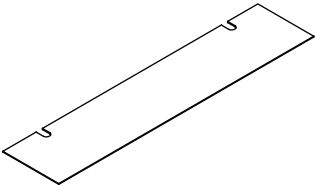
|                                                                                            |                                                                                             |                                                                                              |                                                                                              |
|--------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------|
| <br>①      | <br>②      | <br>③      | <br>④     |
| <br>⑤      | <br>⑥      | <br>⑦      | <br>⑧     |
| <br>⑨     | <br>⑩ x6  | <br>⑪ x6  | <br>⑫ x6 |
| <br>⑬ x6 | <br>⑭ x3 | <br>⑮ x3 | <br>⑯   |
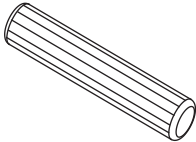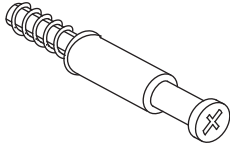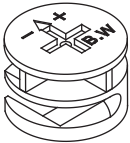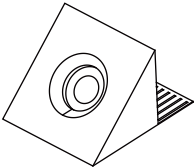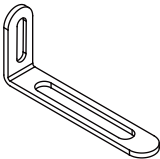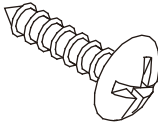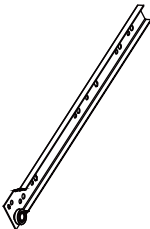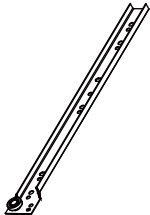
|                                                                                                                                                 |                                                                                                                                            |                                                                                                                                                   |
|-------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>A</p>  <p>8 x 30mm Dowel                      6pcs</p>      | <p>B</p>  <p>4 x 40mm Long Screw            5pcs</p>      | <p>C</p>  <p>Cam Bolt                                44pcs</p> |
| <p>D</p>  <p>Cam Nut                                44pcs</p>  | <p>E</p>  <p>3 x 12mm Small Screw          60pcs</p>      | <p>F</p>  <p>4 x 30mm Screw                    24pcs</p>       |
| <p>G</p>  <p>Wedge                                  8pcs</p> | <p>H</p>  <p>3 x 16mm Wedge Screw          8pcs</p>     | <p>I</p>  <p>Plastic Glide                        5pcs</p>   |
| <p>J</p>  <p>Bracket                                2pcs</p> | <p>K</p>  <p>4 x 14mm Screw                    2pcs</p> | <p>L</p>  <p>Wall Anchor                        2pcs</p>     |
| <p>M</p>  <p>Screw                                  2pcs</p> | <p>CL</p>  <p>350mm Runner Track            6pcs</p>    | <p>CR</p>  <p>350mm Runner Track            6pcs</p>         |


DL

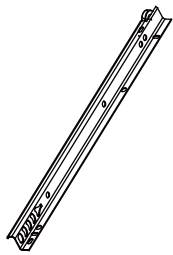

350mm Runner

6pcs

DR

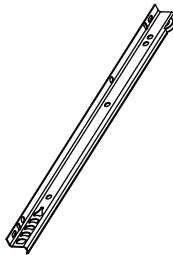

350mm Runner

6pcs



Note: Please do not use any power tools. Use of power tools may cause damage and void manufacture warranty.

## Instructions For Fastening Cam Bolt and Cam Lock





CAM BOLT





CAM LOCK

### Cam Bolt

Place Cam Bolt on the designated pre-drilled hole on the panel. Use a Phillips Screwdriver to screw in Cam Bolt vertically until shoulder is snug and flushed with panel. Do not over-tighten or under-tighten Cam-bolt. See illustrations below.

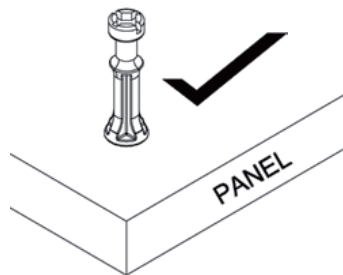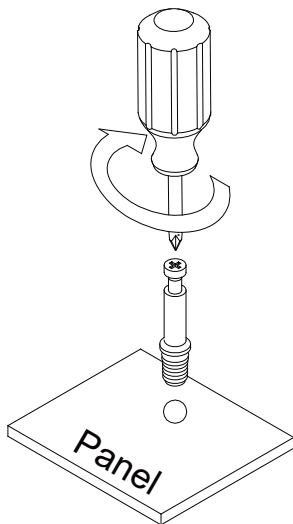



Shoulder is flushed  
(on the same level)  
with the panel.

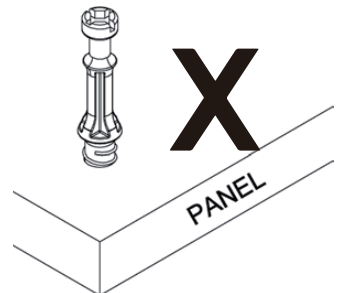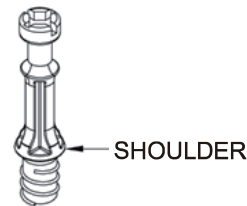

Shoulder is  
above the panel.

### CAM-LOCK


Align the arrow on the Cam-lock to the  
Cam-bolt head and insert the Cam-lock.

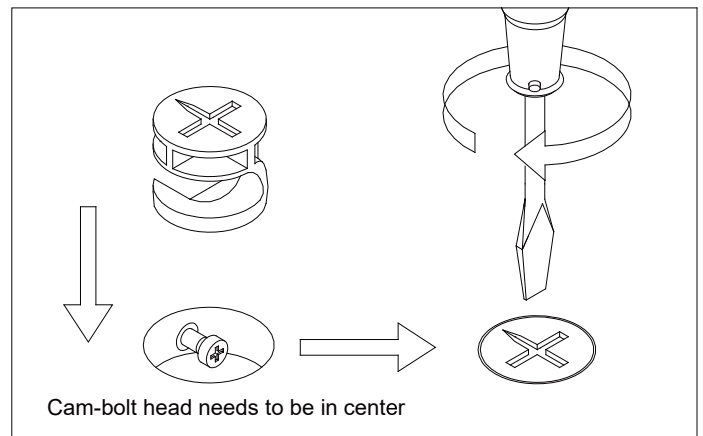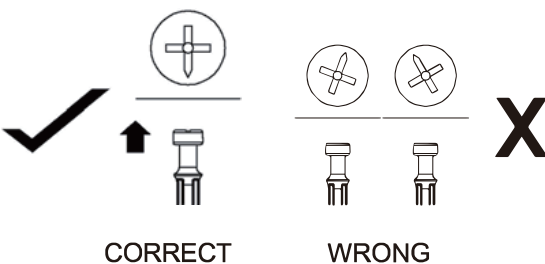

Use a Flat-head Screwdriver to turn Cam Lock clockwise to lock onto the head of the Cam Bolt. Turn until it is snug (about a half turn) – over-tightening could damage Cam Lock and/or Cam Bolt.


Step 1

| Hardware Needed |                                                                                     |    |
|-----------------|-------------------------------------------------------------------------------------|----|
| E               |  | x9 |
| CL              |  | x3 |

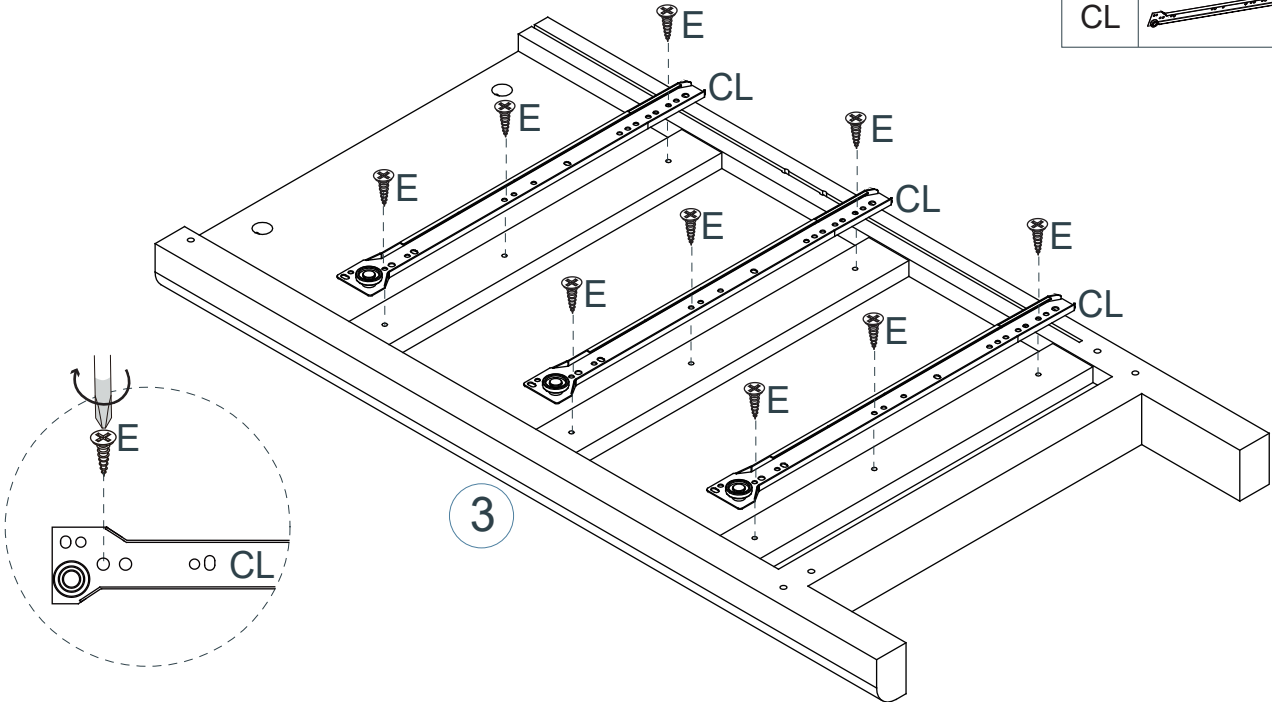


Step 2


| Hardware Needed |                                                                                       |    |
|-----------------|---------------------------------------------------------------------------------------|----|
| C               |  | X7 |

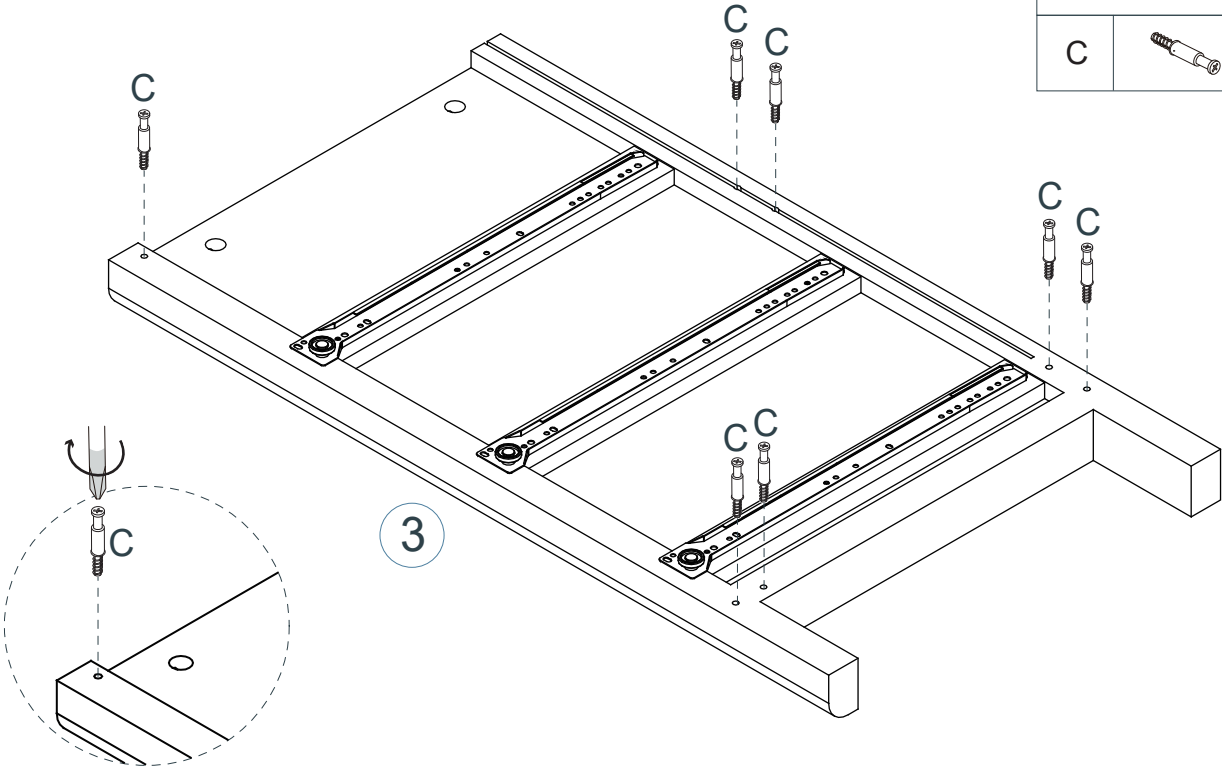


Step 3

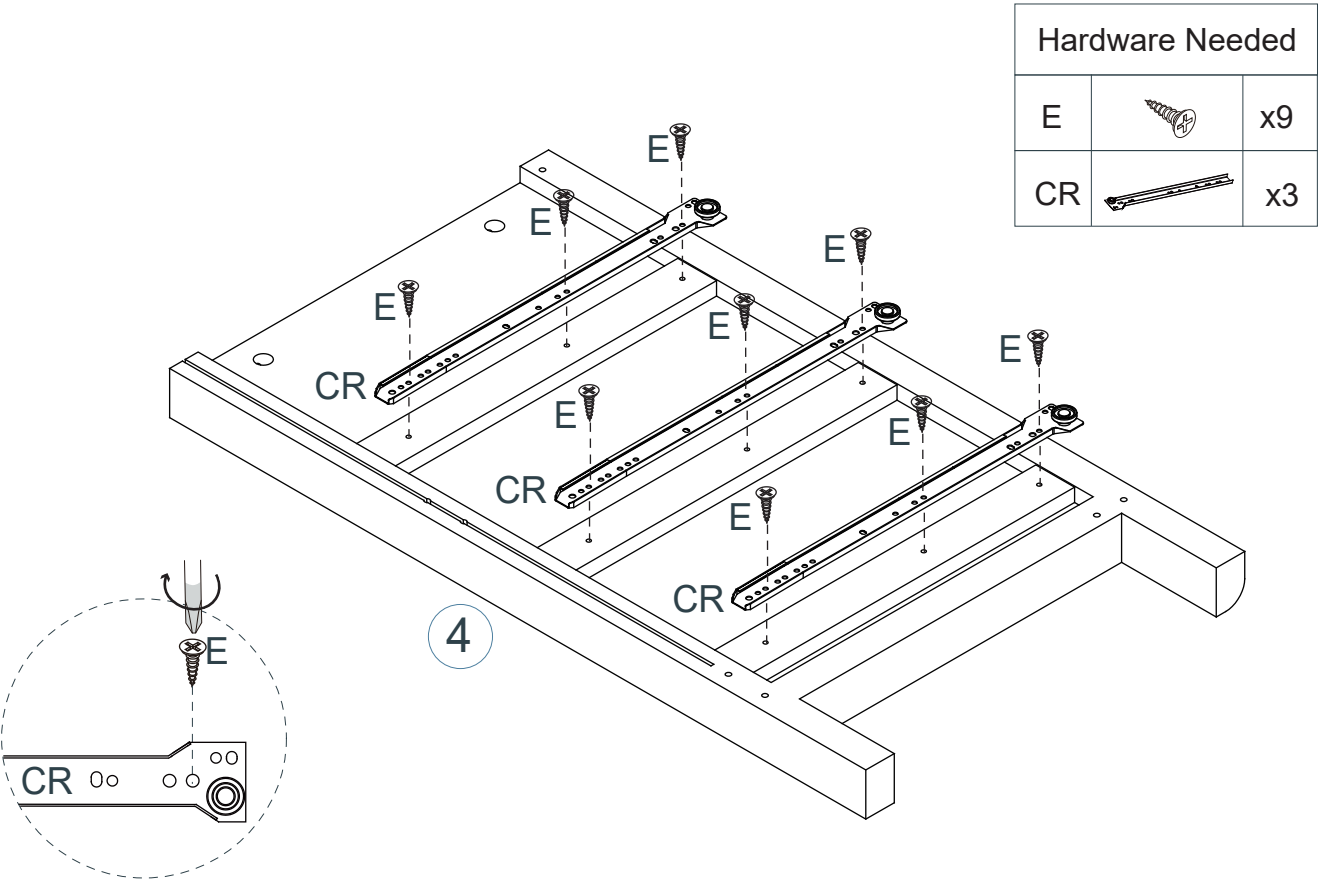


Step 4

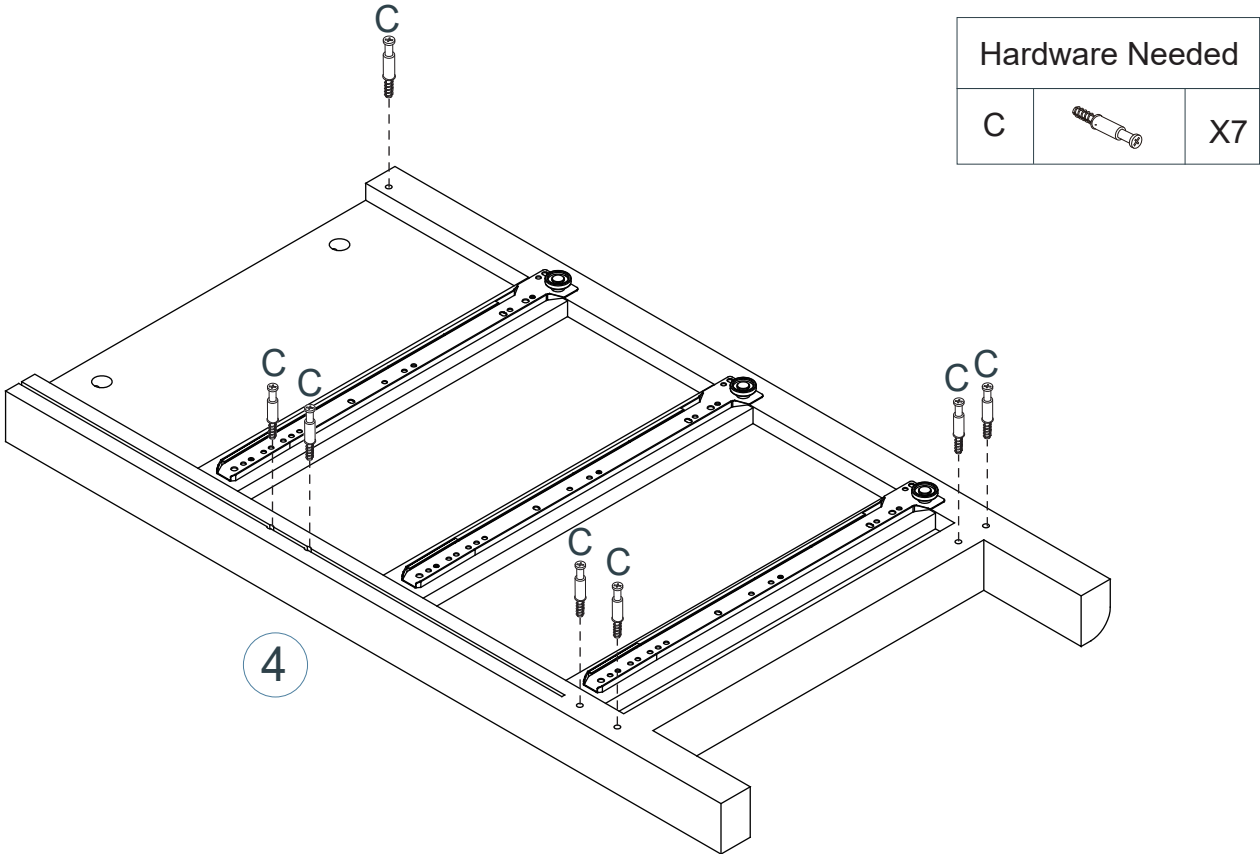


### Step 5

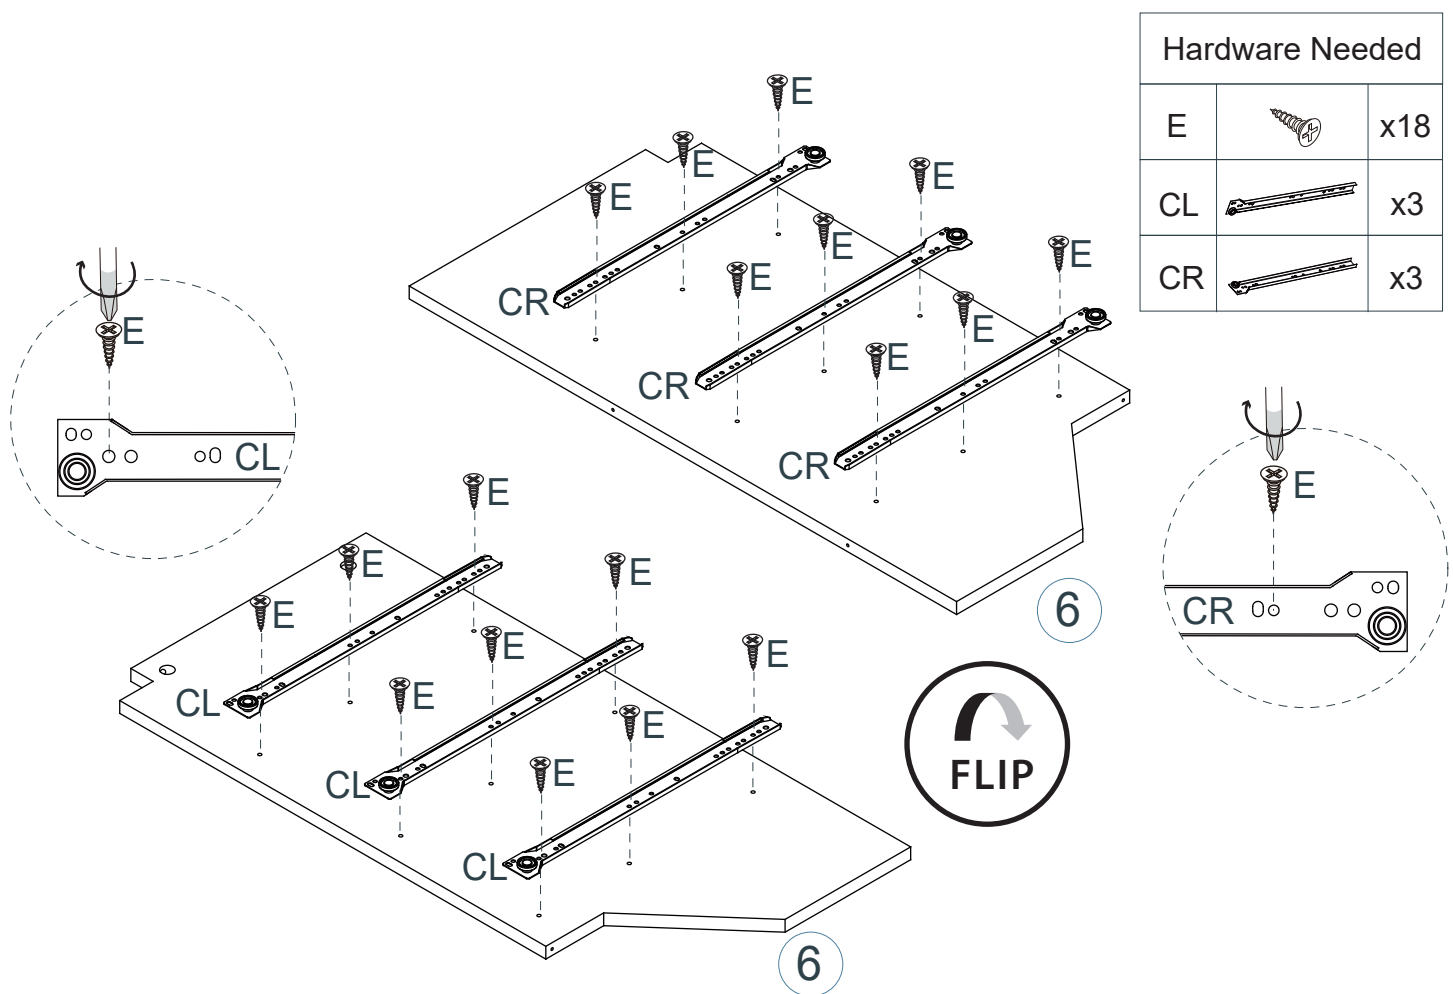


### Step 6

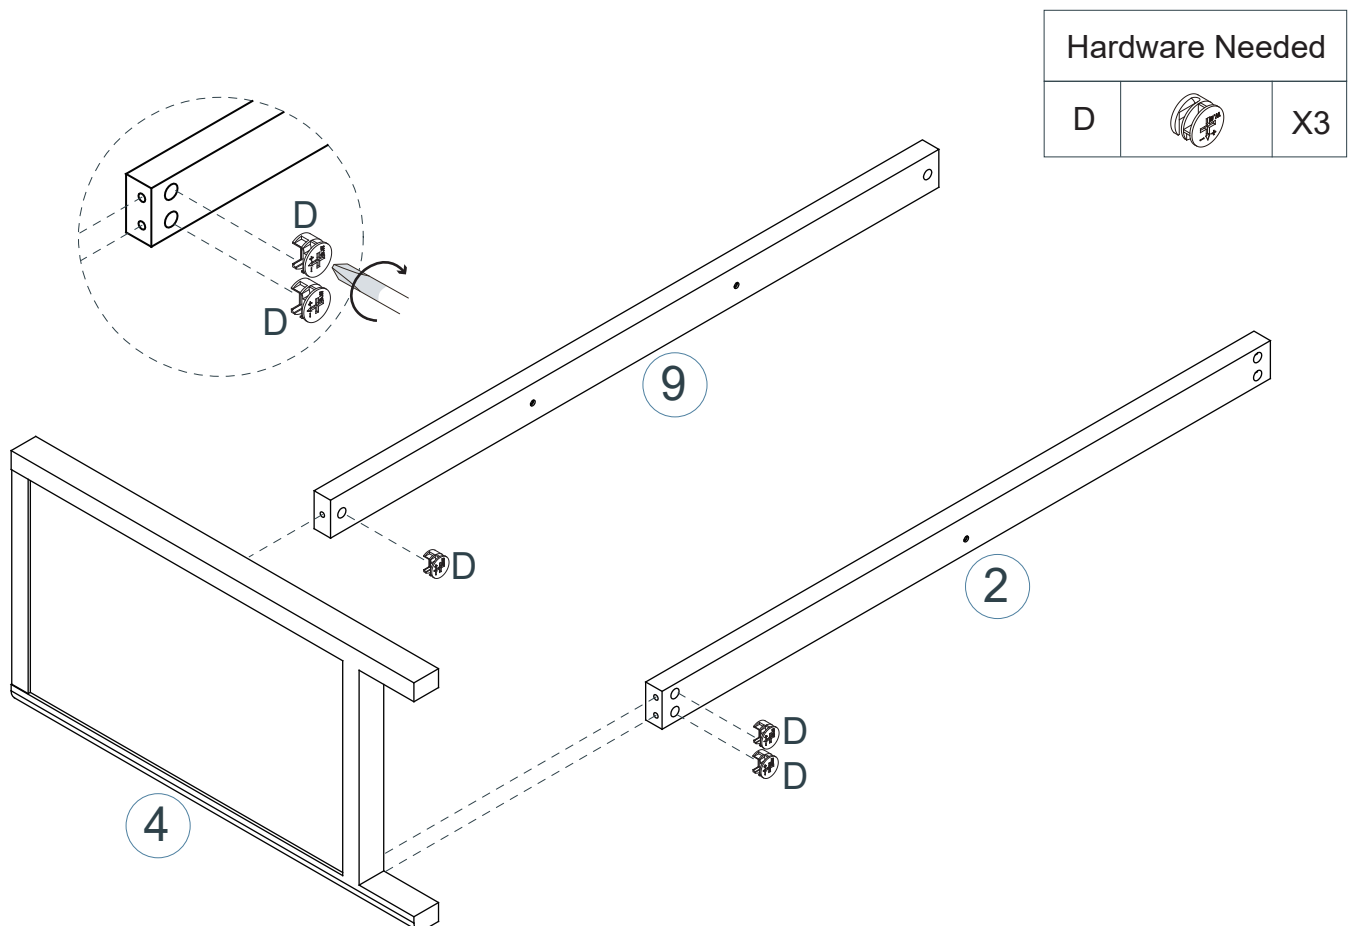

Step 7

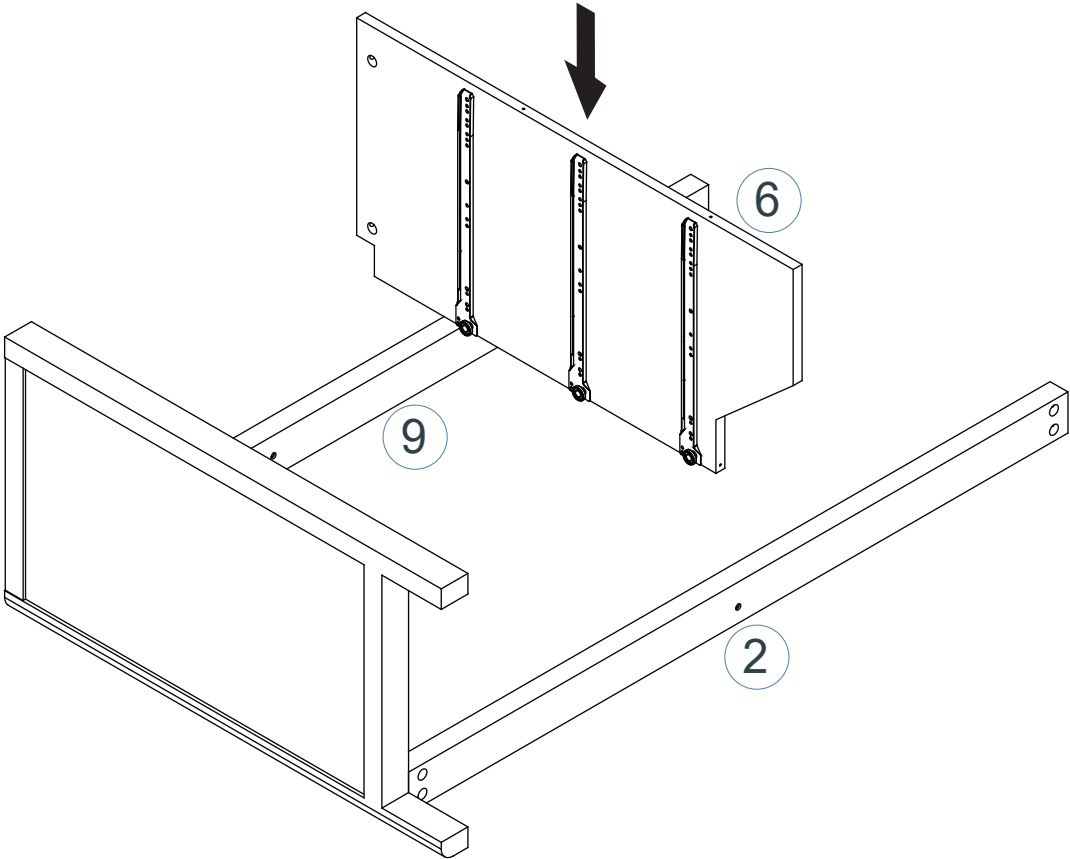


Step 8

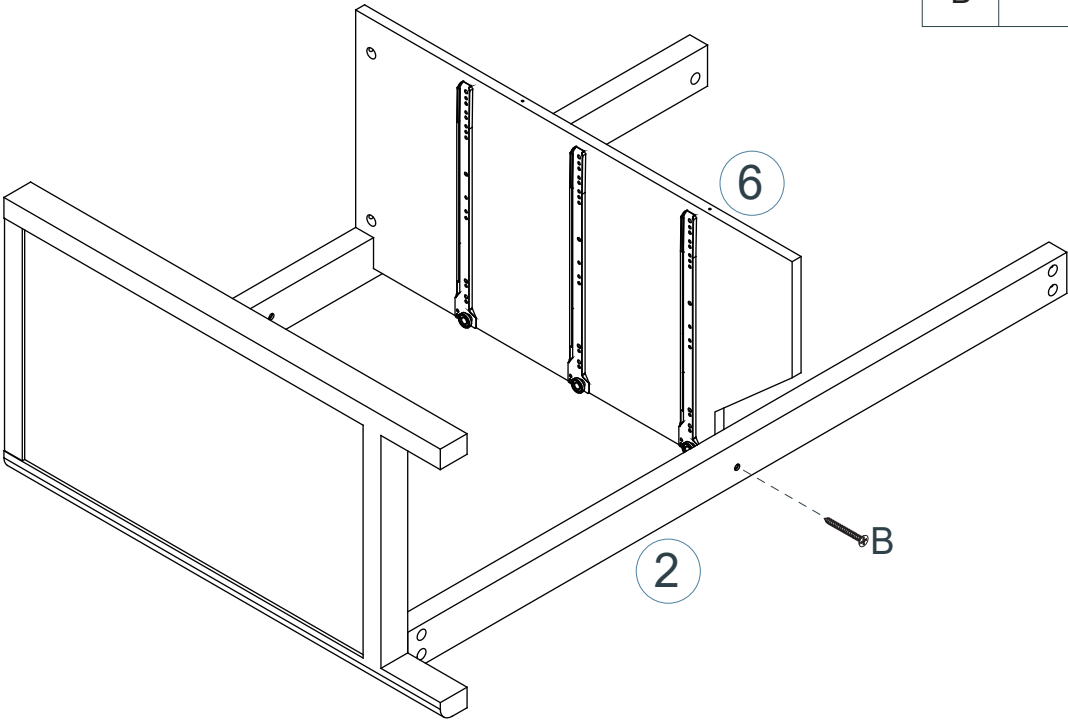


| Hardware Needed |                                                                                       |    |
|-----------------|---------------------------------------------------------------------------------------|----|
| B               |  | X1 |

Step 9

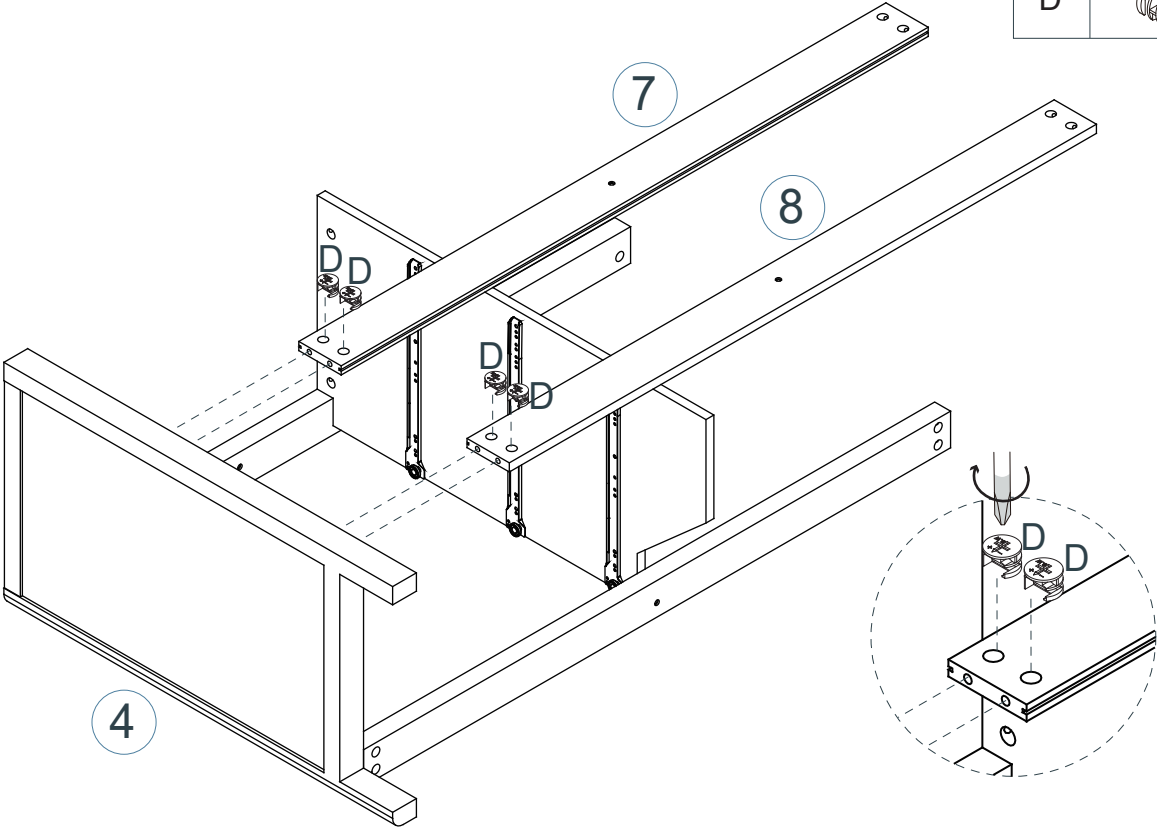


| Hardware Needed |                                                                                     |    |
|-----------------|-------------------------------------------------------------------------------------|----|
| D               |  | X4 |

Step 10

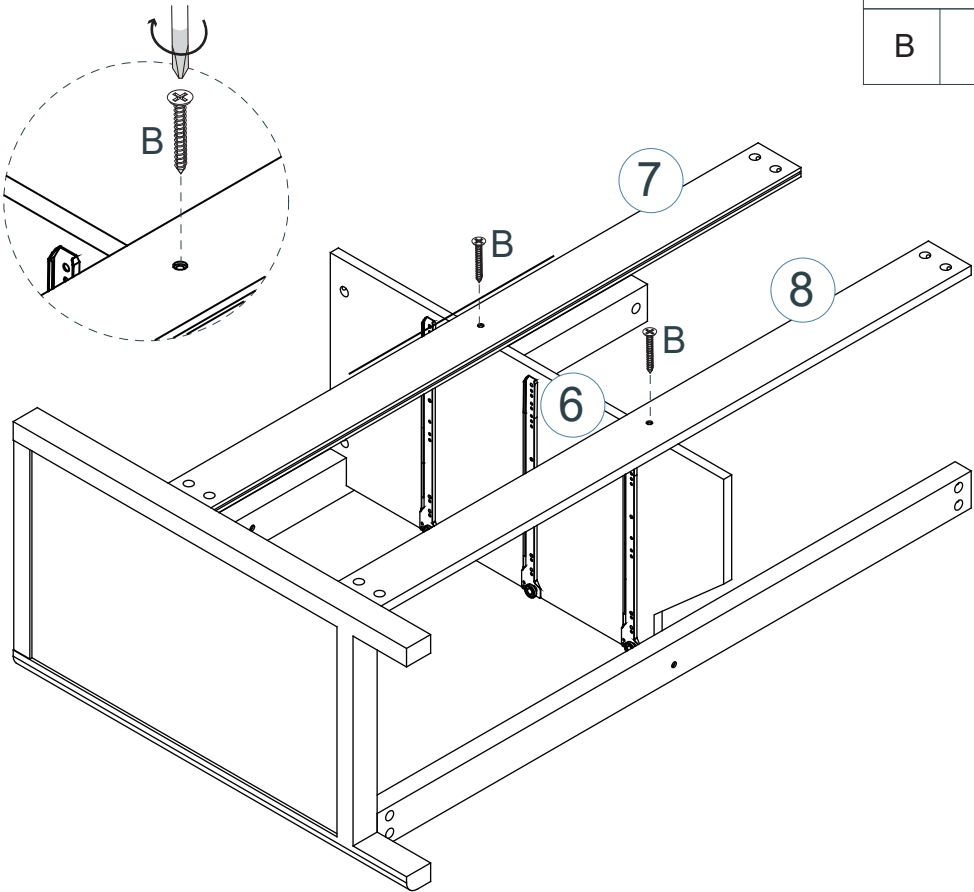


| Hardware Needed |                                                                                       |    |
|-----------------|---------------------------------------------------------------------------------------|----|
| B               |  | X2 |


Step 11

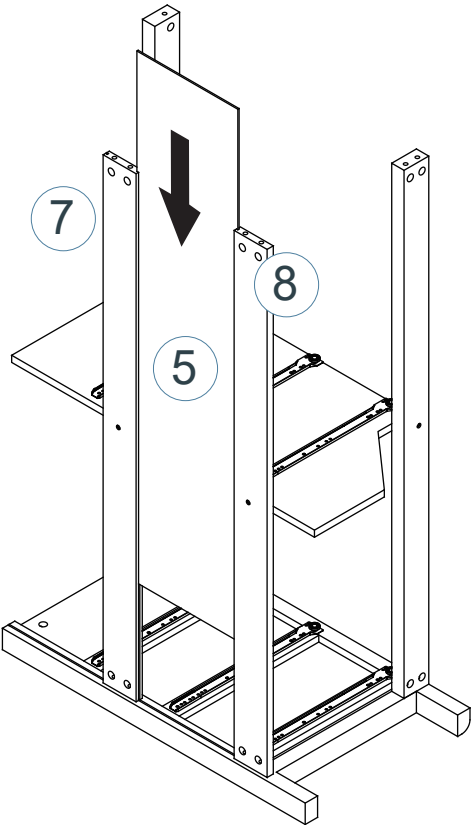


Step 12

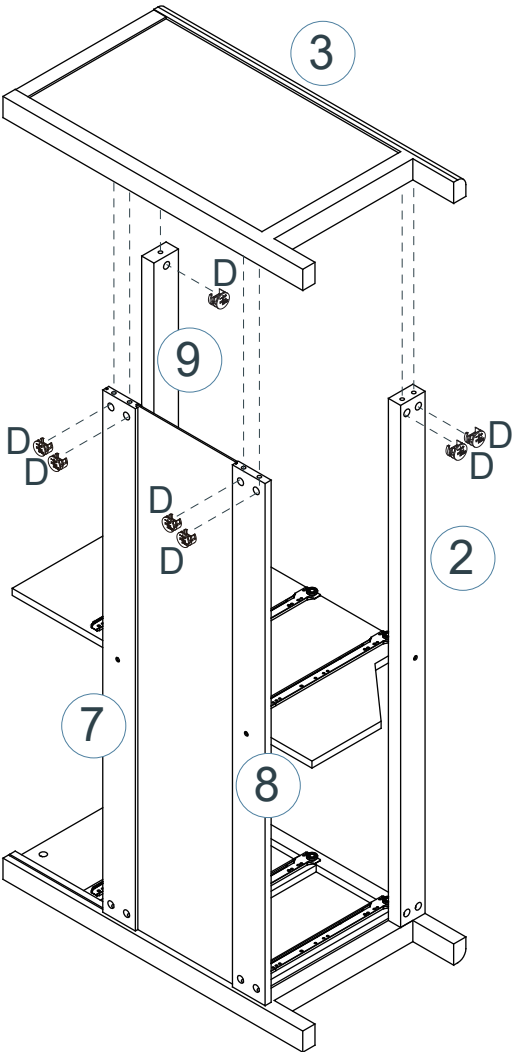

| Hardware Needed |                                                                                       |    |
|-----------------|---------------------------------------------------------------------------------------|----|
| D               |  | X7 |

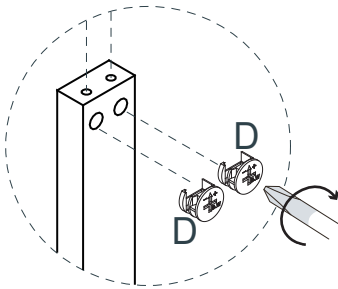


Step 13

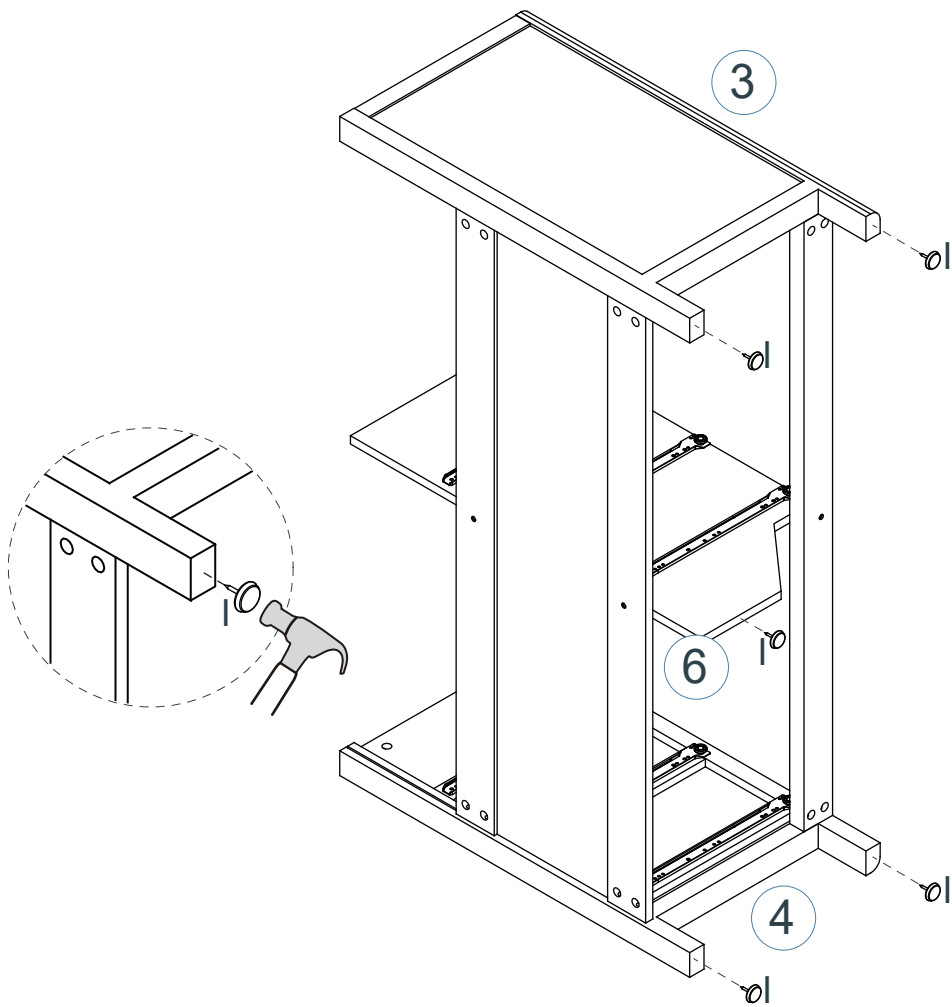


| Hardware Needed |                                                                                     |    |
|-----------------|-------------------------------------------------------------------------------------|----|
| 1               |  | X5 |


Step 14

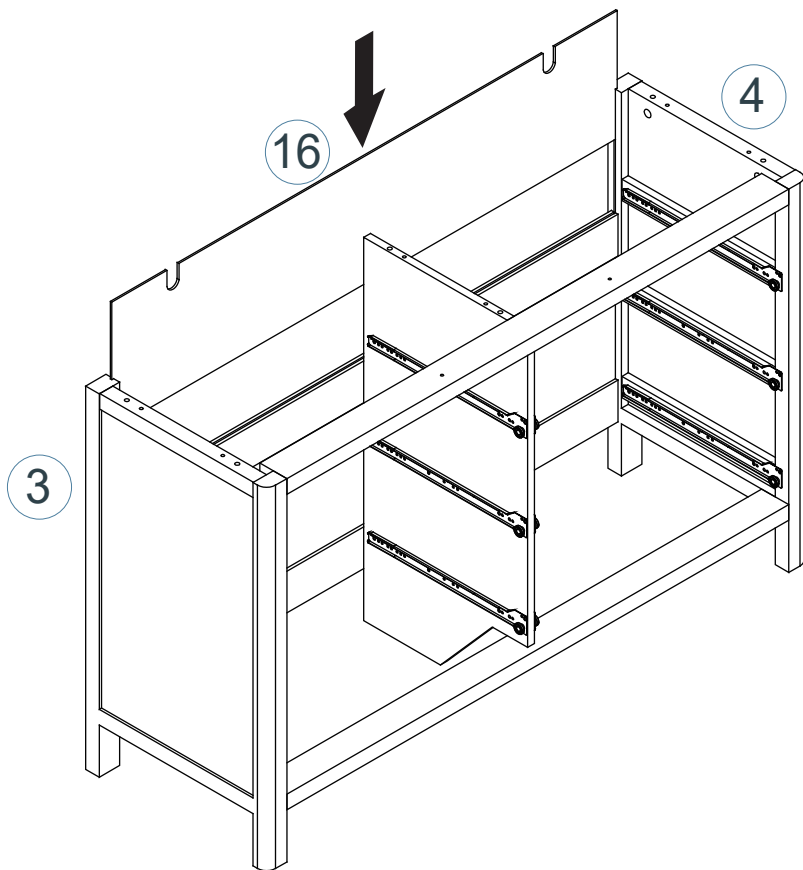


Step 15

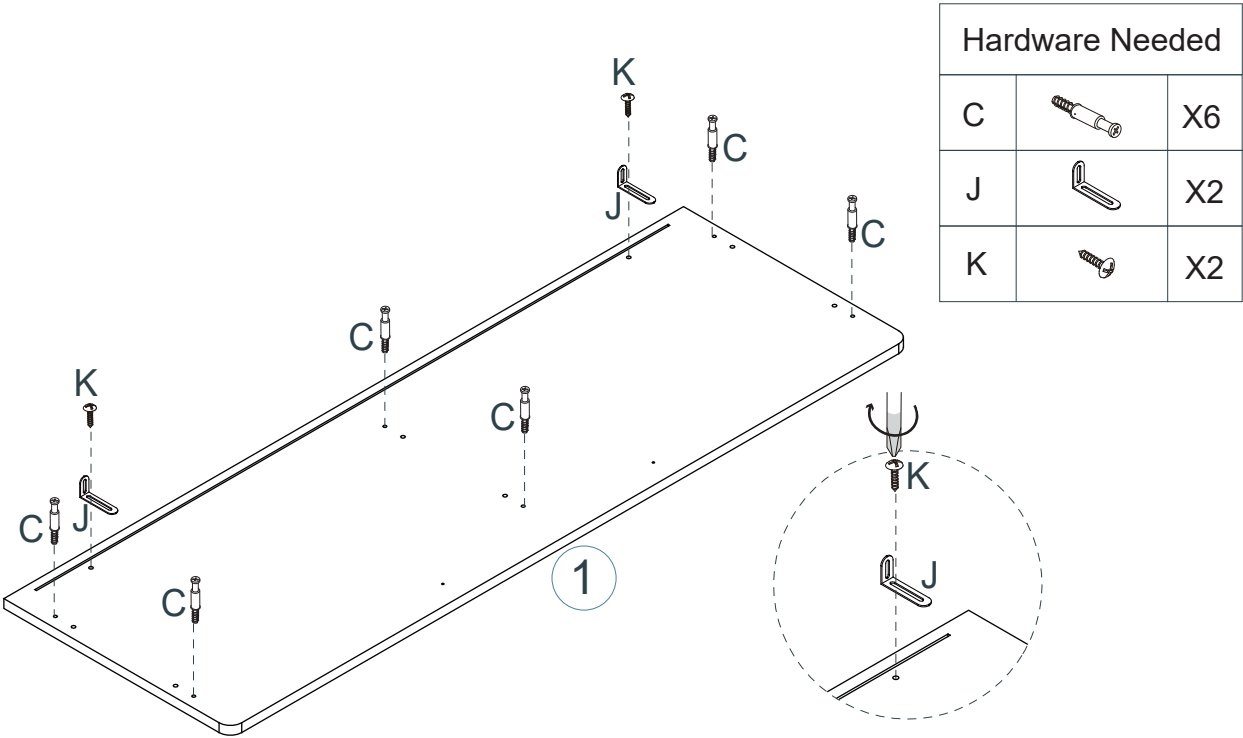


Step 16

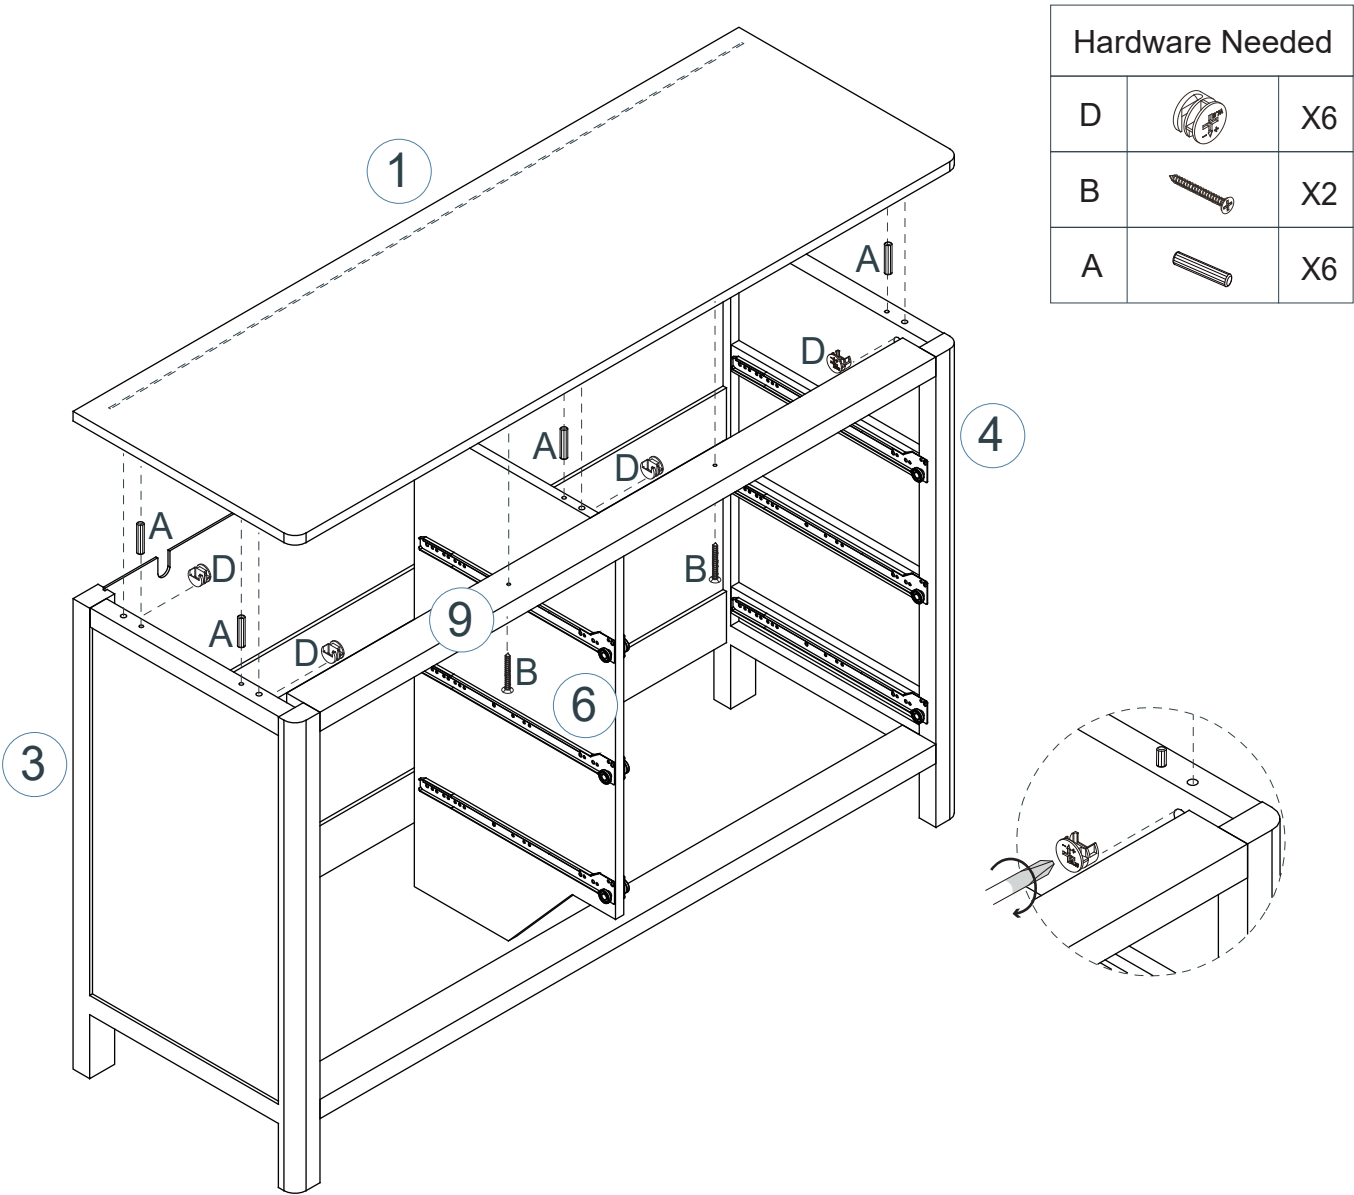


Step 17

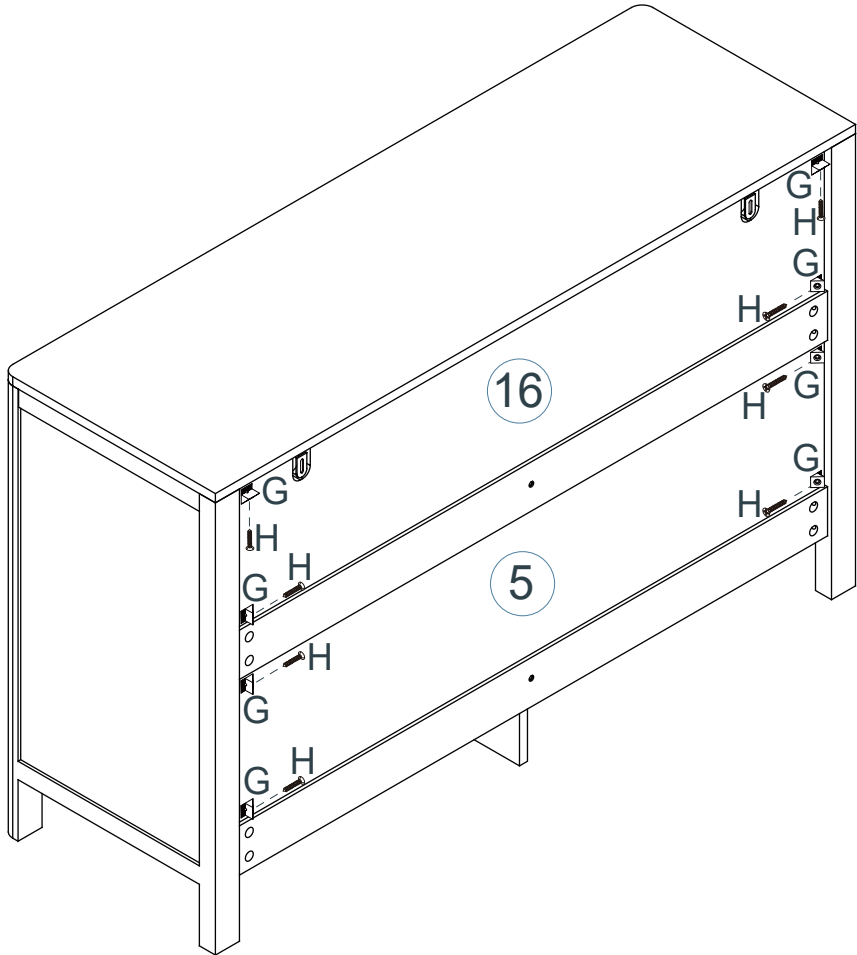



| Hardware Needed |                                                                                     |    |
|-----------------|-------------------------------------------------------------------------------------|----|
| G               |  | X8 |
| H               |  | X8 |

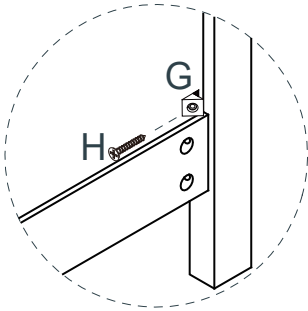


Step 18

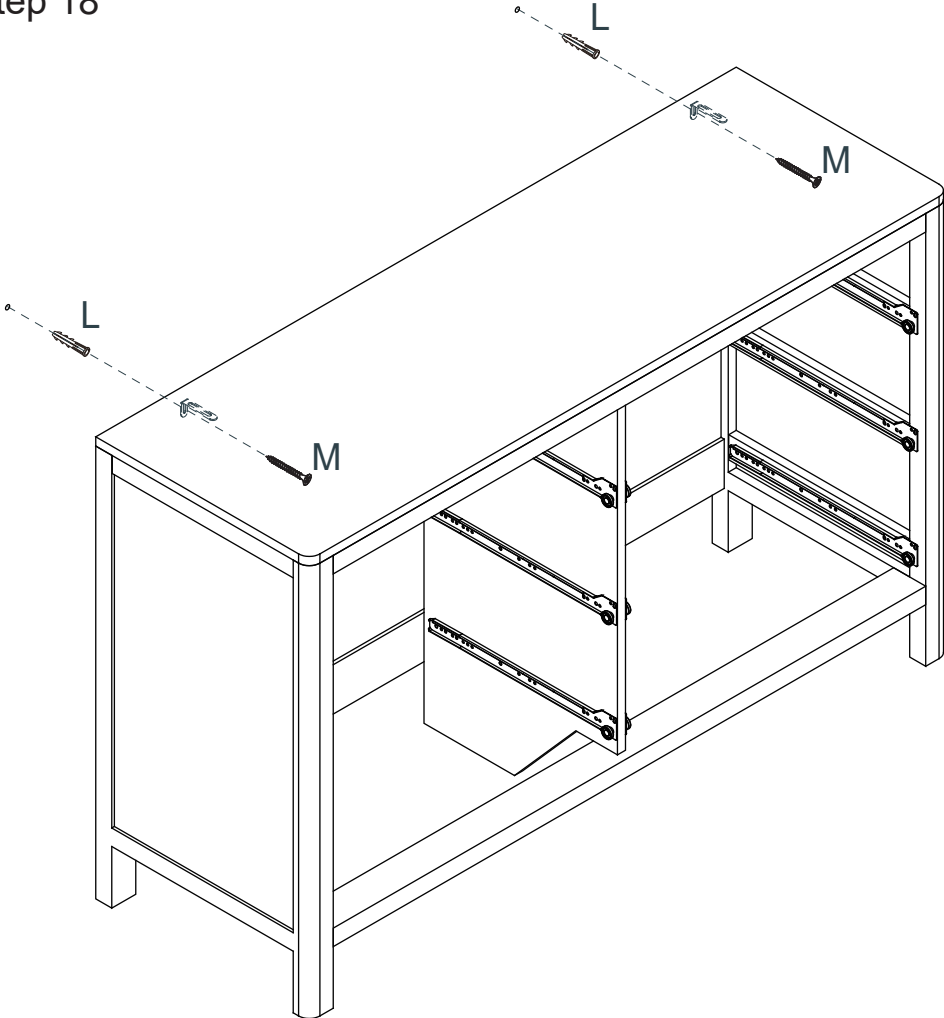

| Hardware Needed |                                                                                       |    |
|-----------------|---------------------------------------------------------------------------------------|----|
| M               |  | X2 |
| L               |  | X2 |

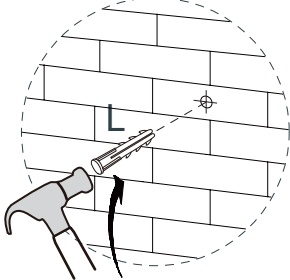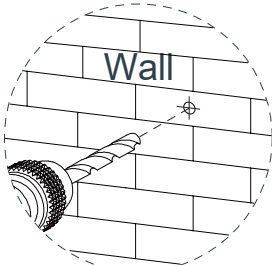


Step 19

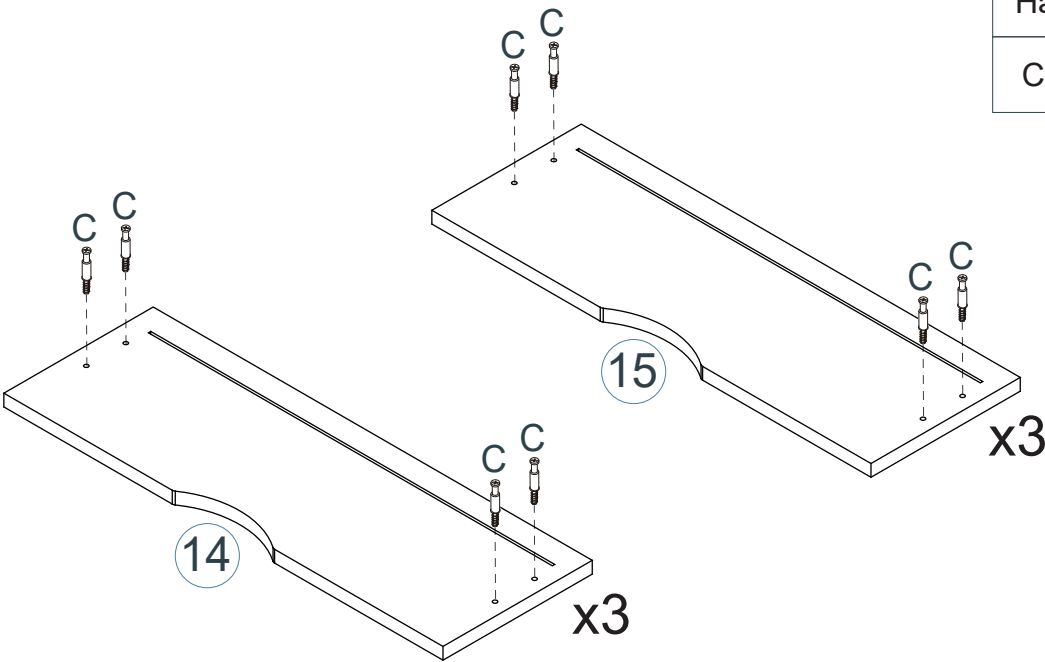


| Hardware Needed |                                                                                     |     |
|-----------------|-------------------------------------------------------------------------------------|-----|
| C               |  | X24 |

Step 20

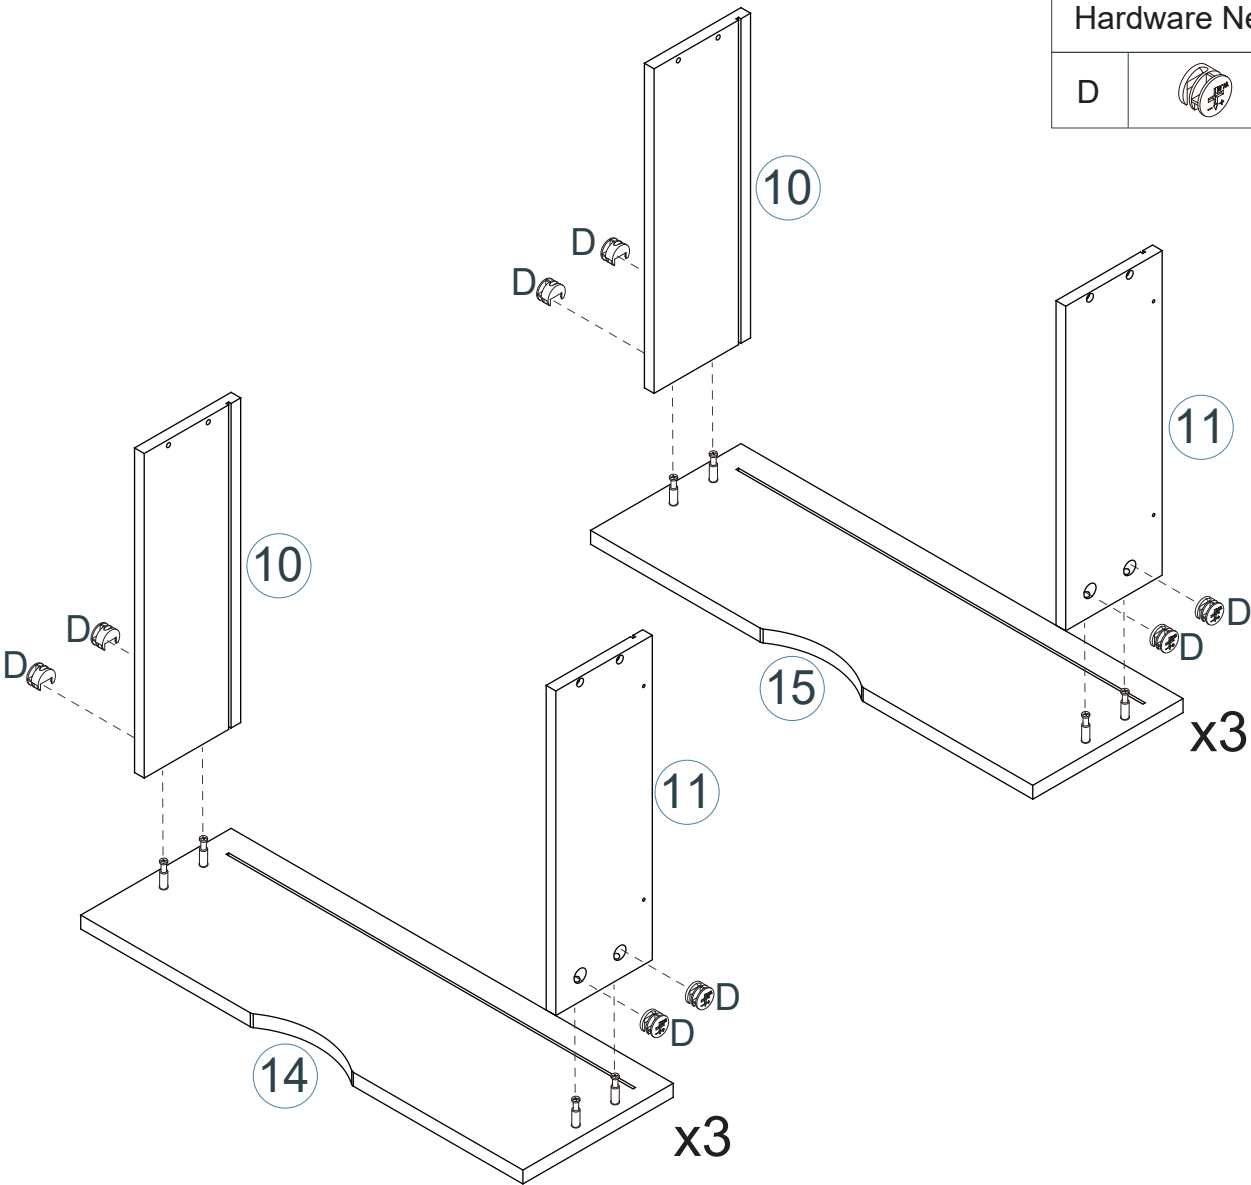


| Hardware Needed |                                                                                       |     |
|-----------------|---------------------------------------------------------------------------------------|-----|
| D               |  | X24 |


Step 21

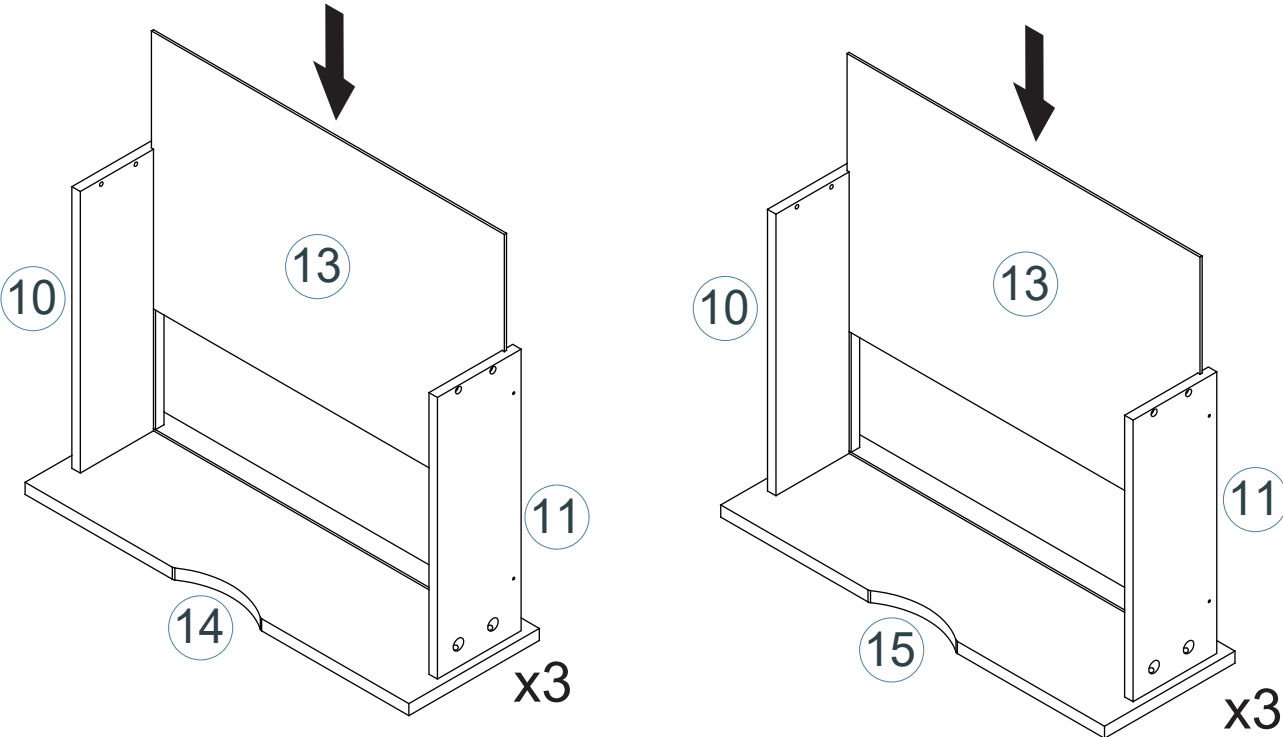


Step 22

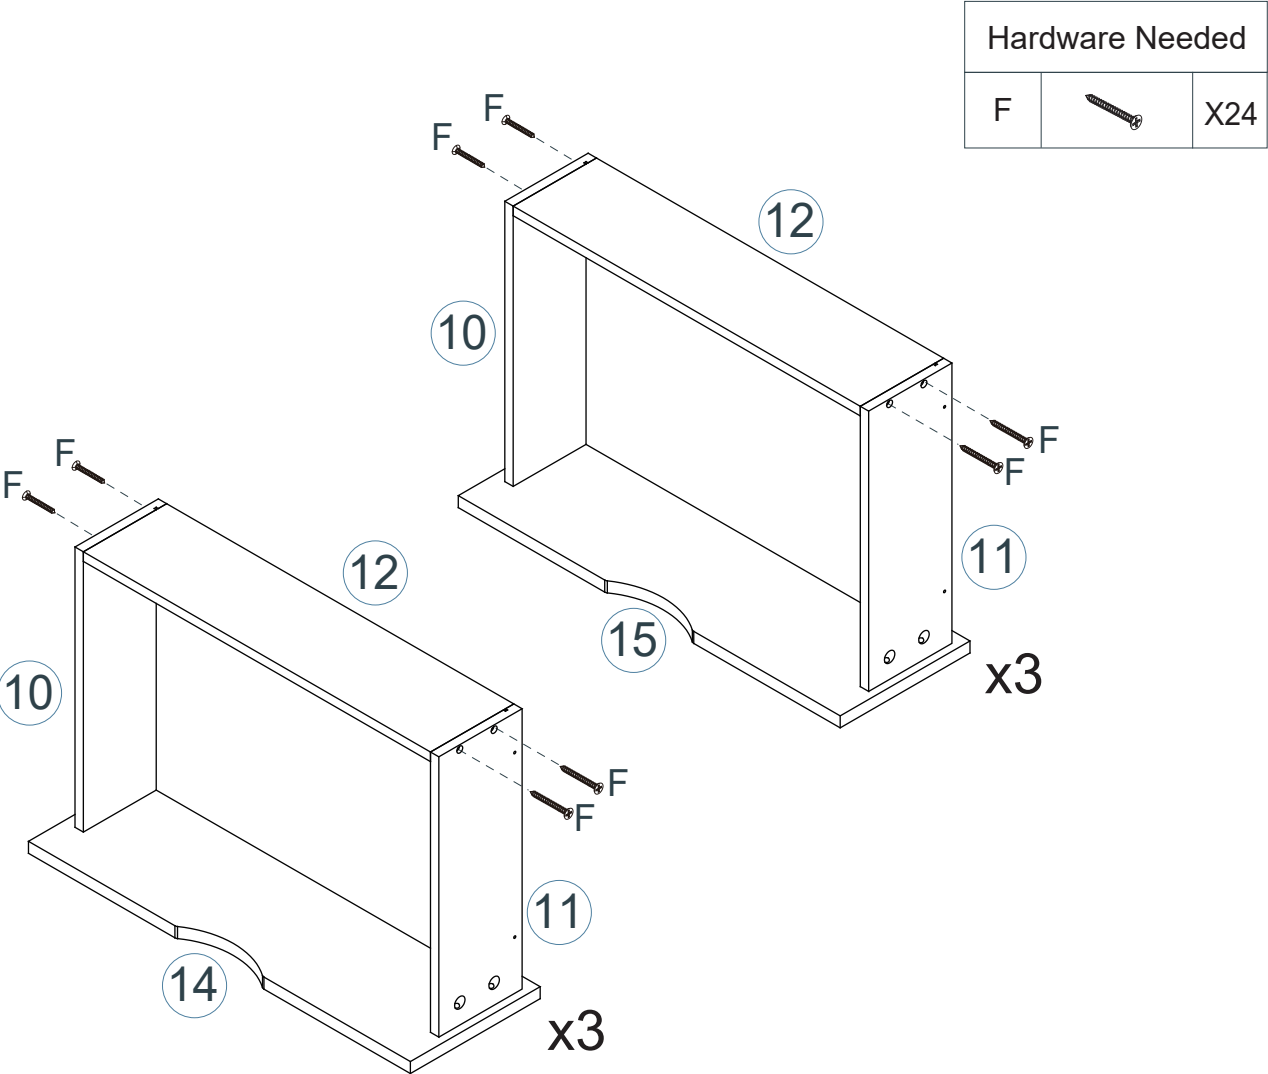

Step 23

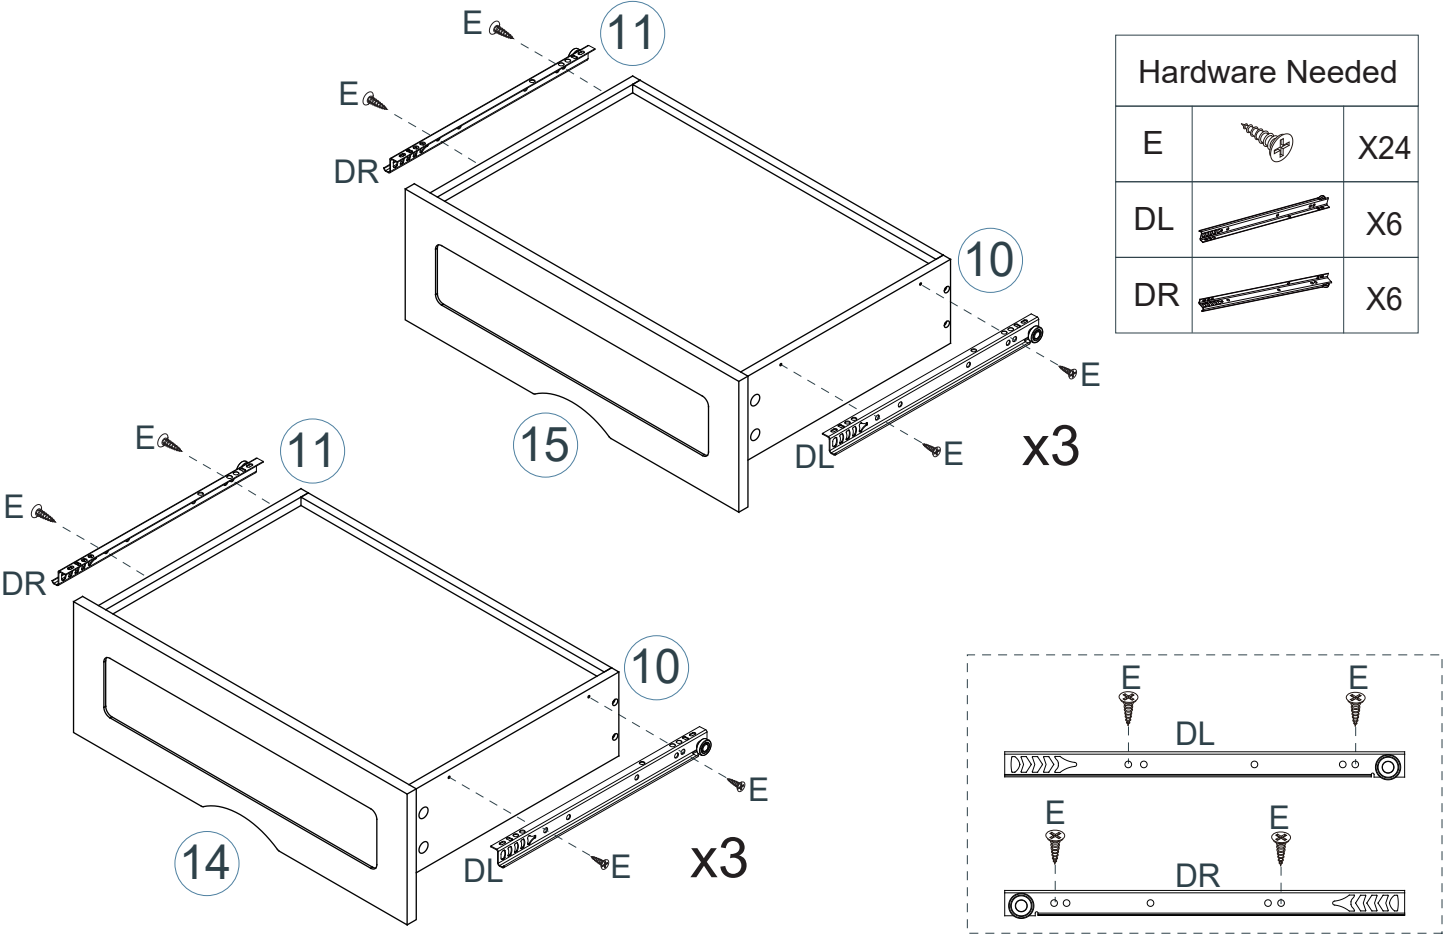

Step 24

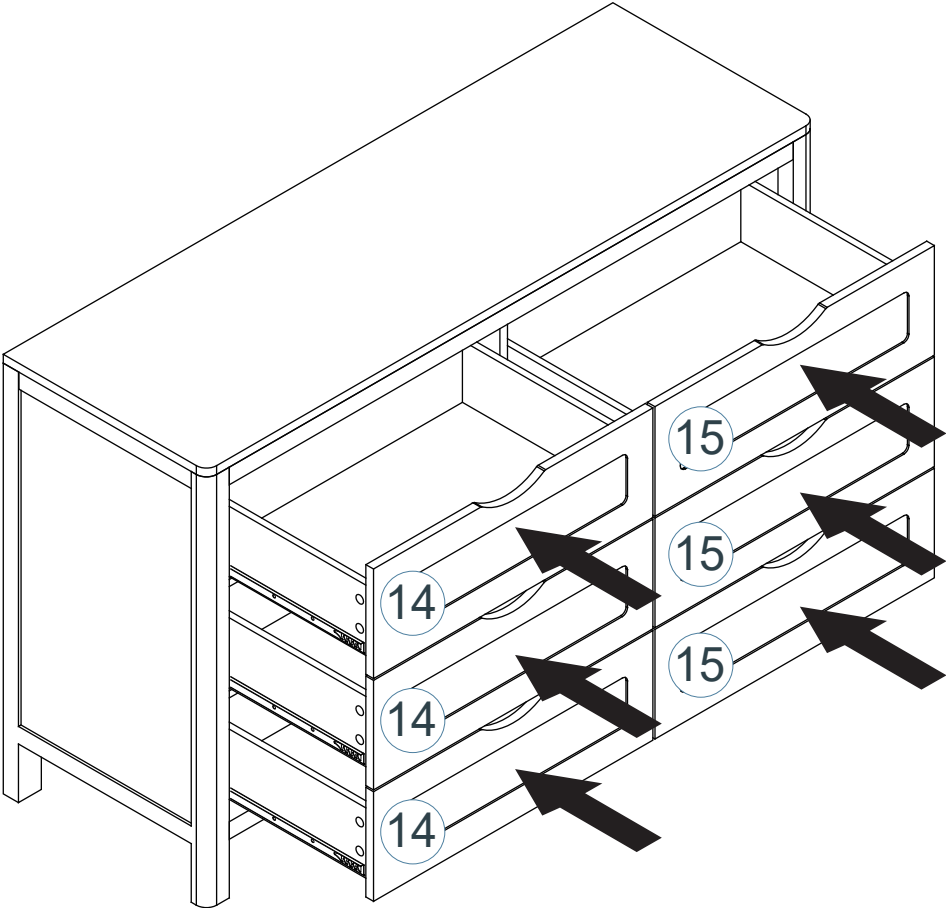

Step 25

