


ASSEMBLY INSTRUCTION

ITEM # 8170 / 8171 / 8172


(REVERSIBLE SECTIONAL SOFA WITH MANUAL RECLINERS)

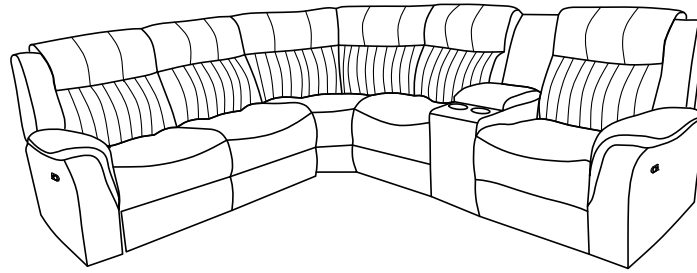


- Read this instructions carefully.
- See part list for guidance. Be sure all parts are complete before you assemble.
- Place all wooden furniture parts on a clean and flat soft surface to prevent from being scratched.
- Follow the figure to start assembling. All instructions must be followed in order to be assembled correctly.
- Minimum of 2 people are required for assembly.

PART LIST


A. LEFT RECLINER

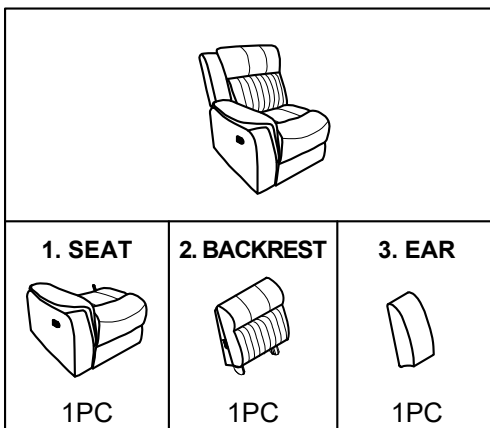


B. ARMLESS CHAIR

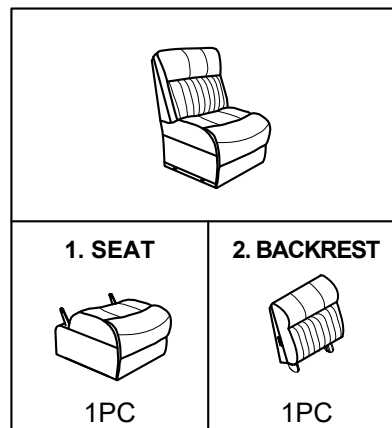


C. CORNER

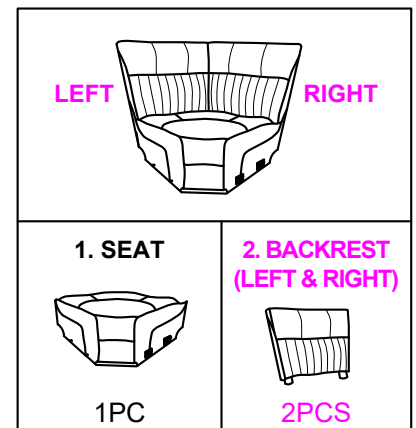


D. ARMLESS RECLINER

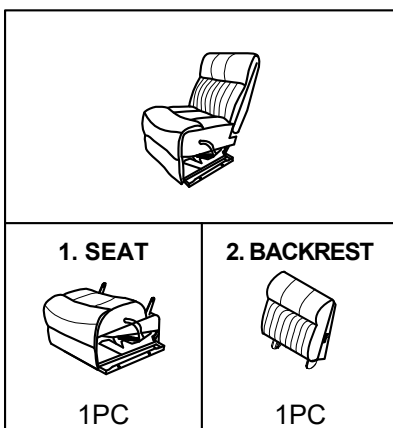

E. CONSOLE

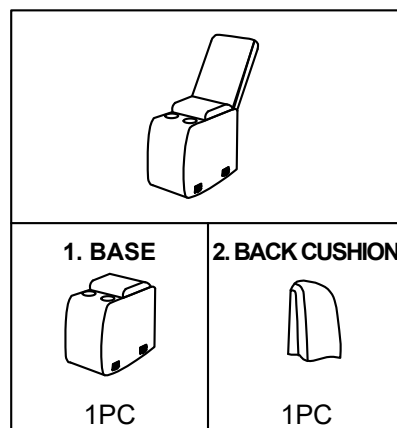

F. RIGHT RECLINER

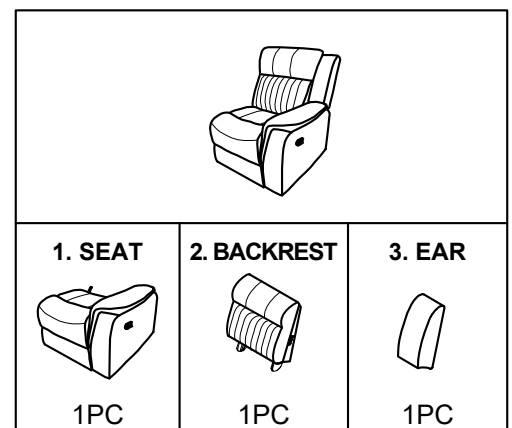

ATTENTION:

1. THE LIST AND QUANTITY SHOWN ARE FOR 1 UNIT ASSEMBLY.
2. EACH BOX CONTAINS CONNECTING COMPONENTS PIECES TOGETHER.
3. DO NOT MIX COMPONENTS FROM OTHER BOX!
4. ASSEMBLE EACH PART IN EACH BOX SEPARATELY.
5. DO NOT CONNECT THE WHOLE SECTIONAL UNTIL EACH PART IS INDIVIDUALLY ASSEMBLED.

ITEM # 8170 / 8171 / 8172

STEP 1

PART A: Start with Left Recliner (A).


1.1 Attach the Backrest (A2) to the Seat (A1) by aligning the metal brackets and press them down from the top until you hear a click sound on each side meaning it is thoroughly connected.

1.2 Attach the Ear (A3) to the left side of the Backrest (A2) by sliding the metal slot down onto the side of the Backrest (A2).

PART B and D: Repeat Step 1.1

PART C: Repeat Step 1.1 . NOTE: The Corner (C) will have two Backrests (C2).

PART F: Repeat Step 1.1 and Step 1.2 (reverse the side-Left becomes Right)

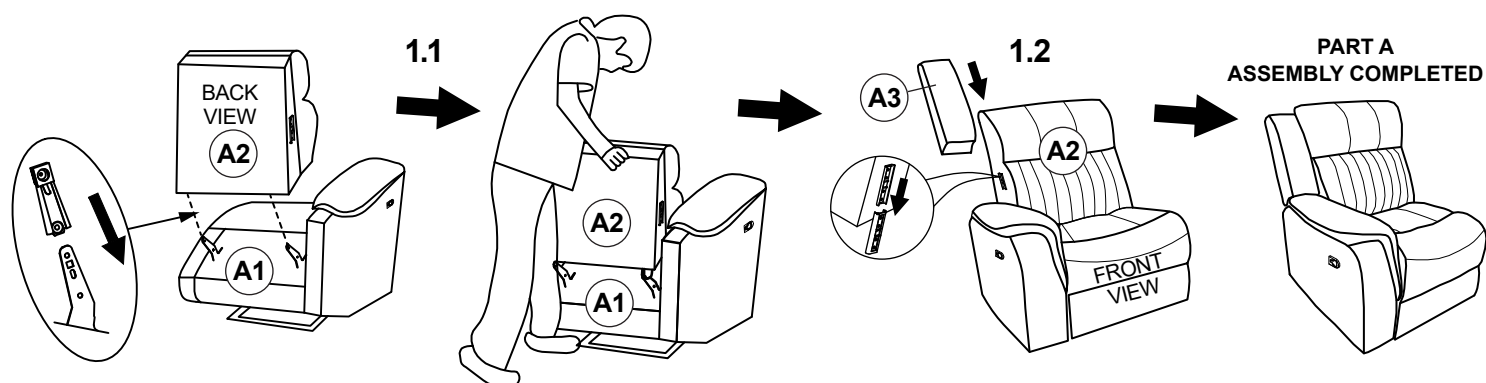


STEP 2

PART E: Console (E)

2.1 Open the Velcro located at the bottom of the Base (E1) and take out the Back Cushion (E2).

2.2 Align the bottom holes of the Back Cushion (E2) to the top end side of the Base (E1) and attach together with the two Bolts from inside of the Base (E1) and turn clockwise until go through the bottom of the Back Cushion (E2).

2.3 Once the Bolts are secured, close back the Velcro.

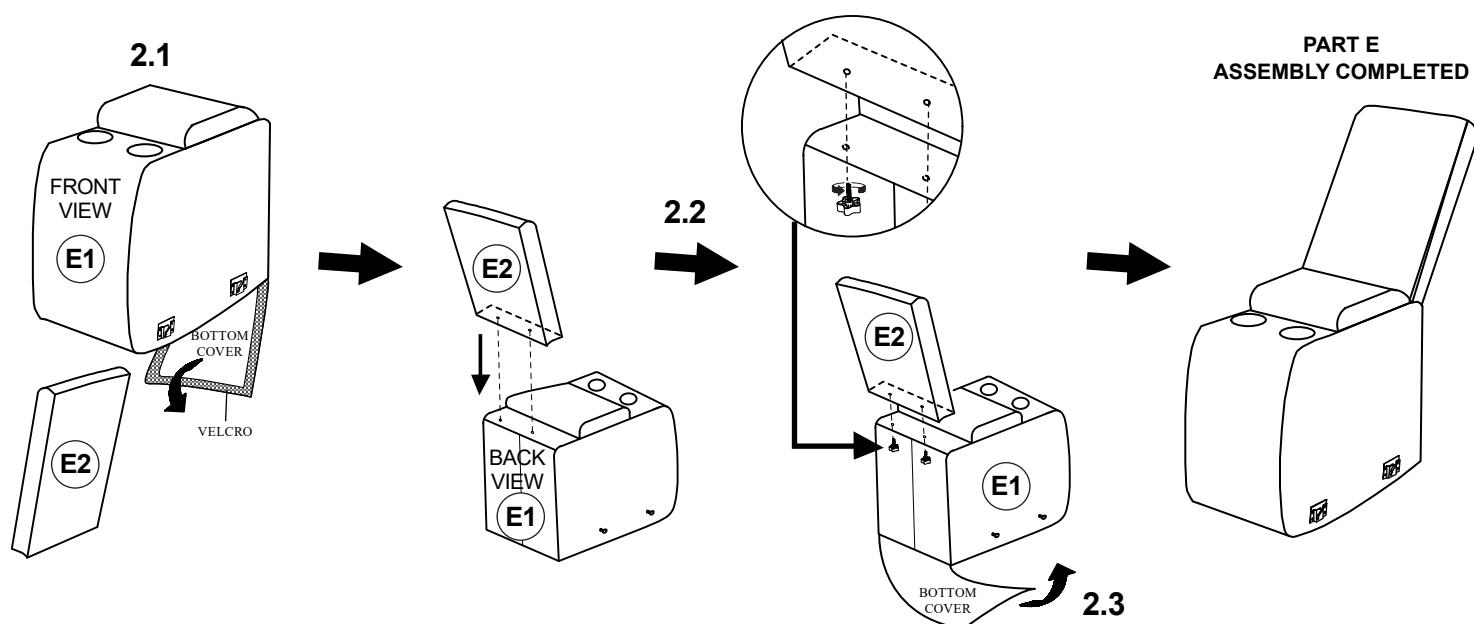


ITEM # 8170 / 8171 / 8172


STEP 3

Once each individual Part (A, B, C, D, E, F) is completely assembled, you are ready to connect the sectional together. It is required to connect each part starting from the Left Recliner (A) all the way to the Right Recliner (F) or vice versa.

NOTE: Make sure the Left Backrest (C) goes into Left side of Seat base and Right Backrest (C) goes into Right side of Seat base. The Armless Recliner (D) can be placed in the Left Side or the Right Side of the Section of your choice.

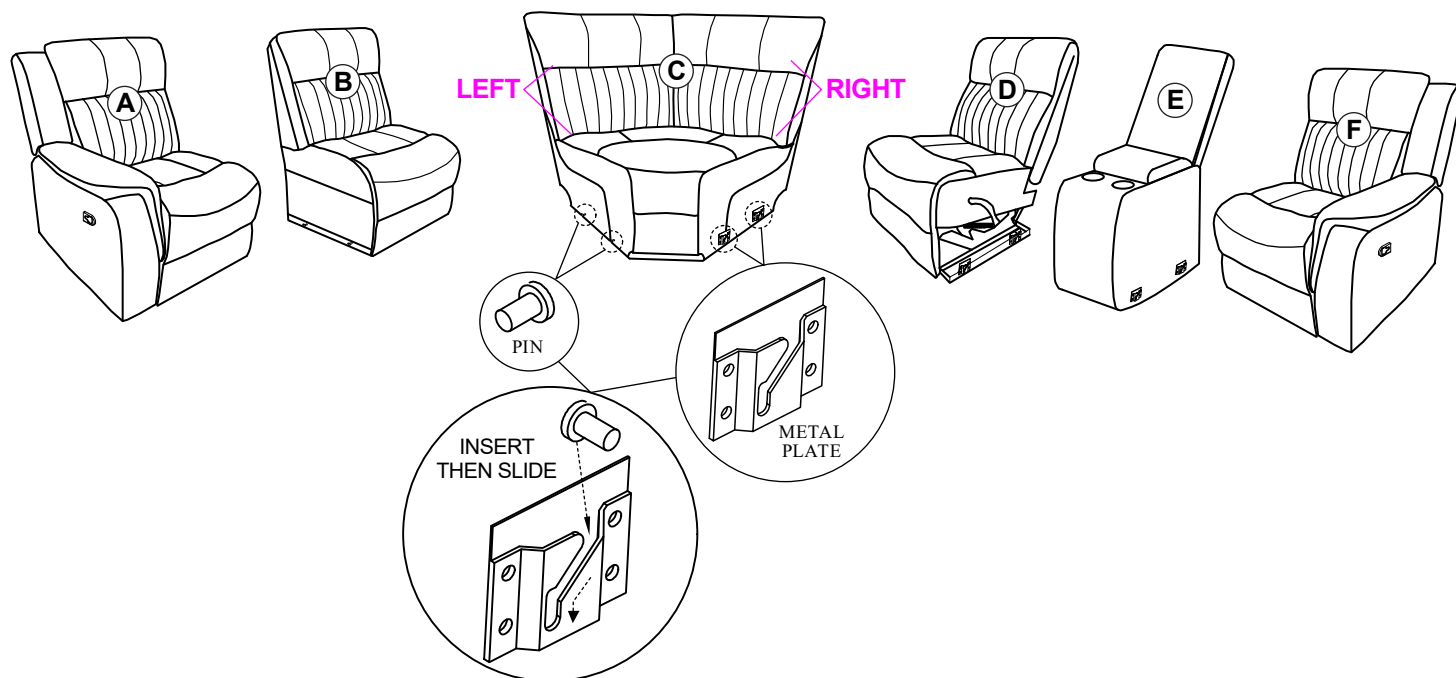


Each Part will have either 2 Pins or 2 Metal Plates or both visibly attached on the bottom side of Seat or Base. Lift the Seat of Armless Chair (B) and insert the Pins to the Metal Plates on Left Recliner (A) then slide the Pins to the bottom of the Metal Plates to lock it. Please see picture above. Repeat the step to the next Parts until all connected.

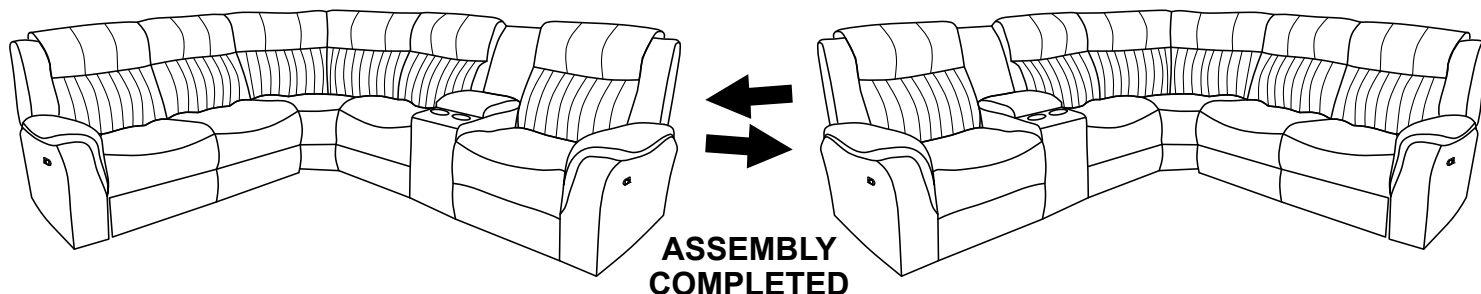

STEP 4

Gently pull the latch on the side of the Left/Right Recliners (A/F) to recline the Backrest and **raise up** the Footrest position. For Armless Recliner (D), gently pull the latch on the side to release the recliner. To put to original position, gently use your legs/heels and push down the Footrest or you can use your hands to push the Footrest back down.

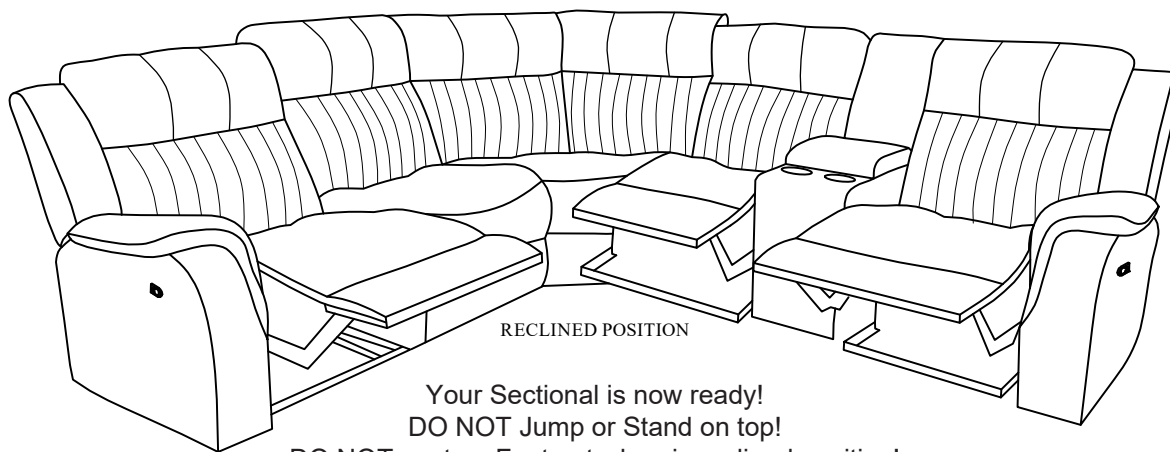

Your Sectional is now ready!
DO NOT Jump or Stand on top!
DO NOT seat on Footrest when in reclined position!
Thank you for your purchase!

