










ASSEMBLY INSTRUCTION

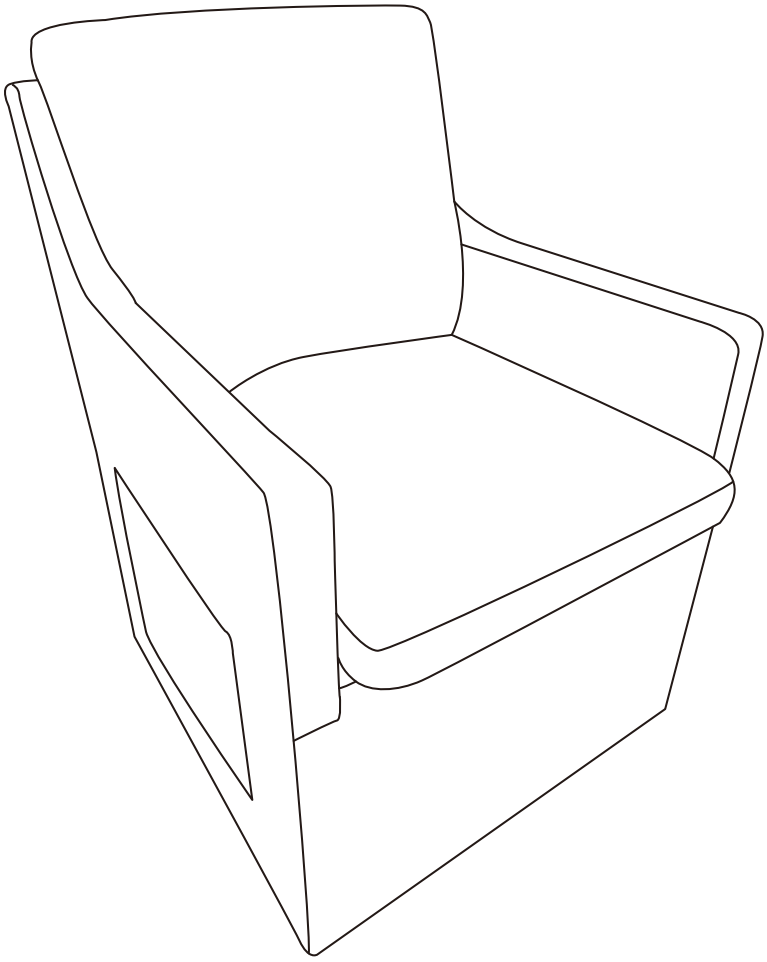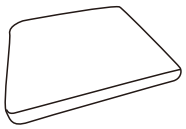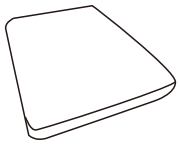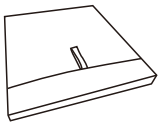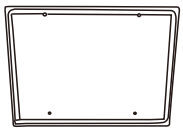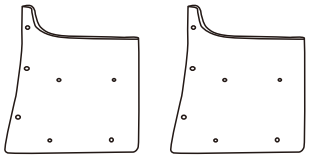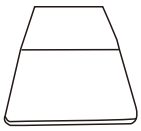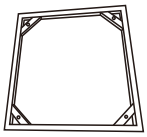

Part List


Ⓐ X1PC  Cushion	Ⓑ X1PC  Seat Cushion	Ⓒ X1PC  Seat Plate	Ⓓ X1PC  Base Plate
Ⓔ X1PC  Front Panel	Ⓕ X2PCS  Side Plate	Ⓖ X1PC  Back Panel	Ⓗ X1PC  Upper Iron Frame
Ⓘ X1PC  Lower Iron Frame	Ⓙ X2PCS  Ordinary Wheel	Ⓚ X2PCS  Pressure Wheel	Ⓛ X1PC  Condom


Hardware List

Ⓜ X6+1PCS  M6*80	Ⓝ X4PCS  M6*30	Ⓞ X8+1PCS  M6*70	Ⓟ X14+1PCS  φ8*22*1.5
Ⓠ X1PC  M6			

STEP1:


Only tighten the screw to about 80%.

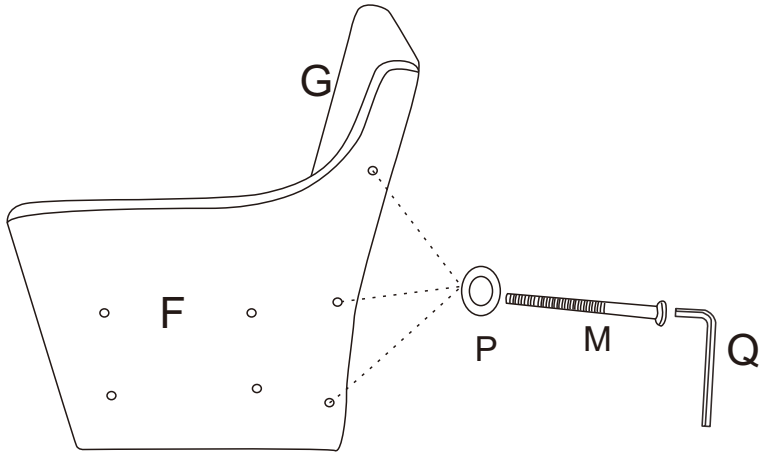


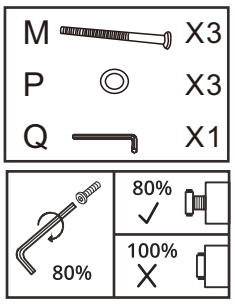

STEP2:


Only tighten the screw to about 80%.

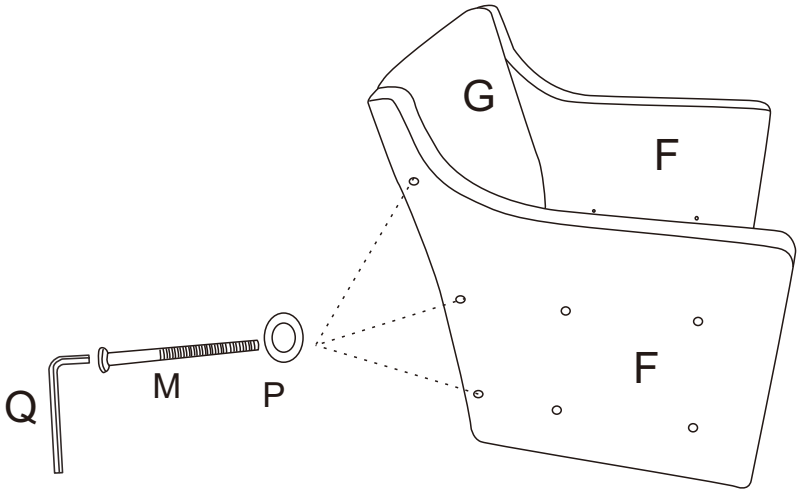


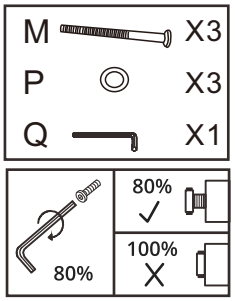

STEP3:


Only tighten the screw to about 80%

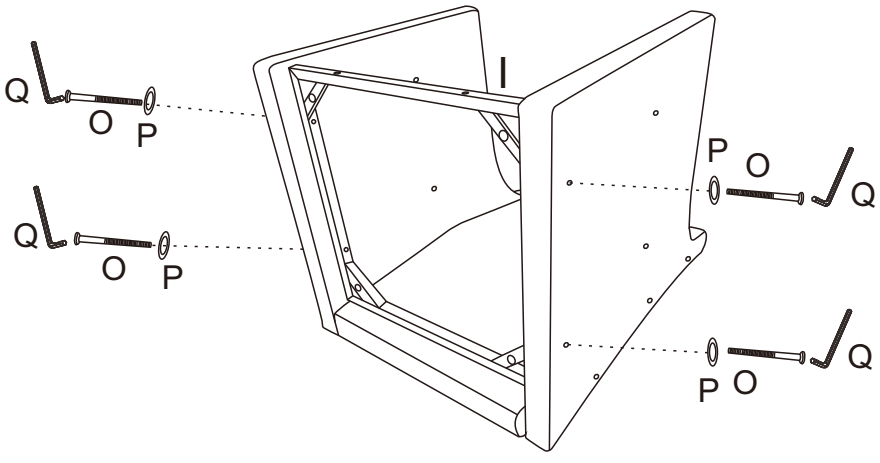


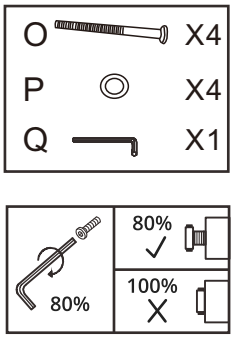


STEP4:

Install the E-board (front board of the chair)
Only tighten the screw to about 80%

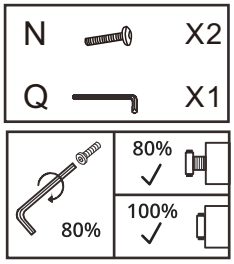

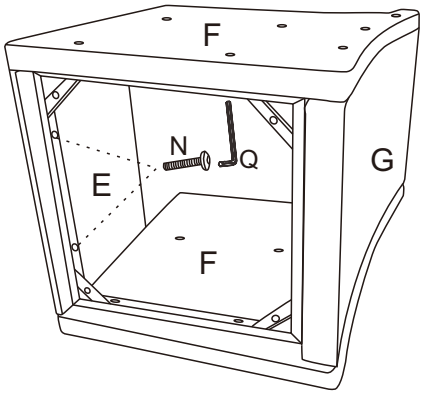



STEP5:

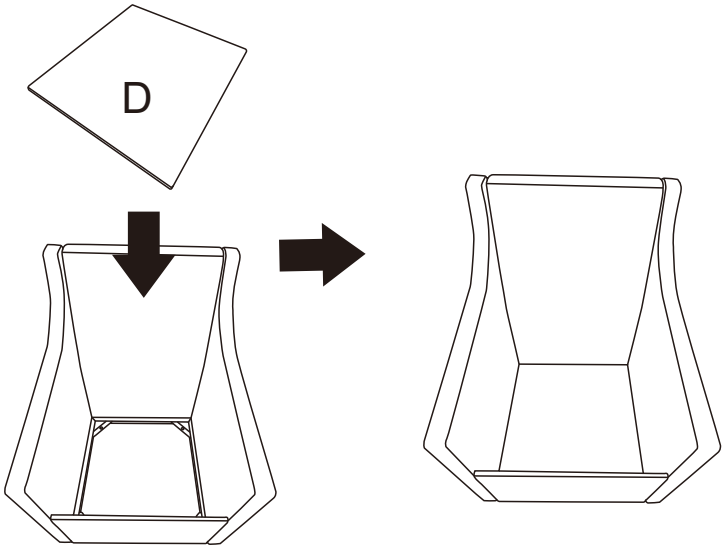

STEP6:


First the screw to about 80%
All tighten the screw to about 100%

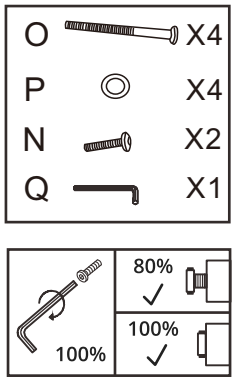

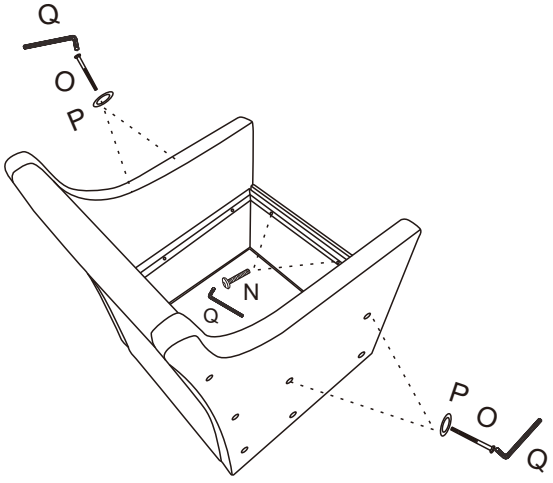


STEP7:


Put on the chair cover

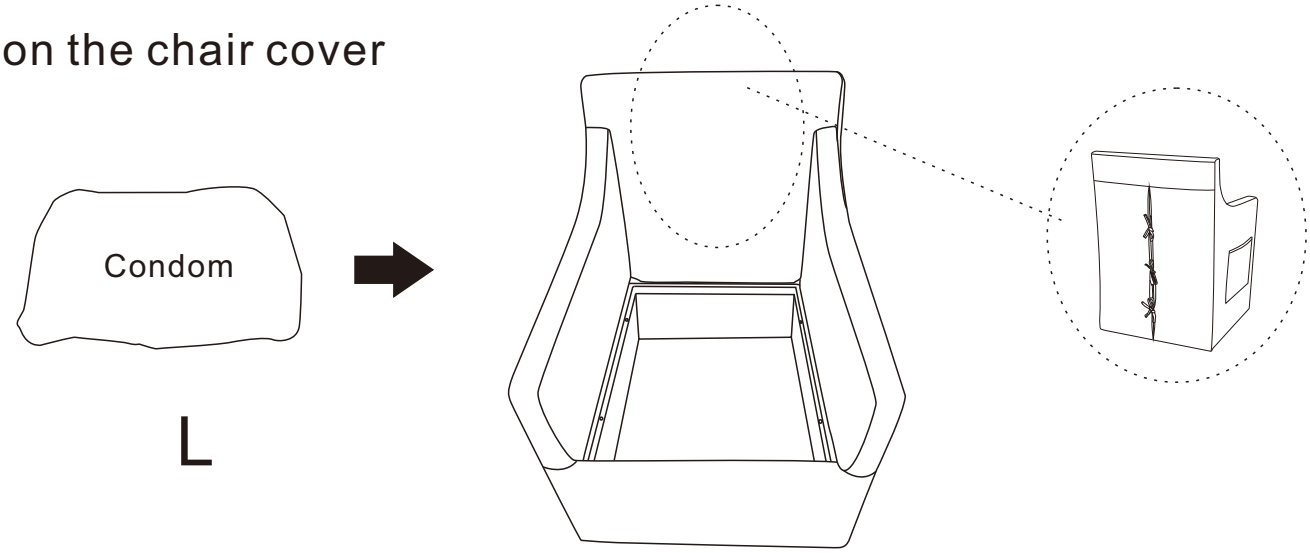

STEP8:

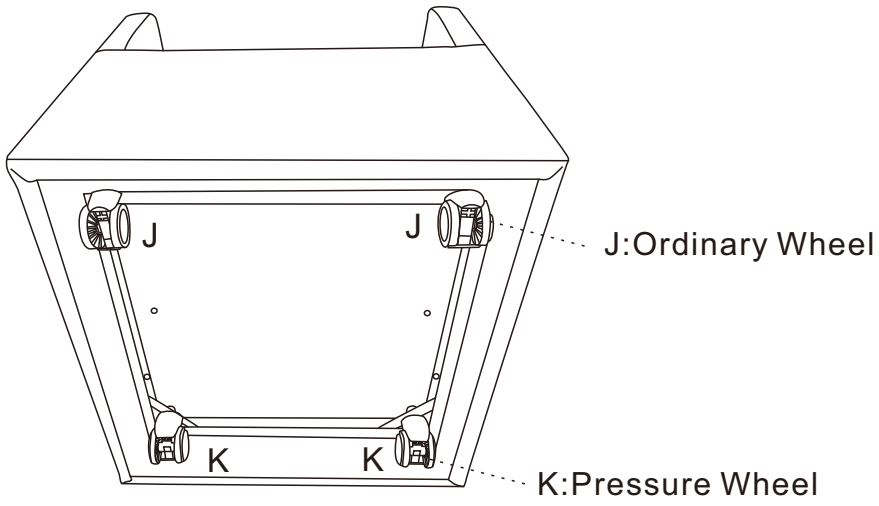


STEP9:

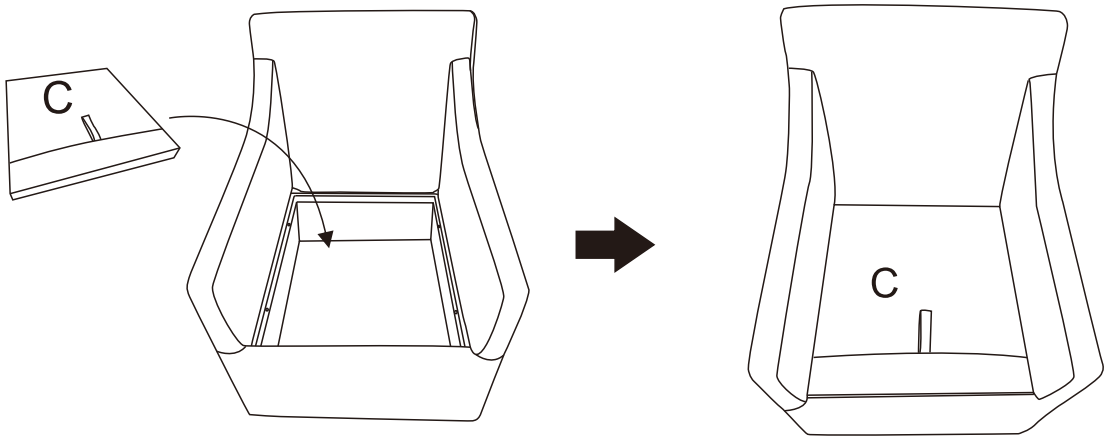

STEP10:

Put A and B in

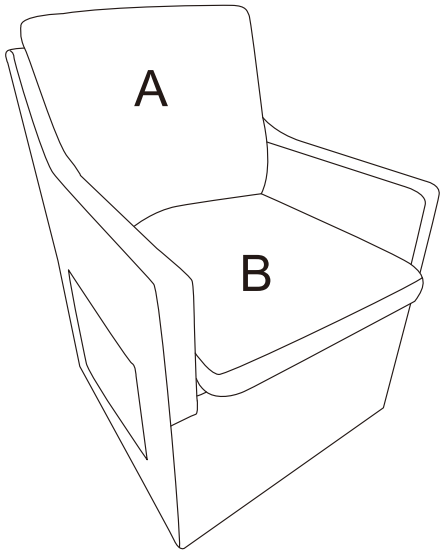

STEP11

