

NOTICE

*Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.

*This item should be assembled on a soft surface to prevent scratching the finish during assembly.

*This item may require periodic tightening.

*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

PREPARATION

*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.


*Estimated Assembly Time: 90 minutes.

*Tools Required for Assembly (included): Allen Key

CARE AND MAINTENANCE


Always use felt pads under all articles to prevent discoloration or softening of the lacquer. Plastic and rubber bases on items can discolor wood. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills. How often you apply the wax depends on how much wear the furniture receives.

Part List

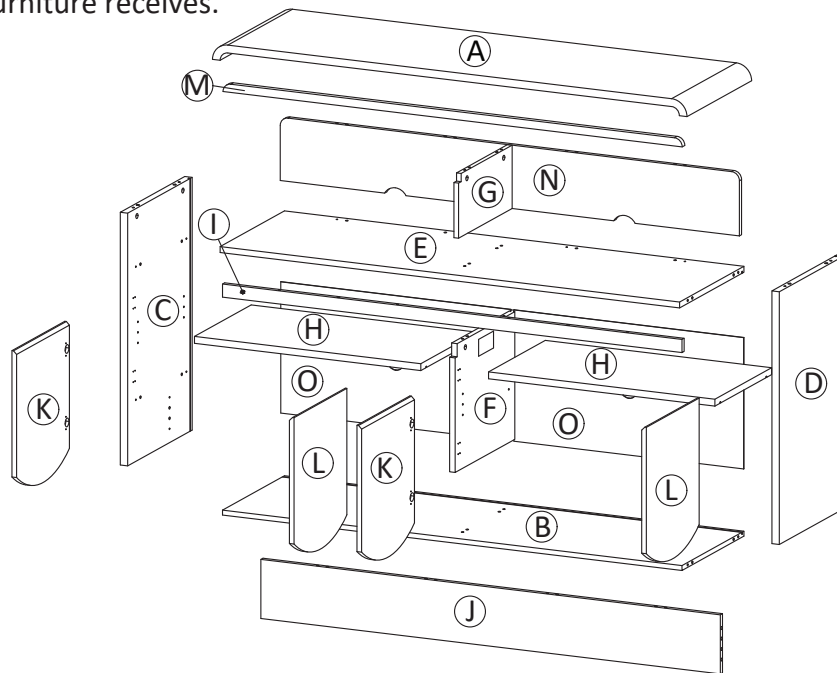

Model# MED9620

Product Dimensions: 61"Wx18"Dx32"H

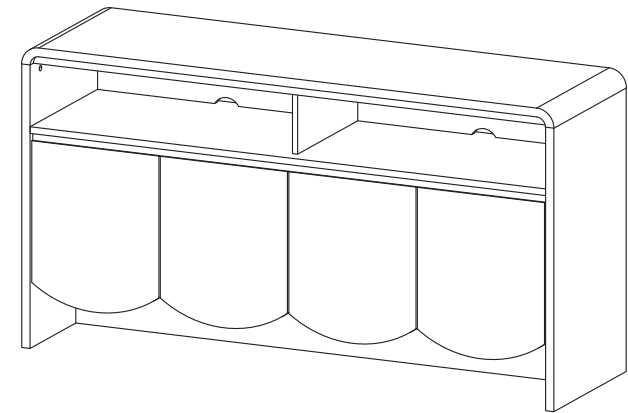




















WARNING :

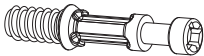WEIGHT CAPACITY: 99 LBS.

Warning : Do not stand on media stand.

Warning : Do not over torque bolts.

Hardware List

| | | | | |
|---|--|--|---|--|
| <div>HW1x32</div> <div></div> <div>Ø 6 x 35 mm</div> | <div>HW2x32</div> <div></div> <div>Ø 15 mm</div> | <div>HW3x34</div> <div></div> <div>Ø 8 x 30 mm</div> | <div>HW4x4</div> <div></div> <div>Ø 10 x 50 mm</div> | <div>HW5x4</div> <div></div> <div>M 7 x 50 mm</div> |
| <div>HW6x2</div> <div></div> <div></div> | <div>HW7x4</div> <div></div> <div>M 6.4 x 53 mm</div> | <div>HW8x10</div> <div></div> <div>M 6.4 x 35 mm</div> | <div>HW9x48</div> <div></div> <div>M 4.5 x 12.5 mm</div> | <div>HW10x8</div> <div></div> <div></div> |
| <div>HW11x4</div> <div></div> <div>Ø 15 mm</div> | <div>HW12x2</div> <div></div> <div>Ø 15 mm</div> | <div>HW13x8</div> <div></div> <div></div> | <div>HW14x12</div> <div></div> <div></div> | <div>HW15x12</div> <div></div> <div>M 3.5 x 15.5 mm</div> |
| <div>HW16x2</div> <div></div> <div></div> | <div>HW HS26Cx4</div> <div></div> <div></div> | <div>HW HS26Bx4</div> <div></div> <div></div> | <div>HW ST1430x1</div> <div></div> <div></div> | |

Part List & HW For Multi-Box Items

| Piece | Description | Qty | Carton Call |
|-------|------------------|-----|-------------|
| A | Top Board | 1 | 1 of 2 |
| B | Bottom Board | 1 | 1 of 2 |
| C | Side Board Left | 1 | 2 of 2 |
| D | Side Board Right | 1 | 2 of 2 |
| E | Fixed Shelf | 1 | 1 of 2 |
| F | Center Board 1 | 1 | 2 of 2 |
| G | Center Board 2 | 1 | 2 of 2 |
| H | Adjustable Shelf | 2 | 2 of 2 |
| I | Front Skirt 1 | 1 | 1 of 2 |
| J | Bottom Skirt | 1 | 1 of 2 |
| K | Door Left | 2 | 2 of 2 |
| L | Door Right | 2 | 2 of 2 |
| M | Front Skirt 2 | 1 | 1 of 2 |
| N | Back Board 1 | 1 | 1 of 2 |
| O | Back Board 2 | 2 | 2 of 2 |

| Piece | Description | Qty | Carton Call |
|-----------|-----------------------|-----|-------------|
| HW1 | Cambolt | 32 | 2 of 2 |
| HW2 | CamLock | 32 | 2 of 2 |
| HW3 | Dowel Small | 34 | 2 of 2 |
| HW4 | Dowel Big | 4 | 2 of 2 |
| HW5 | Screw M 7 x 50 mm | 4 | 2 of 2 |
| HW6 | Allen Key | 2 | 2 of 2 |
| HW7 | Screw M 6.4 x 53 mm | 4 | 2 of 2 |
| HW8 | Screw M 6.4 x 35 mm | 10 | 2 of 2 |
| HW9 | Screw M 4.5 x 12.5 mm | 48 | 2 of 2 |
| HW10 | Shelf Pin | 8 | 2 of 2 |
| HW11 | Screw Cap | 4 | 2 of 2 |
| HW12 | Screw Cap | 2 | 2 of 2 |
| HW13 | Floor Glide | 8 | 2 of 2 |
| HW14 | Wedge | 12 | 2 of 2 |
| HW15 | Screw M 3.5 x 15.5 mm | 12 | 2 of 2 |
| HW16 | Cable Hole Rubber | 2 | 2 of 2 |
| HW HS26C | Hinge | 4 | 2 of 2 |
| HW HS26B | Hinge | 4 | 2 of 2 |
| HW ST1430 | Anti Deflection Bar | 1 | 2 of 2 |

PREPARATION


*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.


*Estimated Assembly Time: 90 minutes.

*Tools Required for Assembly (included): Allen Key


*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

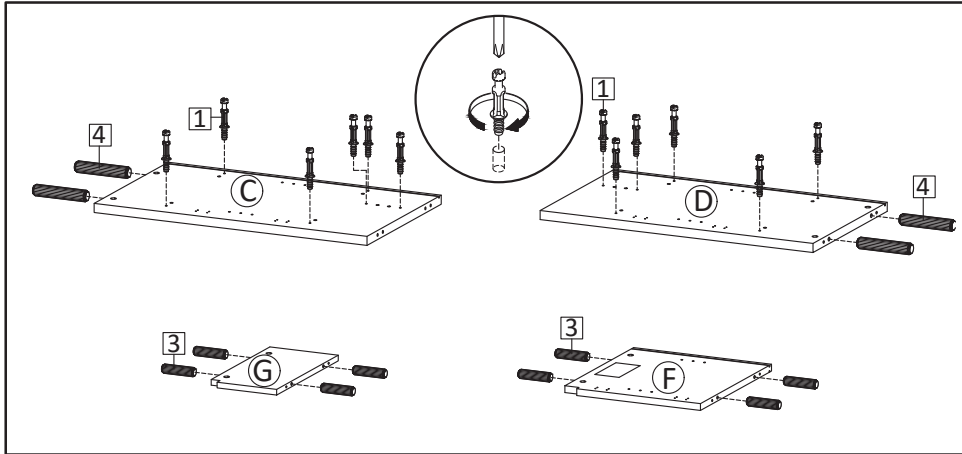


STEP1: Insert Cambolt (HW1) and Dowel Big (HW4) into Side Board Left (C) and Side Board Right (D). Insert Dowel Small (HW3), Center Boards 1 (F) and Center Board 2 (G) as figure.

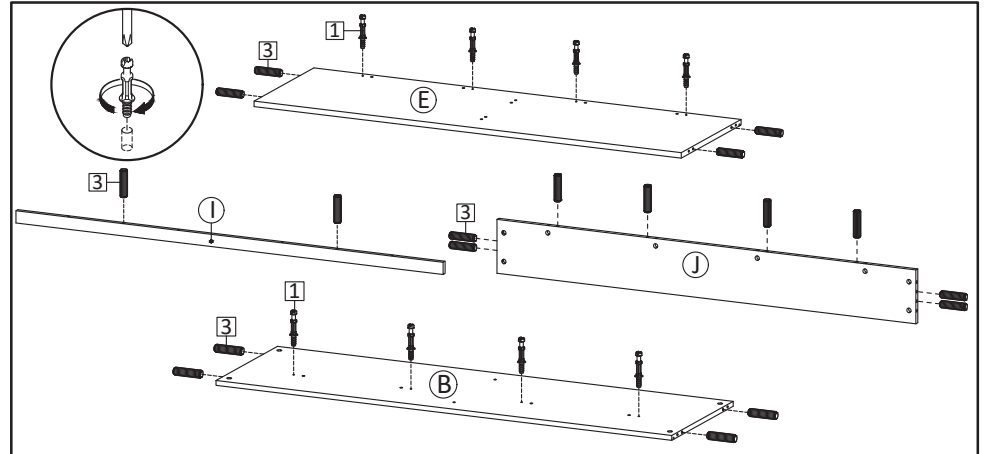

STEP2: Insert Cambolt (HW1) and Dowel Small (HW3) into Fixed Shelf (E) and Bottom Board (B). Insert Dowel Small (HW3) into Front Skirt 1 (I) and Bottom Skirt (J) as figure.

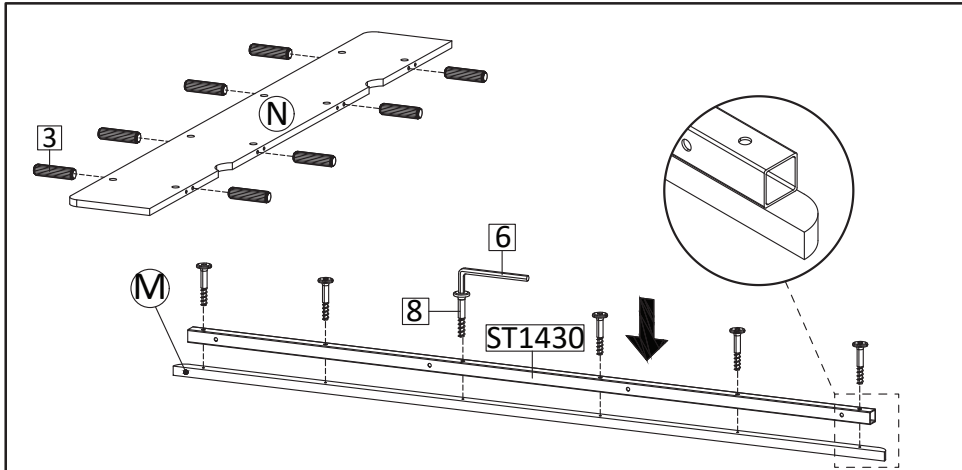

STEP3: Insert Dowel Small (HW3) into Back Board 1 (N). Attach Anti Deflection Bar (HW ST1430) into Front Skirt 2 (M) using Screw M6x35mm (HW8) then tighten using Allen Key (HW6) as figure.

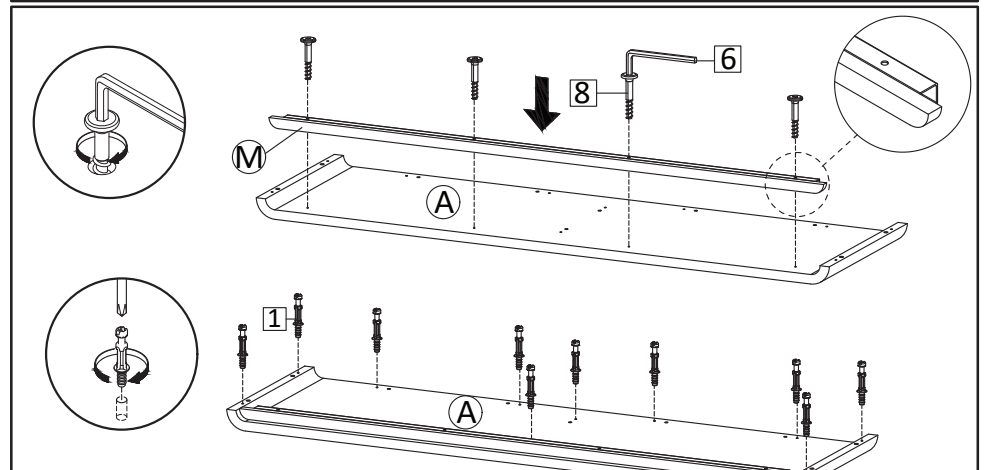

STEP4: Insert Screw M6.4x35mm (HW8) into Front Skirt 2 (M) into Top Board (A) tighten screws using Allen Key (HW6) as figure. Insert Cambolt (HW1) into Top Board (A).

PREPARATION


*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.


*Estimated Assembly Time: 90 minutes.

*Tools Required for Assembly (included): Allen Key


*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

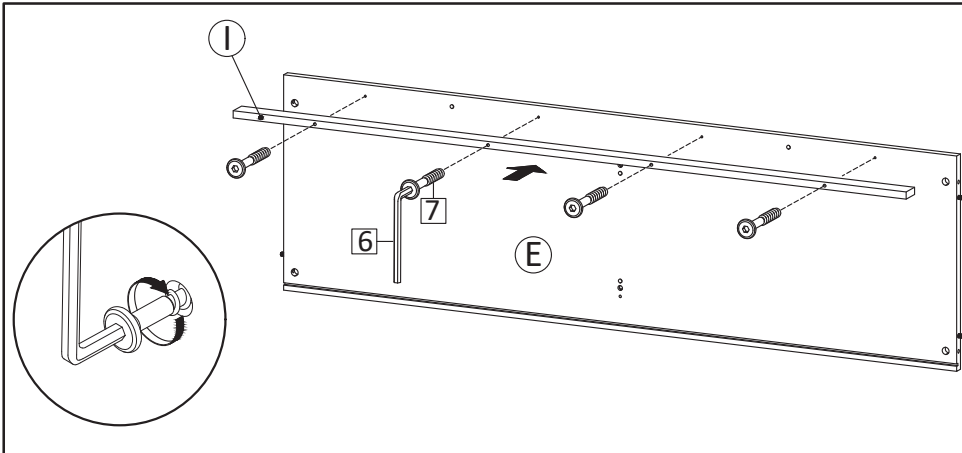


STEP5: Attach Front Skirt 1 (I) to Fixed Shelf (E),secure with Screw M6.4x53mm (HW7). Tighten screws using Allen Key (HW6).

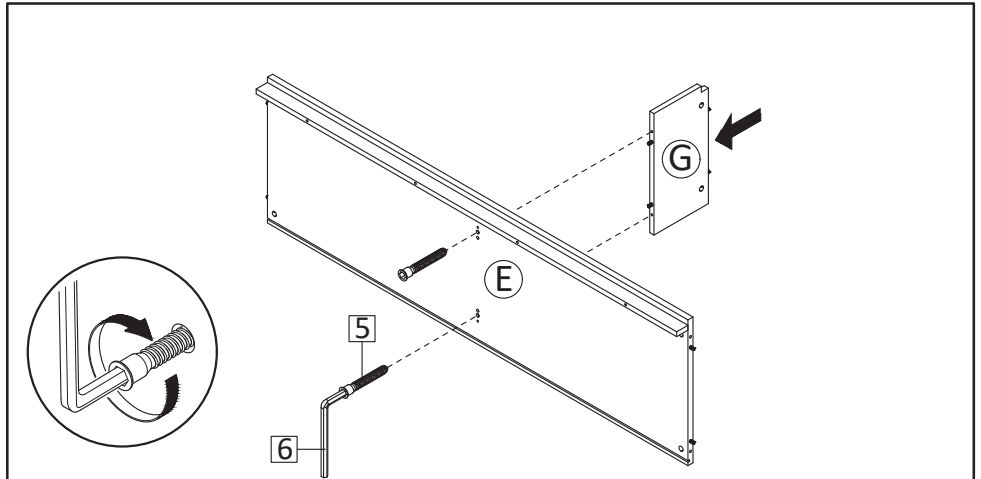

Step6: Attach Center Board 2 (G) to the Fixed Shelf (E). Secure with Screw M7x50mm (HW5),tighten screws using Allen Key (HW6).

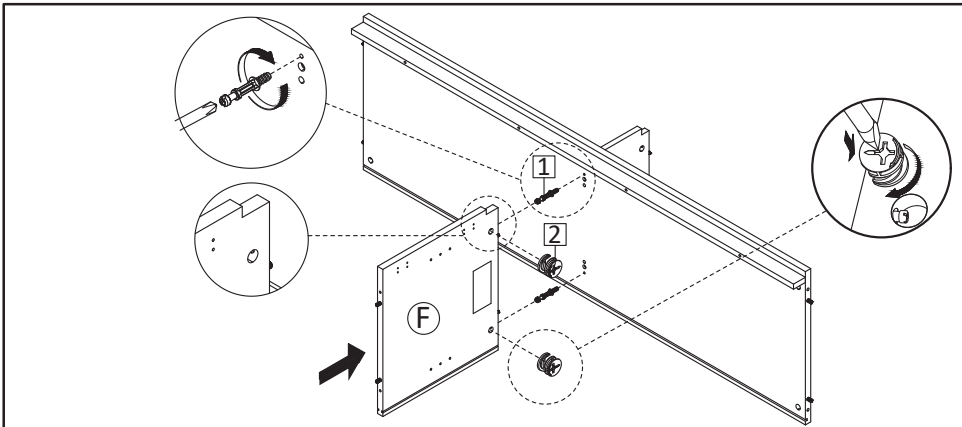

Step7: Insert Cambolt (HW1) to Fixed Shelf (E). Attach Center Board 1 (F) as figure. Secure with Camlock (HW2) then tighten using screwdriver.

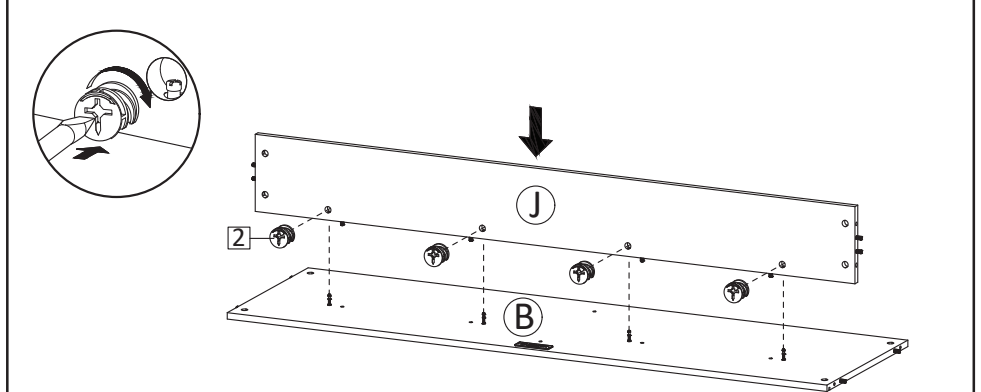

Step8: Attach Bottom Skirt (J) into Bottom Board (B). Insert Camlock (HW2) then tighten using screwdriver.

PREPARATION


*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.


*Estimated Assembly Time: 90 minutes.

*Tools Required for Assembly (included): Allen Key


*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

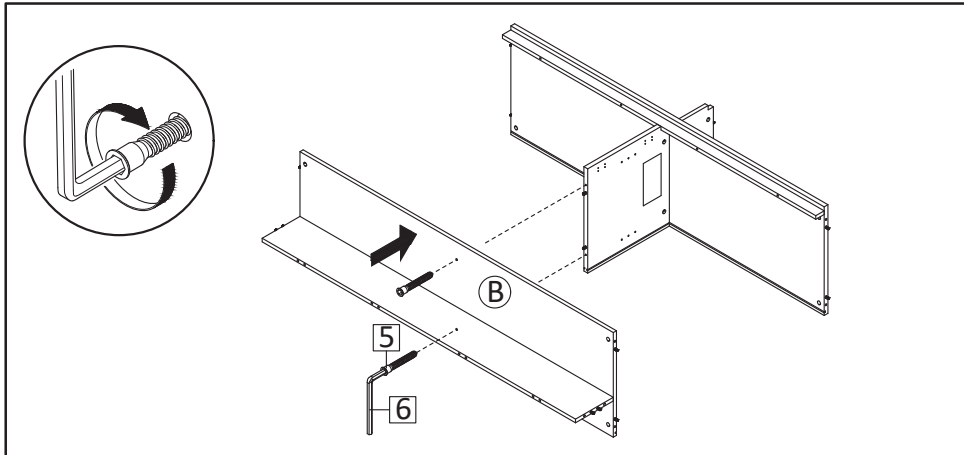


Step9: Combine Bottom Board (B) to assembled component from step 7 as figure. Insert Screw M7x50mm (HW5), tighten screws using Allen Key (HW6).

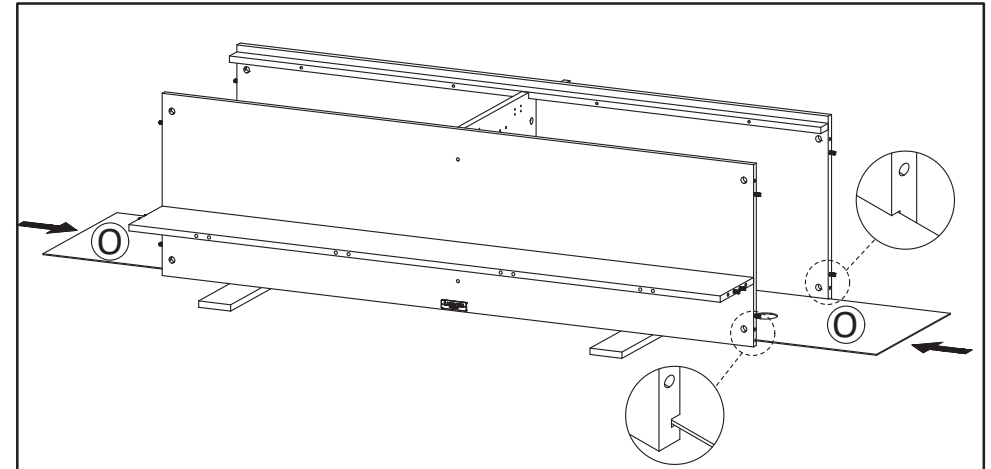

Step10: Insert Back Board 2 (O) from both sides as figure.

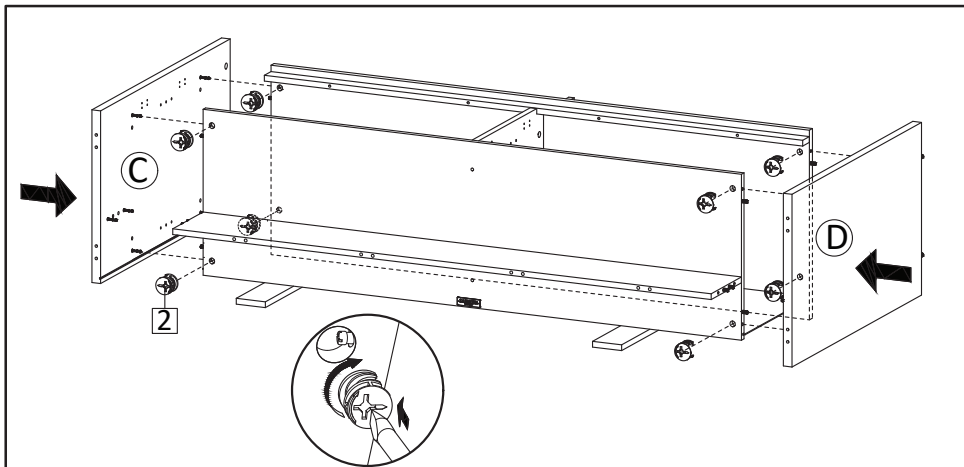

STEP11: Attach Side Board Left (C) and Side Board Right (D) into Bottom Board (B) and Fixed Shelf (E). Insert Camlock (HW2) then tighten using screwdriver.

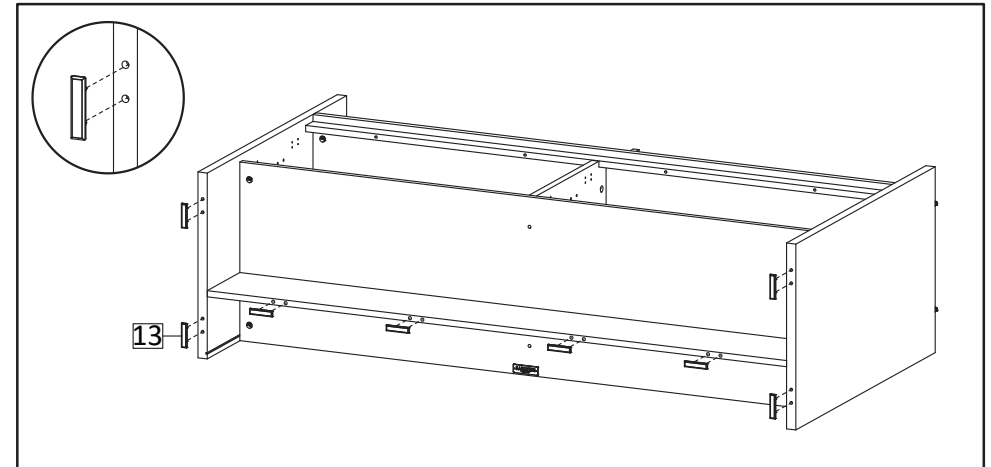

Step12: Insert Floor Glide (HW13) into Side Boards and Bottom Skirt as figure.

PREPARATION


*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.


*Estimated Assembly Time: 90 minutes.

*Tools Required for Assembly (included): Allen Key


*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

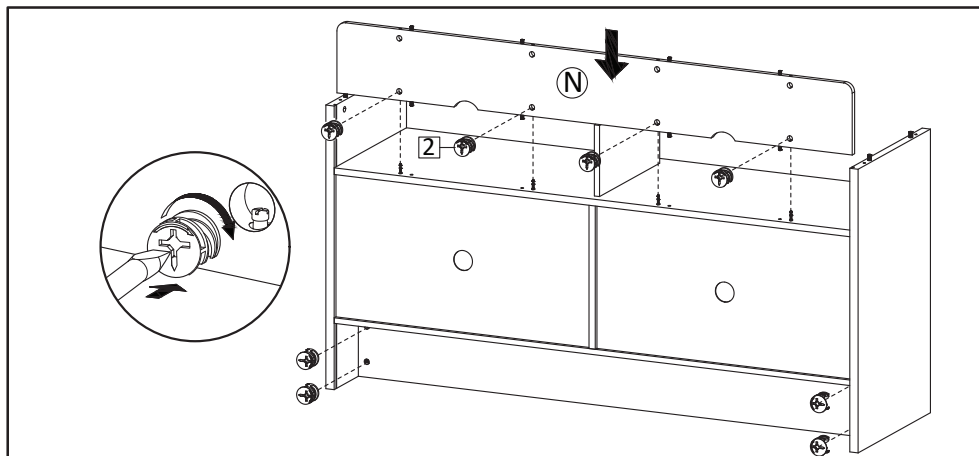


Step13: Bring the product to upright position. Insert Back Board (N) as figure. Insert Camlock (HW2) then tighten using screwdriver as figure.

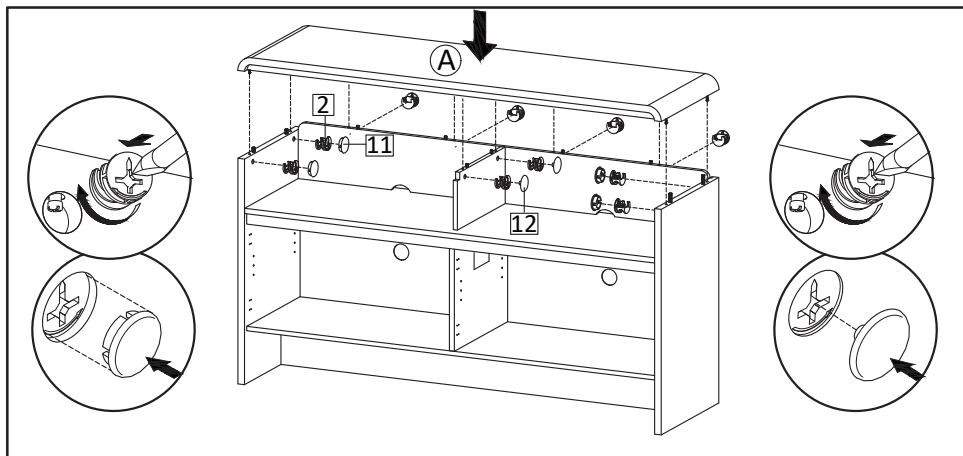

STEP14: Attach Top Board (A) into Body . Insert Camlock (HW2) then tighten using screwdriver. Put Screw Caps (HW11&HW12) over the camlock as picture.

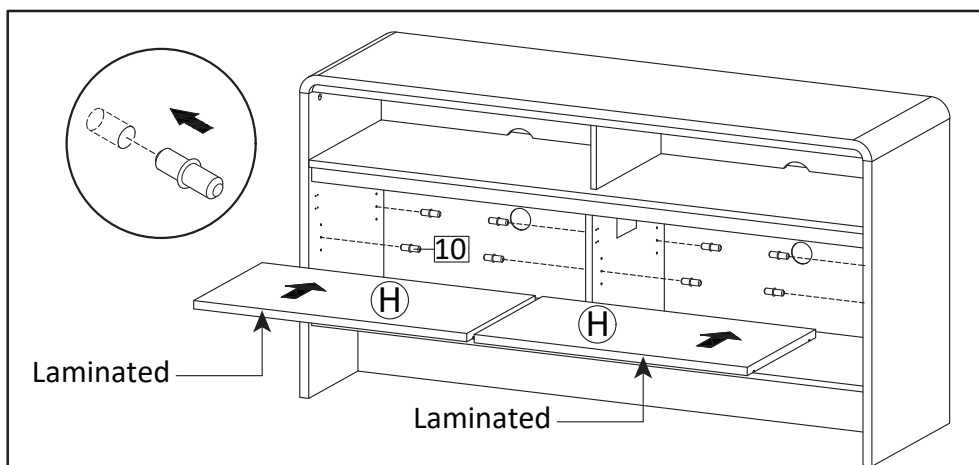


STEP15: Insert Shelf Pin (HW10) into the holes on Center Boards and Side Boards, on the desired level. Then place the Adjustable Shelf (H) by inserting the grooved line on the shelf into the shelf support, with laminated edge facing front.

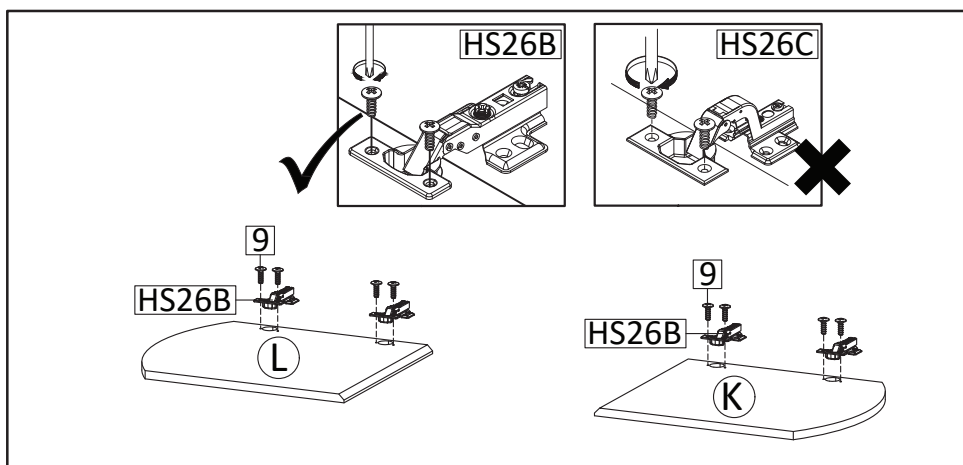


STEP16: Insert Hinge (HW HS26B) into 1 piece of Door Left (K) and 1 piece of Door Right (L). Secure with Screw M4.5x12.5mm (HW9).

PREPARATION


- *Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- *If any part is missing or damaged, do not attempt to assemble the product.
- *Estimated Assembly Time: 90 minutes.
- *Tools Required for Assembly (included): Allen Key
- *If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

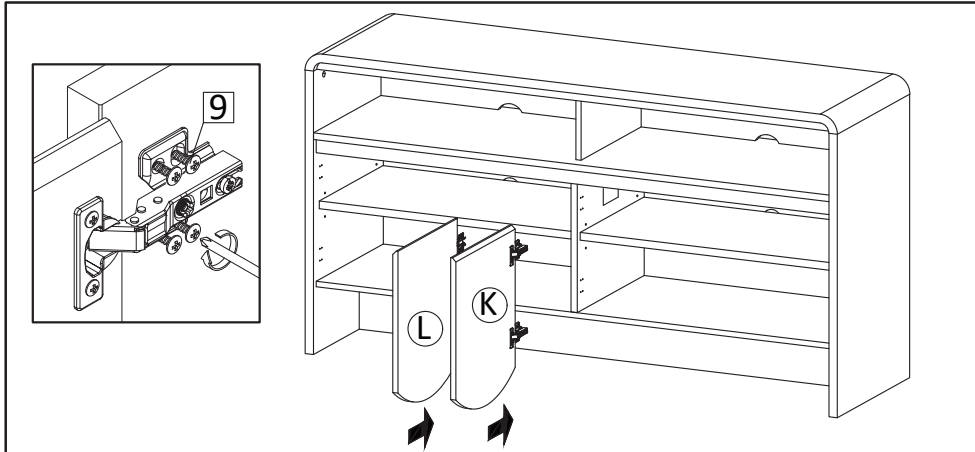


STEP17: Install Door Left (K) and Door Right (L) into Center Boards Please review above images carefully. Secure with Screw M4.5x12.5mm (HW9). Refer to separate page of how to adjust hinge (HS26B).

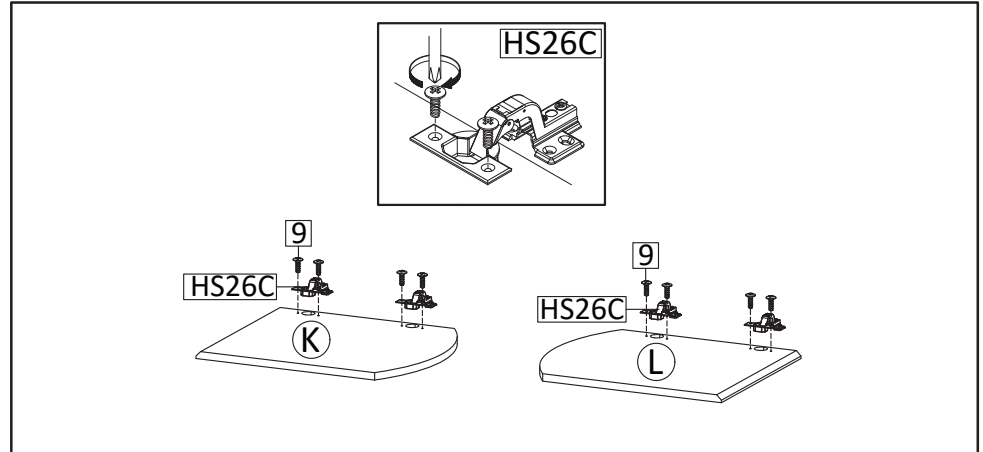

STEP18: Insert Hinge (HW HS26C) into remaining Door Left (K) and Door Right (L). Secure with Screw M4.5x12.5mm (HW9).

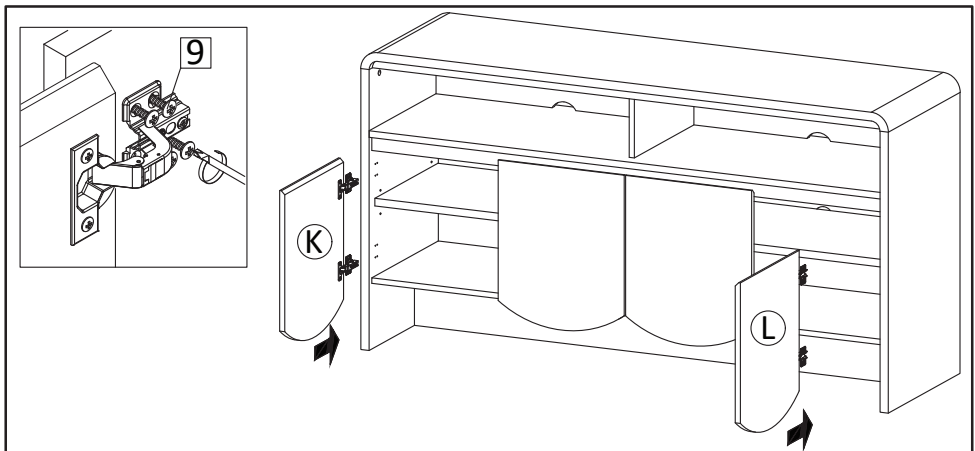

STEP19: Install Door Left (K) and Door Right (L) into Side Boards Please review above images carefully. Secure with Screw M4.5x12.5mm (HW9). Refer to separate page of how to adjust hinge (HS26C).

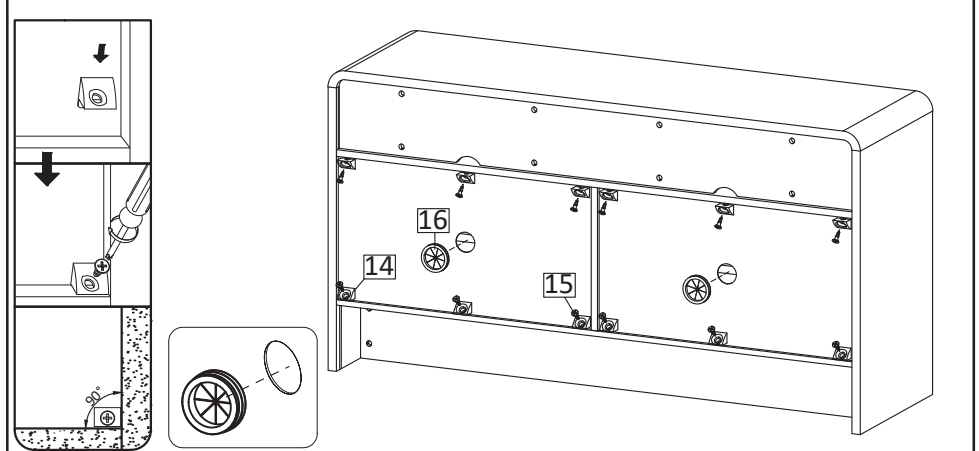

STEP20: Use Wedge (HW14), Screw M3.5x15.5mm (HW15) to tighten the back of Sideboard by using screwdriver. Please align the top board and bottom board in 90° position against the side board, before securing the wedges (HW14). Insert Cable Hole Rubber (HW16) as figure.

PREPARATION


*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.

*Estimated Assembly Time: 90 minutes.

*Tools Required for Assembly (included): Allen Key

*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

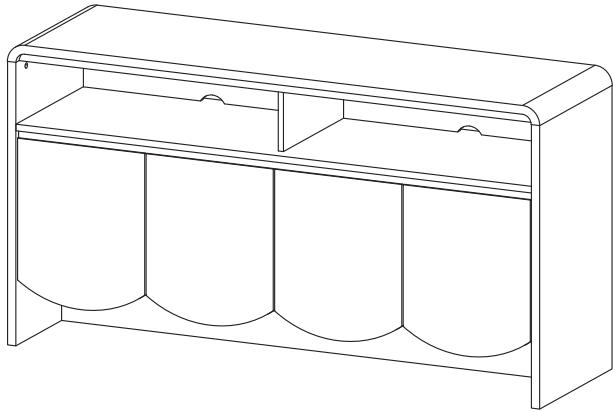






STEP21: Assembly is Complete.

TIPPING RESTRAINTS KIT INSTALLATION GUIDANCE



Different wall materials require unique wall fasteners.

The wall plugs (AA2) and screws (AA3) are designed for fixing to concrete walls only.

Please consult your local hardware store to ensure you are using the correct hardware for your wall type.

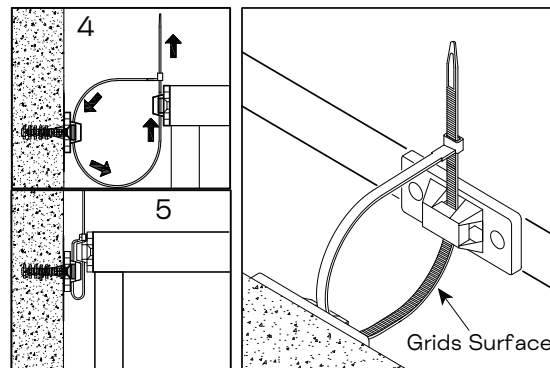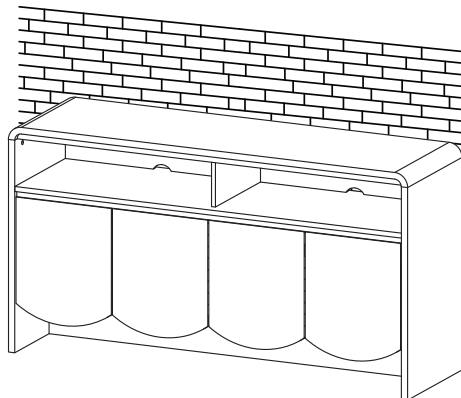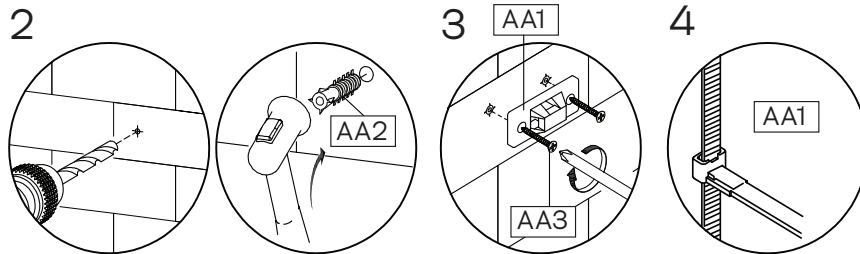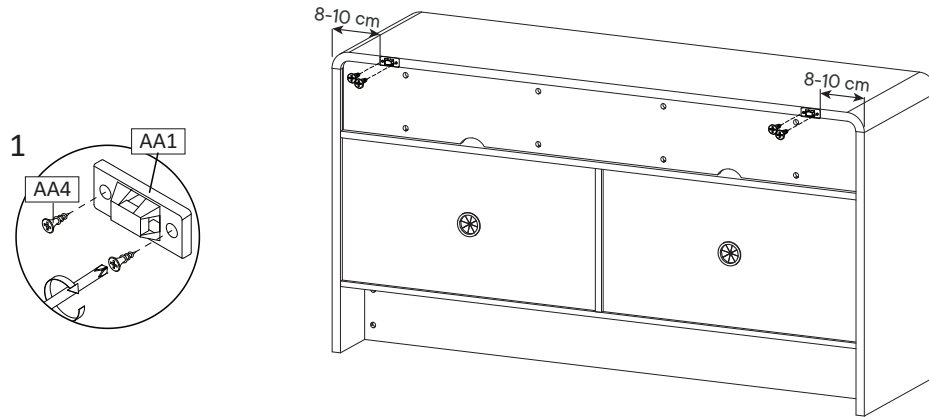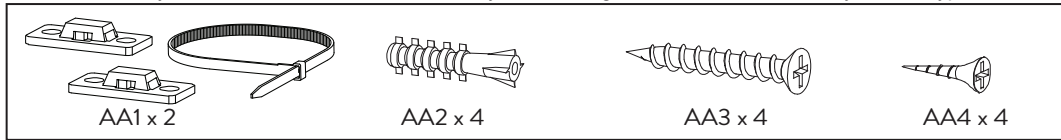


HOW TO ADJUST HINGES

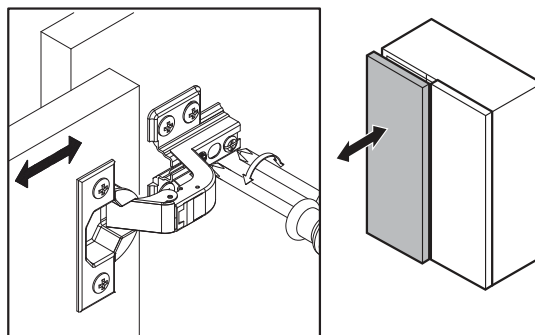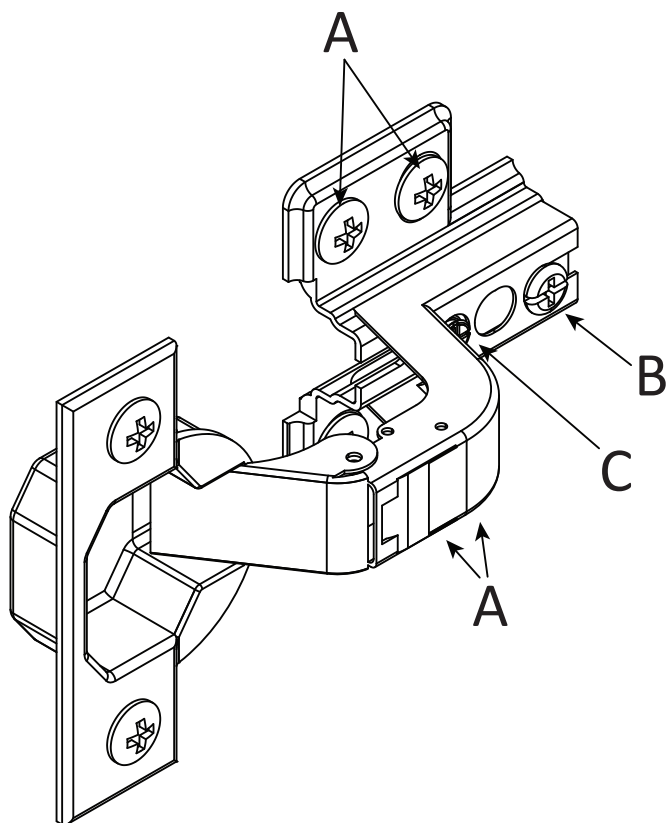

To adjust depth.




Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

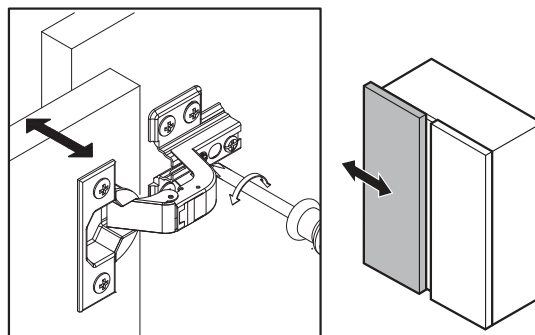

To adjust side ways.



Turning the screw "C" on BOTH hinges on each door.

HOW TO ADJUST HINGES

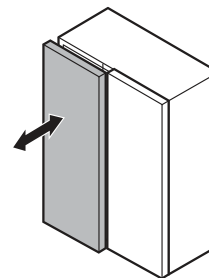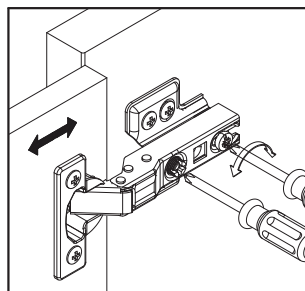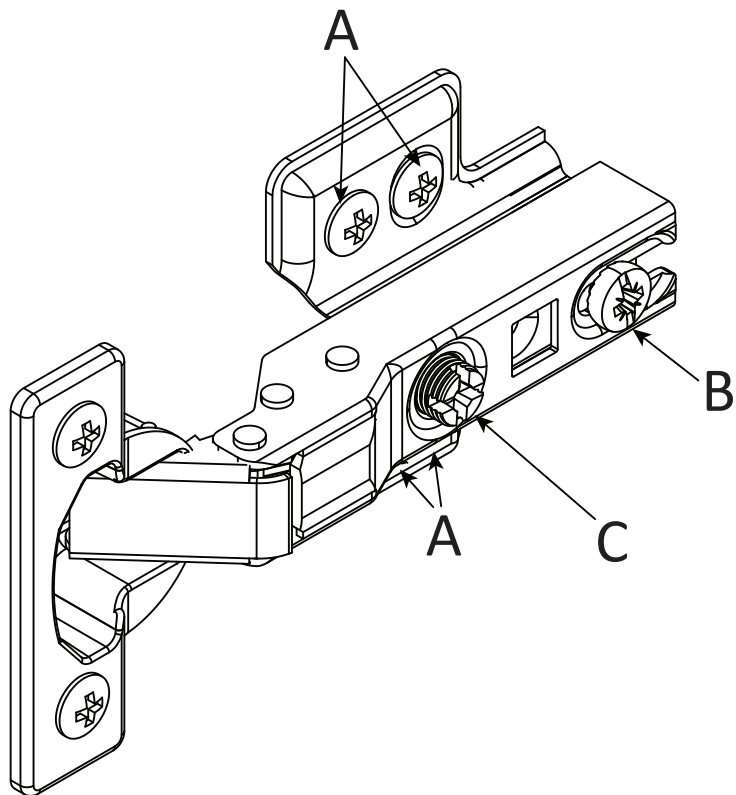

To adjust depth.

Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

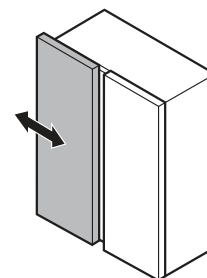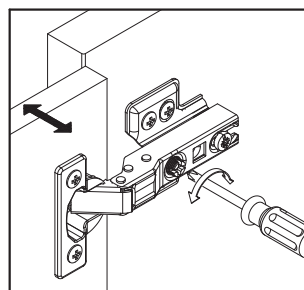

To adjust side ways.

Turning the screw "C" on BOTH hinges on each door.